

SICOTAS

Helio Dresser with 6-Drawers

DR116A1XWTY1987 | DR116A1XBNY1988 | DR116A1B03Y2219
DR116B1B03Y2220 | DR116A1W03Y2217 | DR116B1W03Y2218
DR116A1B04Y2355 | DR116B1B04Y2356 | DR116A1XDKY1989



Helio Collection

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product.

1. Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2. Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3. Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4. Proper Screw Seating:

When attaching screws and nuts, it is essential not to fully tighten them until all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5. Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

SICOTAS customer help center:

If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.

We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.



Email:
service@sicotas.com



Website:
www.sicotas.com



Phone:
(833) 742-6827



Official Website:



WhatsApp:



YouTube:



Instagram:




Facebook:



TikTok:

Parts List

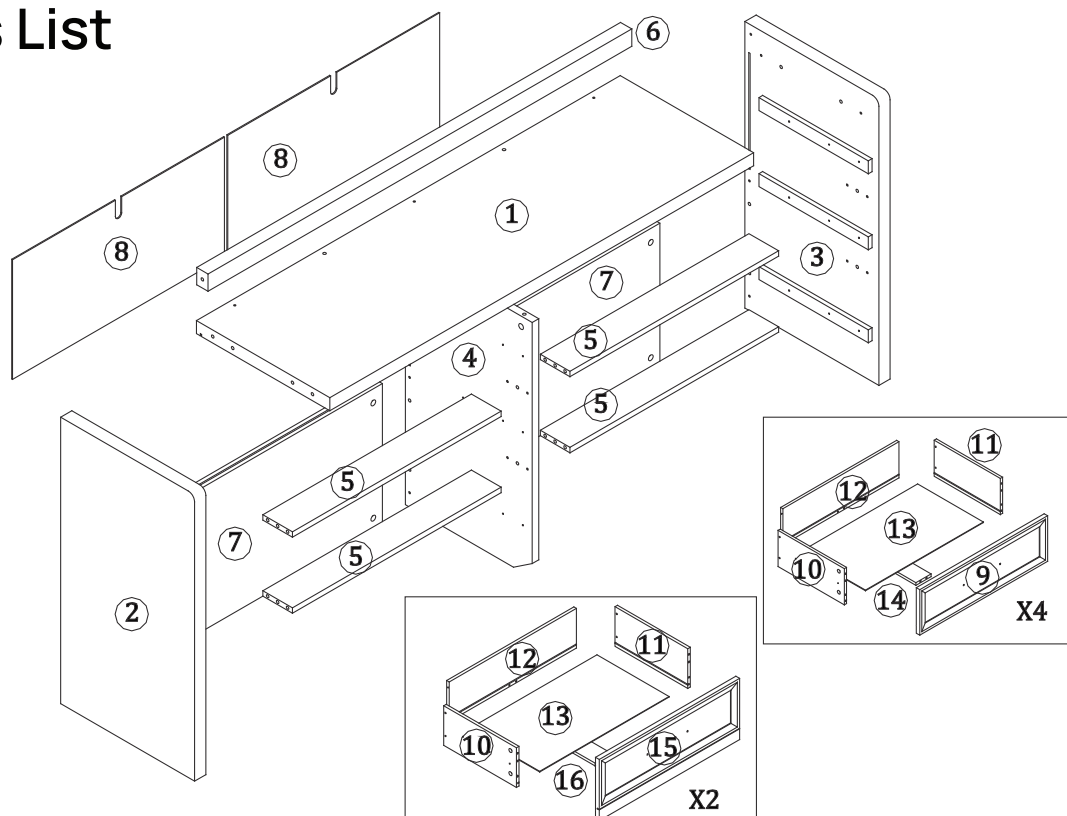

Hardware List




Code	Description	Quantity
A	ø15x9mm Cam lock	65+3
B	ø6x35mm Cam bolt	65+3
C	ø8x30mm Wood dowel	24+2
D	Slide rail 300mm	12
E	ø4x30mm Screw	30+2
F	ø3.5x12mm Screw	80+4
G	M4x15mm Bolt	12+2
H	ø3x17mm Screw	10+2
I	Handle	6
J	ø4x15mm Screw	2

Code	Description	Quantity
K	Backboard clip	10+2
L	ø6x30mm Wood dowel	24+2
M	Castor	2
N	Wall bracket	2
O	ø4x35mm Screw	2
P	Wall anchor	2

Step 1



Press the plastic part in the indicated direction to separate drawer runner D1 and D2 before assembling.

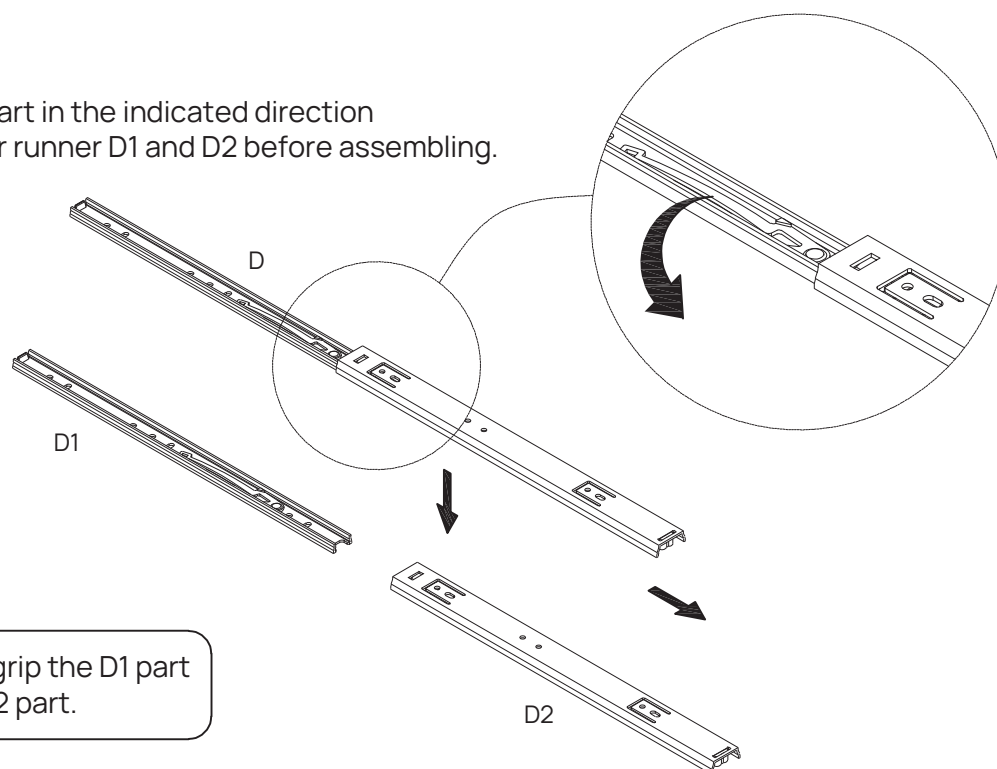

Attention: Please grip the D1 part while sliding the D2 part.

x12


Step 2

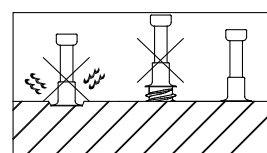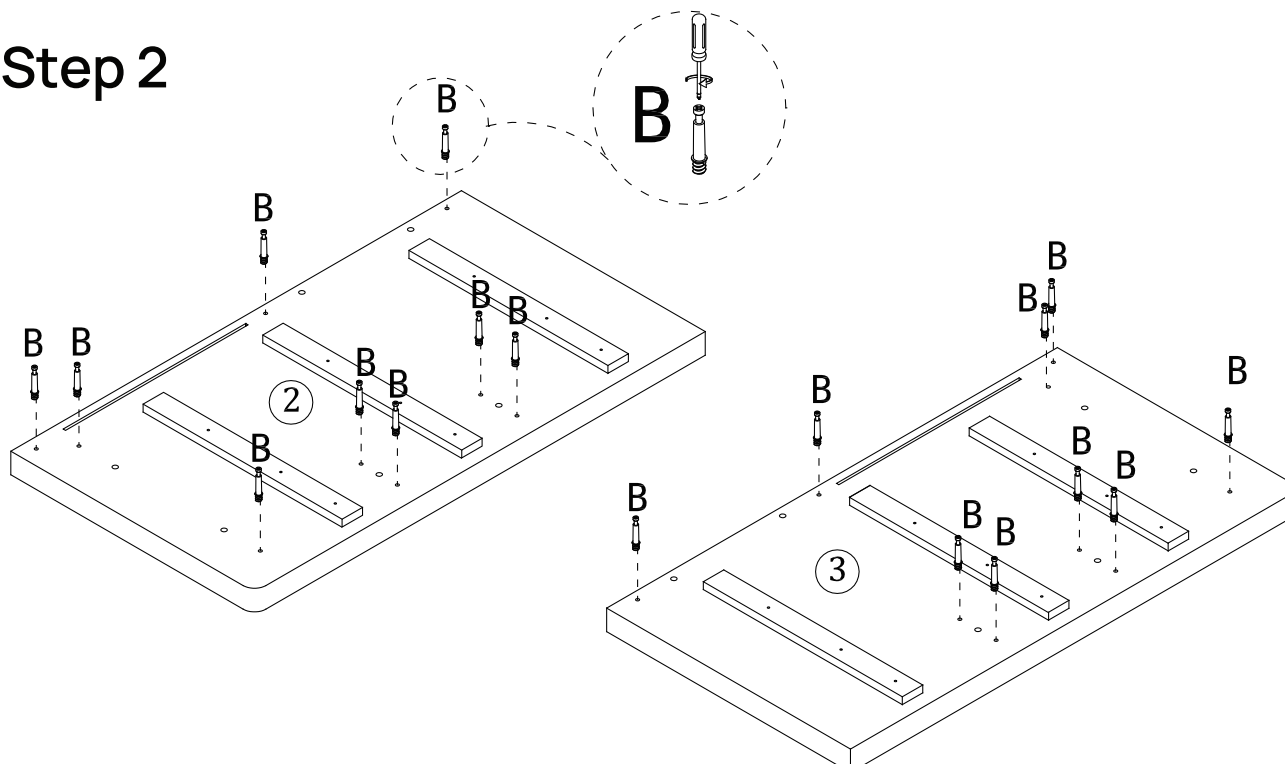

B *18





Step 3

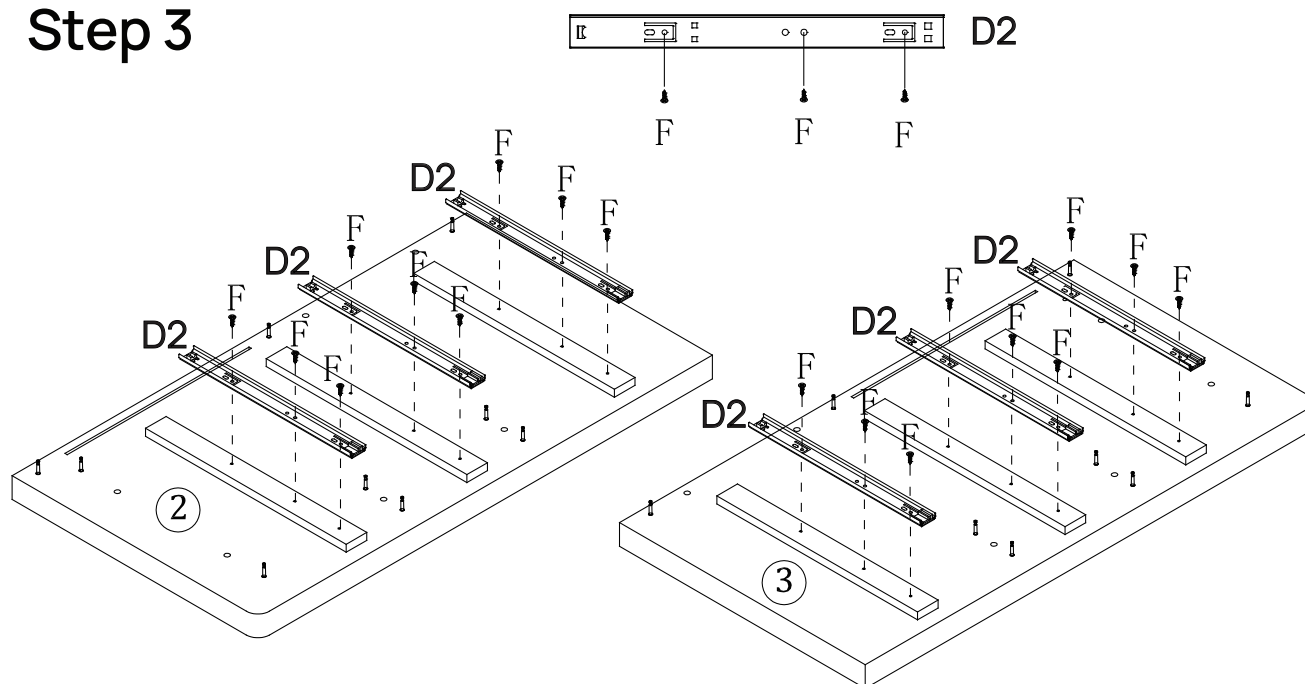


D2*6	F *18
	

Step 4

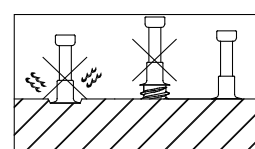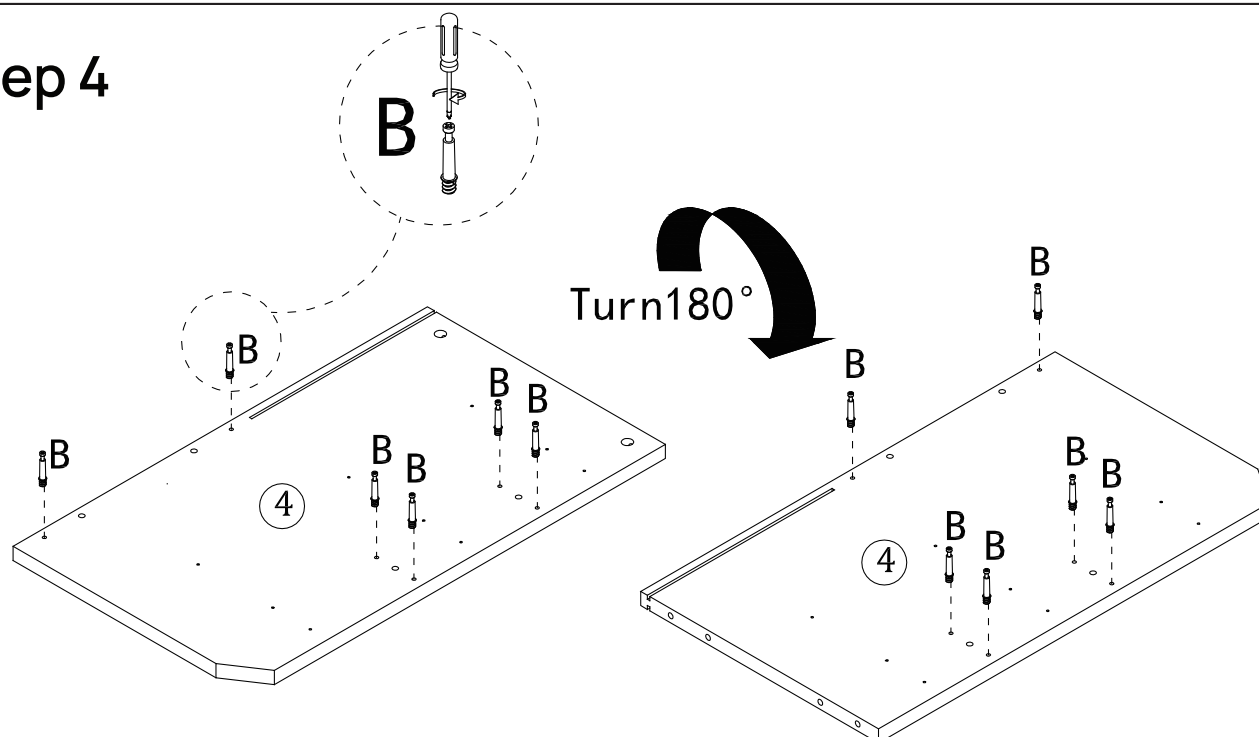



B *12


Step 5

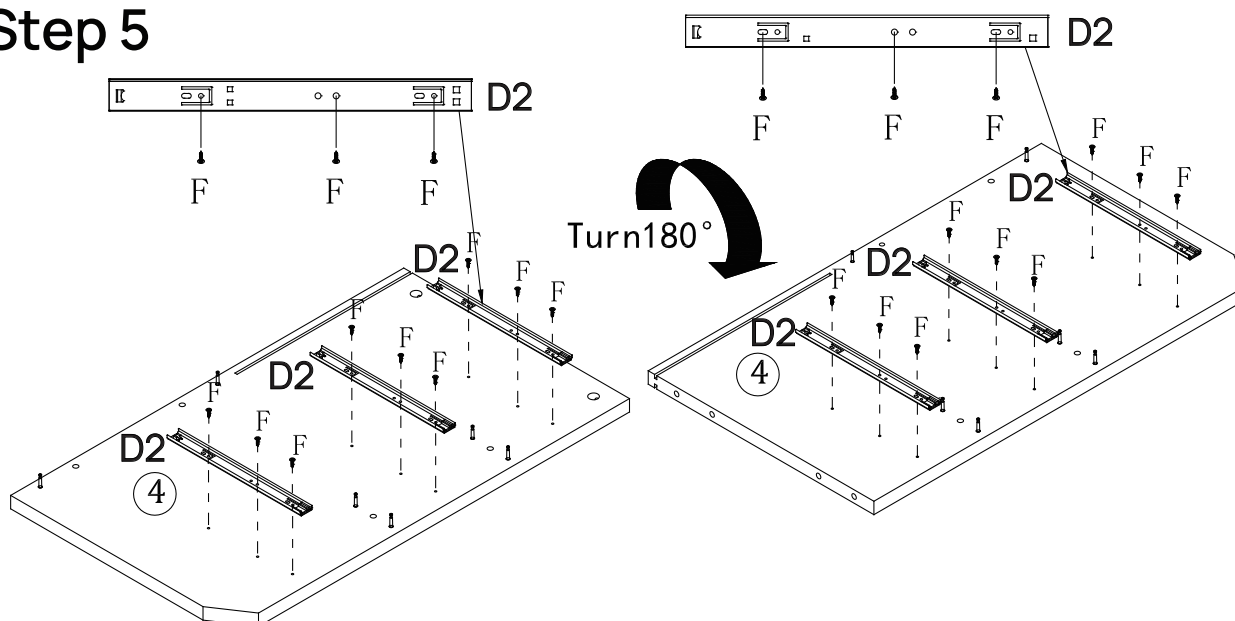


D2*6	F *18
	

Step 6

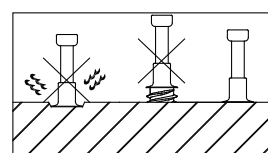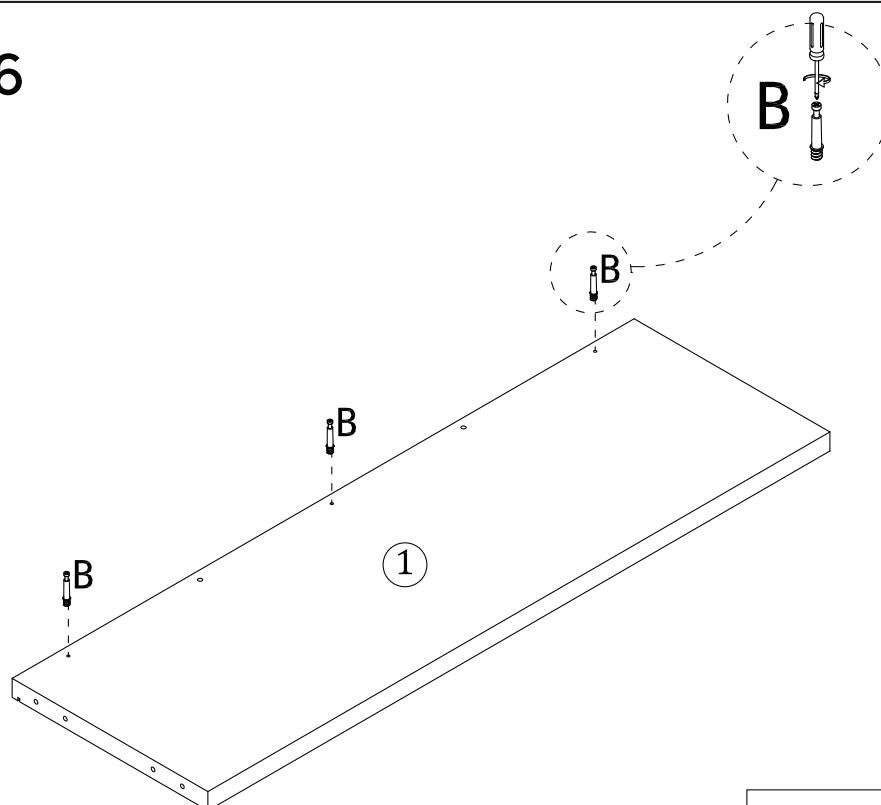


B *3



Step 7

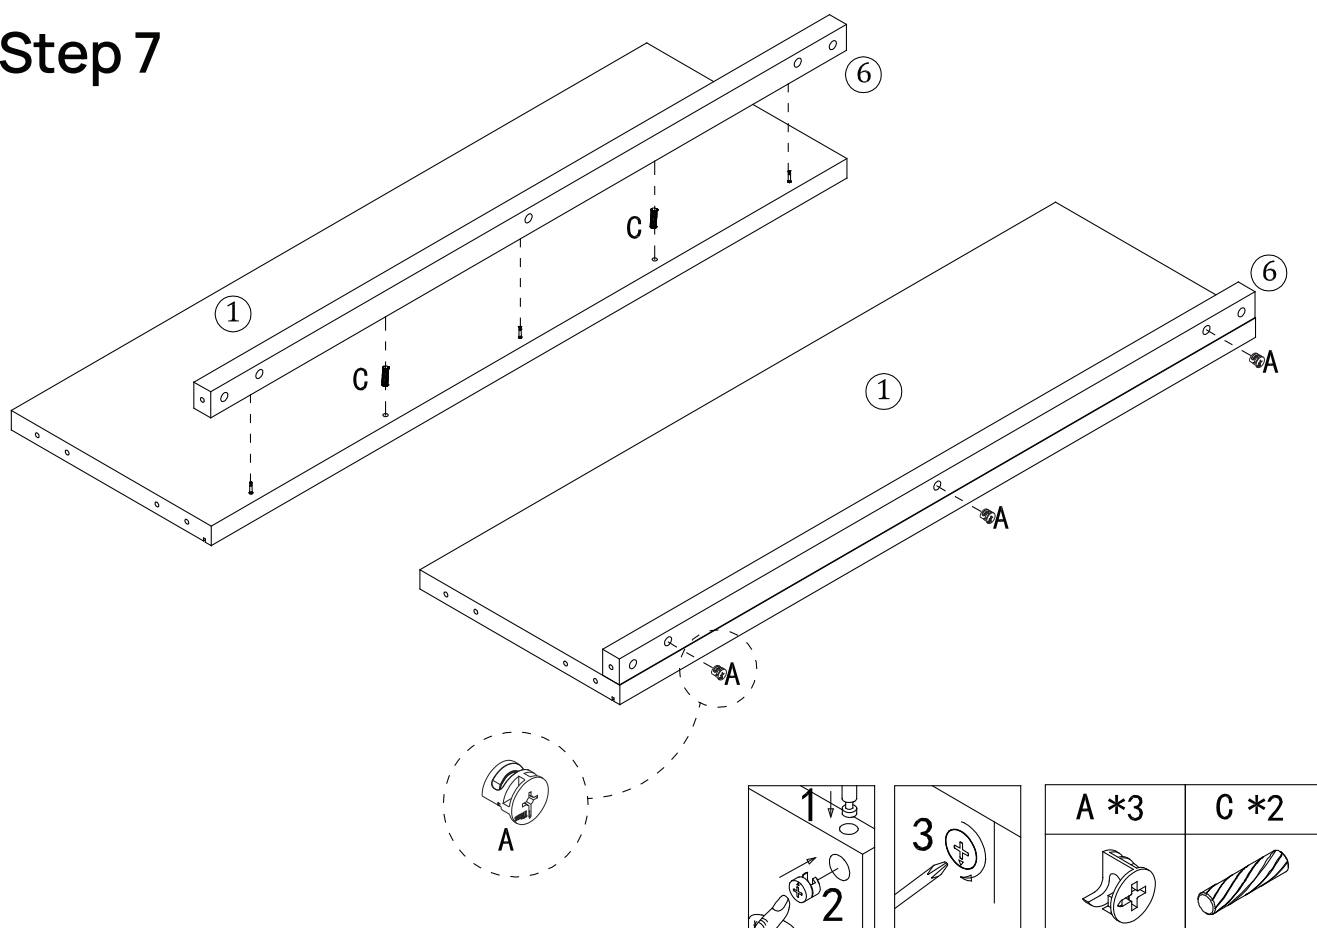


Step 8

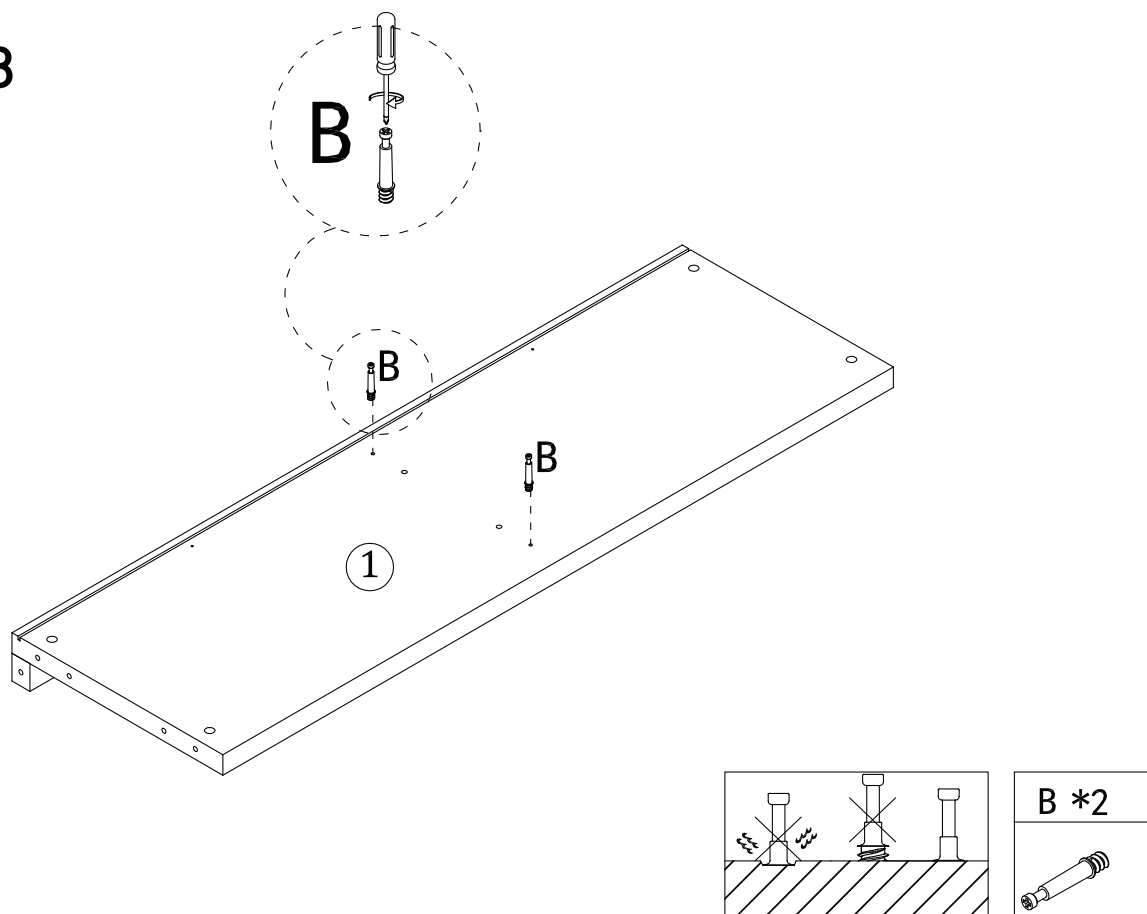


Step 9

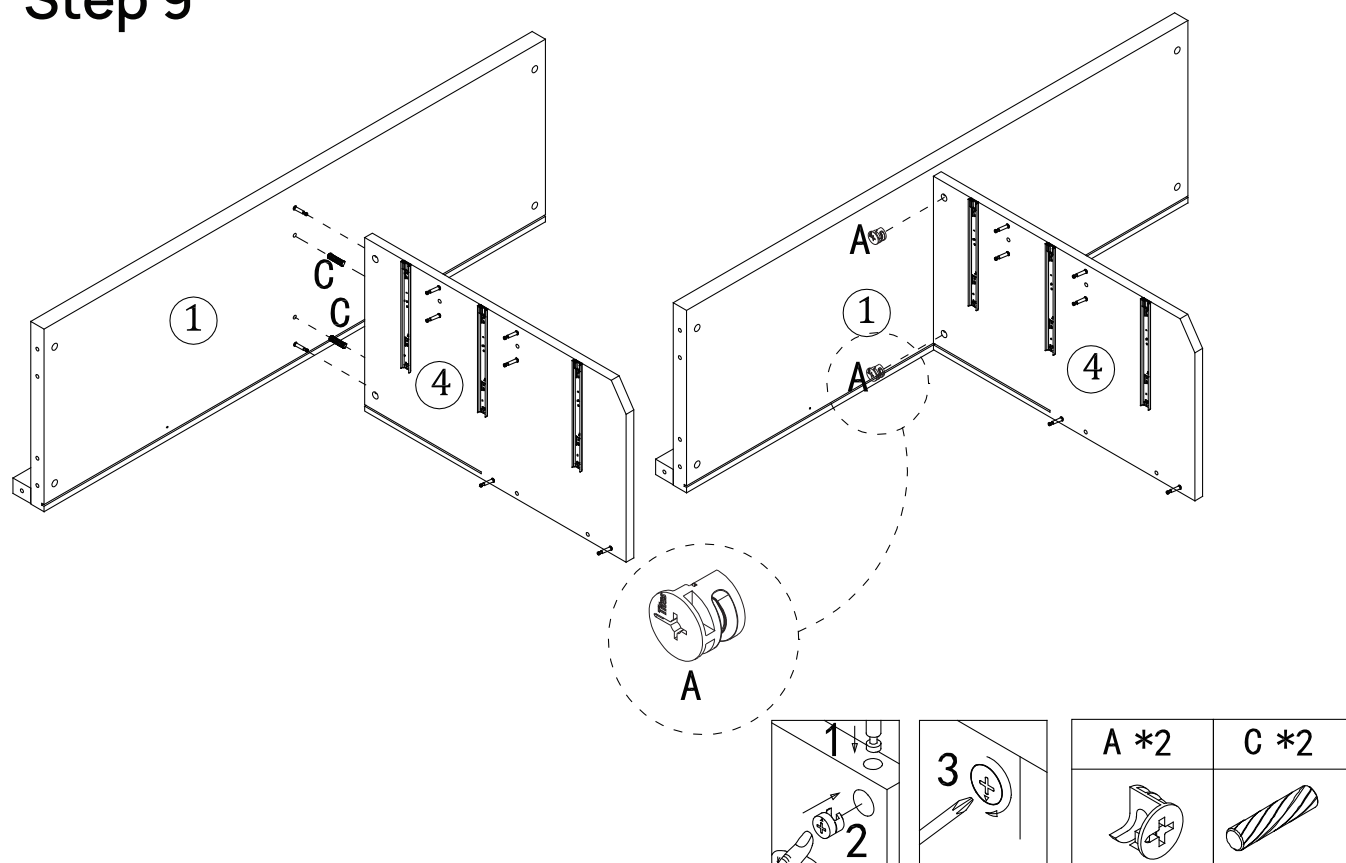







Step 10

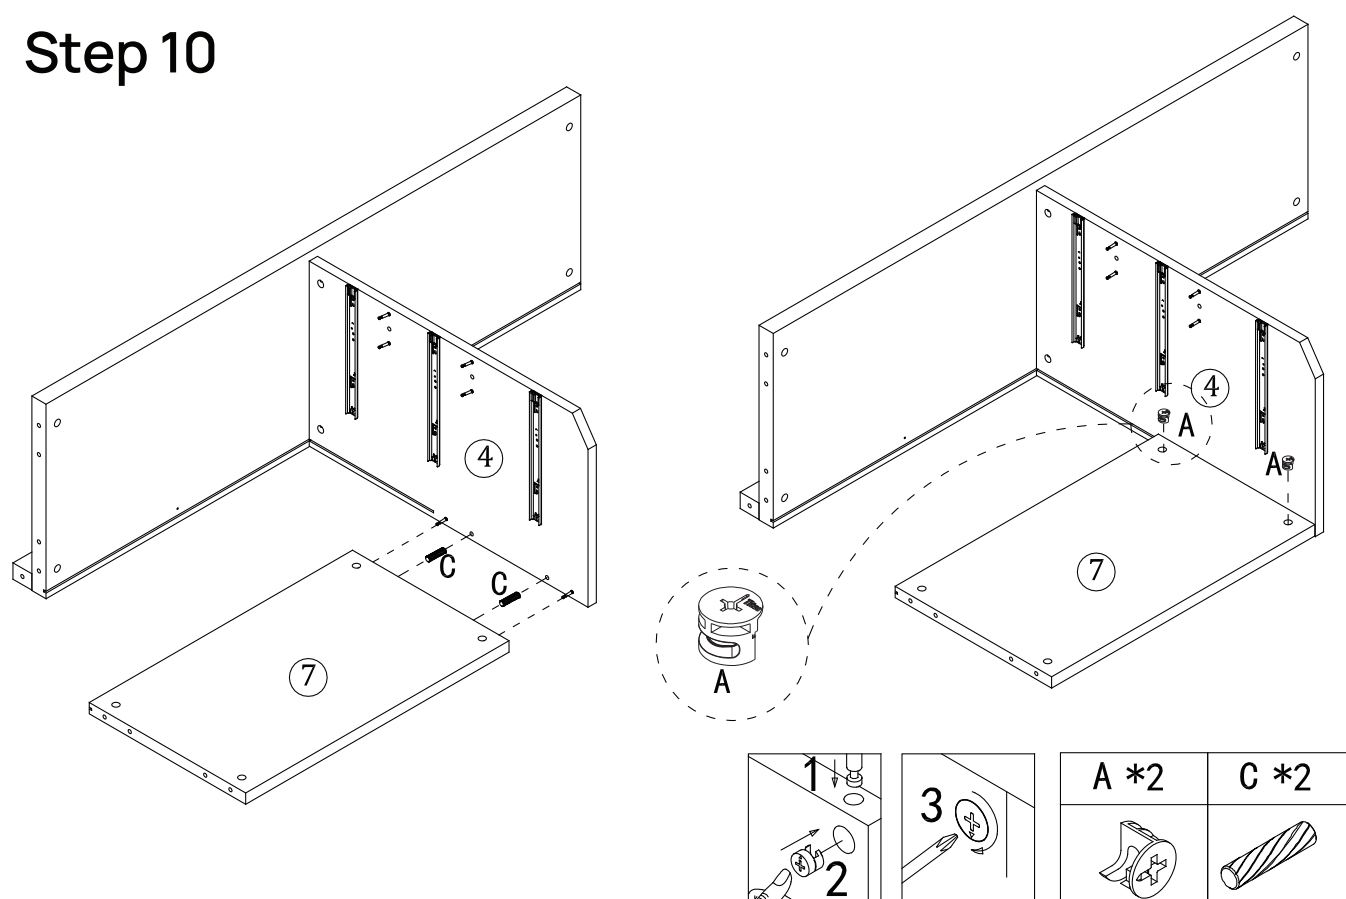




Step 11

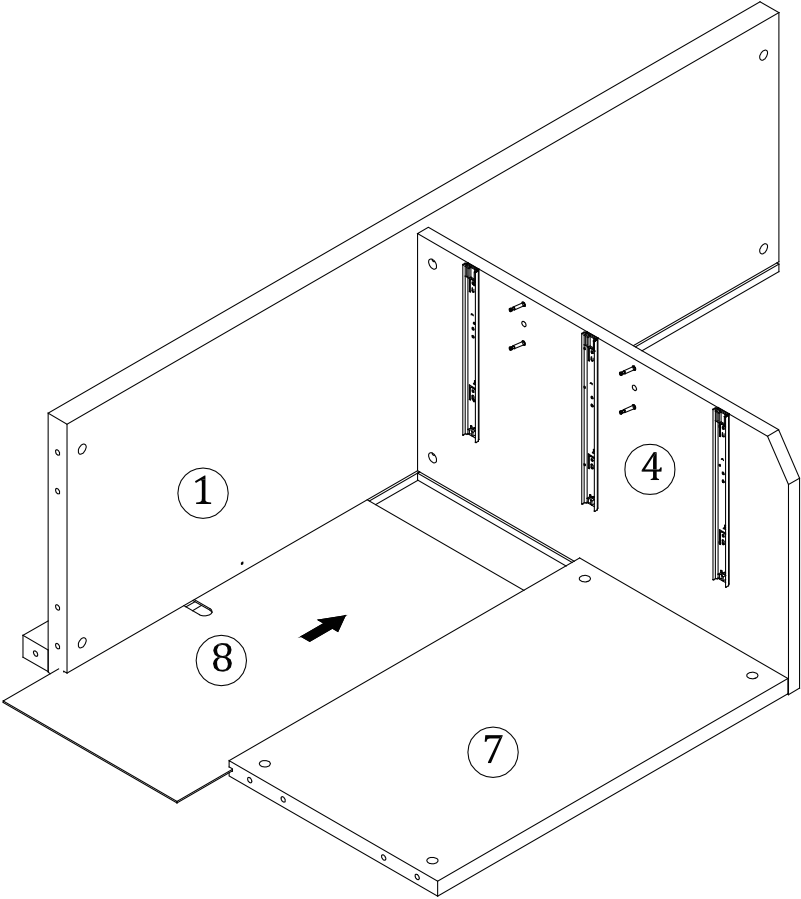


Step 12

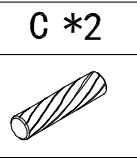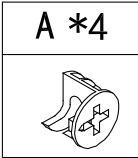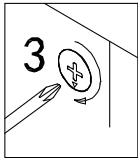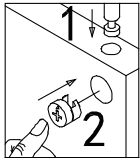
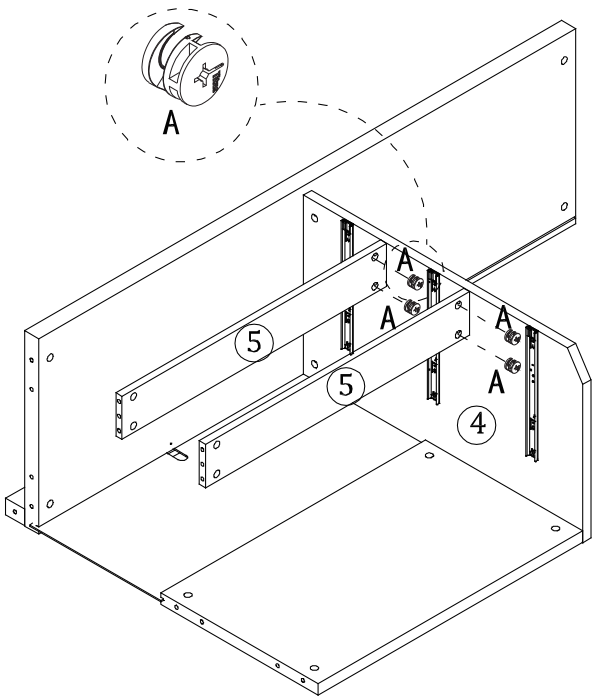
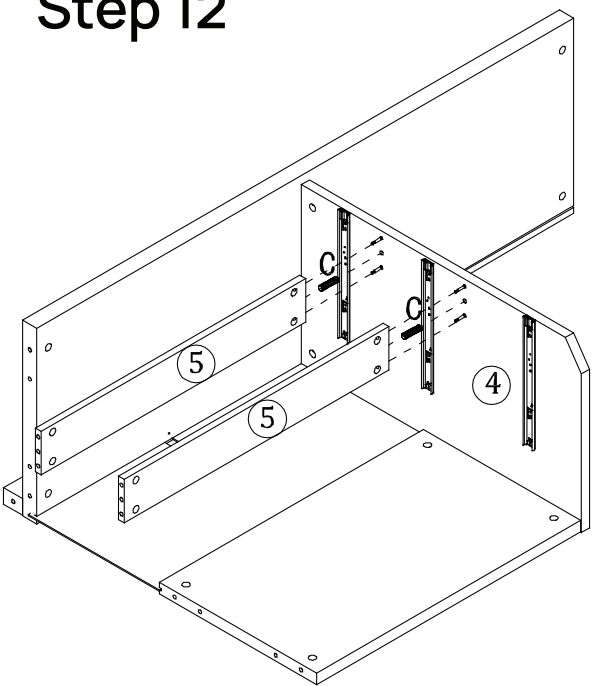



Step 13

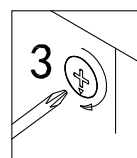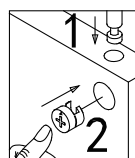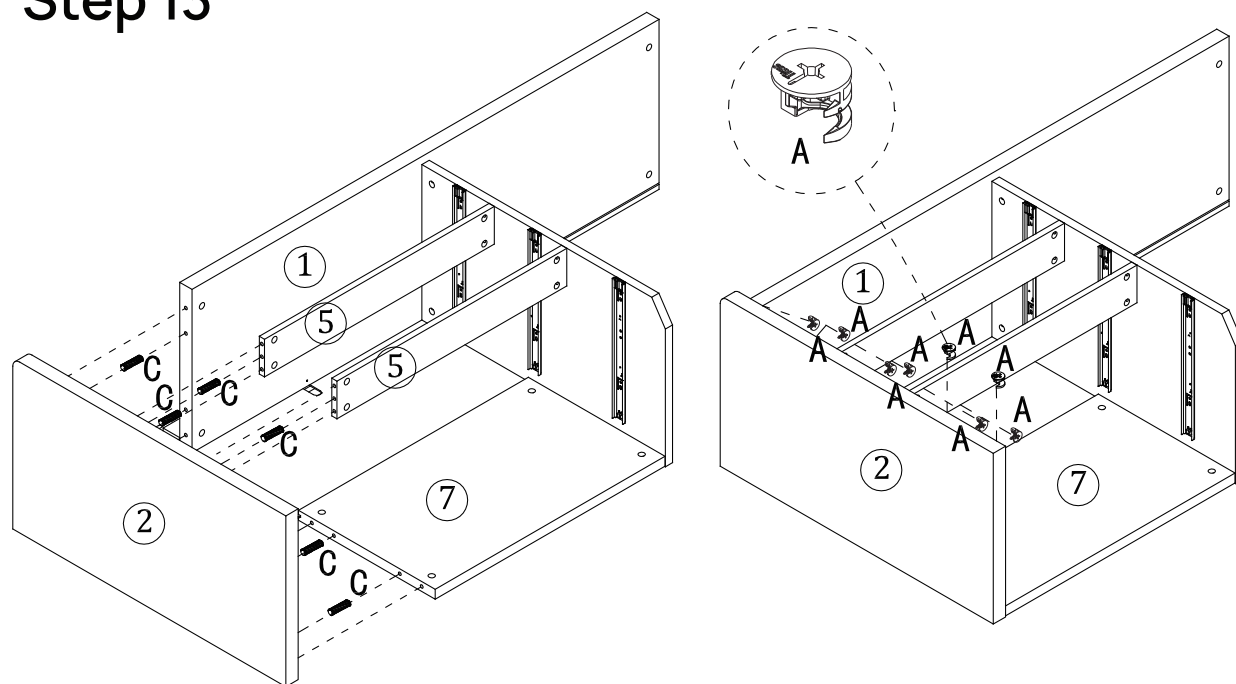


A *8	C *6
	

Step 14

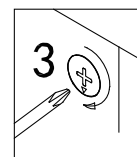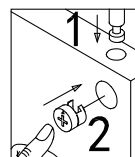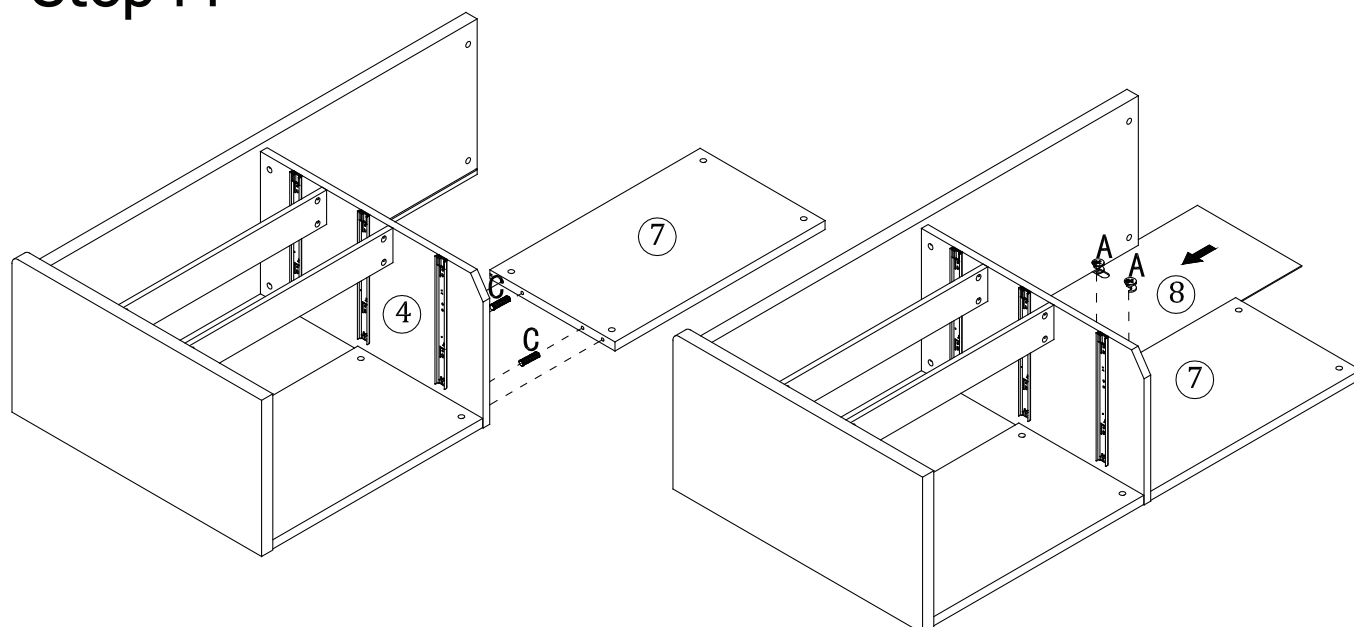


A *2	C *2
	





Step 15

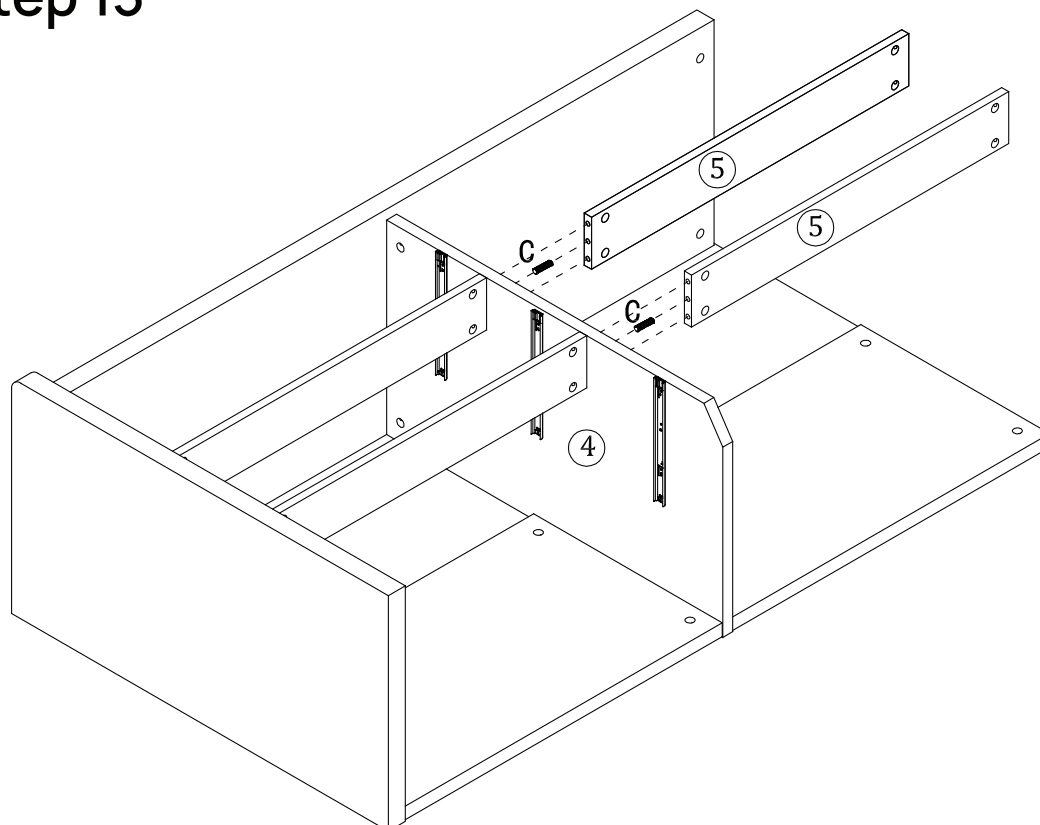


C *2




Step 16

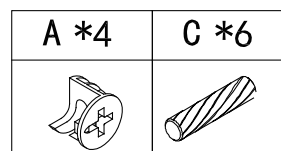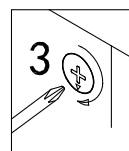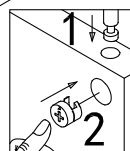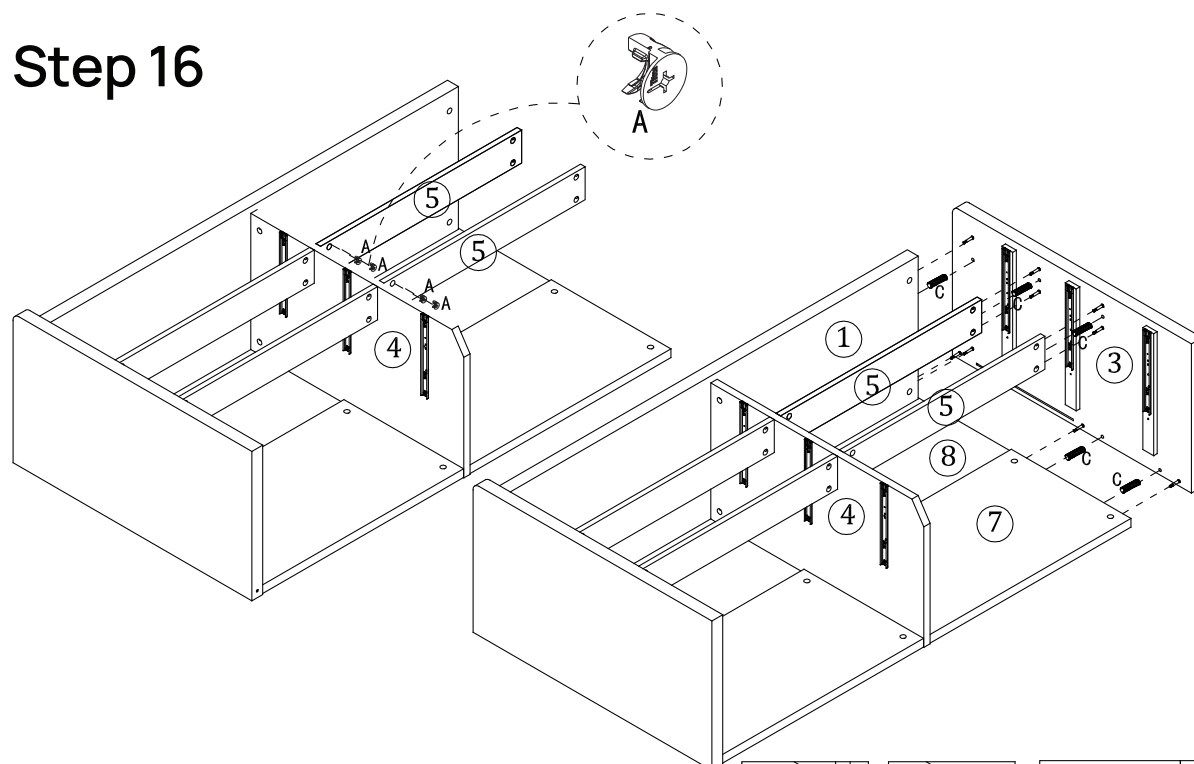

Step 17

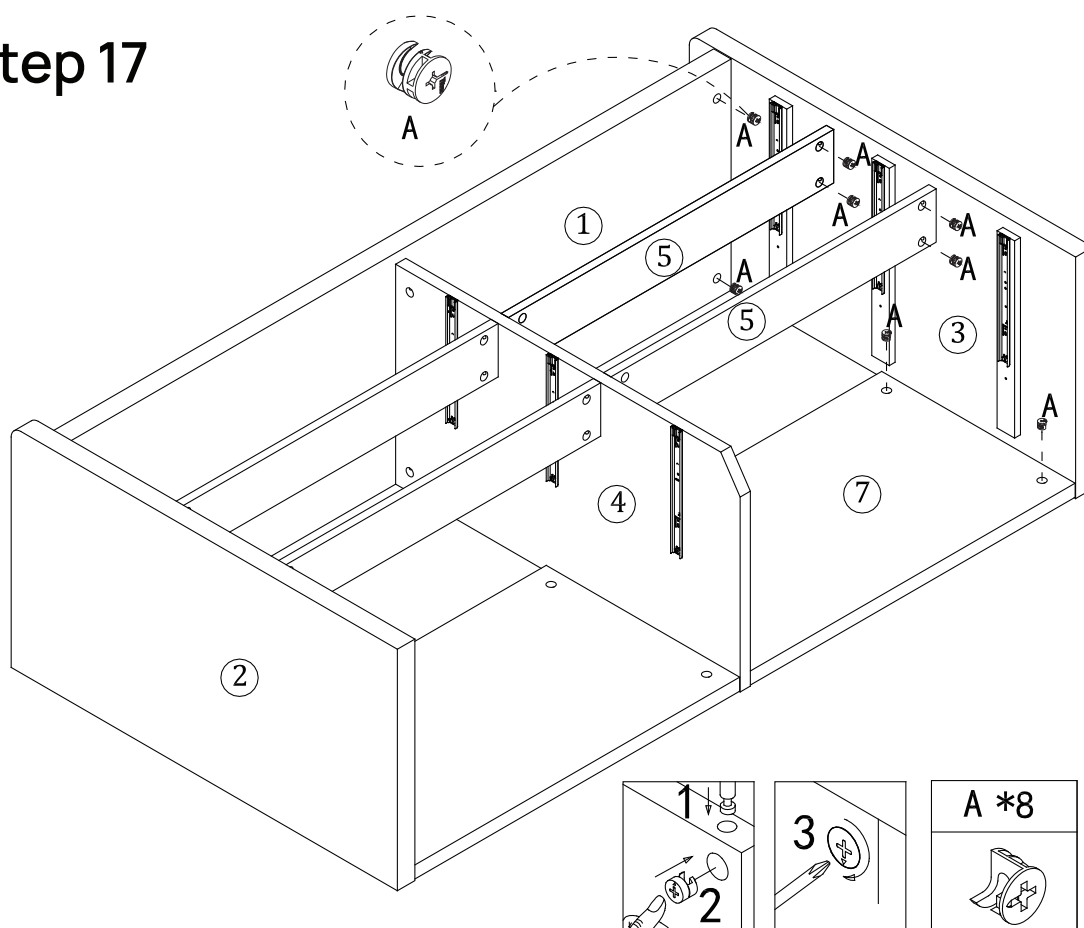


Step 18

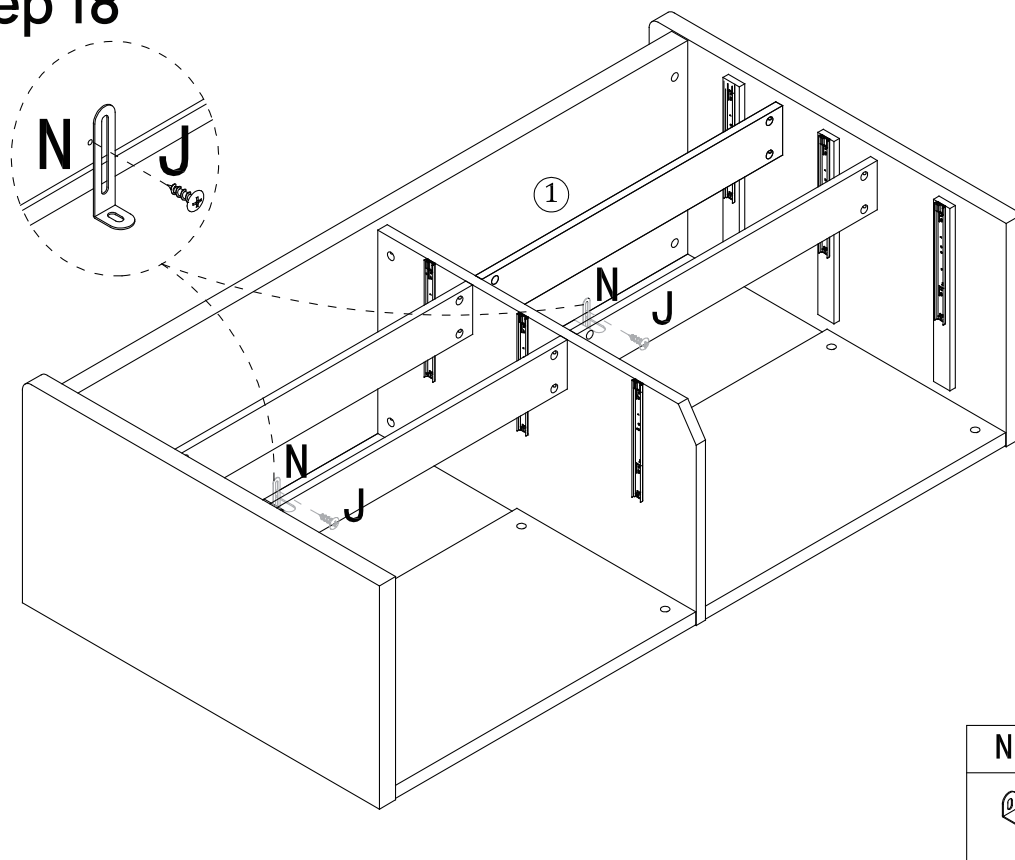


N *2	J *2
	


Step 19

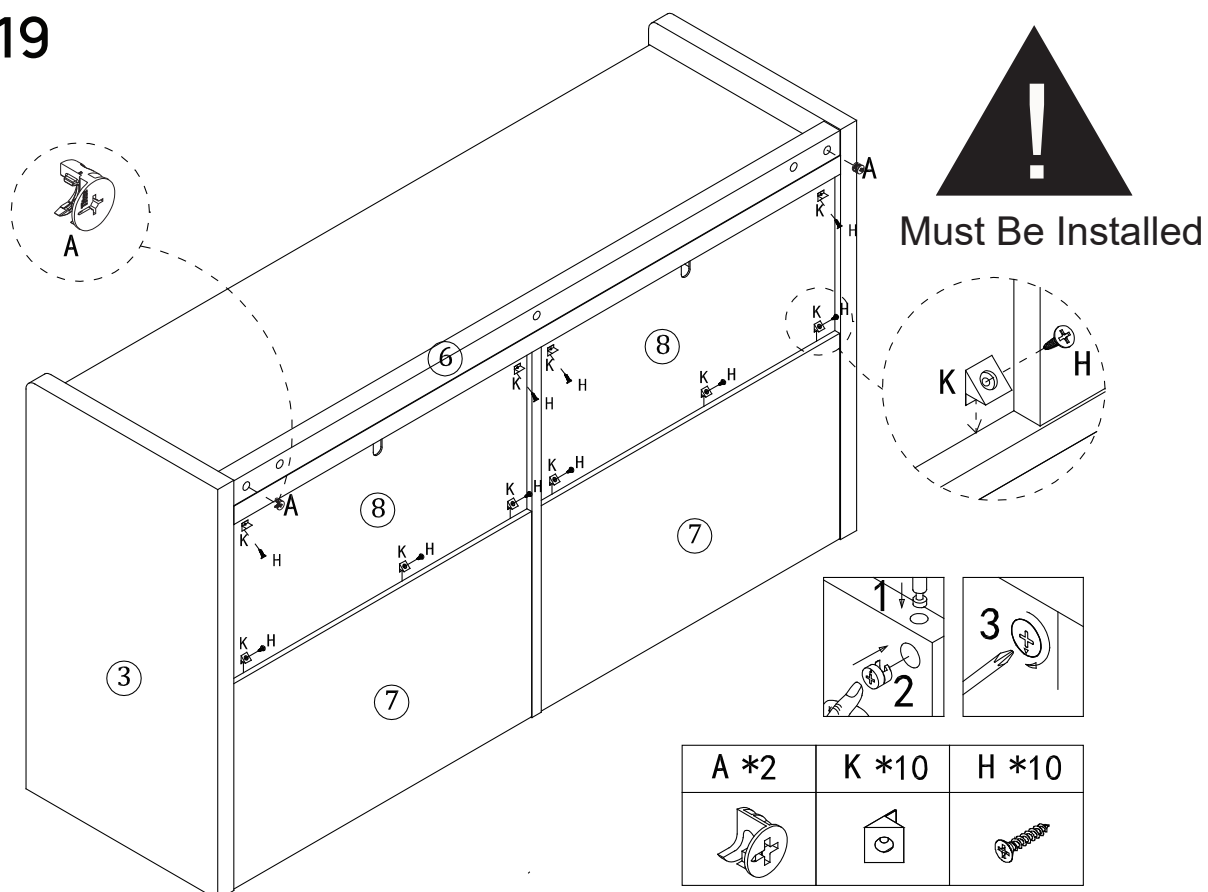


Step 20

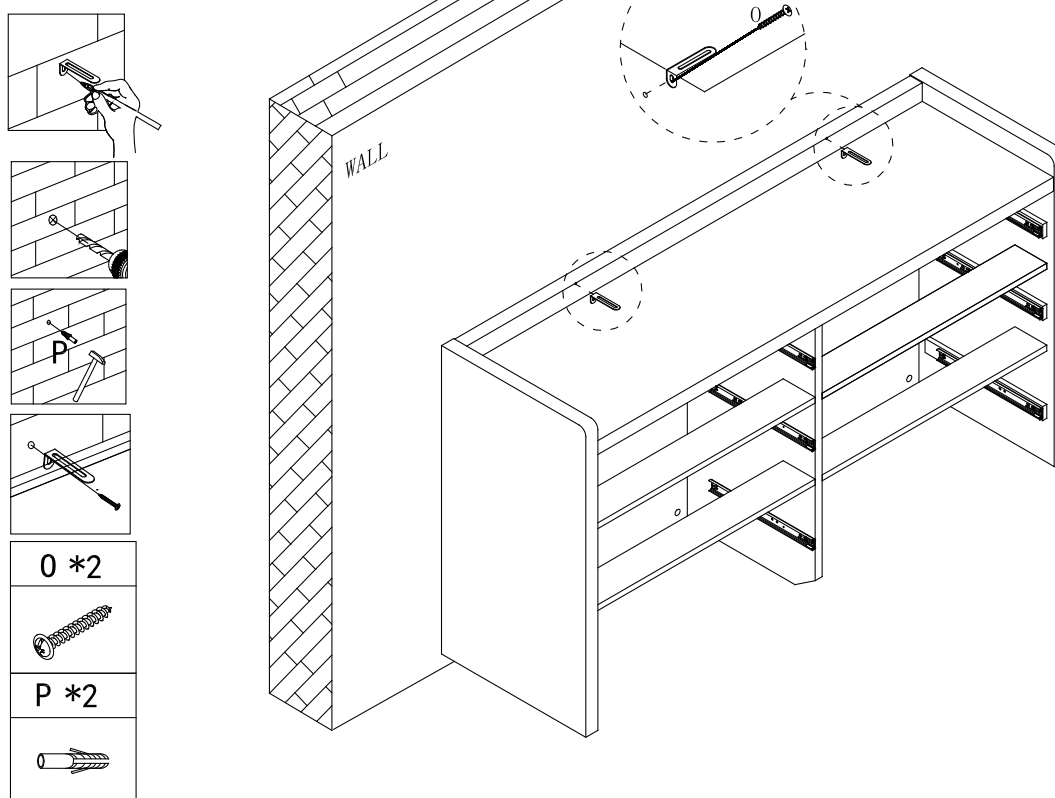


Step 21

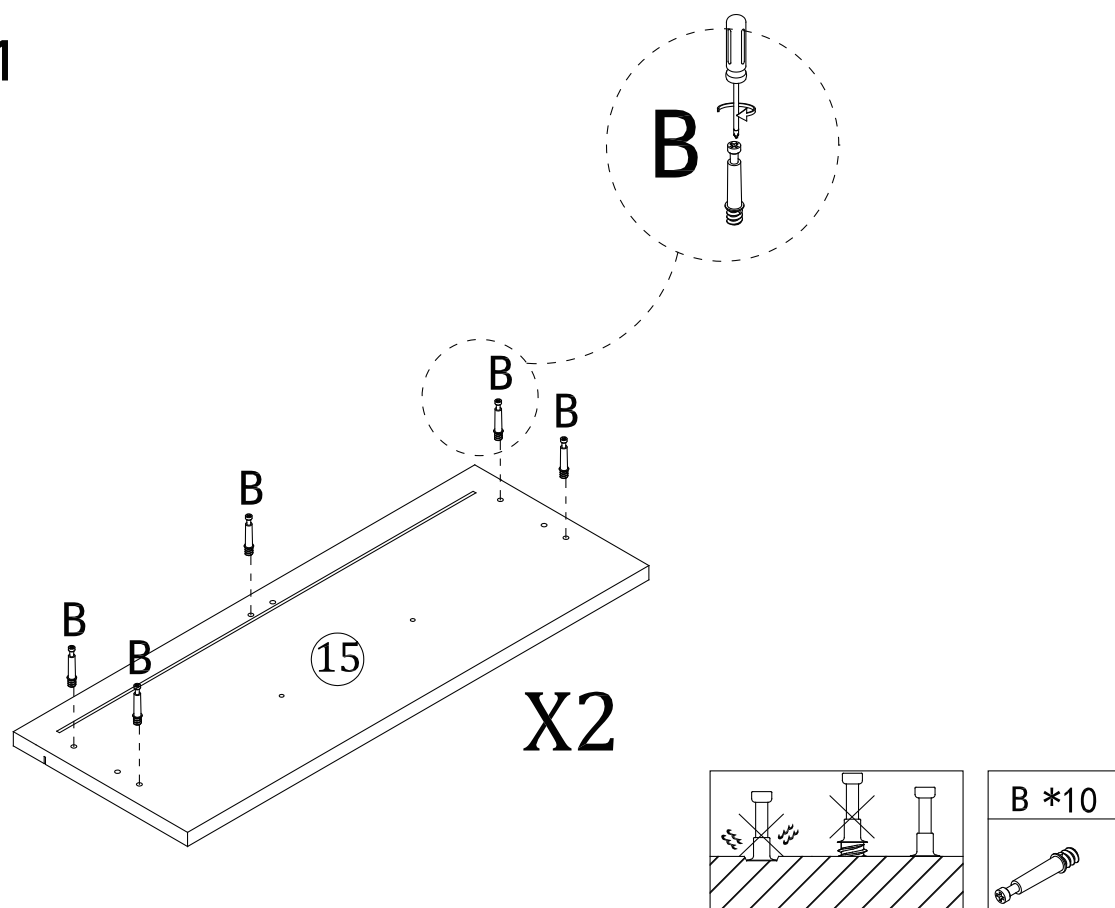


Step 22

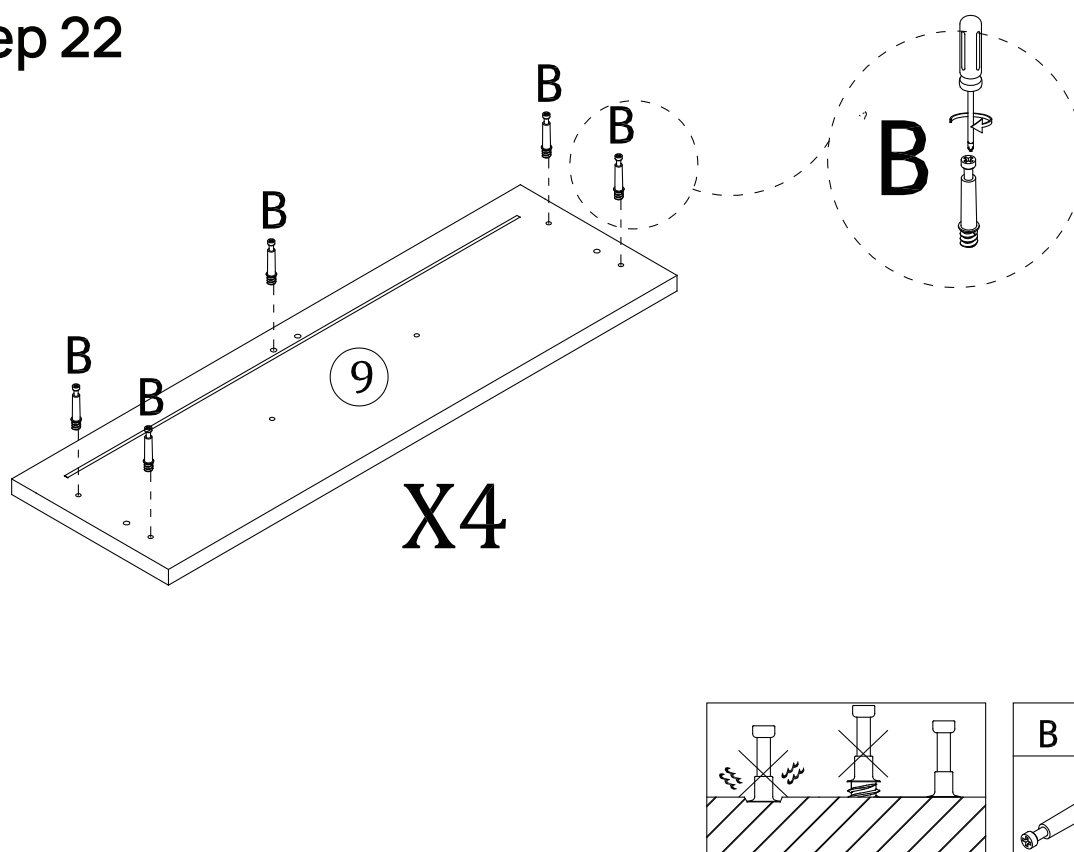

Step 23



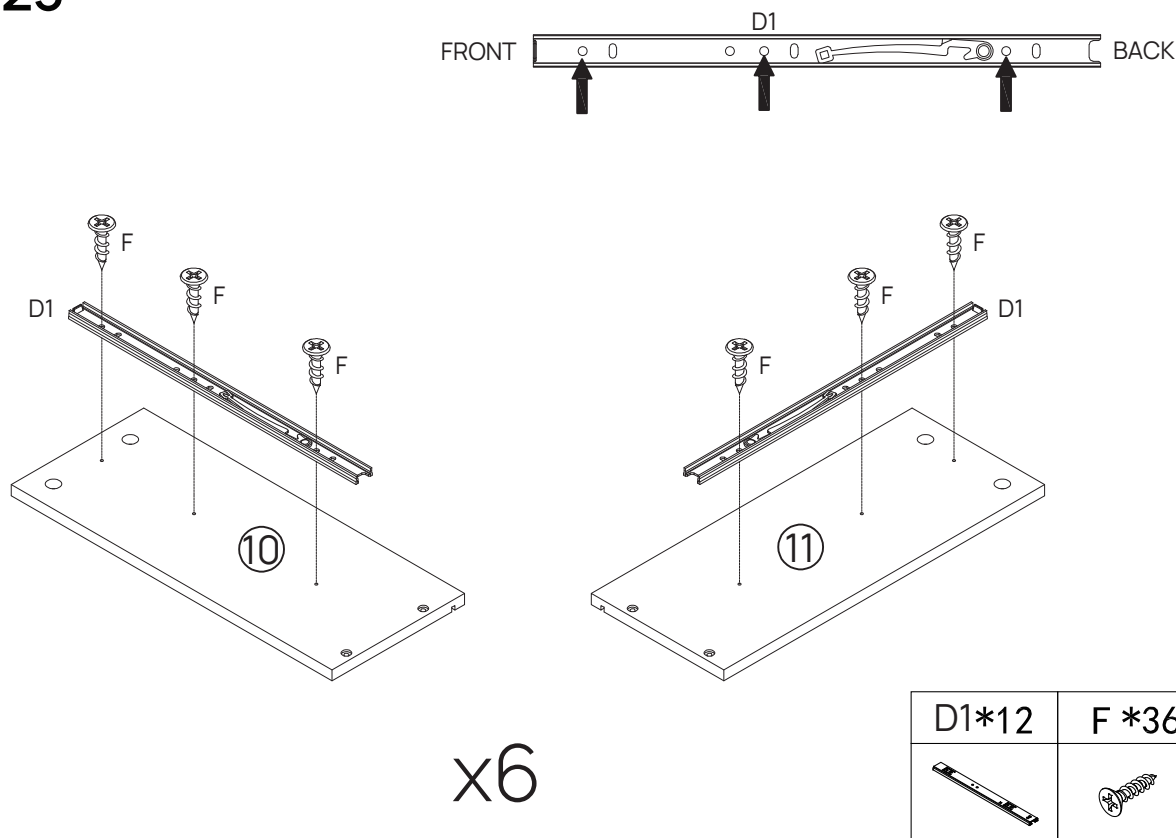


Step 24

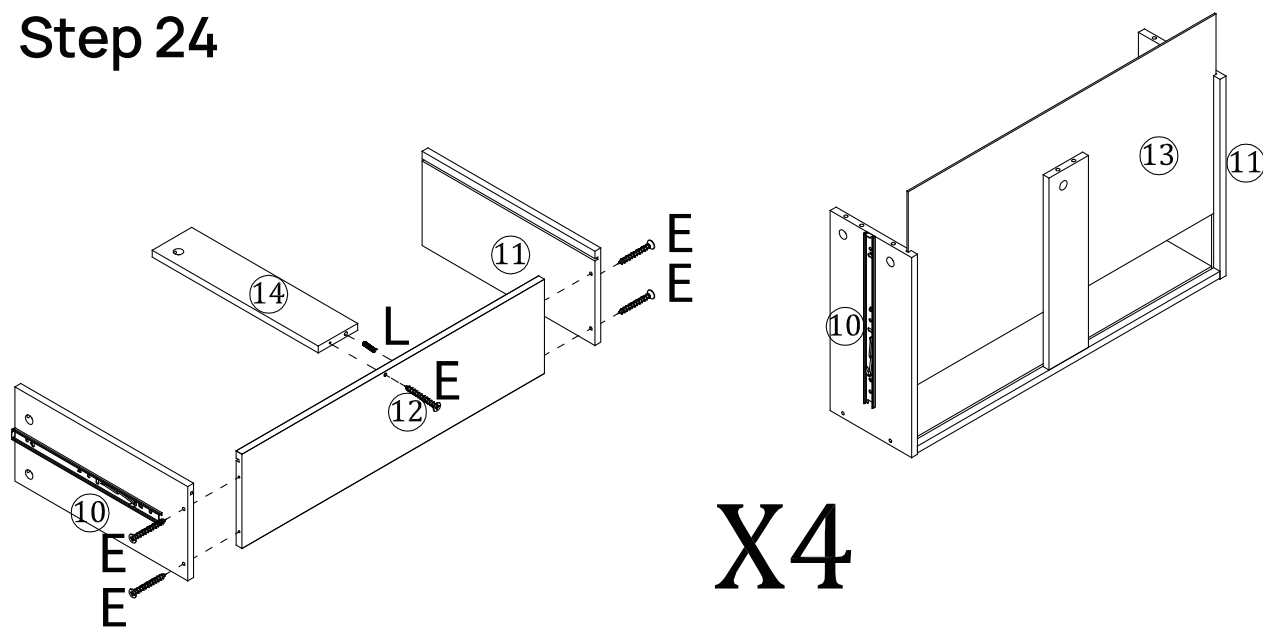


E *20	L *4

Step 25

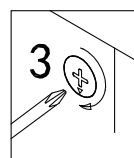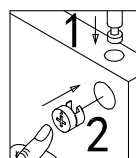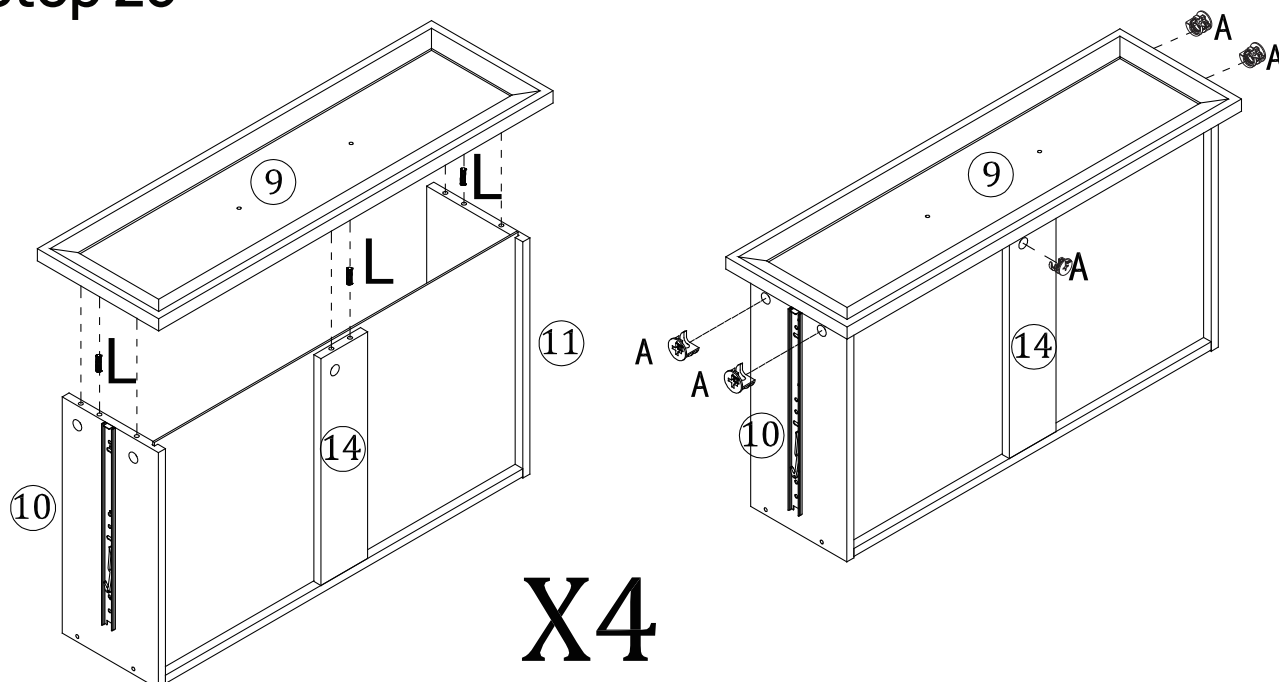


A *20	L *12

Step 26

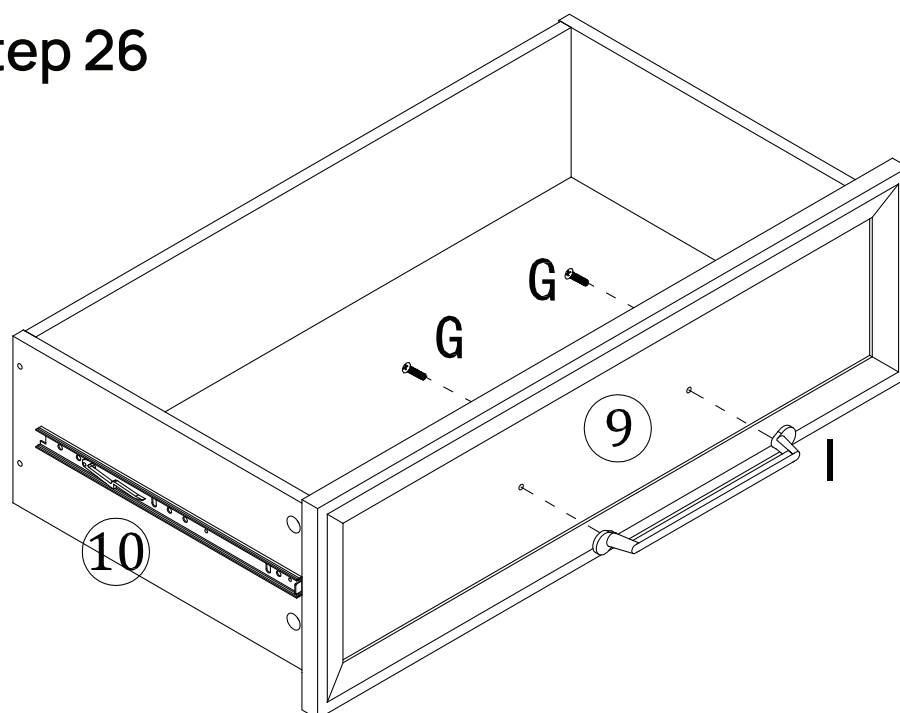

G *8	I *4


Step 27

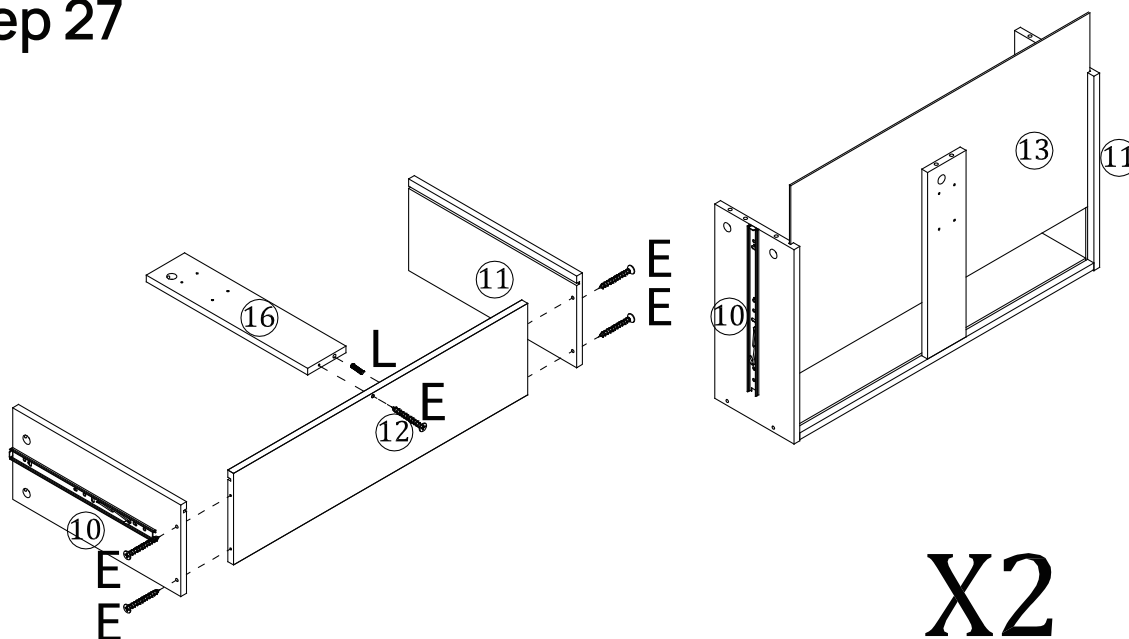


X2

E *10	L *2
	

Step 28

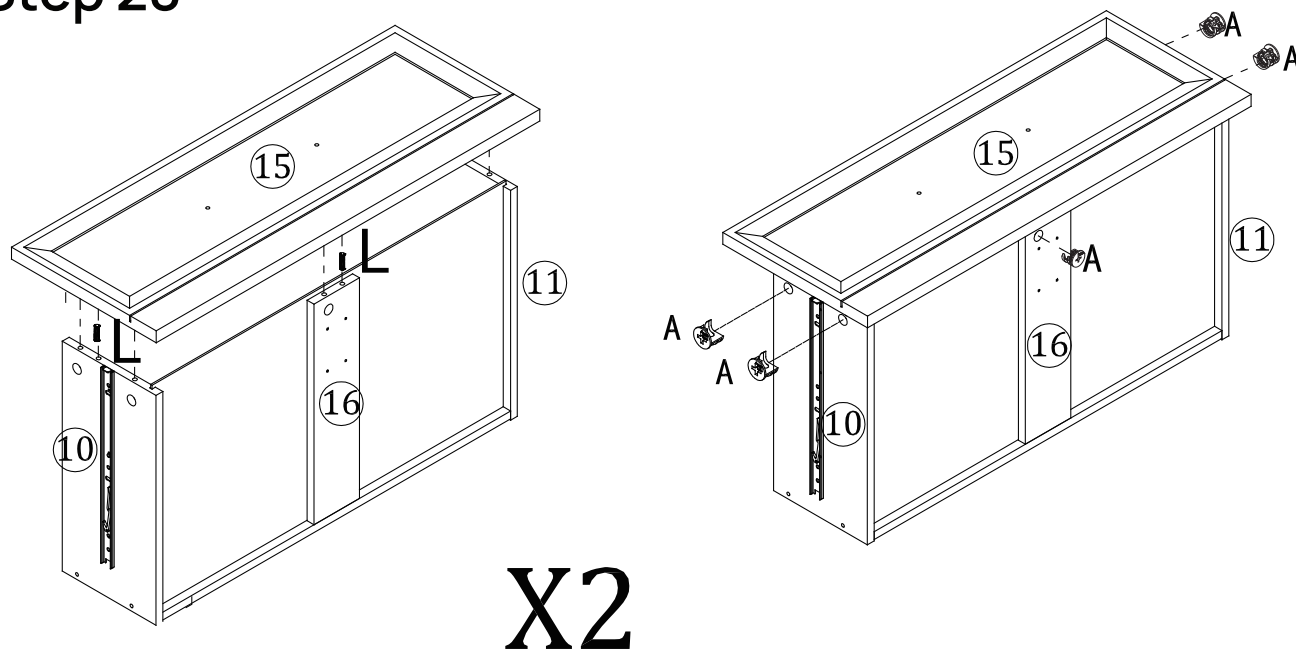


X2

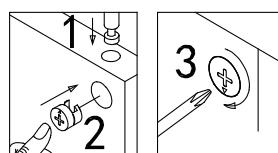

A *10	L *6
	

Step 29

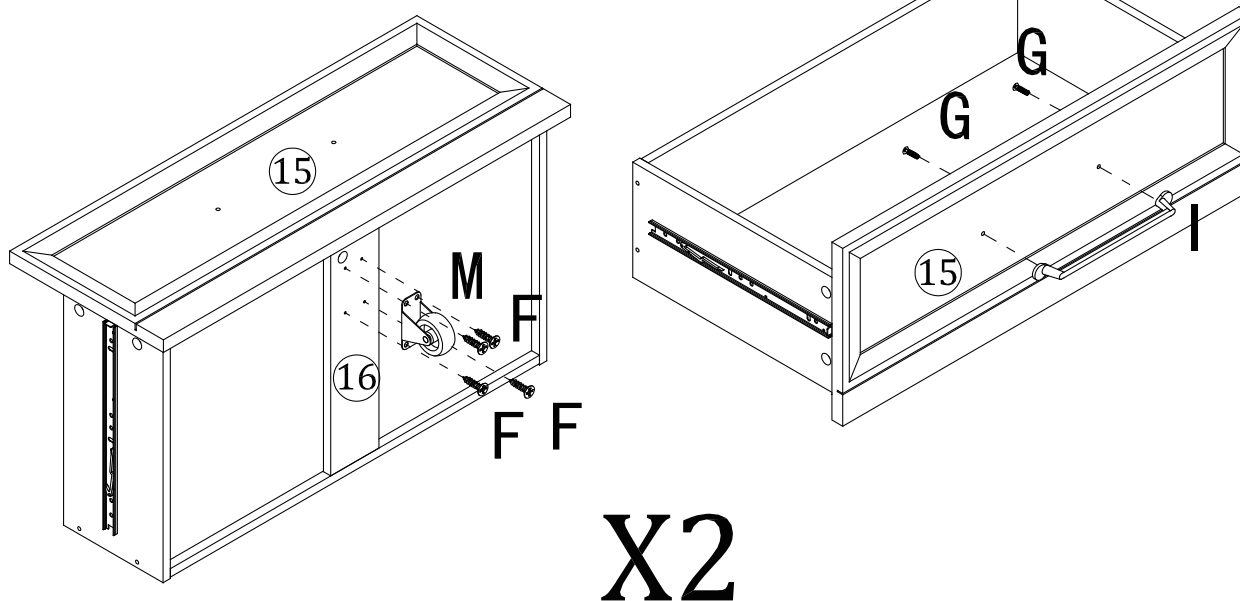

G *4	I *2	F *8	M *2


Step 30

Preparation: Slide the inner rail (movable track) to the frontmost position.


Precise installation: Position the drawer horizontally. Align both slide rails precisely, then push inward with steady, even pressure until you hear a “click,” indicating the lock is engaged. Installation complete.

WARNING: NEVER FORCE the drawer!
Incorrect start position or forcing the drawer will cause ball bearings to fall out and damage the slide.

Note: If the drawer does not slide smoothly, lift the release lever on one side and press it downward on the other side at the same time. Pull out the slider bracket from the slider arm, then reassemble the drawer until they go in smoothly.

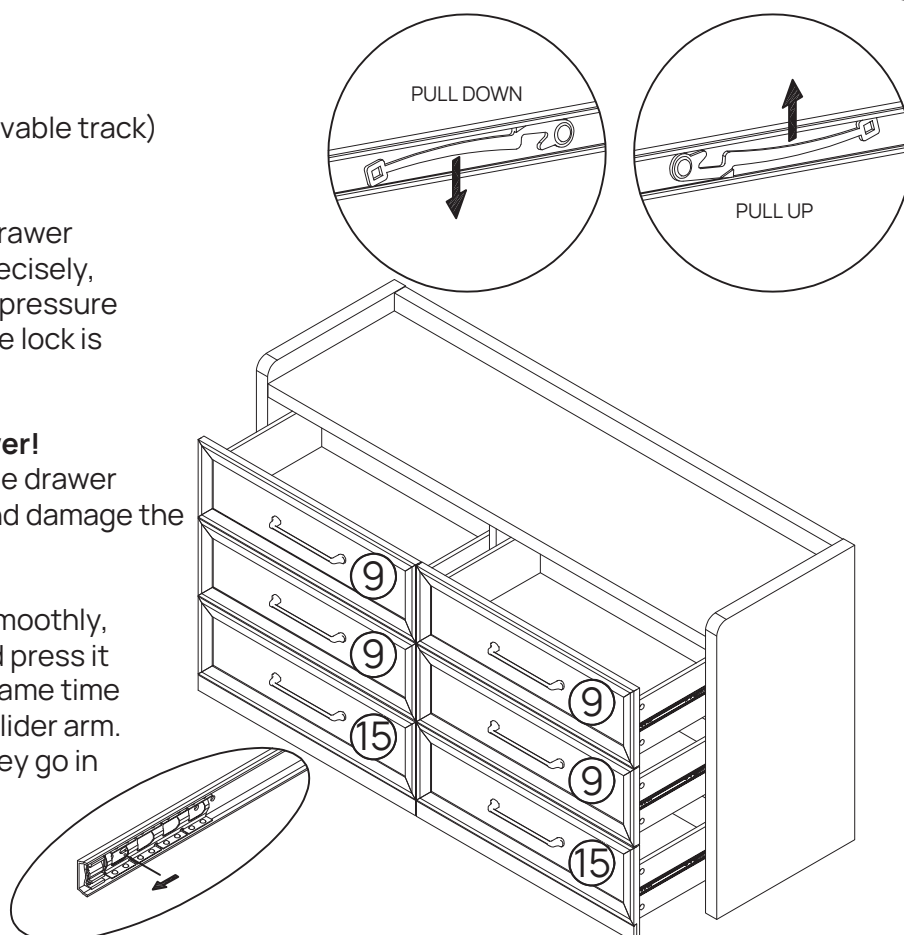

Step 31

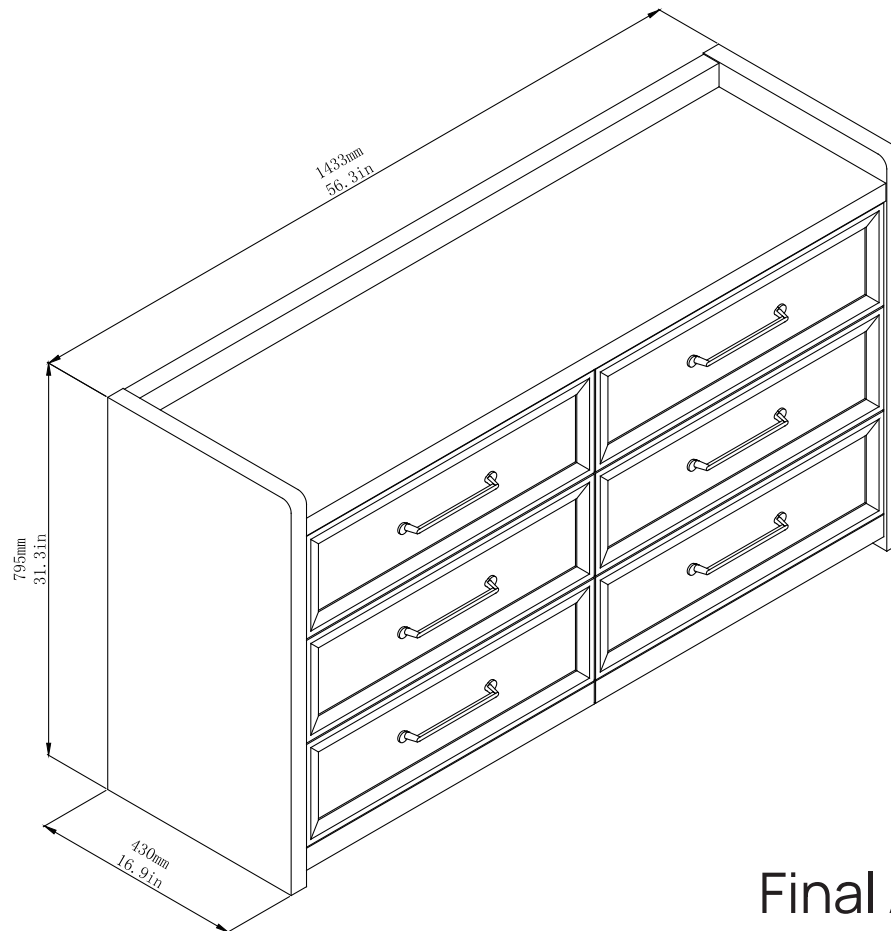

Final Assembly