Ahokua

Assembly Instruction








Accent Cabinet




WARNING:


- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- DO NOT use power tools.
- DO NOT over-tighten hardware.
- Periodically check all hardware and re-tighten as necessary.
- DO NOT use product if any component becomes damaged.
- For residential (non-commercial) use only.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80lbs for the tabletop and 30lbs for the shelf, evenly distributed.

Parts List
Check all parts before assembly

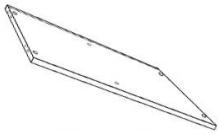
A. Tabletop  *1	B. Side panel  *2	C. Back panel  *2	D. Back strip *1
E. Bottom panel  *1	F. Leg  *1	G. Leg  *1	H. Door  *1
I. Door  *1	J. Shelf  *1	H1. Hex bolt /M6x40mm  *4+1	H2.Washer  *4+1
H3. Bolt  *8+1	H4.Screw  *8+1	H5. Screw/M4x14mm  *6+1	H6. Wooden pin  *8+1
H7. Magnet  *3	H8. Metal plate  *2+1	H9. Handle  *2	H10. Door hinge  *4+1
H11. Shelf pin  *4+1	H12. Foot pad  *4+1	H13. Screw /M3x14mm  *8+1	H14.Alley key  *1
H15. Spanner  *1	H16. Screw/M4x25mm  *4+1	H17. Back holder  *4+1	


Step 1: Put the Tabletop (A) on a soft surface to protect the finish.
Attach the Magnet (H7) to the pre-drilled hole on Table Top (A) with (H5) by (H15).
Insert the Wooden pin (6)& Bolt (H3) to the pre-drilled hole on Table Top (A) by (H15) as below shown.

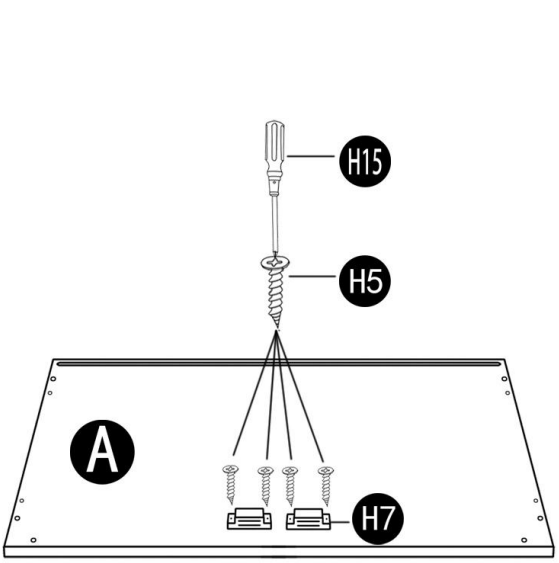

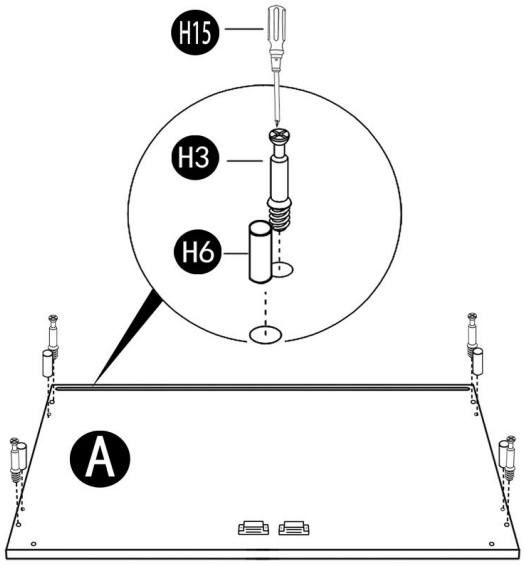



Step 2: Attach Side panel (B) to the Top (A) with Screw (H4) by (H15). Ensure the Side panel (B) aligned the groove on Top(A). **Leave hardware loose in this step.** Insert the Back panels (C)&Back strip (D) as shown below. Ensure the Back panels (C) aligned Groove on the Side panel (B)

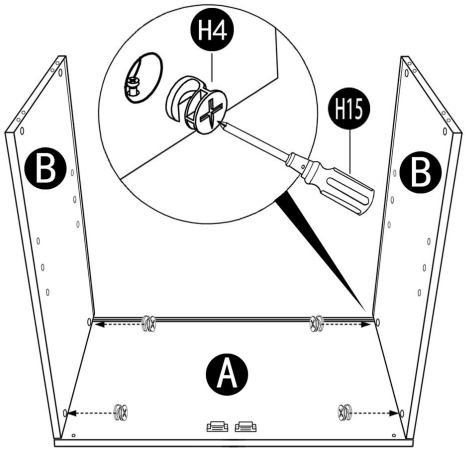

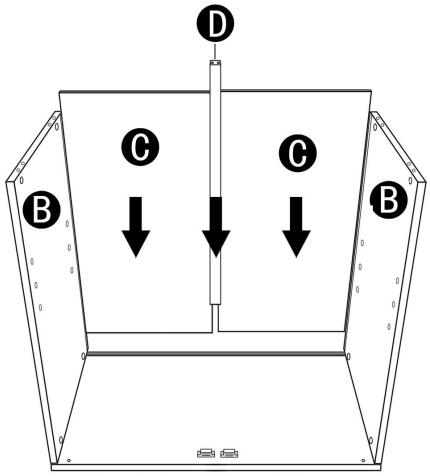


Step 3: Insert the Wooden pin (6) to the pre-drilled hole on Side panel (B). Attach the Magnet (H7) to the pre-drilled hole on Bottom panel (E) with (H5) by (H15). Insert the Bolt (H3) to the pre-drilled hole on Bottom panel (E) by (H15).

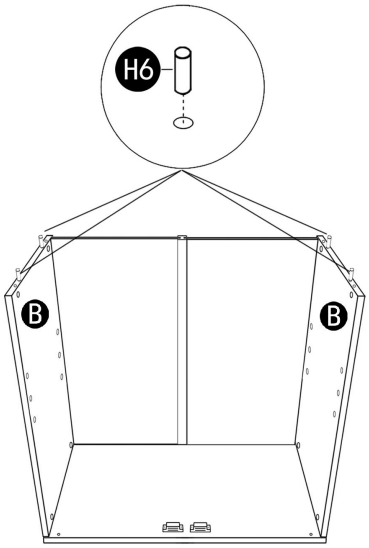


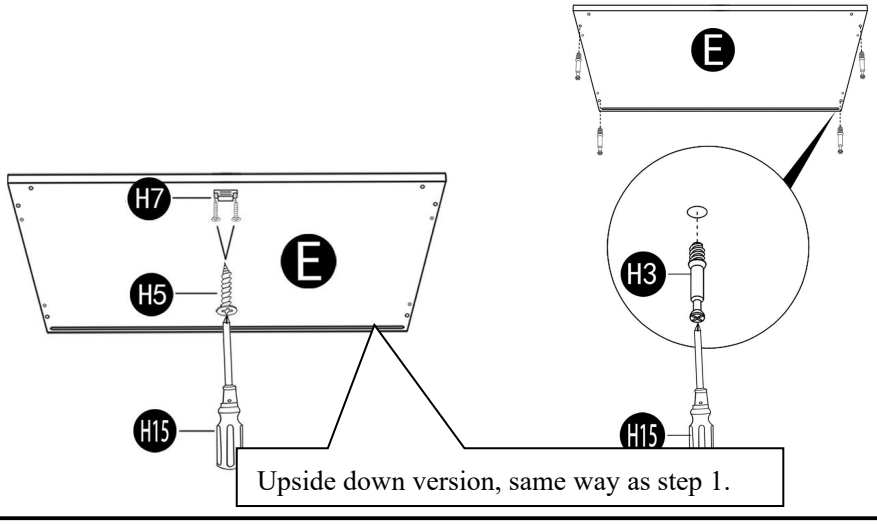


Step 4: Attach the Bottom panel (E) to the main body with Screw (H4) by (H15) as shown in picture below.
Fully tighten all bolts from Step 1 to 3.

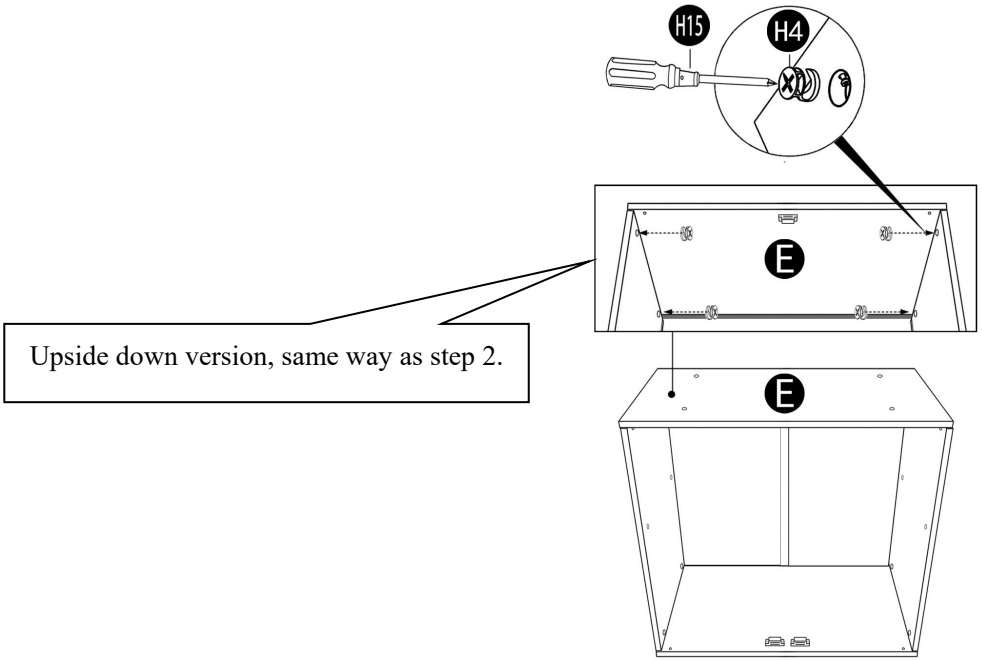


Step 5: Place the Leg (F) with Leg (G) as below photo shown. Attached the Legs (G&F) to the bottom of the cabinet with Hex bolts (H1) and Washers (H2) by Allen key (H14) as shown.
Attach the Foot pad (H12) to the bottom of the legs.

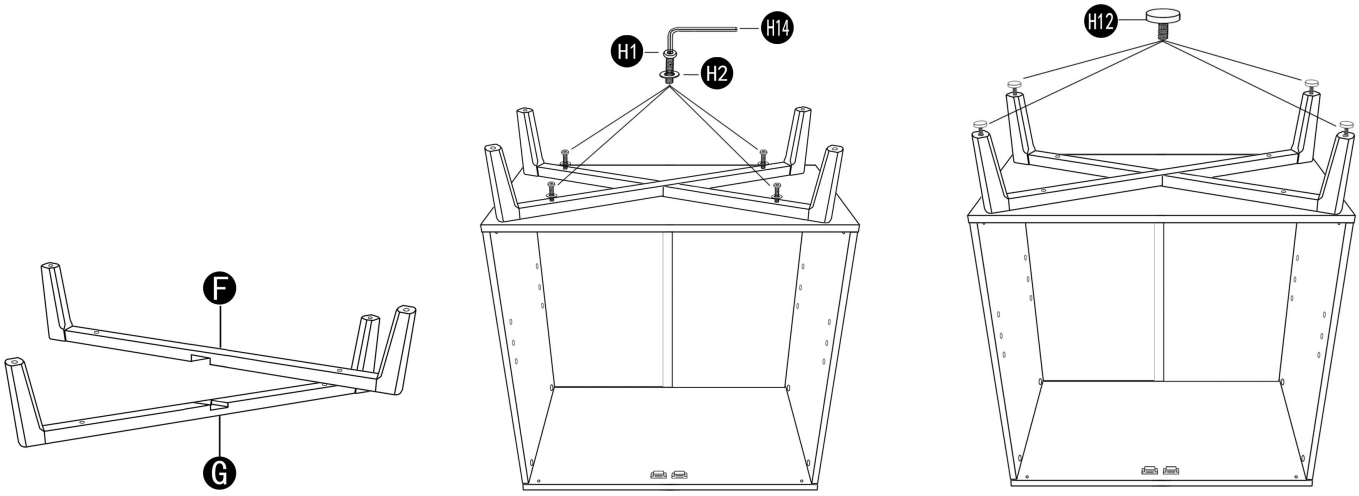


Step 6: **TWO PEOPLE REQUIRED when turning the item upside down to avoid breaking the legs.**
Insert the Shelf pins (H11) into the holes. Place the Shelf (J) inside as shown in picture below.

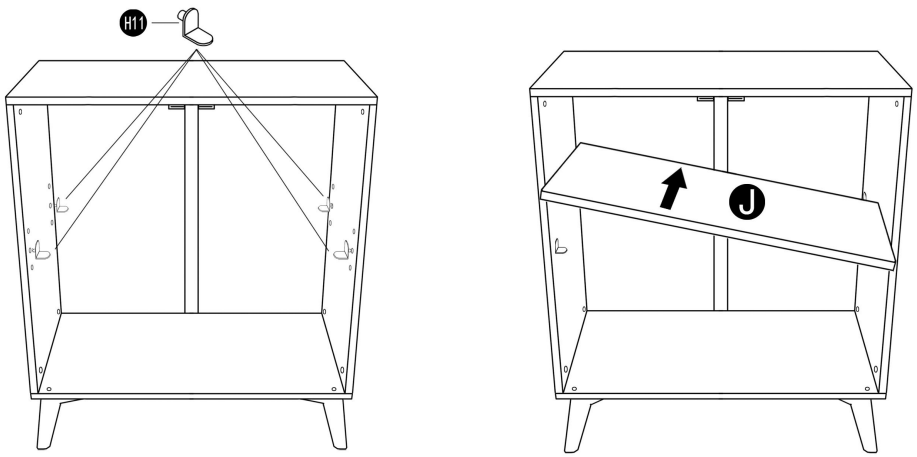


Step 7: Attach the Metal plate (H8) to the pre-drilled holes on each door (H&I)using screw (H13) by (H15). Attach the the Handle (H9) to the pre-drilled holes on each door (H&I)using screw (H3) by (H16).

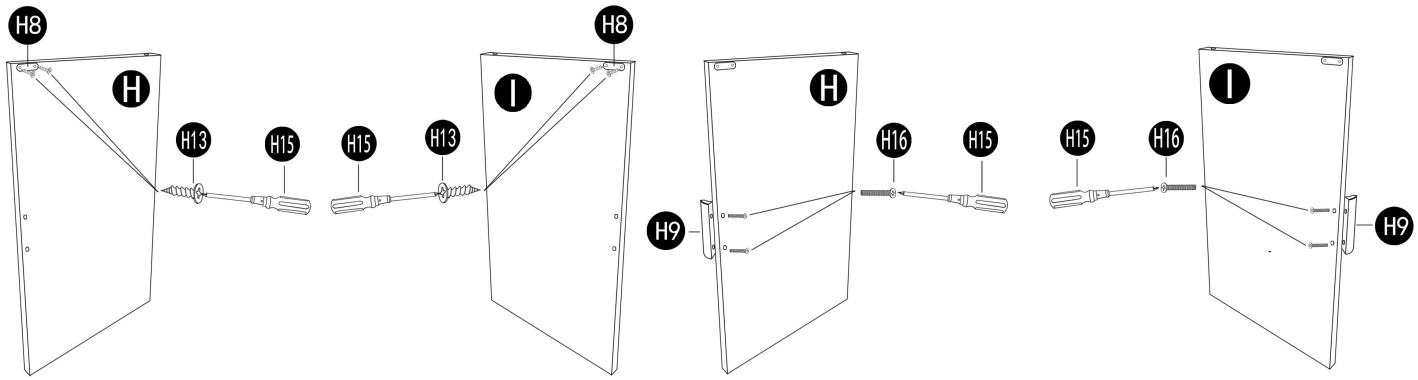

Step 8: Insert the bottom door pin (H10) and top door pin (H10) into the corresponding holes on the doors. Insert the **bottom** door pin (H10) into the hole on the cabinet first, then press down the top door pin (H10) to secure the door in place.

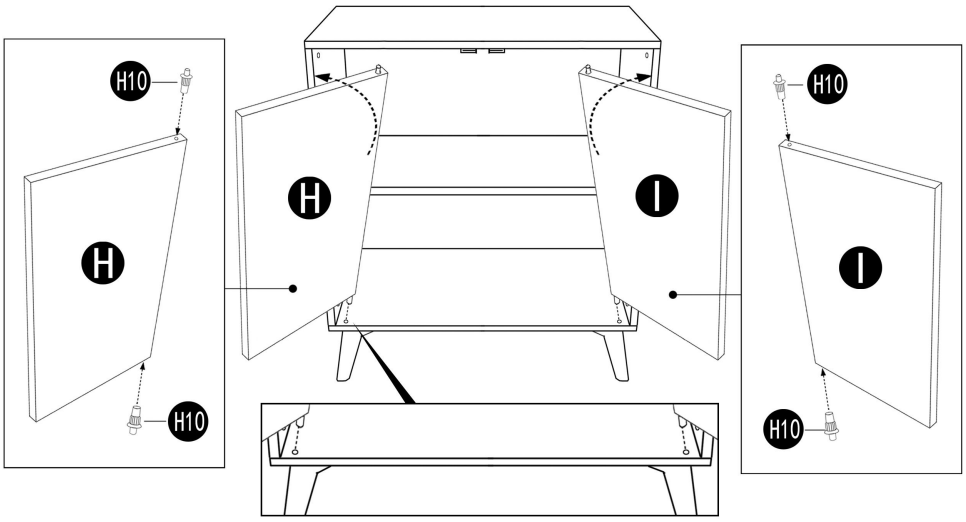

Step 9: Attach (H17) to the back of the main body to enhance the stability with (H13) by Spanner (H15) as shown below.

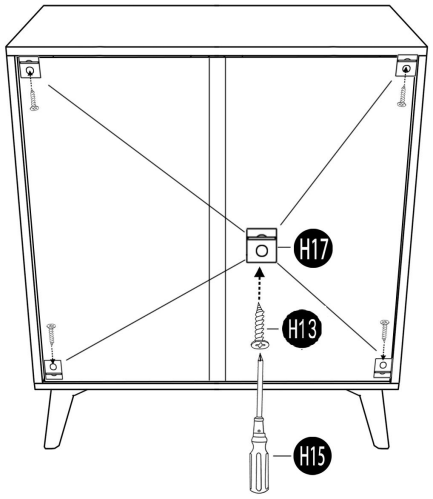

Assembly finished.

Thank you for buying this Living Room Furniture.

If you encounter any issues during installation or use, please email us at **support@mi-din.com**, including your order ID and a detailed description of the problem. If possible, please provide relevant images to expedite assistance. We will strive to resolve any issues promptly.