
CABINET

Assembly Instructions - Please keep for future reference

Dimensions

Width-15.67inch
Depth-15.00inch
Height-66.06inch

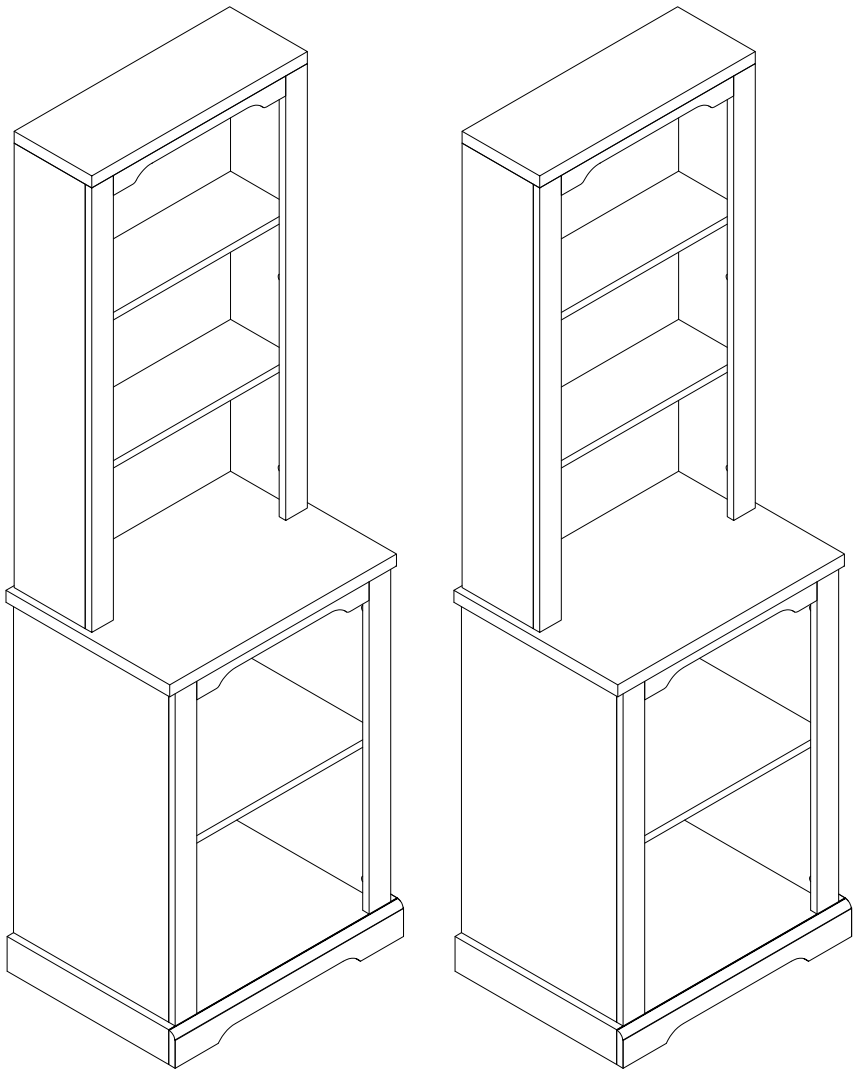

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.
















WARNING
In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Components - Fittings






Please check you have all the panels listed below

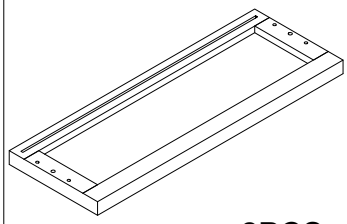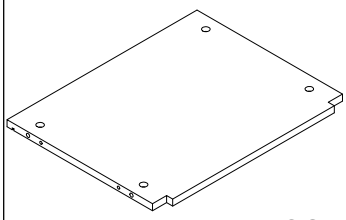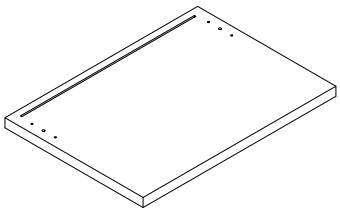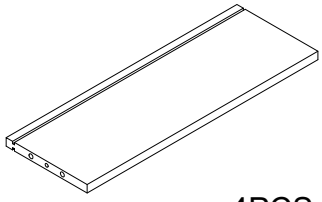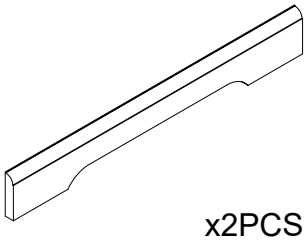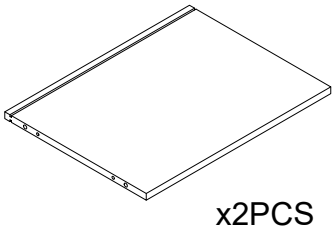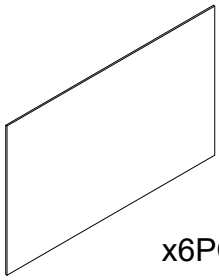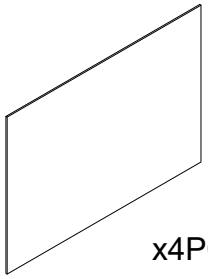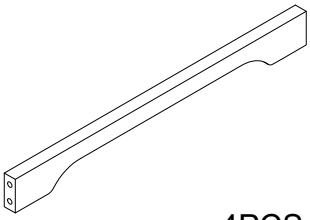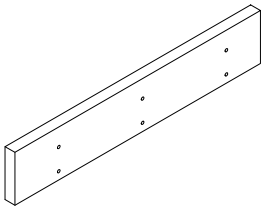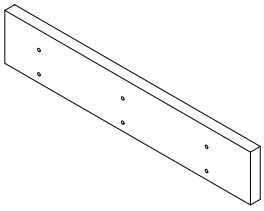1 498*178*24  x2PCS	2 468*371*12  x2PCS	3 890*162*15  x2PCS	4 890*162*15  x2PCS
5 740*356*15  x2PCS	6 740*356*15  x2PCS	7 528*378*24  x2PCS	8 468*162*12  x4PCS
9 530*70*15  x2PCS	10 468*356*12  x2PCS	11 890*48*15  x2PCS	12 890*48*15  x2PCS
13 740*48*15  x2PCS	14 740*48*15  x2PCS	15 475*296*3  x6PCS	16 475*342*3  x4PCS
17 398*38*15  x4PCS	18 371*68*15  x2PCS	19 371*68*15  x2PCS	


Components - Fittings

Please check you have all the panels listed below

Note:The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  M6*35mm Cam Bolt x 72+3	B  M15*10mm Cam lock x 72+3	C  M6*30mm Dowel x 72+3	D  M4*25mm Screw x 32+2
E  M3*12mm Screw x 4	F  M4*40mm Screw x 8+1	G  Plastic Connector x 40+2	H  M3*16mm Screw x 40+2
I  M4*35mm Screw x 4	J  Anti-Inverted Iron x 4	K  M4*12mm Screw x 4	L  WALL ANCHOR x 4
M  Metal Plate x 2			

Tools required

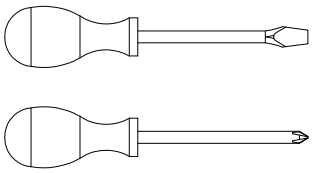


Phillips screwdriver
(medium & large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

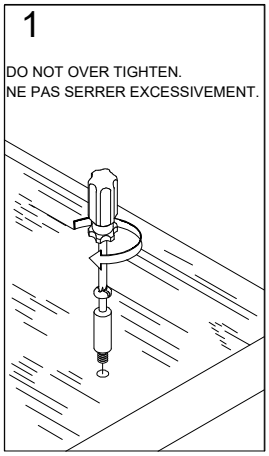

Step 2


Push the male camlock into the entry hole.

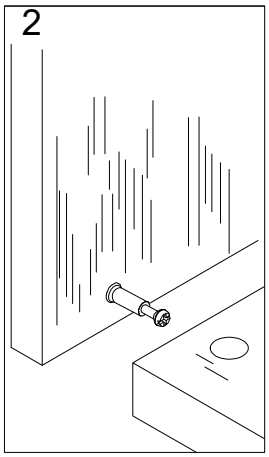

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

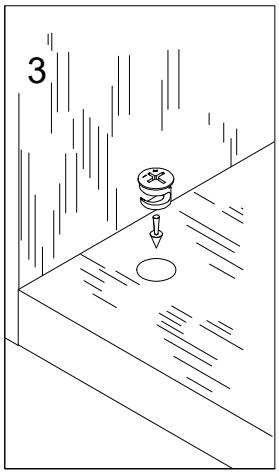


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

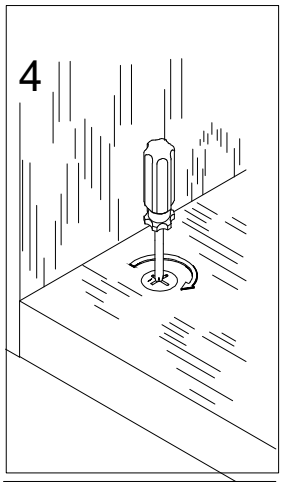


Assembly Instructions

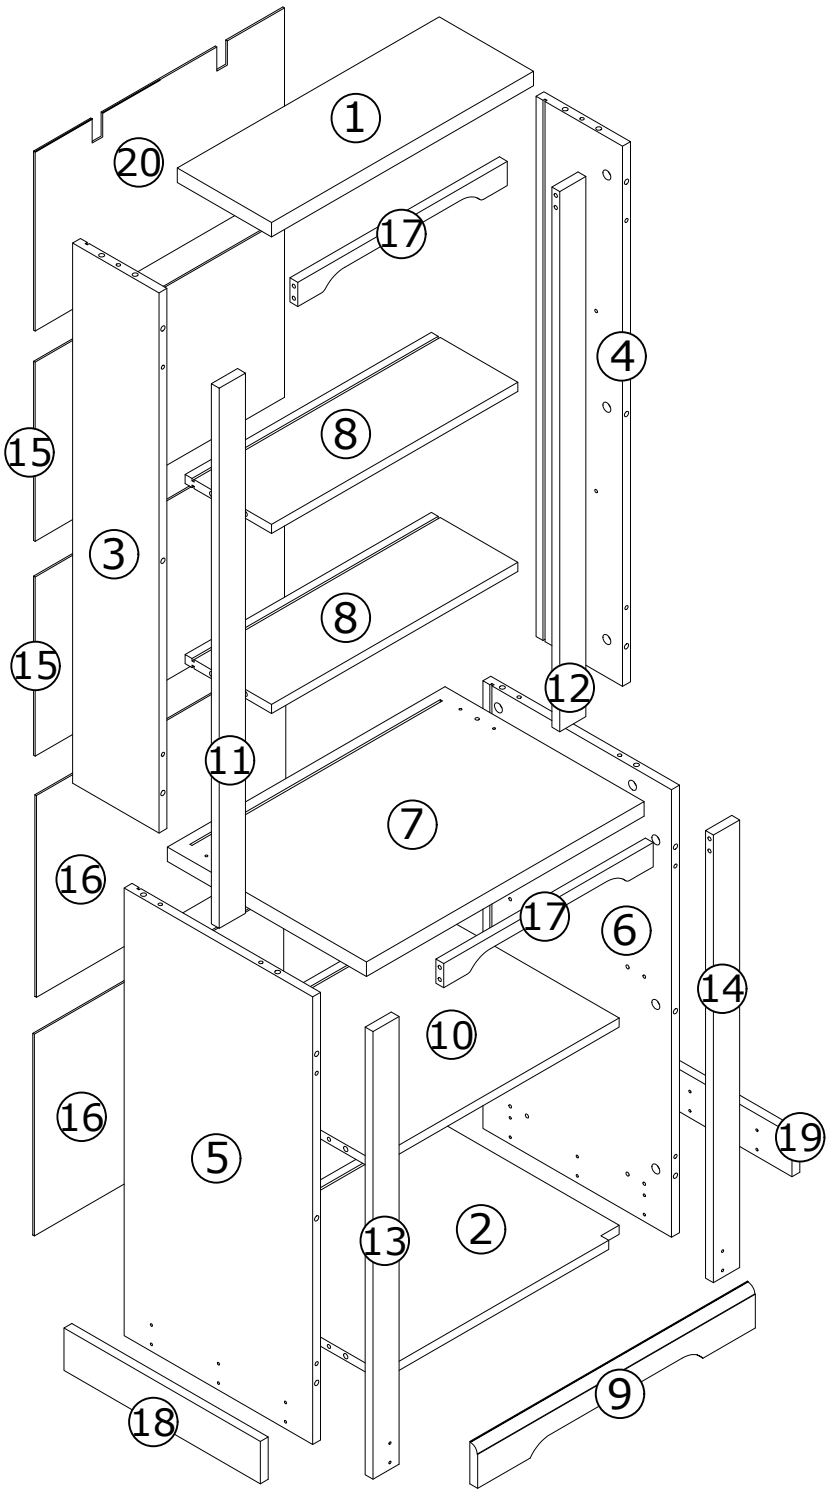

X2

Assembly Instructions

Step 1

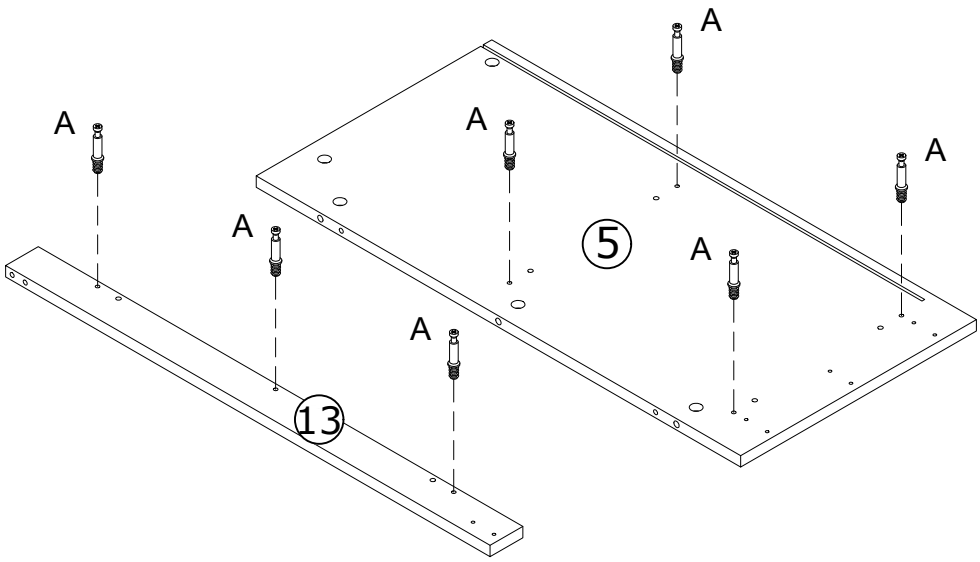


Ⓐ



M6*35 Cam Bolt x 14

X2

Step 2

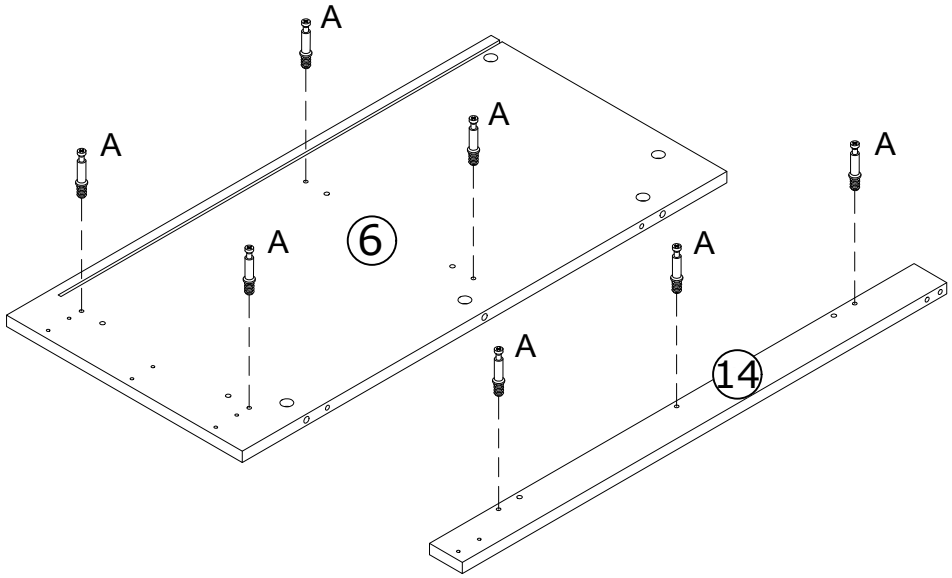

X2


Ⓐ




M6*35 Cam Bolt x 14

Assembly Instructions

Step 3

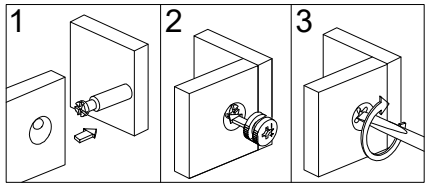


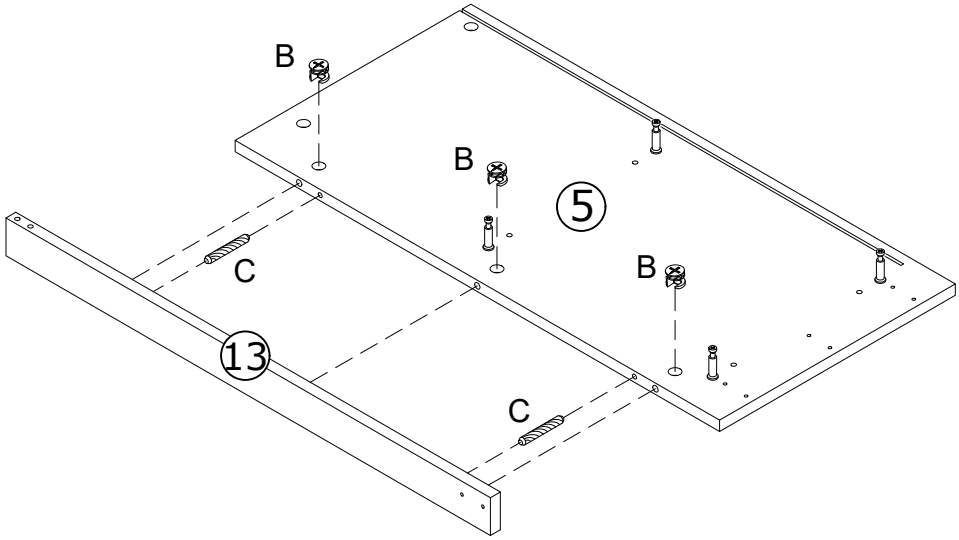


B	C
	
M15*10mm Cam lock x 6	M6*30mm Dowel x 4

X2

Step 4

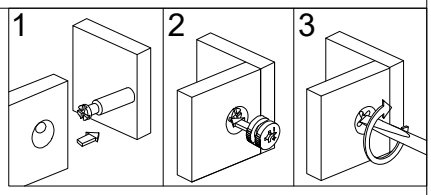

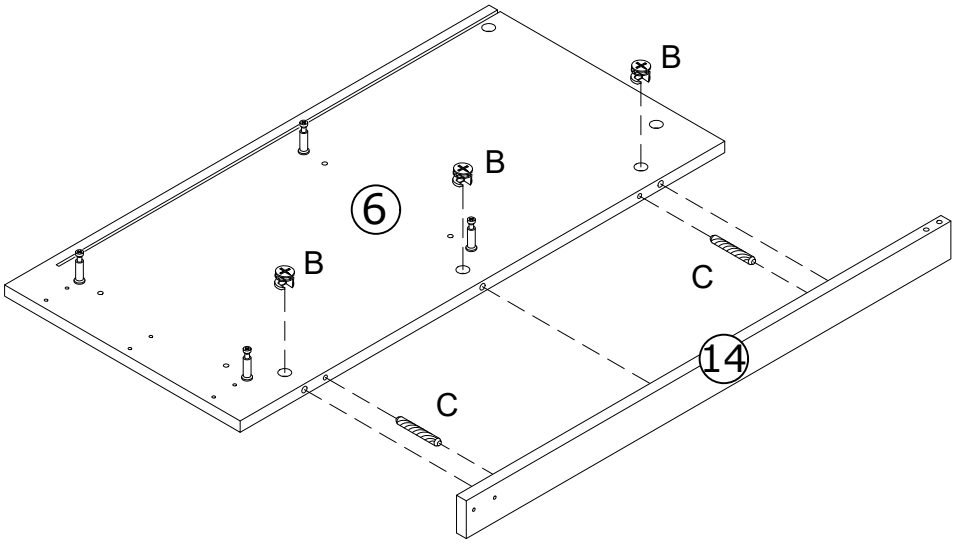



X2

B	C
	
M15*10mm Cam lock x 6	M6*30mm Dowel x 4

Assembly Instructions

Step 5

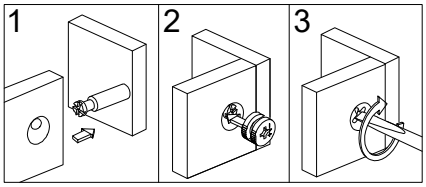


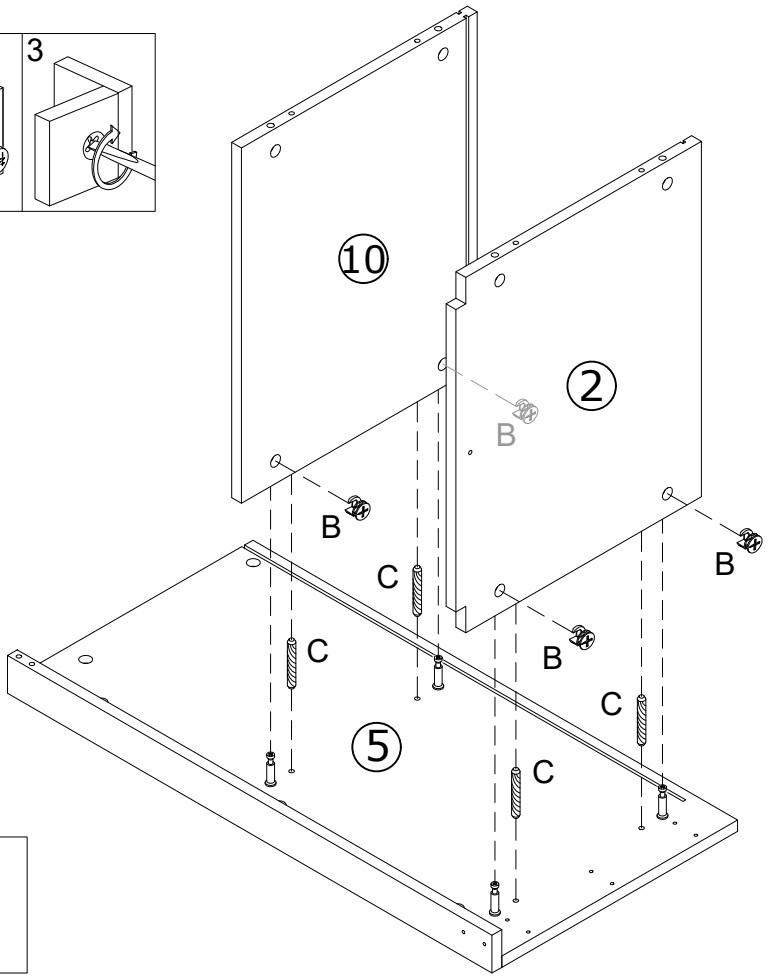

X2

B	C
	
M15*10mm Cam lock x 8	M6*30mm Dowel x 8

Step 6

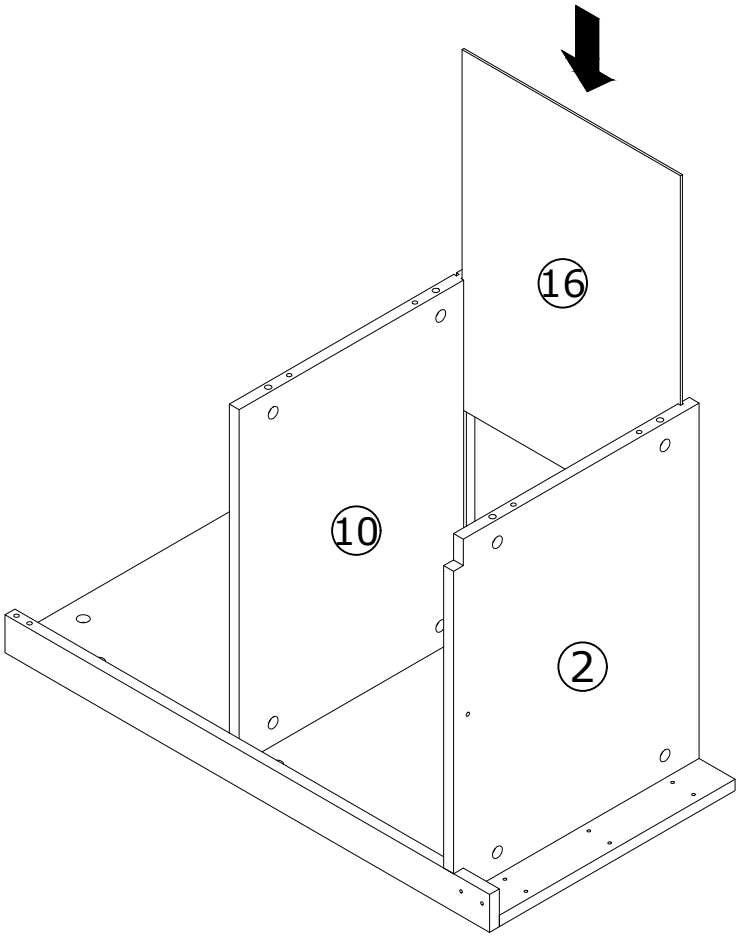


X2

8

Assembly Instructions

Step 7

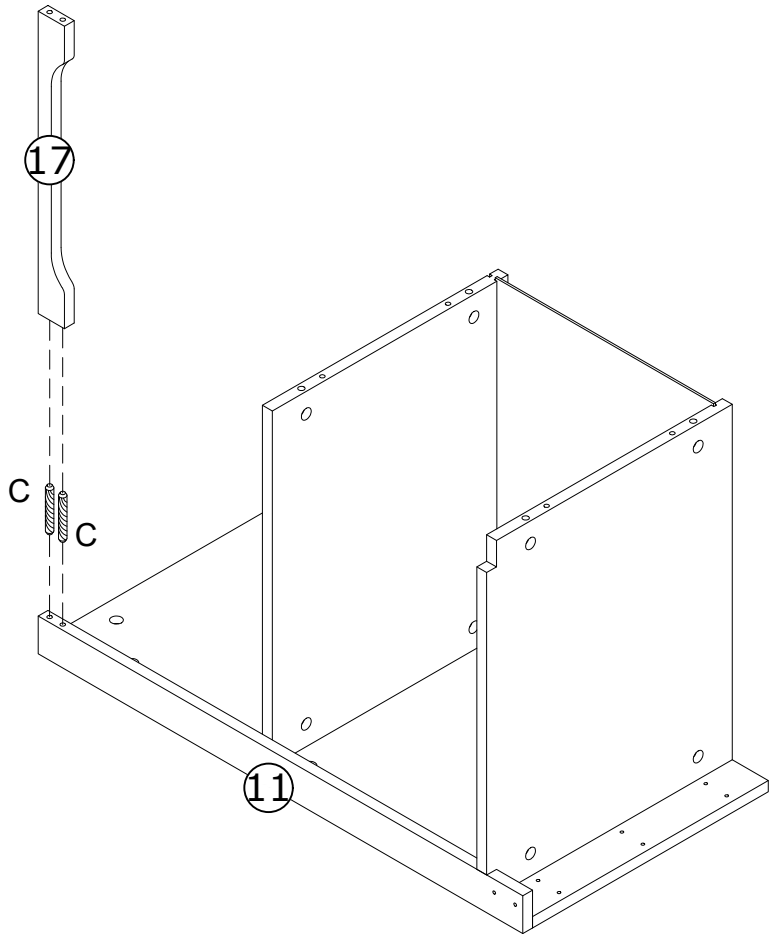

X2

9


C




M6*30mm Dowel x 4

Assembly Instructions

Step 8

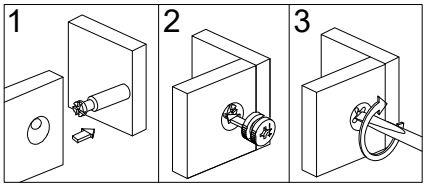

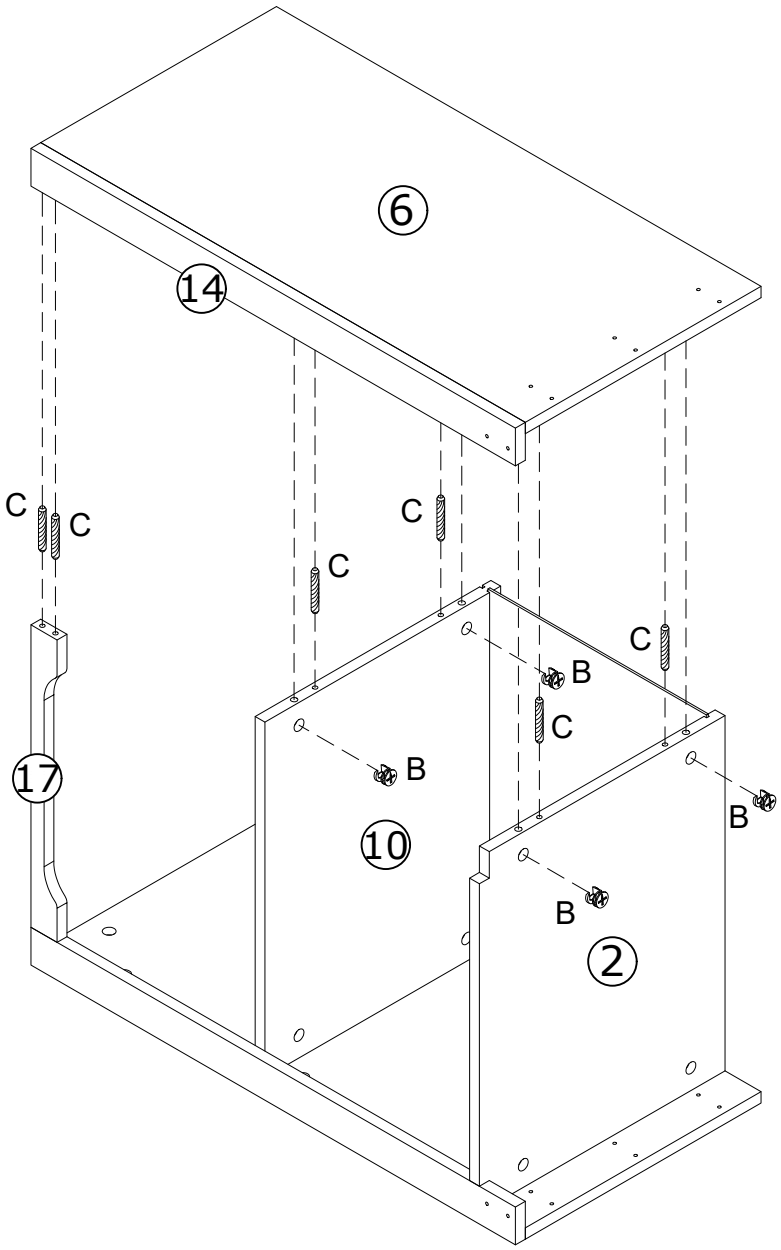

X2

10

B	C
	
M15*10mm Cam lock x 8	M6*30mm Dowel x 12


Assembly Instructions

Step 9



90°

Be careful! At least two people are required

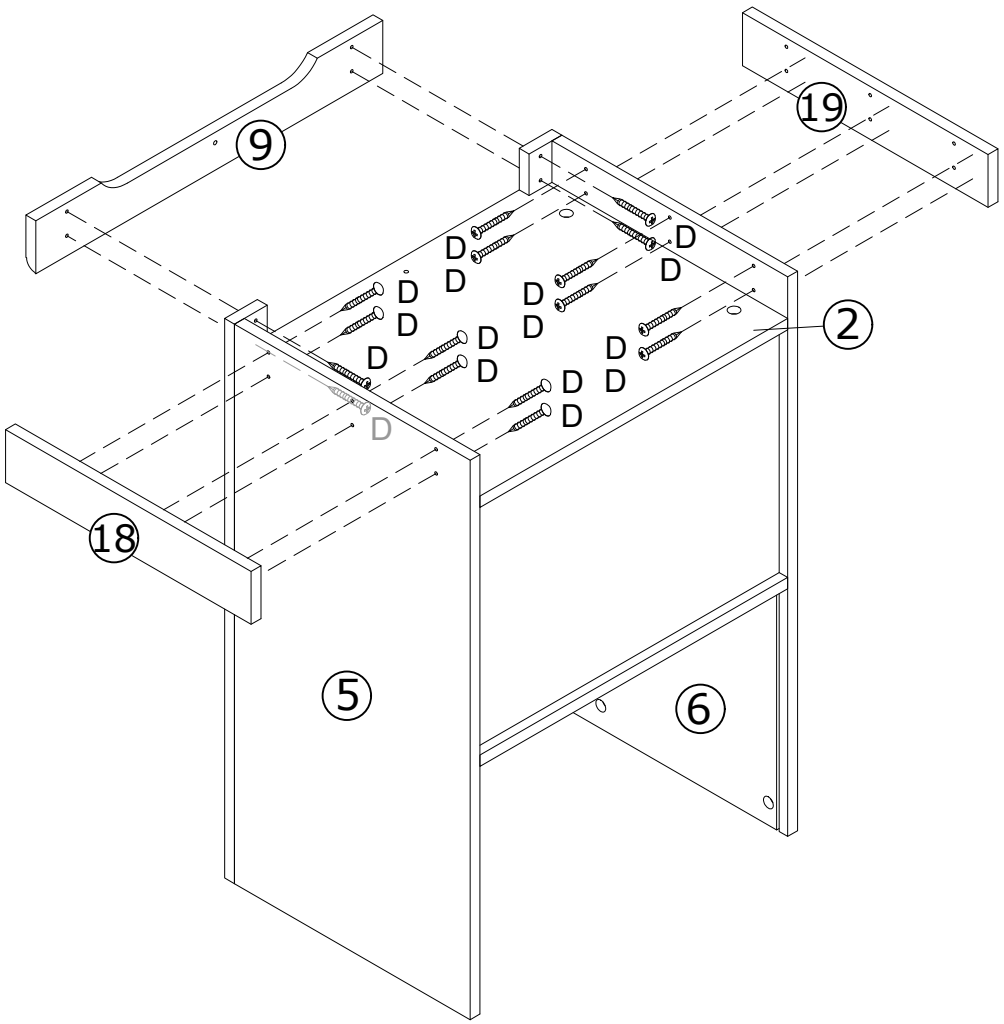

X2

11


D



M4*25mm Screw x 32

Assembly Instructions


Step 10

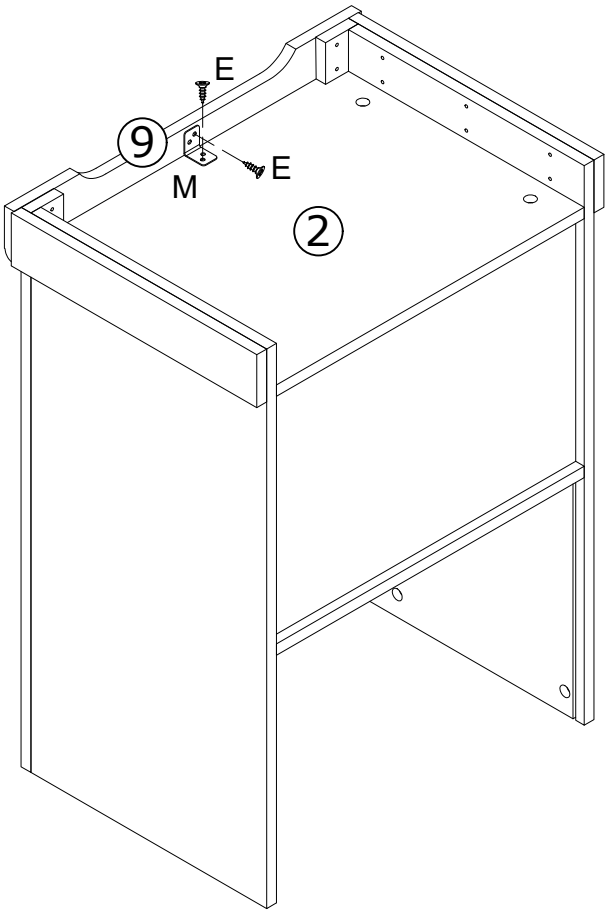

E	M
	
M3*12mm Screw x 4	Metal Plate x 2

X2

Step 11

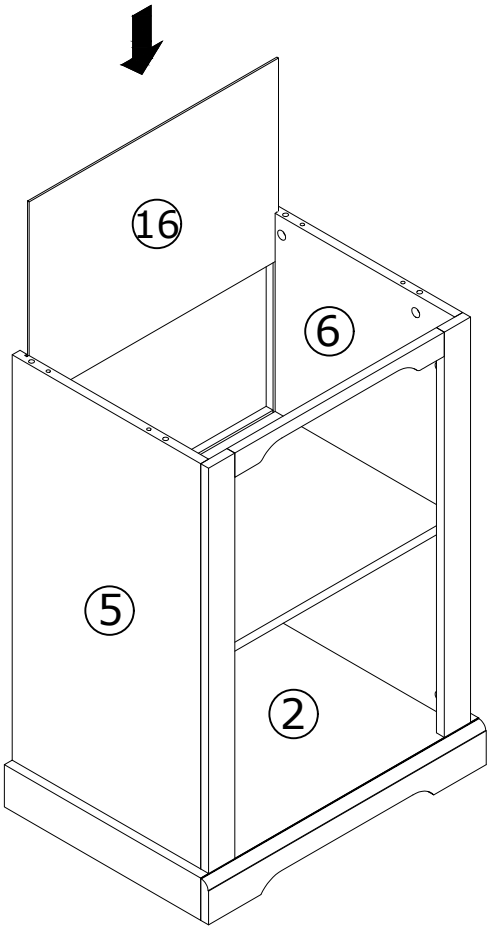




180°

Be careful! At least two people are required

X2

Assembly Instructions

Step 12

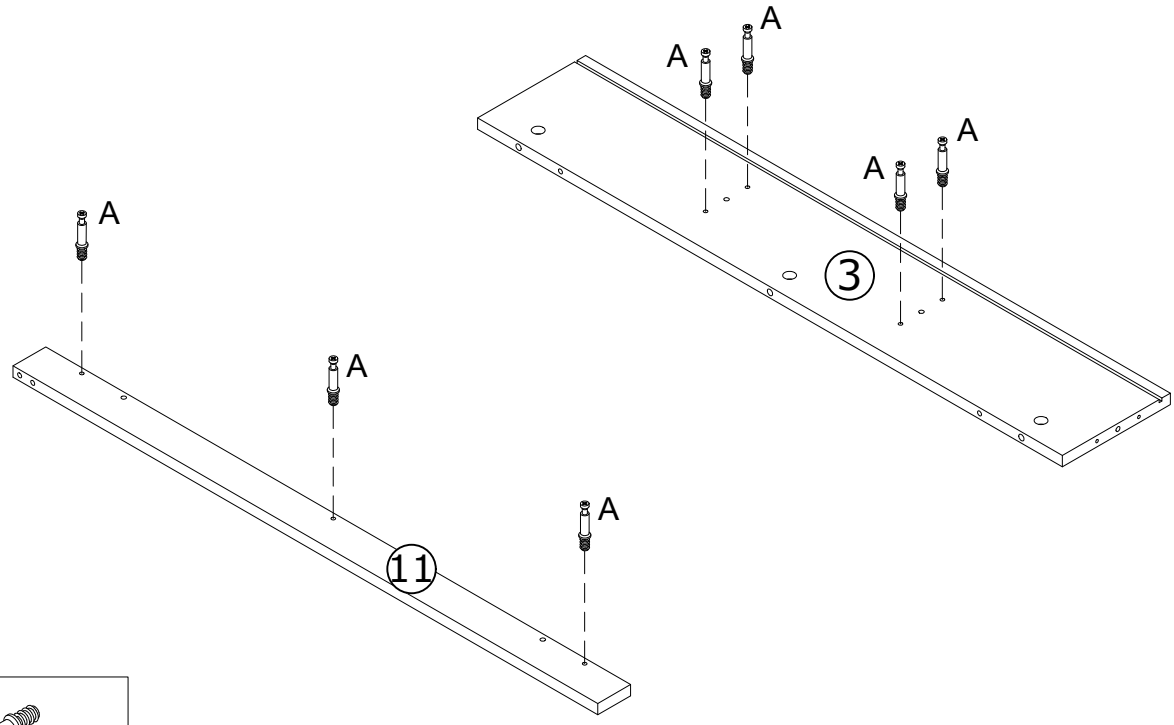


A



M6*35 Cam Bolt x 14

X2

Step 13

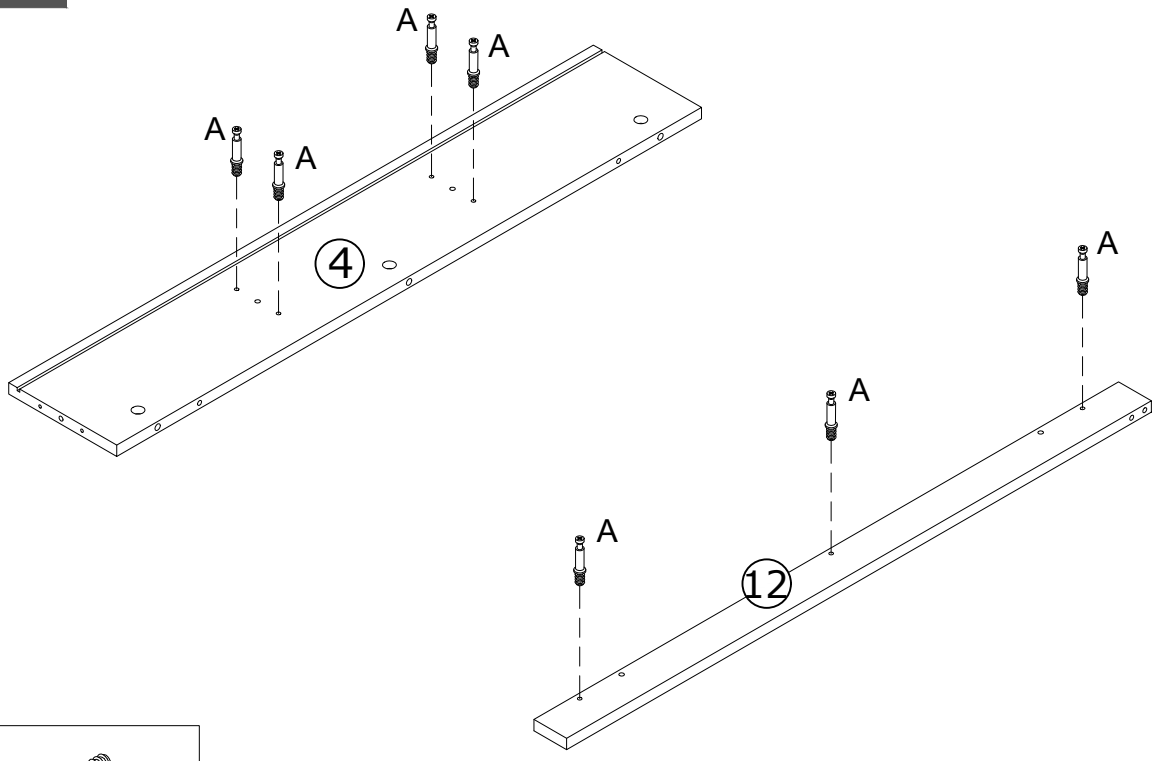

X2

13


A




M6*35 Cam Bolt x 14

Assembly Instructions

Step 14

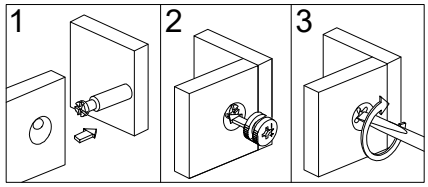


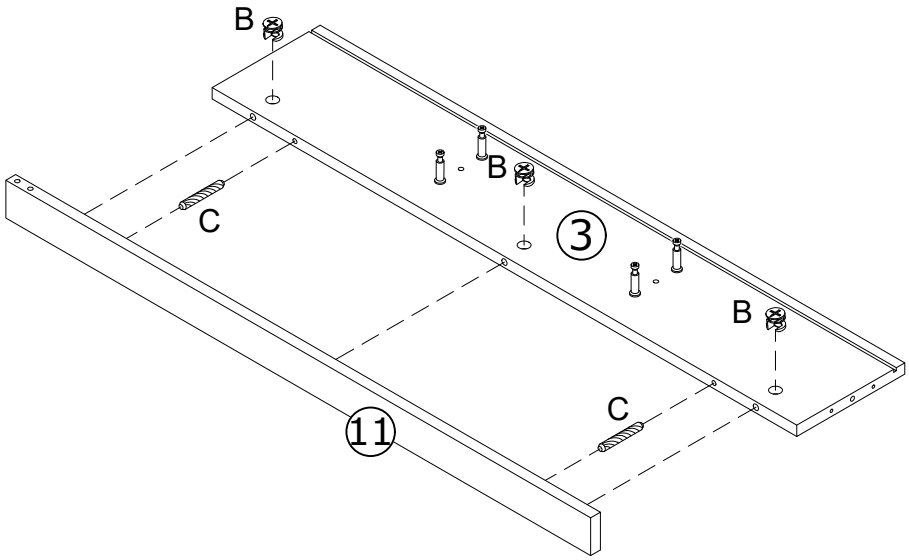


B	C
	
M15*10mm Cam lock x 6	M6*30mm Dowel x 4

X2

Step 15

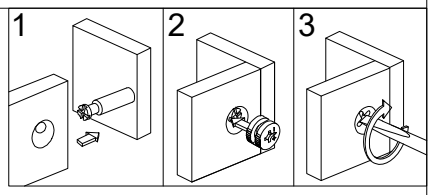

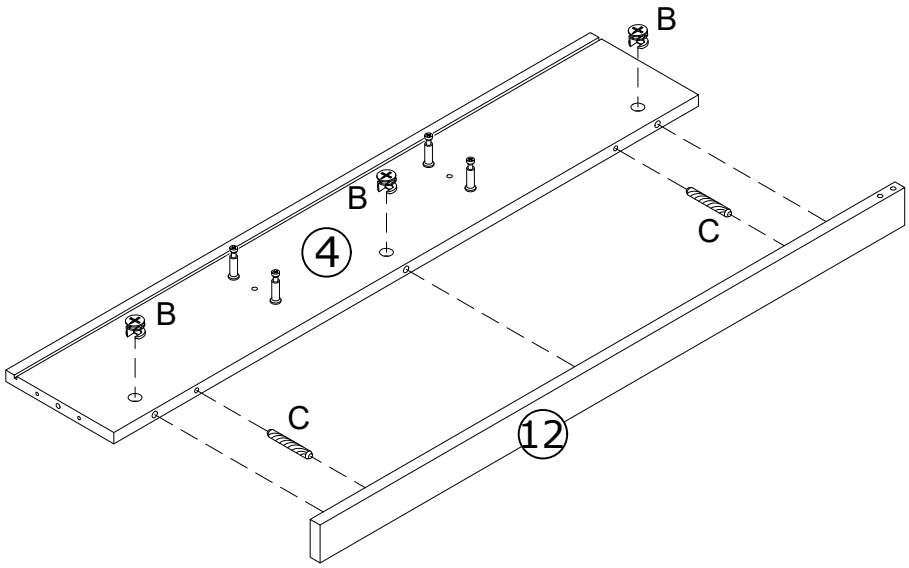



X2

B	C
	
M15*10mm Cam lock x 6	M6*30mm Dowel x 4

Assembly Instructions

Step 16

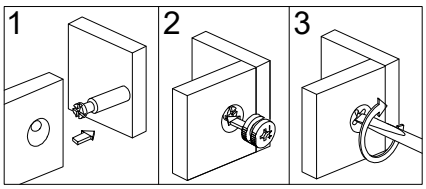


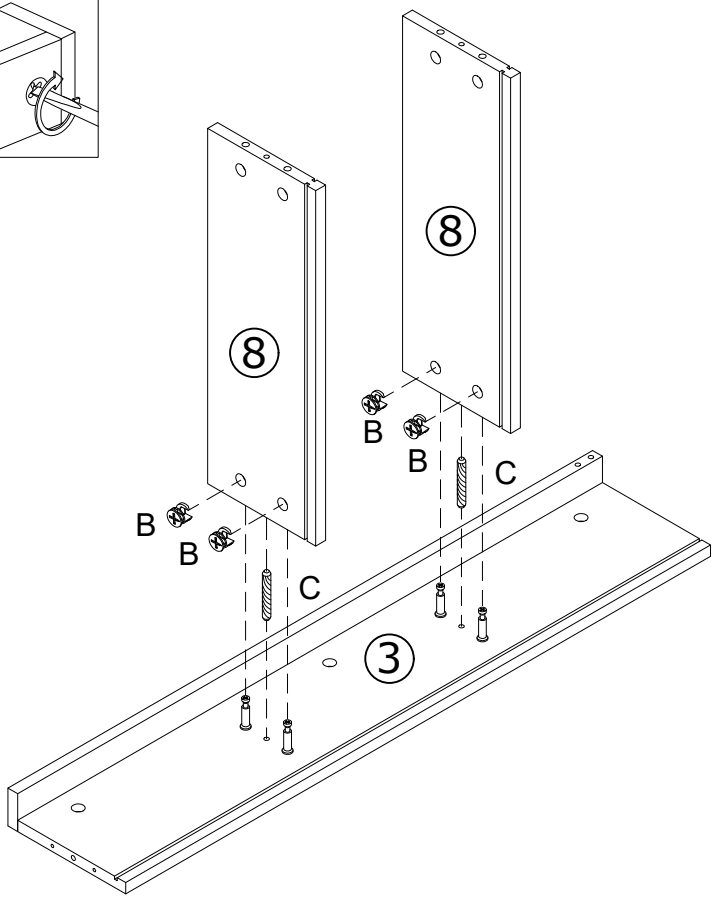

B	C
	
M15*10mm Cam lock x 8	M6*30mm Dowel x 4

X2

Step 17

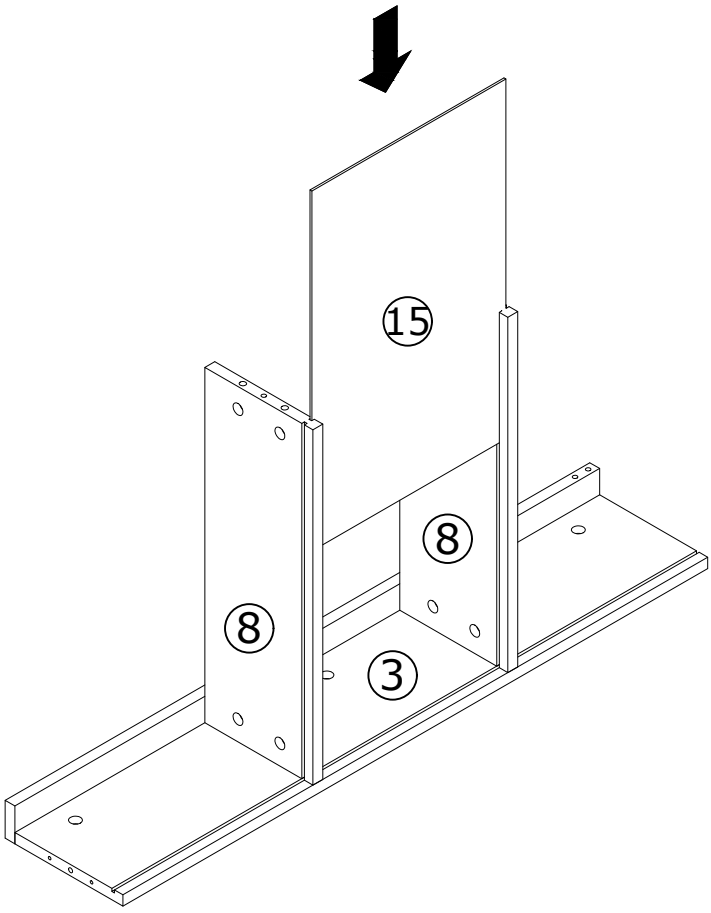


X2

15

Assembly Instructions

Step 18

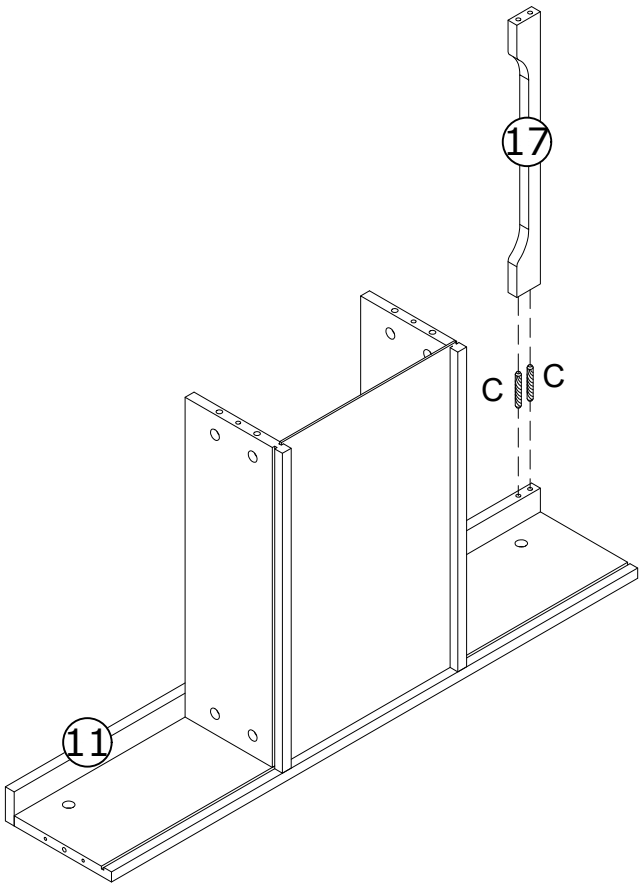


X2


C



M6*30mm Dowel x 4

Step 19

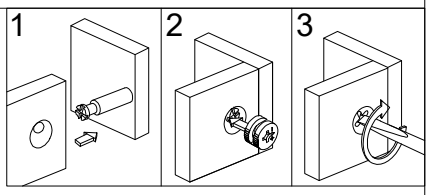

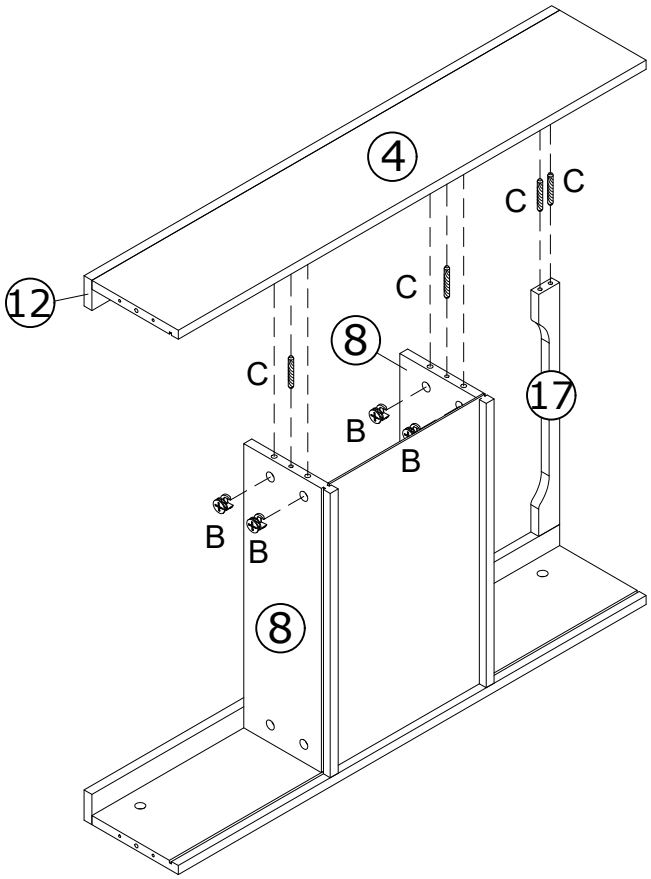

X2

16

B



M15*10mm Cam lock x 8

C



M6*30mm Dowel x 8


Assembly Instructions

Step 20



90°


Be careful! At least two people are required

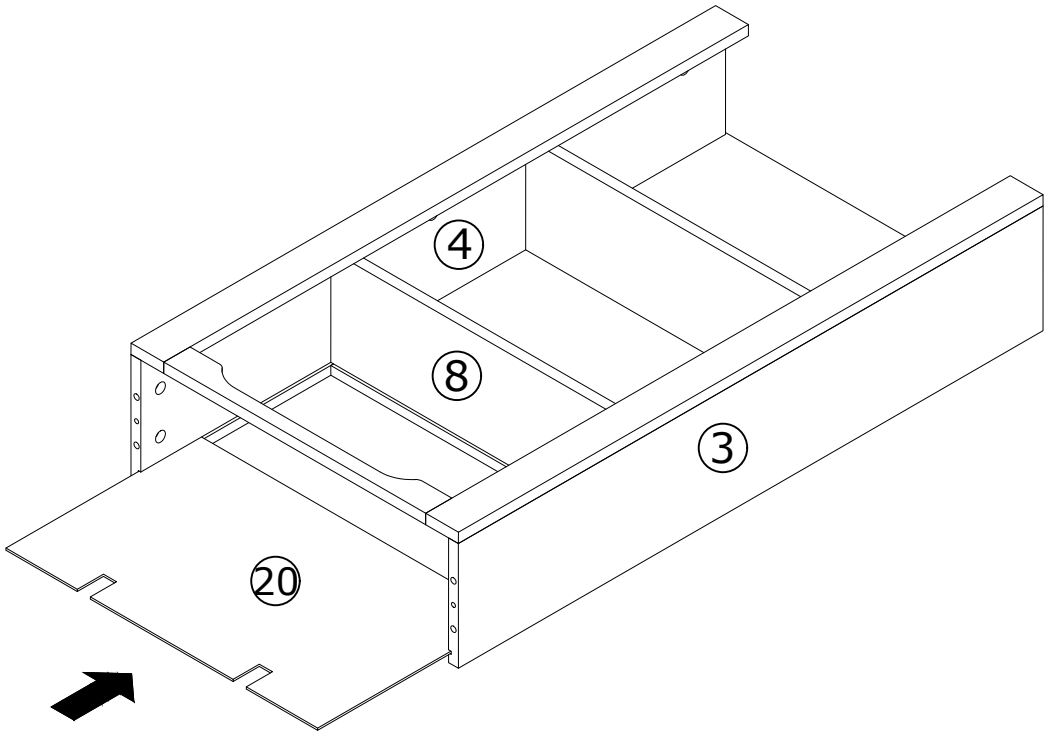


X2

Assembly Instructions

Step 21

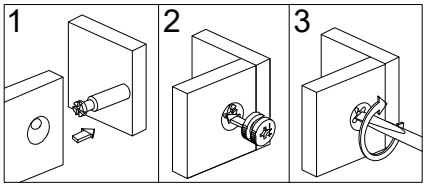

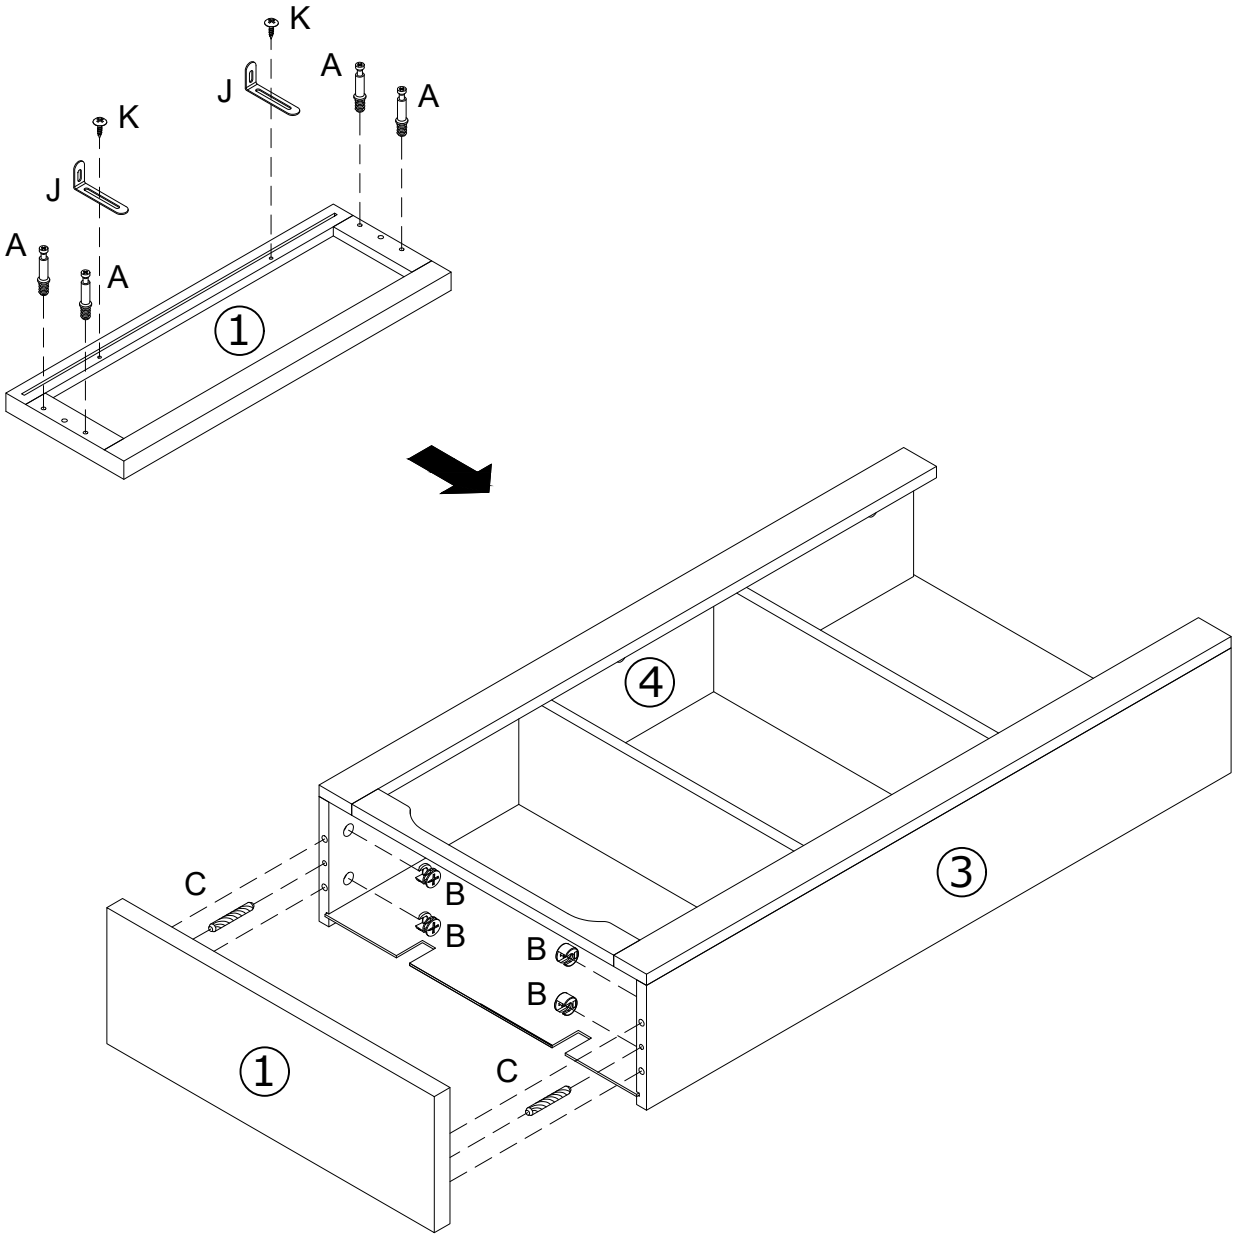


(A)  M6*35 Cam Bolt x 8			
(B)  M15*10mm Cam lock x 8	(C)  M6*30mm Dowel x 4	(J)  Anti-Inverted Iron x 4	(K)  M4*12mm Screw x 4

X2

18

Assembly Instructions


Step 22

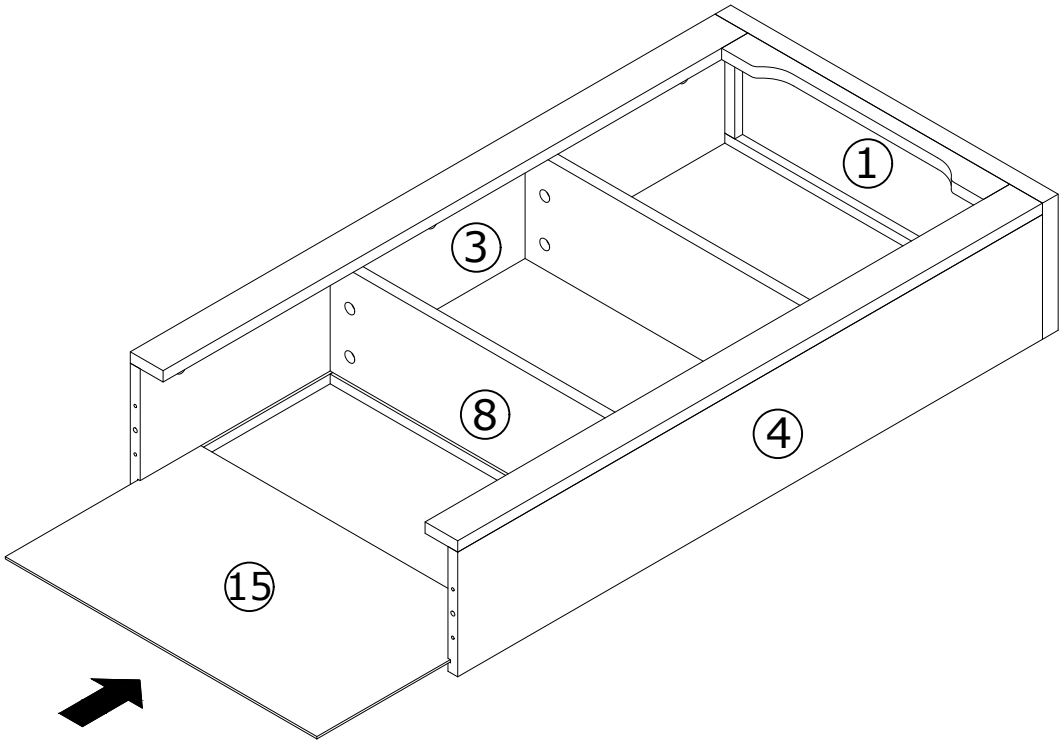


X2

Assembly Instructions

Step 23

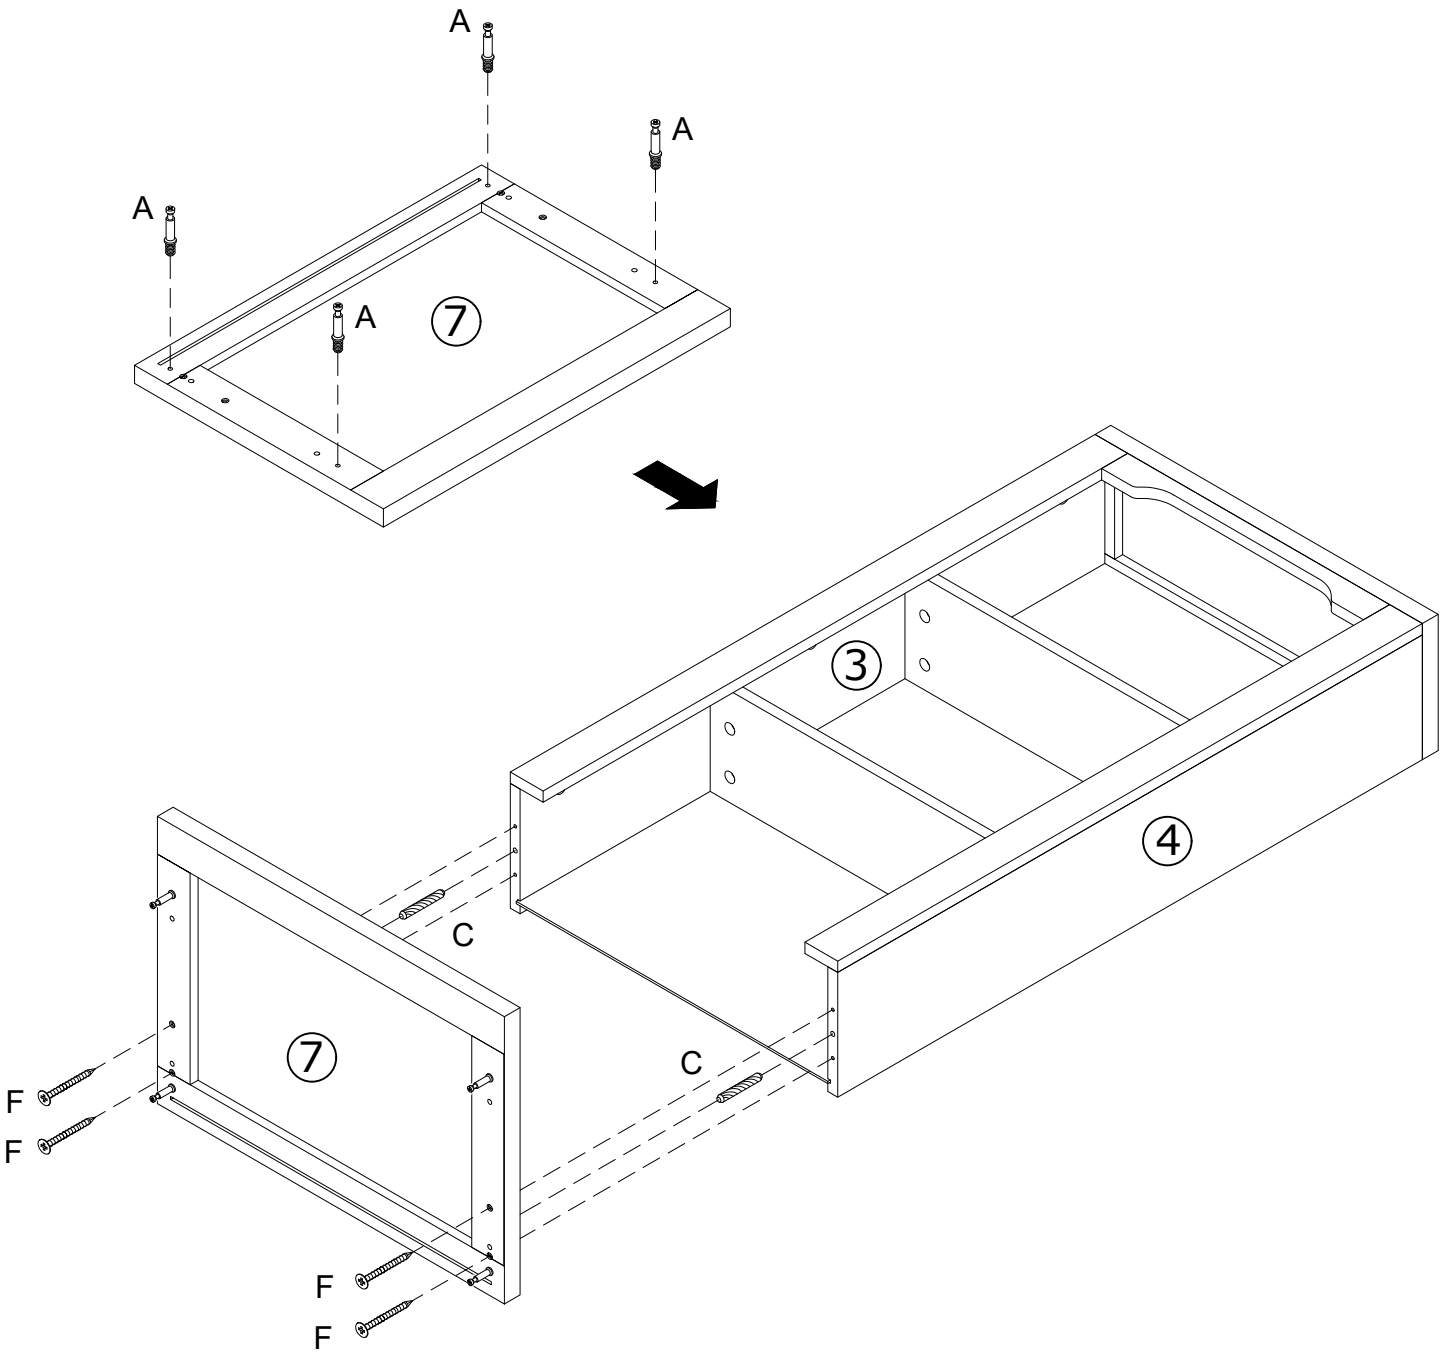



Ⓐ 	M6*35 Cam Bolt x 8
Ⓒ 	M6*30mm Dowel x 4
Ⓕ 	M4*40mm Screw x 8

X2

Assembly Instructions

Step 24

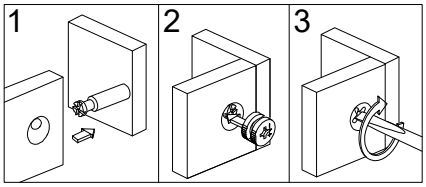

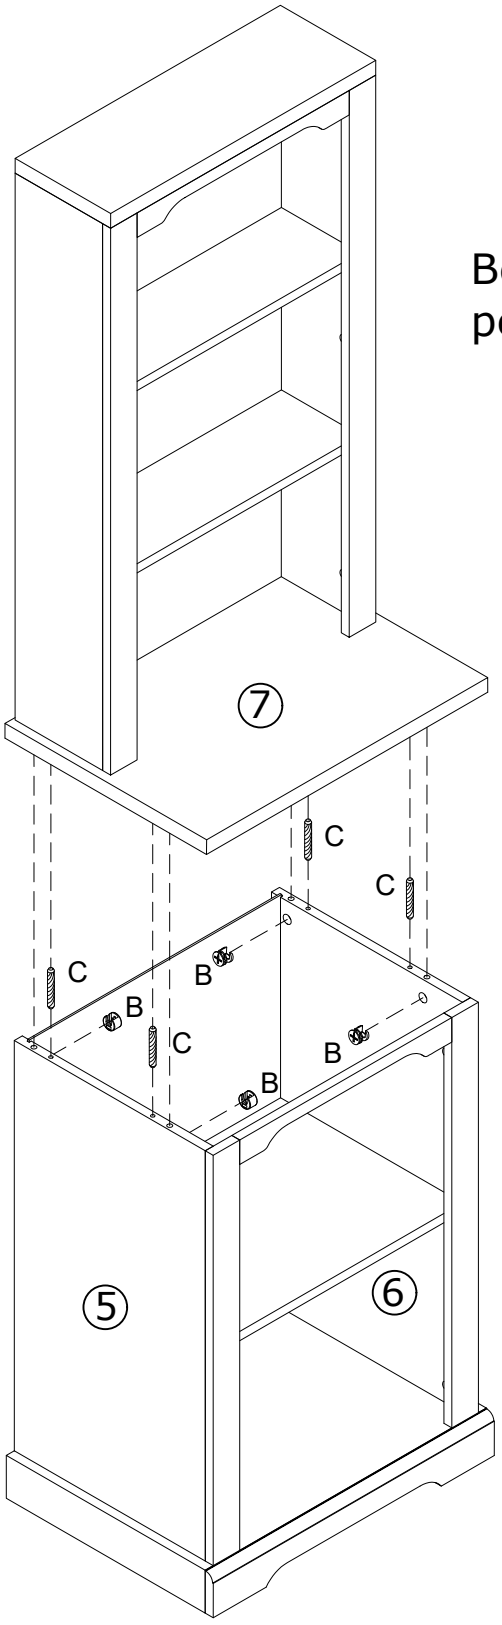

Be careful! At least two people are required

Ⓑ



M15*10mm Cam lock x 8

Ⓒ




M6*30mm Dowel x 8

X2

Assembly Instructions

Step 25

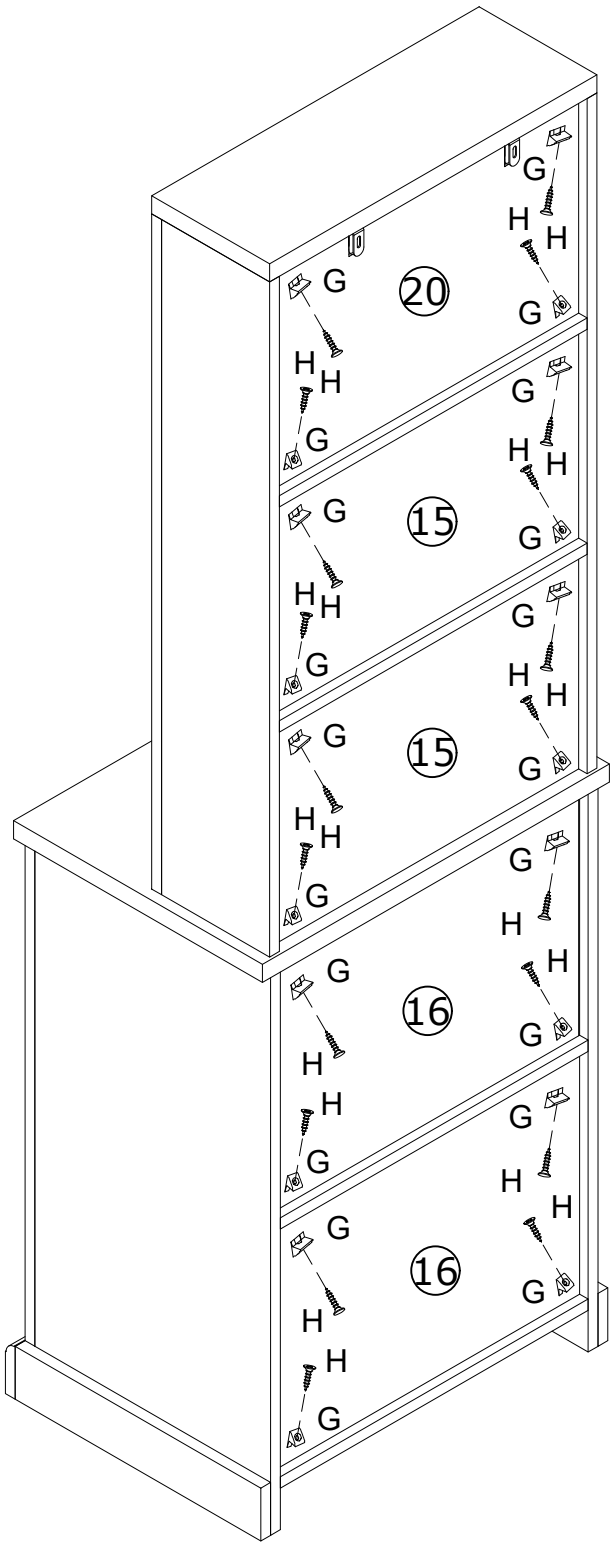



X2

G	H
Plastic Connector x 40	M3*16mm Screw x 40


Assembly Instructions

Step 26

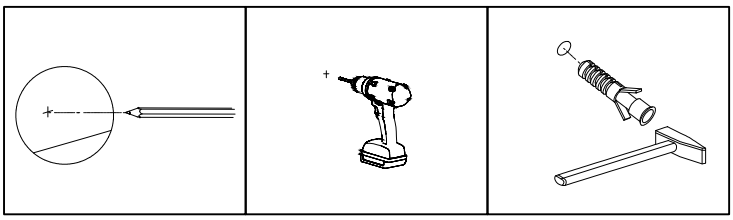

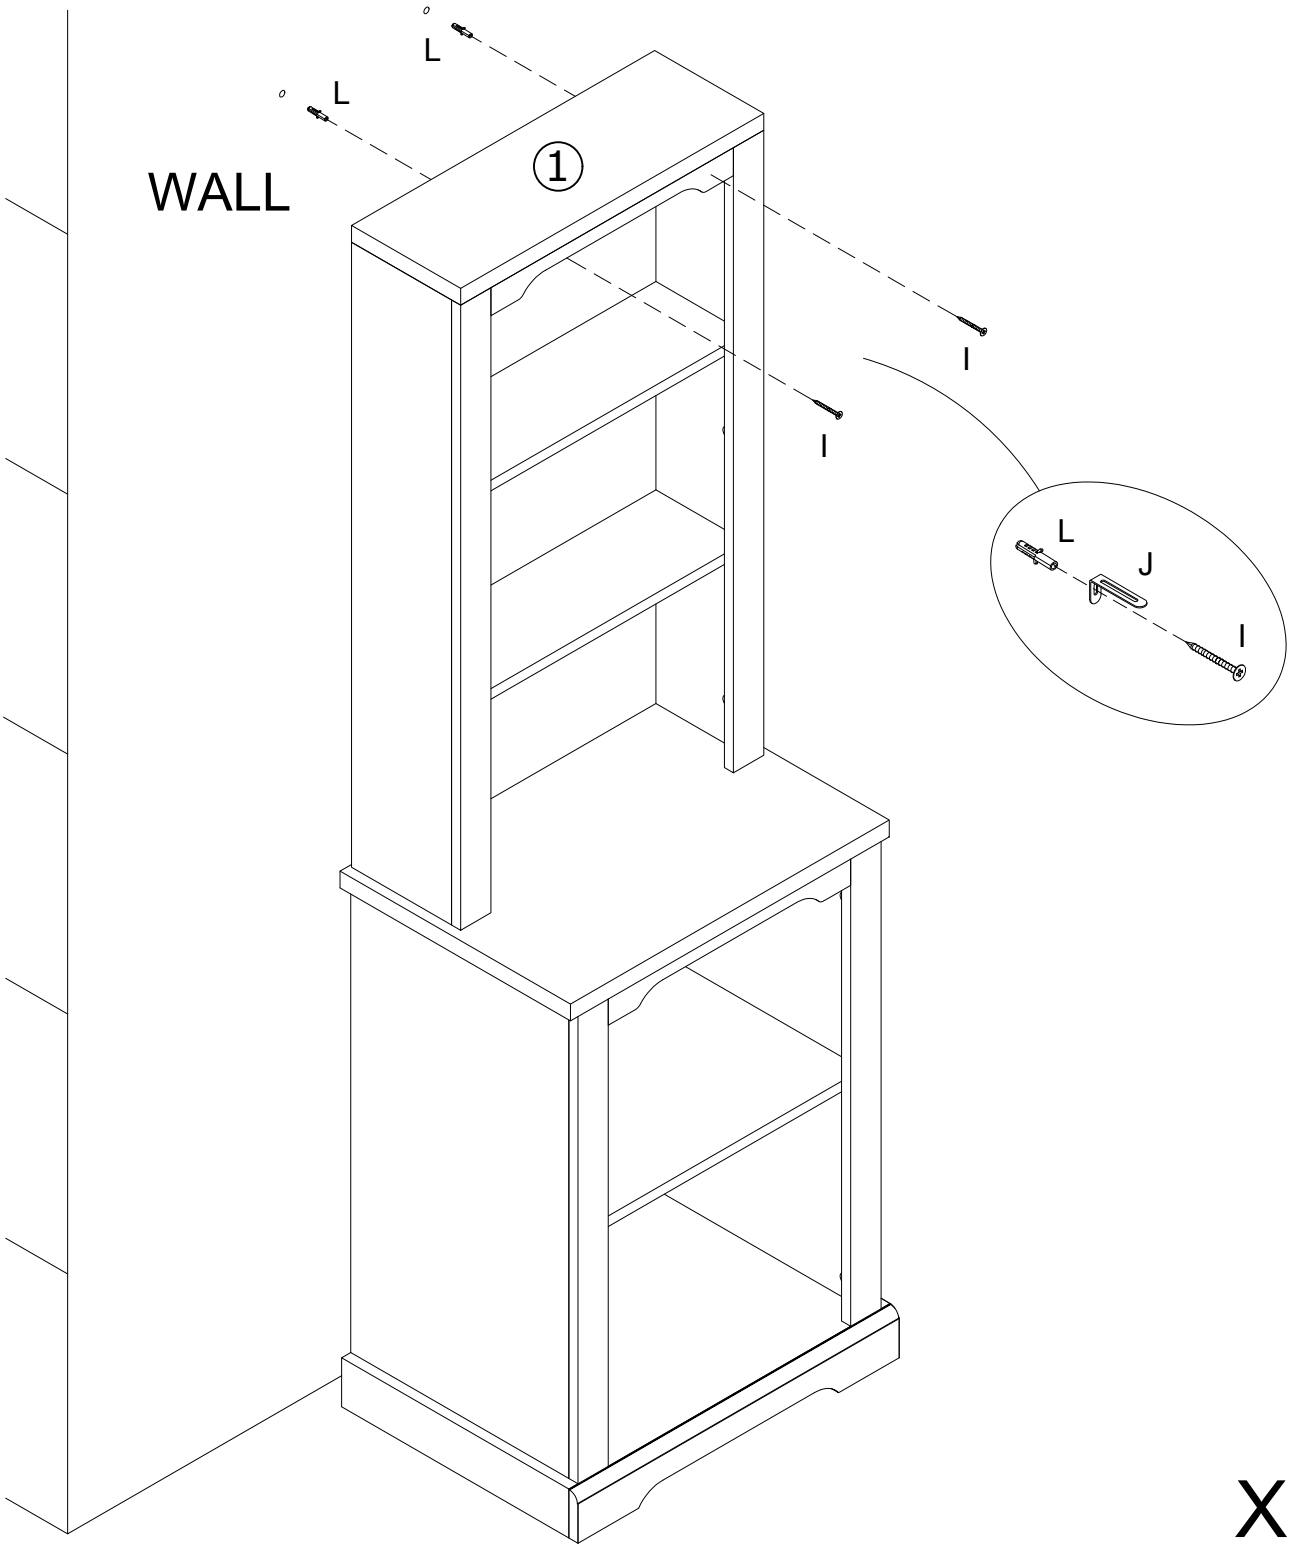

X2

ⓘ  M4*35mm Screw x 4	Ⓛ  WALL ANCHOR x 4

Assembly Instructions

Finish

