

ASSEMBLY INSTRUCTIONS

Wheelbarrow

TOOLS NEEDED

- #2 Square Drive Bit with 1/4" impact driver or screwdriver (Not Included)

PARTS LIST

- 1 - Wheelbarrow Box
- 1 - Wheel
- 1 - 7 1/2" Bolt
- 1 - 3/8" Nut



figure 1



figure 2



Step 1

Turn Wheelbarrow box upside down and tighten 4 screws (2 in each side of side board). (See figure 1). Each side should look like right side of figure 2.


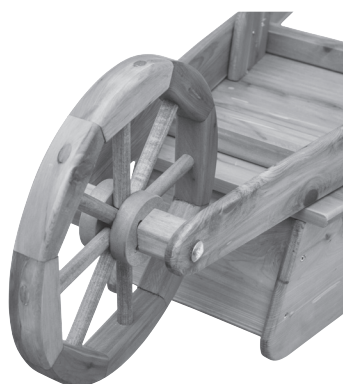


figure 3

Step 2

Slide wheel in front end (may fit tightly) and slide 7 1/2" bolt all the way through and fasten nut. Just turn as tight as possible with your hand. (9/16 socket wrench optional but not required). (See figure 3).

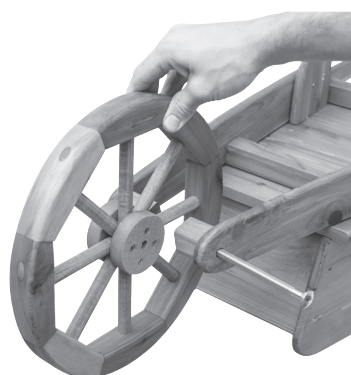

Step 3

Turn complete wheelbarrow right side up, fill with flowers and enjoy!