


INSTRUCTIONS







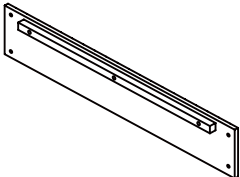
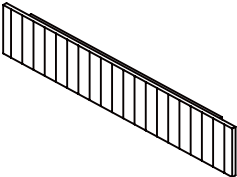
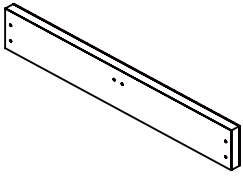

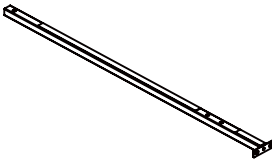

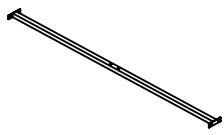

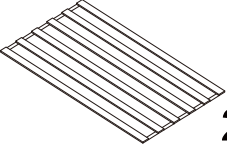
BED- TWIN/FULL/QUEEN

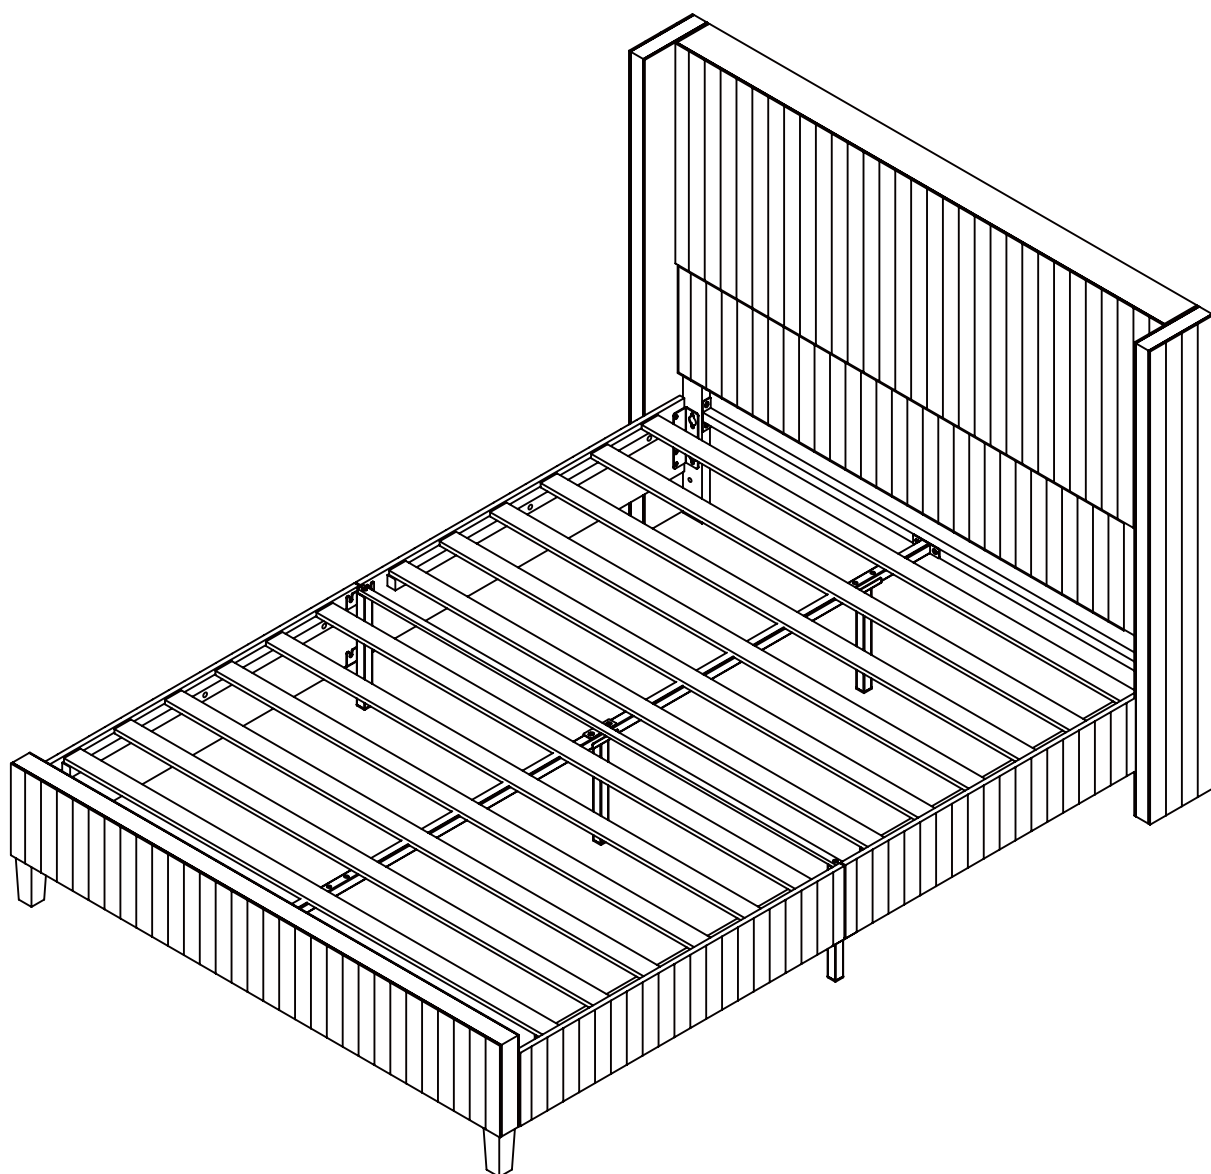





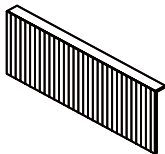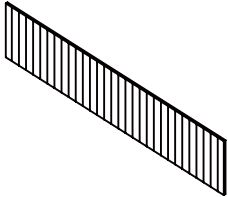




GENERAL ASSEMBLY GUIDELINES


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of the product.
- III. Two people are recommended for ease in the assembly of this product.







PARTS LIST

| | | |
|--|--|--|
| ①  1pc | ②  1pc | ③  1pc |
| ④  1pc | ⑤  1pc | ⑥  1pc |
| ⑦  2pcs | ⑧  2pcs | ⑨  1pc |
| ⑩  2pcs | ⑪  2pcs | ⑫  1pc |
| ⑬  1pc | ⑭  3PCS | ⑮  2pcs |

HARDWARE

| | | | | |
|---|---|--|--|--|
| M8*16  (A) 22+2PCS | M8*25  (B) 18+1PCS | M8*35  (C) 8PCS | M8*45  (D) 4PCS | M8*70  (E) 6PCS |
| (G)  1PCS | (H)  4PCS | (I)  3PCS | (J)  2PCS | |

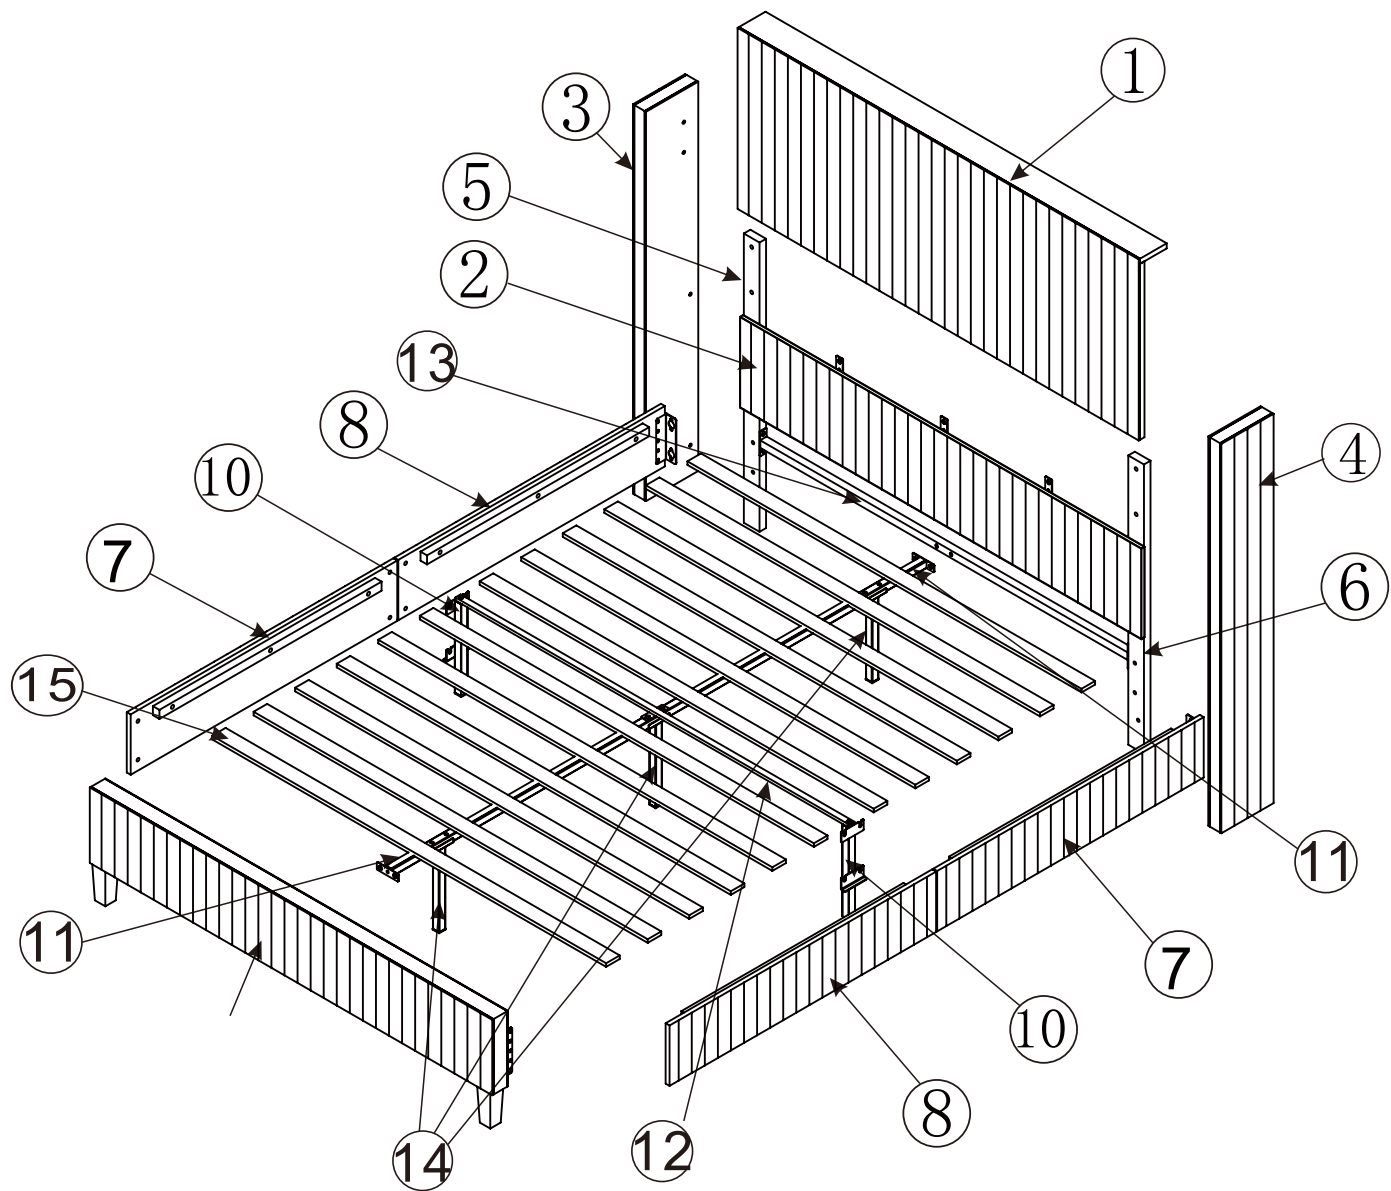

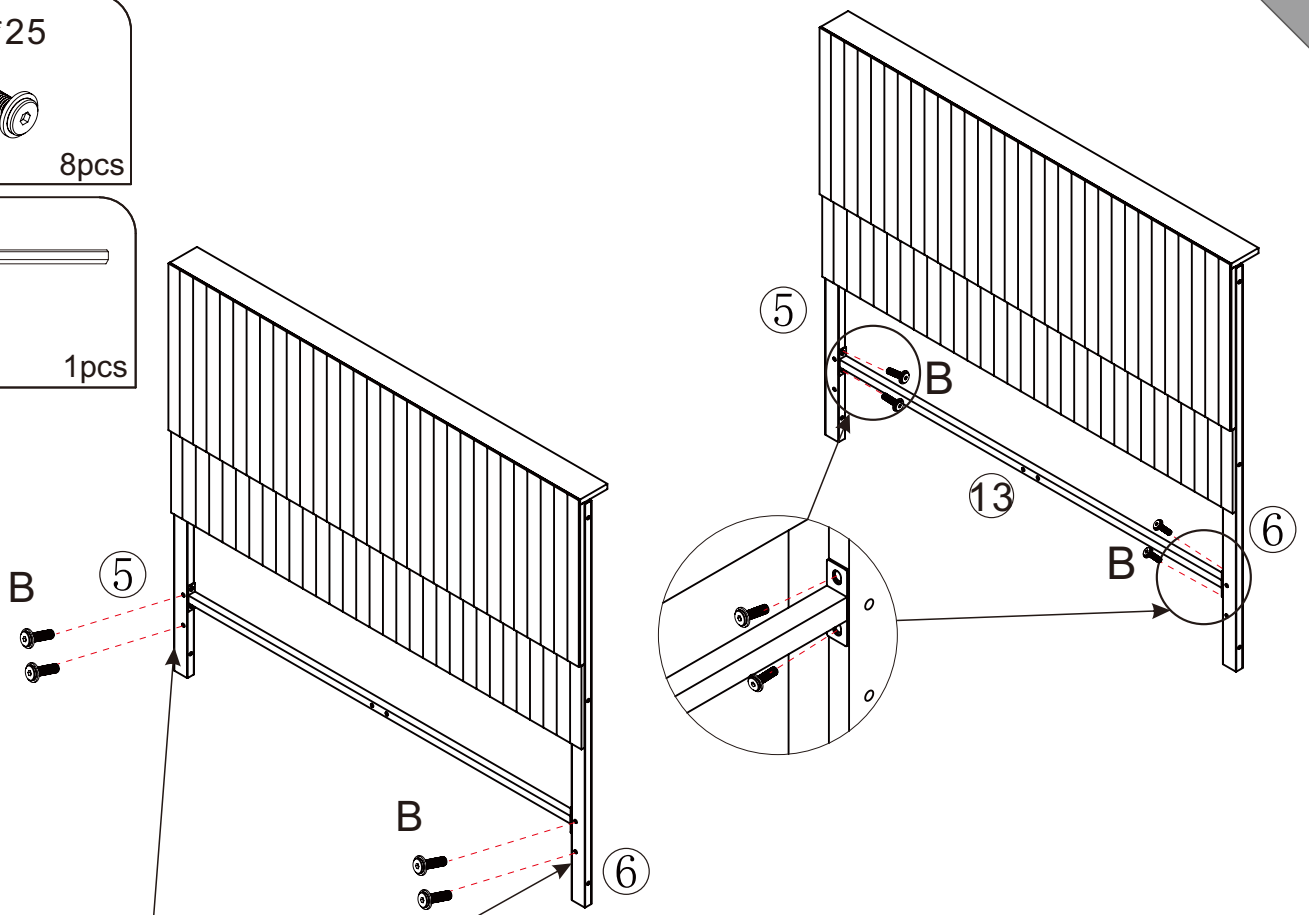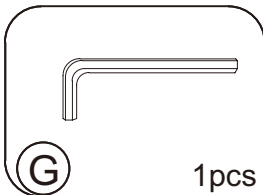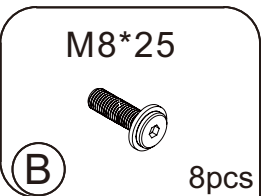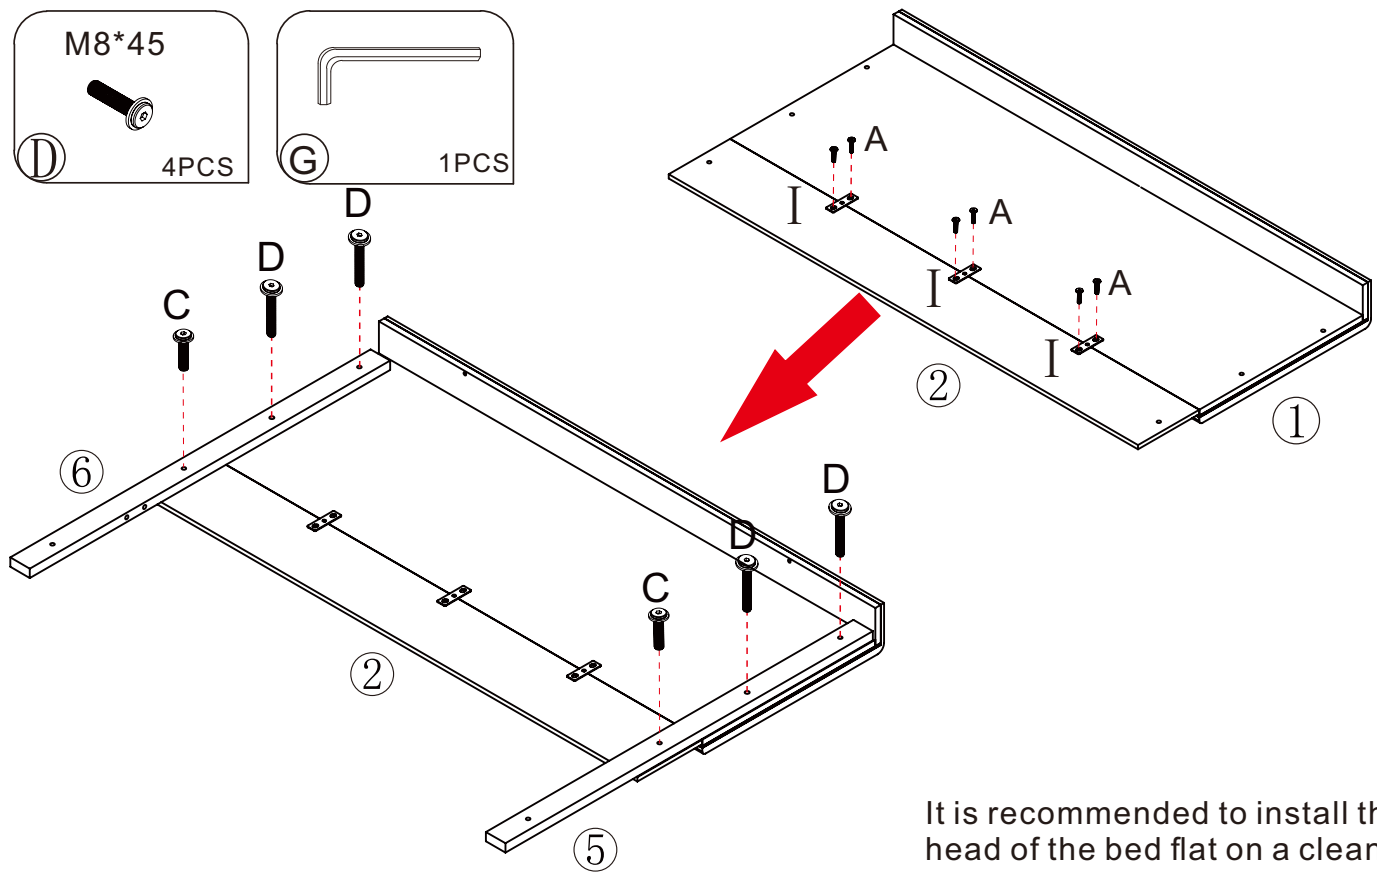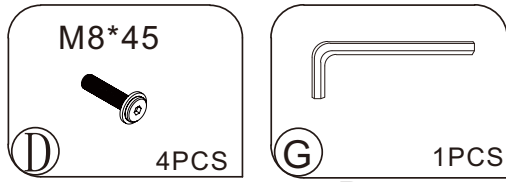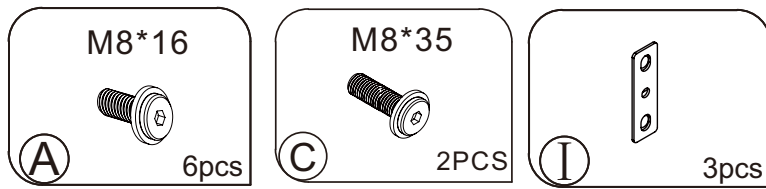

Half of the screw lock is enough!

M8*16

A


16pcs

H

4pcs

G

1pcs

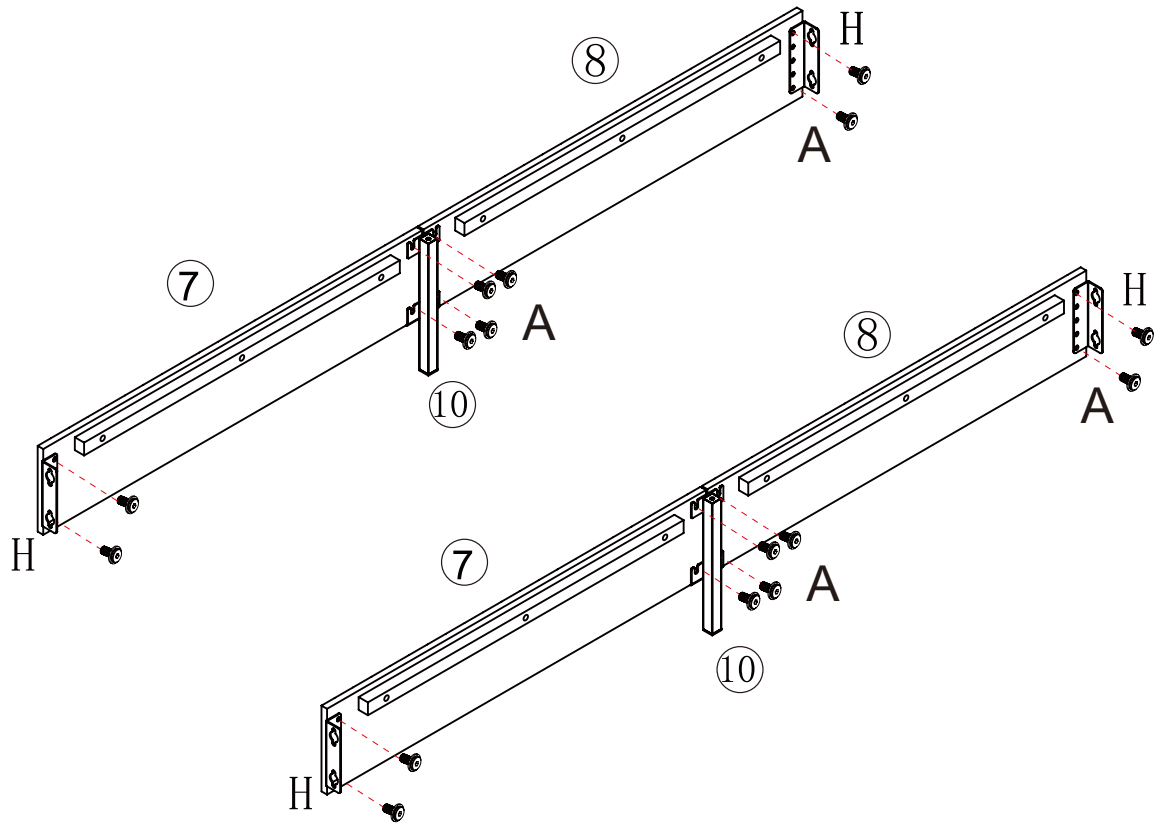

M8*25

B


4pcs


G

1pcs

J

2PCS

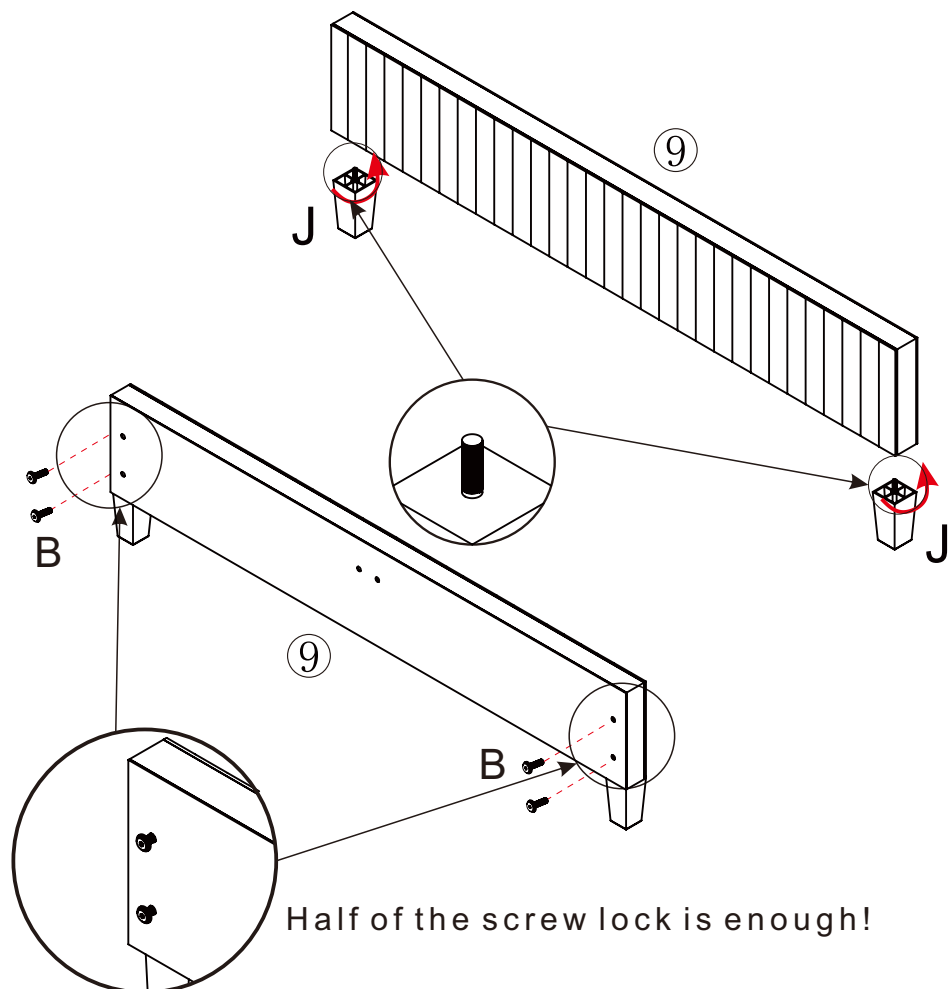

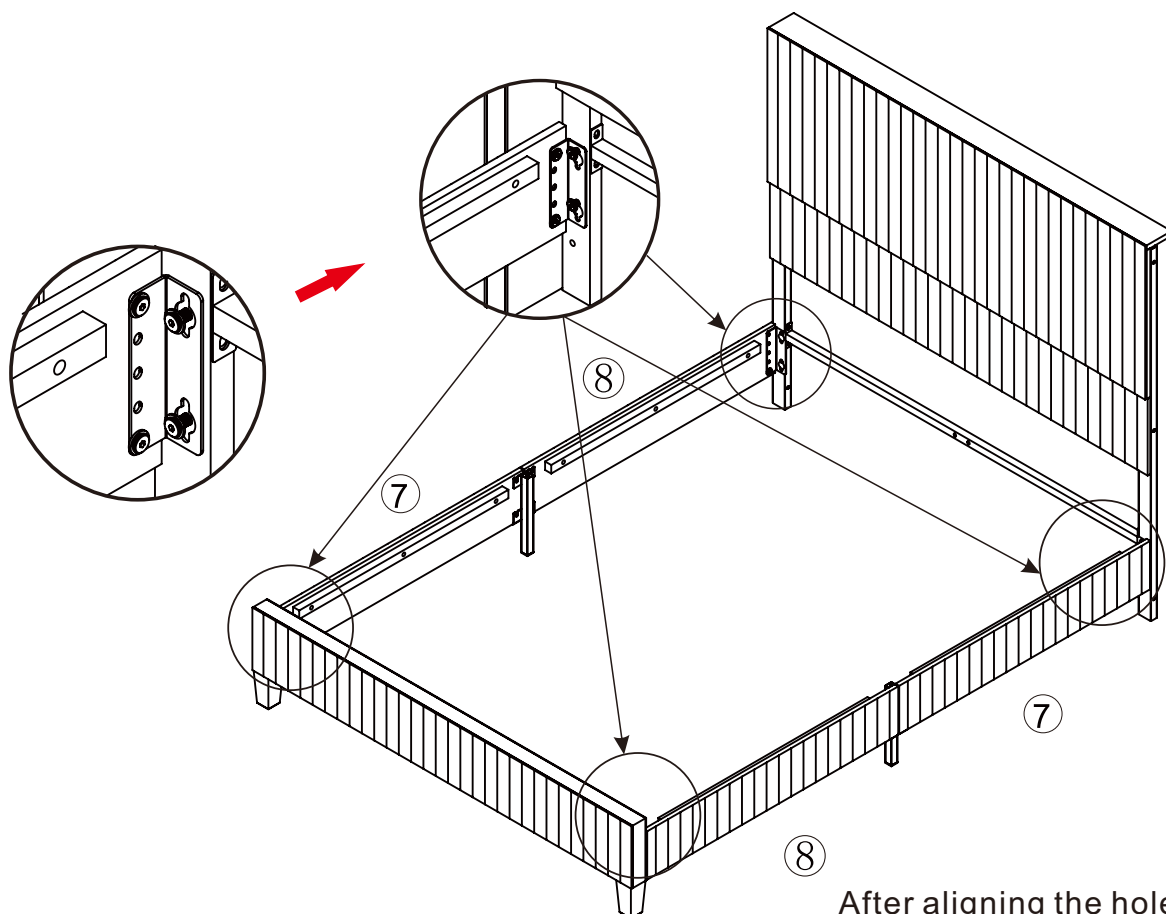

M8*35

C




4pcs

G



1PCS

X2

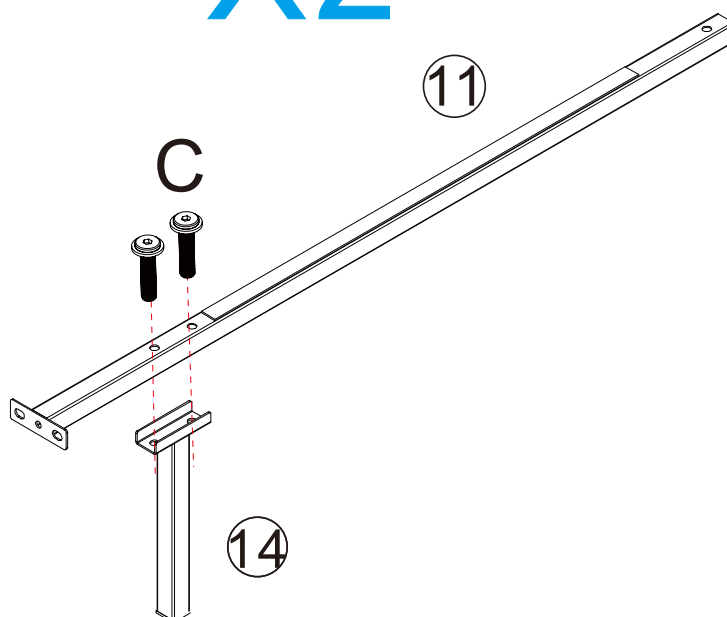

M8*25




(B) 4PCS




(G) 1PCS

Note: Part 14 support only.
Don't tighten any bolts.

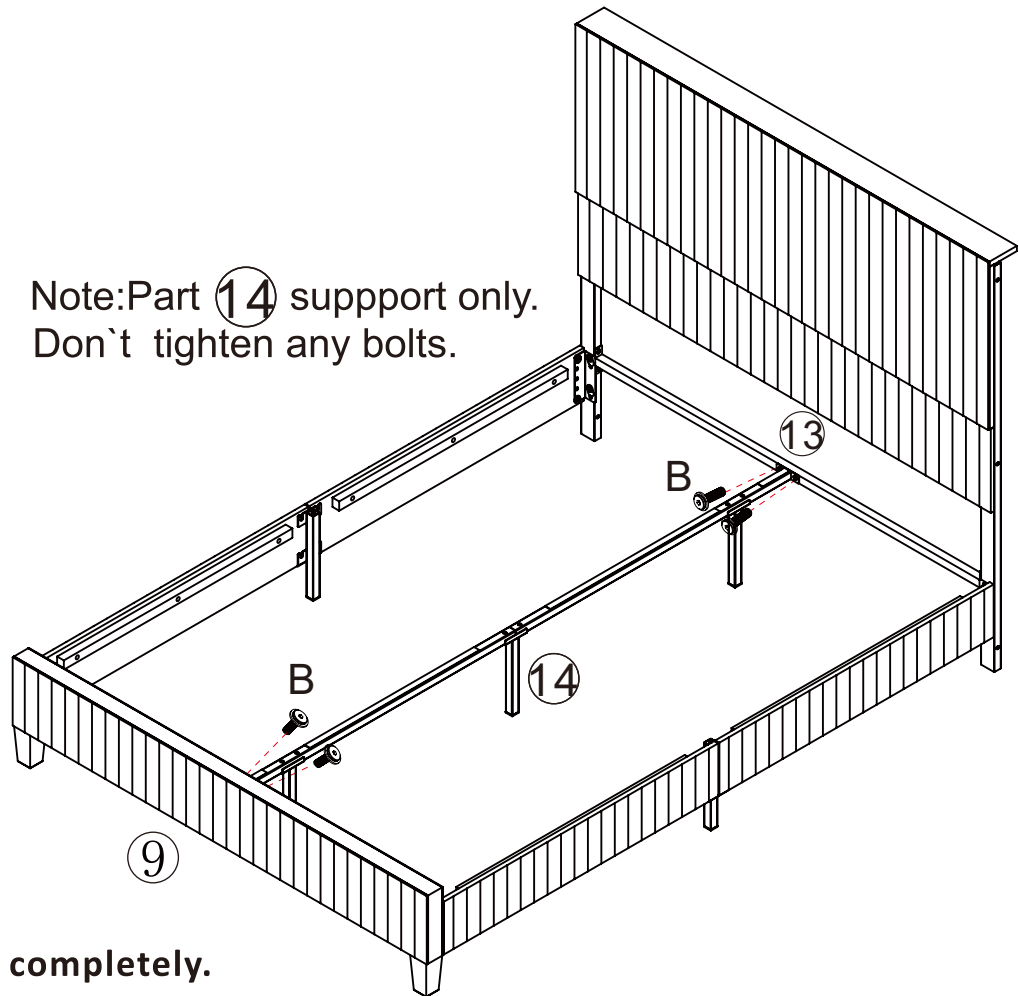

※ Tighten all bolts completely.

M8*35



(C) 2PCS


M8*25



(B) 2PCS



(G) 1PC

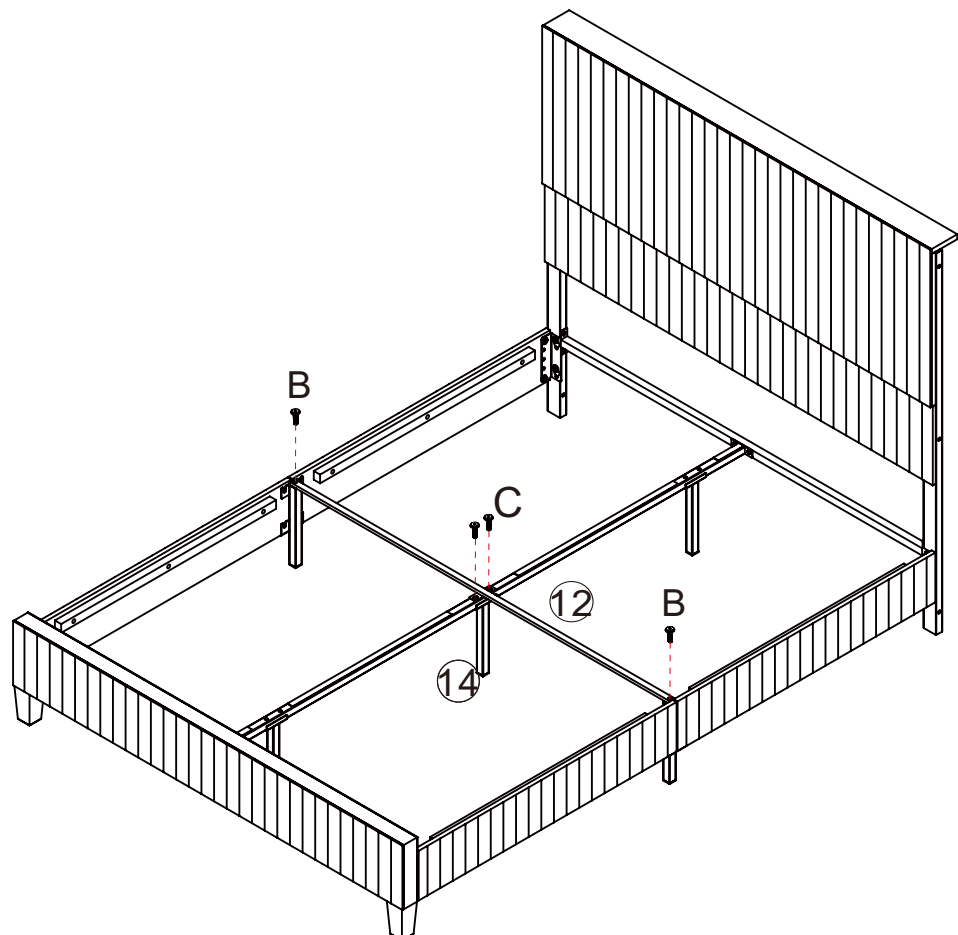


M8*70



6PCS



E

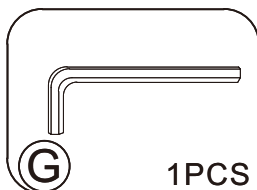

1PCS

G

back

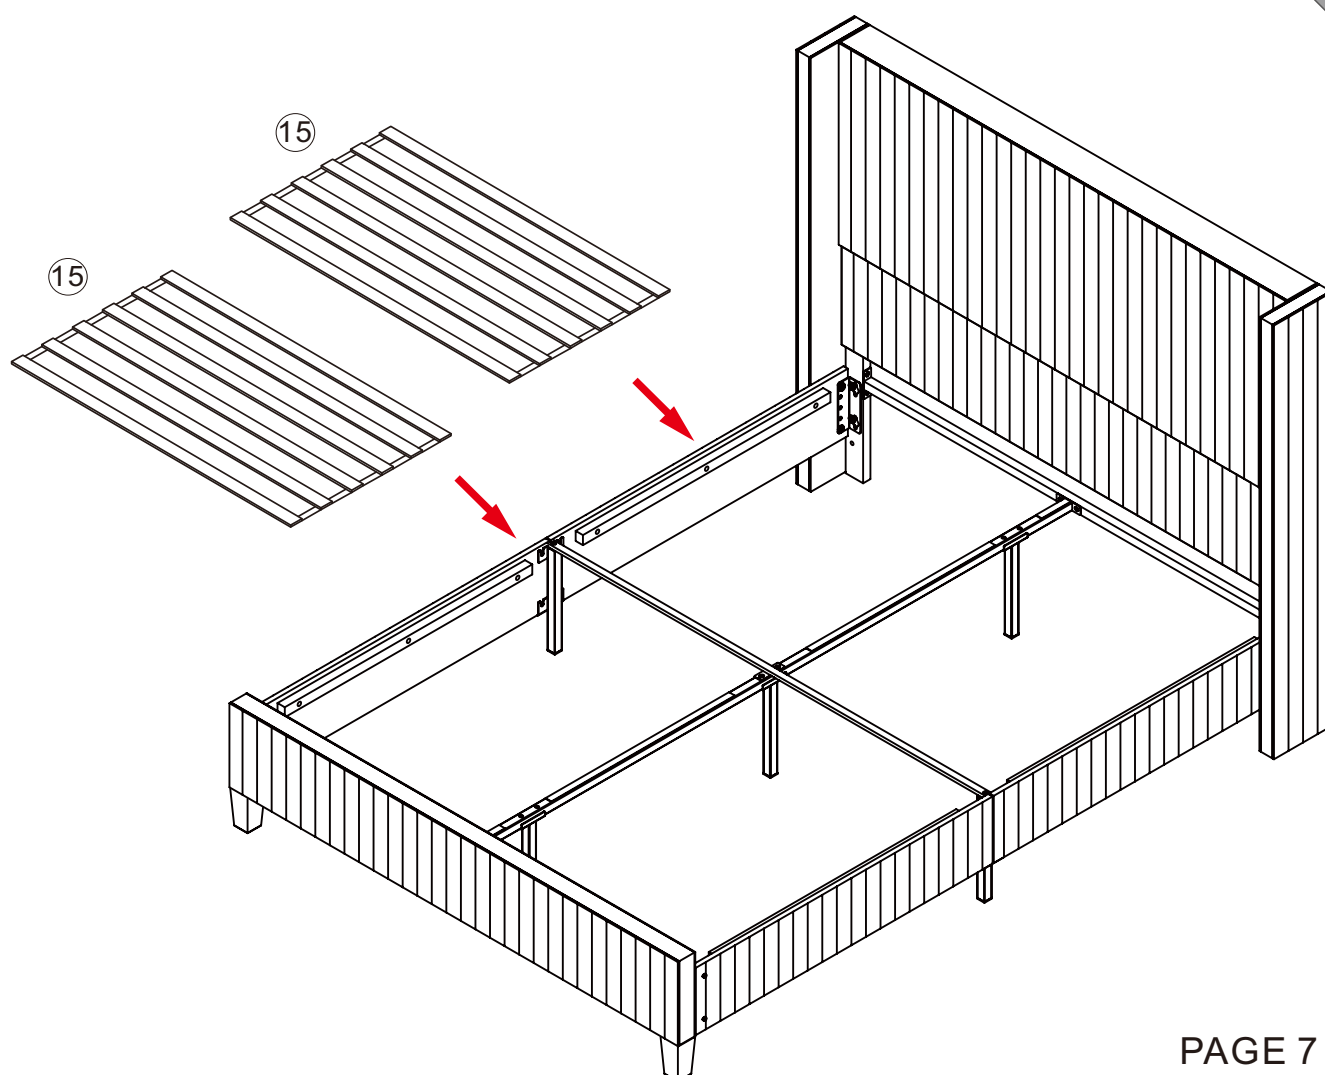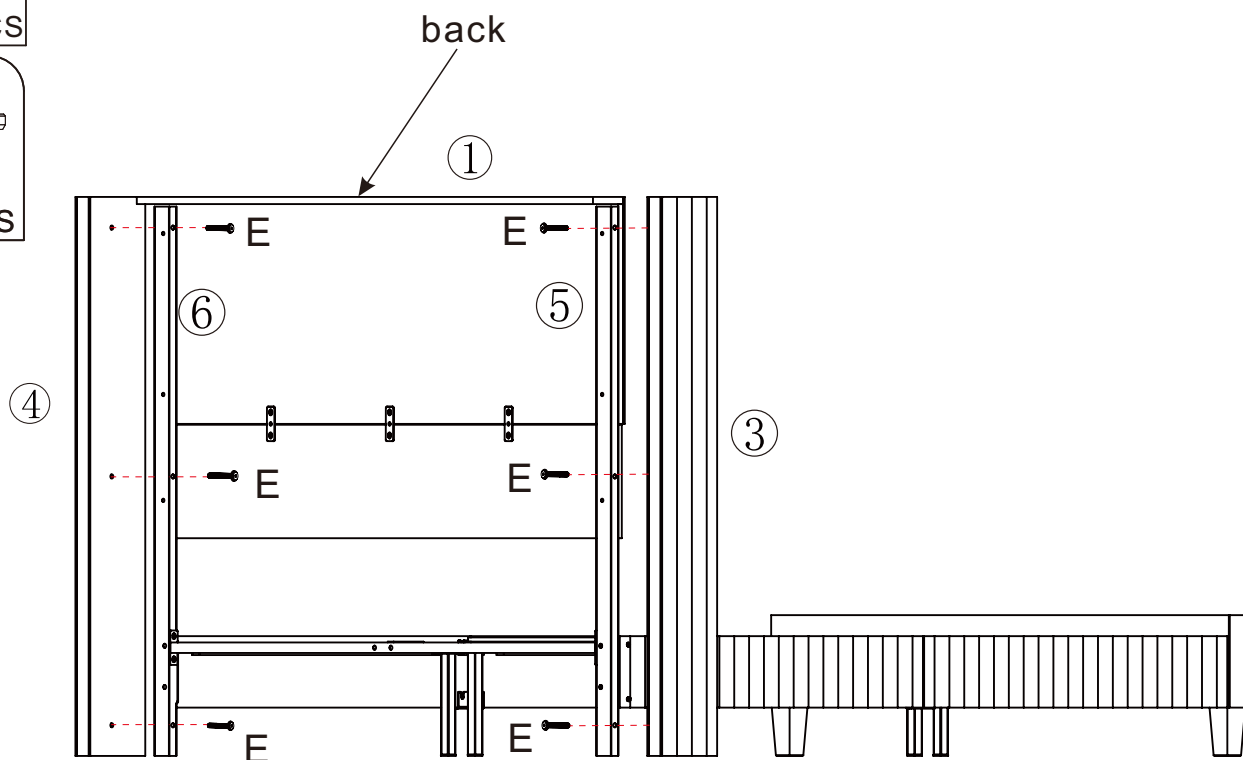

THANK YOU

We hope you enjoy your new purchase.

We have personally inspected this product.

In the event that you need any additional help for any reason,

Please do not hesitate to contact us