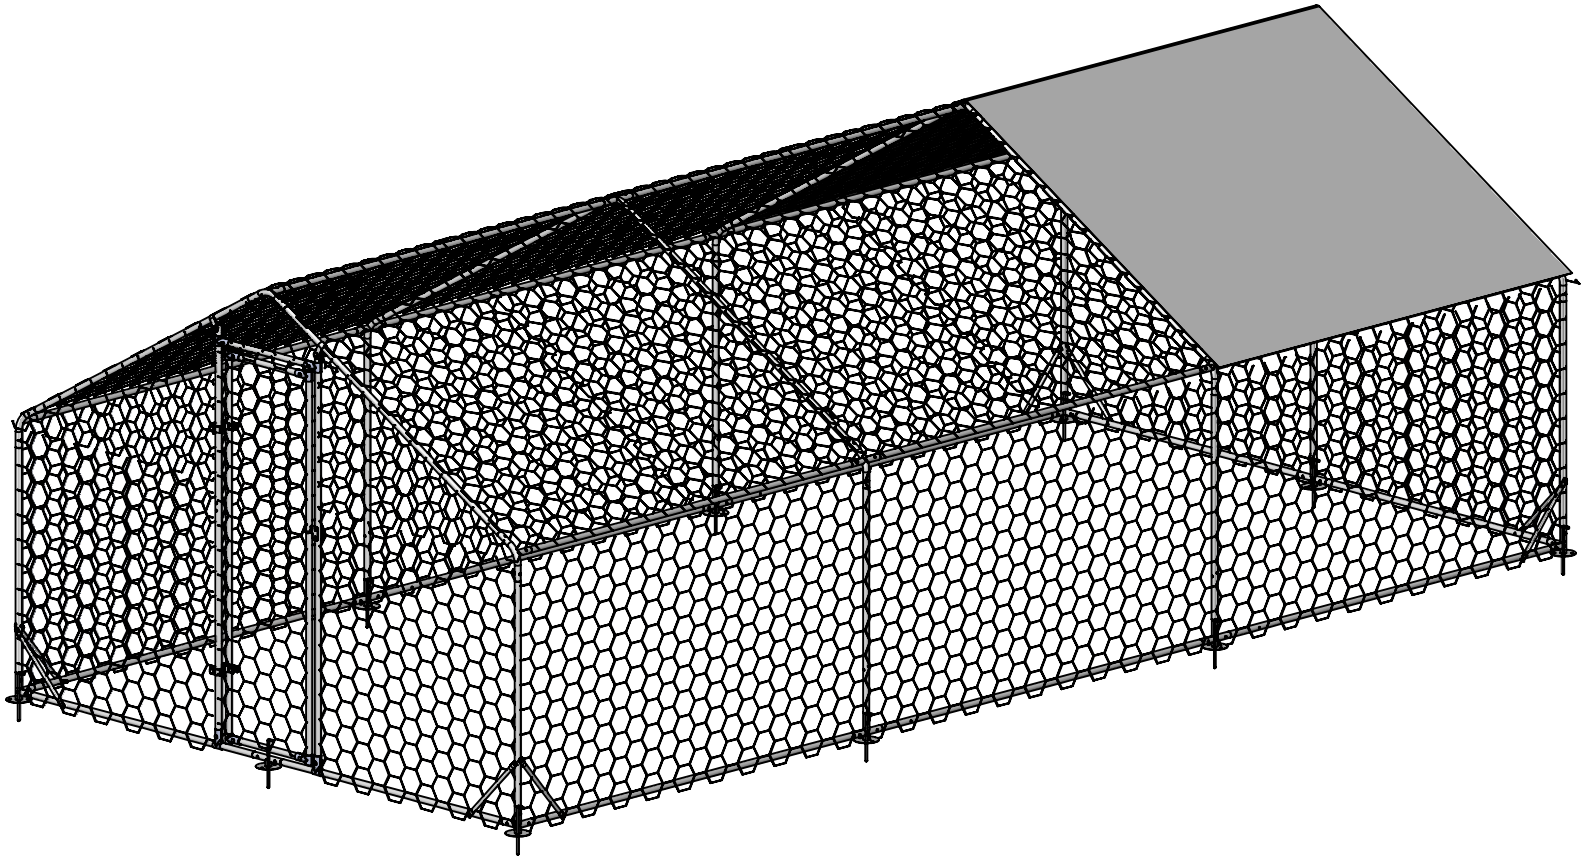








CHICKEN COOPS INSTRUCTIONS

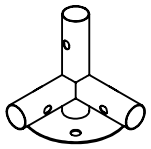
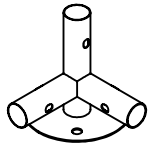
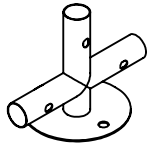





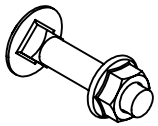
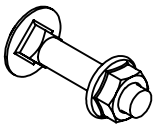
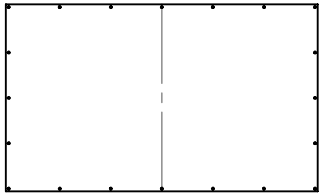
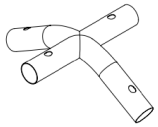
SKU:ZYPC001301




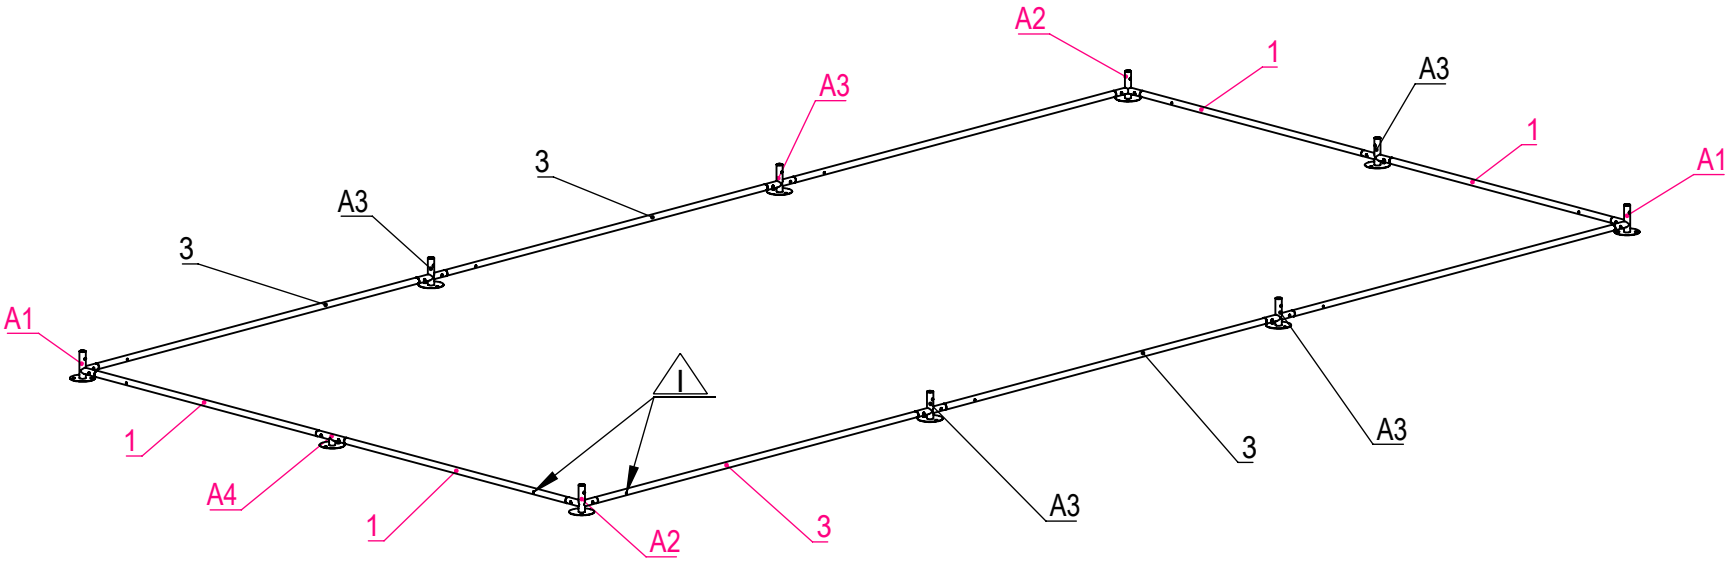
1.Recommend multiple people to assemble.
2.Do not over torque screws an bolts.
3.Do not install on flammable place in case of fire.
4.Use on a flat ground.
5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE

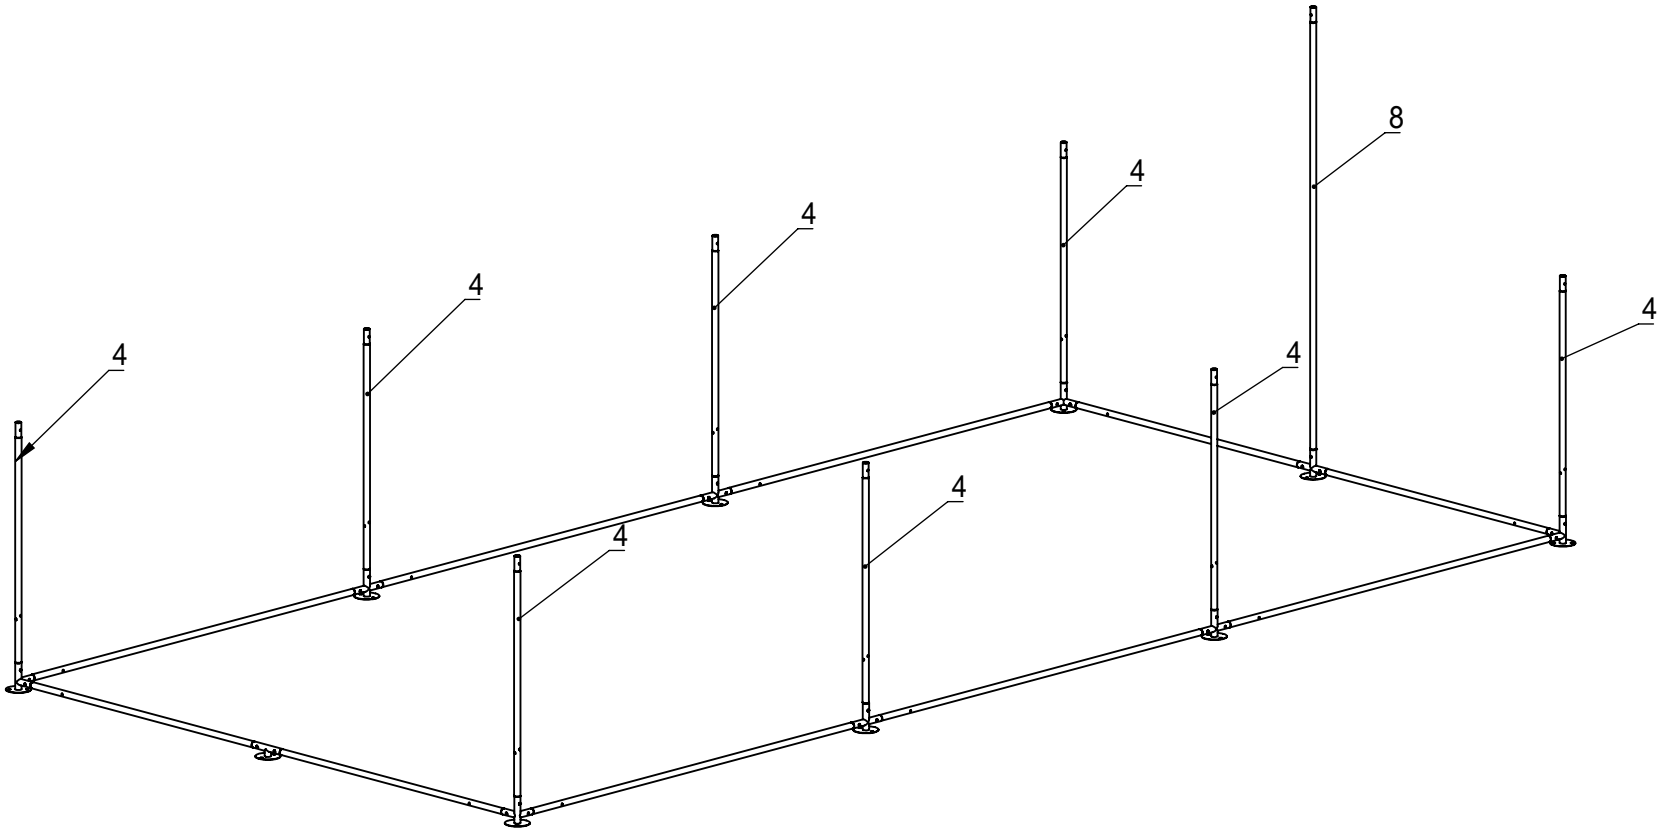
NO.	PIC	TYB	PCS
1		1364mm	4
2		1919mm	9
3		1919mm	6
4		1049mm	8
5		1505mm	8
6		1715mm	2
7		515mm	1
8		1881mm	1
9		1620mm	2
10		407mm	2
11		385mm	8

	A1 2		A2 2		A3 5		A4 1
	B1 5		B3 1		C 16		D 2
	E1 2		E2 2		F1 1		F2 2
	G 10	 M8*40	L 6	 M6*40	K 26		R 12
	S 1		JP 1		U 1		
	Z 1		B2 6				

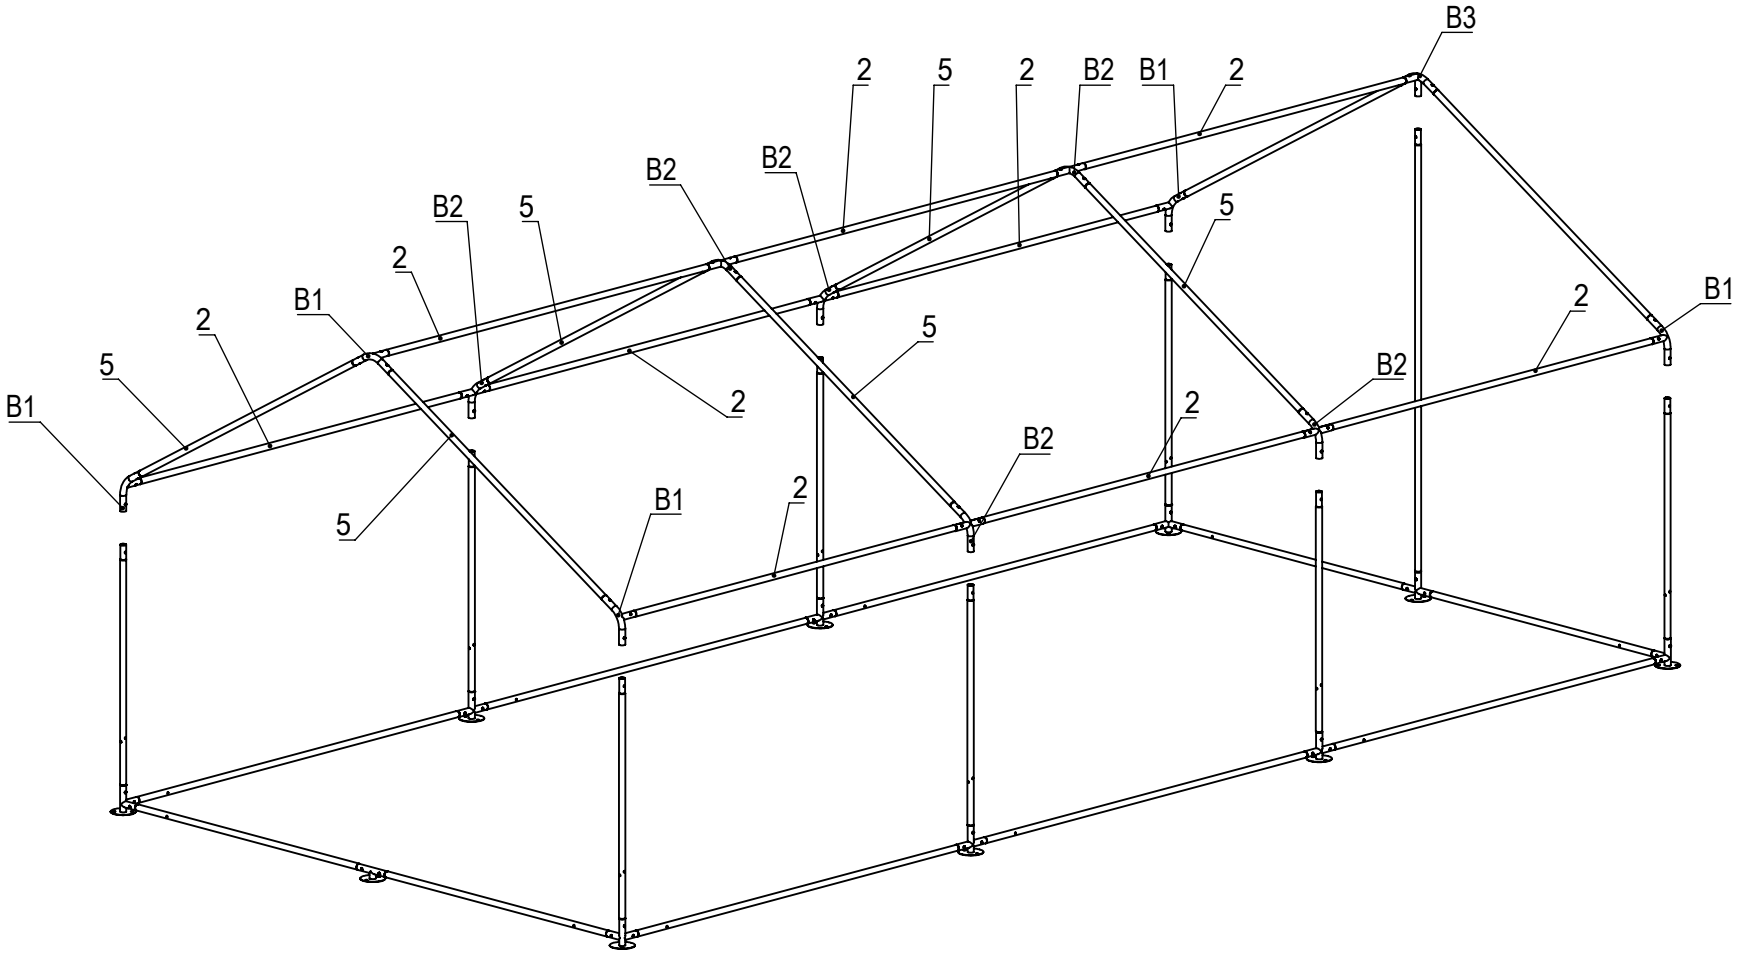
	W 1



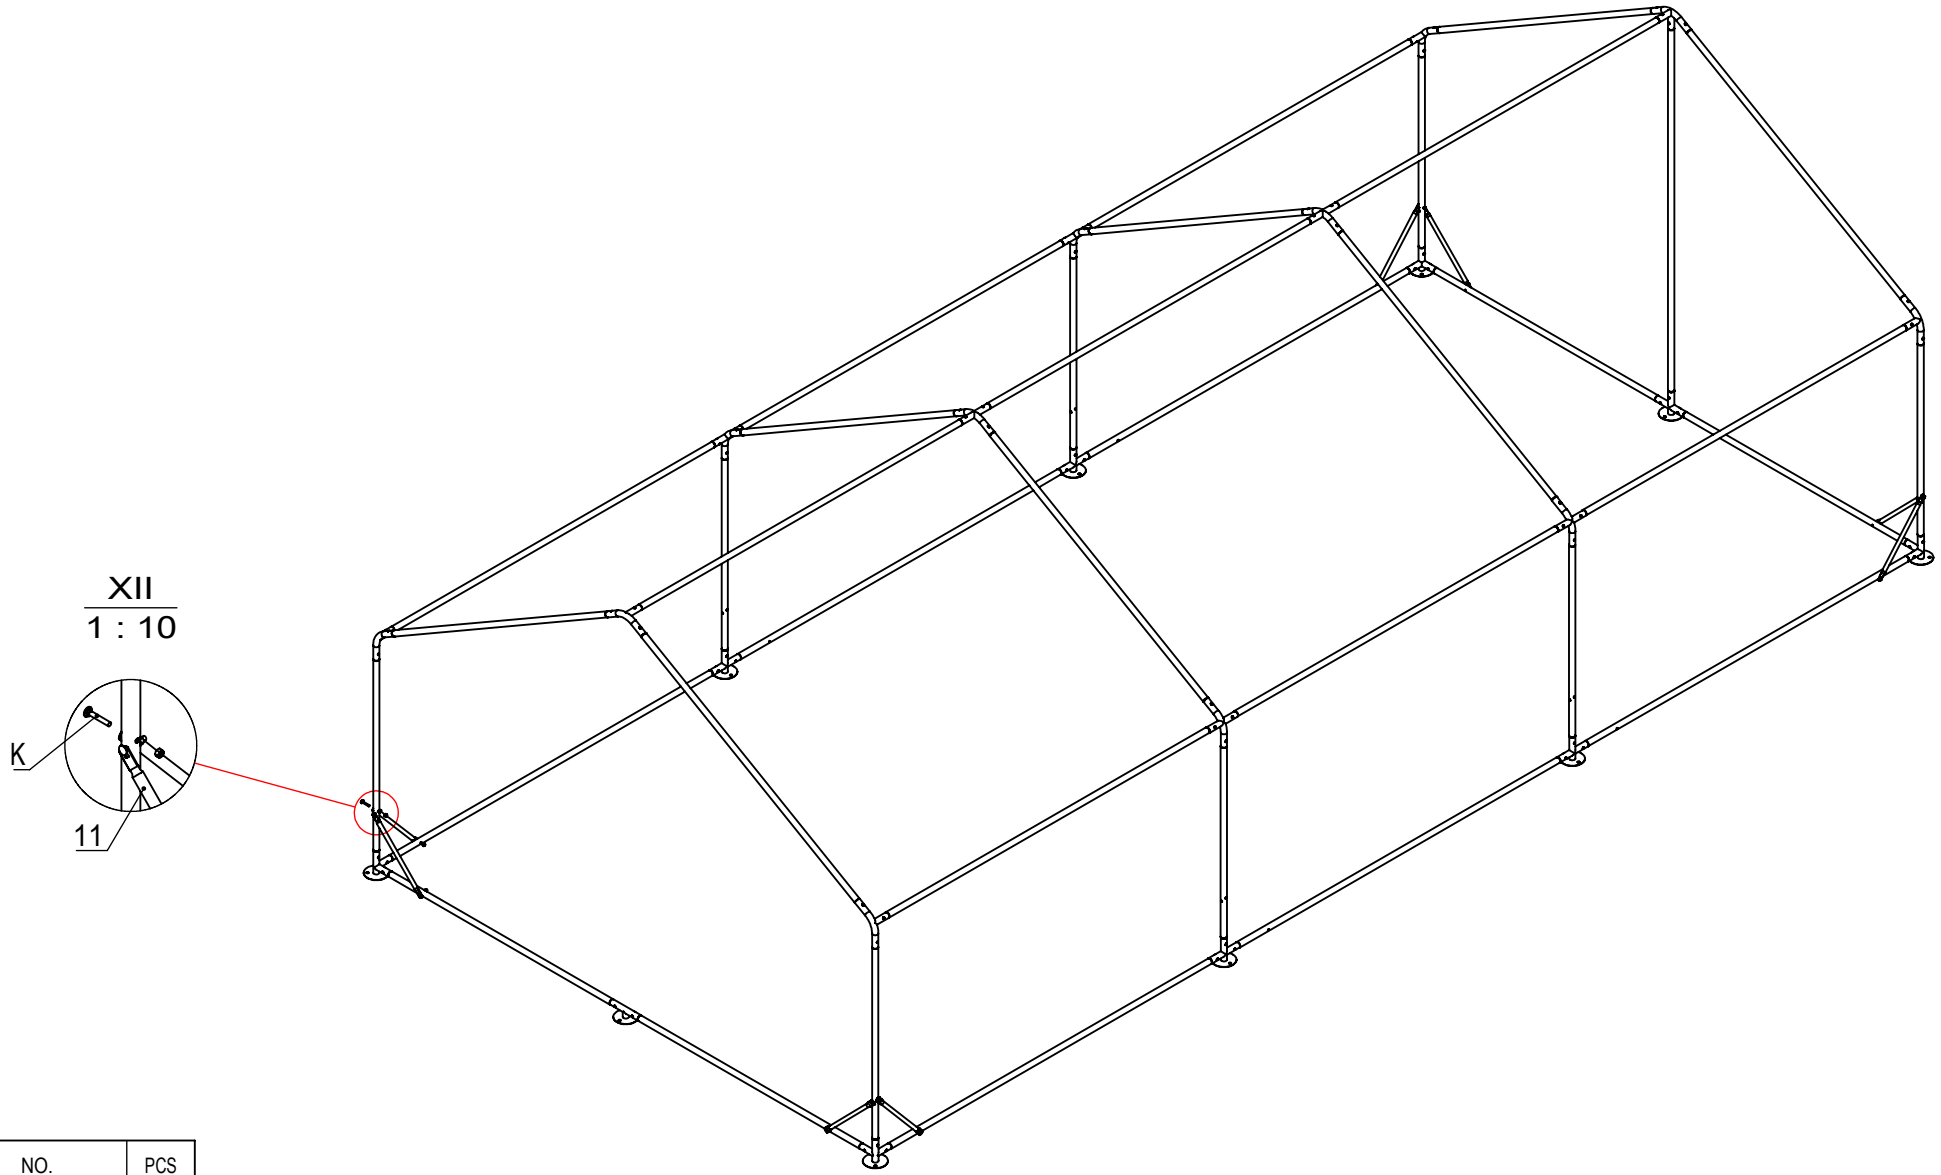
NO.	PCS
A1	2
A2	2
A3	5
A4	1
1	4
3	6



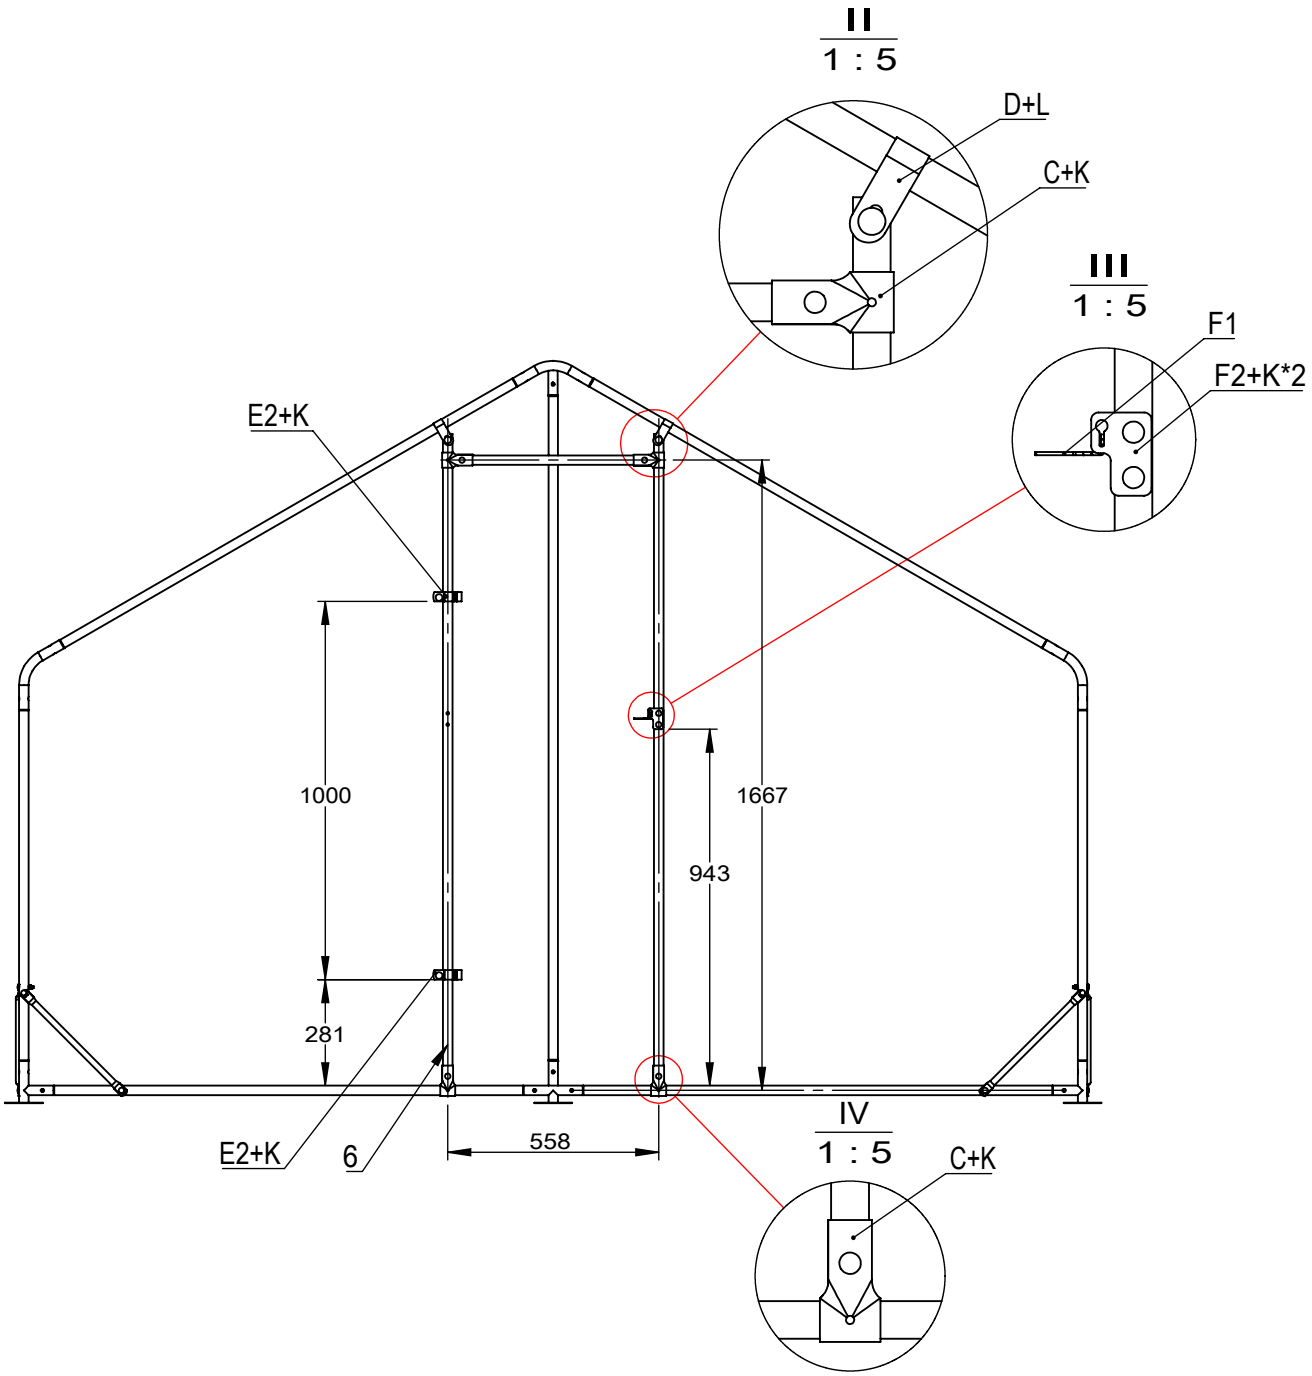
NO.	PCS
4	8
8	1



NO.	PCS
2	9
5	8
B1	5
B2	6
B3	1



NO.	PCS
11	8
K(M6*40)	16



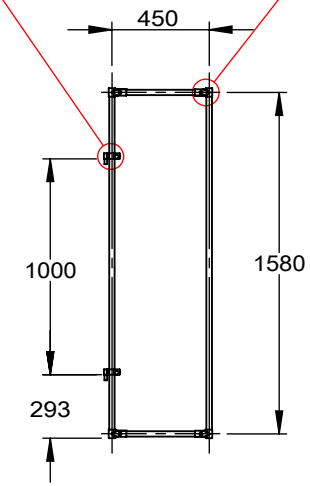
NO.	PCS
D	2
C	8
6	2
7	1
E2	2
F2	2
F1	1
L	4
K	6

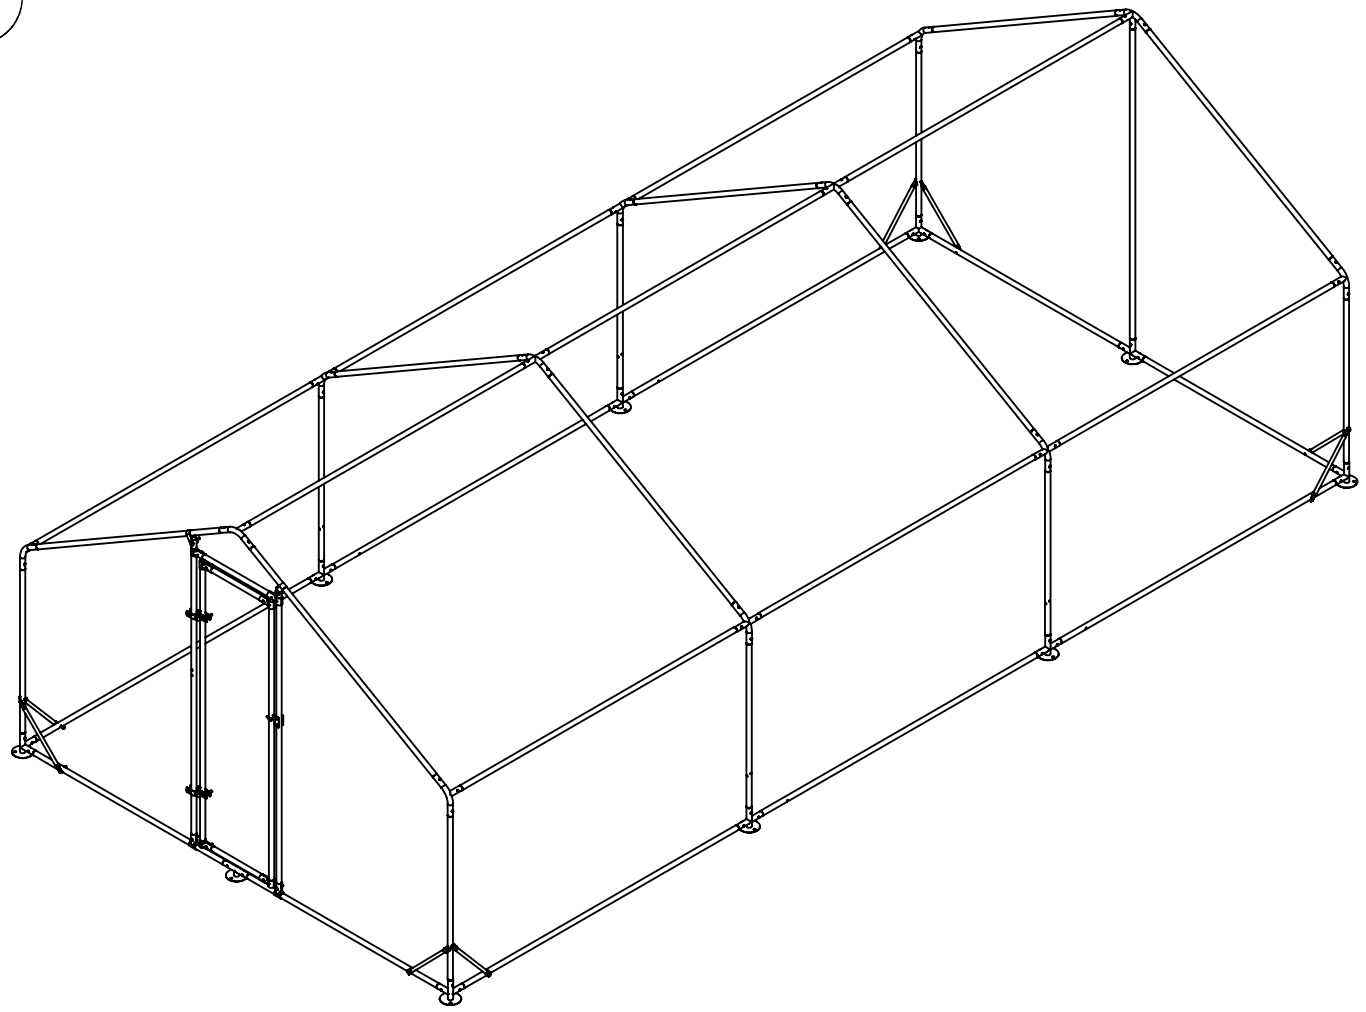
V
1 : 10

E1+L


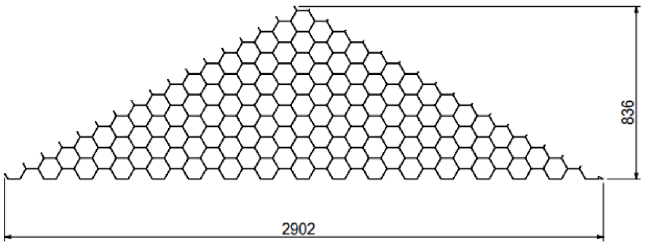
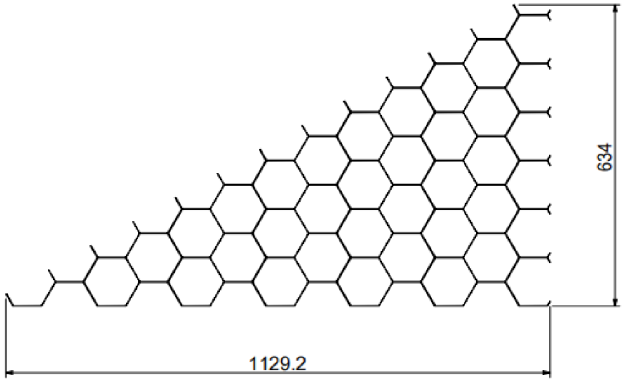
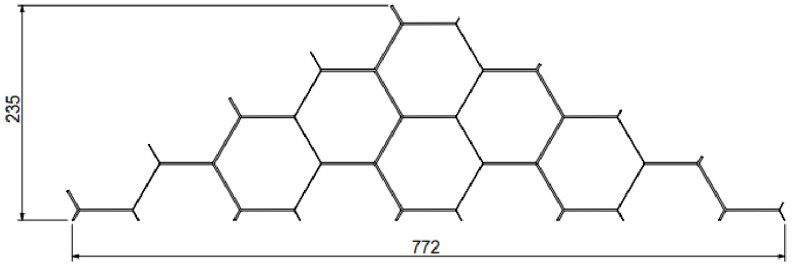
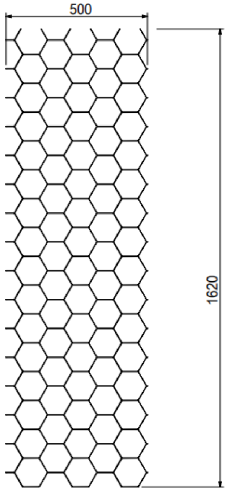
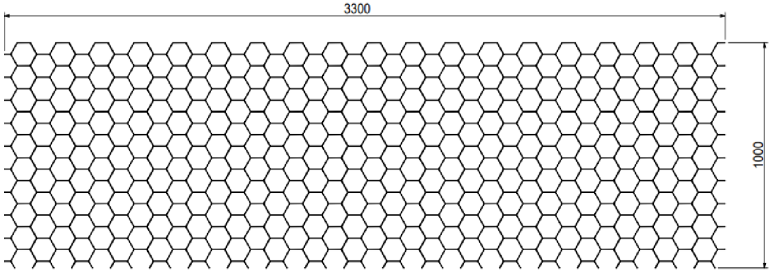
VI
1 : 10

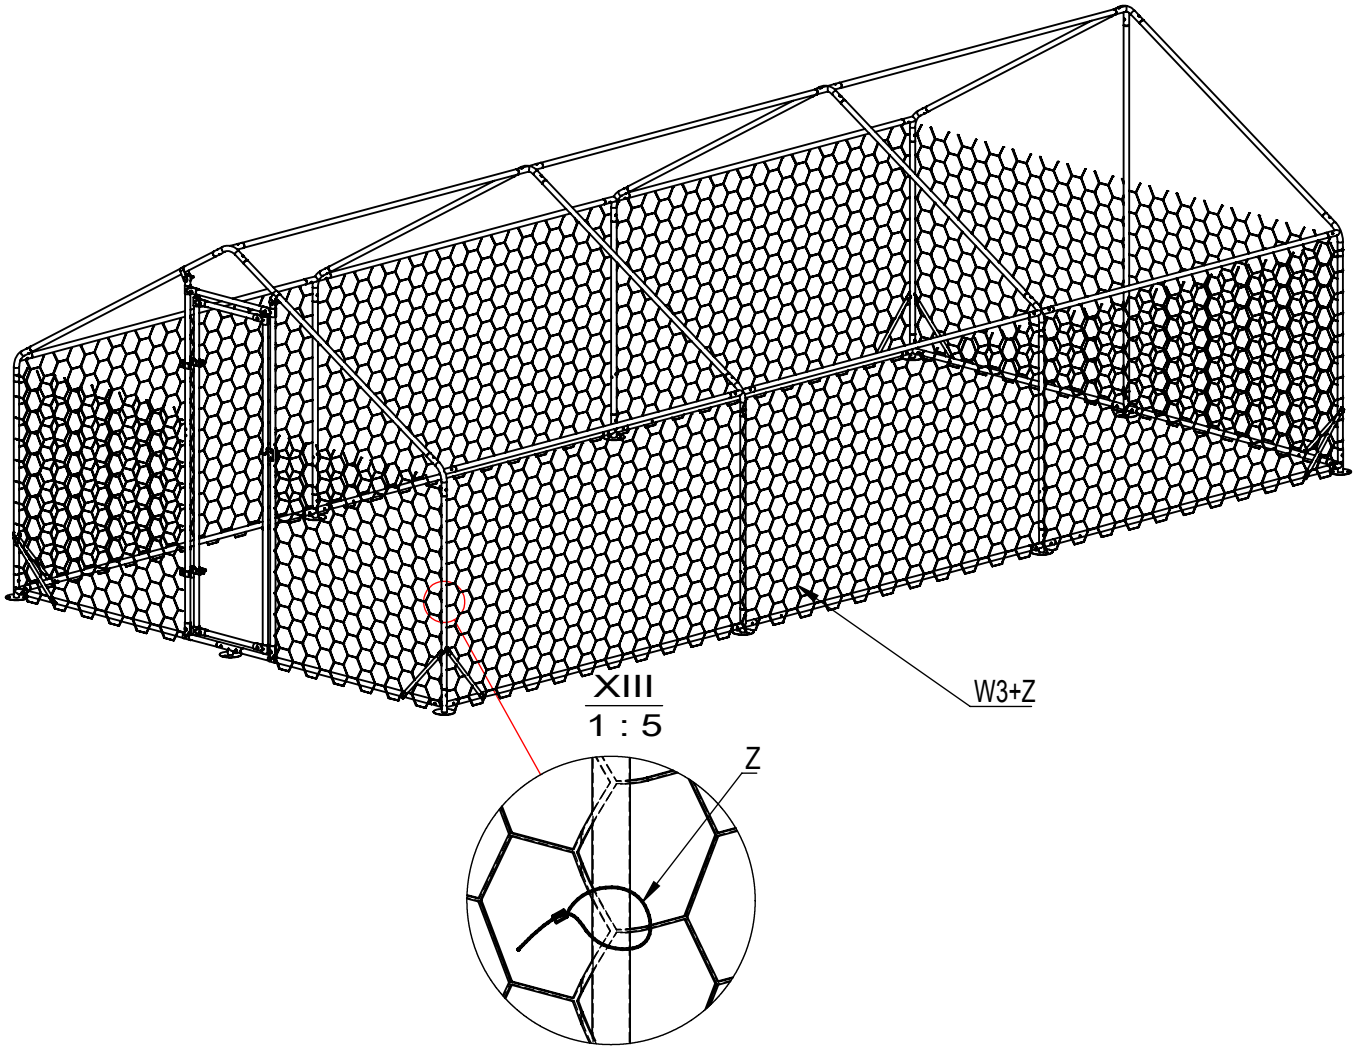
C+K

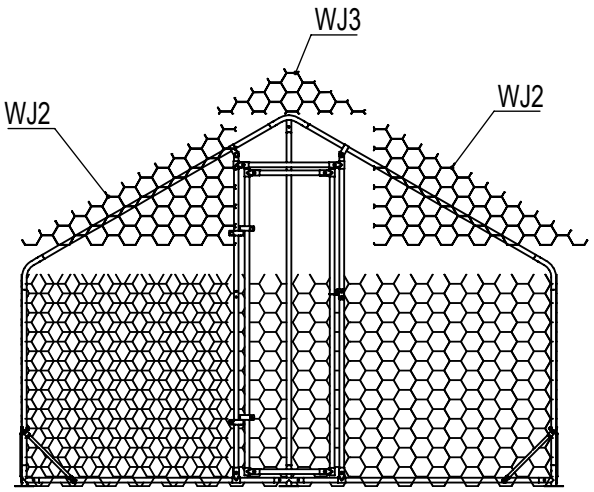


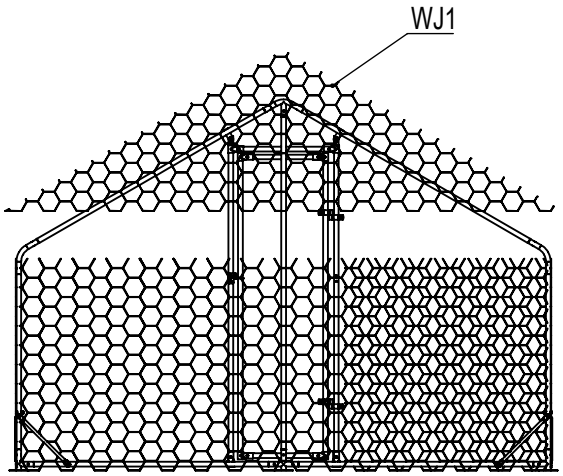


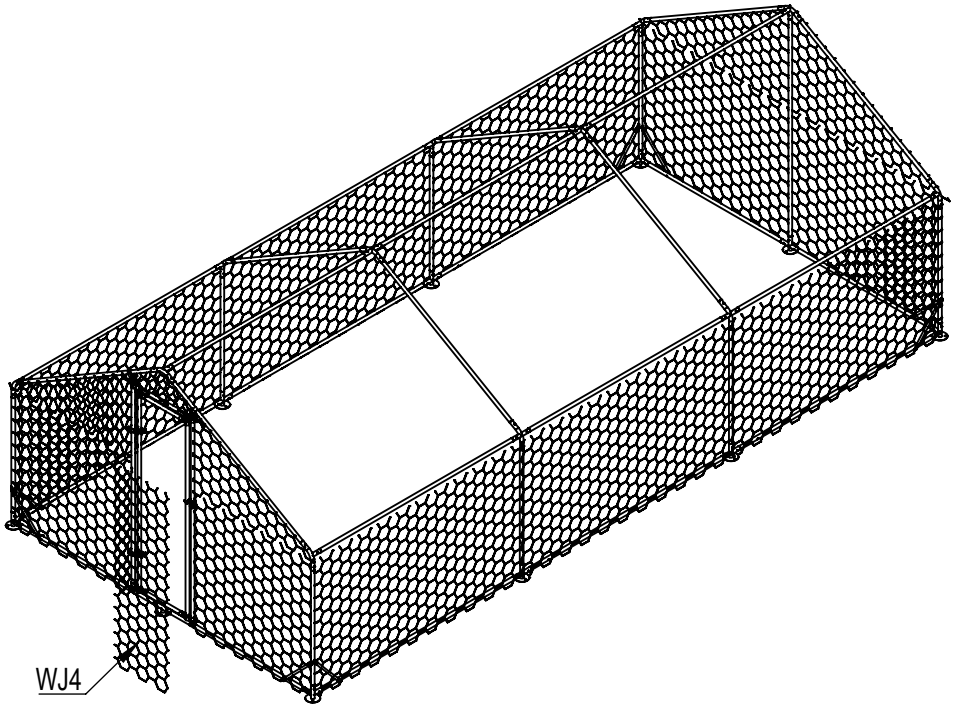
NO.	PCS
C	8
10	2
9	2
E1	2
L	2
K	4

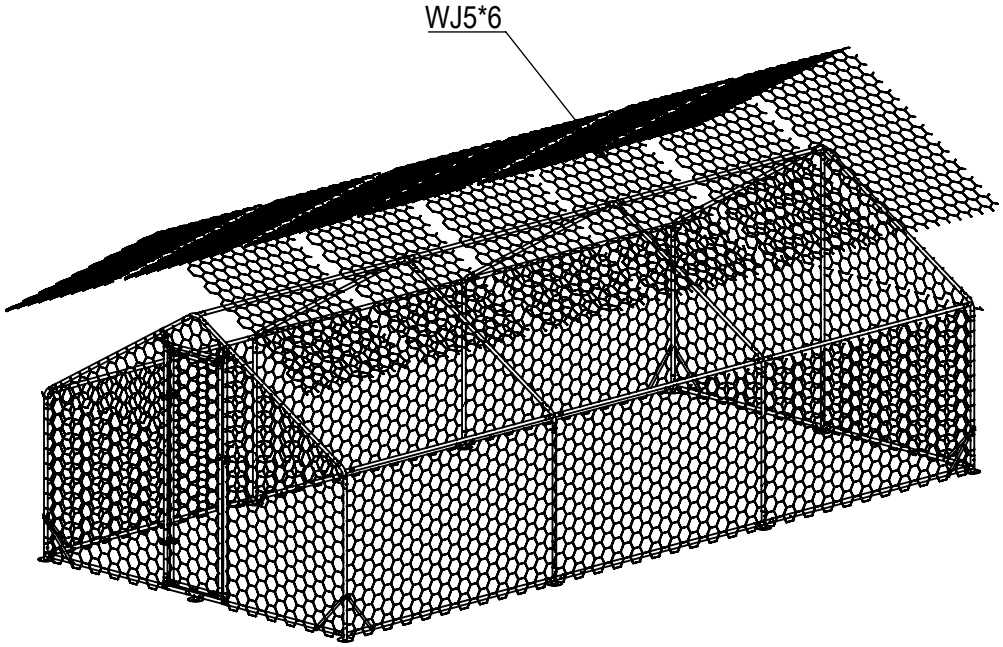
	W3 1		WJ1 1
	WJ2 2		WJ3 1
	WJ4 1		WJ5 6

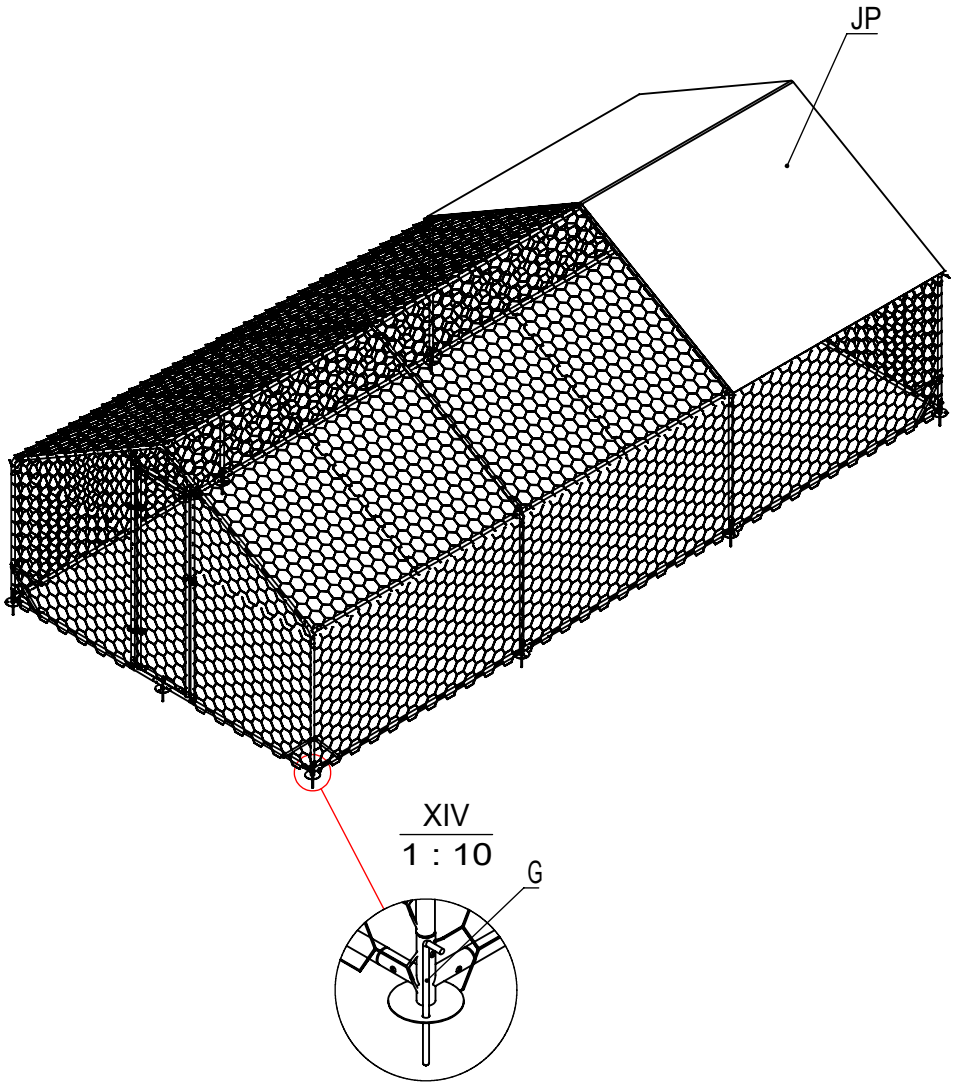

W3+Z
XIII
1 : 5
Z


WJ3
WJ2
WJ2


WJ1


WJ4


WJ5*6



Q





