

MAXIMUM LOAD®


Hooks | Crochets | Ganchos

INSTALLATION INSTRUCTIONS | DIRECTIVES D'INSTALLATION | INSTRUCCIONES DE INSTALACIÓN







1 INSTALL | INSTALLER | INSTALAR

DRYWALL | CLOISON SÈCHE | MURO SECO

Drill | Percer | Perfore

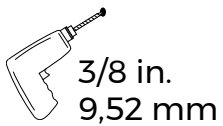


Use | Utiliser | Usar

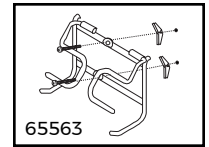
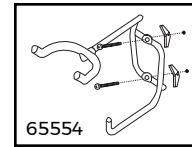
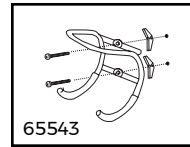
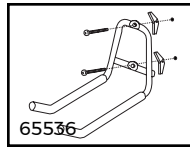
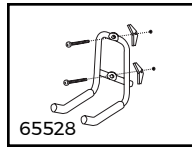



CONCRETE | BÉTON | CONCRETO

Drill | Percer | Perfore

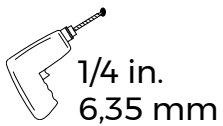

Use | Utiliser | Usar

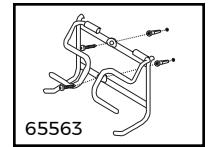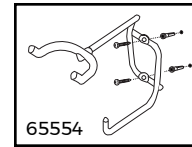
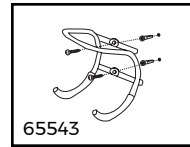
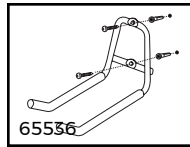
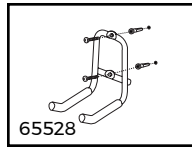



STUD | MONTANTE | MONTANT

Drill | Percer | Perfore








Use | Utiliser | Usar

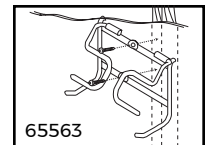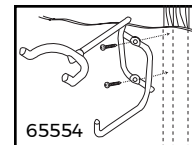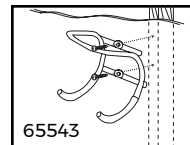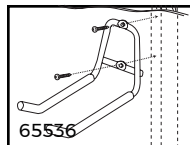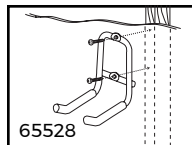

2 COVER | CACHER | ENCUBRIR

Attach plastic cover. | Installer le revêtement de plastique. | Instale la cubierta de plástico.

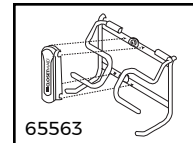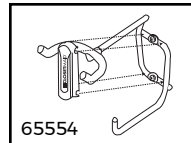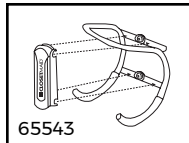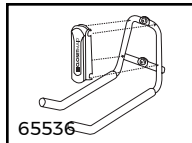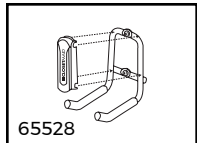

CLOSETMAID®