


INSTALLATION GUIDE



1. All you need is a few basic tools and you're ready to go



2. Carefully remove the door panels from the packaging

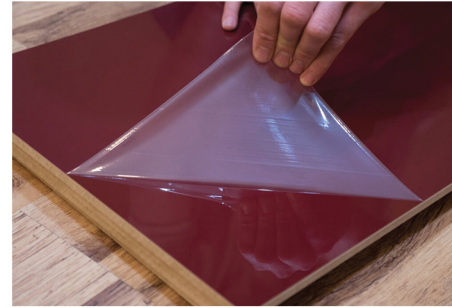

3. Peel off the protective film from the door panels (it can be clear, blue or other colour)



4. Remove the tracks from the packaging



5. Remove the door frames from the packaging



6. Inside you'll find all the required parts for your wardrobe installation



7. Lay the first door frame out on a soft floor surface to avoid scratching the panels or frame




8. Push the bottom panel firmly into the frame



9. Slide all the remaining wooden panels and mid rails into position within the door frame

Tip: You may need to clean the surface around the holes inside the side bars using a small file, to allow panels easy to fit inside

Tip: If mid rails are too tight to connect with the panels, you can slightly cut the edge of the back panel with knife

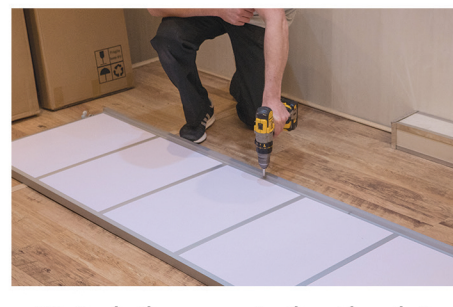


10. Apply the screws to the side rails in order to secure the wooden panels




11. Silicone can be used to hold the mirrored panels securely in place



12. Place the wheels into position at the bottom of the frame

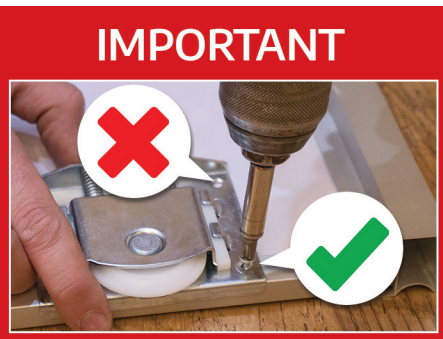

13. Screw the wheels into the pre-drilled holes in the frame; apply **the bottom two screws only** into wheel mechanism

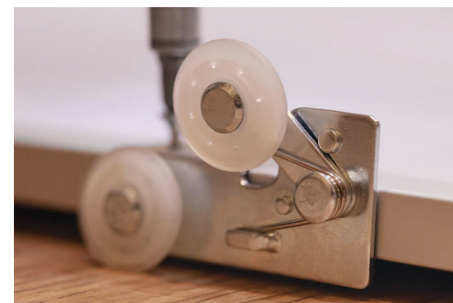

14. Place the runners onto the top rail and screw in using the pre-drilled holes



15. Repeat this procedure for all the remaining doors



Now it's time to lay the floor track

16. Carefully measure the length of track required and make sure the floor is level



17. Accurately cut the track to size



18. Secure the floor track by screwing into the holes provided



19. Measure the space available for fitting the ceiling track



20. Accurately measure and cut the ceiling track to size