


Installation Steps : 1


Determine the mounting holes based on the holes in the back of the basin and mark the wall with a pencil (33"-36" is preferred for countertop height).

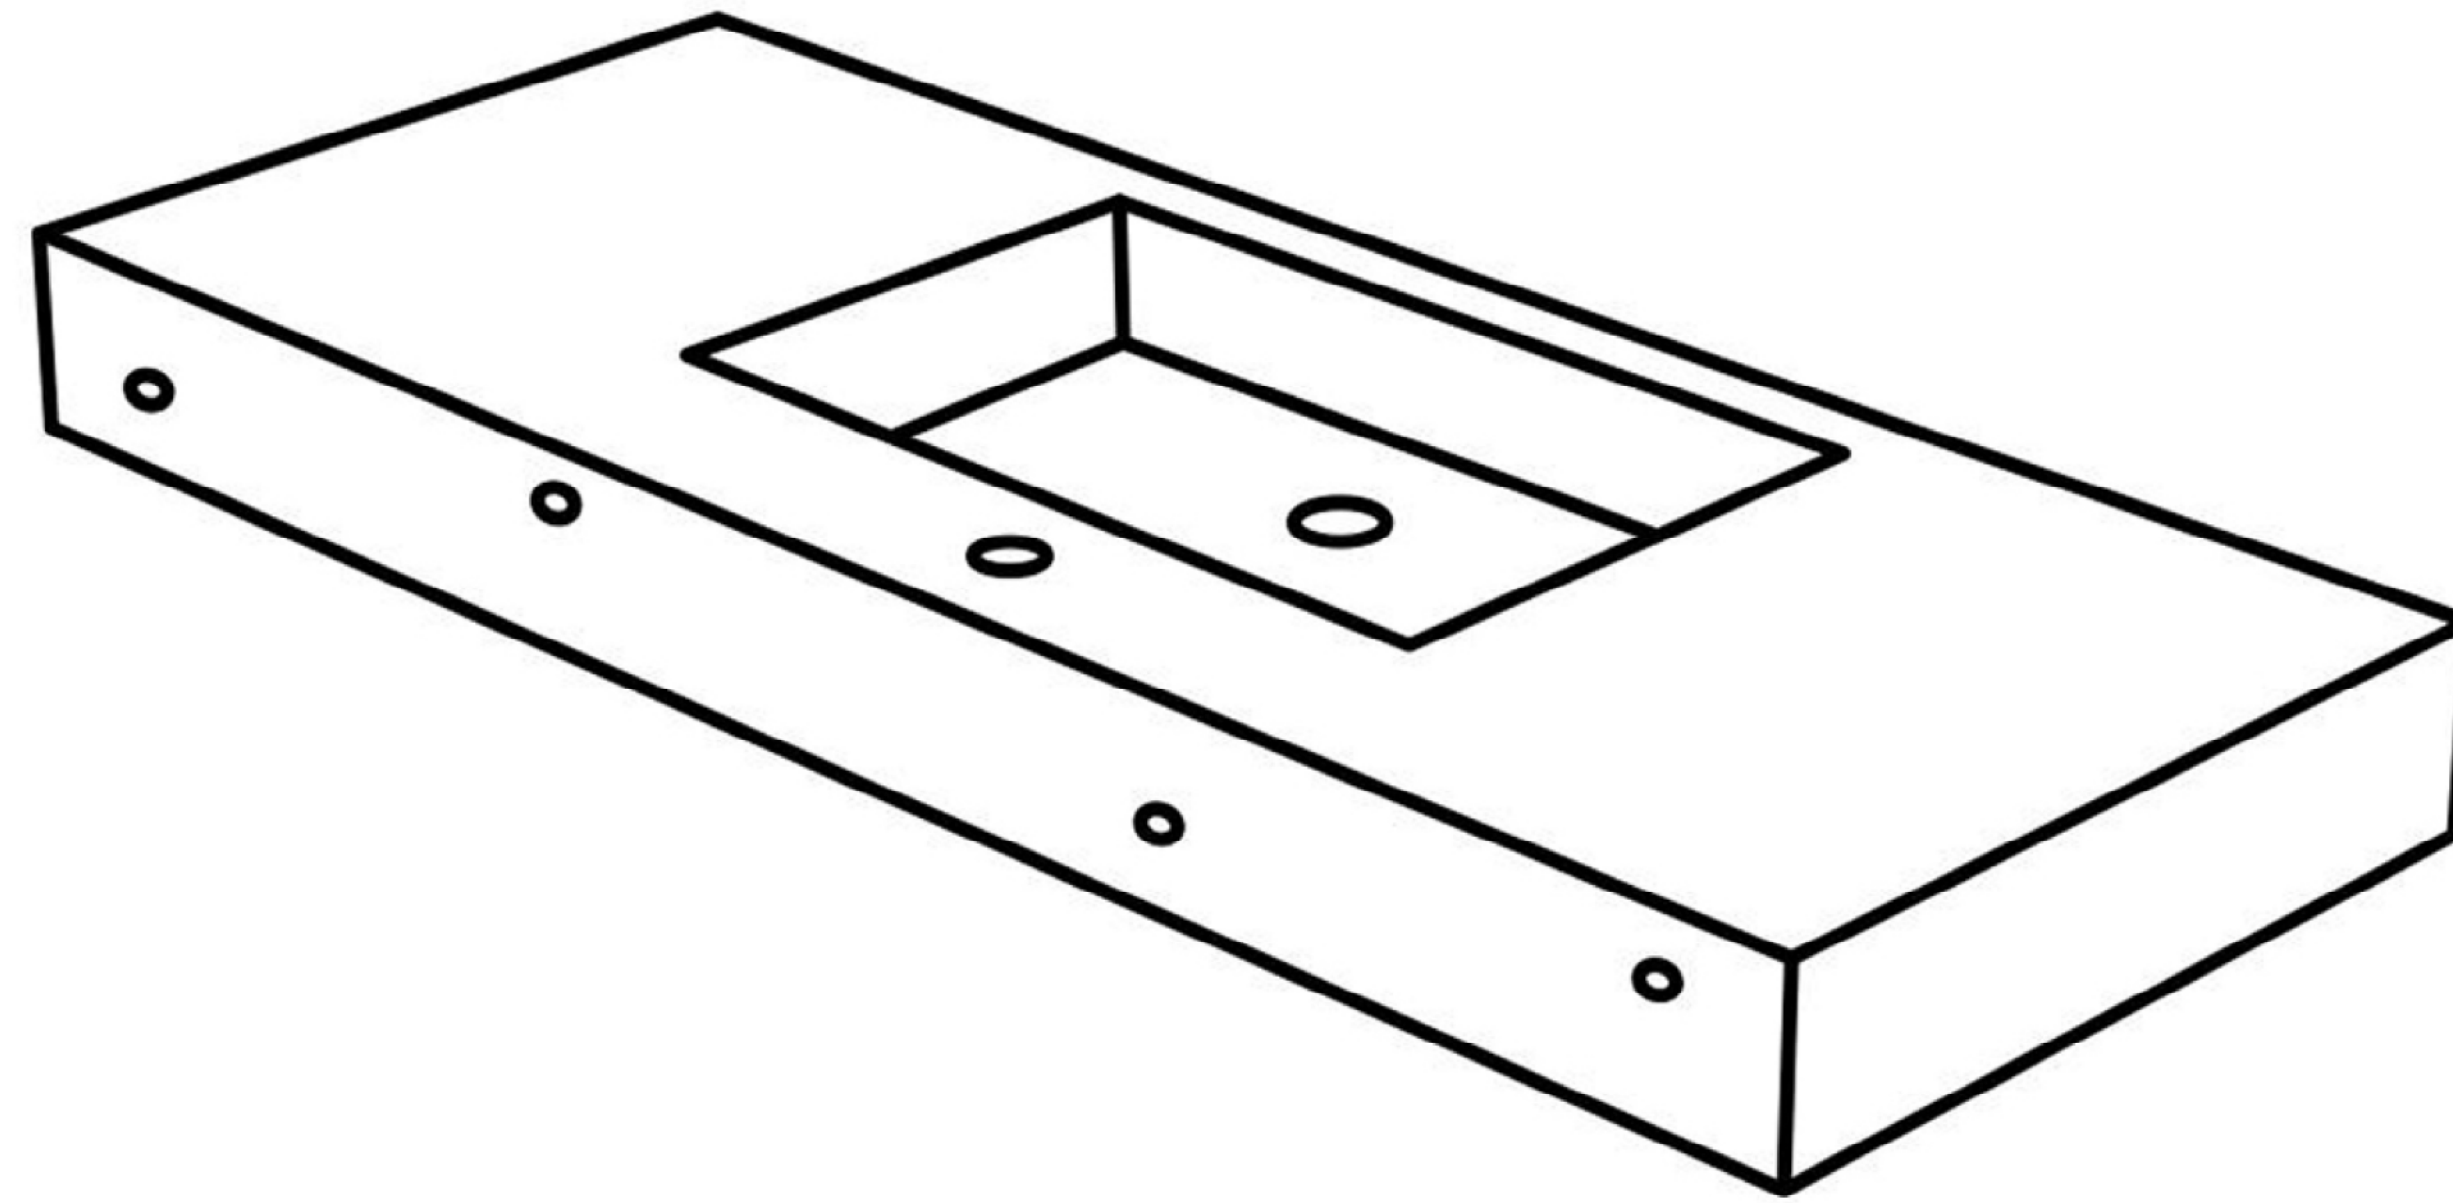

【 The back of the product 】


Installation Steps : 2

Drill the hole at the mark with electric drill.

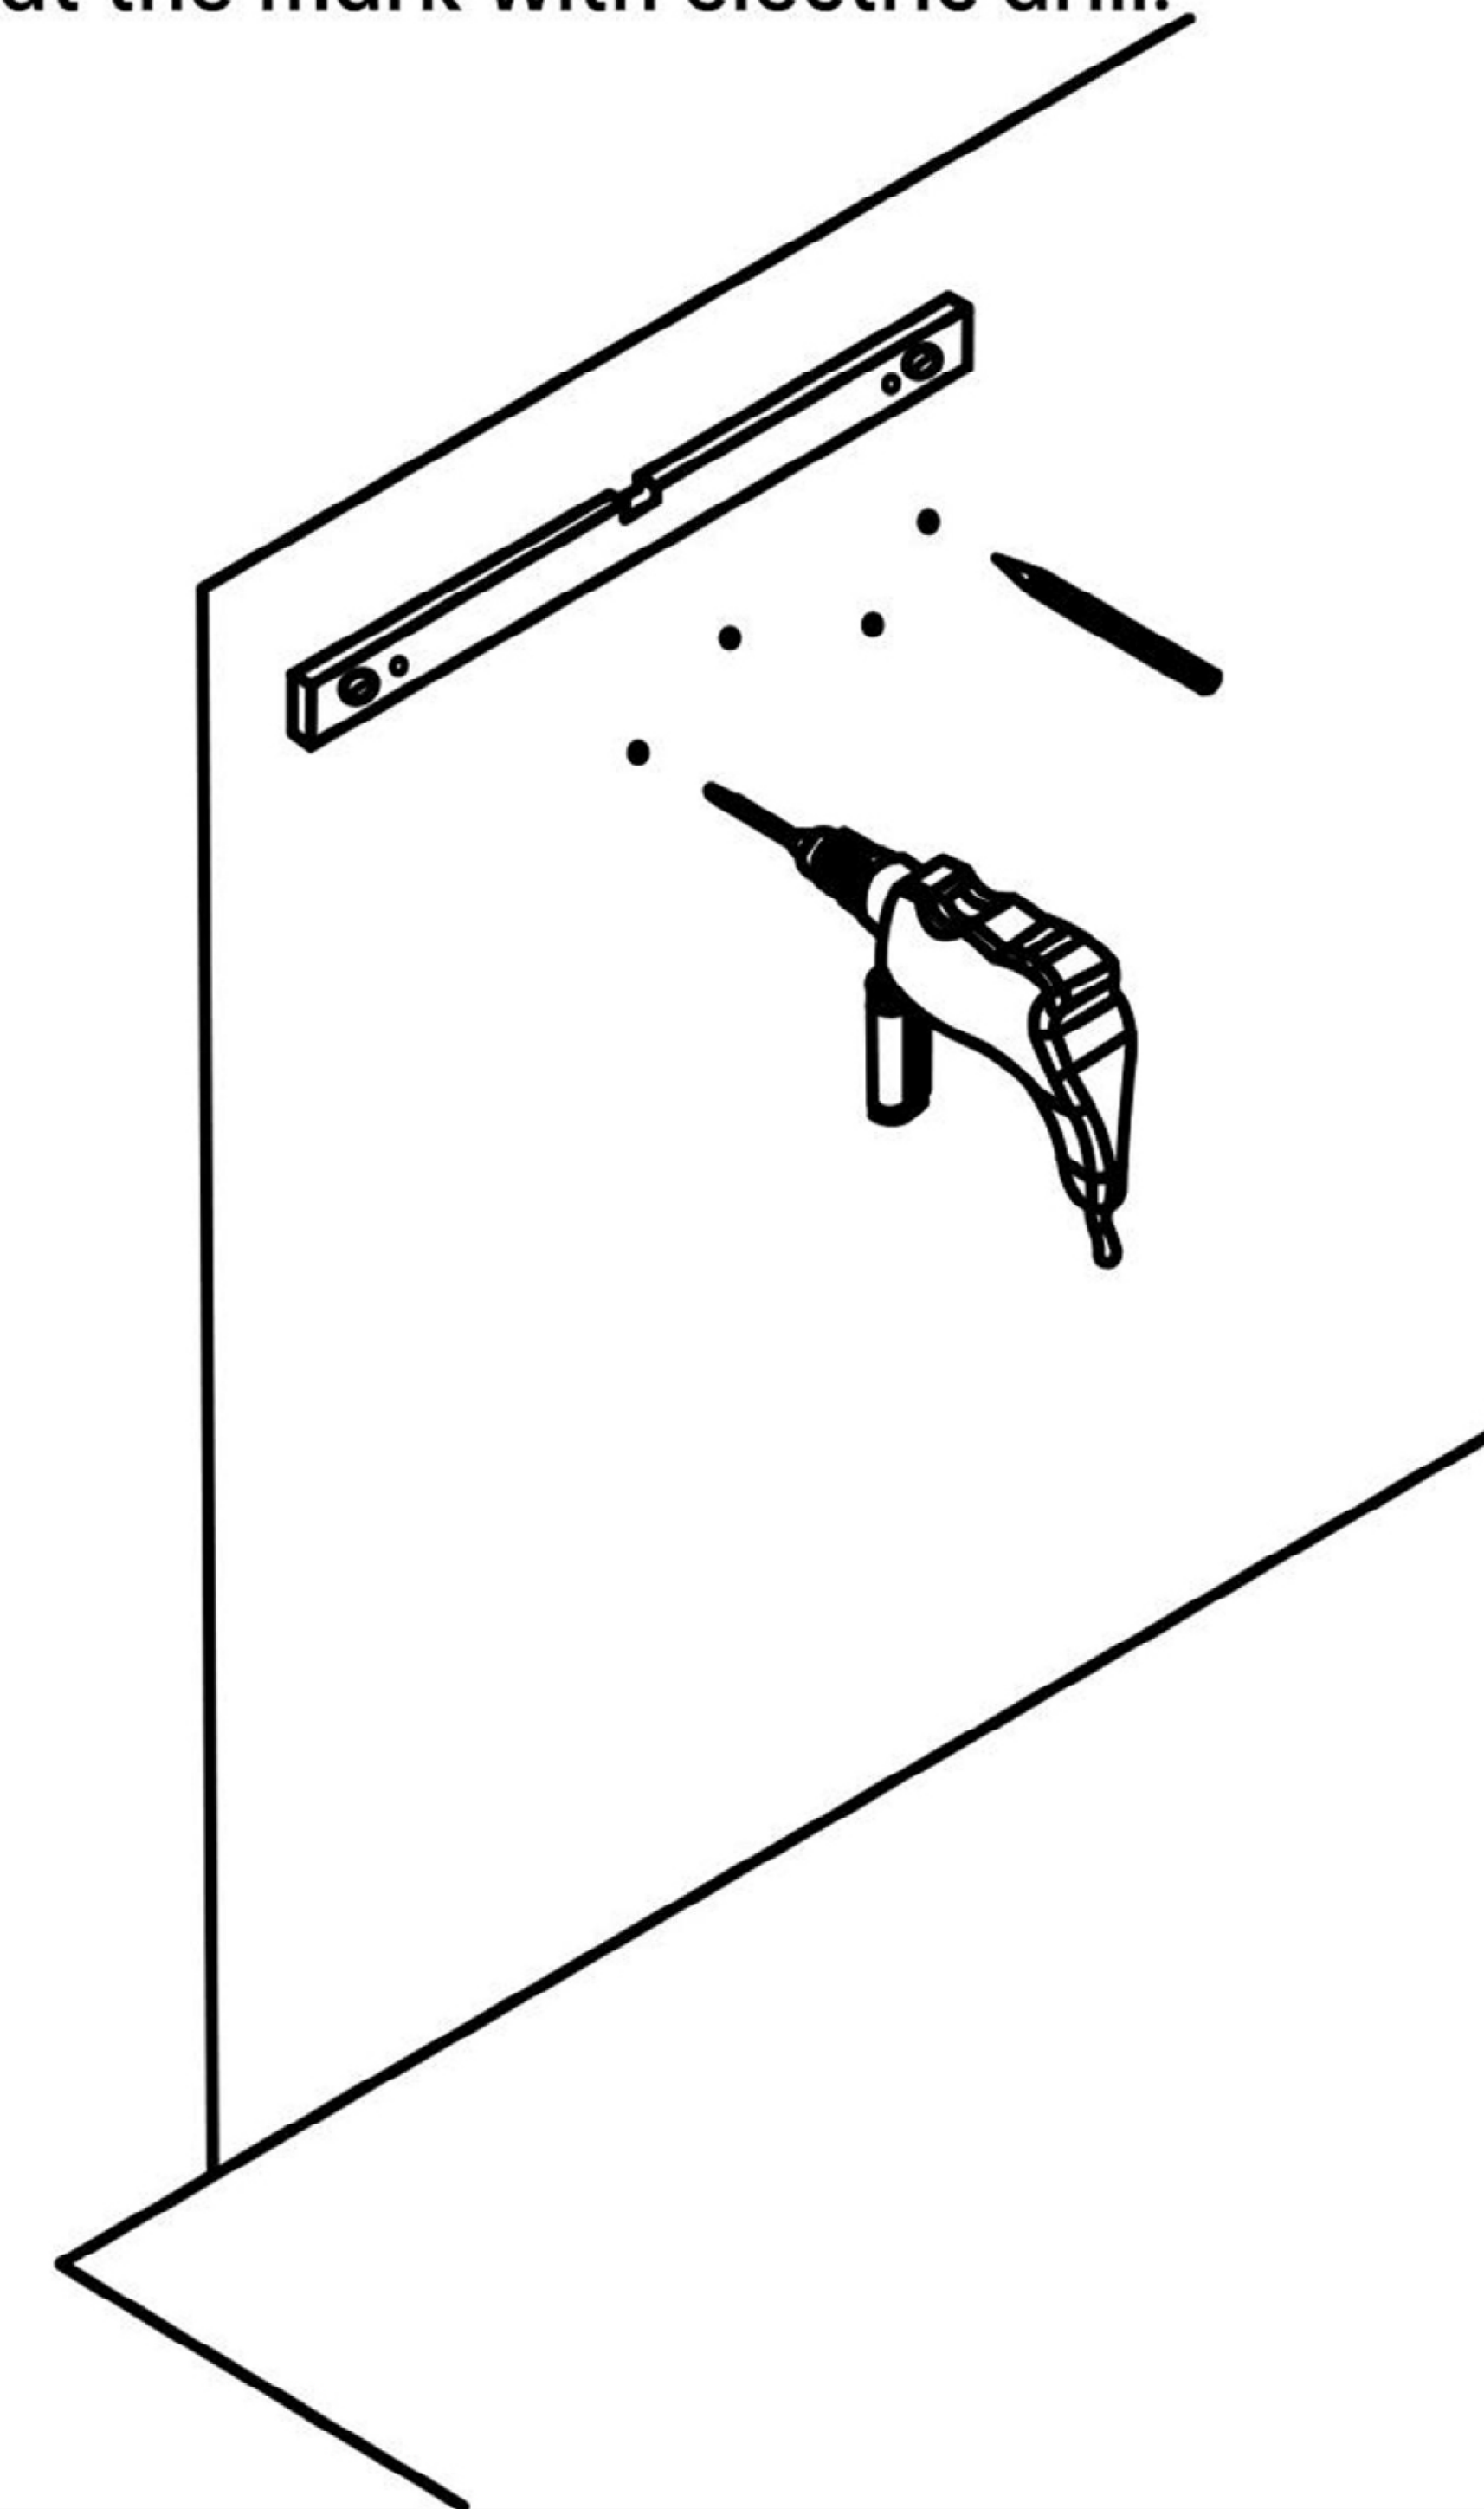

Installation Steps : 3

Knock the white rubber plug of wall-hung accessories into pre-drilling hole with hammer.

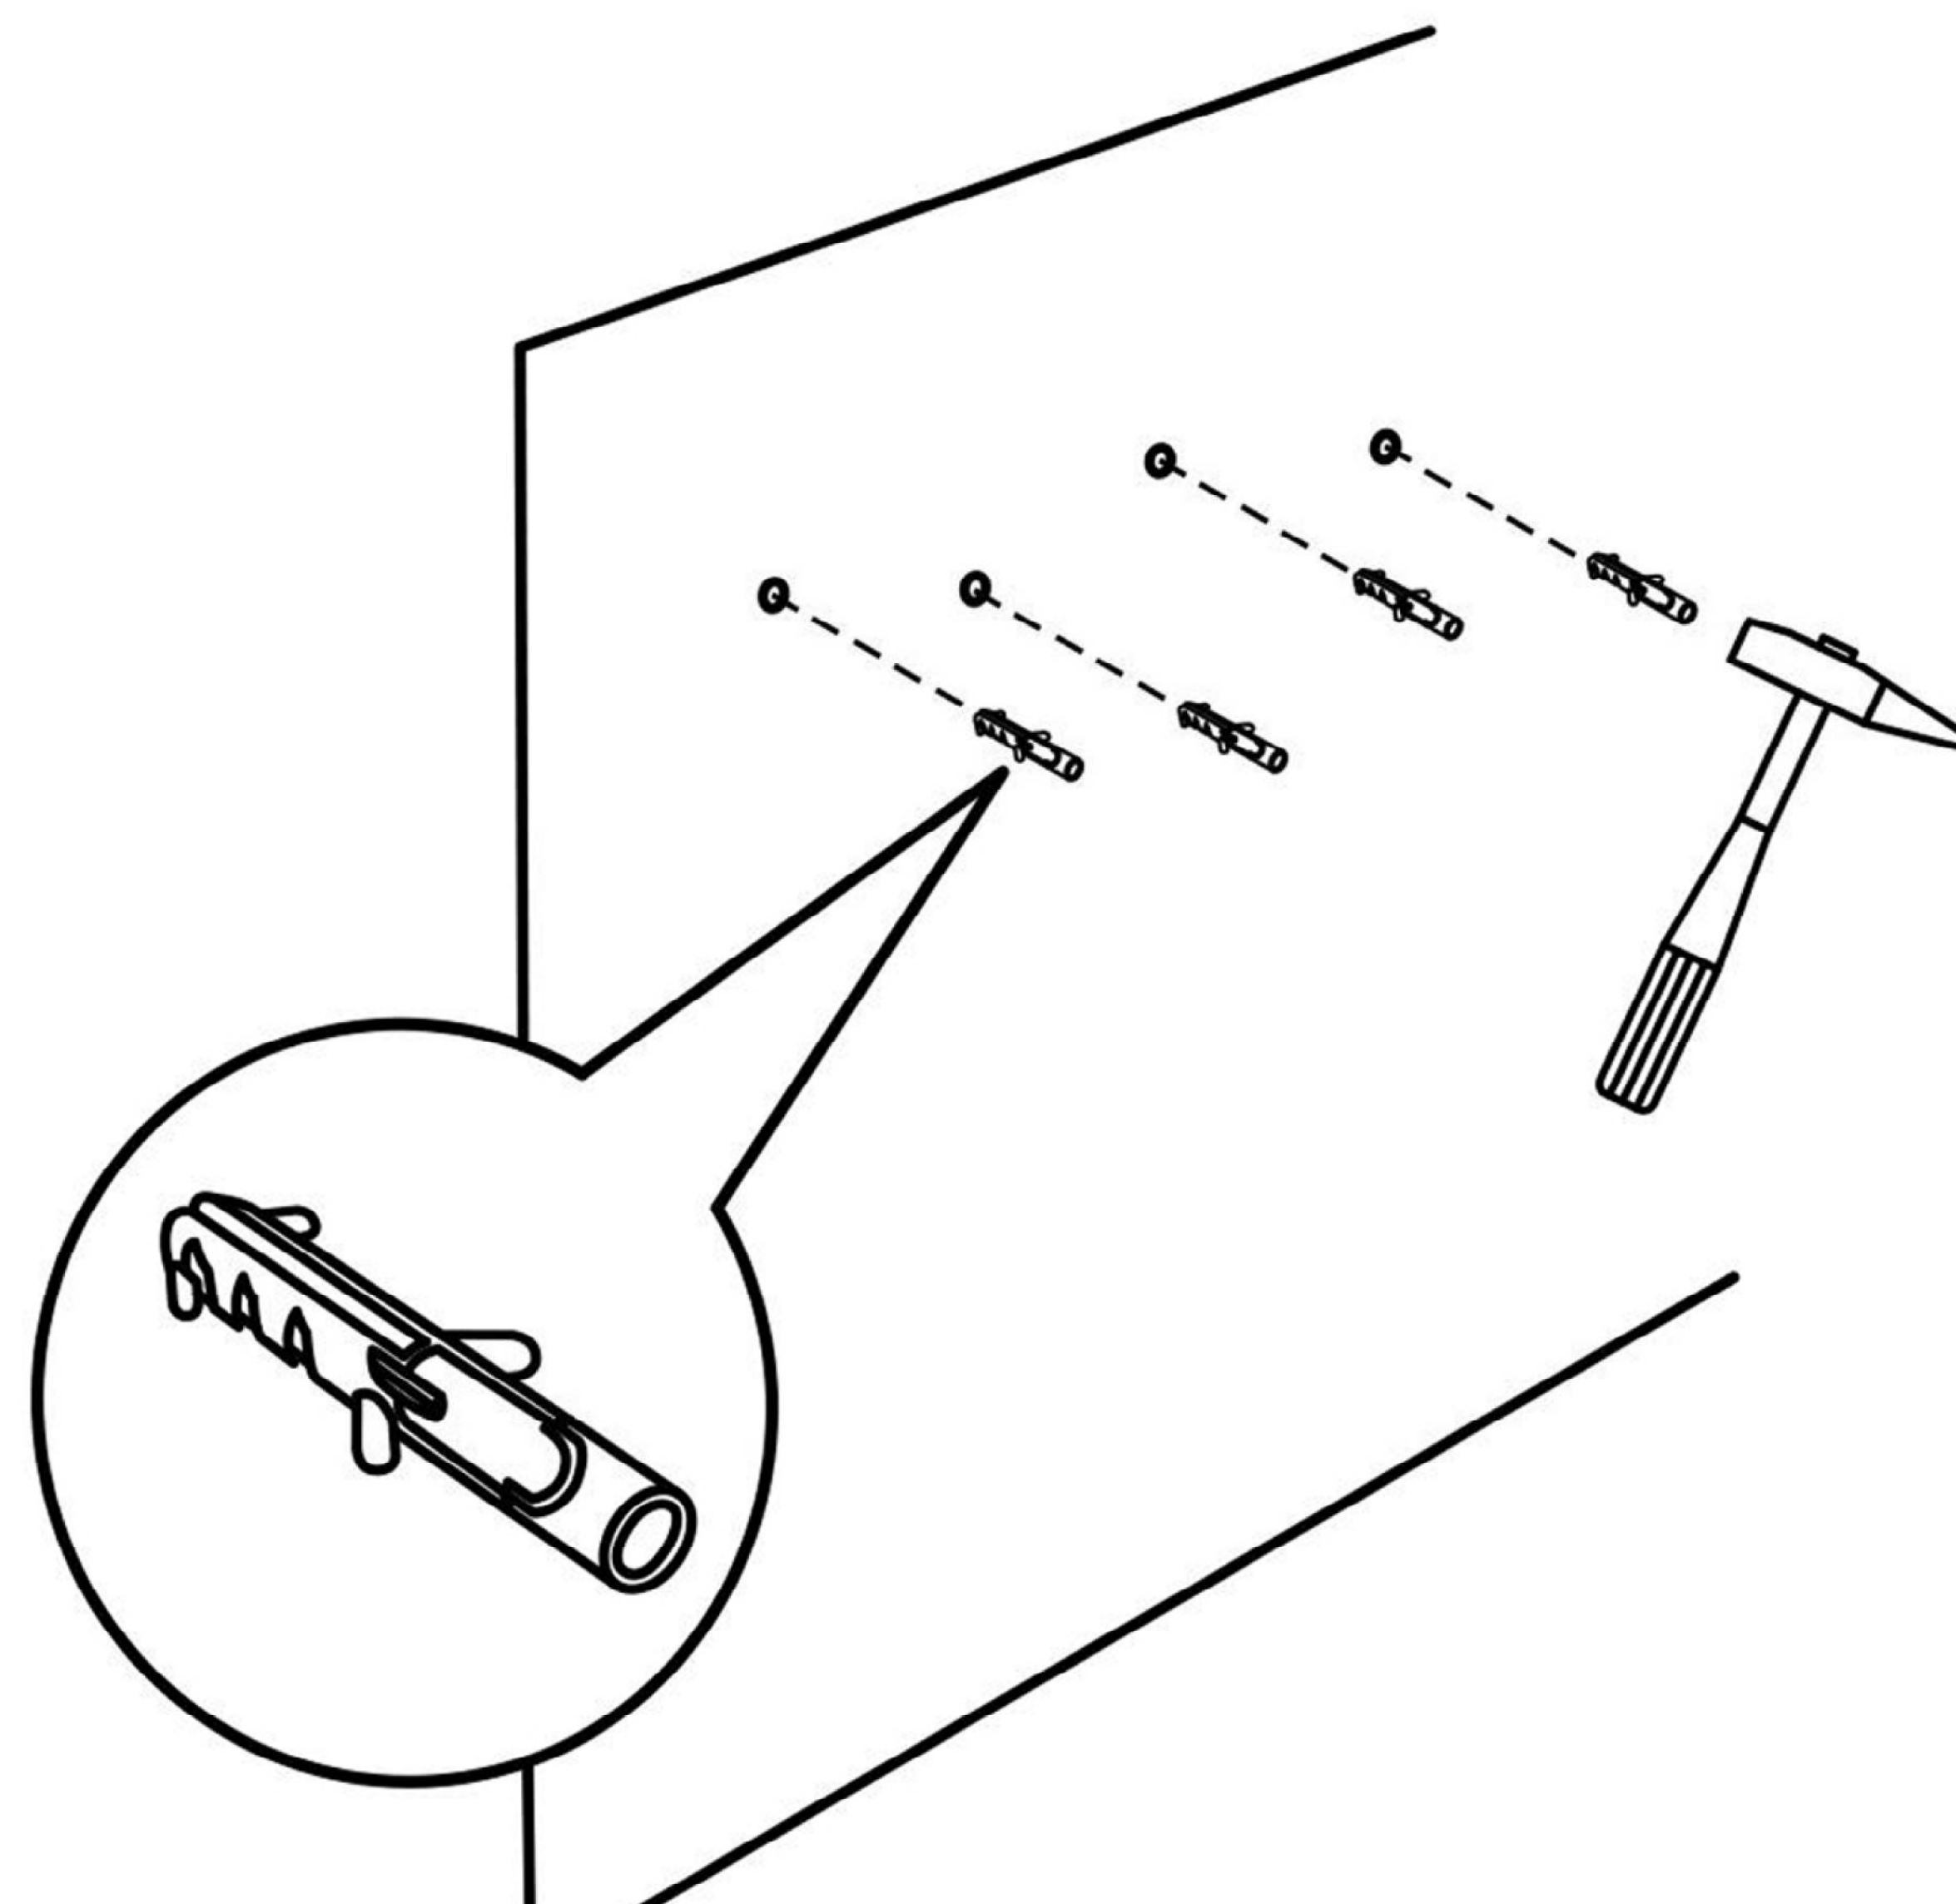

Installation Steps : 4

Hold the basin and use a spanner to lock the basin to the wall.

