


PIVOT SHOWER DOOR INSTALLATION MANUAL

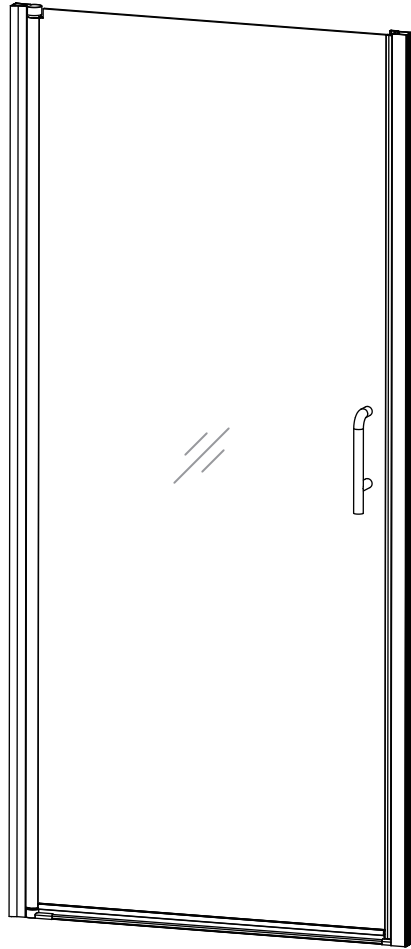

CONTACT US

Thank you for purchasing our products!

We're delighted to enhance your living space with our offerings.



If you encounter any issues or have questions during installation or usage, don't hesitate to reach out. Our dedicated support team is available 24/7 to assist you and ensure your complete satisfaction.

★ IMPORTANT SAFETY NOTICE

Before you start the installation, take the time to read these instructions thoroughly.


When drilling into walls, exercise extreme caution to avoid hitting any hidden pipes or electrical wires.

Remember, due to its weight, it's best to have two people for the installation process.

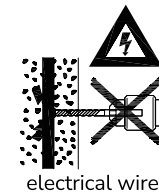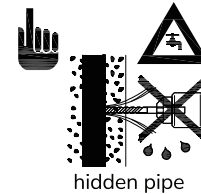


Scan the QR code to
watch the installation video


TOOLS REQUIRED

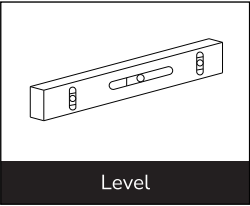


Level

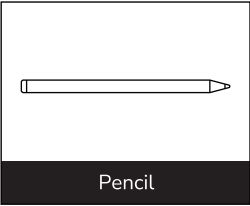

Pencil

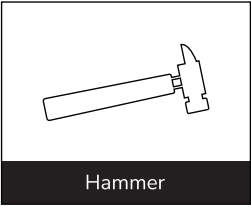


Hammer

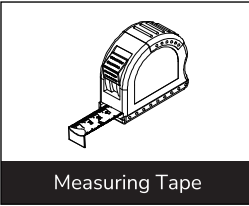


Measuring Tape




Utility Knife

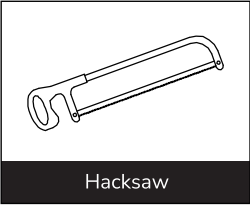


Hacksaw

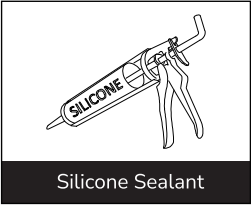


Silicone Sealant

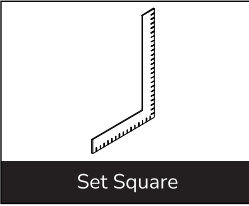

Set Square

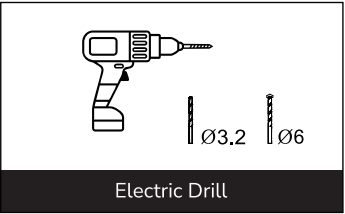


Electric Drill

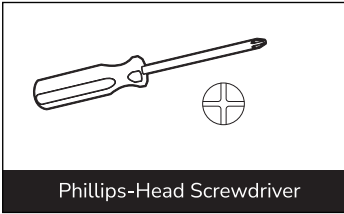


Phillips-Head Screwdriver




Safety Goggles

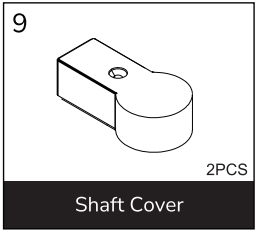


Shaft Cover

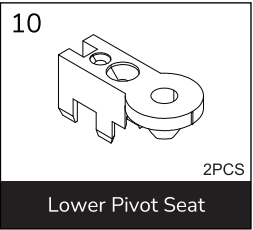


Lower Pivot Seat

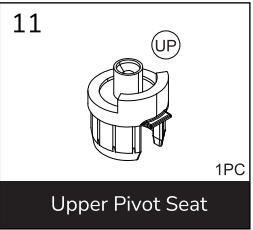


Upper Pivot Seat

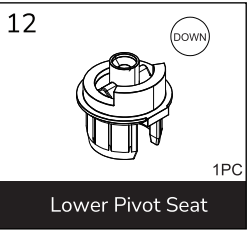


Lower Pivot Seat

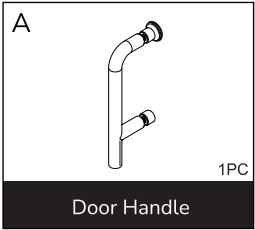


Door Handle

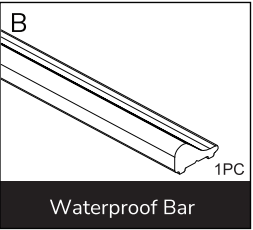


Waterproof Bar

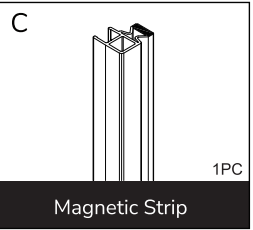


Magnetic Strip

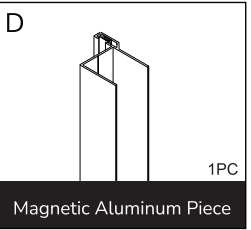


Magnetic Aluminum Piece

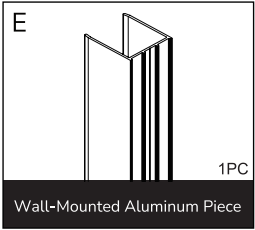


Wall-Mounted Aluminum Piece

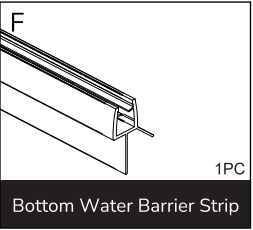

Bottom Water Barrier Strip

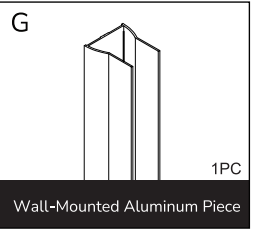


Wall-Mounted Aluminum Piece

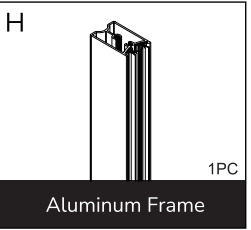


Aluminum Frame


ACCESSORIED LIST

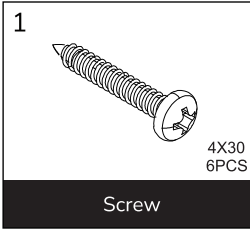


Screw

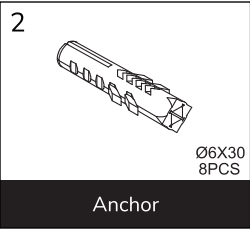


Anchor

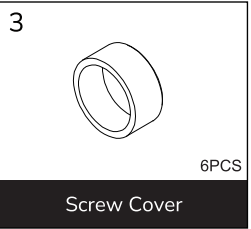


Screw Cover

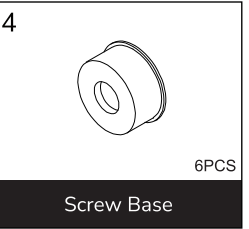


Screw Base

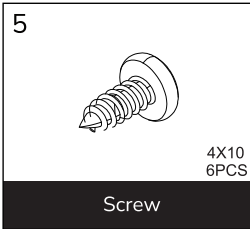


Screw

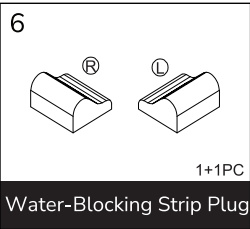


Water-Blocking Strip Plug

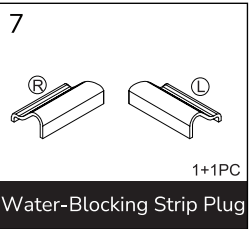

Water-Blocking Strip Plug

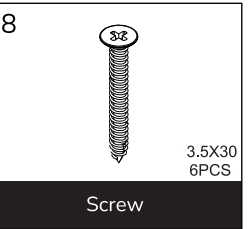


Screw

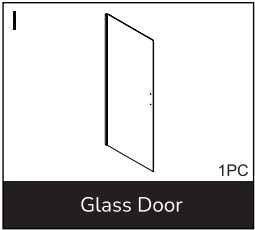


Glass Door

ASSEMBLY DRAWING

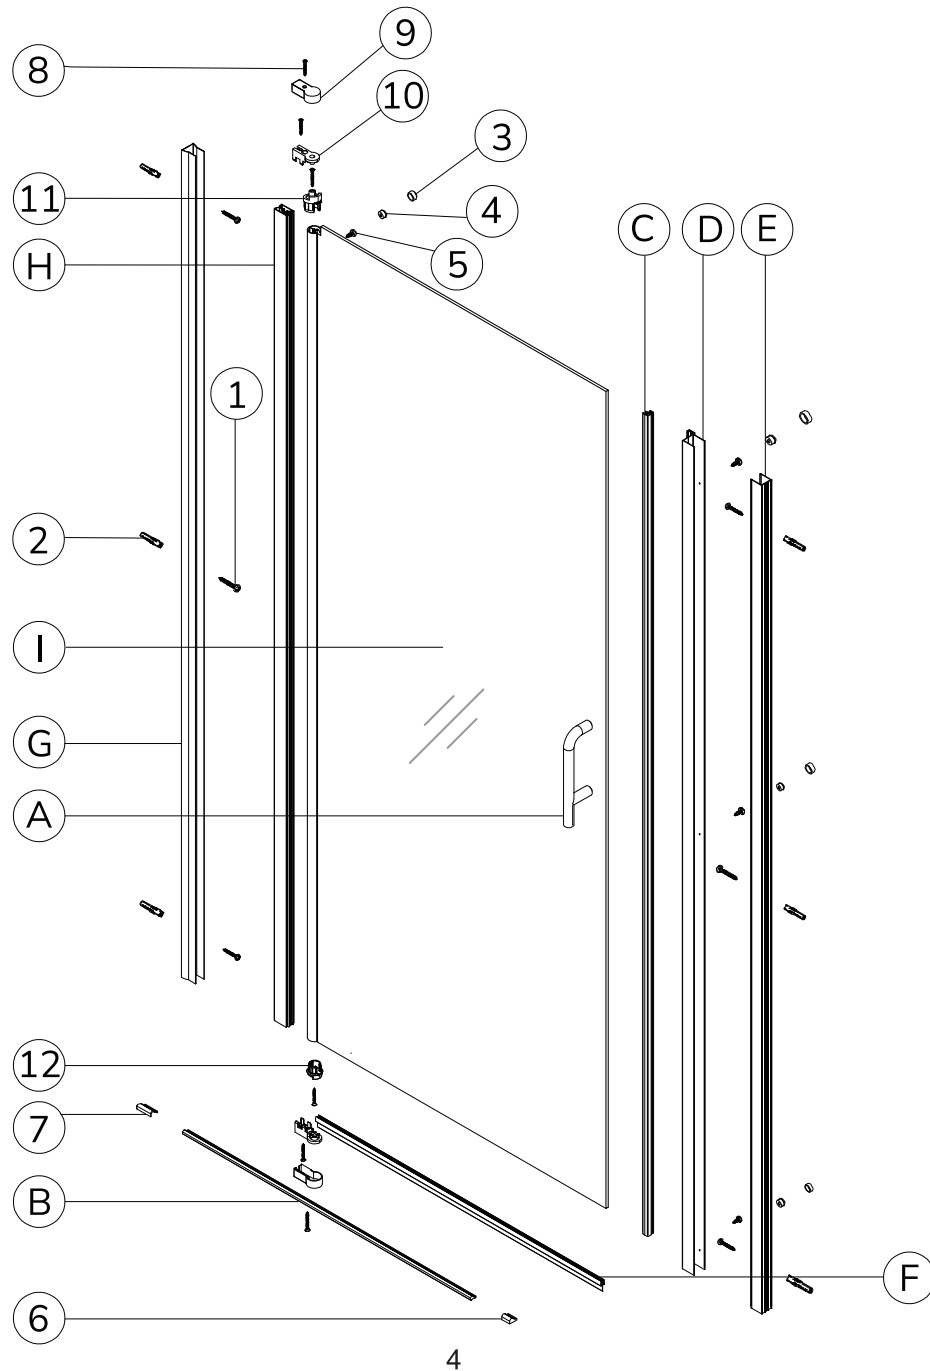


Before your start

decide on the door - opening direction that suits your needs: right open or left open:


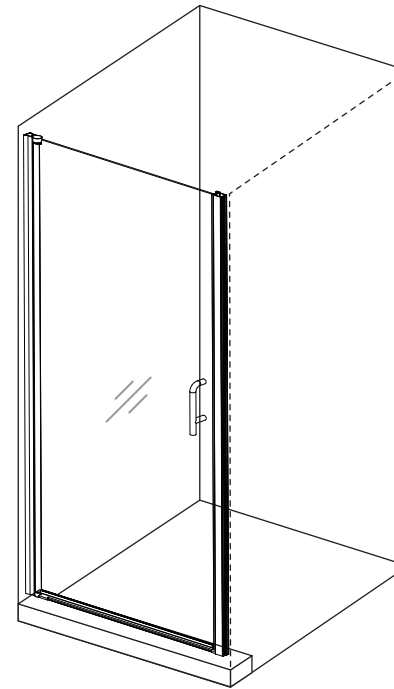


Left Pivot

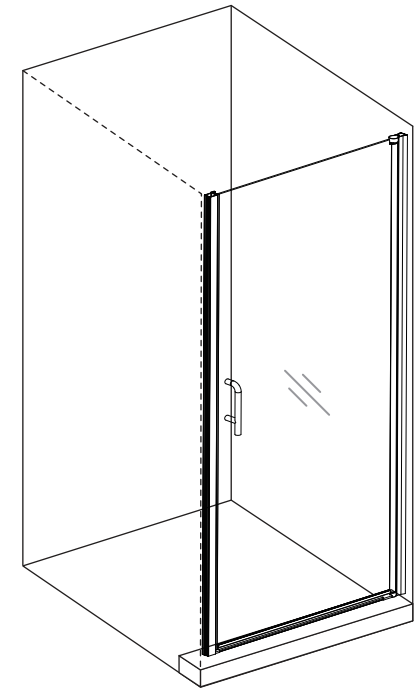

Right Pivot

1

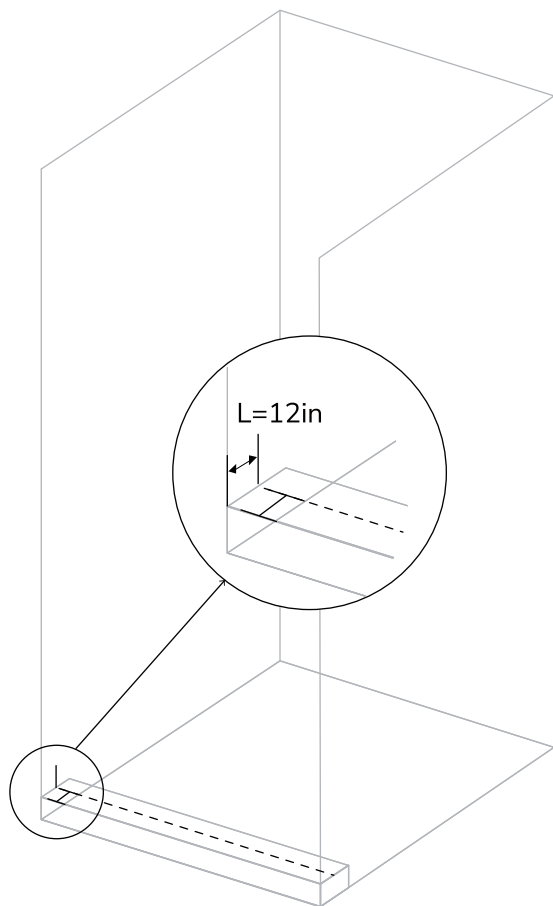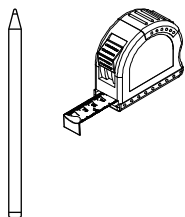


Measure and mark the distance 'L' from the wall - mounted aluminum component to the outer edge on both the left and right walls.




Tip: We recommend using a pencil so this can be easily removed.

2

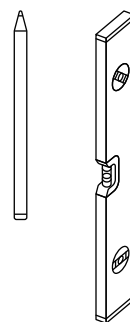

Ⓒ




Ⓔ

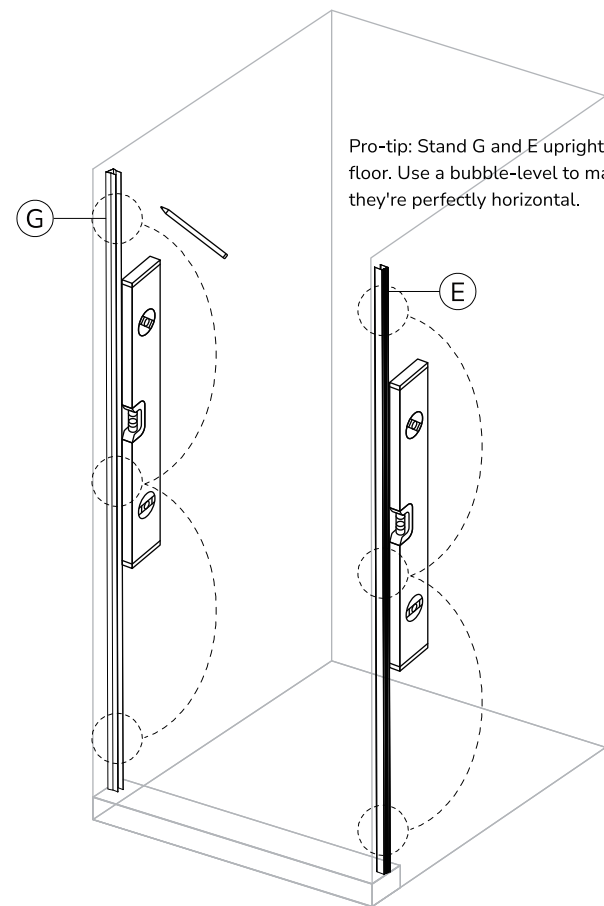

Trace the positions of the holes with a pencil. For a left pivot door, place component Ⓒ on the left side and component Ⓔ on the right side.




For a right pivot door, place component Ⓒ on the right side and component Ⓔ on the left side.

3

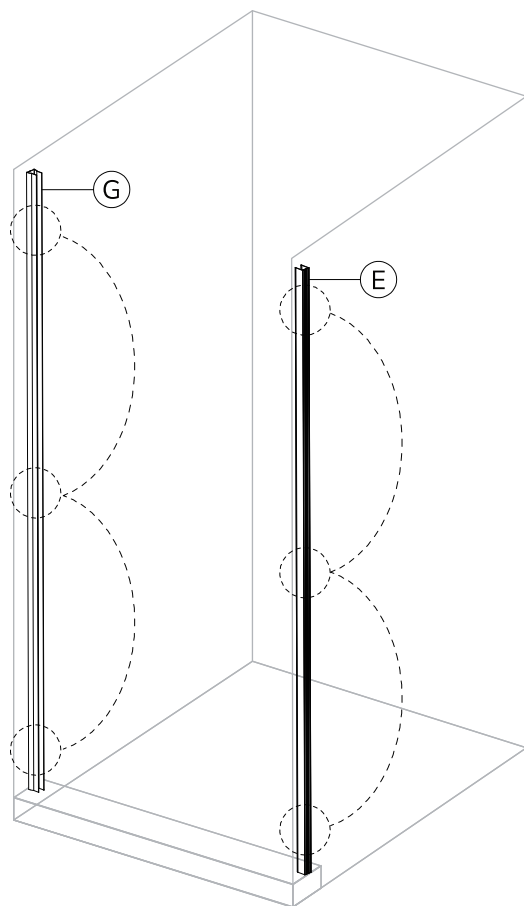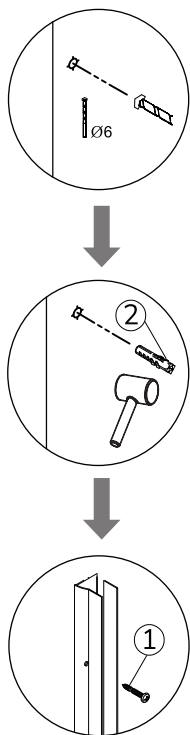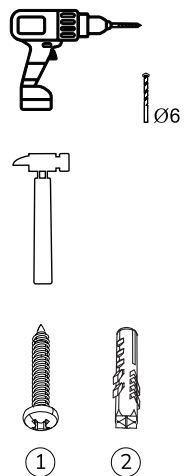



Use an electric drill to drill holes at the positions marked with a pencil in the previous step. Insert the anchors (2) into the wall holes, then screws (1) into place.

4

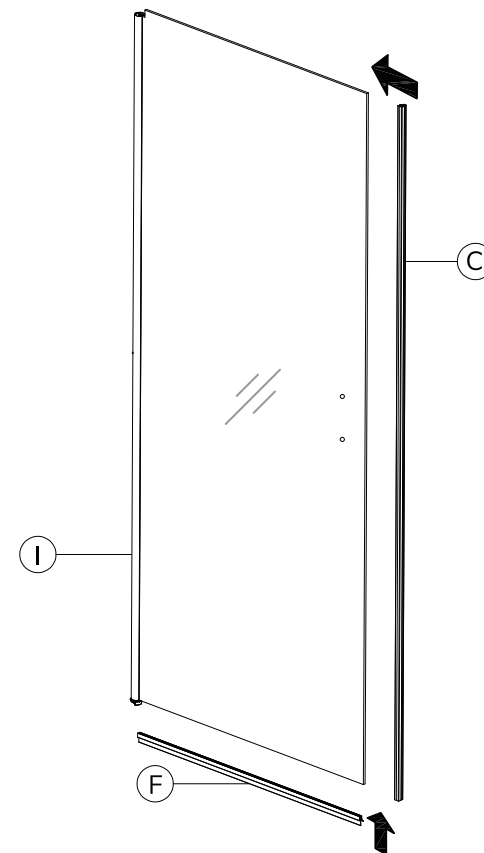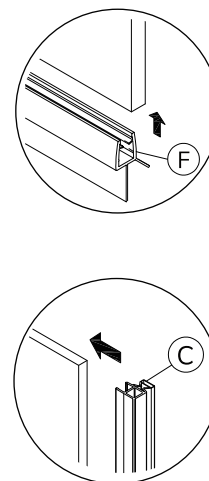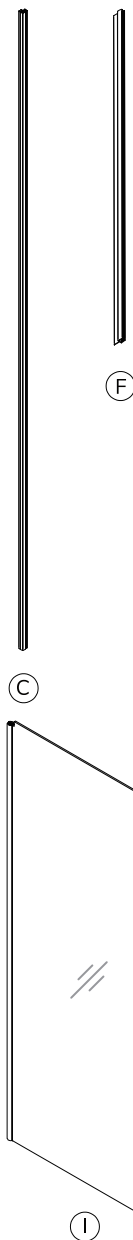



Install the bottom water barrier strip (F) on the lower side of the glass door (I).
Install magnetic stripe (C) on the glass door (I).

5

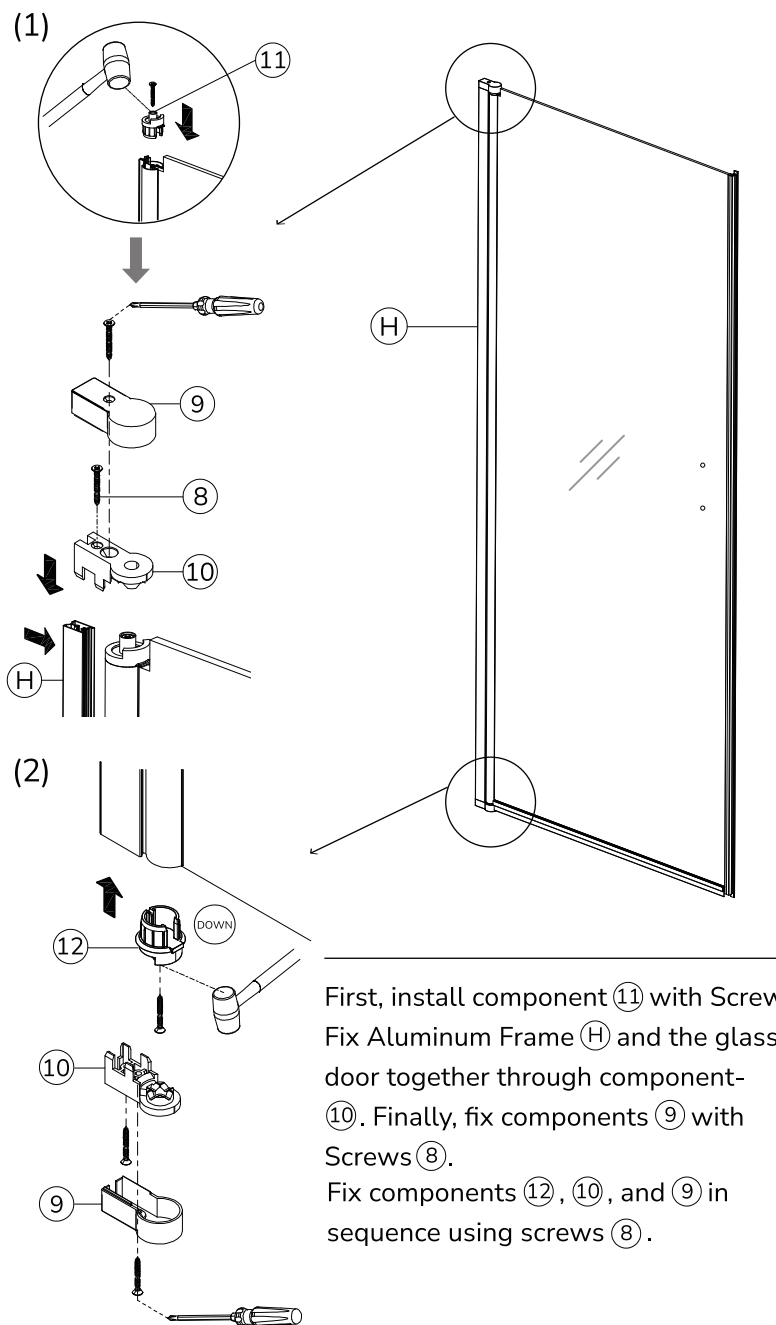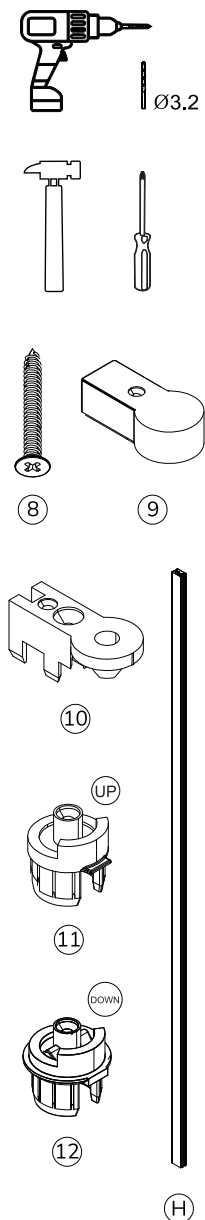






First, install component ⑪ with Screw ⑧. Fix Aluminum Frame ⑨ and the glass door together through component-⑩. Finally, fix components ⑨ with Screws ⑧. Fix components ⑫, ⑩, and ⑨ in sequence using screws ⑧.

6

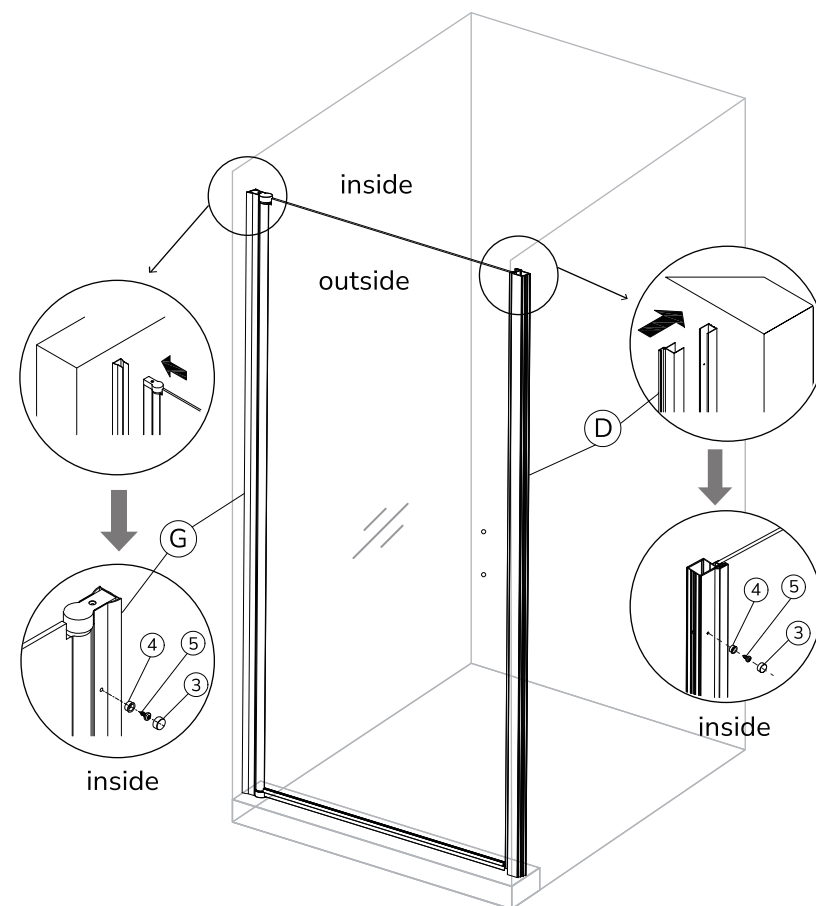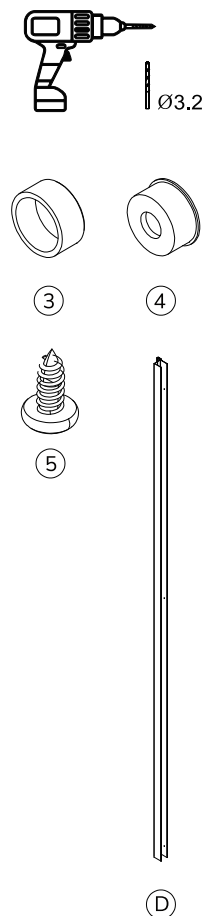




- 1、 Attach the side of component ⑥ that's away from the door handle.
- 2、 Fasten the side of component ⑦ that's near the door handle.
- 3、 Drill holes in the upper, middle, and lower parts inside components ⑦ and ⑥.
- 4、 Insert ④ sets into ⑤, secure the screws in ⑦ and ⑥ with the electric drill, and then place ③ sets over the screws.

7

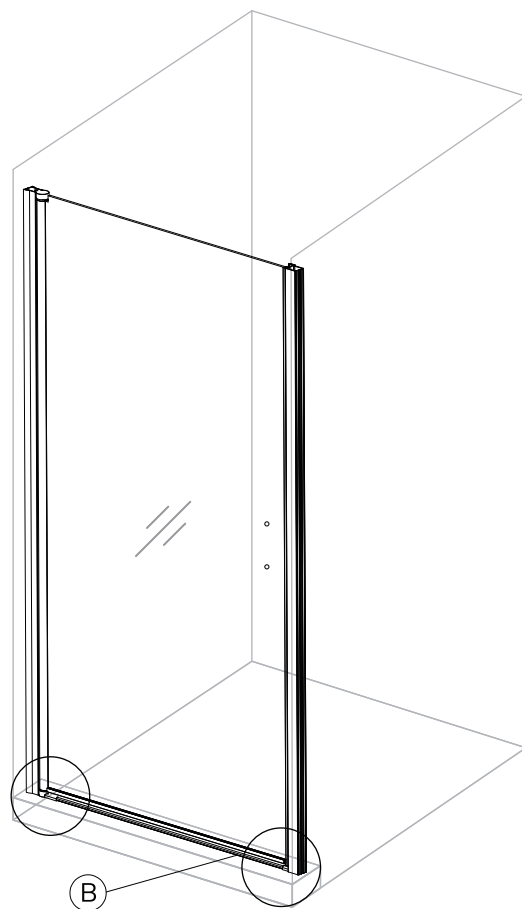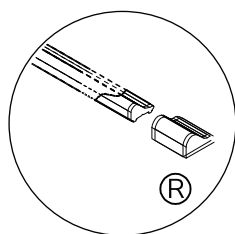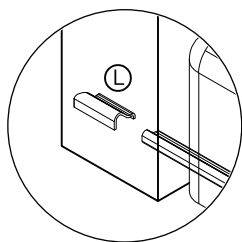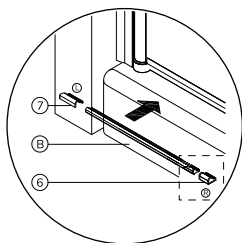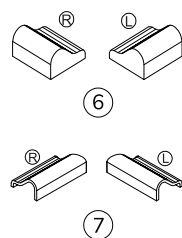


The accessory kit comes with two pairs of water-blocking strip plugs. Pick the right ones according to the door - opening direction.

8

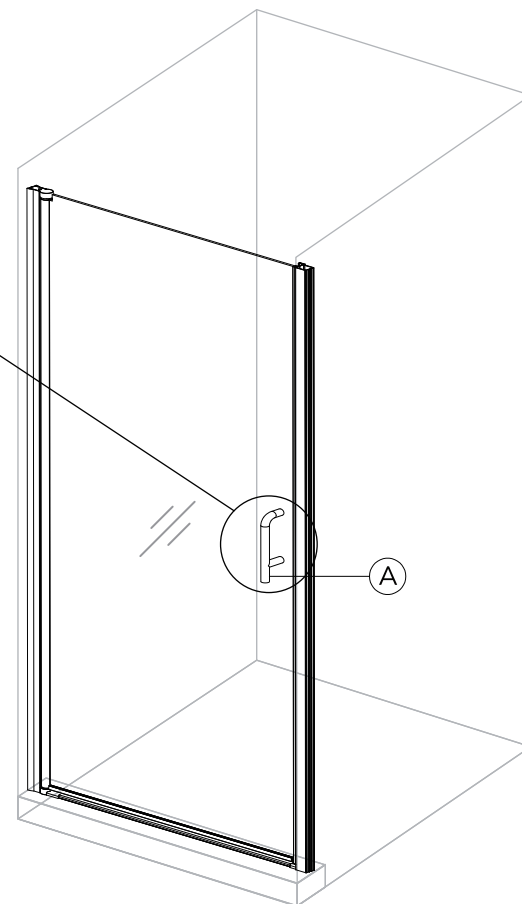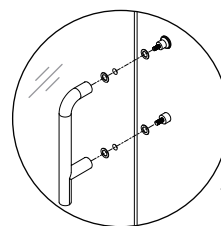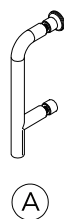

Install the door handle (A) following standard fastening procedures.

9

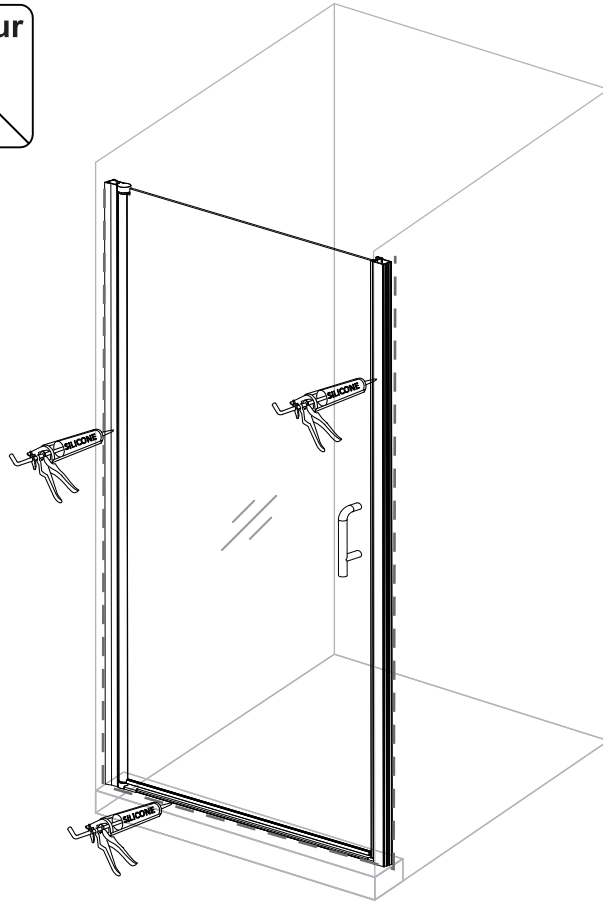

Apply a bead of silicone sealant along the left, right, and bottom edges of the door. Let it cure for 24 hours. During this time, refrain from using the showerhead.



Scan the QR code to watch the installation video