


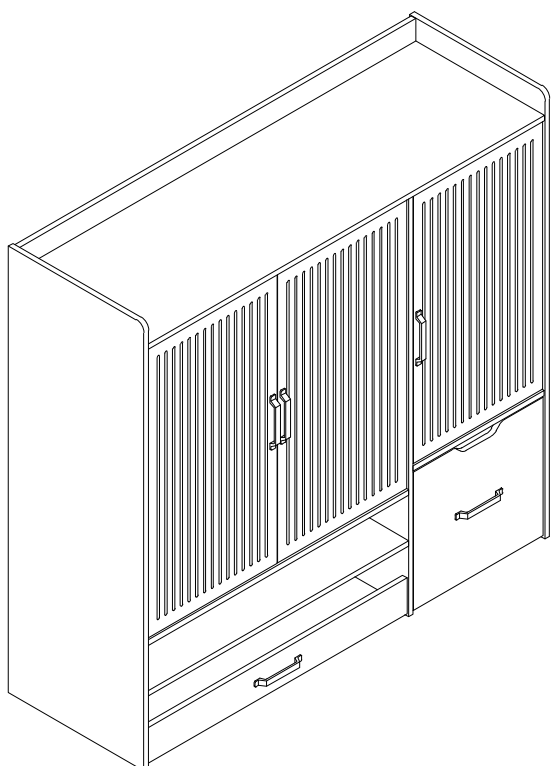


Installation Video Guide






















Scan QR Code to Extend Warranty

















Contact After-Sales Support

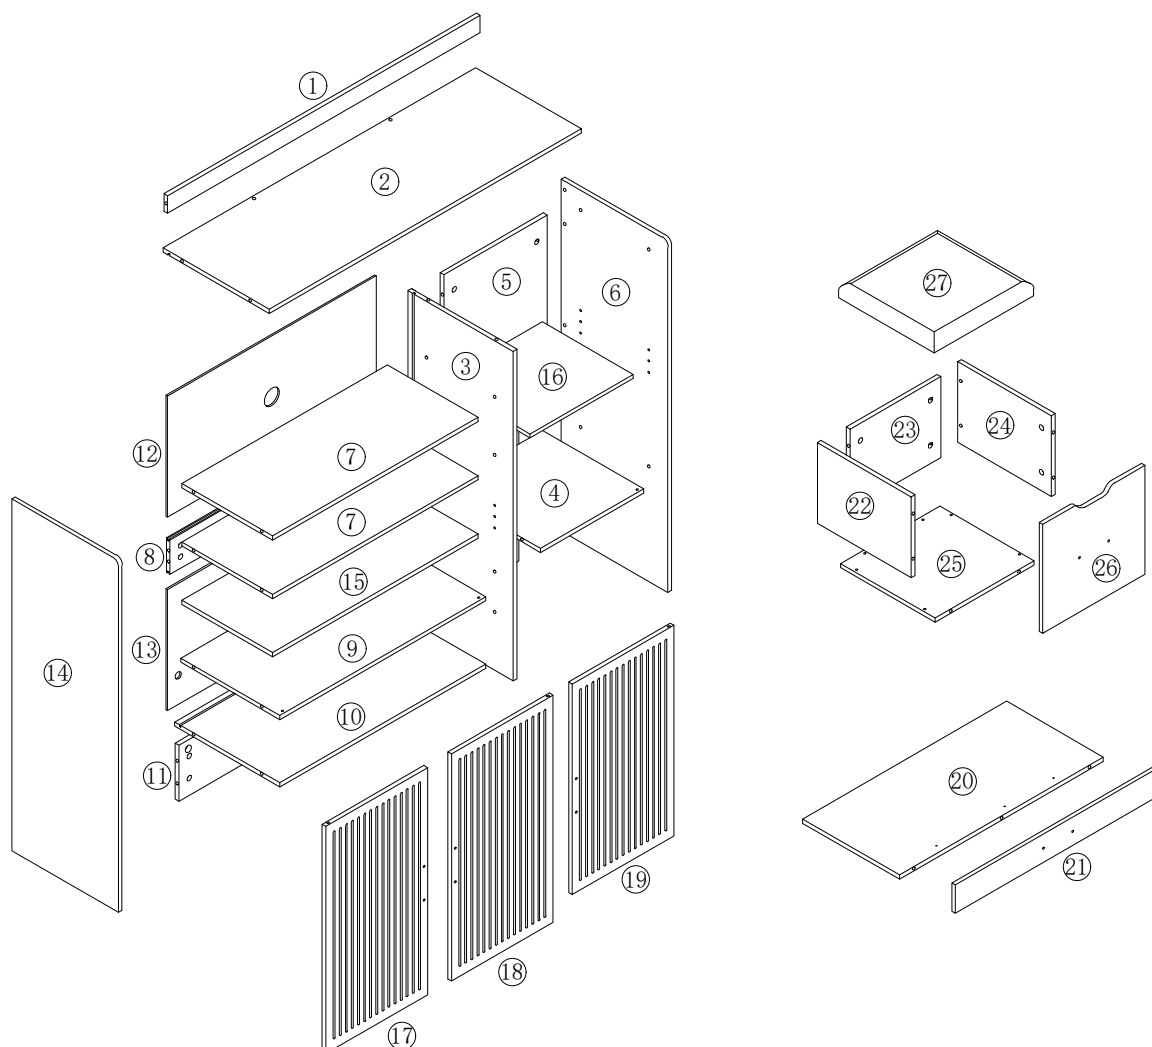

ASSEMBLY INSTRUCTION

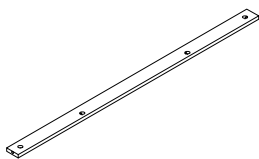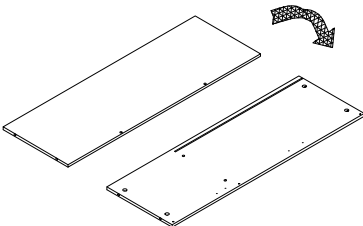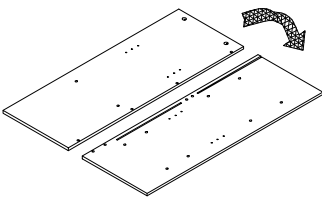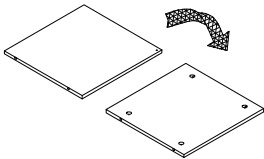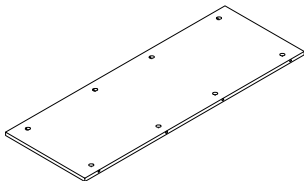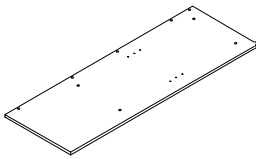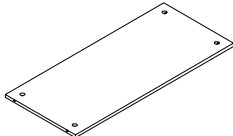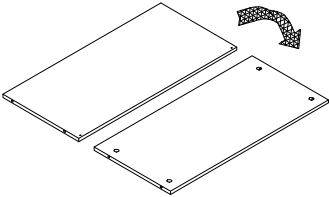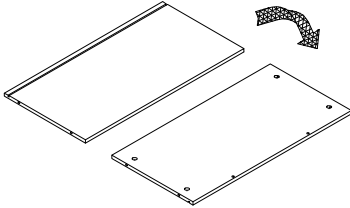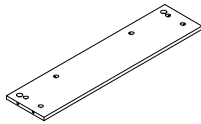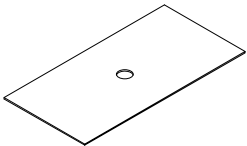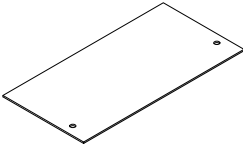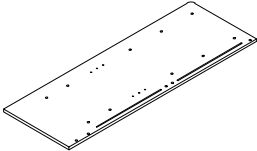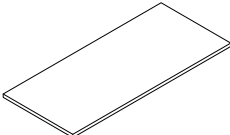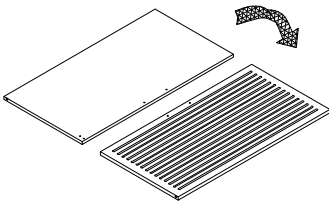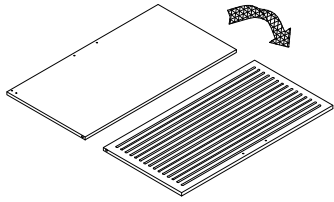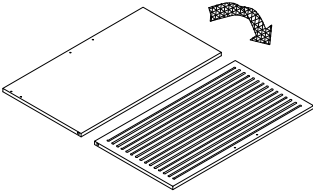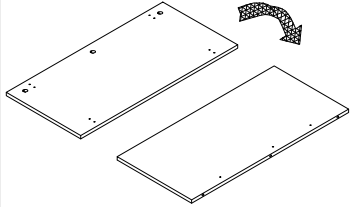① 1PC 	② 1PC 	③ 1PC 	④ 1PC 
⑤ 1PC 	⑥ 1PC 	⑦ 2PCS 	⑧ 1PC 
⑨ 1PC 	⑩ 1PC 	⑪ 1PC 	⑫ 1PC 
⑬ 1PC 	⑭ 1PC 	⑮ 1PC 	⑯ 1PC 
⑰ 1PC 	⑱ 1PC 	⑲ 1PC 	⑳ 1PC 

ASSEMBLY INSTRUCTION



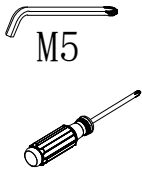

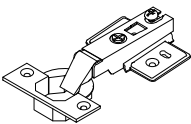


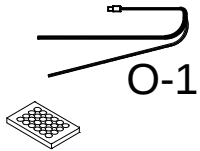
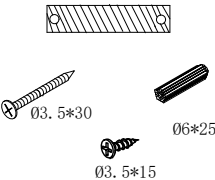
②1 1PC 	②2 1PC 	②3 1PC 	②4 1PC 
②5 1PC 	②6 1PC 	②7 1PC 	 M5
A 61PCS  M6*40	B 61PCS  Ø15*9.5	C 52PCS  Ø3.5*12	D 6PCS 
E 8PCS 	F 11PCS  Ø5*15	G 3PCS  Φ 7*18	H 5sets  96# M4*16
I 2PCS 	J 6PCS  M5*38	K 8PCS  30*12*13	L 3PCS  29*29*16
M 1PC  54*23*12	N 1PC  87*26*15	O 1set  O-1 O-2	P 1set  Ø3.5*30 Ø6*25 Ø3.5*15

Step 1






A 61PCS



M6*40

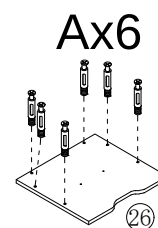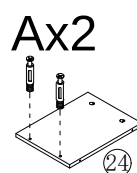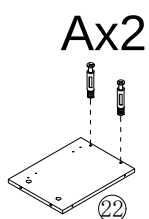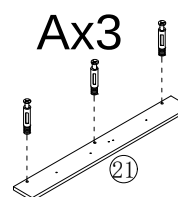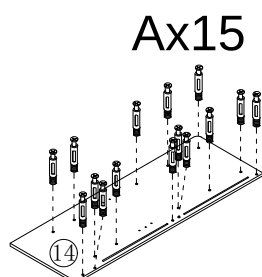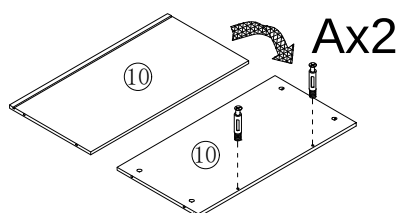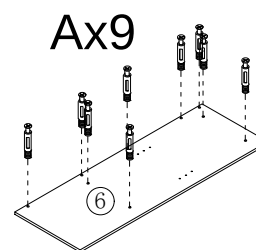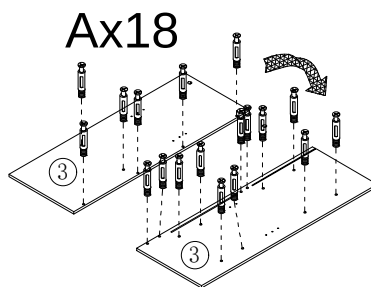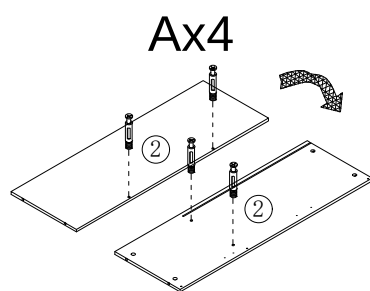

Step 2

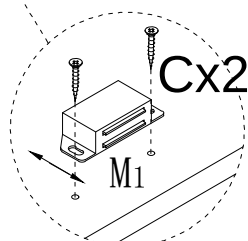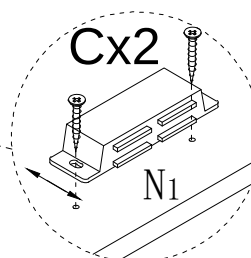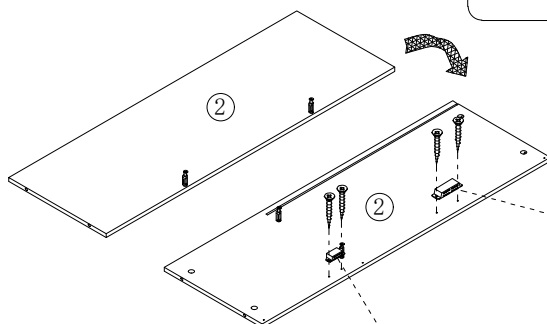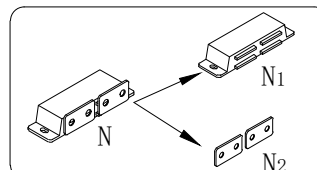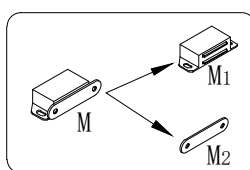

C 4PCS



Ø3.5*12

M1 1PC



54*23*12

N1 1PC




87*26*15

ASSEMBLY INSTRUCTION

Step 3

B 2PCS


 Ø15*9.5

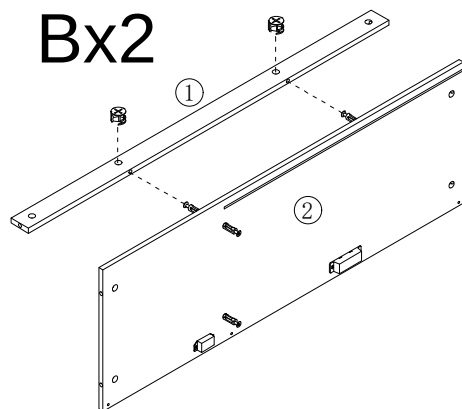

Step 4

B 2PCS


 Ø15*9.5

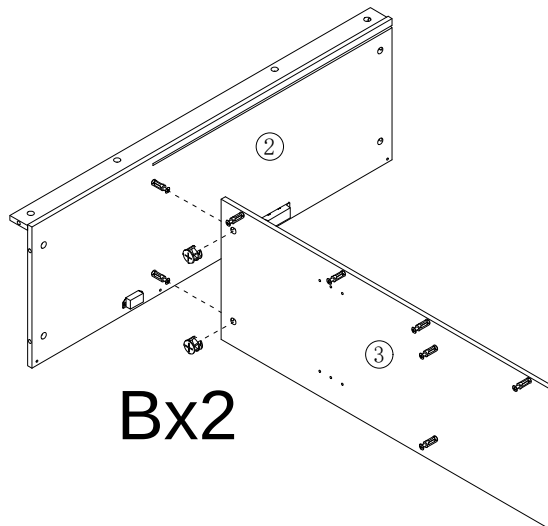

Step 5

B 2PCS


 Ø15*9.5

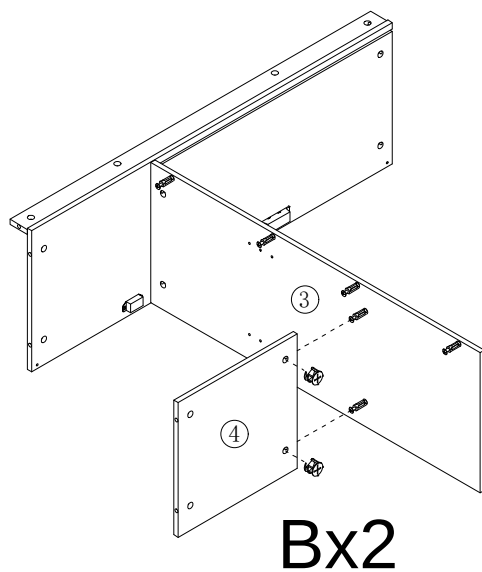

Step 6

B 4PCS


 Ø15*9.5

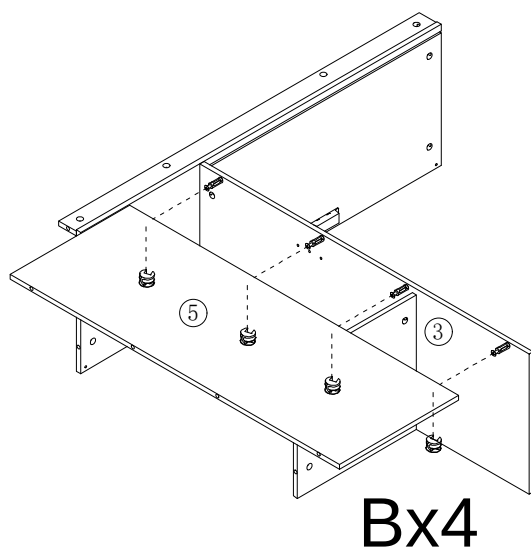

Step 7

B 9PCS


 Ø15*9.5

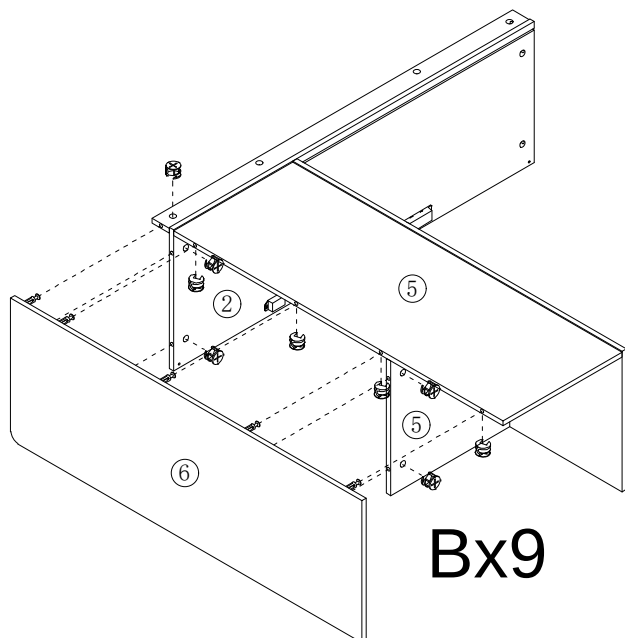

Step 8

B 2PCS


 Ø15*9.5

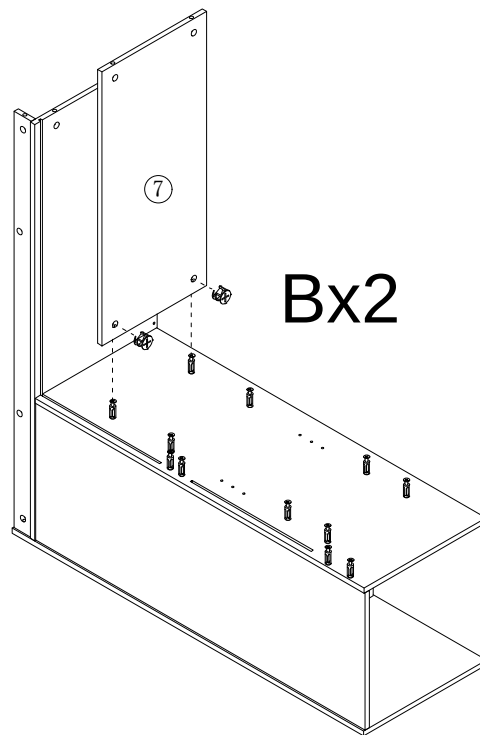

Step 9

B 2PCS


 Ø15*9.5

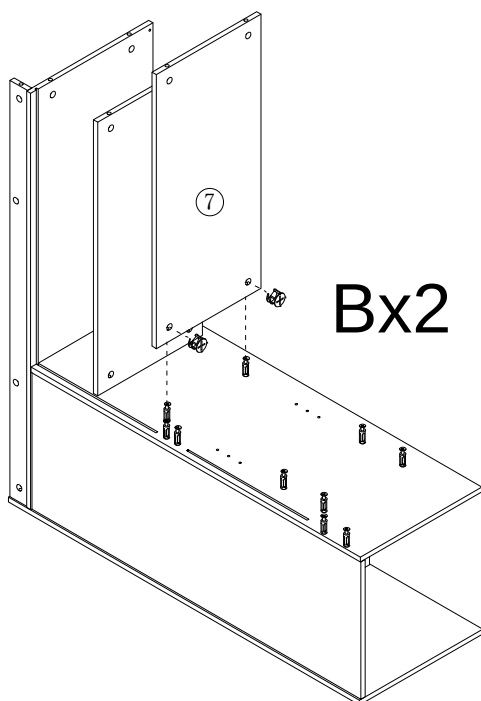

Step 10

B 4PCS


 Ø15*9.5

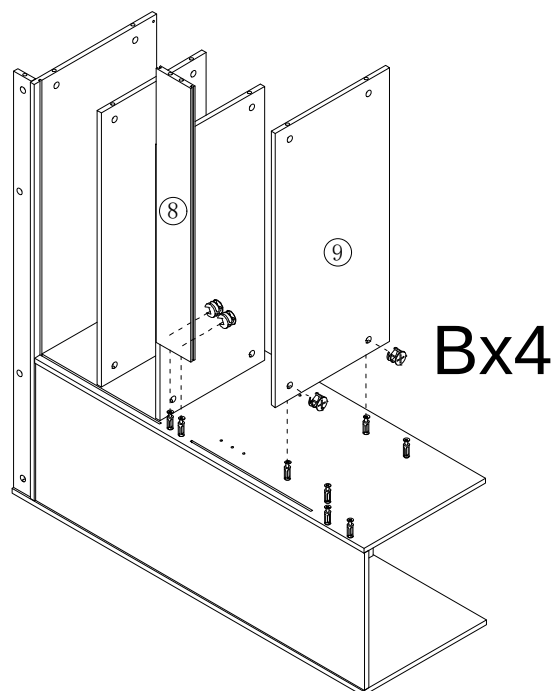

Step 11

B 2PCS


Ø15*9.5

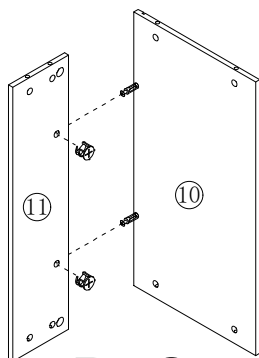**Bx2**

Step 12


B 4PCS

Ø15*9.5

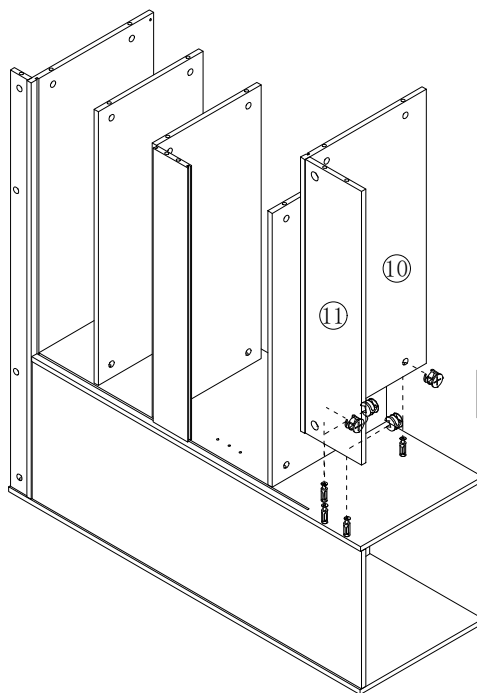**Bx4**

Do not lock accessory B in this step for now. Lock accessory B after installation in step 13. Thank you


Step 13

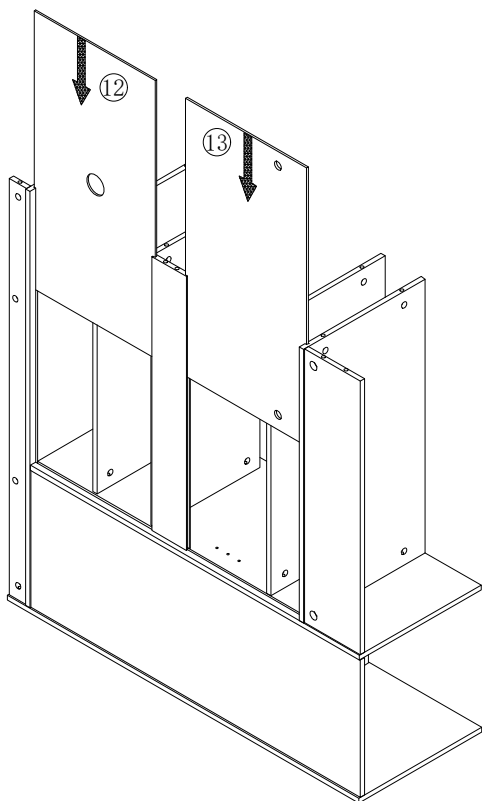

Step 14


B 15PCS

Ø15*9.5

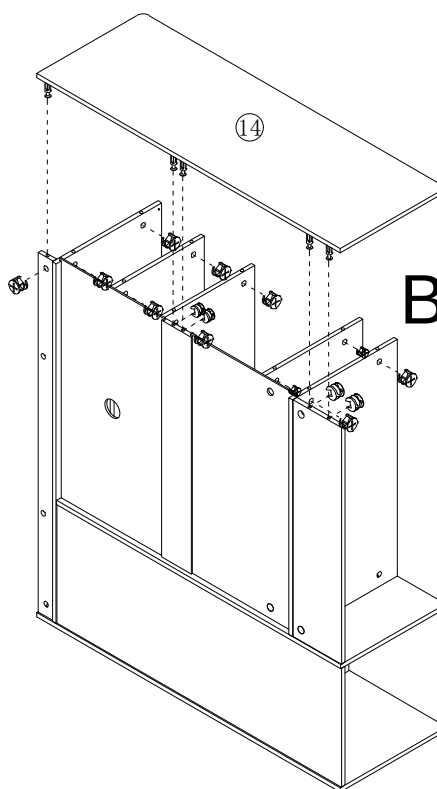**Bx15**

Step 15

D 6PCS

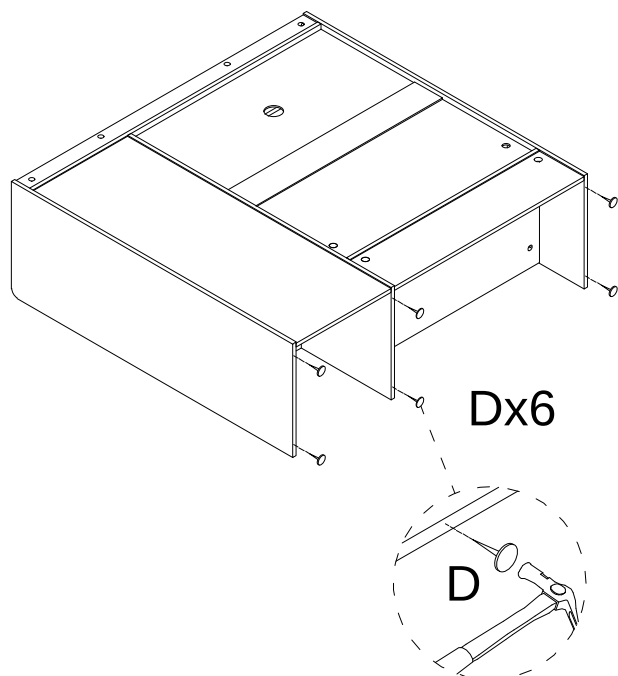



Step 16

C 8PCS



Ø3.5*12

E 8PCS

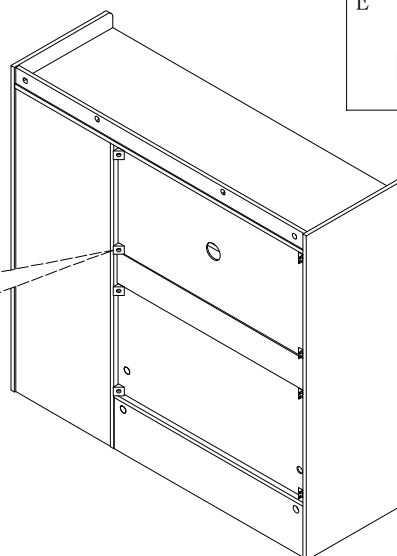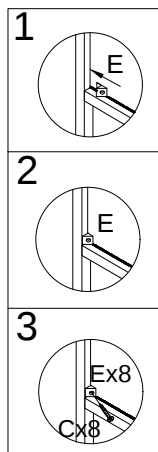


Step 17

O 1set




O-2

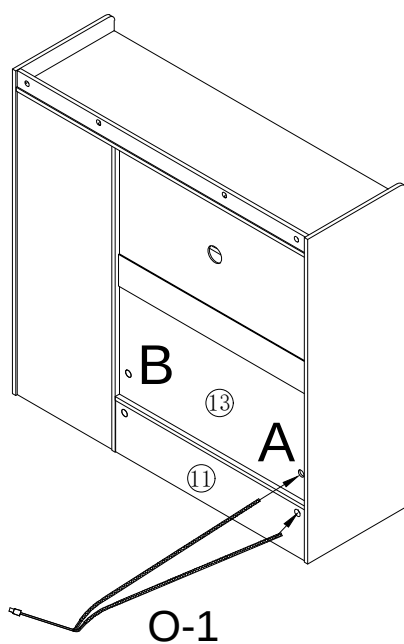


Please choose to insert accessory O-1 from point A or B according to your own needs.


Step 18

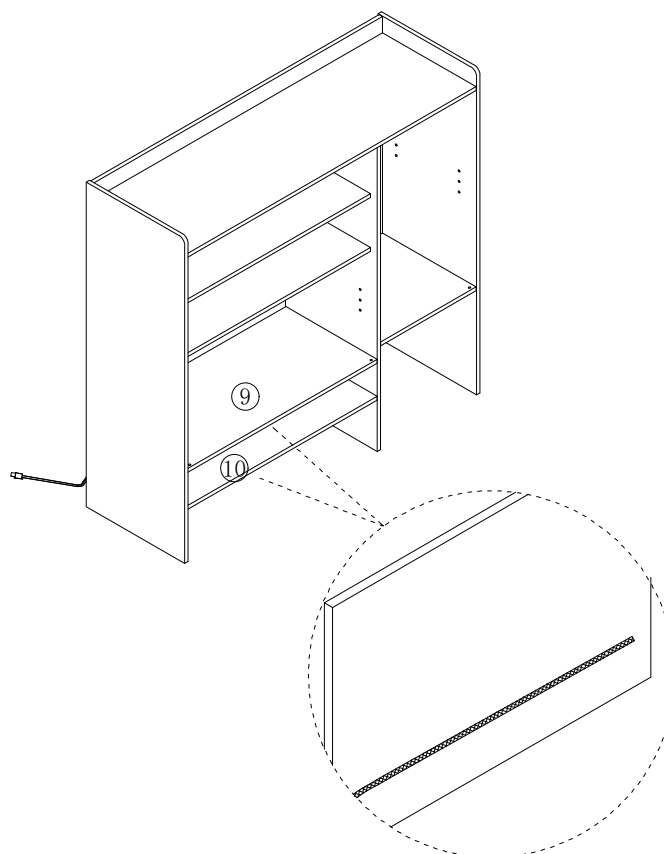


Step 19

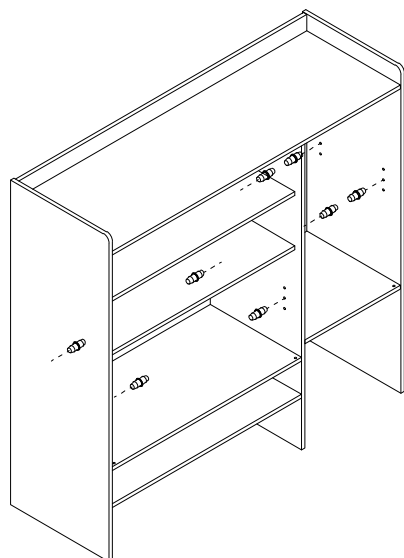


Fx8

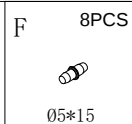

Step 20

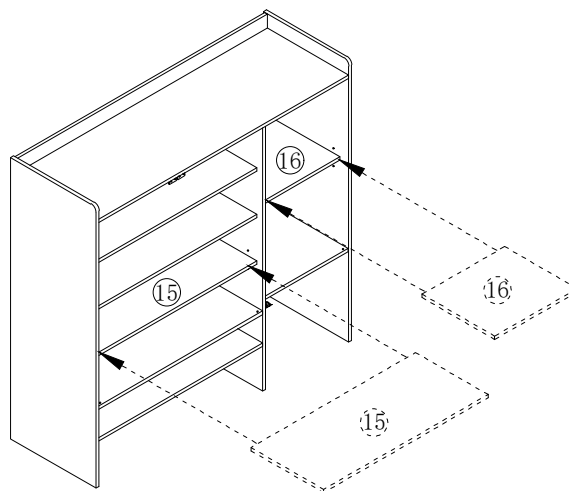


Step 21

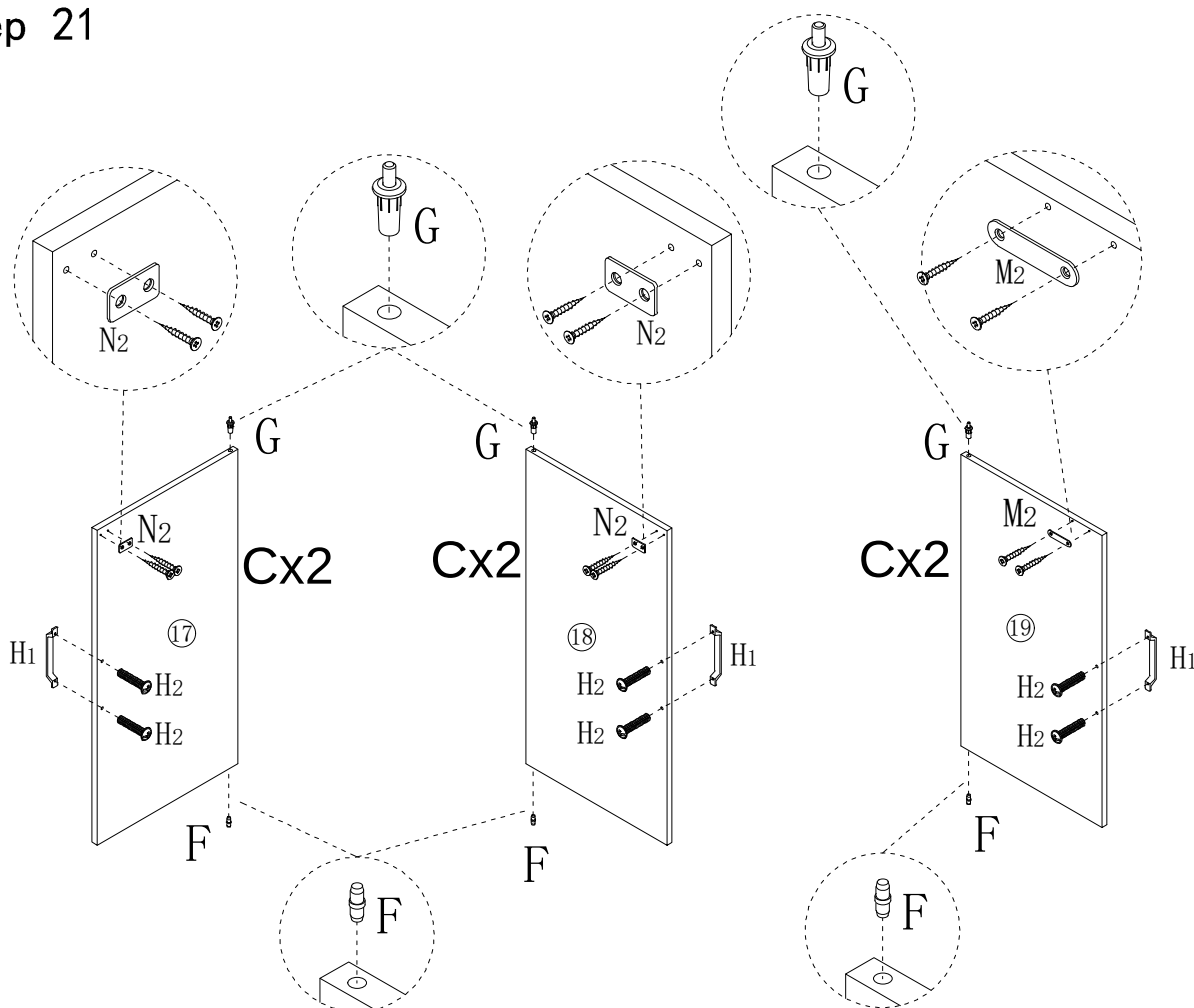


C	6PCS
	Ø3.5*12
H	3sets
H ₁	H ₂
96#	M4*16
F	3PCS
	Ø5*15
G	3PCS
	φ 7*18
M2	1PC
N2	2PCS


Step 22

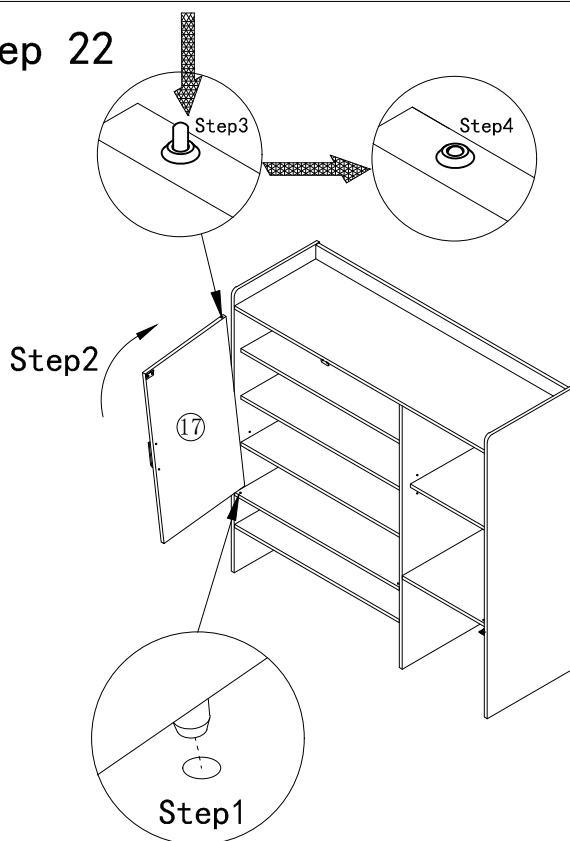


Step 23

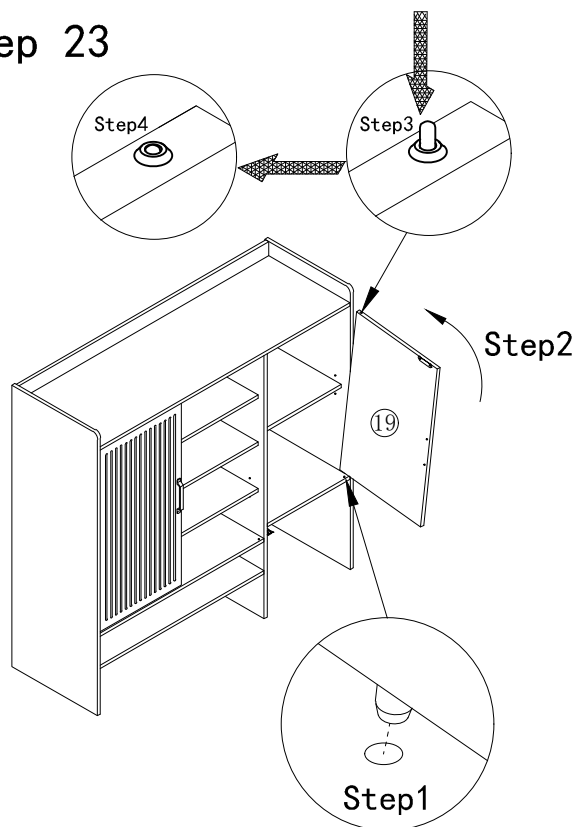

Step 24

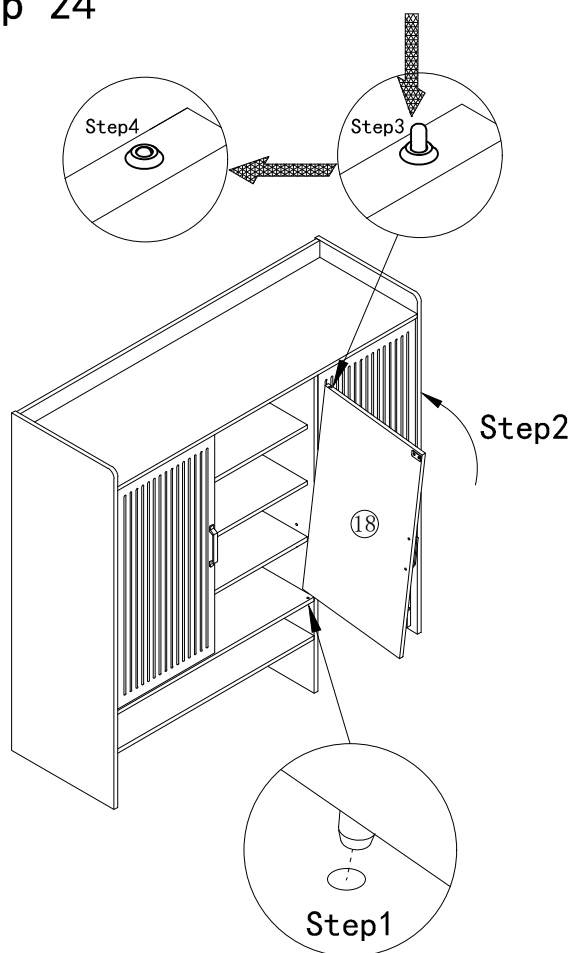



Step 25

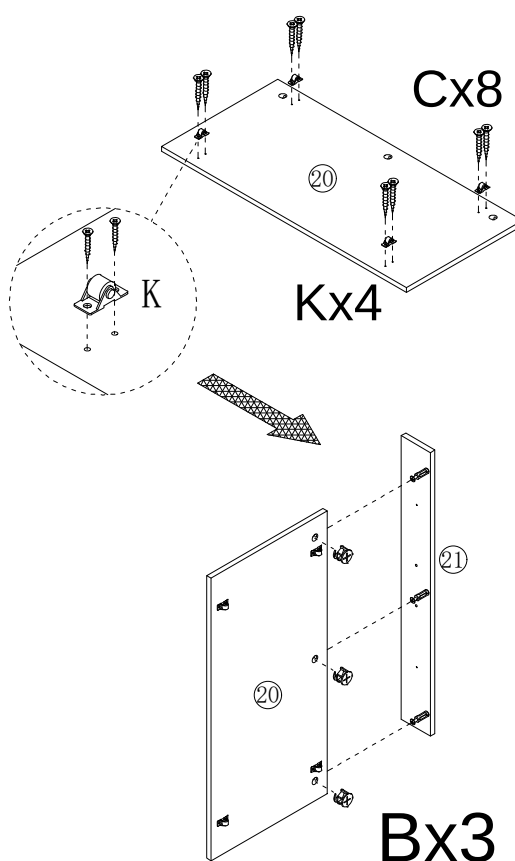

B	3PCS
	
	Ø15*9.5
C	8PCS
	
	Ø3.5*12
K	4PCS
	

ASSEMBLY INSTRUCTION

Step 26

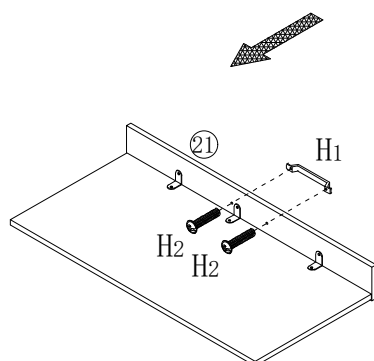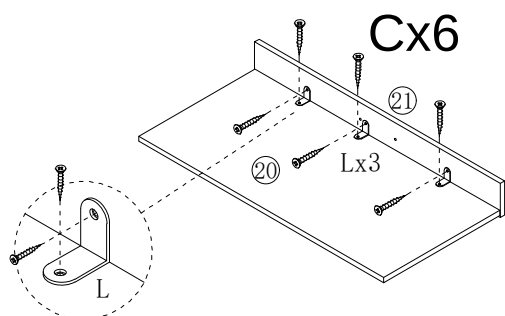

C 6PCS



Ø3.5*12

H 1sets




96# M4*16


L 3PCS



Step 27

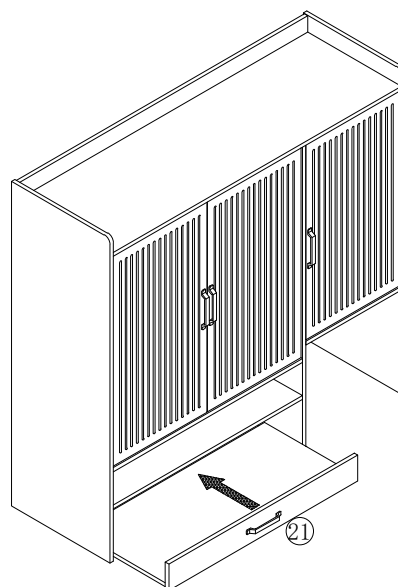

Step 28

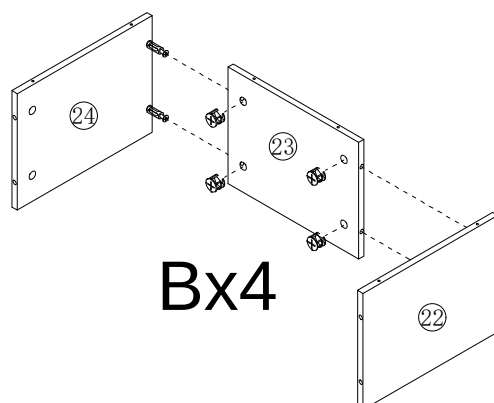


Bx4

B 4PCS



Ø15*9.5

Step 29

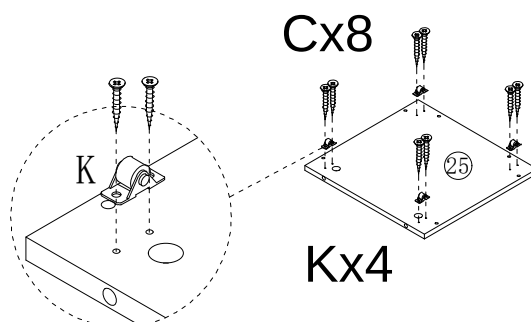

Cx8

Kx4

C 8PCS



Ø3.5*12


K 4PCS



J 6PCS




M5*38

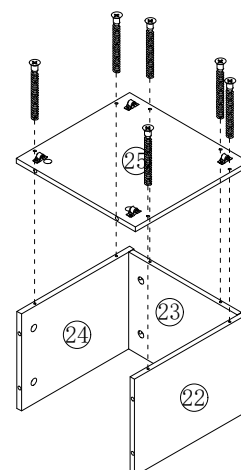

Jx6

Step 30

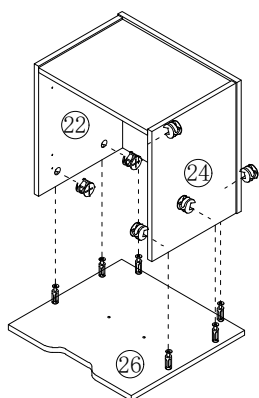


Bx6

B 6PCS




Ø15*9.5


H 1sets



96# M4*16




H1

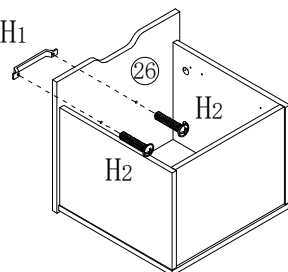

H2

Step 31

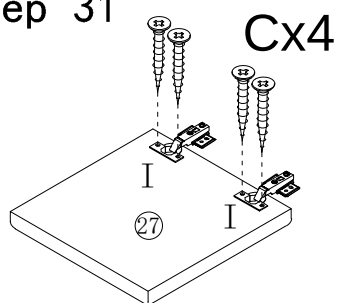



Cx4

C 12PCS





Ø3.5*12

I 2PCS

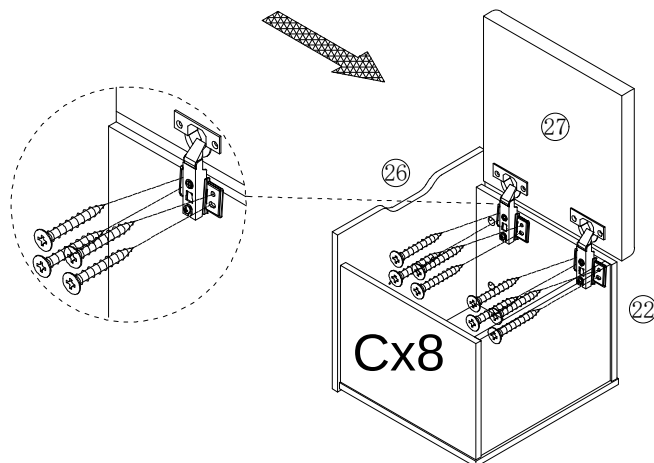



Cx8

Step 32

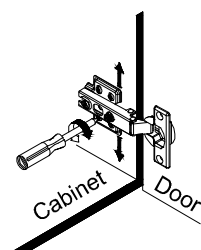
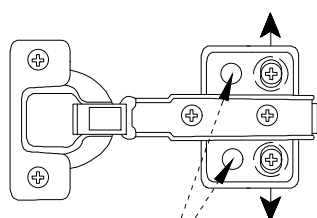


Cabinet Door

These two screws will be locked after the door panel is adjusted up and down.

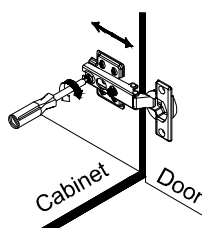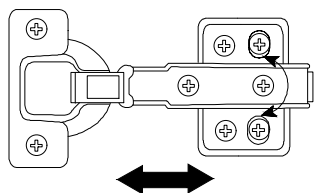


Cabinet Door

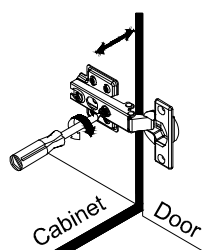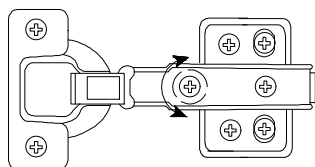

Cabinet Door

Step 33

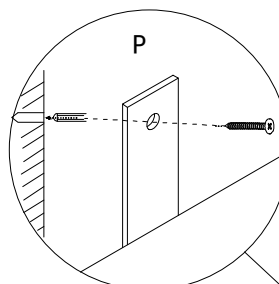

P


P 1set



Ø3.5*30

Ø6*25

Ø3.5*15

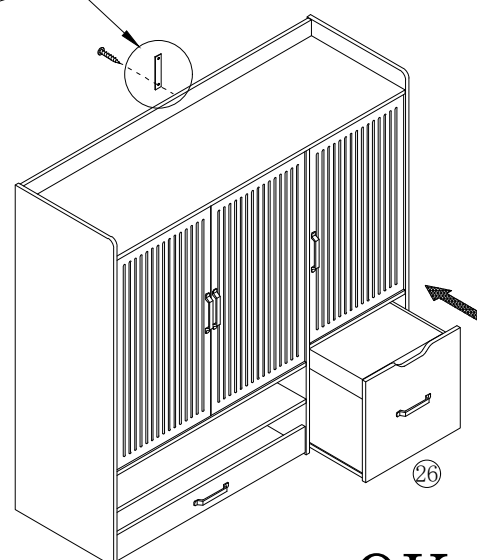

26

OK