
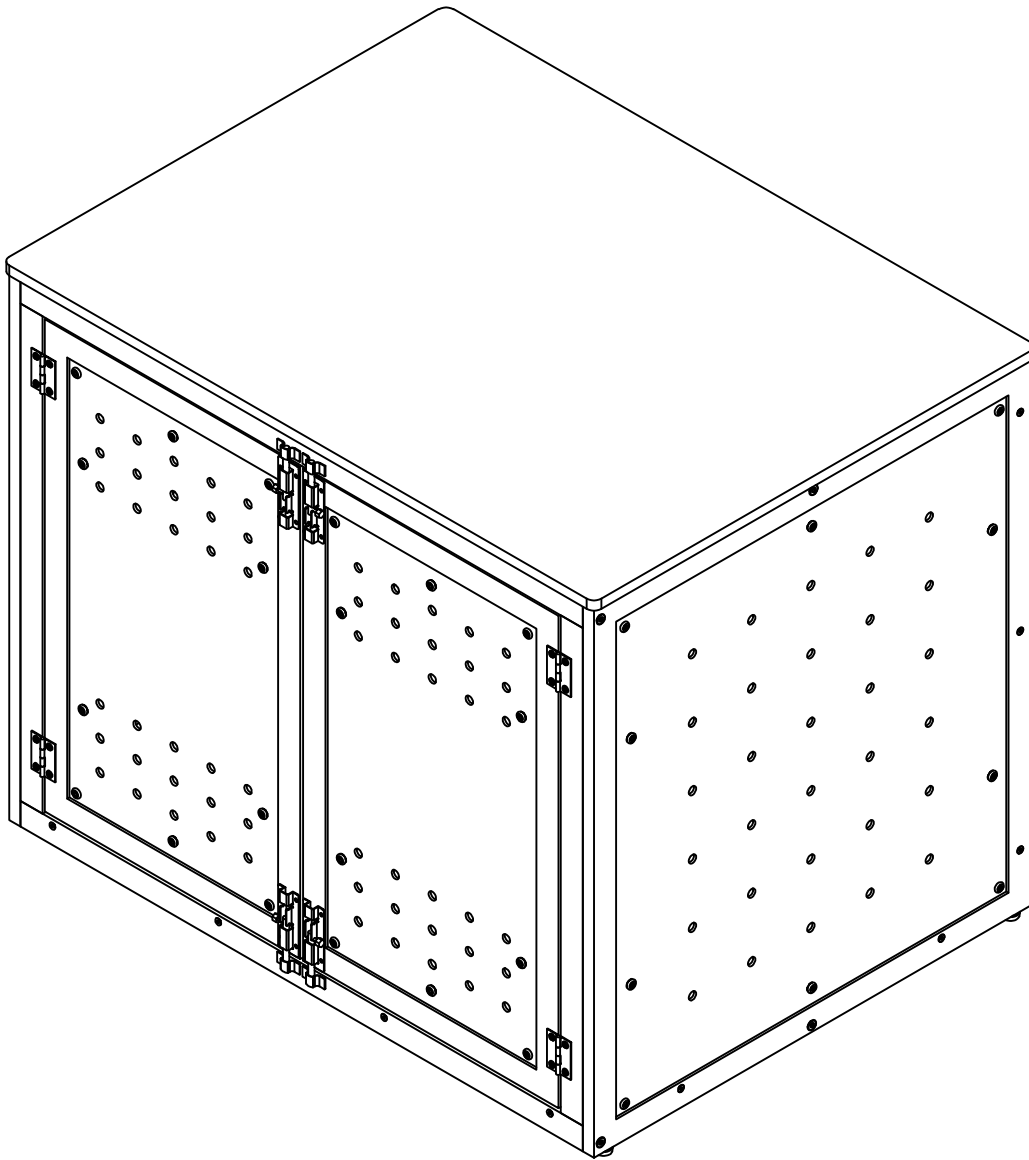
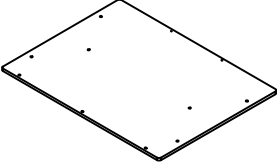
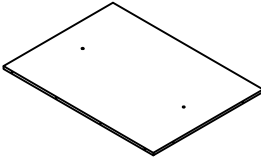
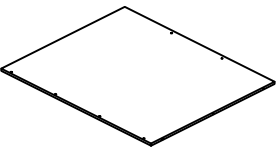
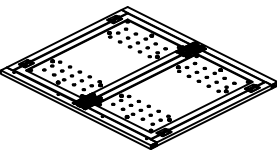
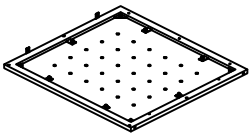
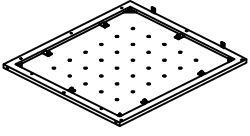
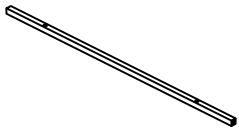
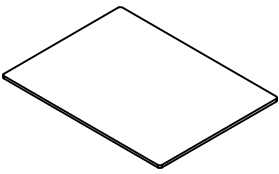


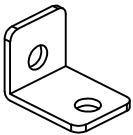








Two-adults installation required

PET-DC002-31.5-0C


Component

Letter (number)	Part	Design	Quantity
①	Top Panel		x1
②	Bottom Panel		x1
③	Back Panel		x1
④	Front Door Frame		x1
⑤	Left Side Frame		x1
⑥	Right Side Frame		x1
⑦	Tube		x2
⑧	Dog Crate Pad		x1
⑨	L-shaped iron sheet		x2



Component

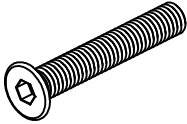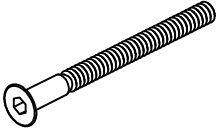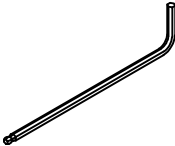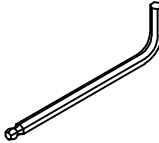Letter (number)	Part	Design	Quantity
A	Flat-head Hexagonal Screw M6*10L		4+1
B	Flat-head Hexagonal Screw M6*23L		4+1
C	Flat-head Hexagonal Screw M6*38L		11+2
D	Hexagonal Head Countersunk Straight Shank Wood Screws Ø4.2*38L		18+2
E	Umbrella head cross screw M4*8L		4+1
F	Hex Key M3		x1
G	Hex Key M4		x1
H	Open-end wrench		x1
I	Adjustable Foot Ø19*6H*M6*20L		x4
J	Phillips screwdriver		x1

Before starting the installation, let's have an understanding of the main parts of the product.


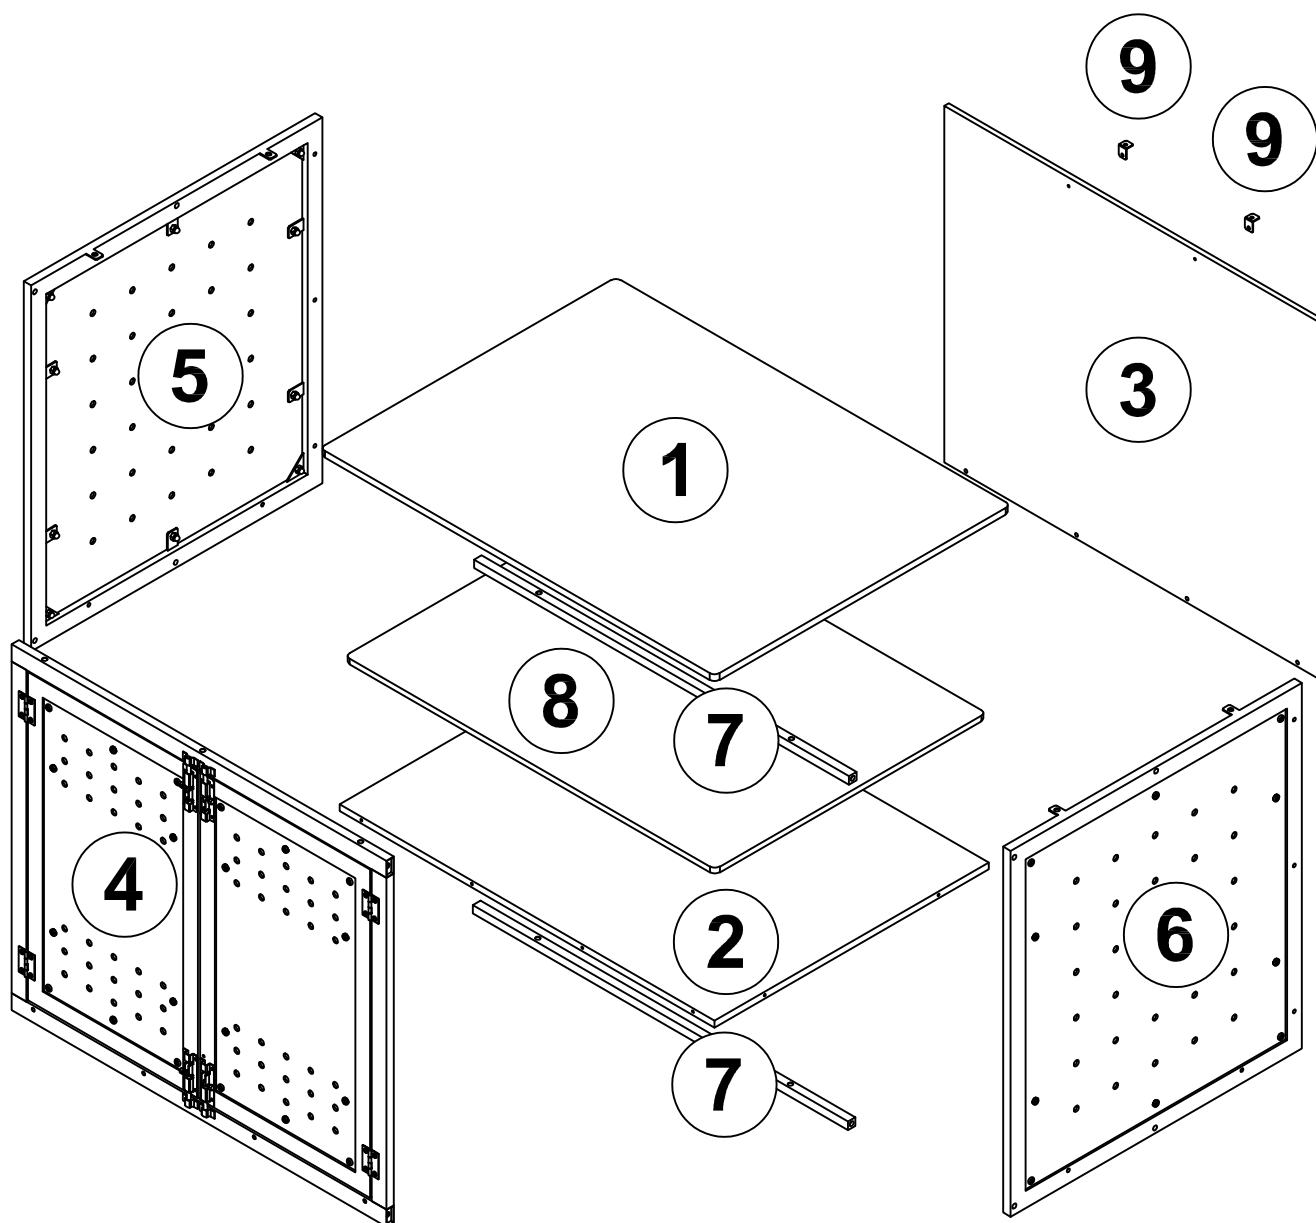


STEP 1

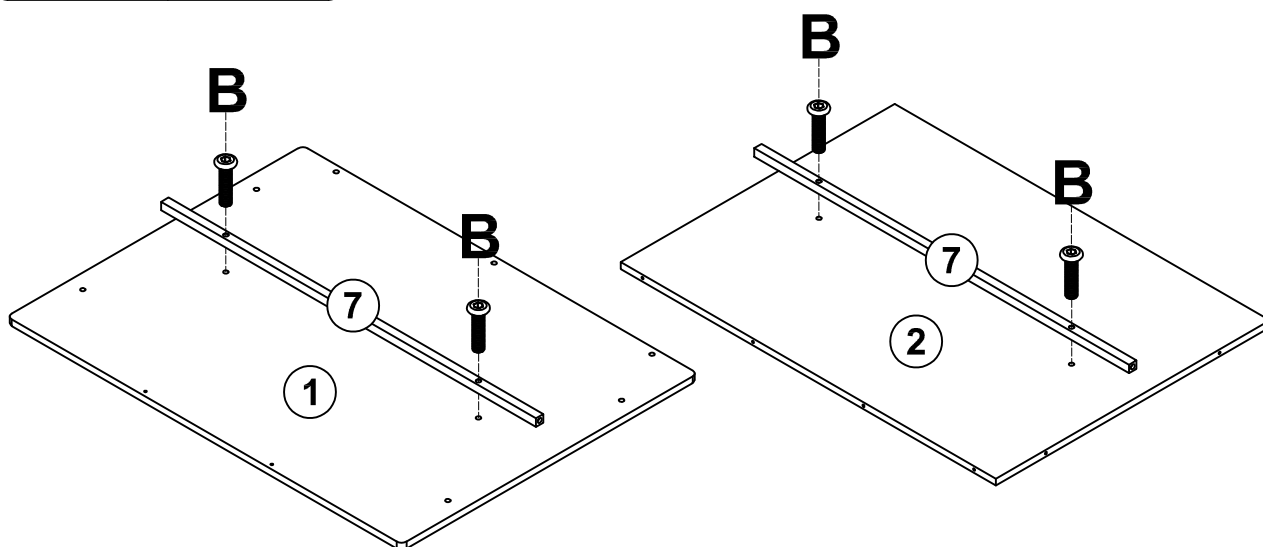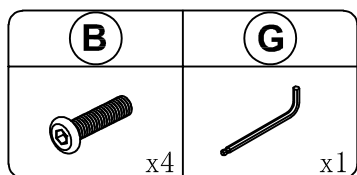



⚠ Please do not fully tighten the screws at this step.


STEP 2

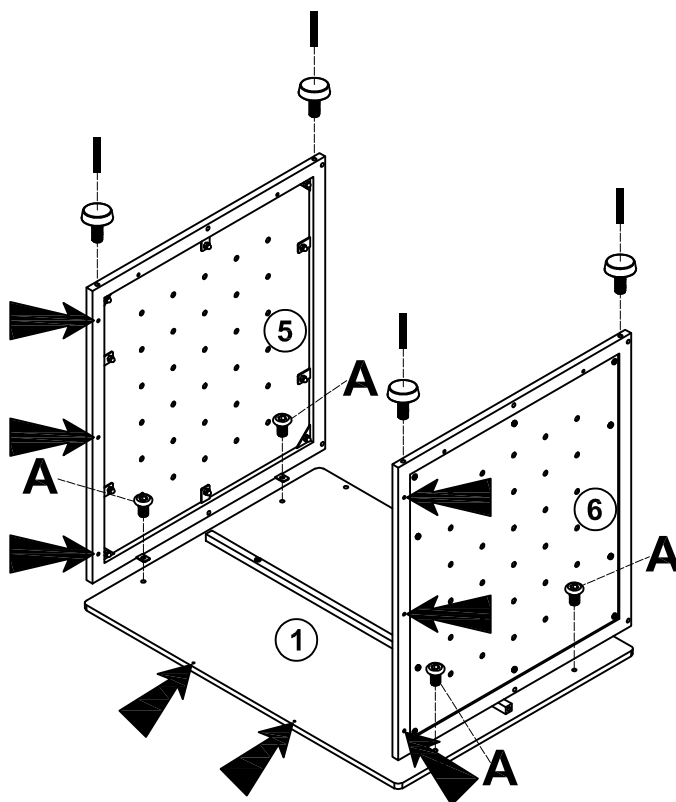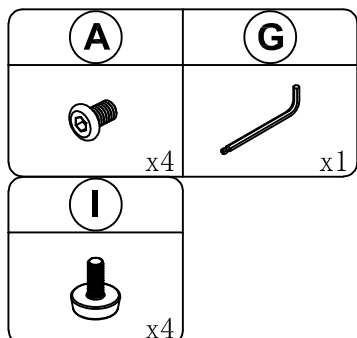

⚠ Please pay attention to the direction of the hole.
Fully tighten all screws.

STEP 3


(C)  x2	(G)  x1
(D)  x6	(F)  x1
(E)  x4	(J)  x1

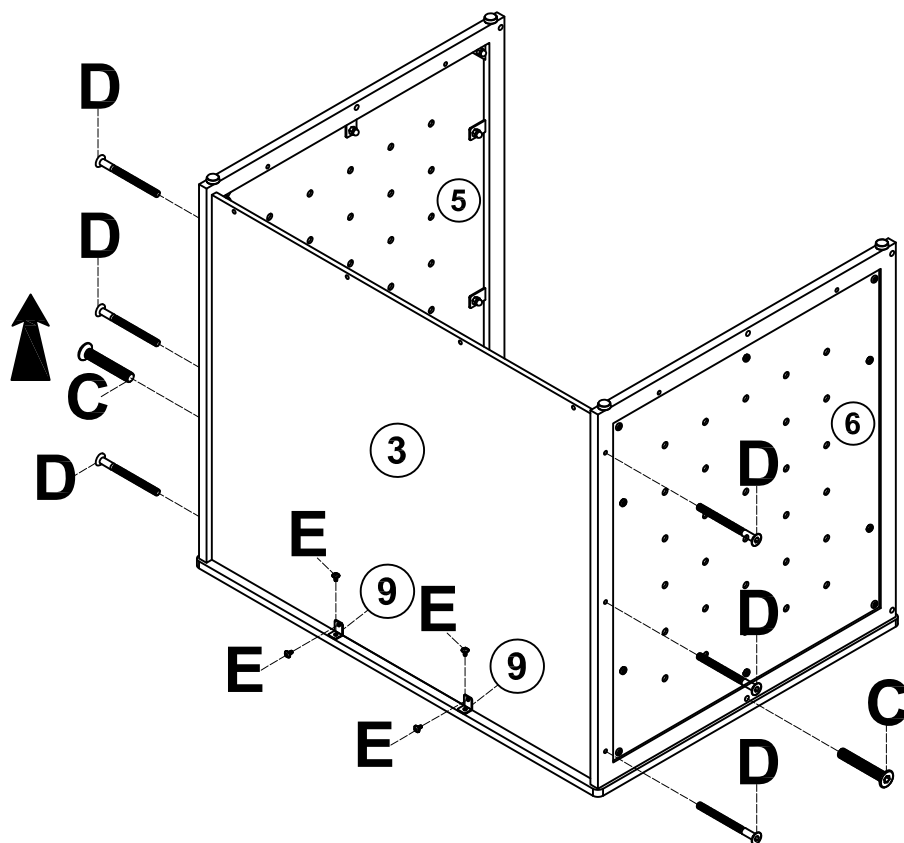

△ Note: Install screws **D** in sequence from bottom to top.


STEP 4


Flip over

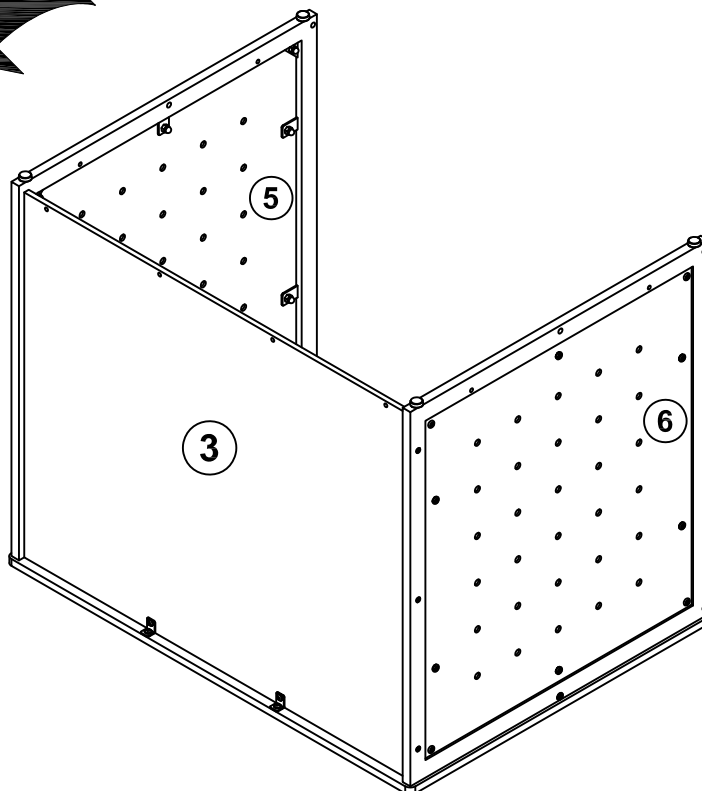

△ Note: The cabinet must be flipped by two people to avoid damage or personal injury.


STEP 5

(C)  x2	(G)  x1
(D)  x4	(F)  x1

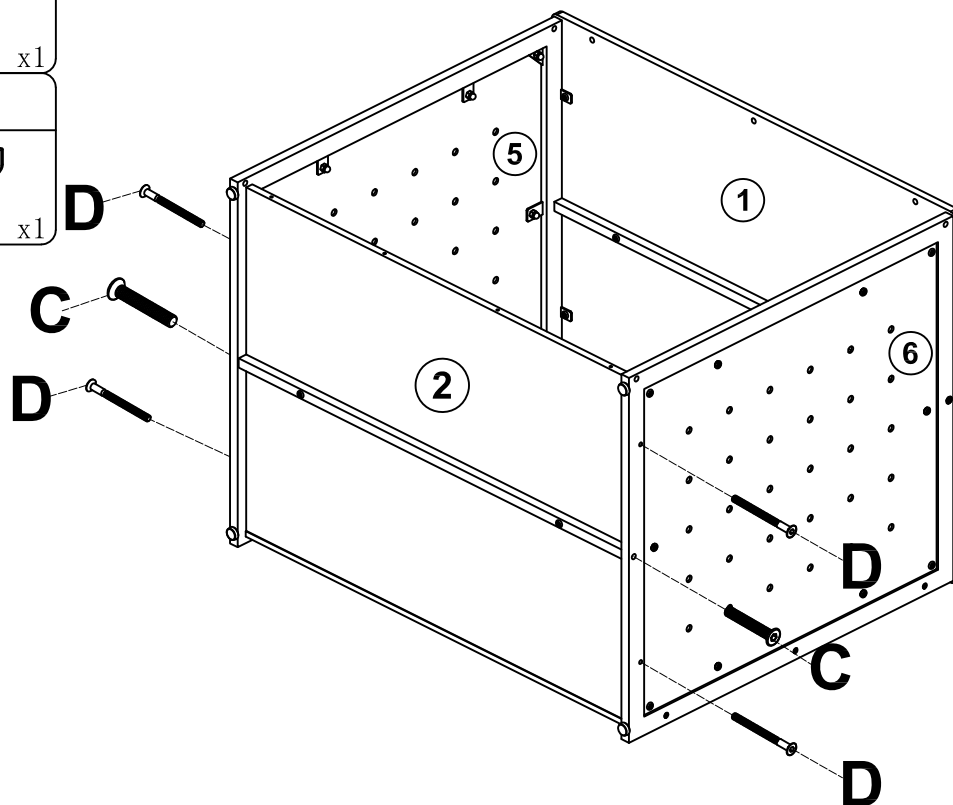



STEP 6

Flip over


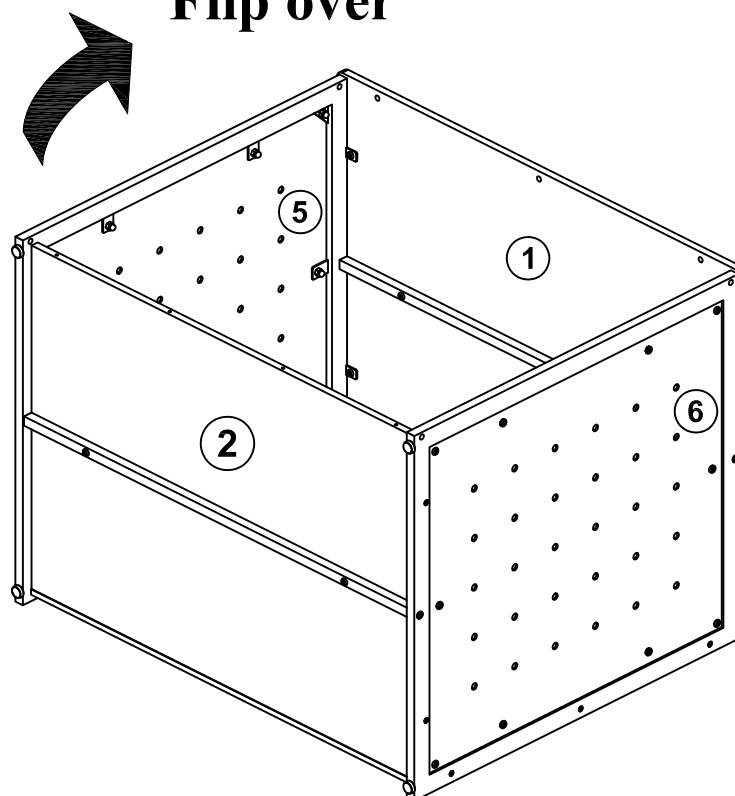


⚠ Note: The cabinet must be flipped by two people to avoid damage or personal injury.

STEP 7

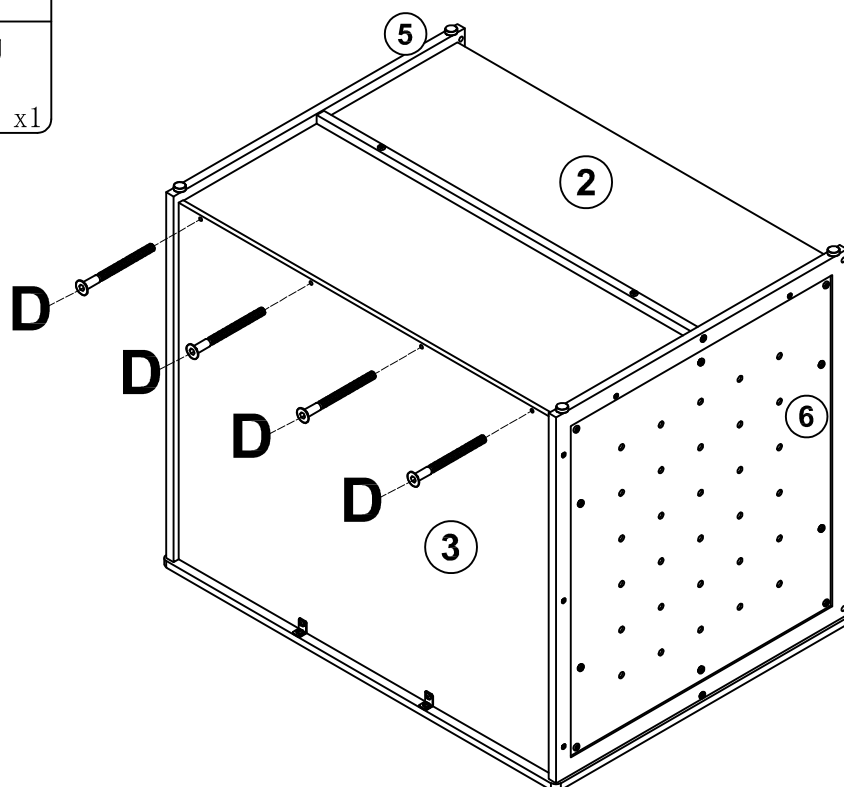
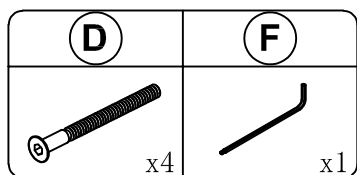


STEP 8

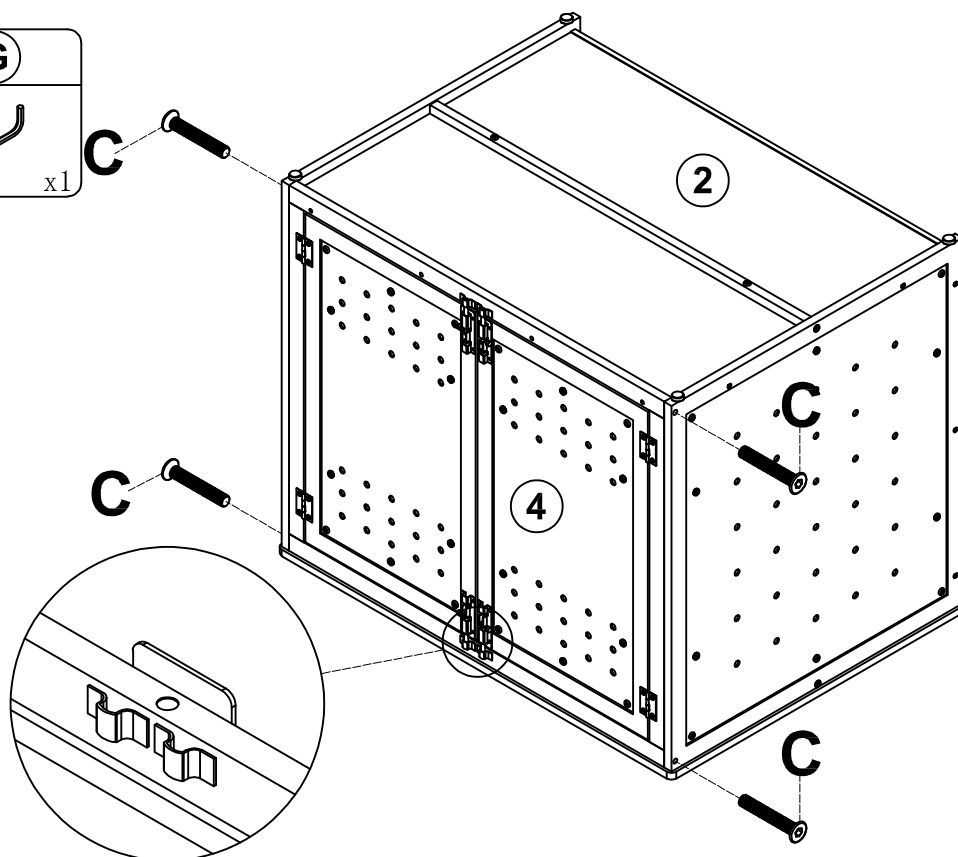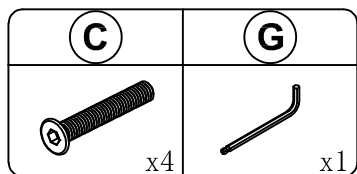


⚠ Note: Ensure blocking piece #4 is facing the correct direction.

STEP 9

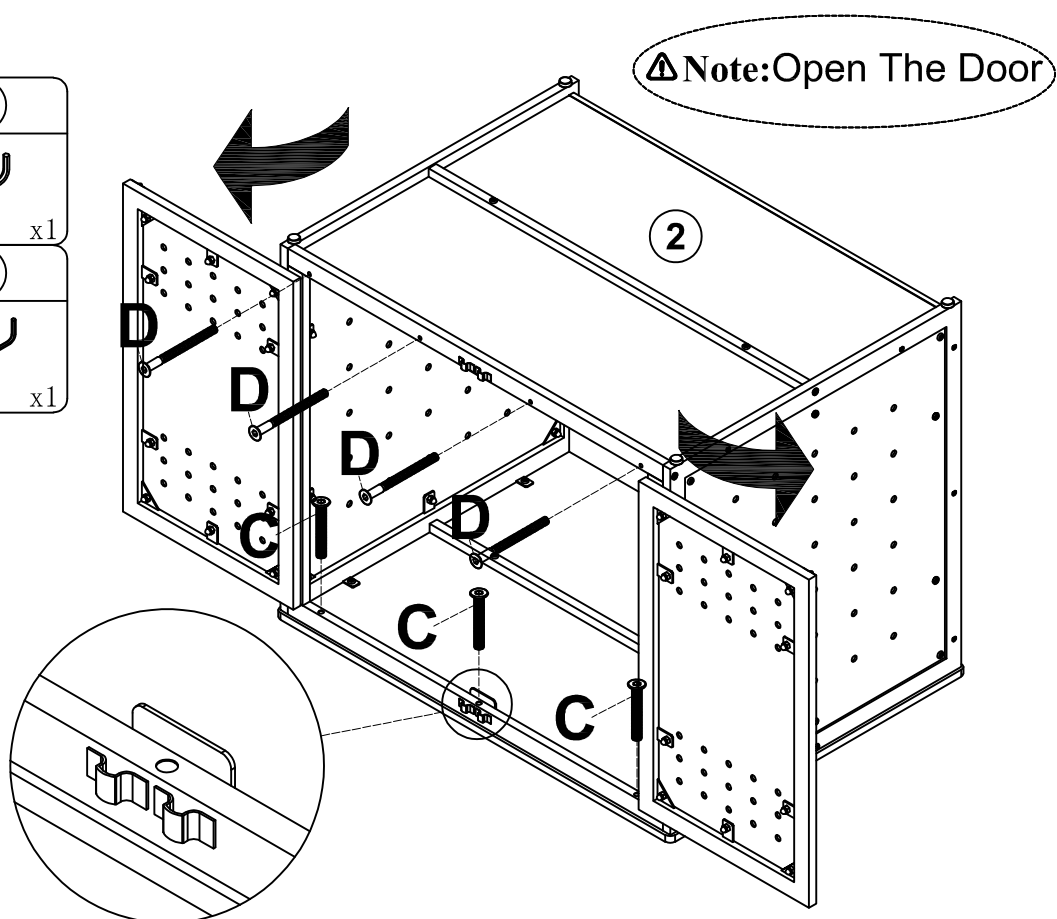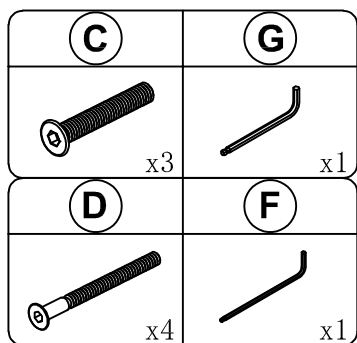


STEP 10

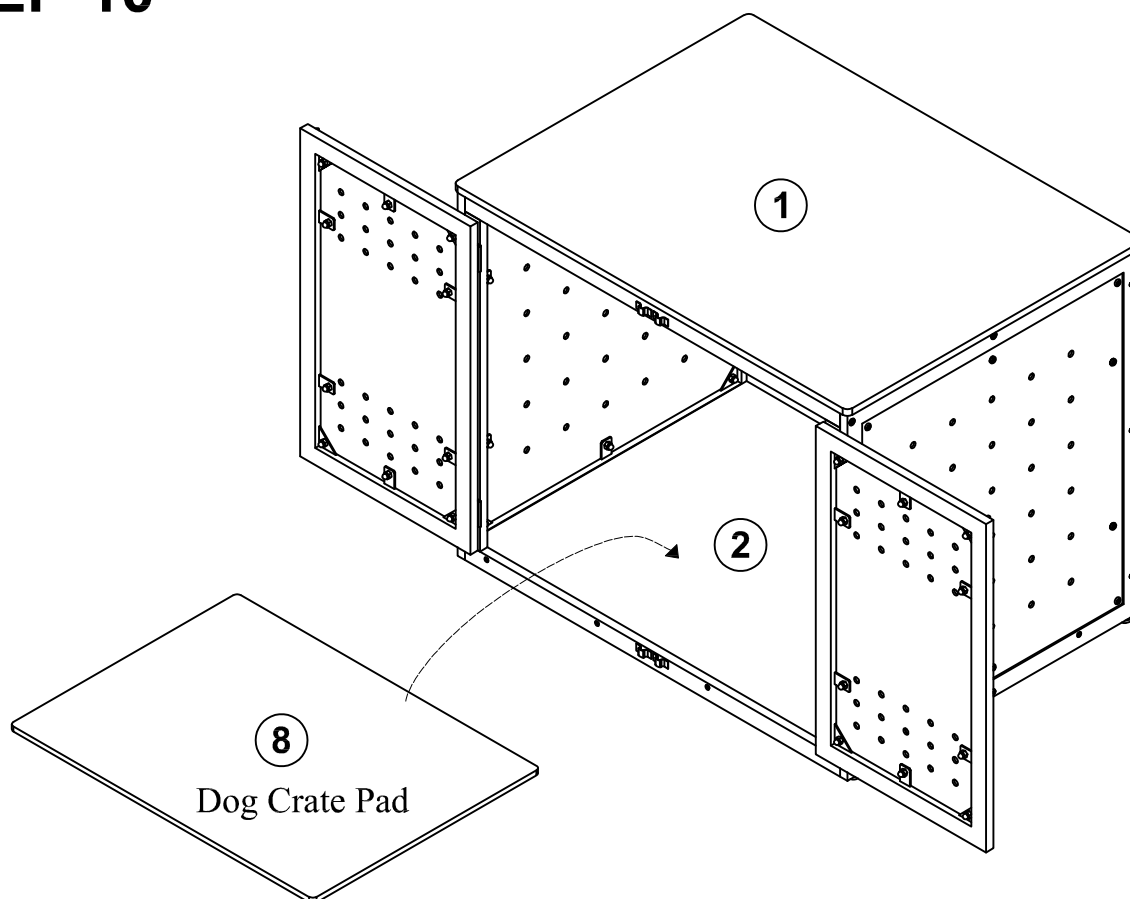

STEP 11

⚠ Note: Close The Door

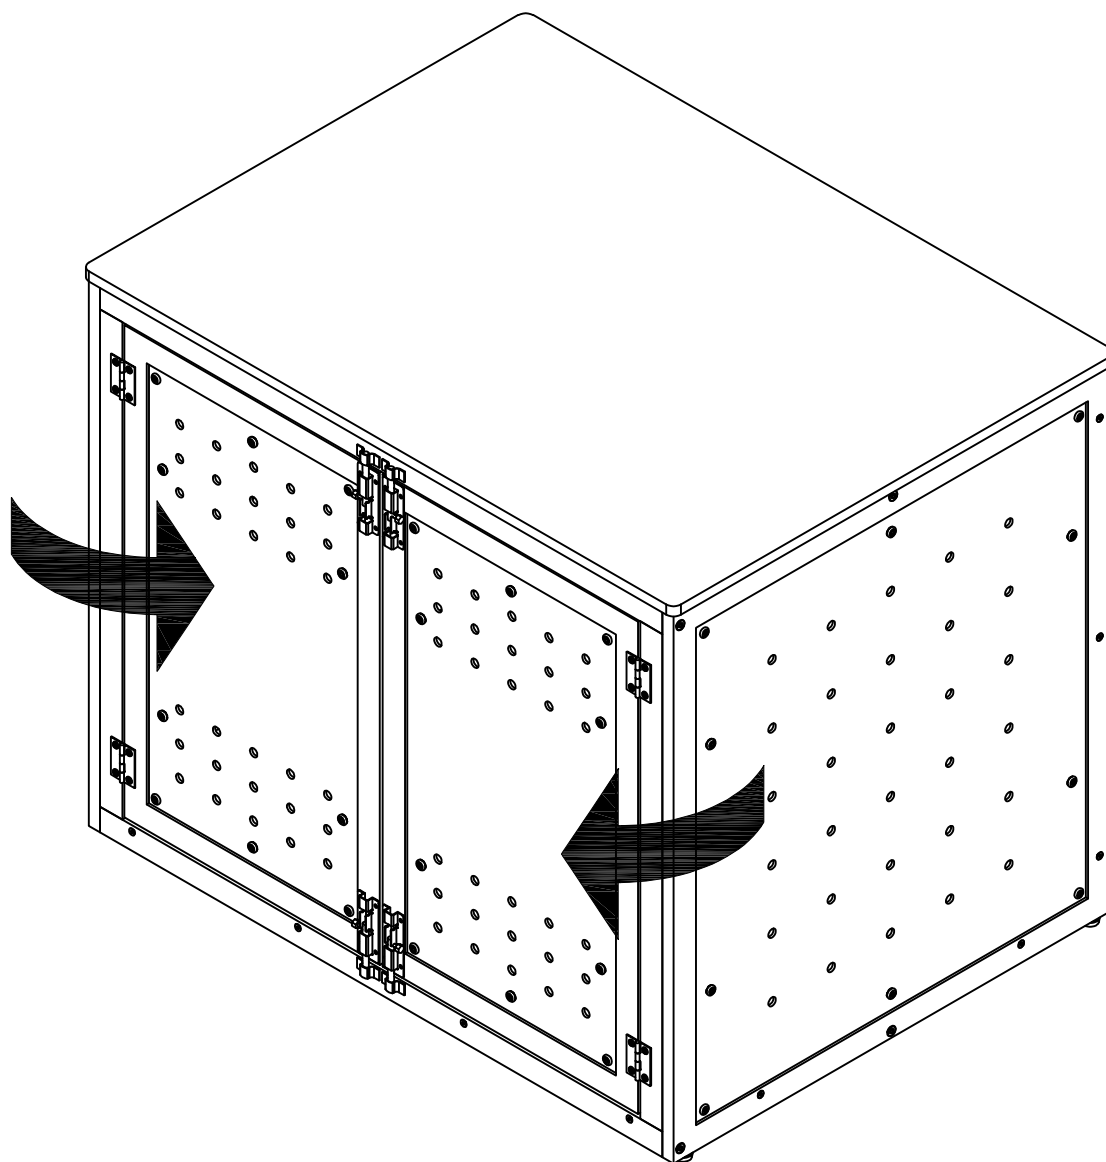

Installation Completed