


Assembly Instructions

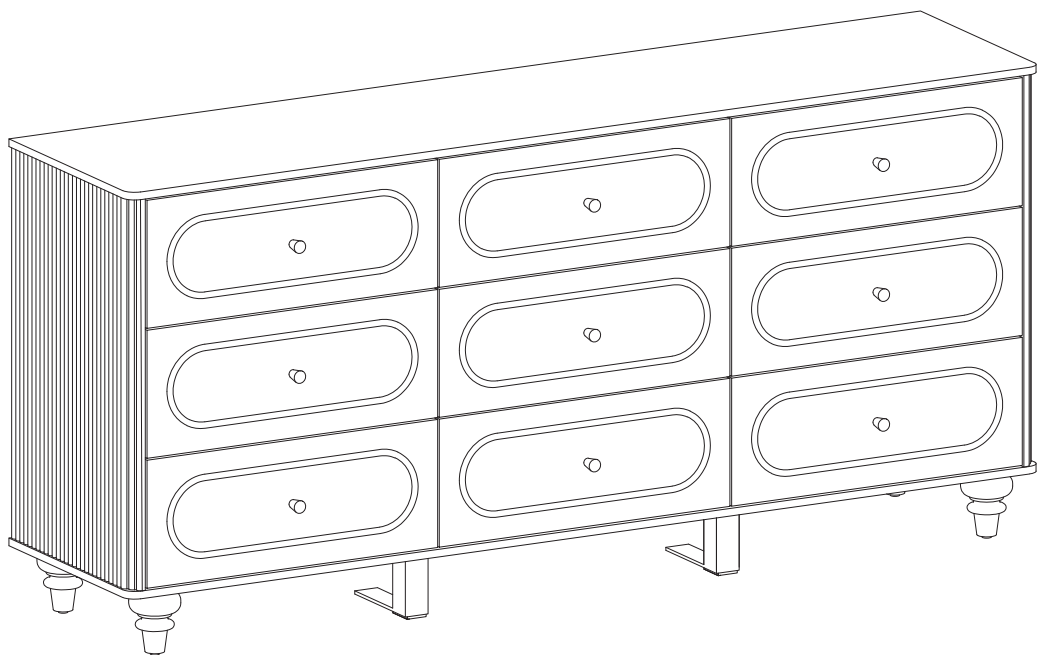


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

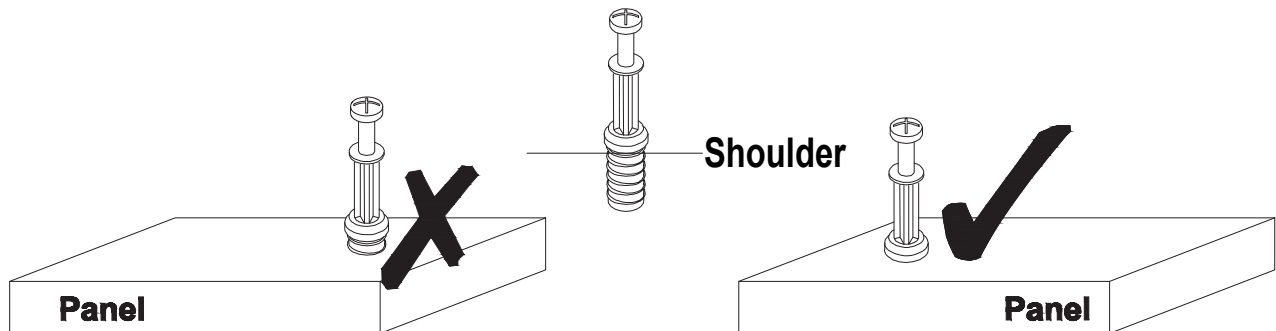

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

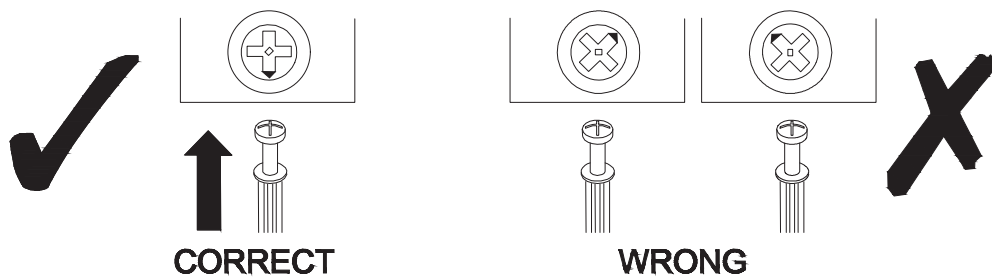

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.







Cam lock should be inserted before quickfit.

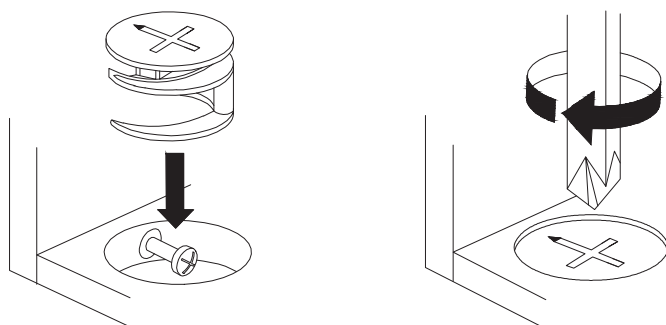





















Turn cam lock clockwise to tighten.

SAFETY TIPS: Static charge may cause dust on foam - clean with a dry or damp cloth. Small foam strands may be present - handle gently and dispose of properly. Do not burn or incinerate. Check local recycling guidelines.





Please kindly note the following points when you assemble the sliders of the drawers

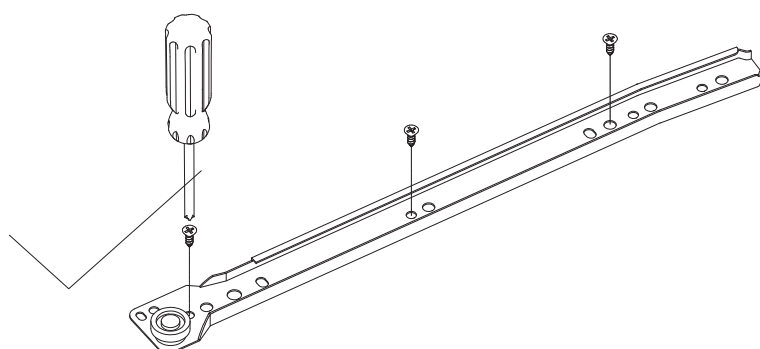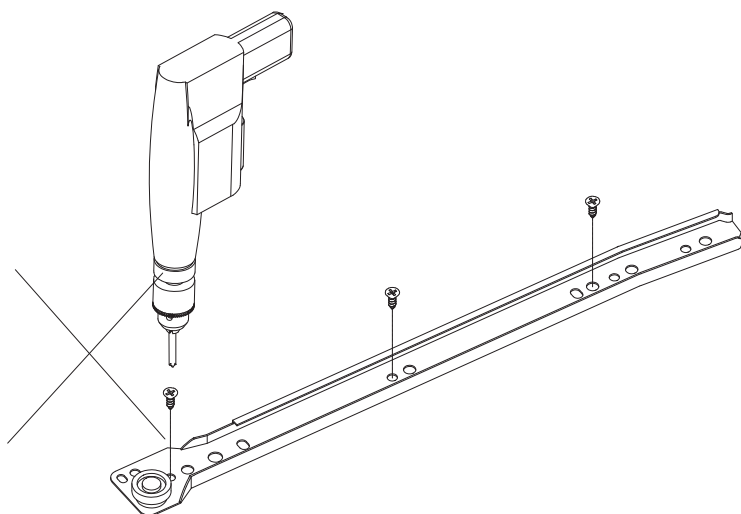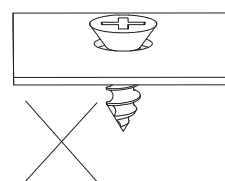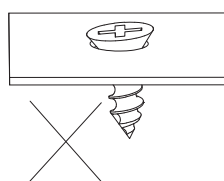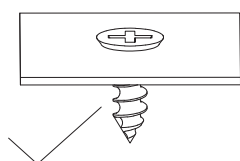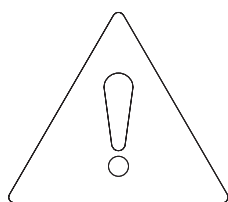


Part List

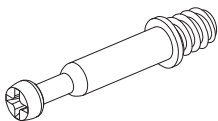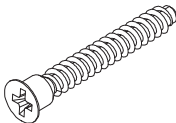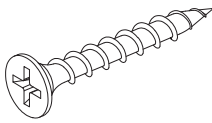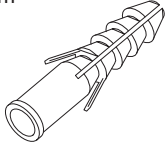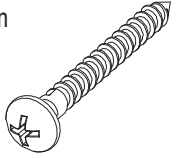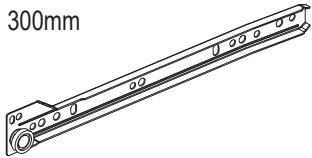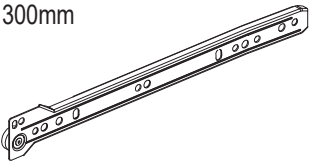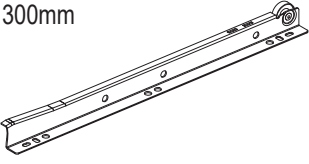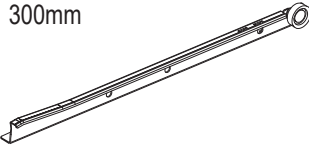No. A Quantity: 46+2 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 46+2 PCS Cam ø15x9.5mm 	No. C Quantity: 46+2 PCS Sticker ø20mm 	No. D Quantity: 18+2 PCS Dowel ø6x30mm 
No. E Quantity: 8+1 PCS Screw ø5x48mm 	No. F Quantity: 126+2 PCS Screw ø3.5x12mm 	No. G Quantity: 36+2 PCS Screw ø4x30mm 	No. H Quantity: 9 PCS Handle ø20x23mm 
No. I Quantity: 9 +1 PCS Screw M4x16mm 	No. J Quantity: 8 PCS Bolt M6x25mm 	No. K Quantity: 6 PCS Bolt M6x12mm 	No. L Quantity: 1 PCS Hex Key 4mm 
No. M Quantity: 2 PCS Foot Pad 35x35x3mm 	No. N Quantity: 2 PCS L-Shaped anti tipping iron bar 76x15x30mm 	No. O Quantity: 2 PCS Plastic Expansion ø8x40mm 	No. P Quantity: 10+1 PCS Screw ø4x12mm 
No. Q Quantity: 2 PCS Screw ø4x38mm 	No. R Quantity: 14 PCS Screw ø3x16mm 	No. S Quantity: 14 PCS Back Buckle 15x15x10mm 	No. CL Quantity: 9 PCS Drawer Slider 300mm 
No. CR Quantity: 9 PCS Drawer Slider 300mm 	No. DL Quantity: 9 PCS Drawer Slider 300mm 	No. DR Quantity: 9 PCS Drawer Slider 300mm 	


Product structure

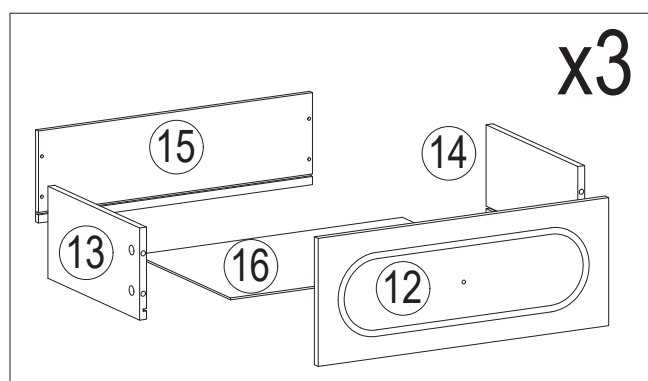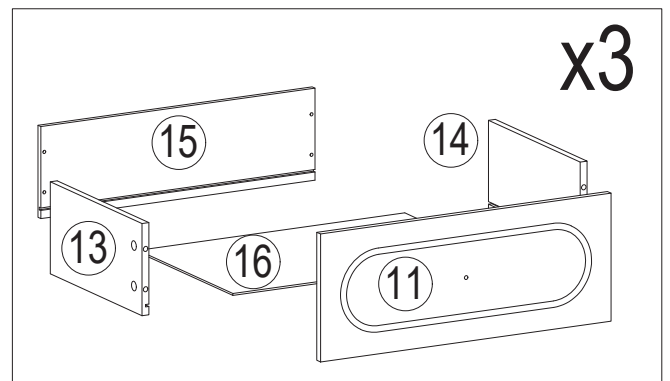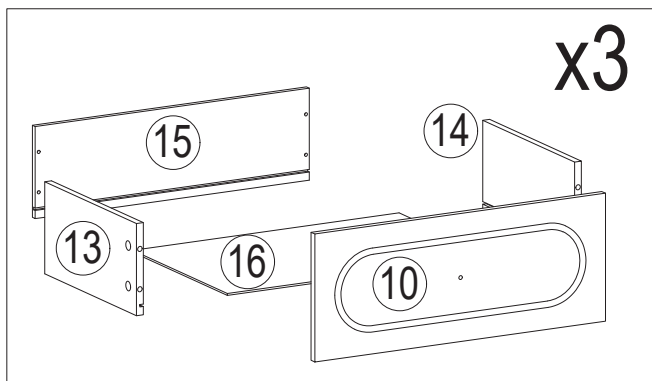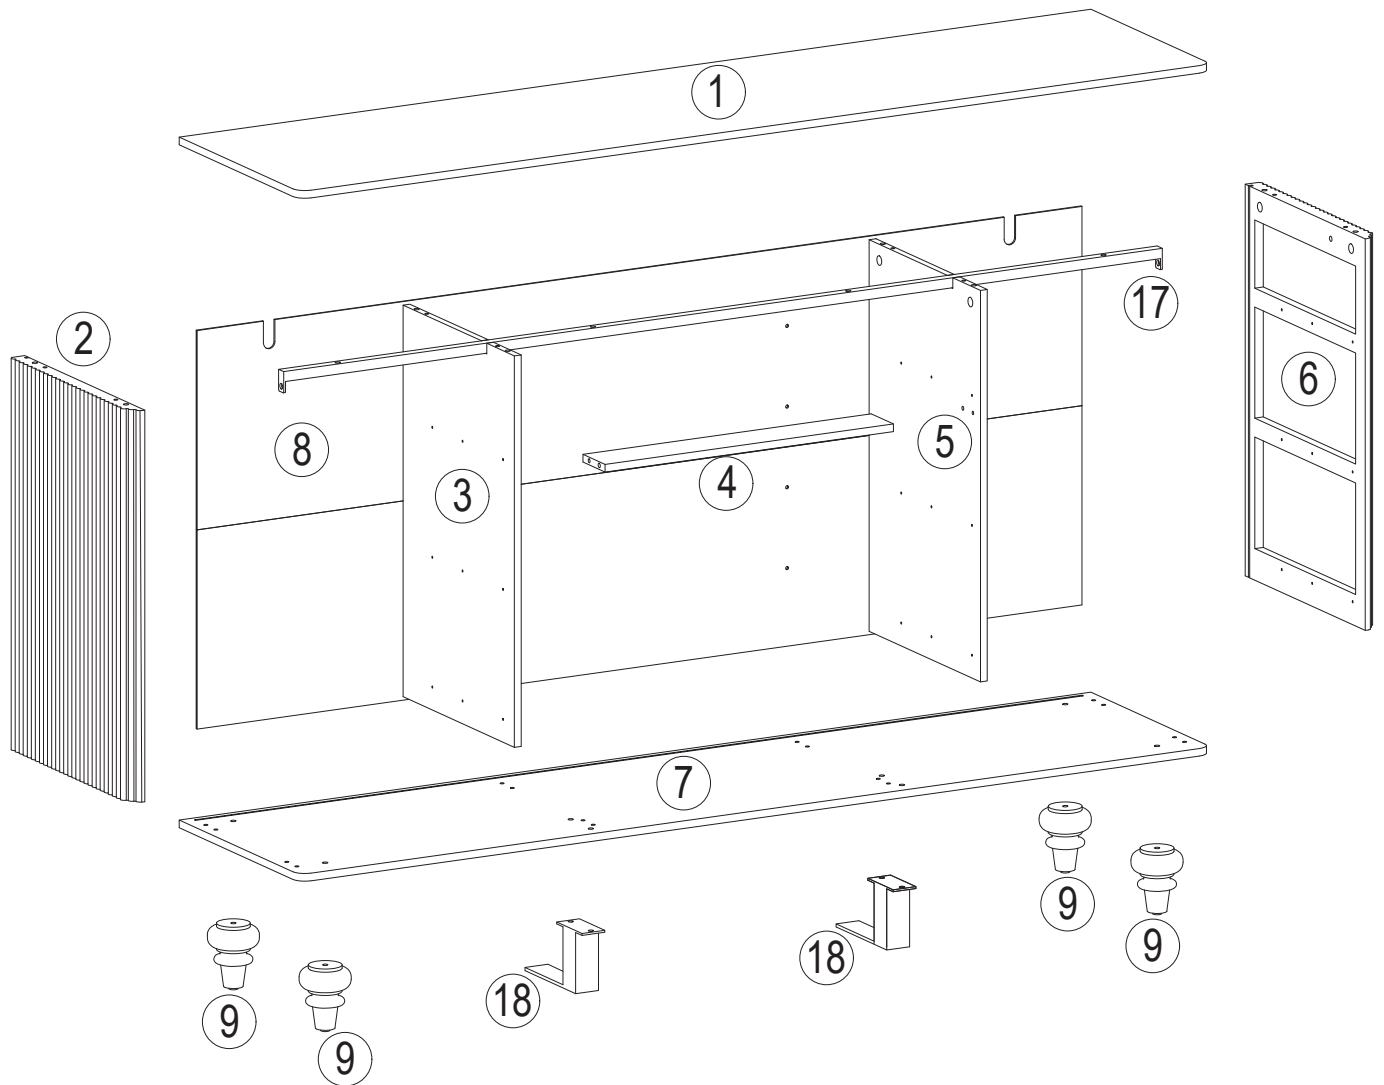


STET 1

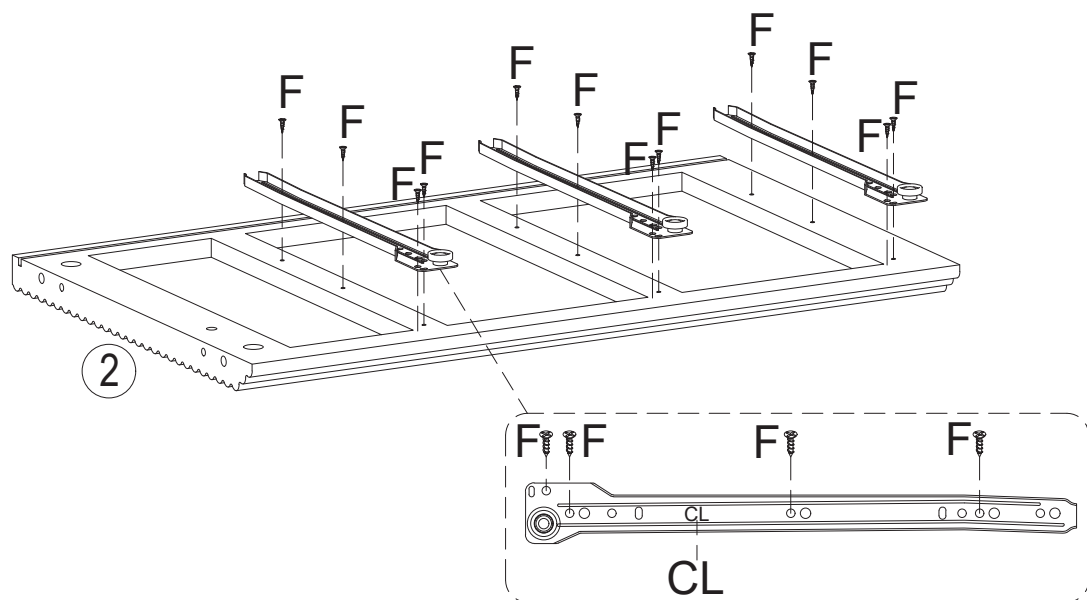


No. CL
Quantity: 3 PCS
Drawer Slider
300mm

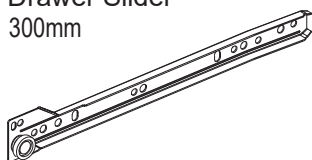


No. F
Quantity: 12 PCS
Screw
ø3.5x12mm




STET 2

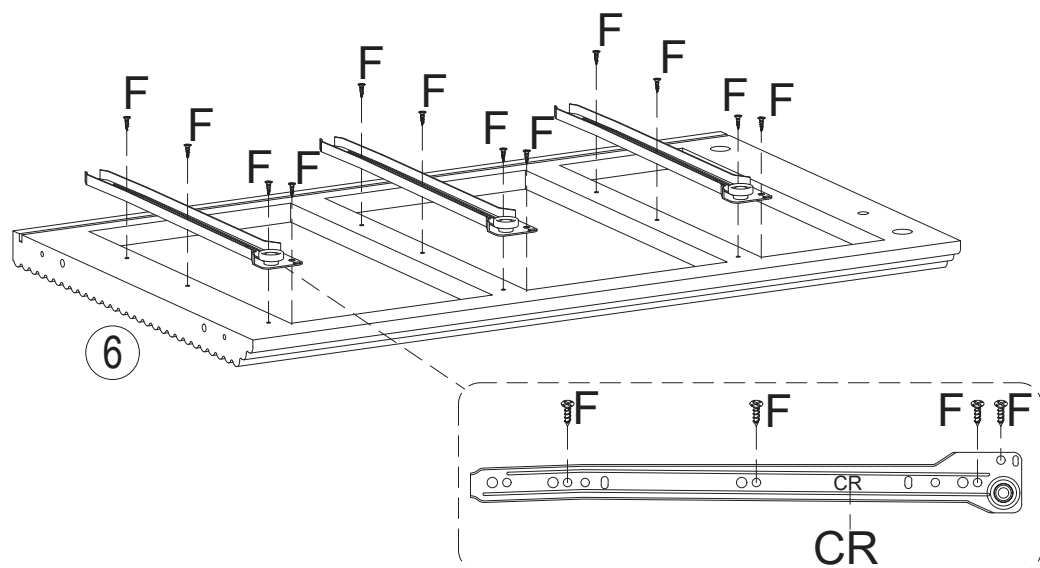




No. CR
Quantity: 3 PCS
Drawer Slider
300mm

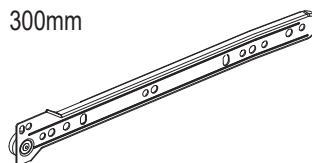


No. F
Quantity: 12 PCS
Screw
ø3.5x12mm




STET 3

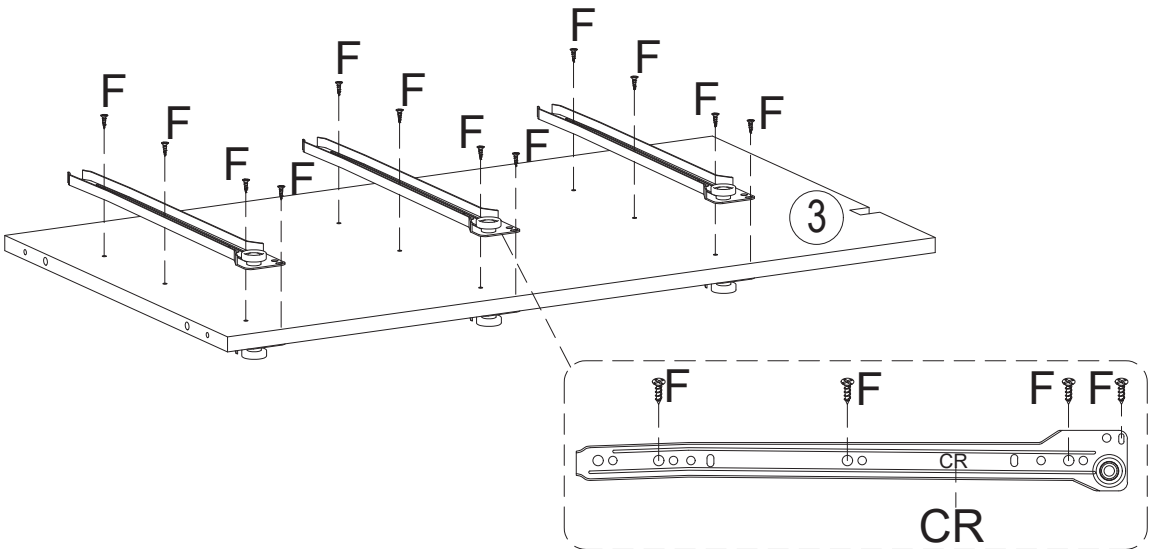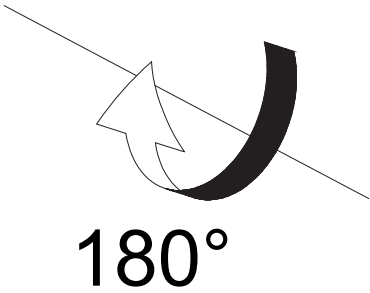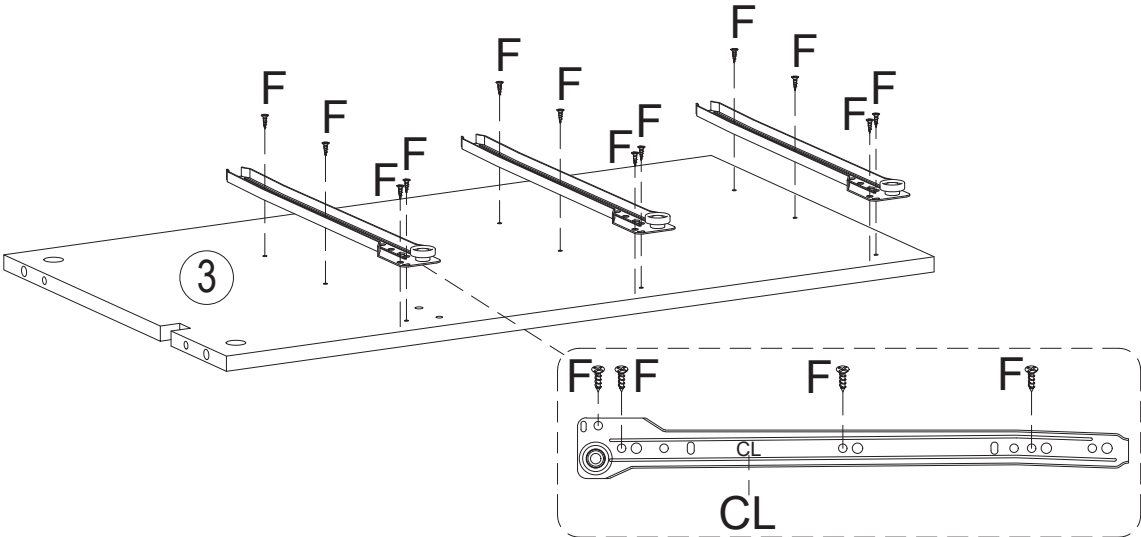


No. CL
Quantity: 3 PCS
Drawer Slider
300mm

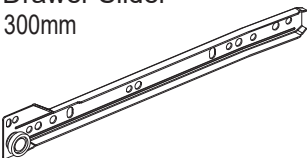




No. CR
Quantity: 3 PCS
Drawer Slider
300mm

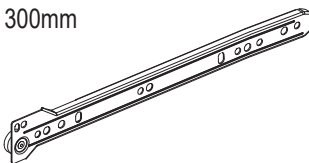

No. F
Quantity: 24 PCS
Screw
ø3.5x12mm



STET 4

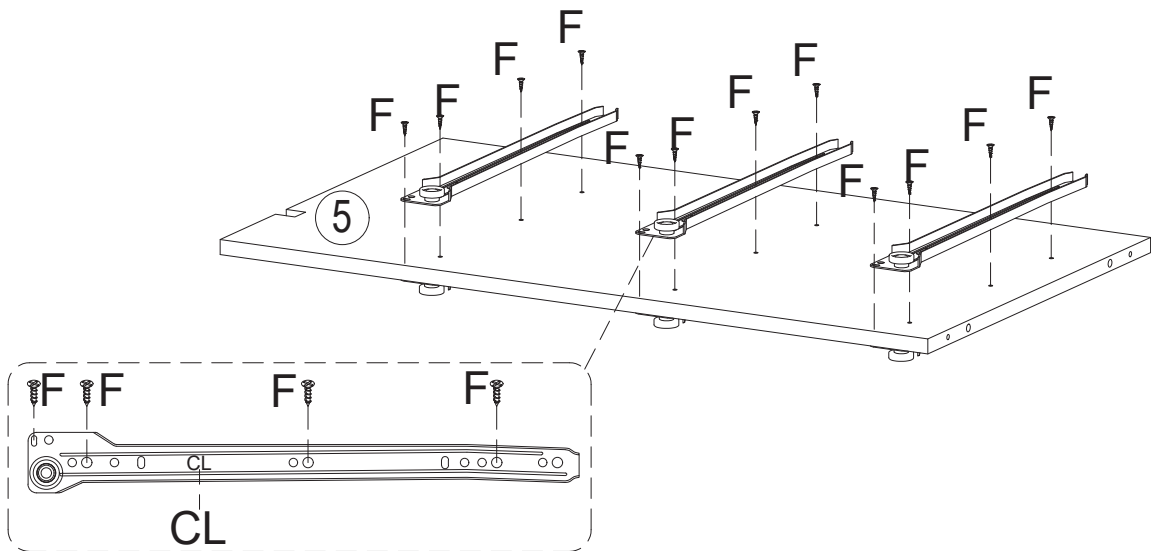
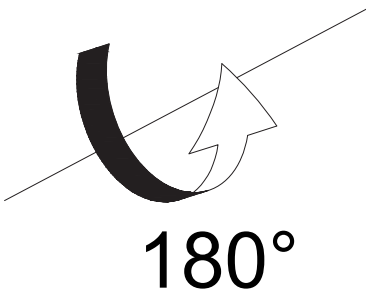
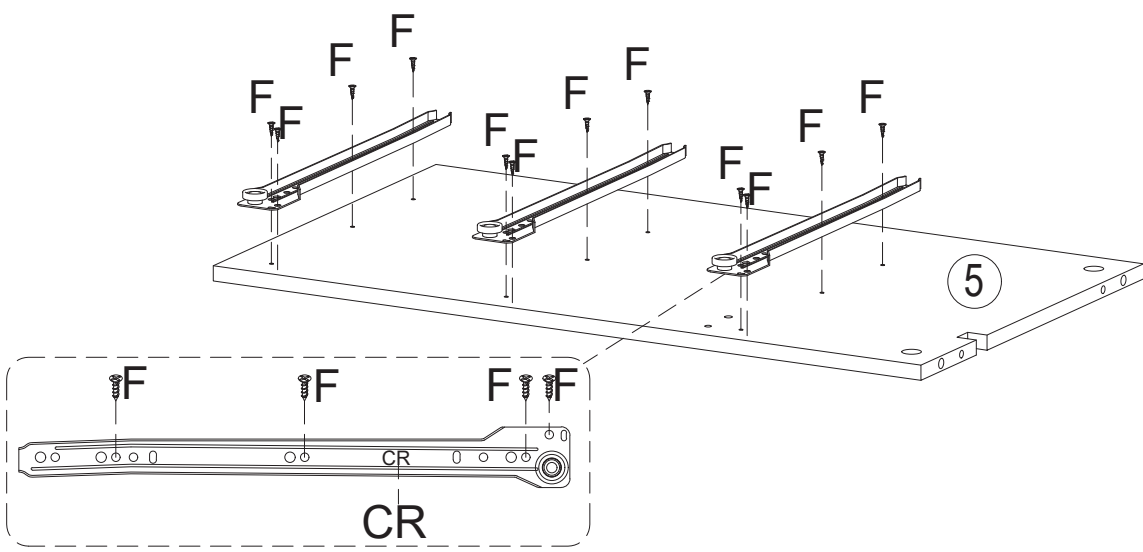


No. CL
Quantity: 3 PCS
Drawer Slider
300mm


No. CR
Quantity: 3 PCS
Drawer Slider
300mm

No. F
Quantity: 24 PCS
Screw
ø3.5x12mm

STET 5

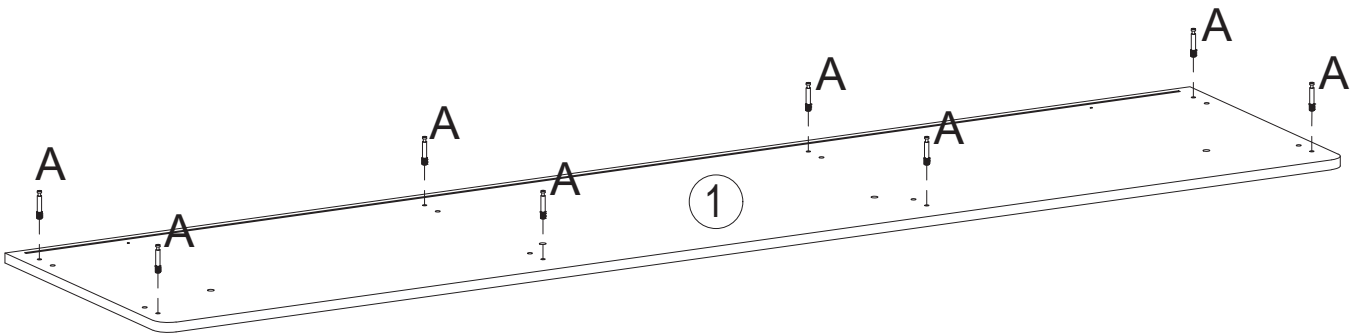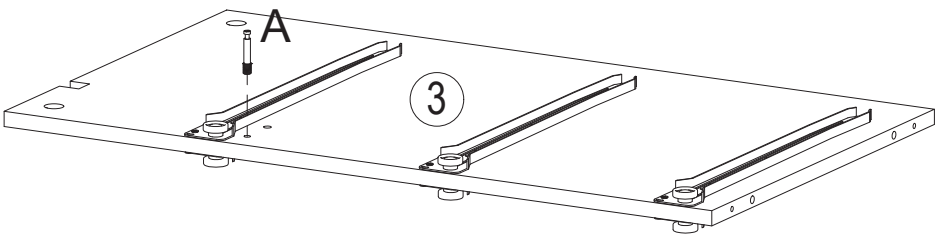
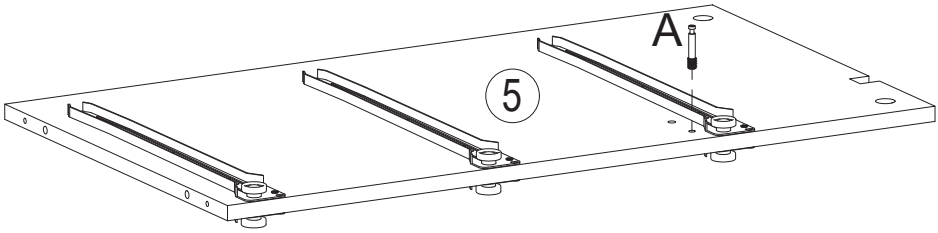


No. A
Quantity: 10 PCS
Cam Bolt
ø6x33.5mm

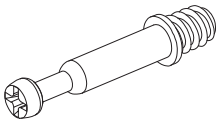

STET 6


Tighten All bolt #J to 80% first.
After completing Step10,
tighten All bolt completely.

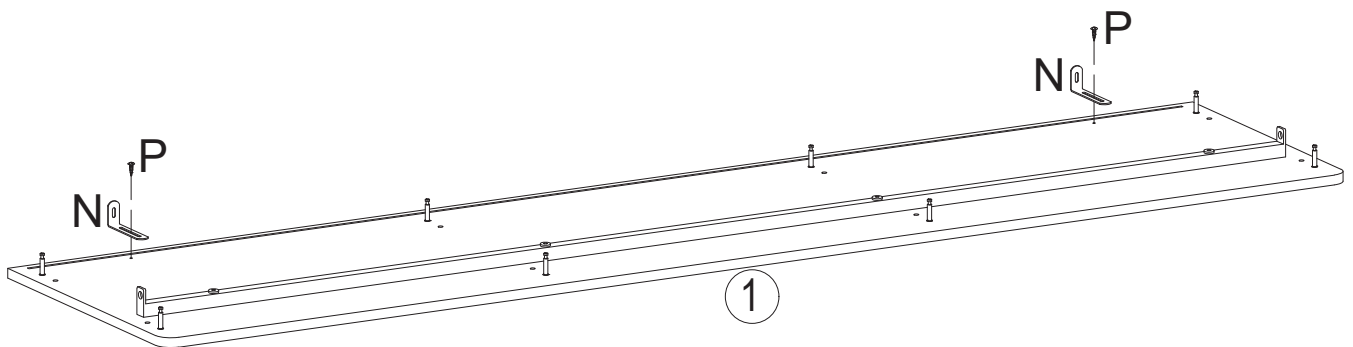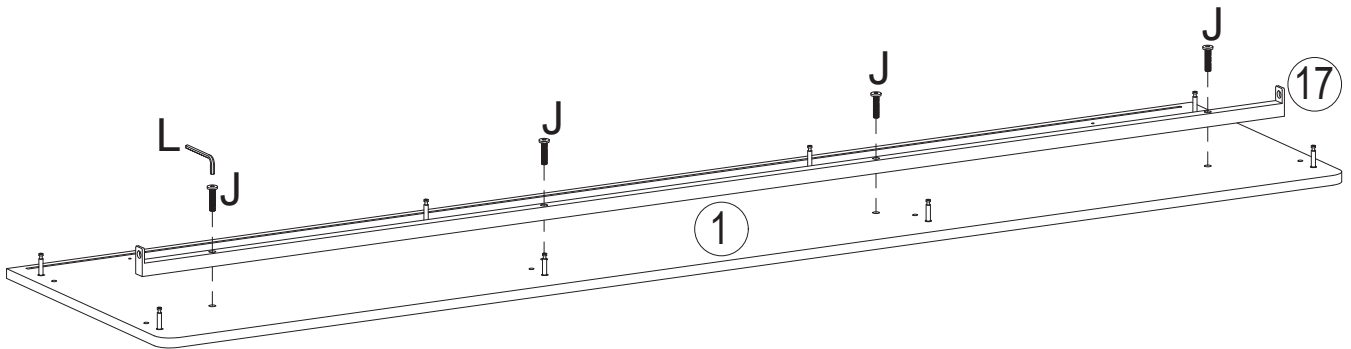

No. J

Quantity: 4 PCS


Bolt
M6x25mm



No. N

Quantity: 2 PCS


L-Shaped anti tipping iron
bar
76x15x30mm



No. P

Quantity: 2 PCS

Screw
ø4x12mm




No. L

Quantity: 1 PCS


Hex Key
4mm





STET 7

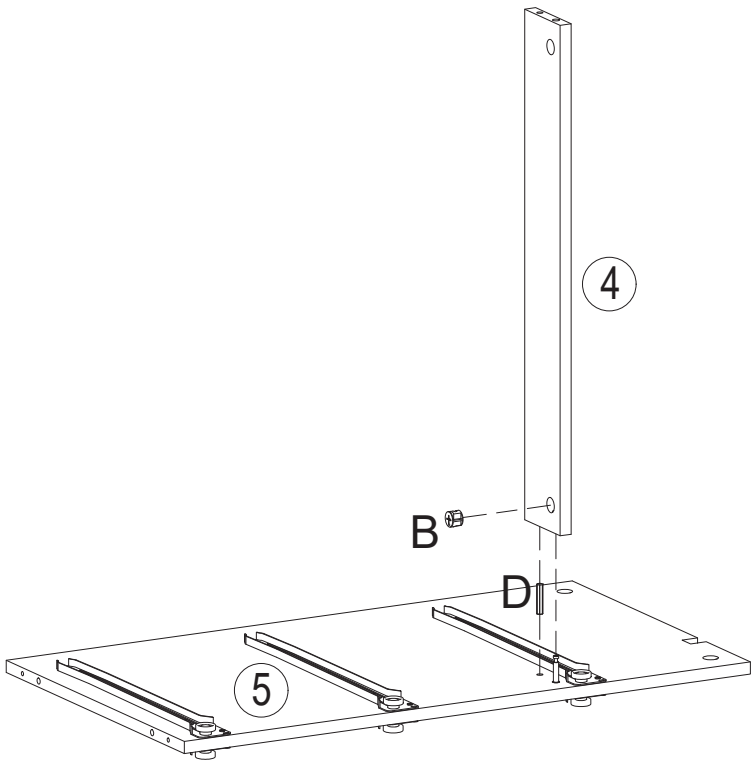


No. B
Quantity: 2 PCS
Cam
ø15x9.5mm



No. D
Quantity: 2 PCS
Dowel
ø6x30mm

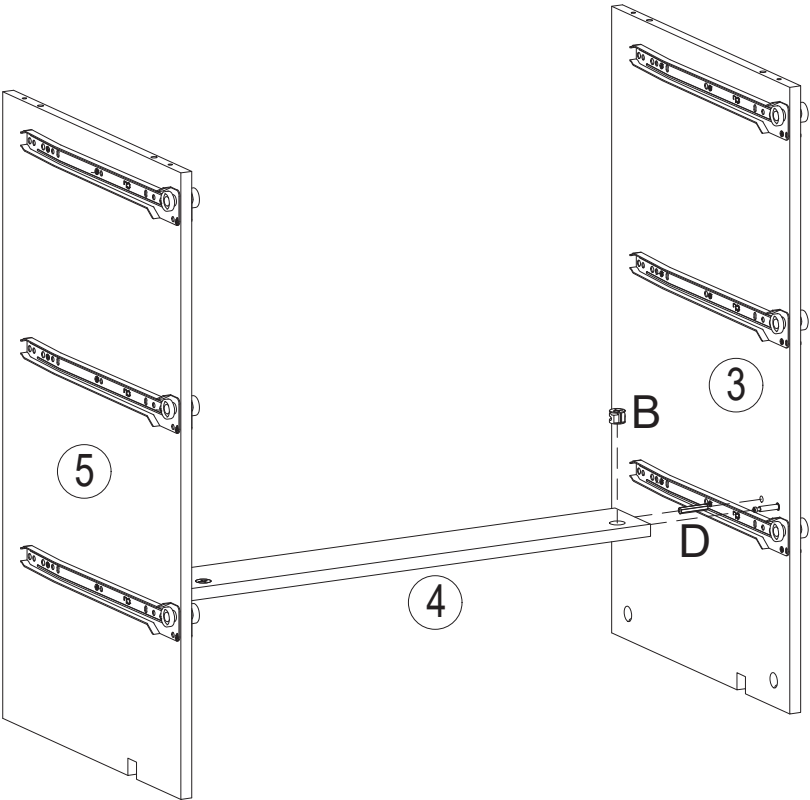


STET 8

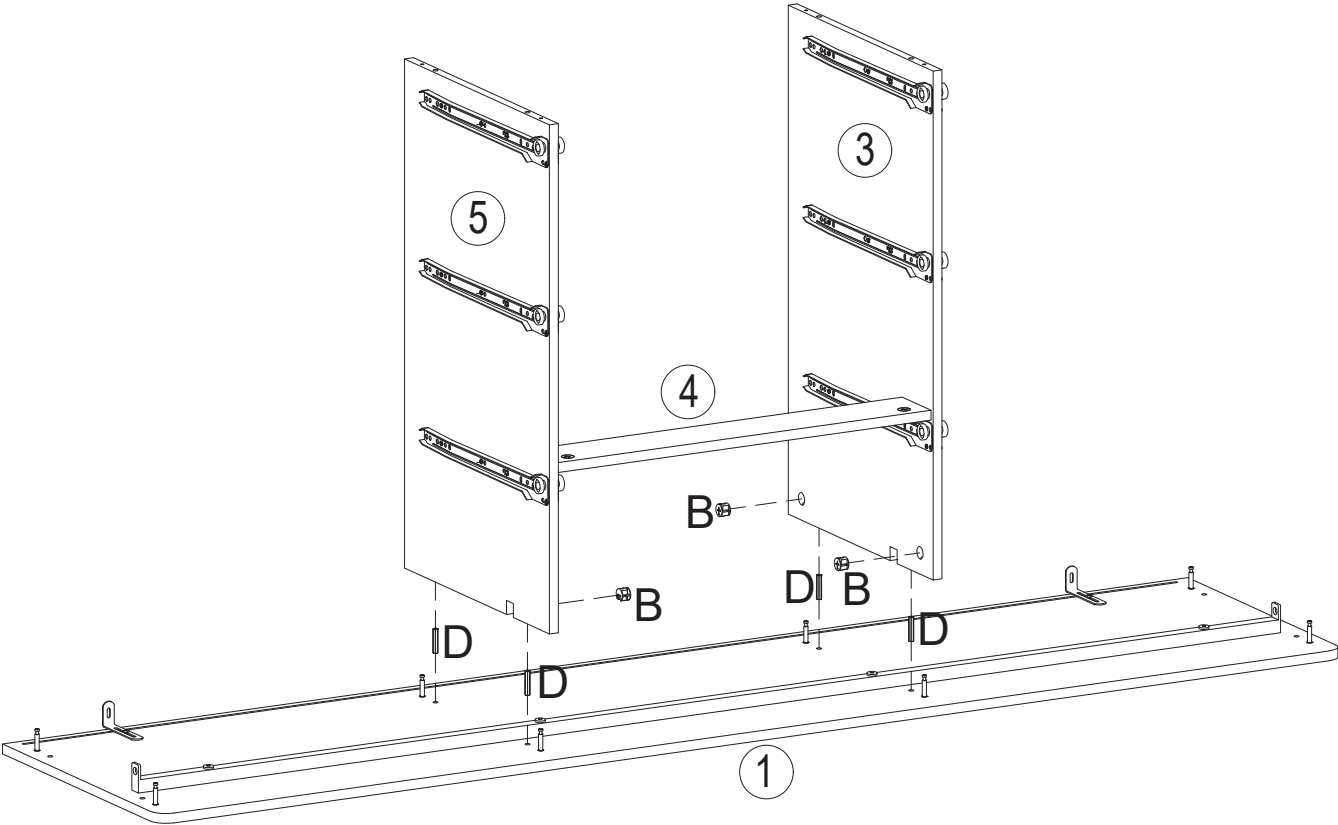


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm



No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STET 9

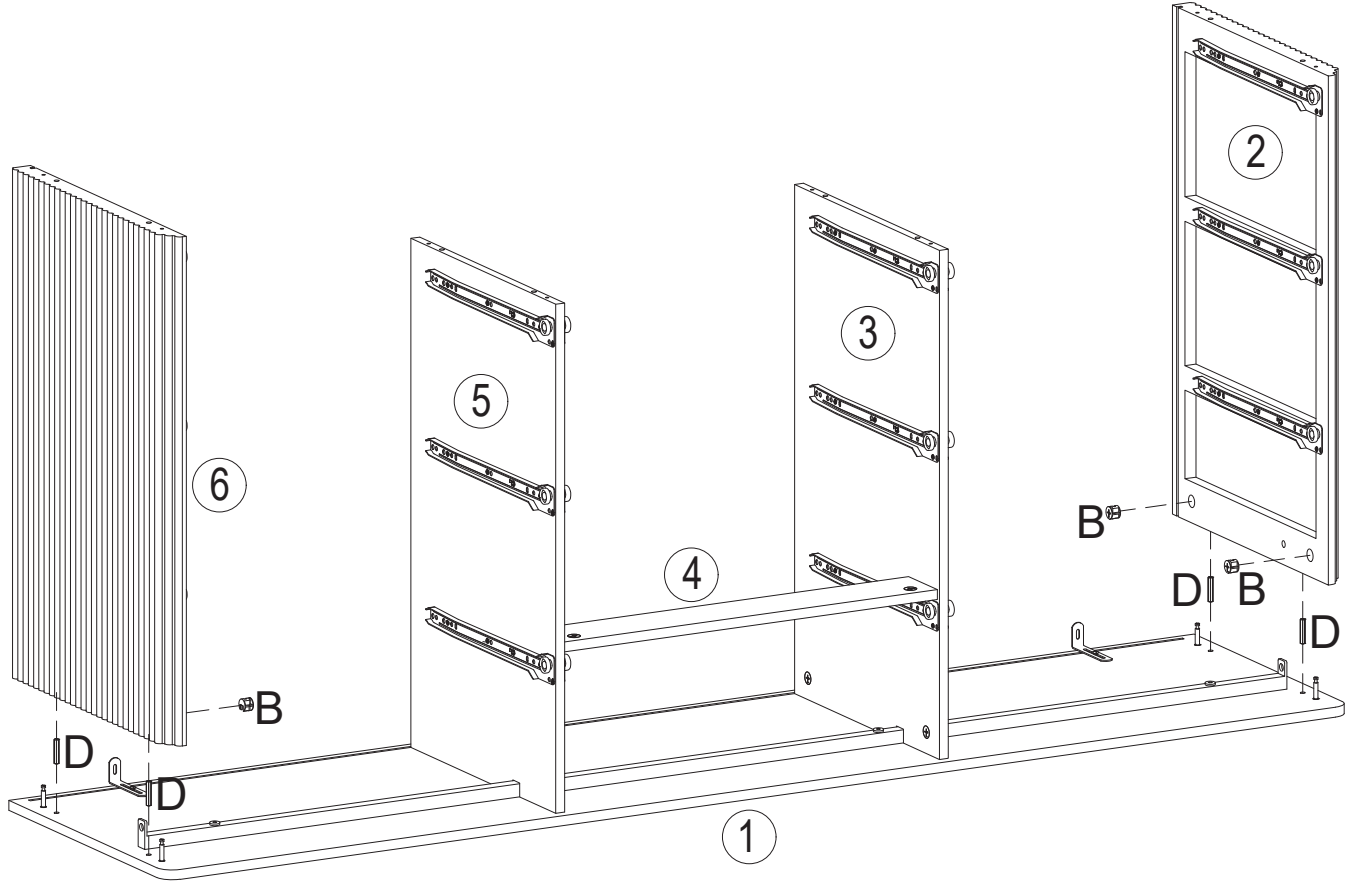


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm



No. D
Quantity: 4 PCS
Dowel
ø6x30mm




STET 10

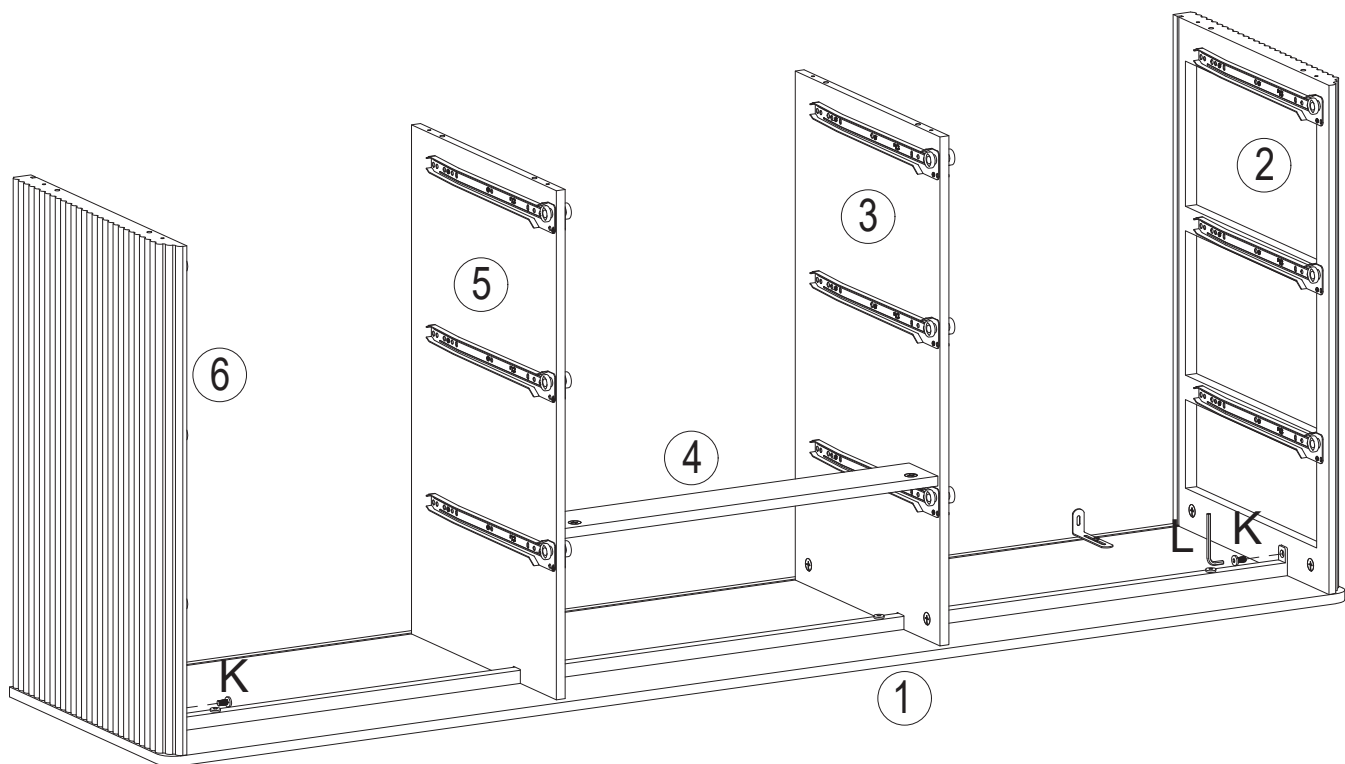

NOTE:
Tighten all Bolt (J and K) In the #17


No. K
Quantity: 2 PCS
Bolt
M6x12mm




No. L
Quantity: 1 PCS
Hex Key
4mm




STET 11

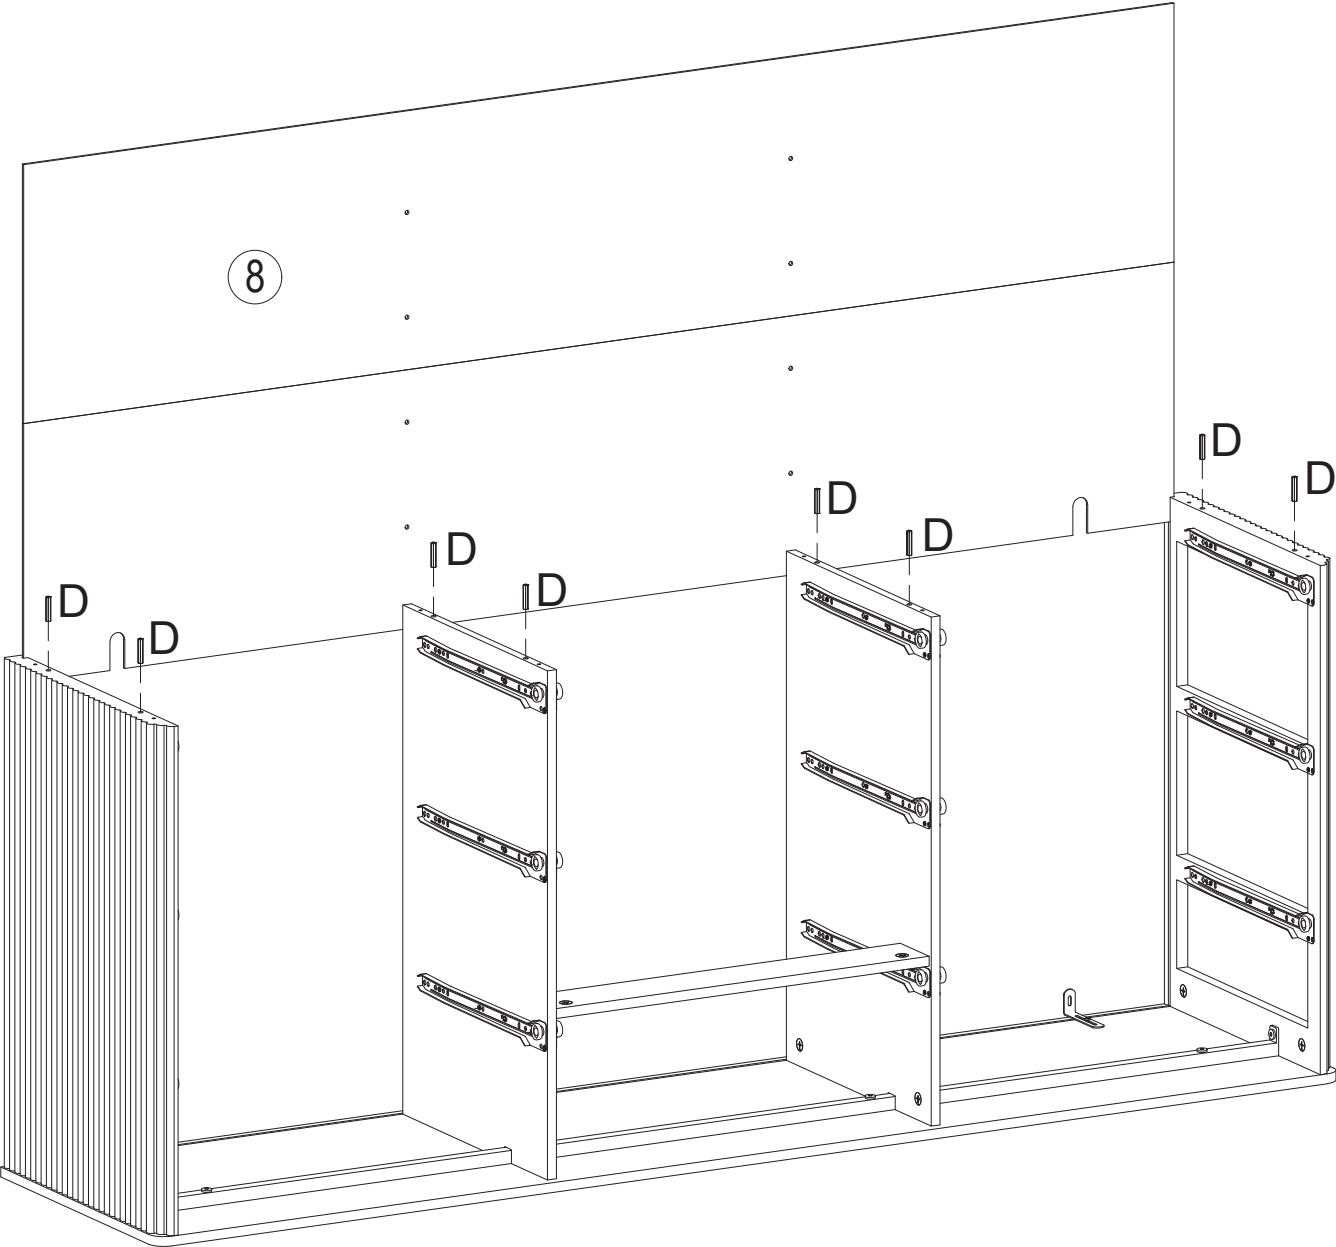


No. D
Quantity: 8 PCS
Dowel
ø6x30mm



STET 12

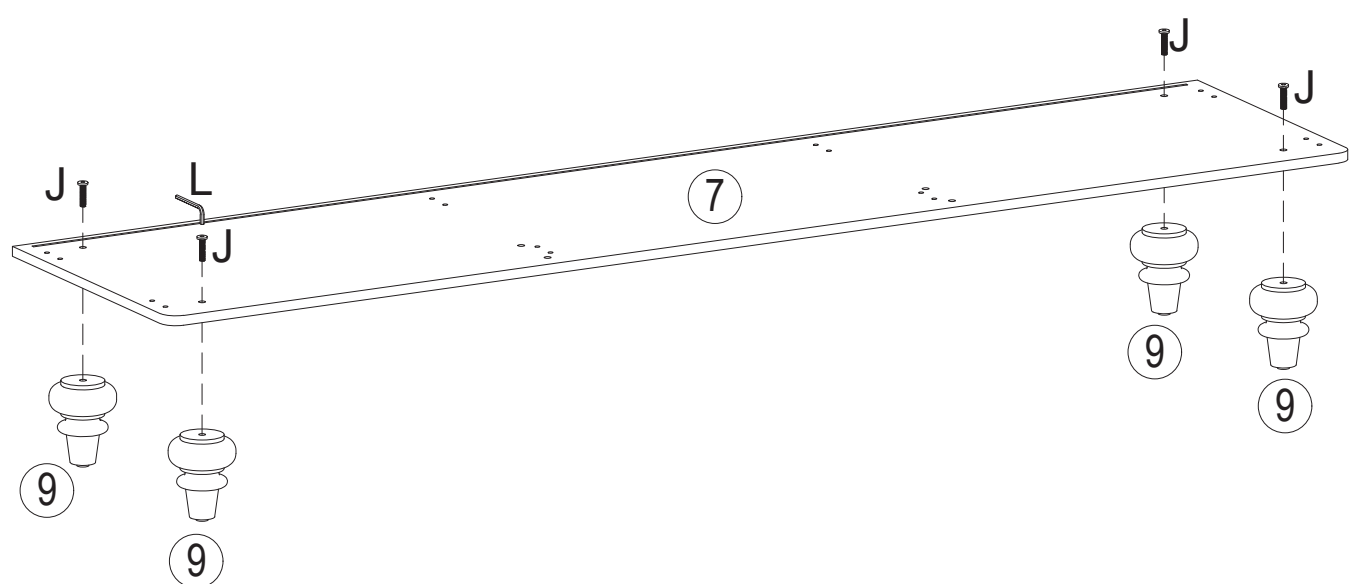


No. J
Quantity: 4 PCS
Bolt
M6x25mm




No. L
Quantity: 1 PCS
Hex Key
4mm



STET 13

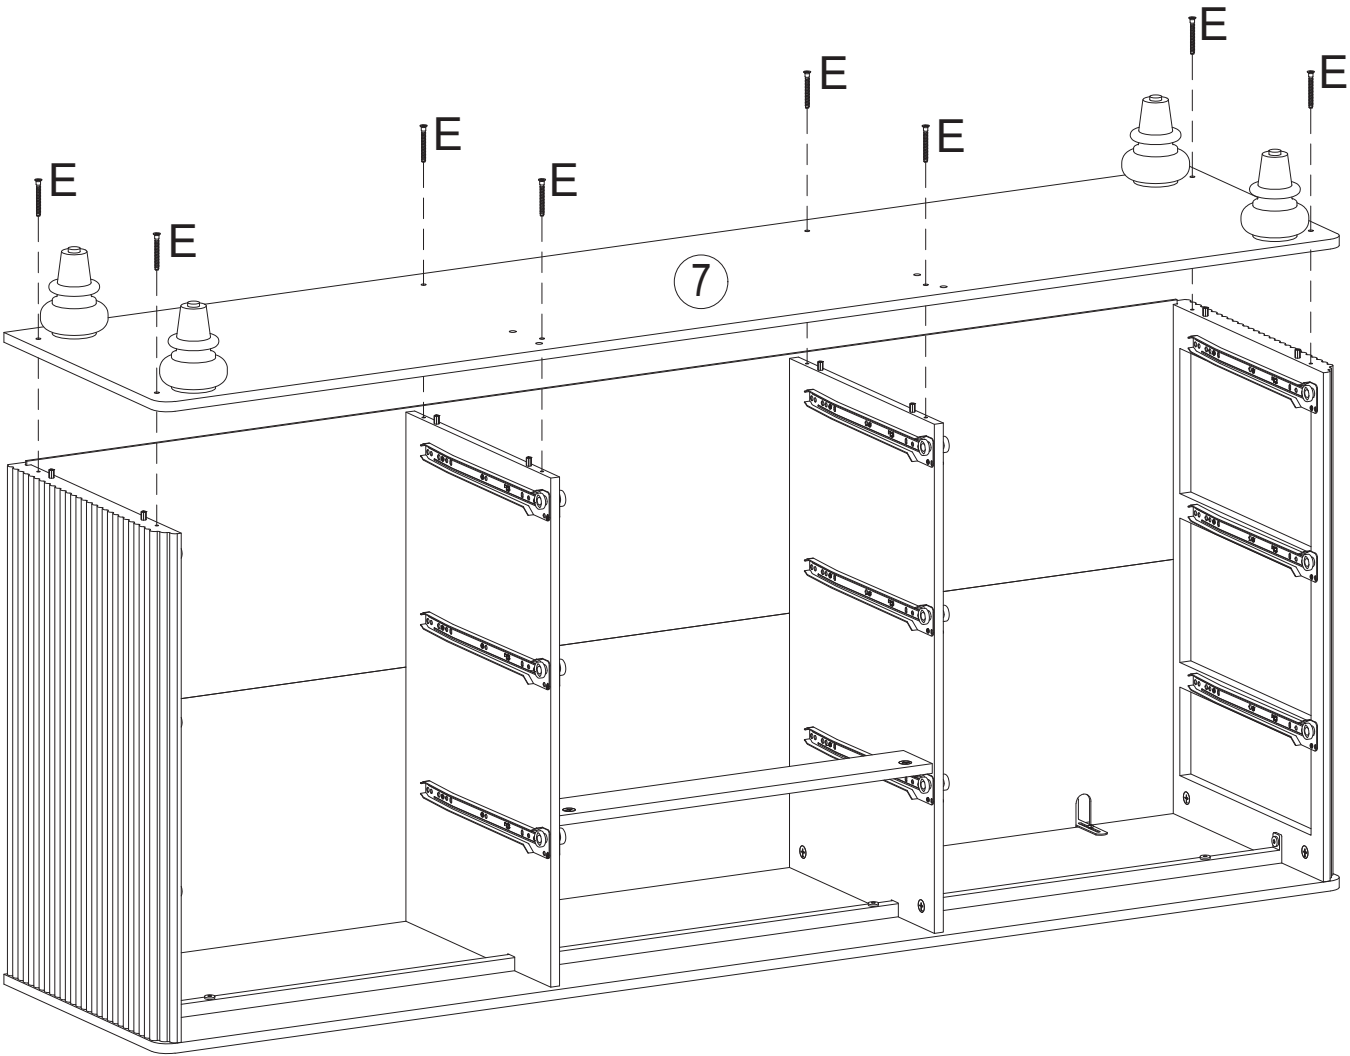


No. E
Quantity: 8 PCS
Screw
ø5x48mm

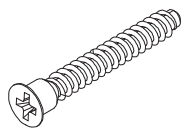


STET 14

NOTE:

For more stable ,the L leg also can be installed oppositly.

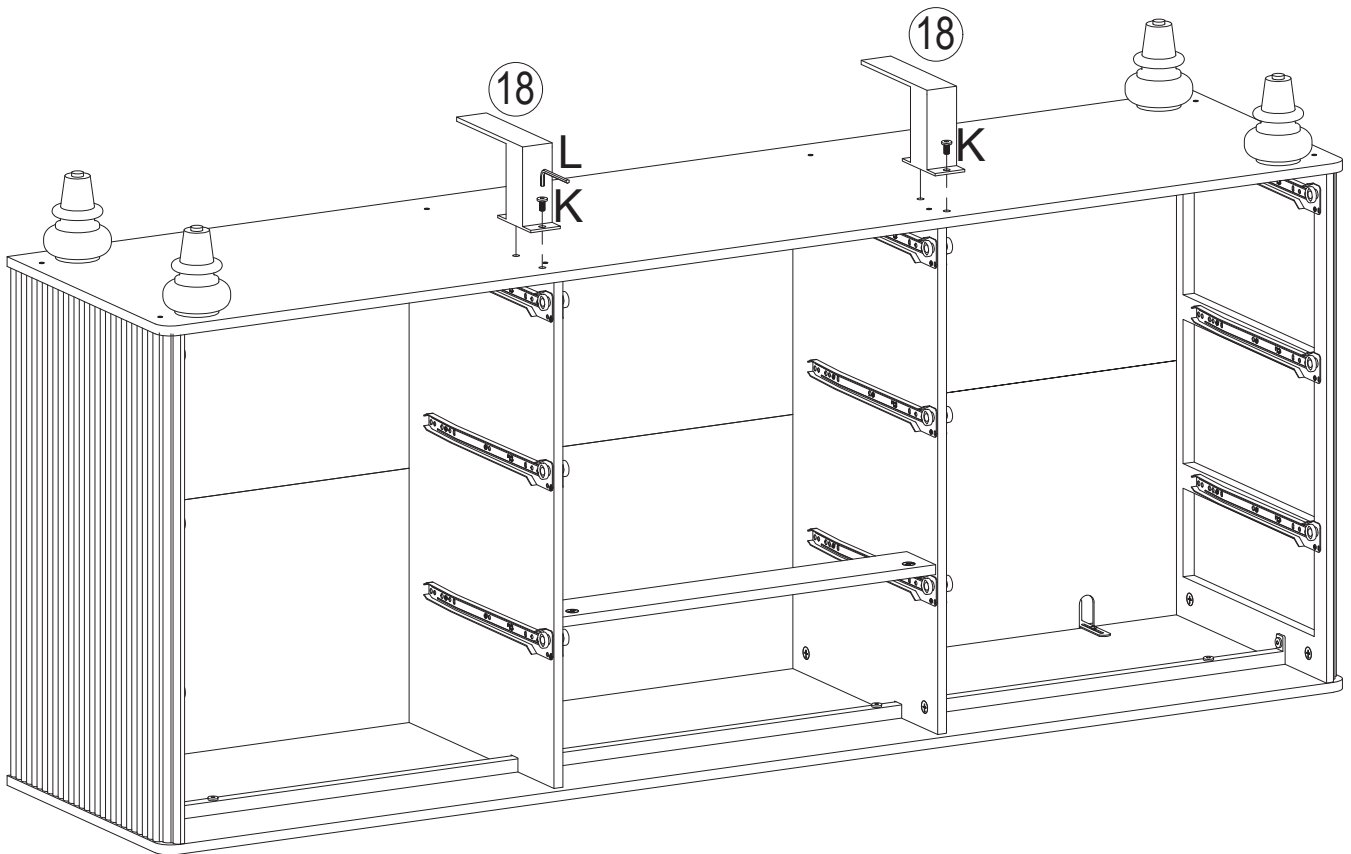


No. K
Quantity: 4 PCS
Bolt
M6x12mm




No. L
Quantity: 1 PCS
Hex Key
4mm





STET 15

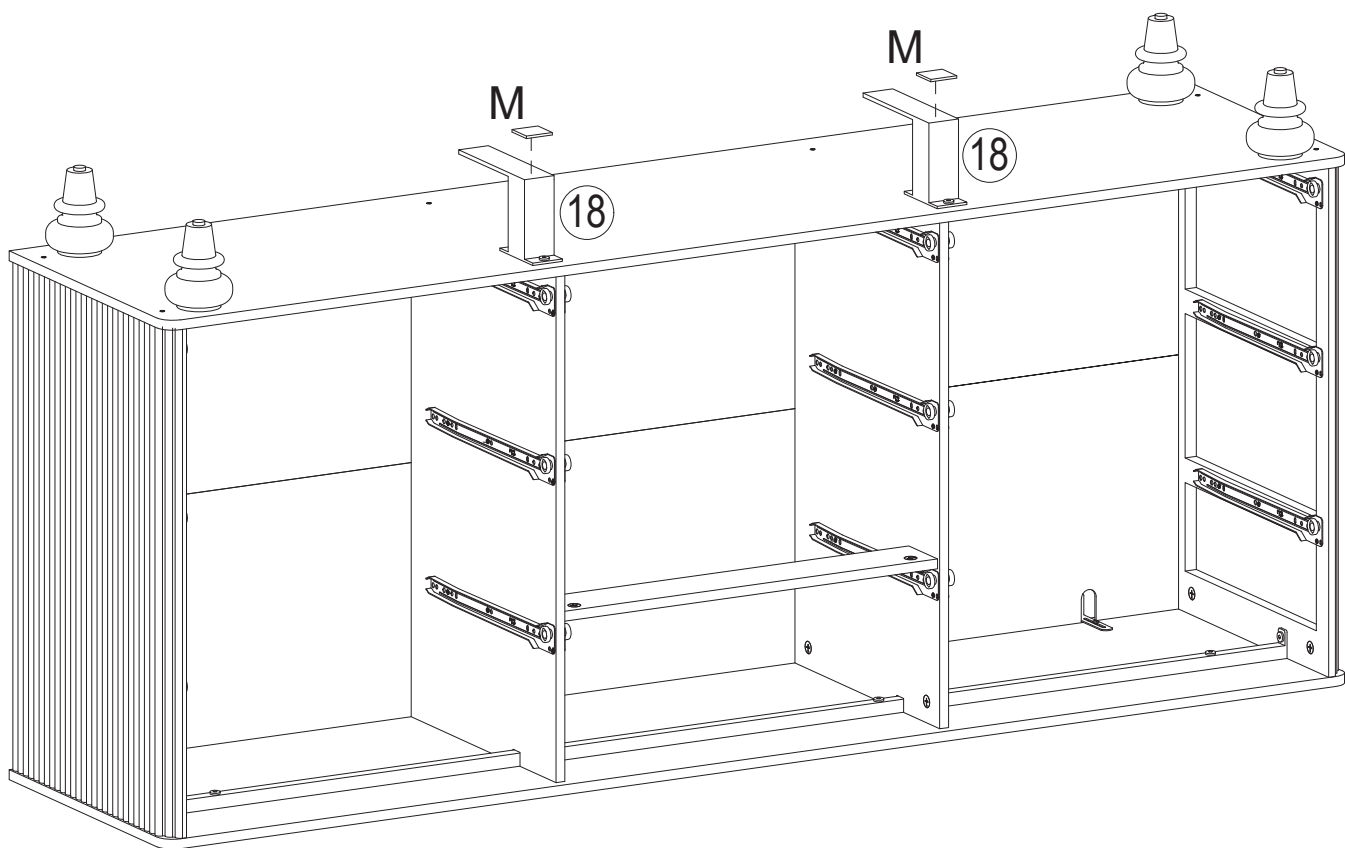


No. M
Quantity: 2 PCS
Foot Pad
35x35x3mm






STET 16

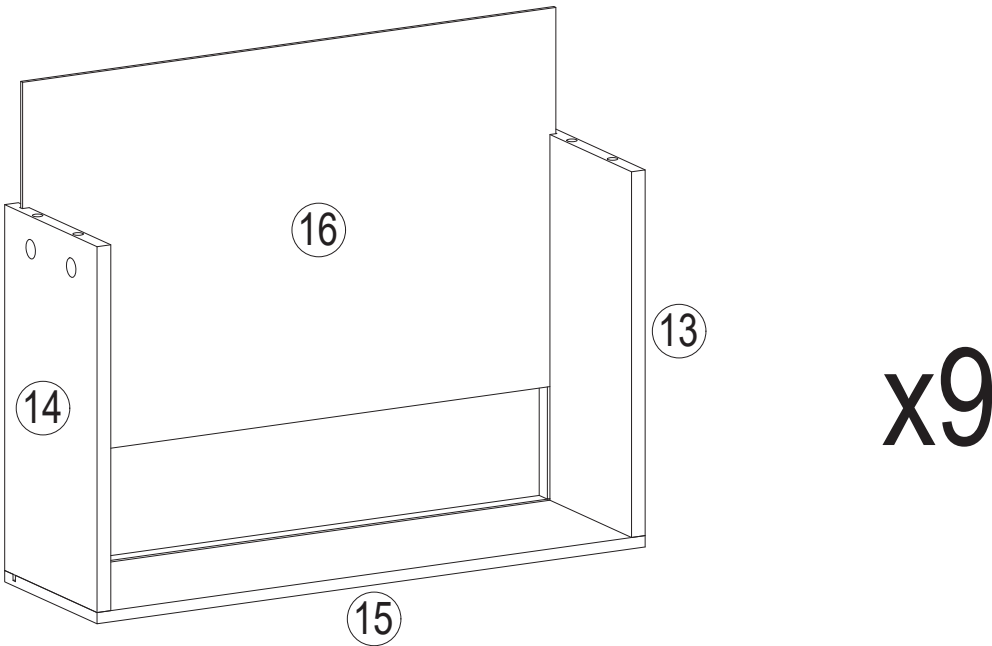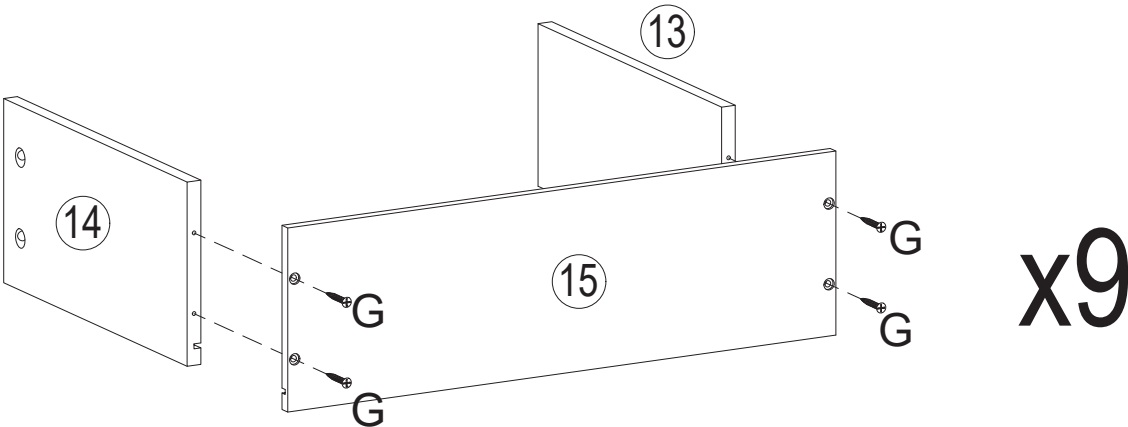


No. G
Quantity: 36 PCS
Screw
ø4x30mm





STET 17

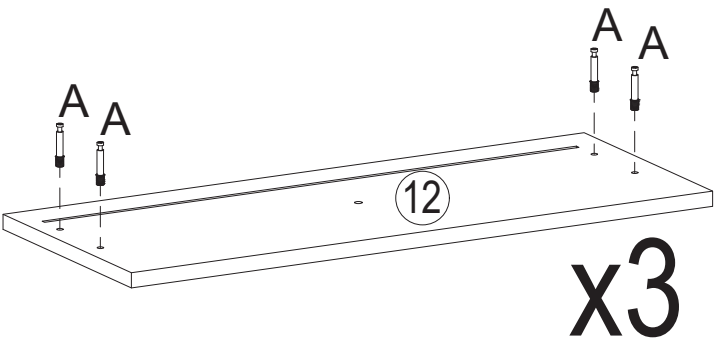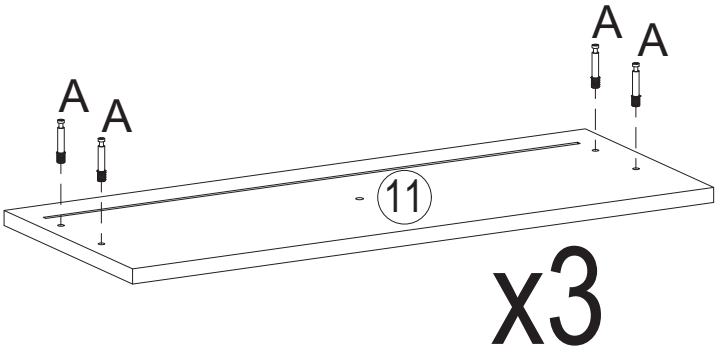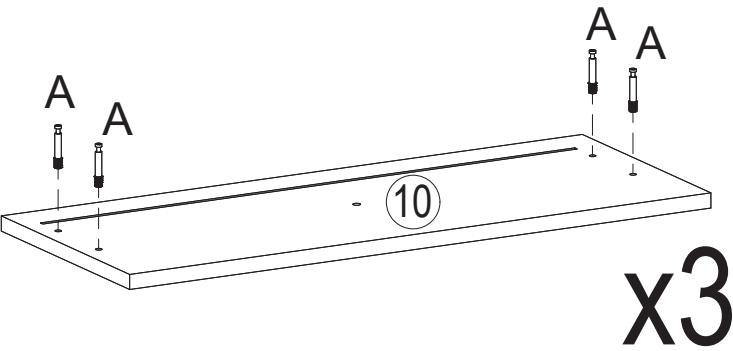

No. A
Quantity: 36 PCS
Cam Bolt
ø6x33.5mm



STET 18

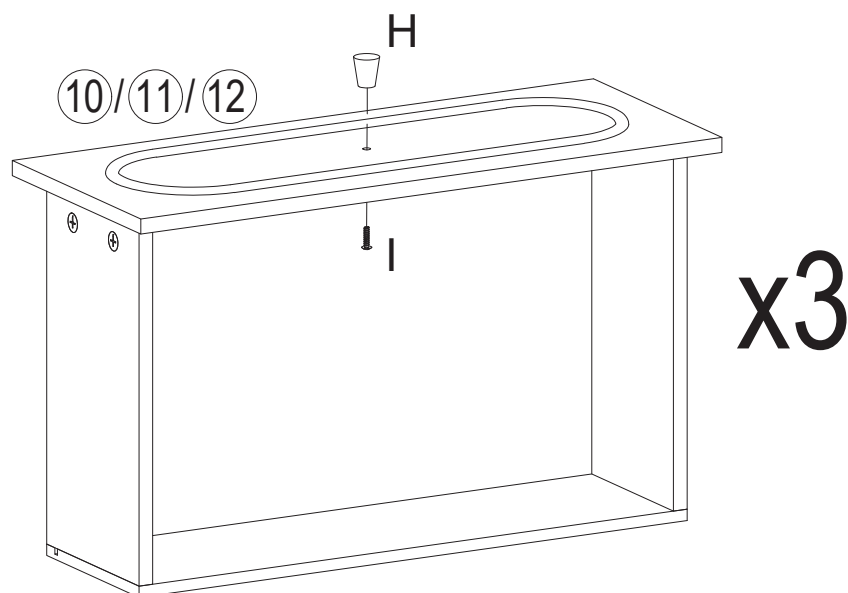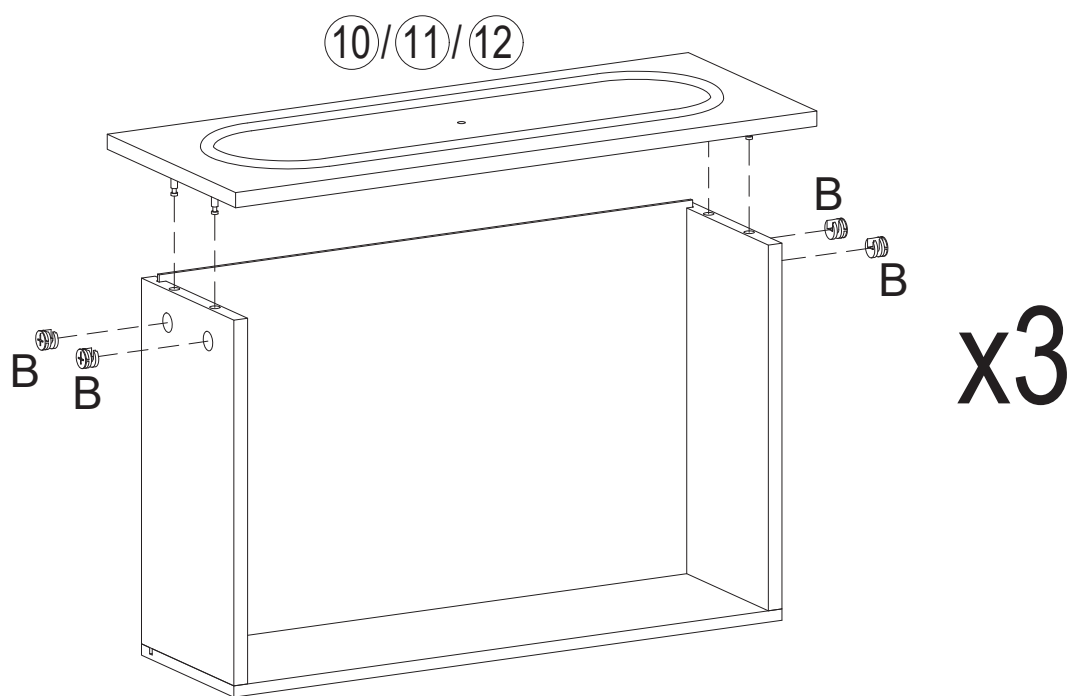


No. B
Quantity: 36 PCS
Cam
ø15x9.5mm




No. H
Quantity: 9 PCS
Handle
ø20x23mm




No. I
Quantity: 9 PCS
Screw
M4x16mm




STET 19

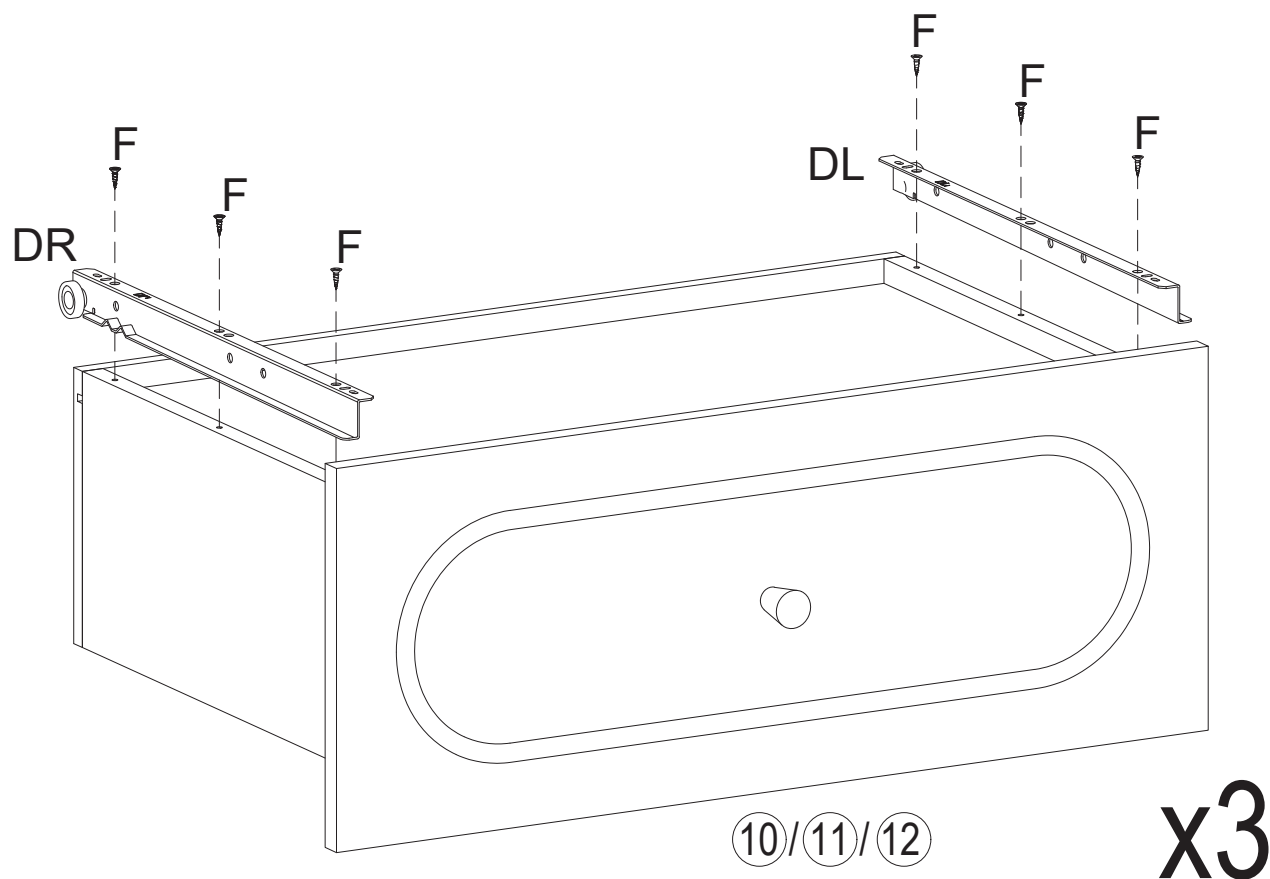


No. F
Quantity: 54 PCS
Screw
ø3.5x12mm




No. DL
Quantity: 9 PCS
Drawer Slider
300mm

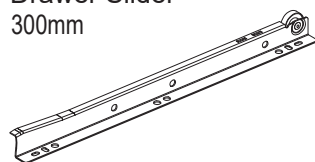


No. DR
Quantity: 9 PCS
Drawer Slider
300mm

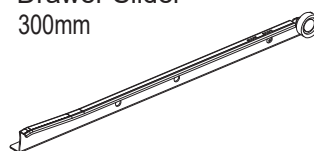


STET 20

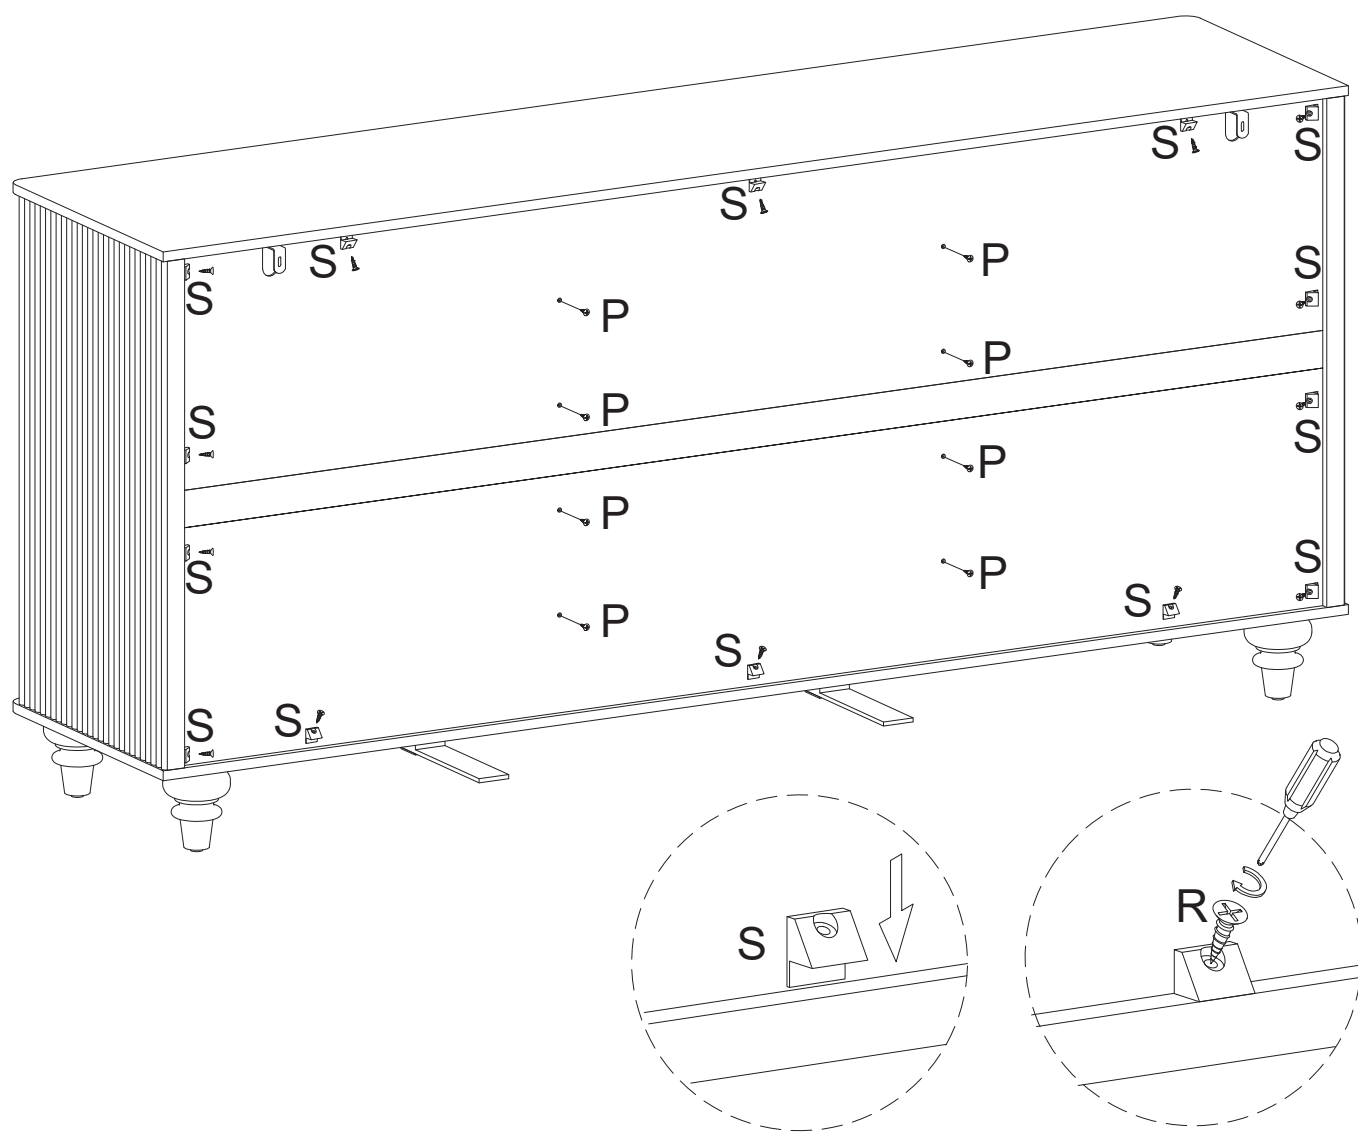


No. P
Quantity: 8 PCS
Screw
ø4x12mm

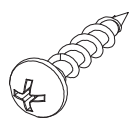



No. R
Quantity: 14 PCS
Screw
ø3x16mm

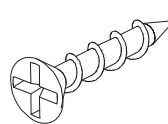


No. S
Quantity: 14 PCS
Back Buckle
15x15x10mm




STET 21

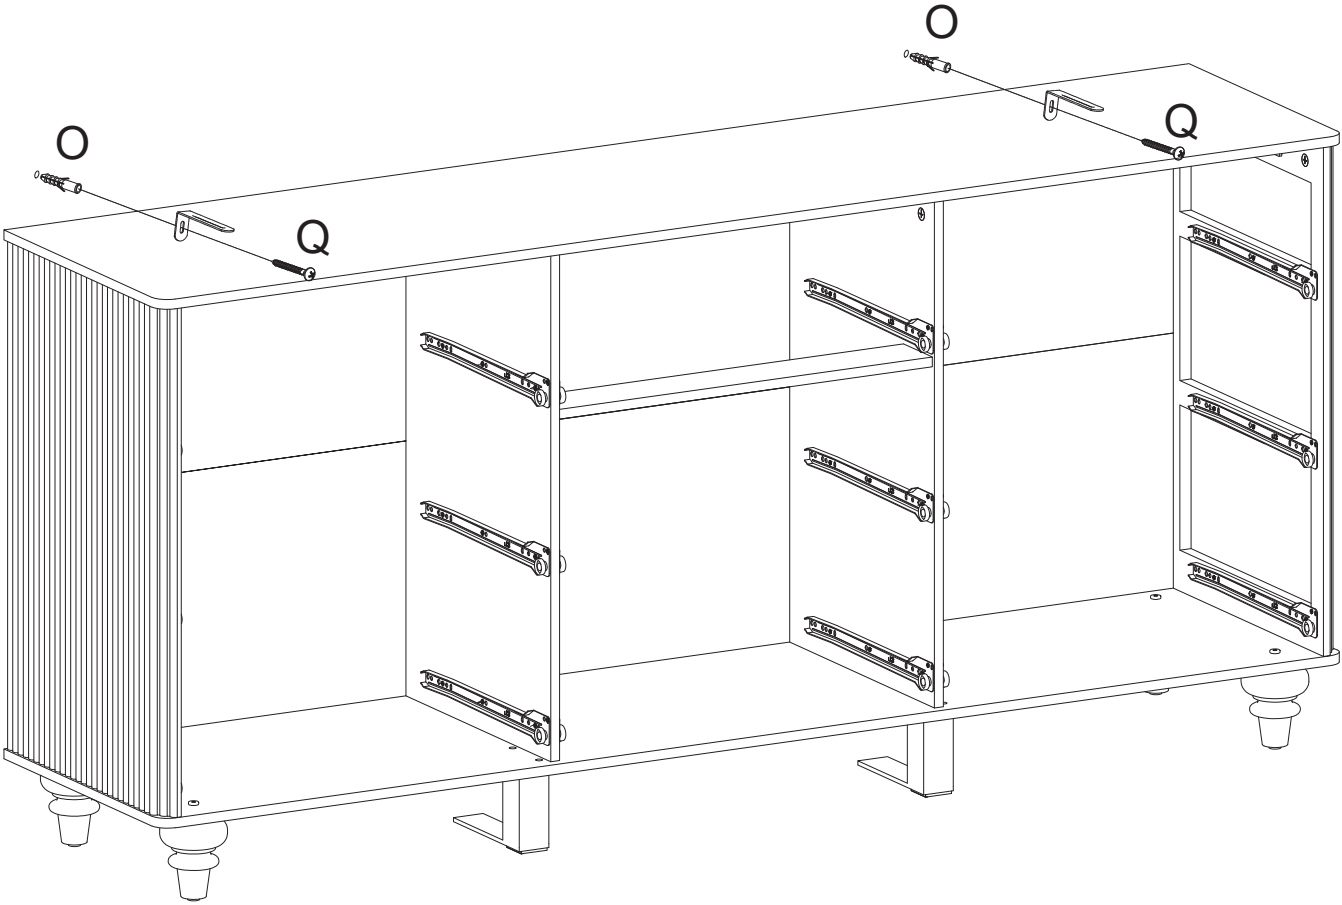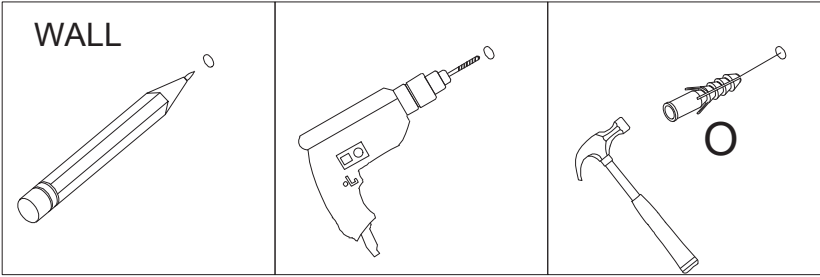




No. O
Quantity: 2 PCS
Plastic Expansion
ø8x40mm

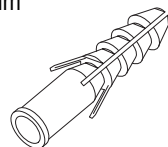

No. Q
Quantity: 2 PCS
Screw
ø4x38mm

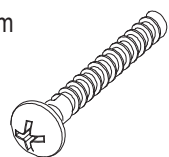

STET 22

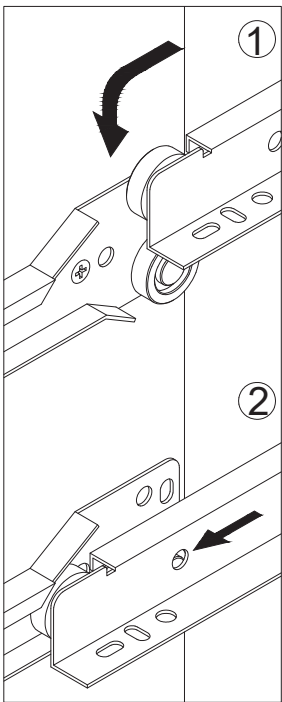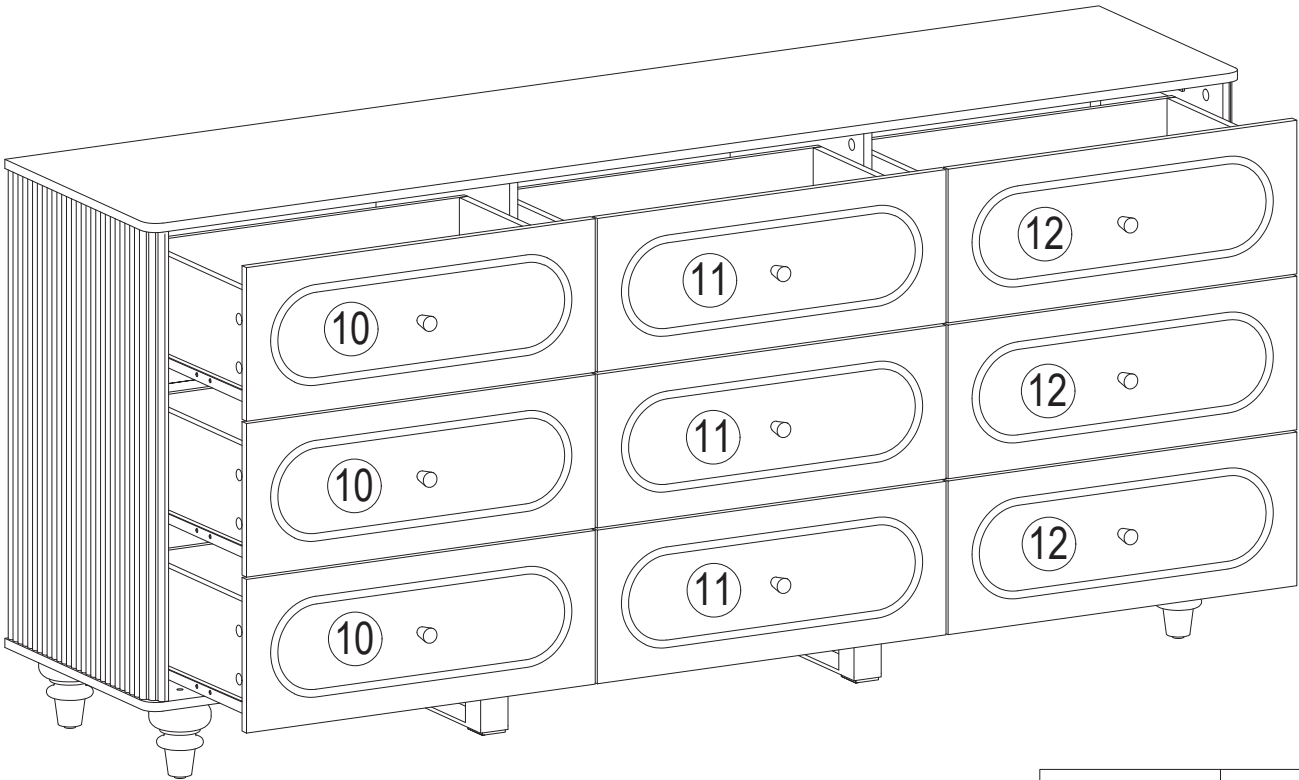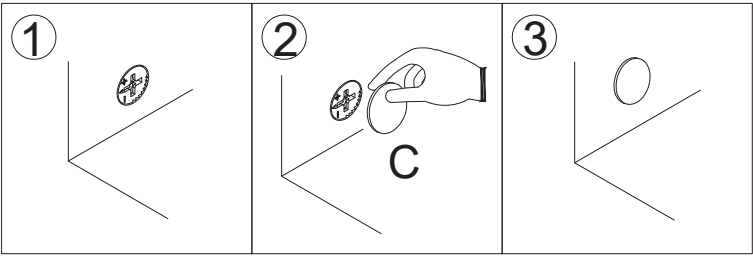

No. C
Quantity: 46 PCS
Sticker
ø20mm



