


MUST READ BEFORE SINK/TOP INSTALLATION

Step 1: Flip over the top to allow the bottom side facing up. Make sure to protect the top side from scratches using the Styrofoam from the packaging.

Step 2: We recommend using either “Liquid Nail Marble” or “Loctite Marble and Granite” and squeeze out a bead along the top edge of the sink. Please DO NOT use any oil-based caulking that might seep through the natural stone top.



Step 3: Place the sinks carefully centered around the opening using the black line shown below as template. Make sure to have the drain on the same side of the 3 faucet holes as shown below.

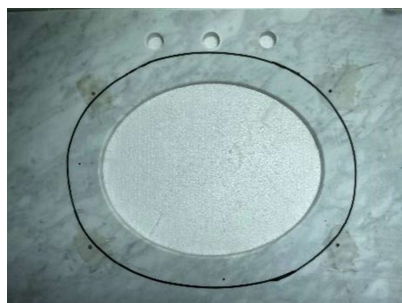

Step 4: Place the 4 metal brackets over the embedded screw holes and **HAND TIGHTEN** the screws. Once the screw head is in contact with the bracket. Use the screwdriver for a **MAXIMUM of 4 TURNS**. Over tighten the screws will result in the marble cracks. The glue will provide enough structural integrity, the bracket is only for positioning.



Step 5: Wait for the glue to dry fully before repositioning the top to glue to the cabinet for plumbing.