
Assembly Instruction

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

Size:W17.25"*H14"*E7"

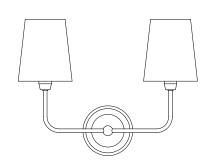

Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Mounting bar		1X	B1	Wire Nut		3X
A1	Mounting screw	п п	2X	С	Fabric shade		2X
A2	Screw	Quan.	2X				2/
				D	Out ring	<u> </u>	2X
В	Fixture body		1X	E	Bulb		2X


Installation

Step 1

- 1. Install the fabric shade (C) to the fixture body (B), secure with out ring (D).
- 2. Place the bulb (E) to the socket.


*NOTE:

PLEASE USE ON/OFF TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED BULB MAX 9-WATT THERE ARE 2PCS LED 4-WATT BULBS IN THE BOX

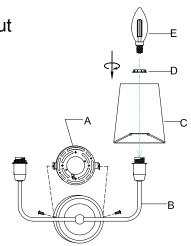

Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:		
Black	White		
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)		
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor		



*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)




Grounding Instructions:

a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector. b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 3

Installing the mounting bar(A) with mounting screw(A1),then secure the backplate (F) with screw(A2)

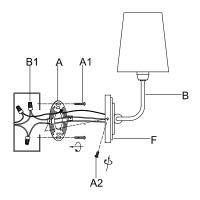

Step 4

Consult a qualified electrician to ensure correct branch circuit conductor

