


Hall Tree

Assembly Instructions - Please keep for future reference

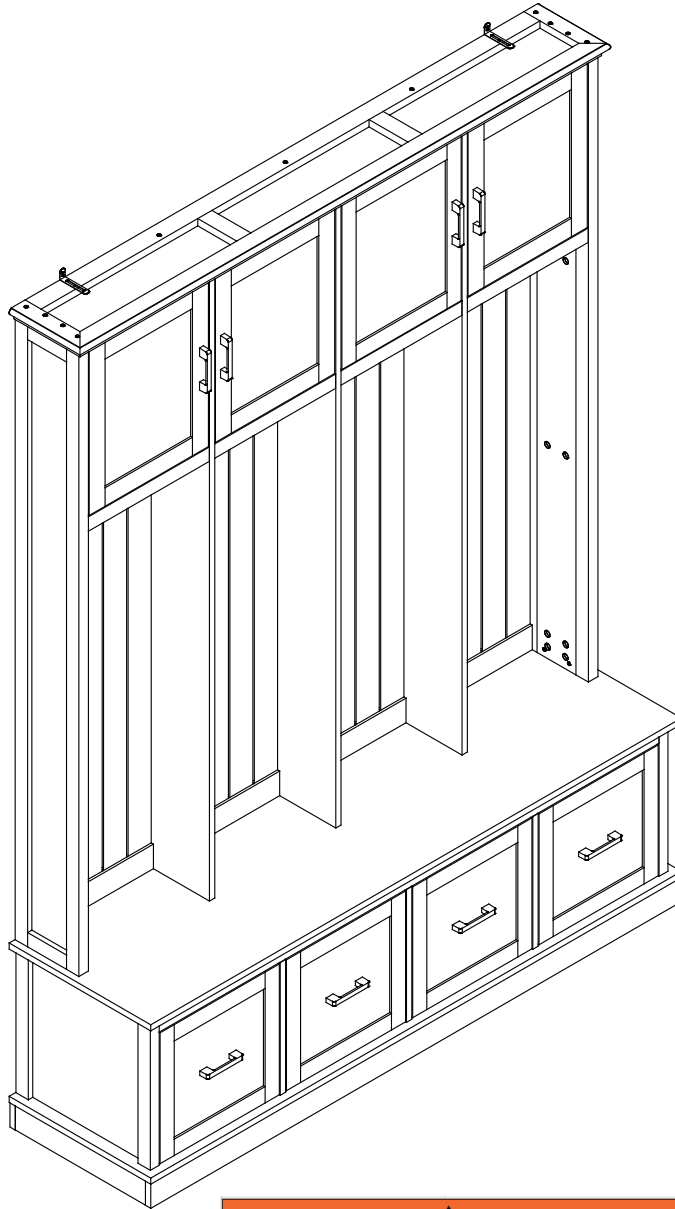

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-78.74inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions








To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 A Cam Bolt x 124+2	 B 6*30mm Dowel x 84+2	 C Cam lock x 124+2	 D Allen key x 1
 E Foot pad x10	 F 3.5*14mm Back panel clip x 9set	 G x4set	 H 4*18mm round handle x 4set
 I 3*12mm Hook x 4set	 J 4*16mm Screw x 8+1	 K 3*12mm Screw x 32+2	 L 4*40mm Screw x 28+2
 M Slide x8	 N x 8set	 O Anti-tipping Device x2	 P Perfect fit x 50
 Q 4*30mm Screw x 16+1	 R 4*8mm round handle x 4set		

Tools required Not Included



Phillips screwdriver
(medium & large)

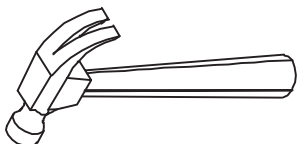


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

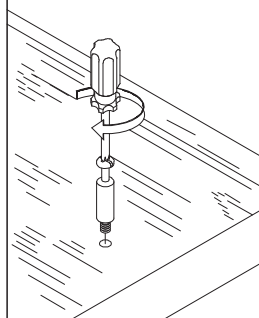

Step 2

Push the male camlock into the entry hole.

2

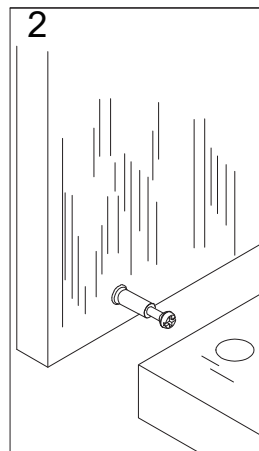


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

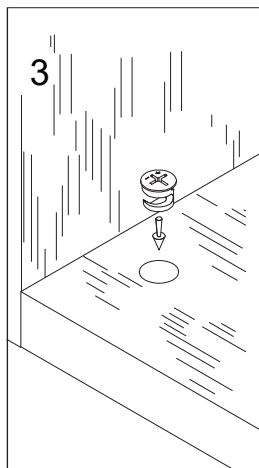


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4


















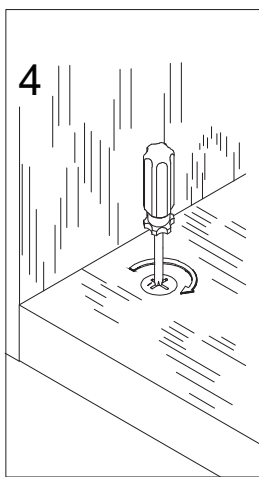


Assembly Instructions

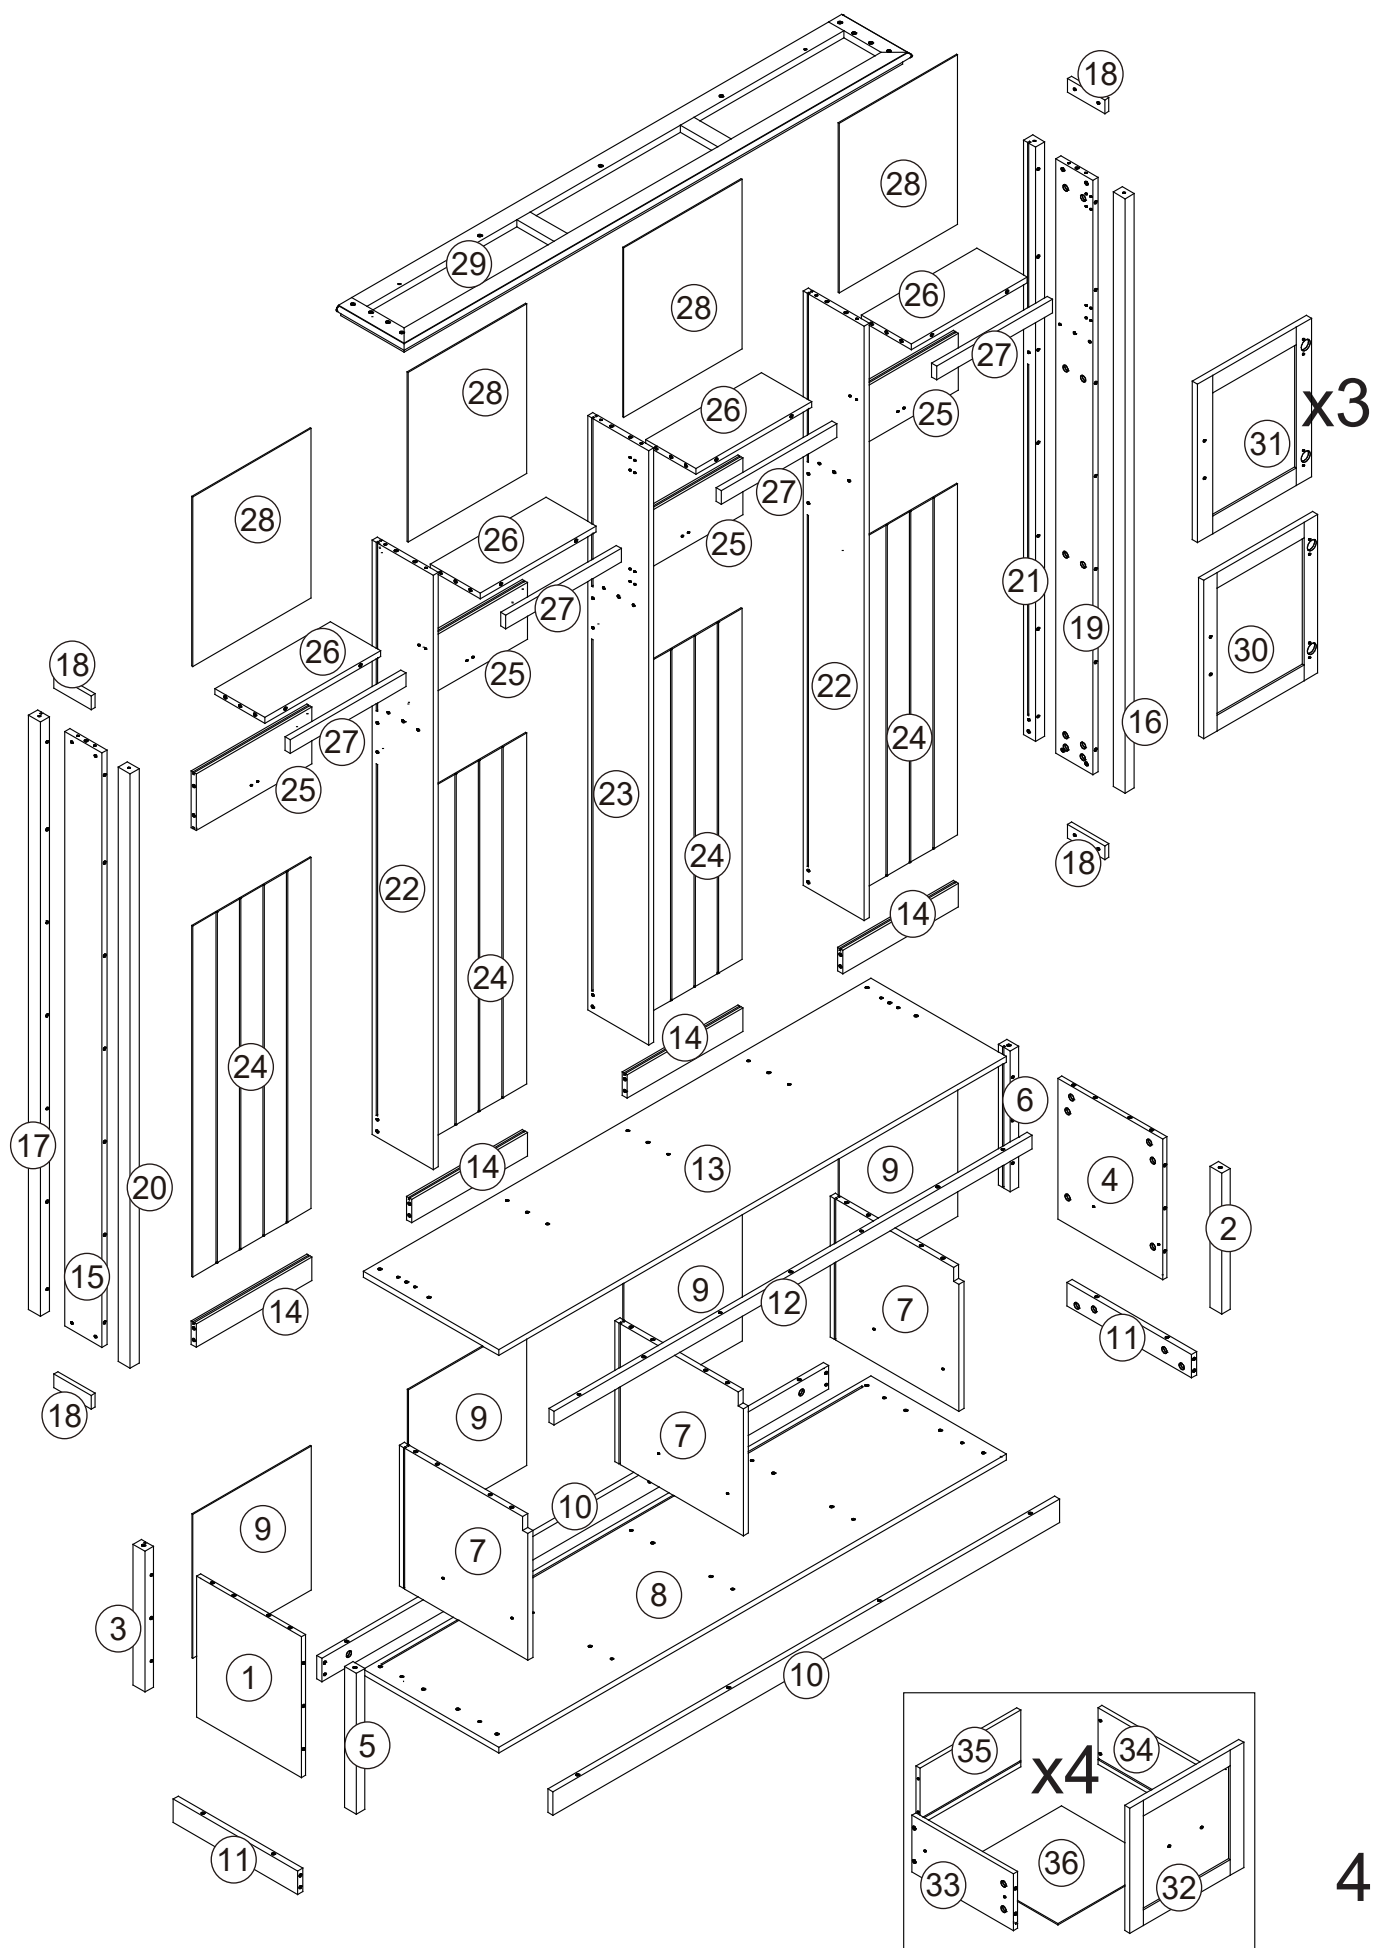





PART LIST

This product comes in 2 box.

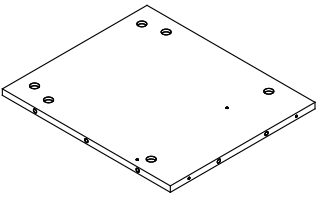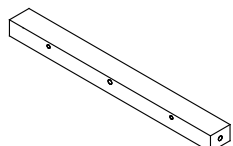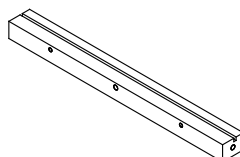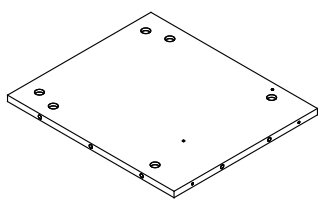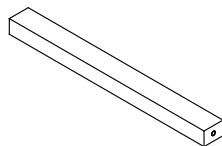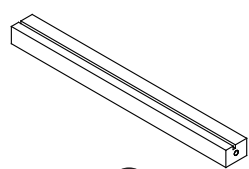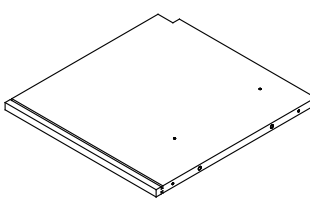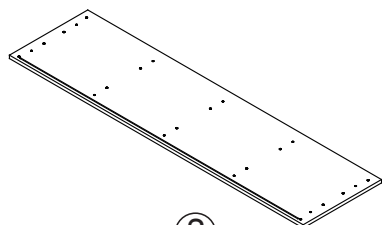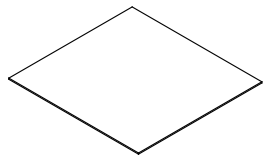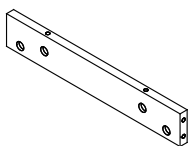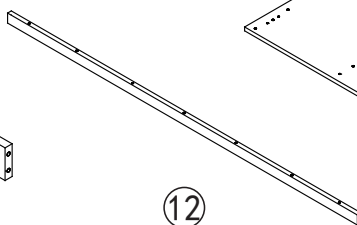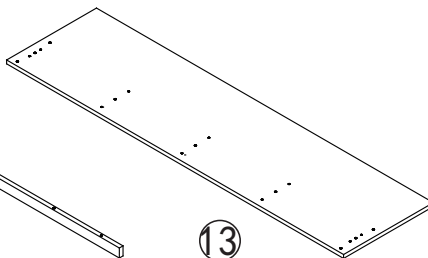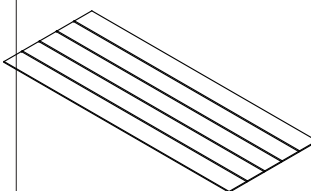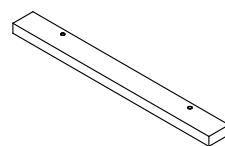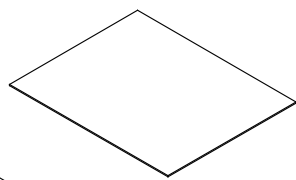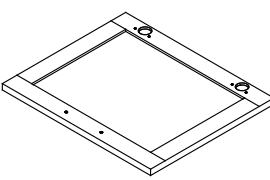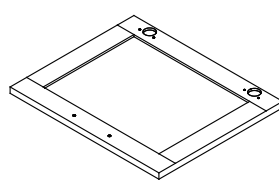 ① x1 360x310x12mm	 ② x1 360x35x25mm	 ③ x1 360x35x25mm	 ④ x1 360x310x12mm	
 ⑤ x1 360x35x25mm	 ⑥ x1 360x35x25mm	 ⑦ x3 360x380x15mm	 ⑧ x1 1500x400x15mm	
 ⑨ x4 368x350x3mm	 ⑪ x2 368x60x15mm	 ⑫ x1 1413x35x15mm	 ⑬ x1 1500x400x15mm	 ⑭ x4 342x60x15mm
 ②④ x4 898x350x3mm	 ②⑦ x4 324x35x15mm	 ②⑧ x4 434x350x3mm	 ③⑦ x1 405x337x15mm	 ③① x3 405x337x15mm






PART LIST






This product comes in 2 box.

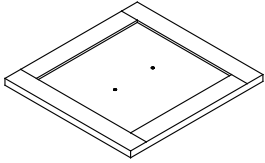
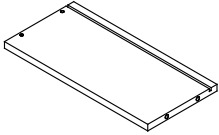
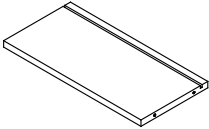
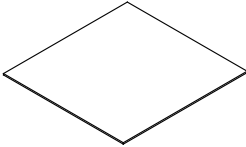
				
③②	③③	③⑤	③⑥	
x4	x4	x4	x4	
320x337x15mm	300x145x12mm	298x145x12mm	306*296*3mm	Hardware kit x1

PART LIST

This product comes in 2 box.

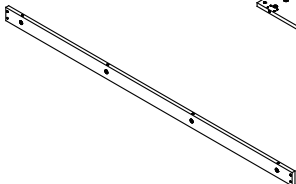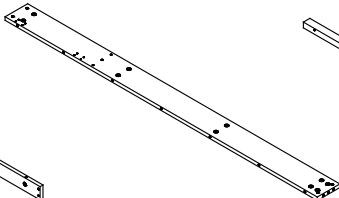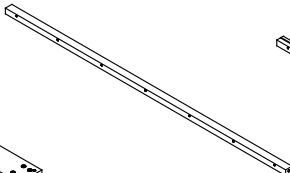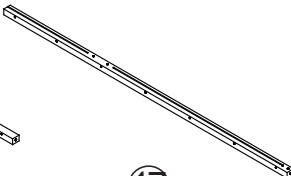

				
⑩ x2 1498x60x15mm	⑮ x1 1520x110x12mm	⑯ x1 1520x35x25mm	⑰ x1 1520x35x25mm	⑱ x4 110x35x12mm

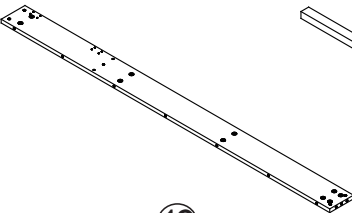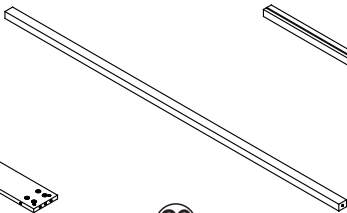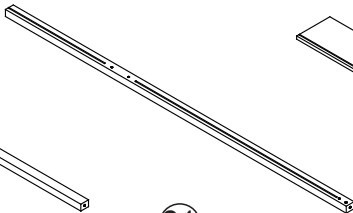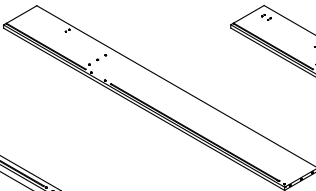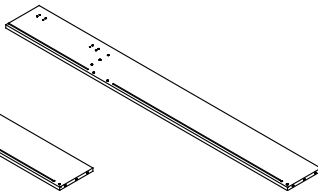				
⑲ x1 1520x110x12mm	⑳ x1 1520x35x25mm	㉑ x1 1520x35x25mm	㉒ x2 1520x180x15mm	㉓ x1 1520x180x15mm

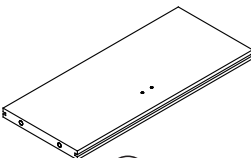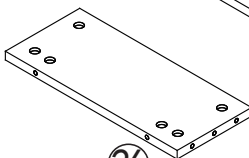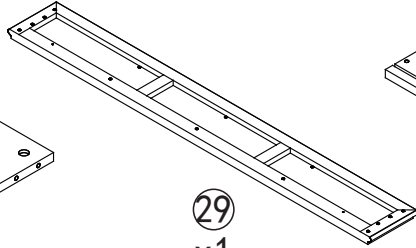
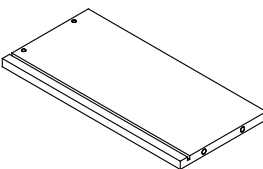
			
㉕ x4 342x145x15mm	㉖ x4 342x148x15mm	㉙ x1 1500x200x30mm	㉚ x4 300x145x12mm

Assembly Instructions

Step 1

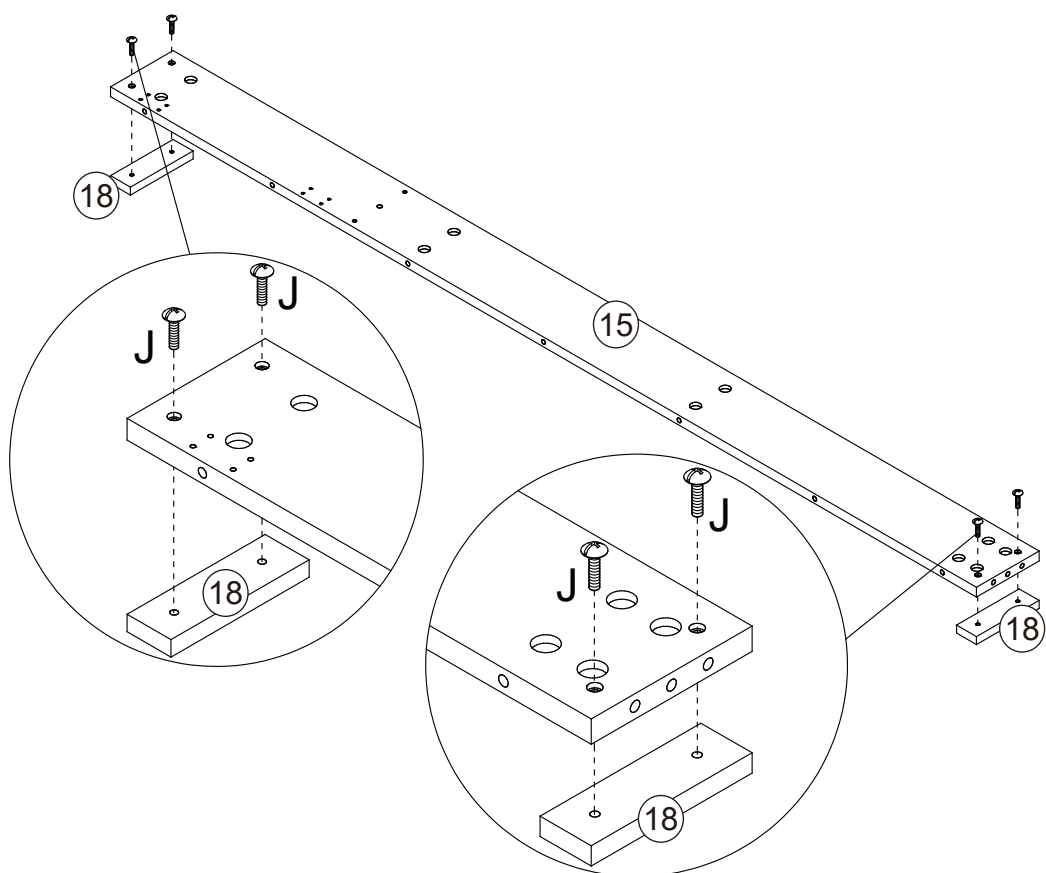


Step 2

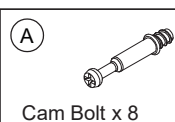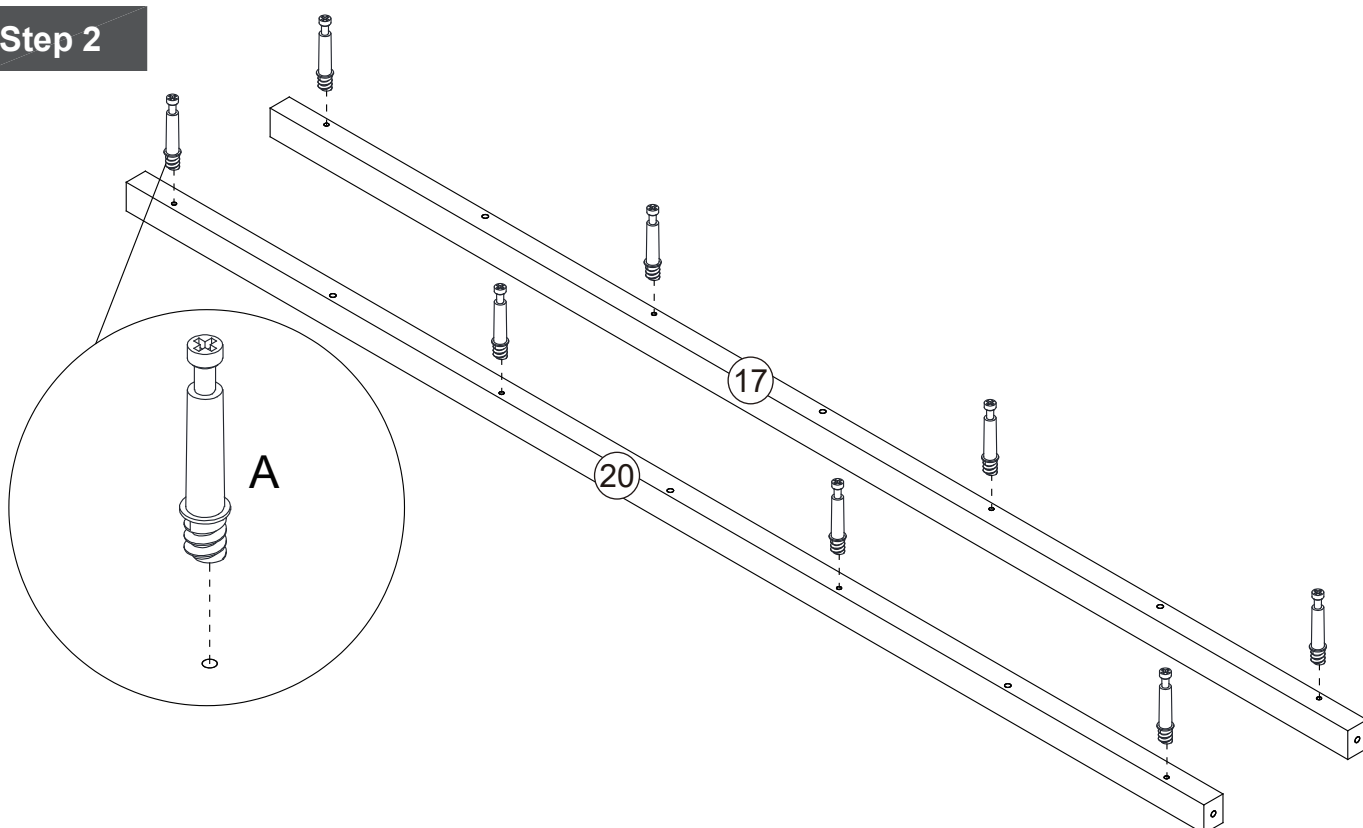

Assembly Instructions


Step 3

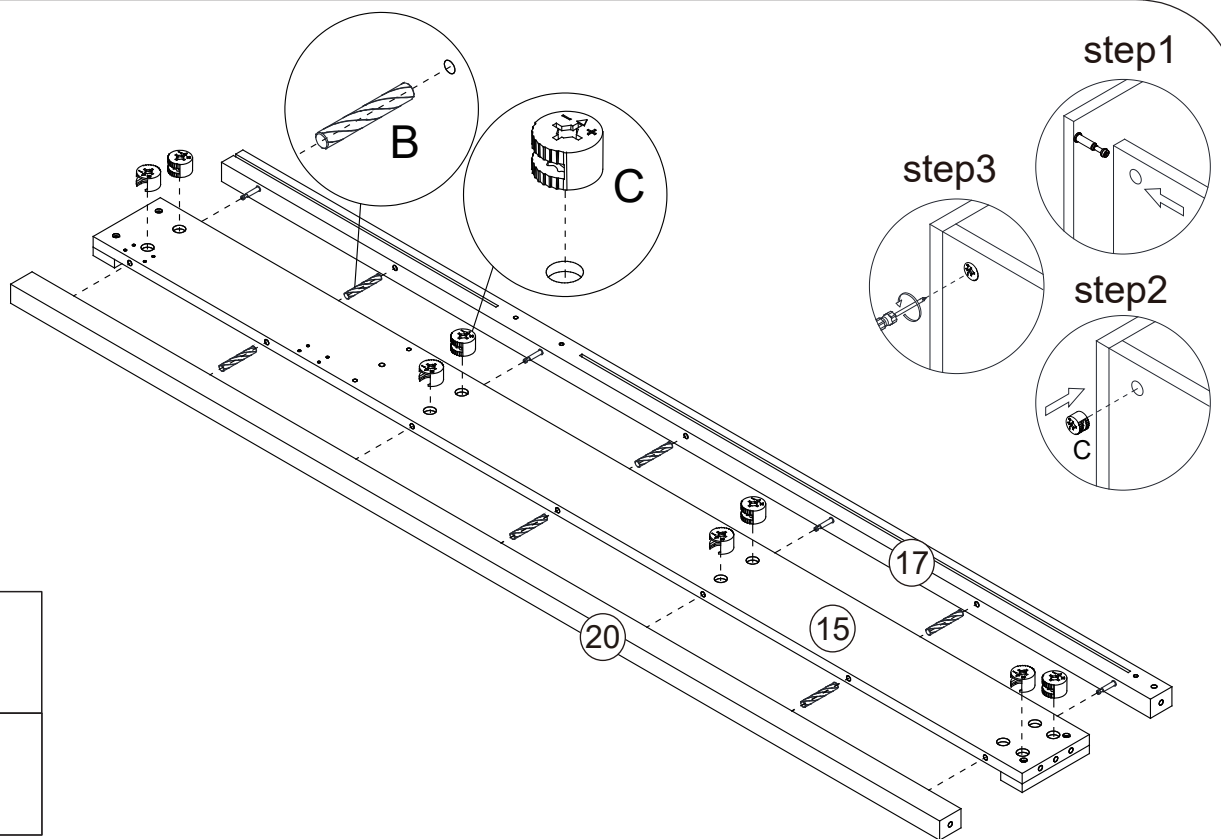

(C)
Cam lock x 8

(B)
6*30mm Dowel x 6

Step 4


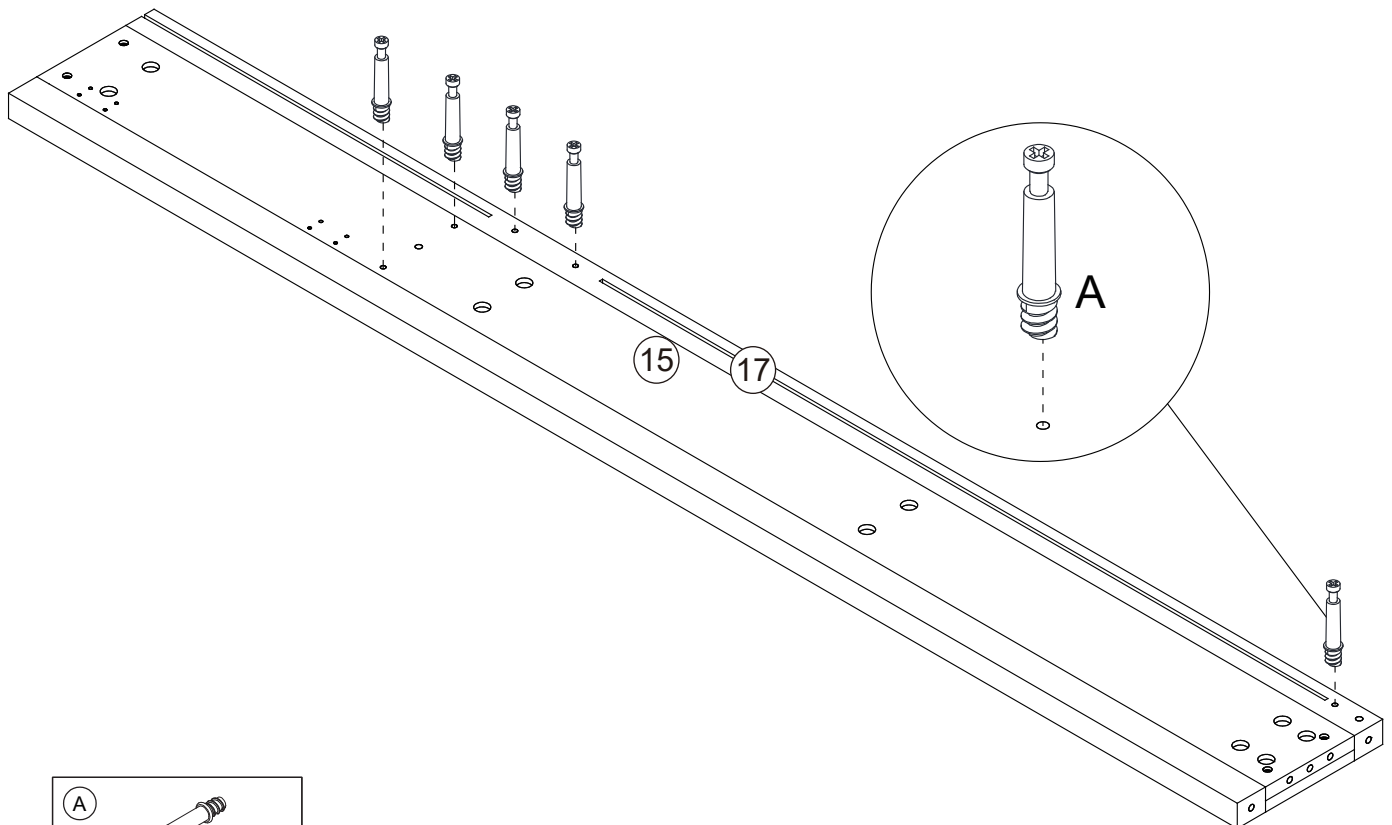


(A)
Cam Bolt x 5



Assembly Instructions

Step 5

x4

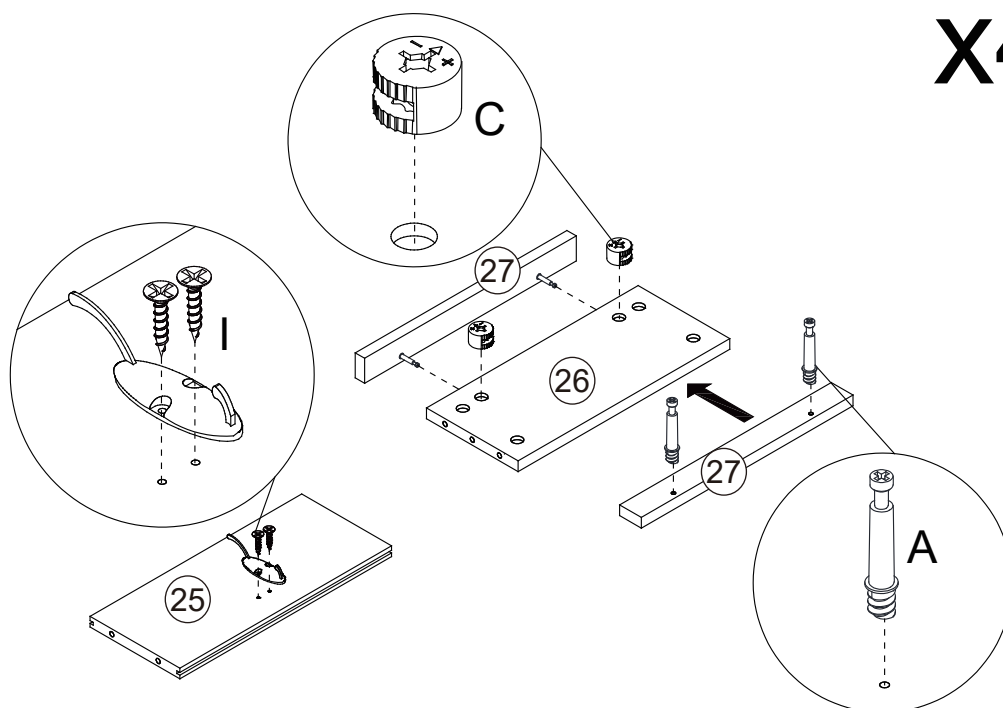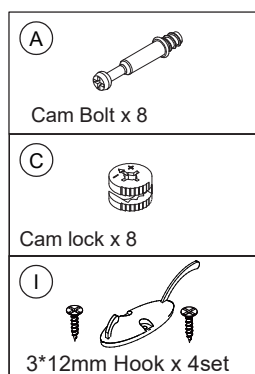


Step 6

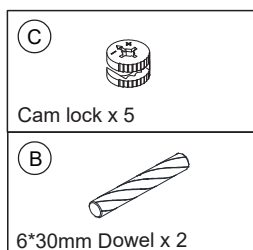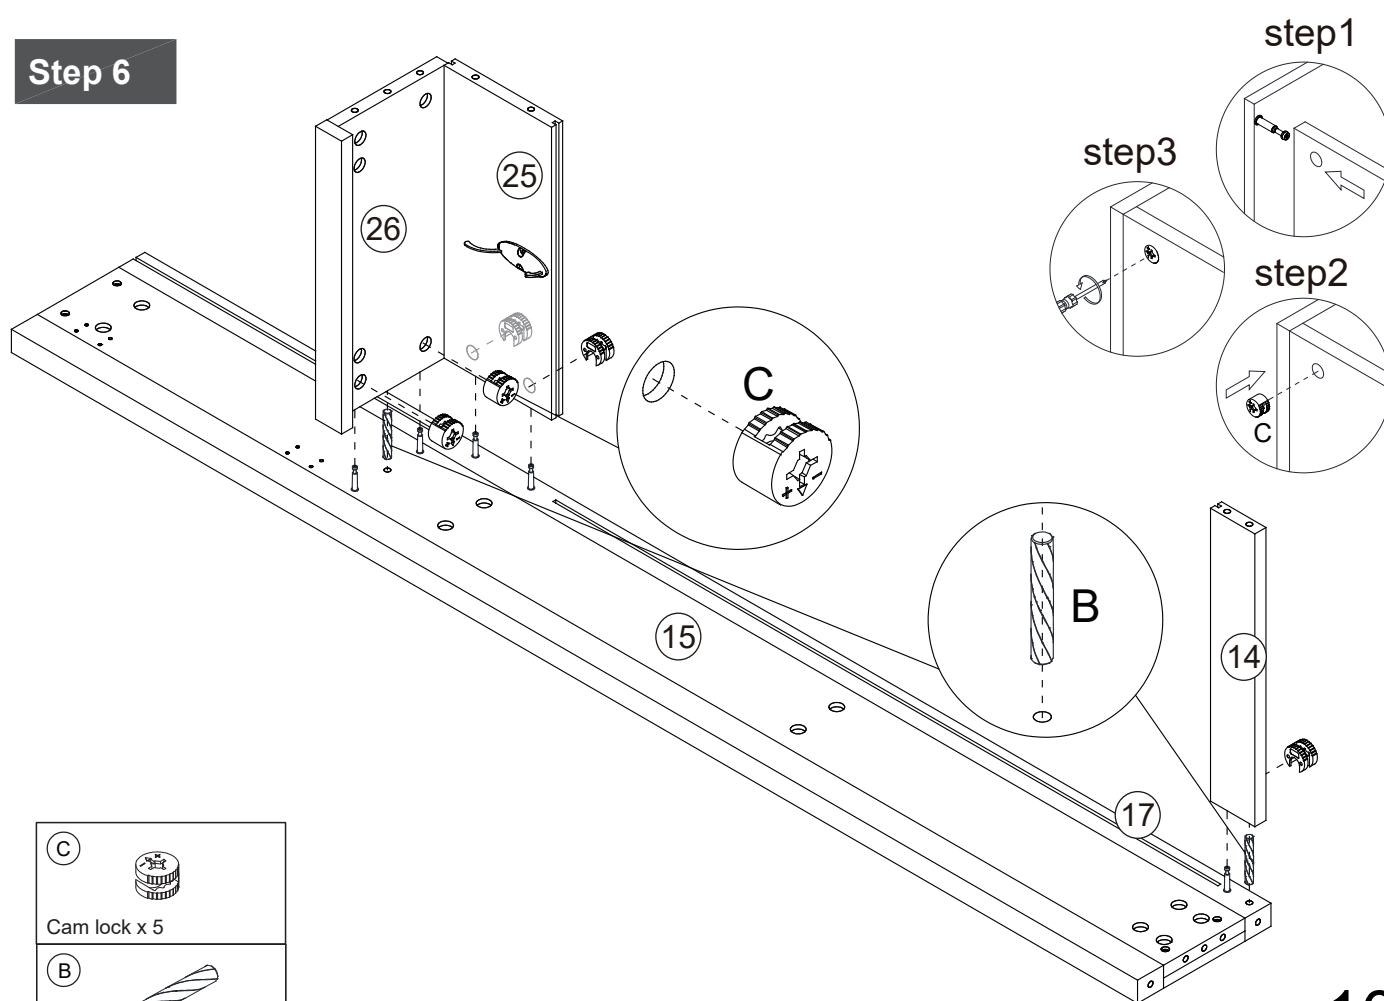


Assembly Instructions

Step 7

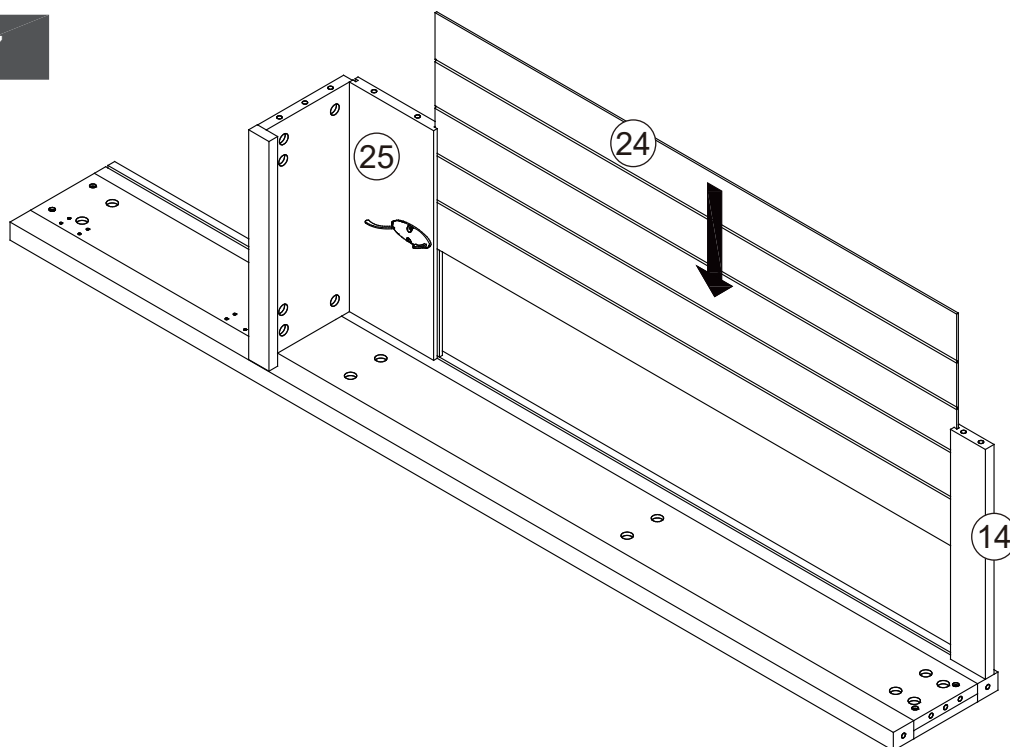


Step 8

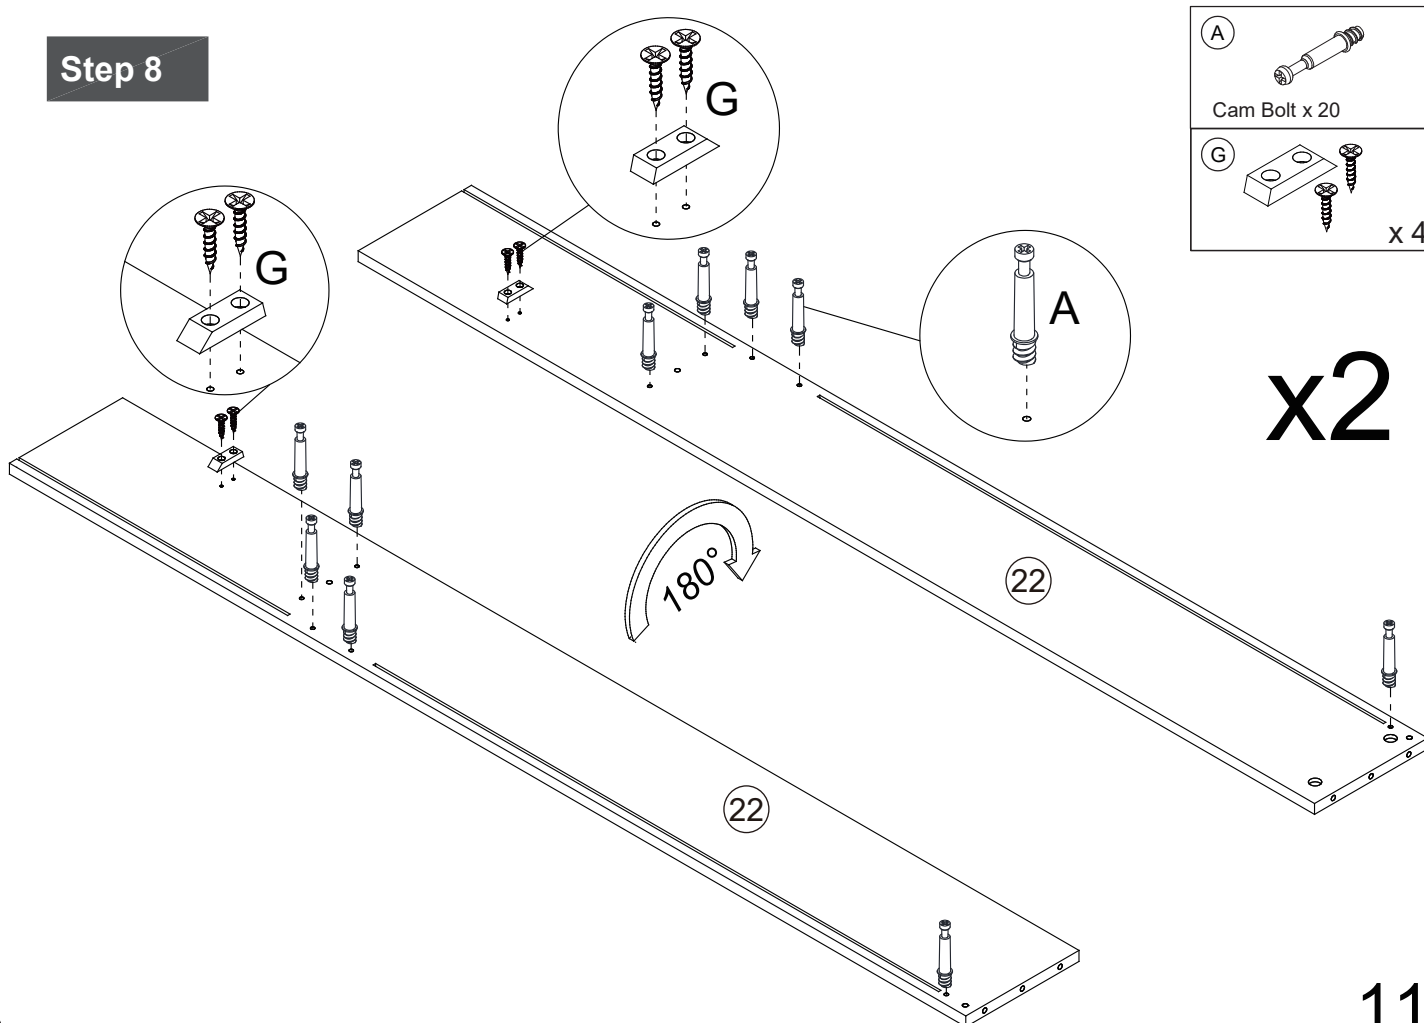


Assembly Instructions

Step 9

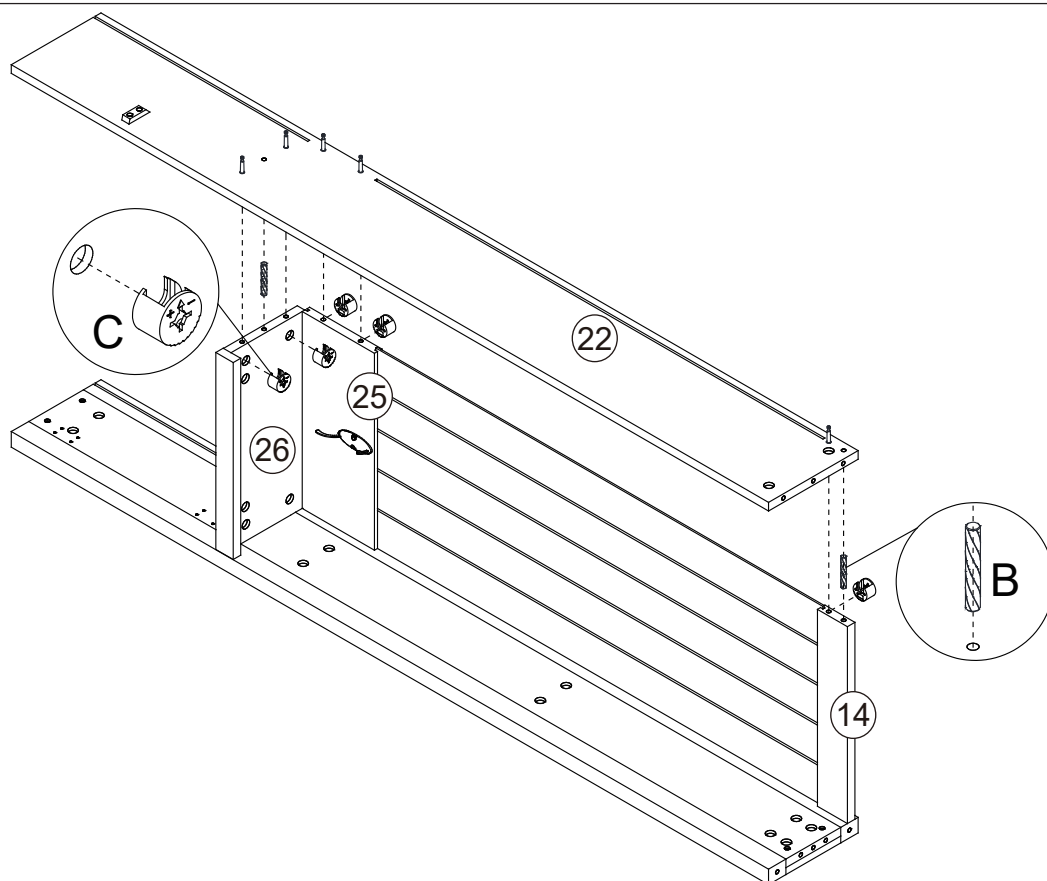

- (C) 
Cam lock x 5
- (B) 
6*30mm Dowel x 2


Step 10

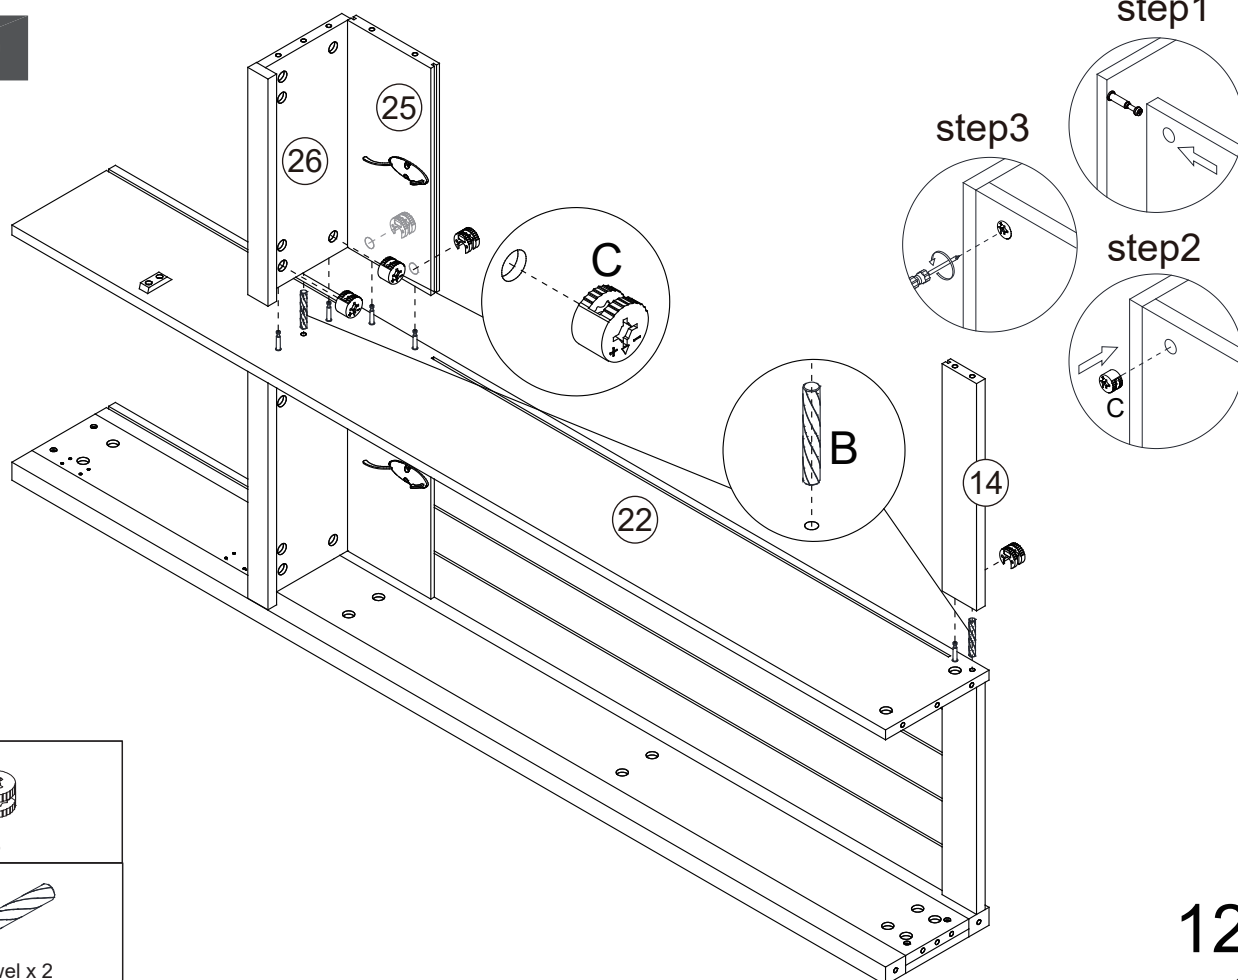


- (C) 
Cam lock x 5
- (B) 
6*30mm Dowel x 2

Assembly Instructions

Step 11


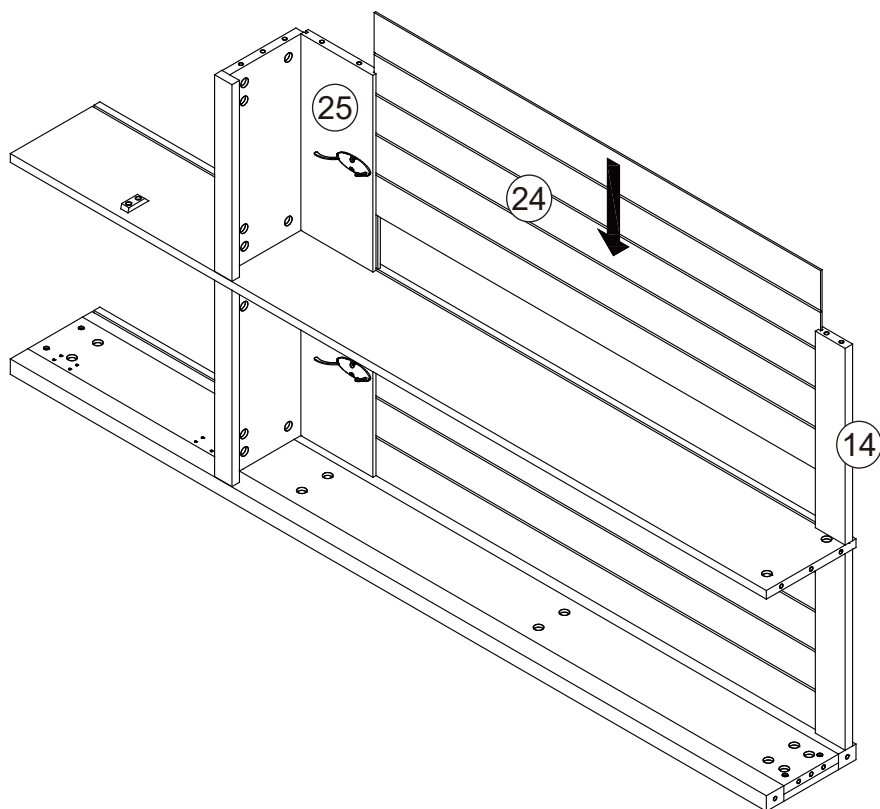


Step 12


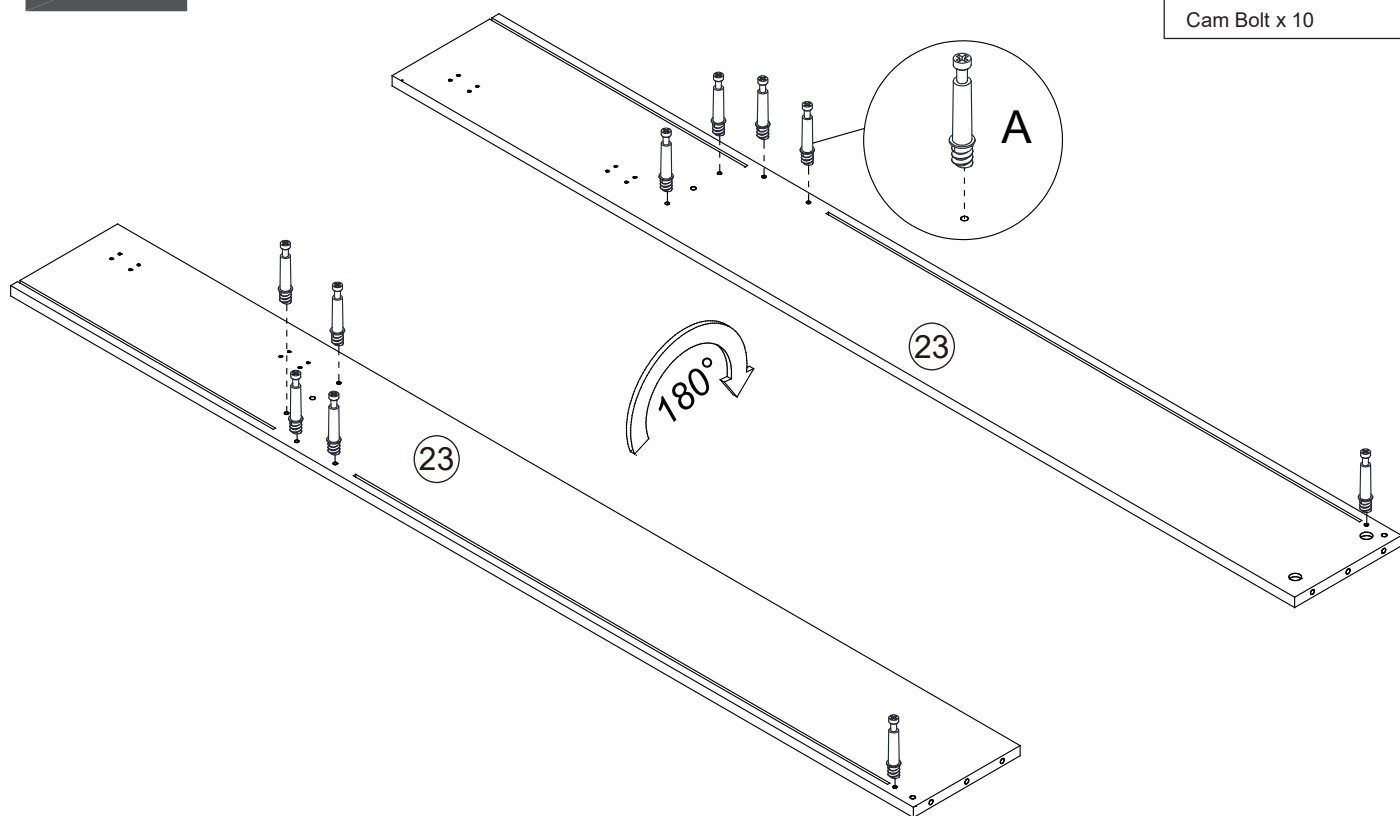


Assembly Instructions

Step 13

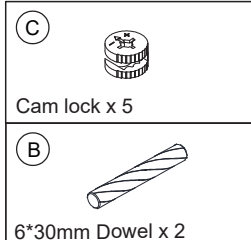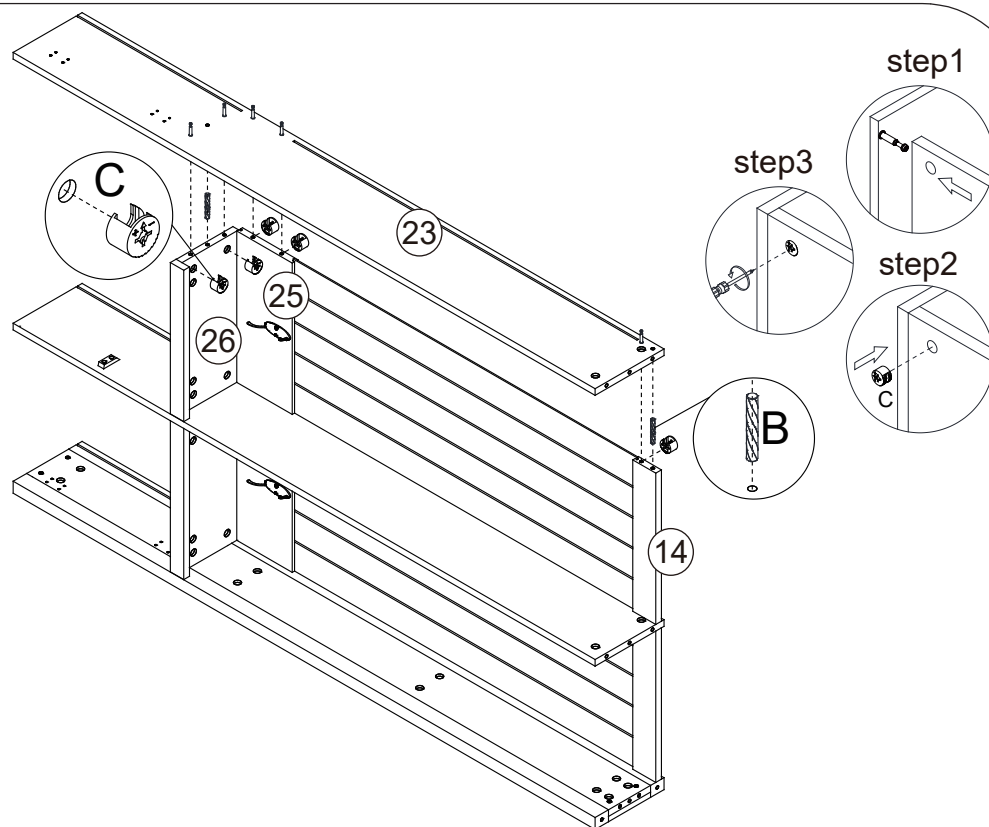


Step 14

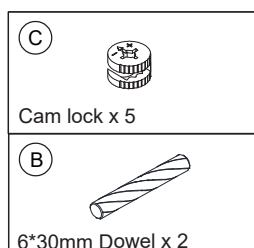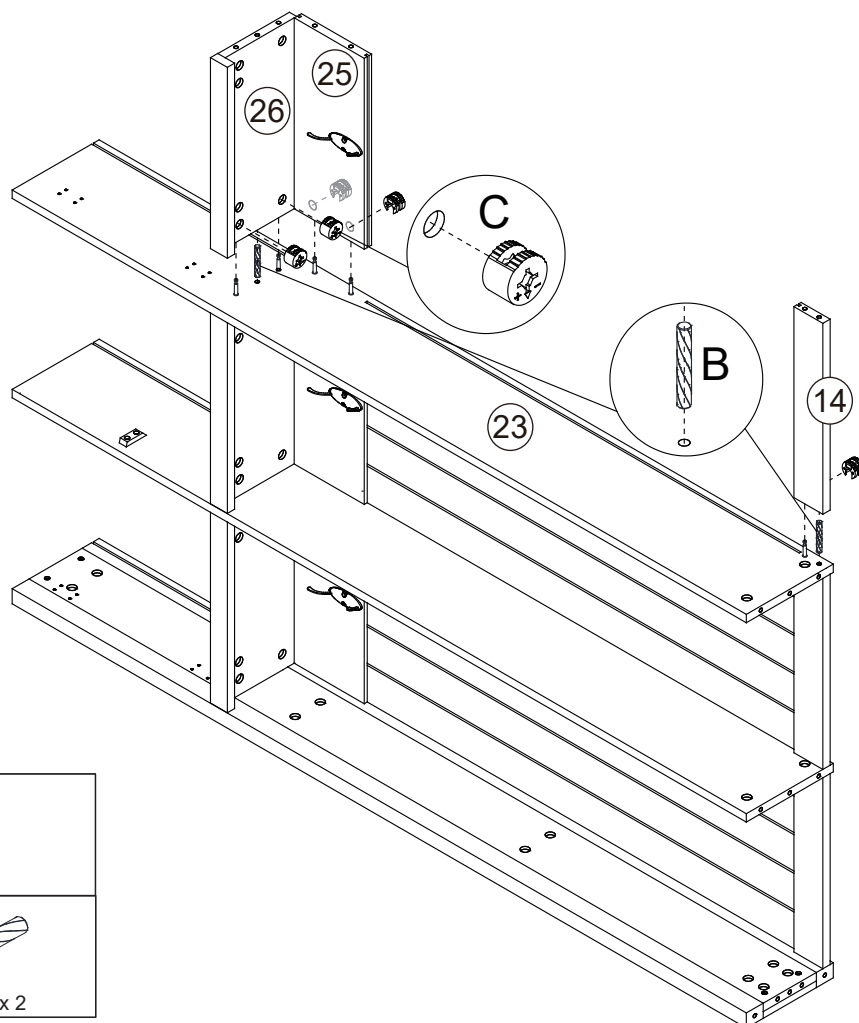


Assembly Instructions


Step 15

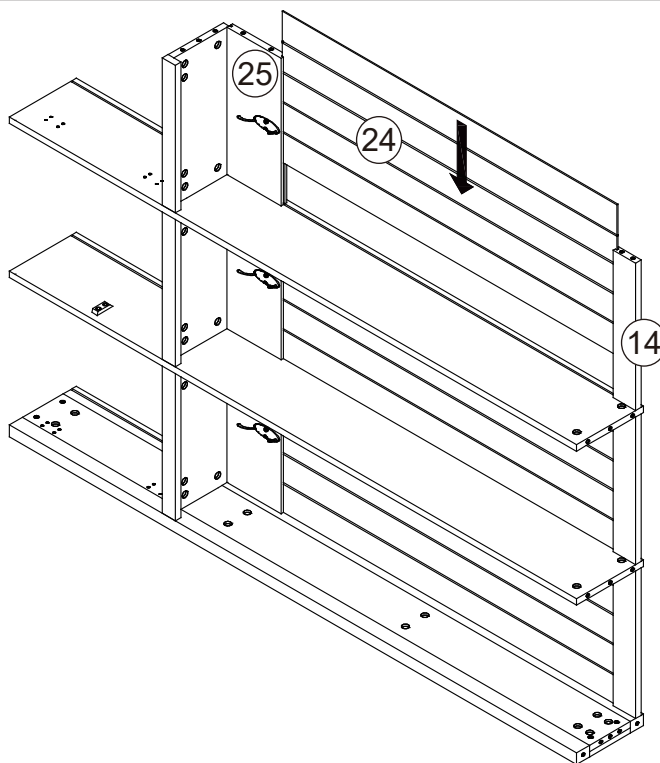


Step 16

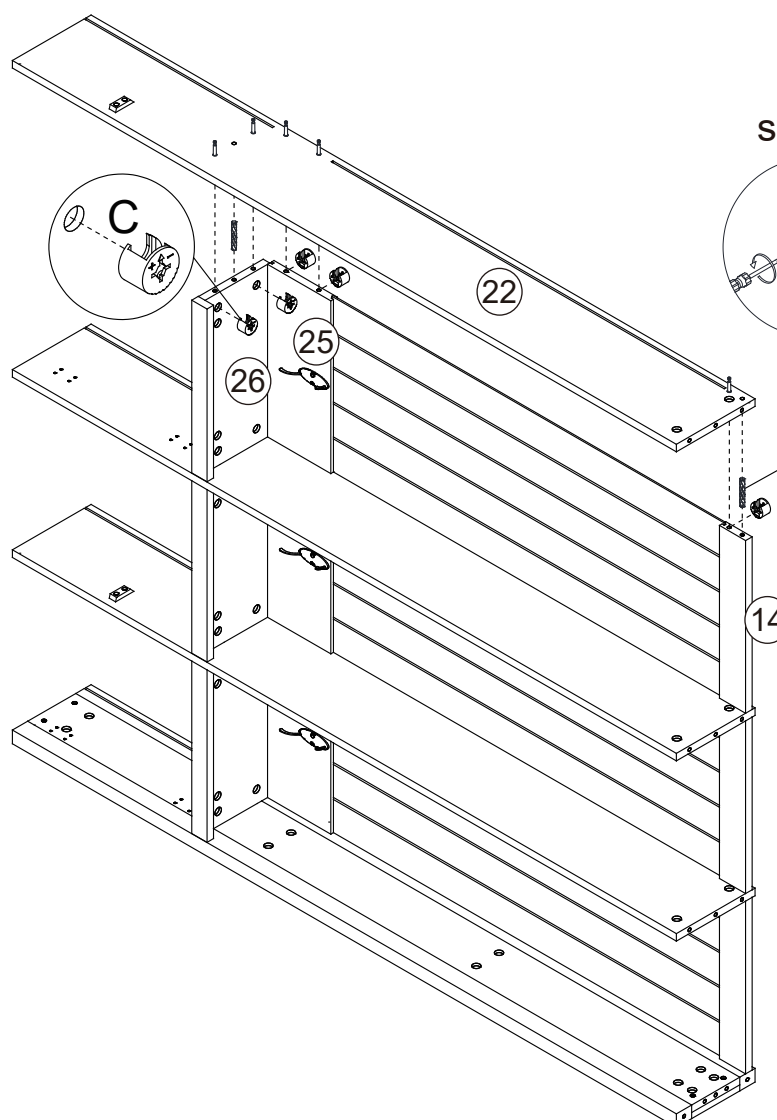


step1

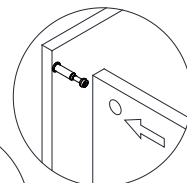

step3

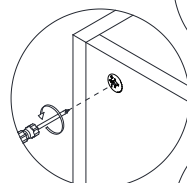

step2

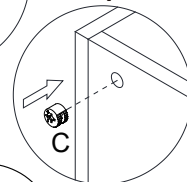

B

14

C



Cam lock x 5




B




6*30mm Dowel x 2

Assembly Instructions

Step 17

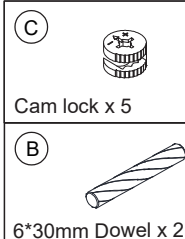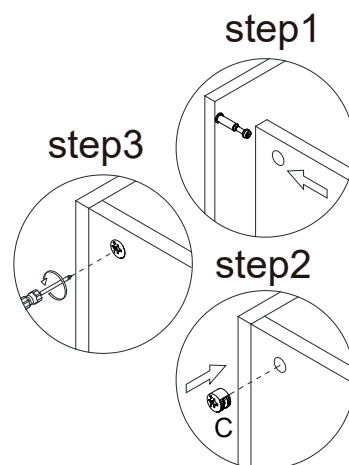
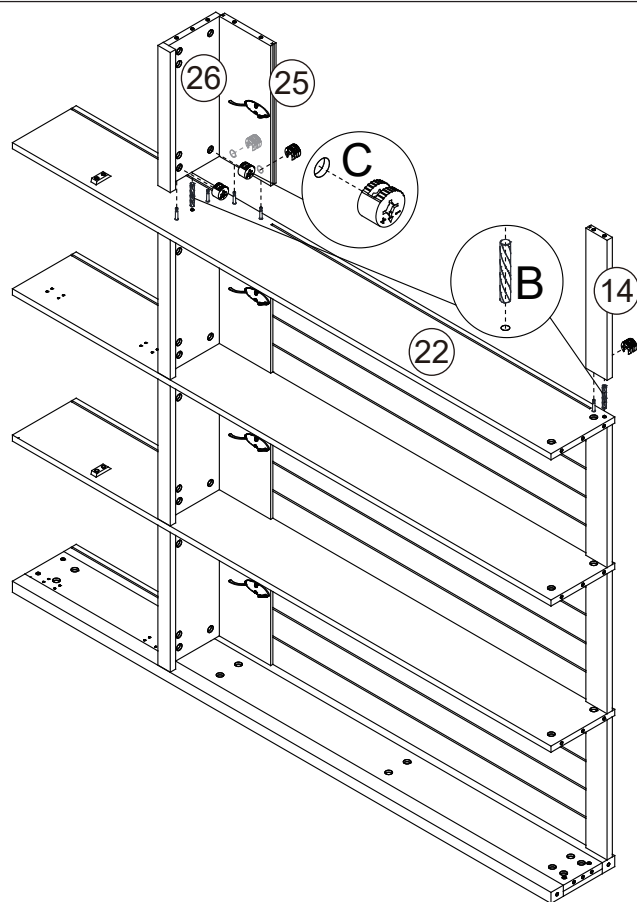


Step 18

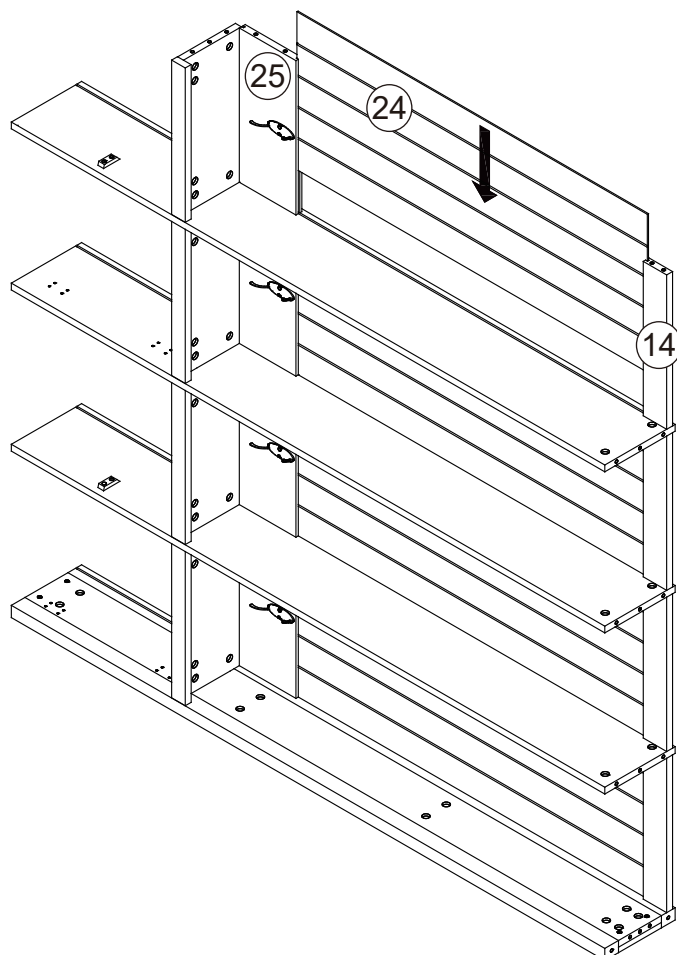


Assembly Instructions

Step 19

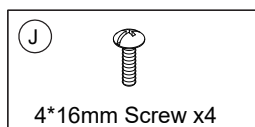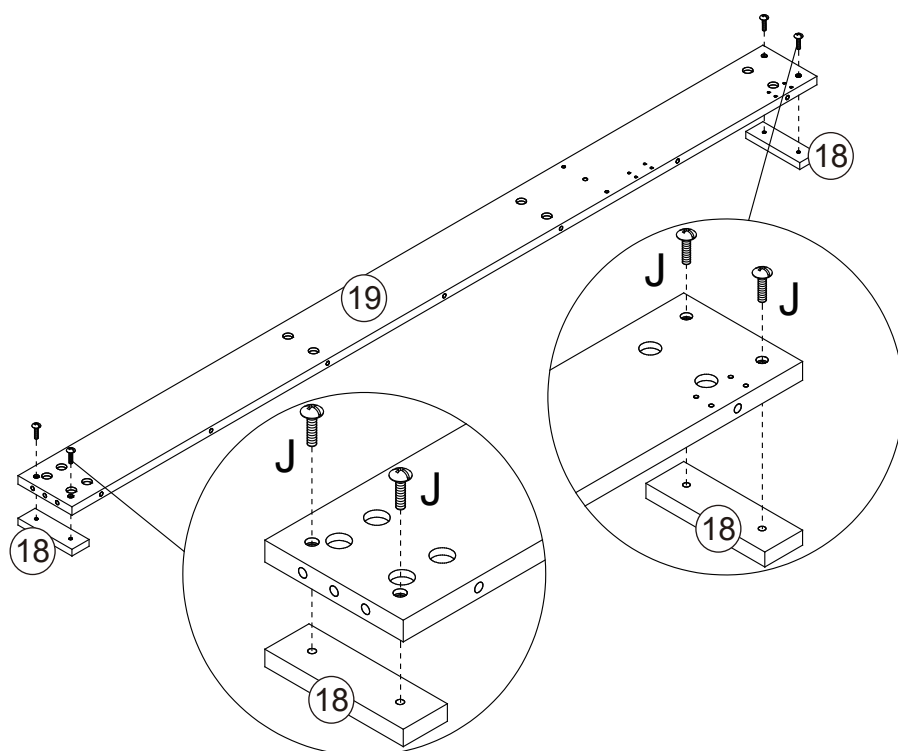


Step 20

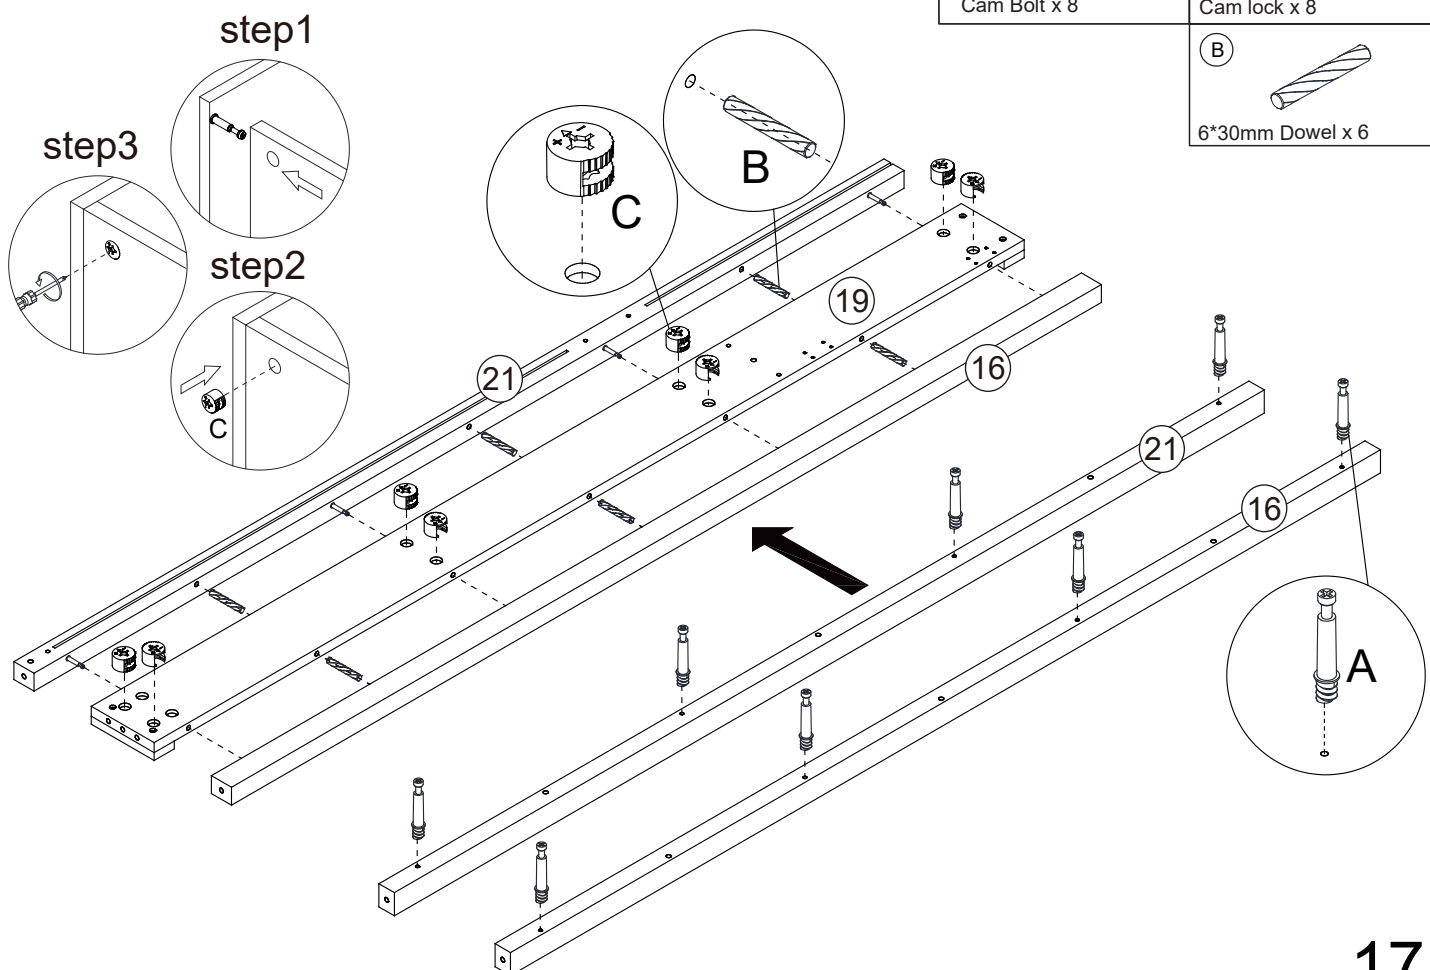


Assembly Instructions

Step 21

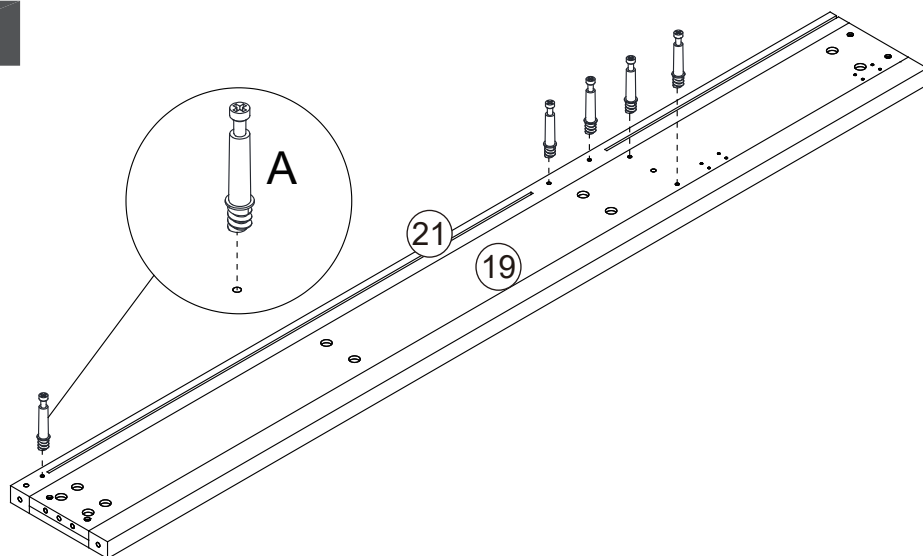

(A) 
Cam Bolt x 5


Step 22

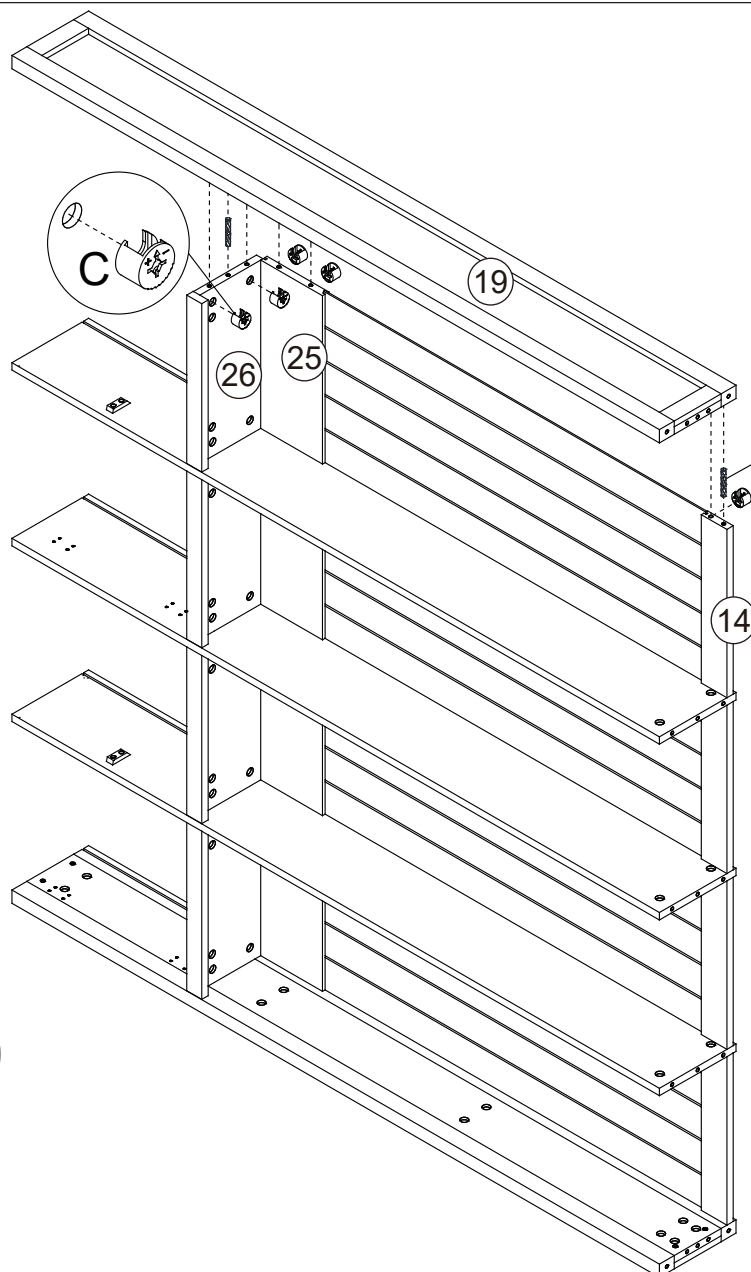


(C) 
Cam lock x 5

(B) 
6*30mm Dowel x 2


step1

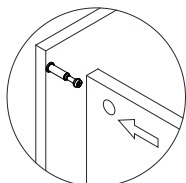

step3

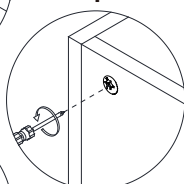


step2

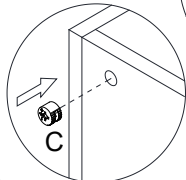


Assembly Instructions

Step 23


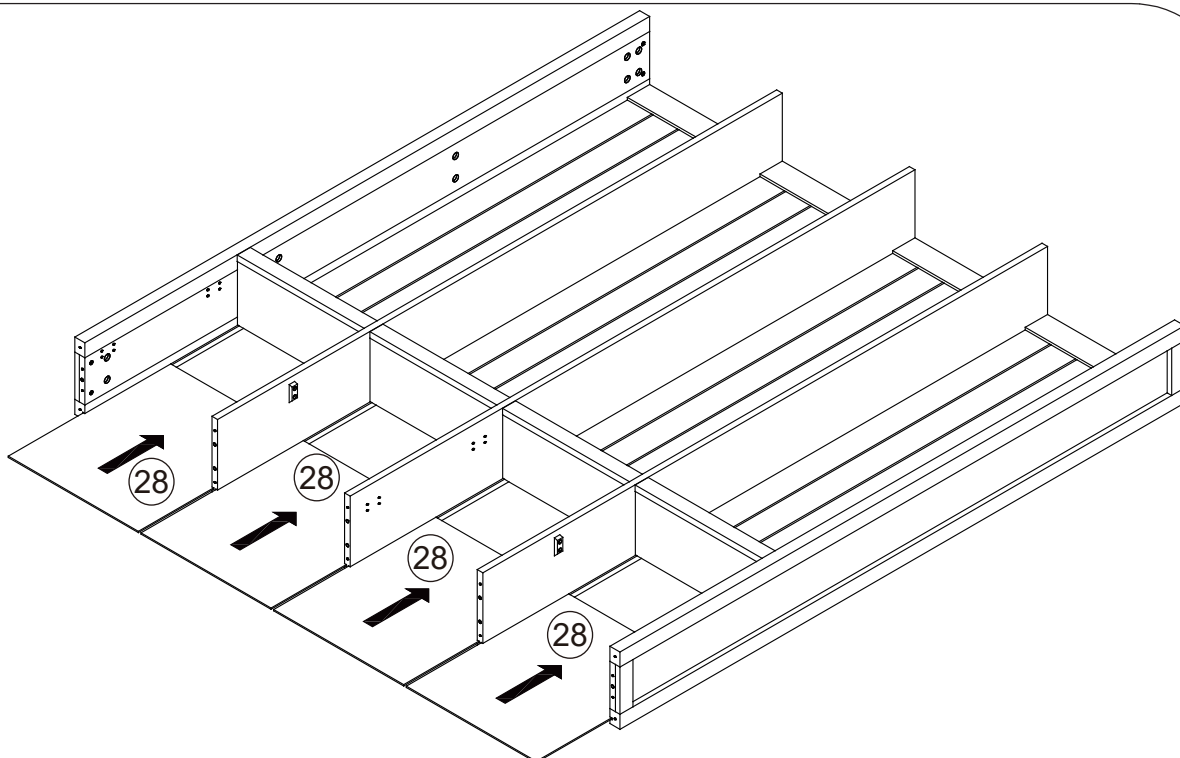


Step 24


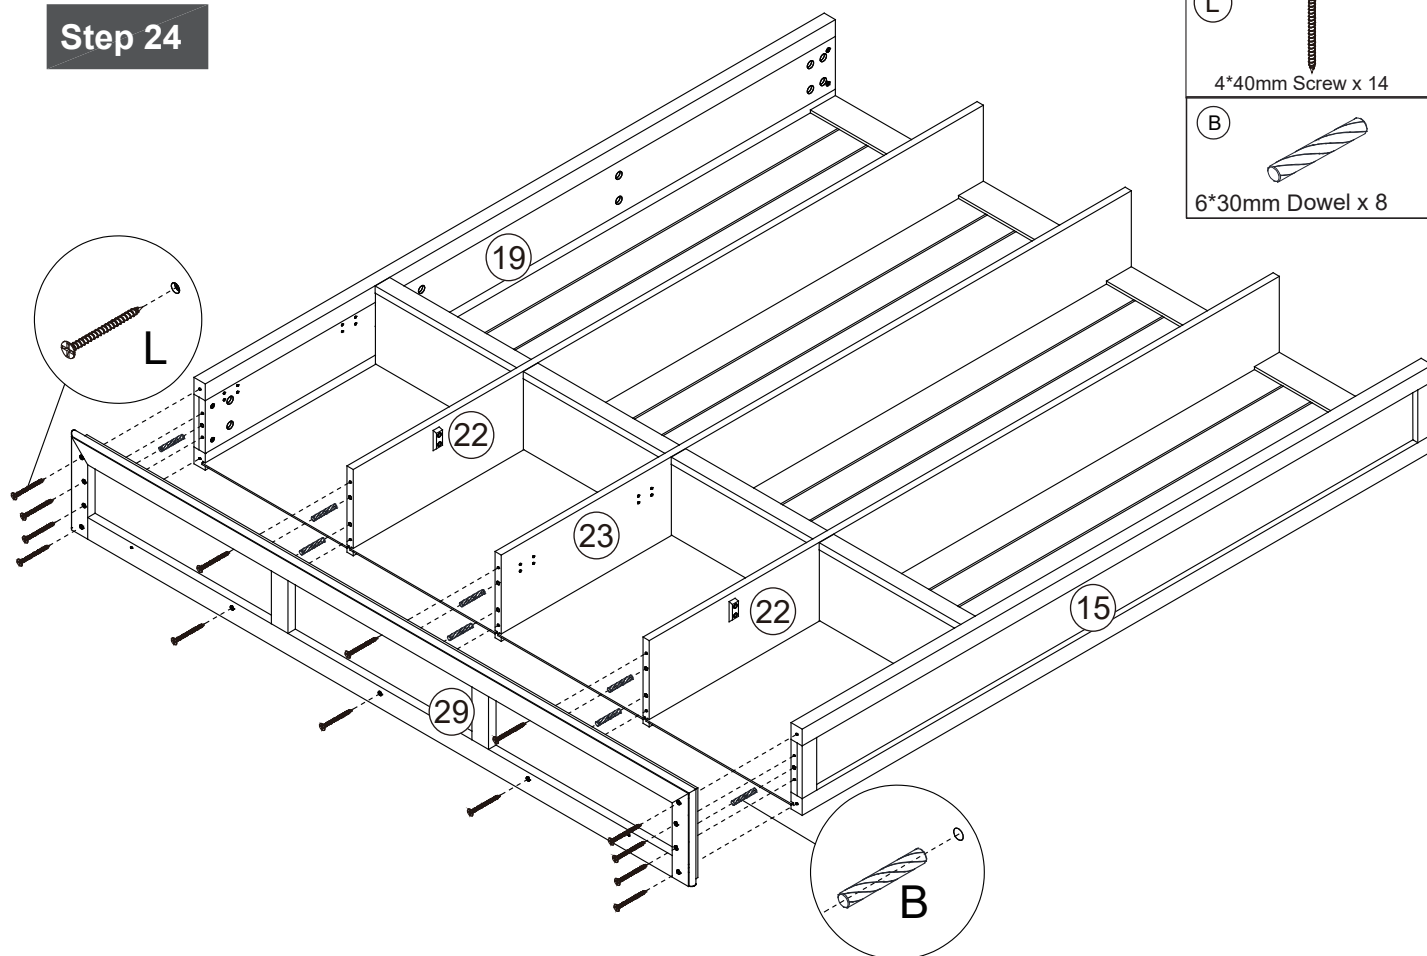


Assembly Instructions

Step 25

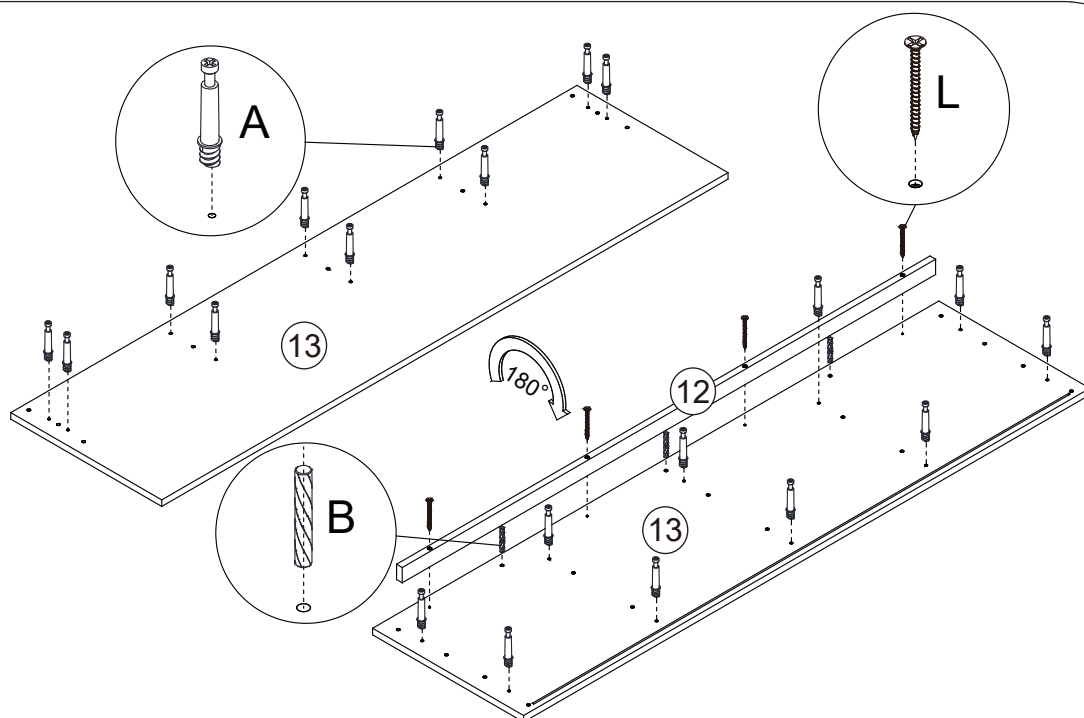
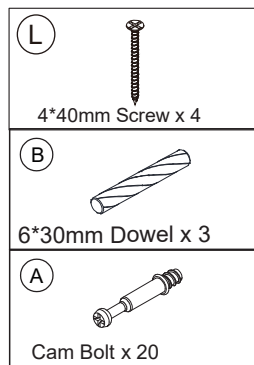


Step 26



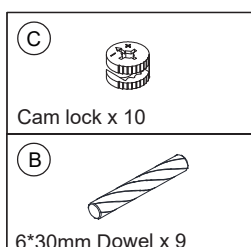
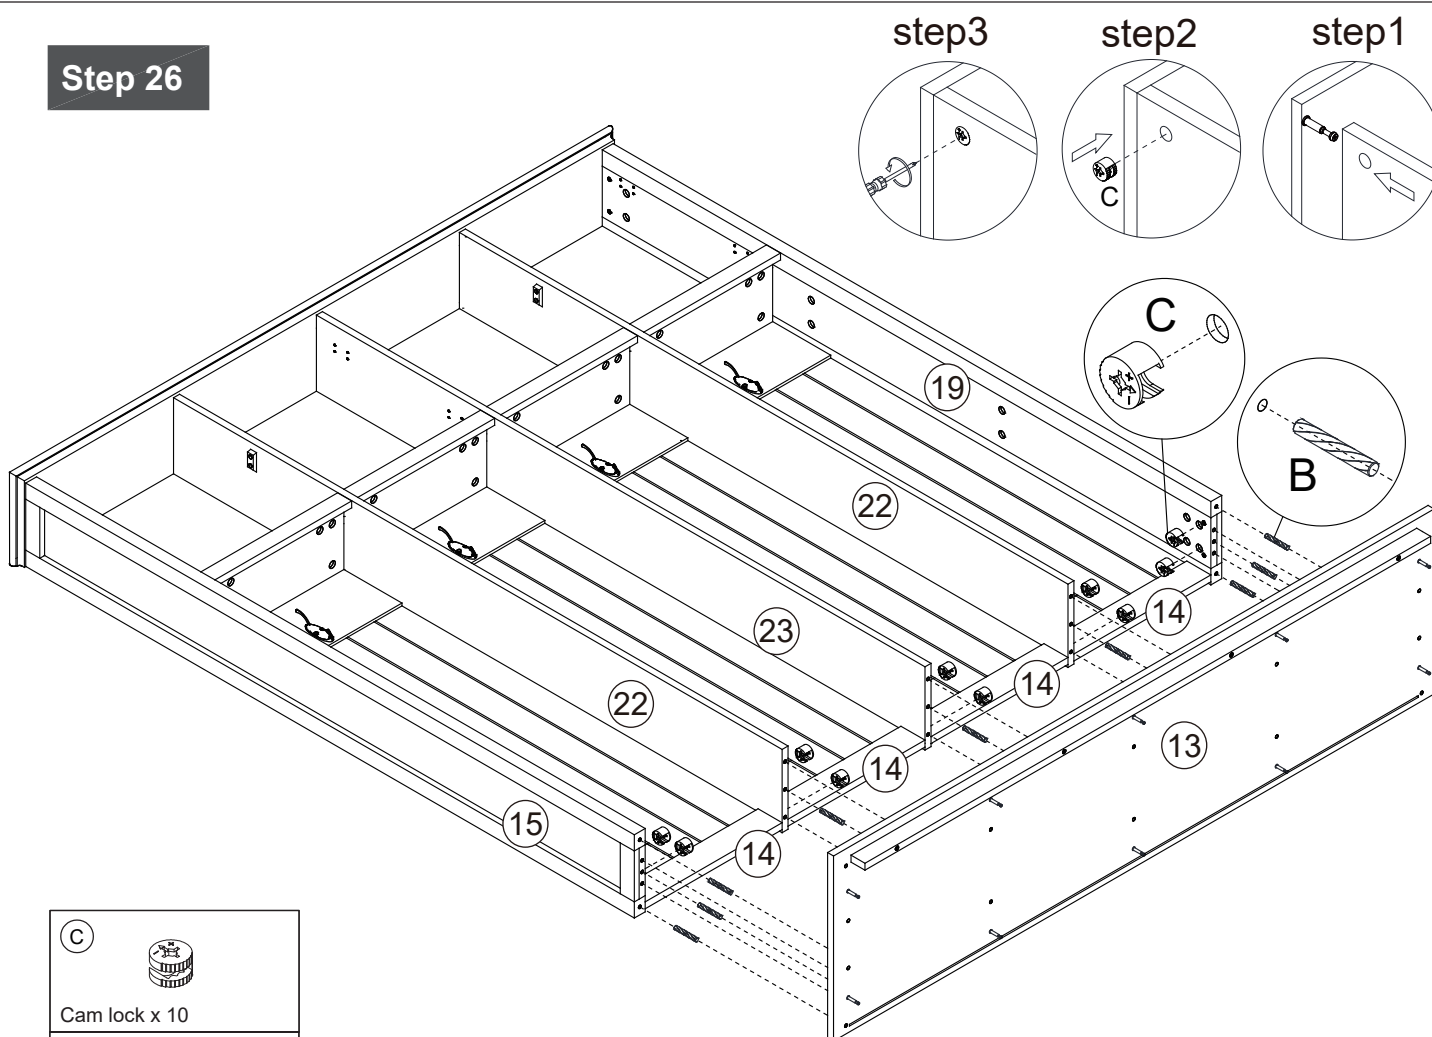


Assembly Instructions





Step 27

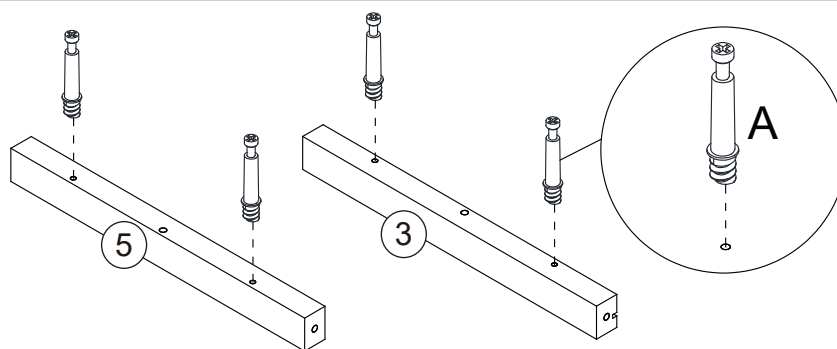

Step 28

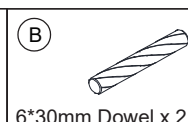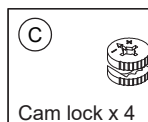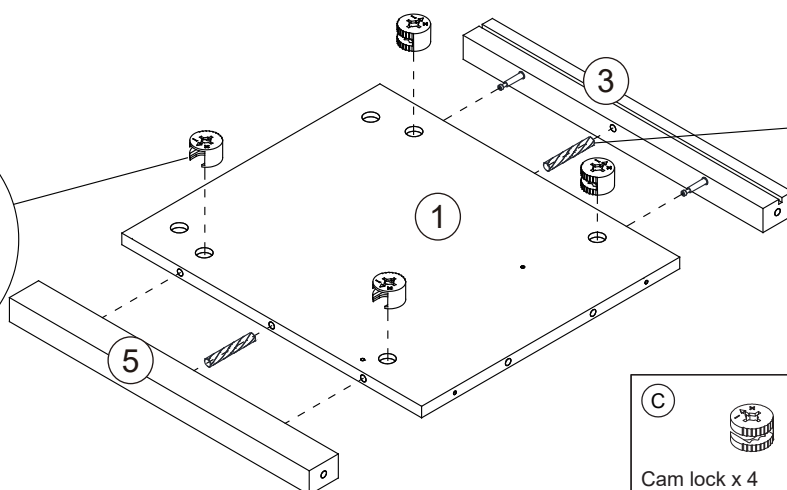
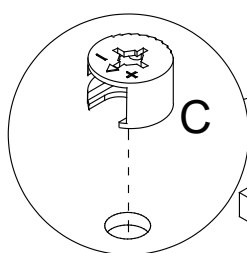


Step 29

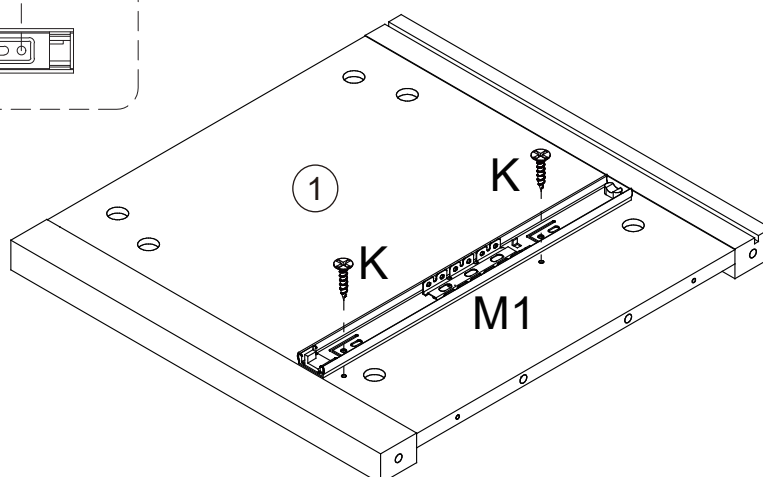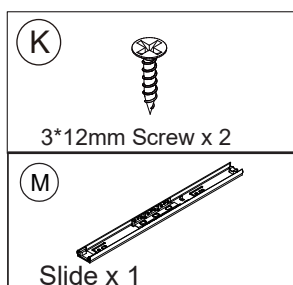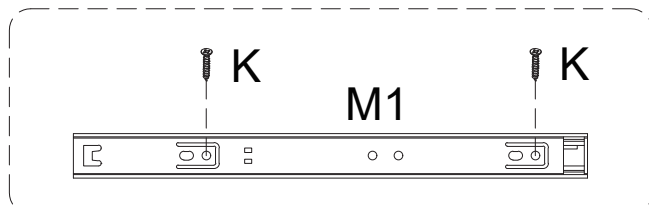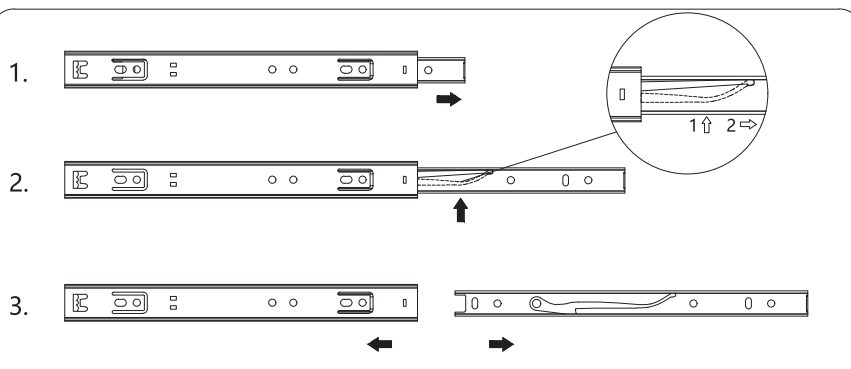


Assembly Instructions




Step 30

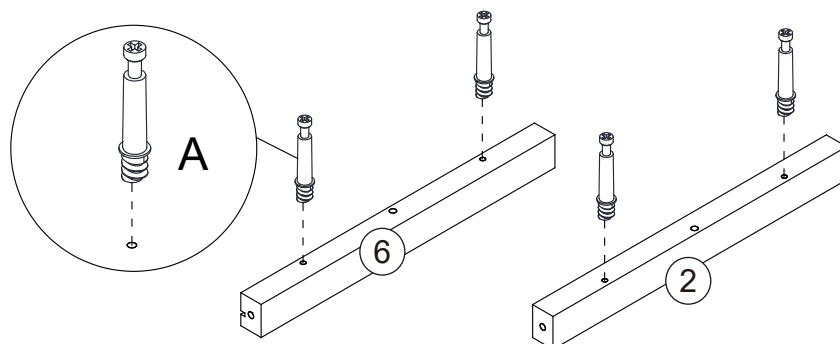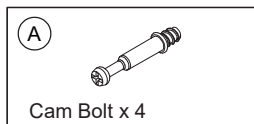

Step 31

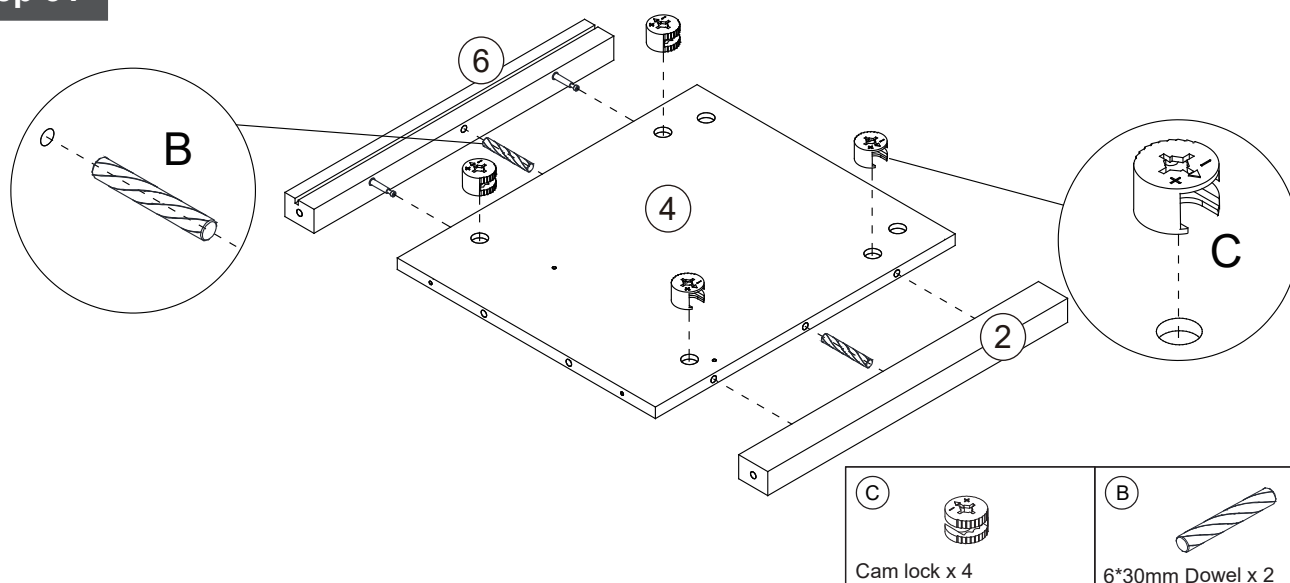


Step 32

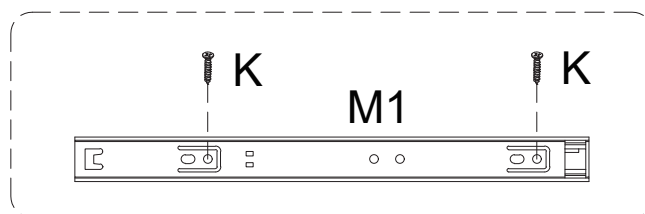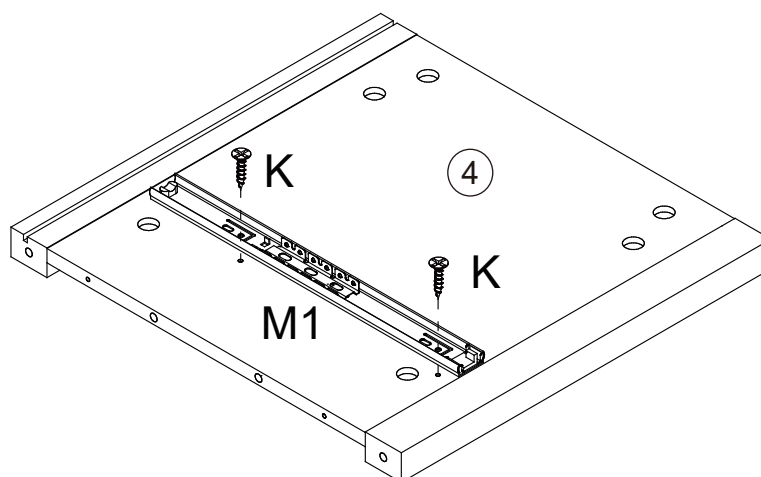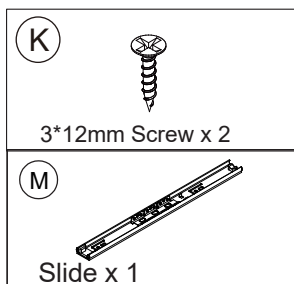



Assembly Instructions

Step 33

x3


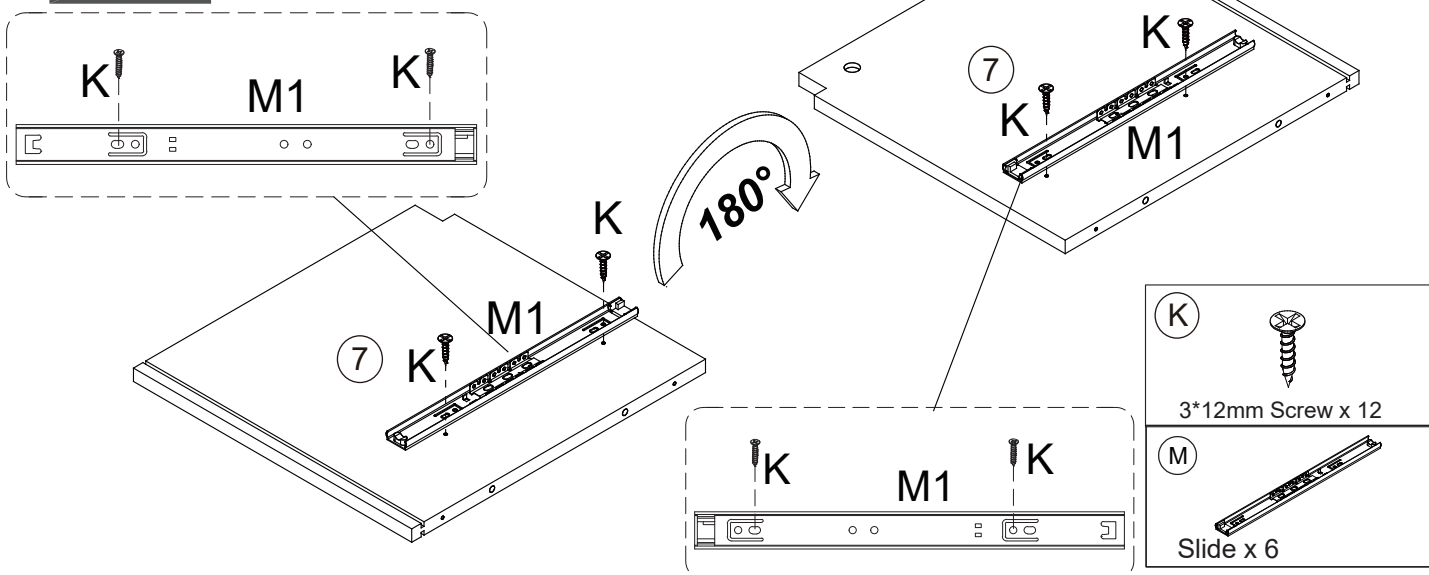


Step 34


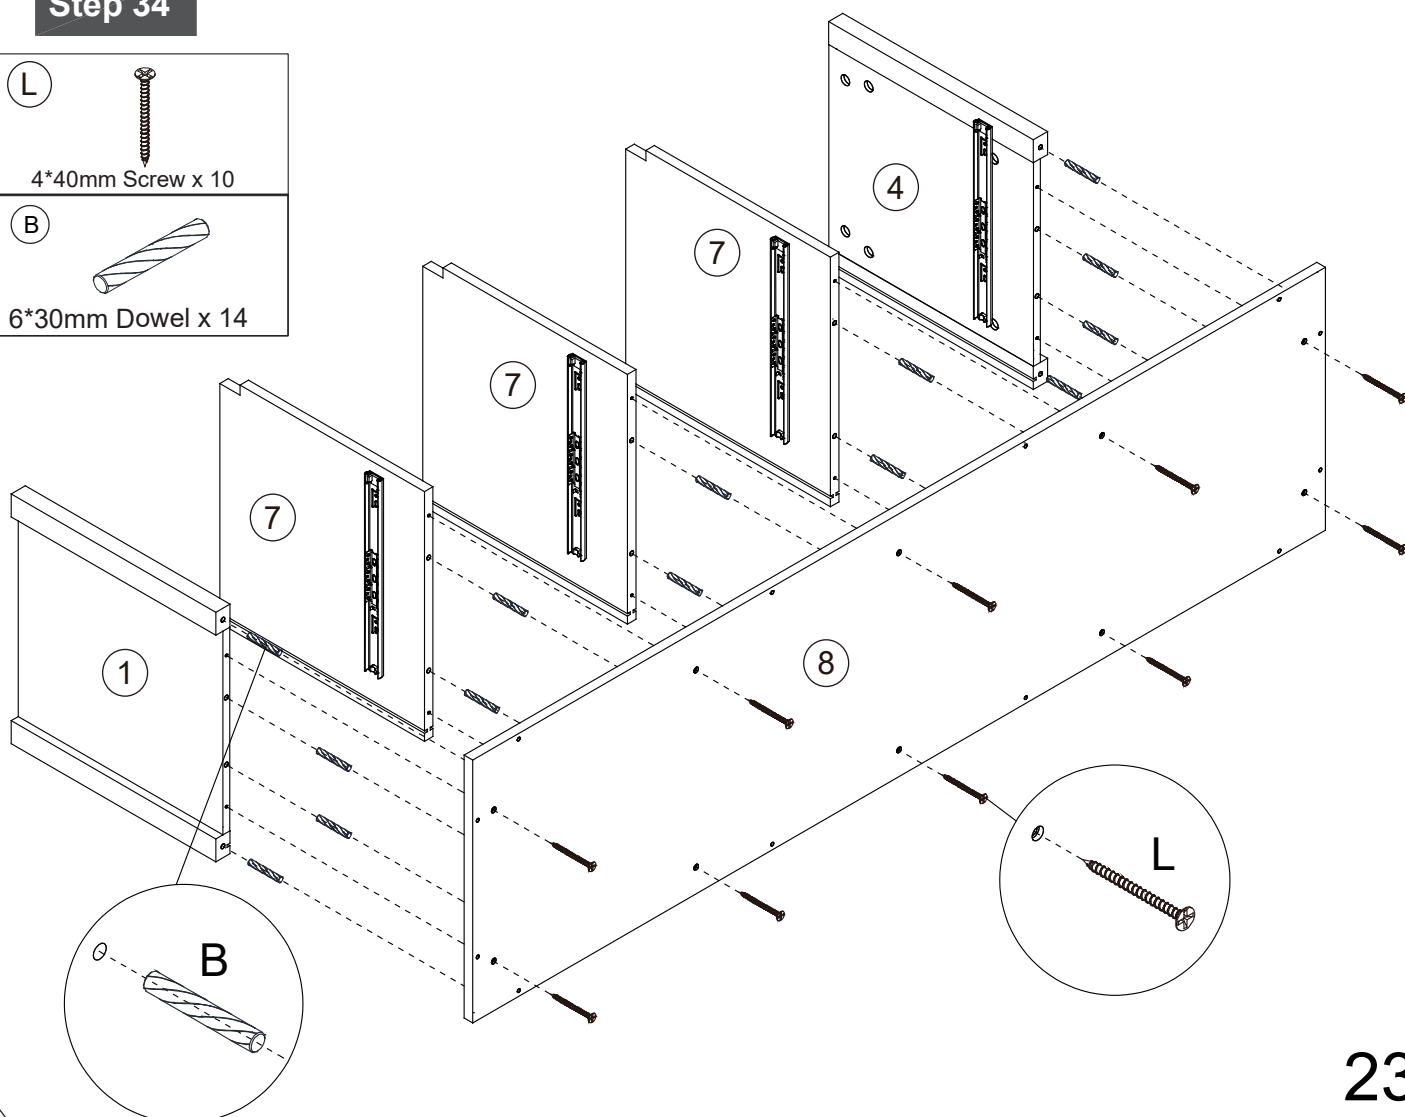
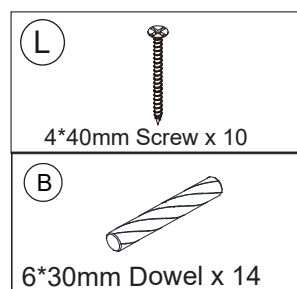


Assembly Instructions

Step 35

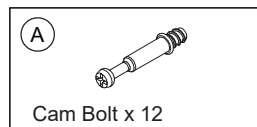
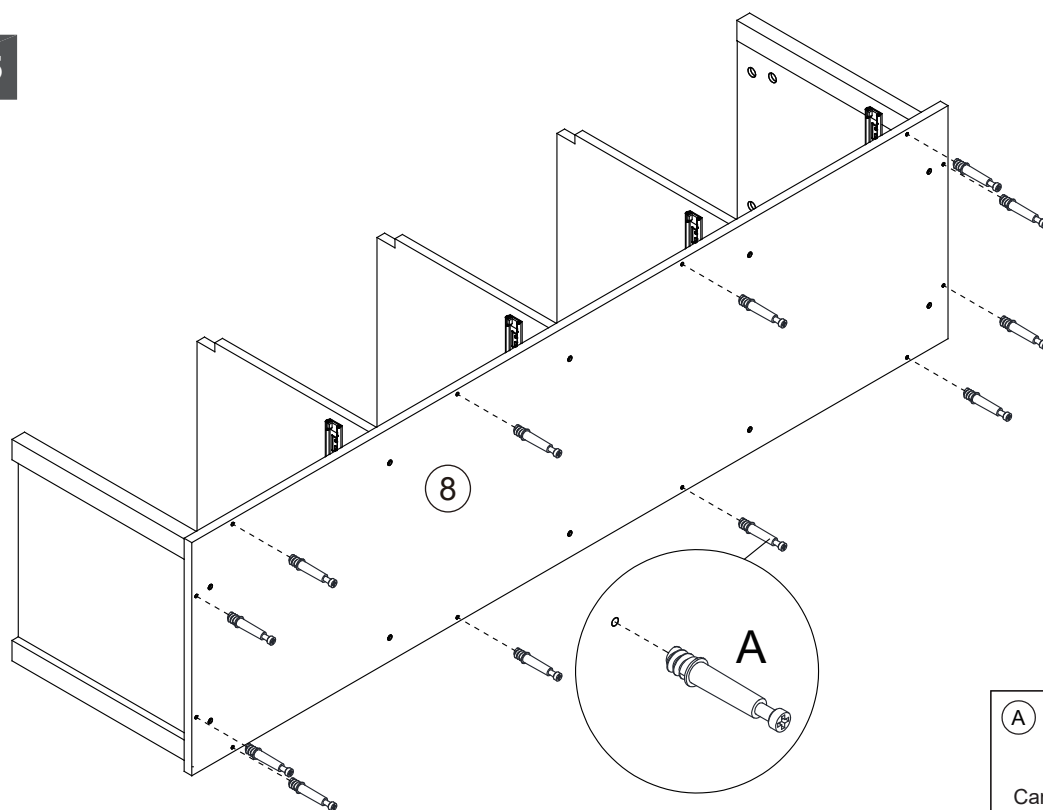


Step 36

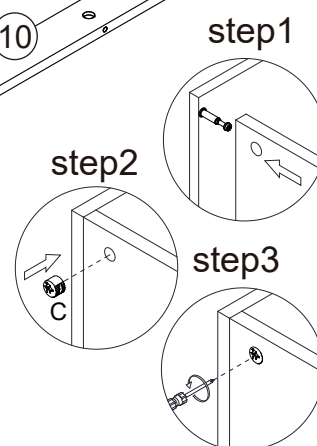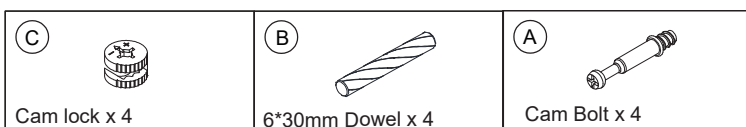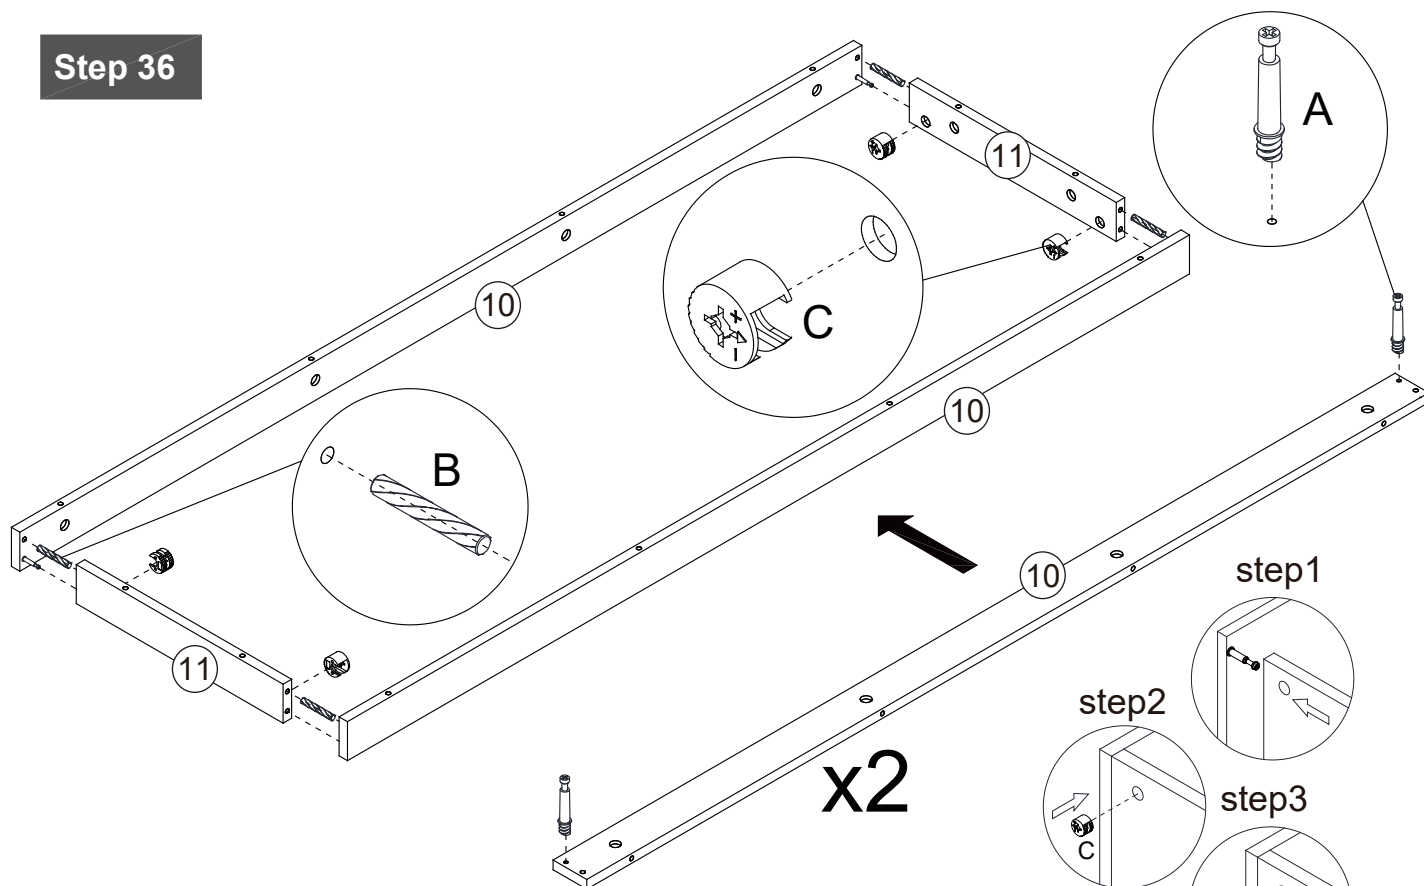


Assembly Instructions

Step 37

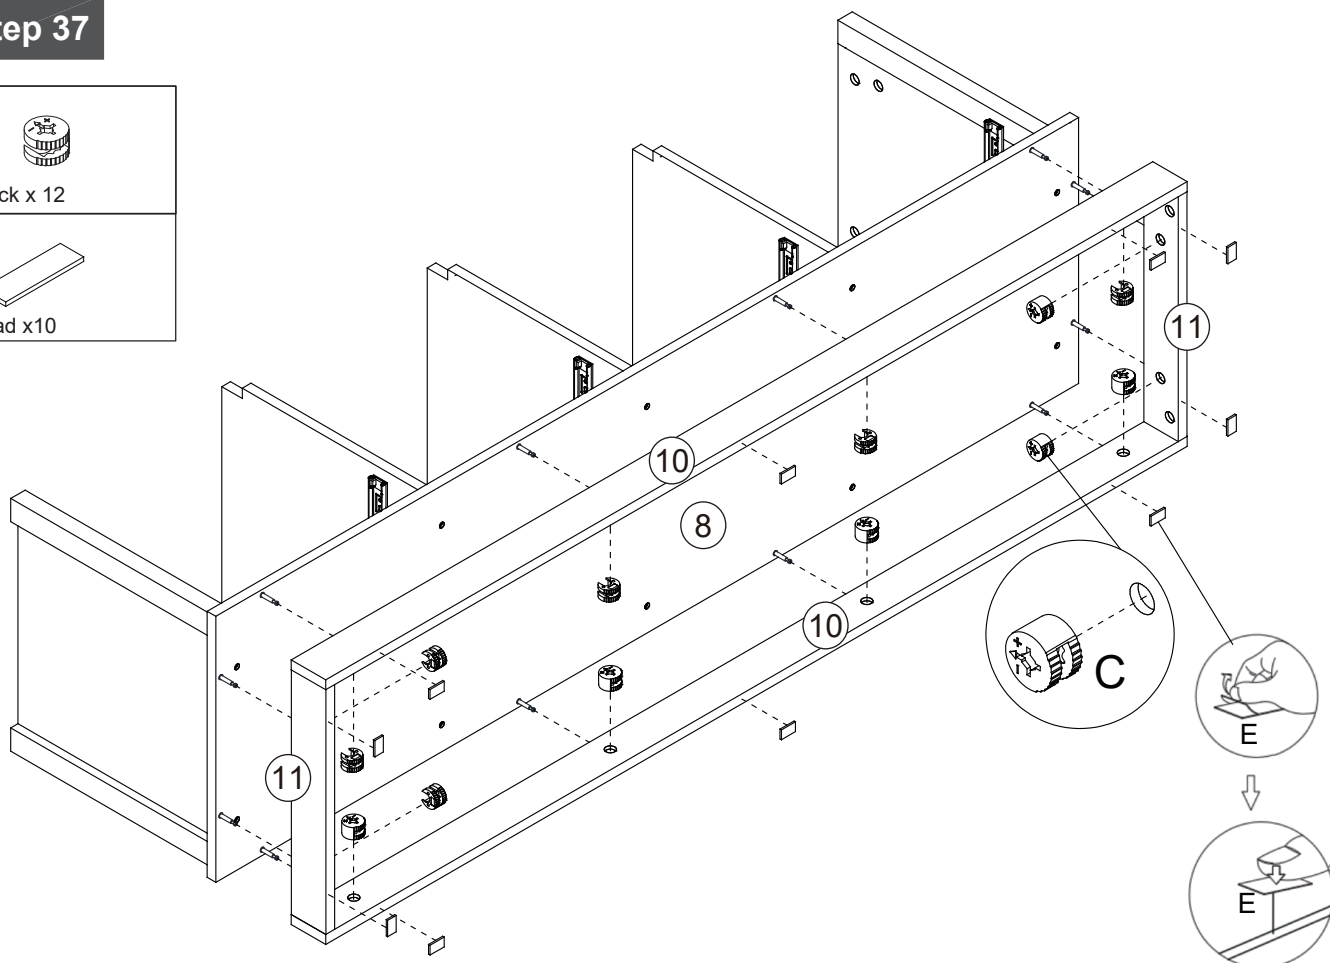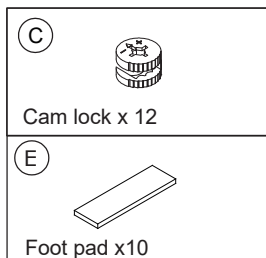


Step 38

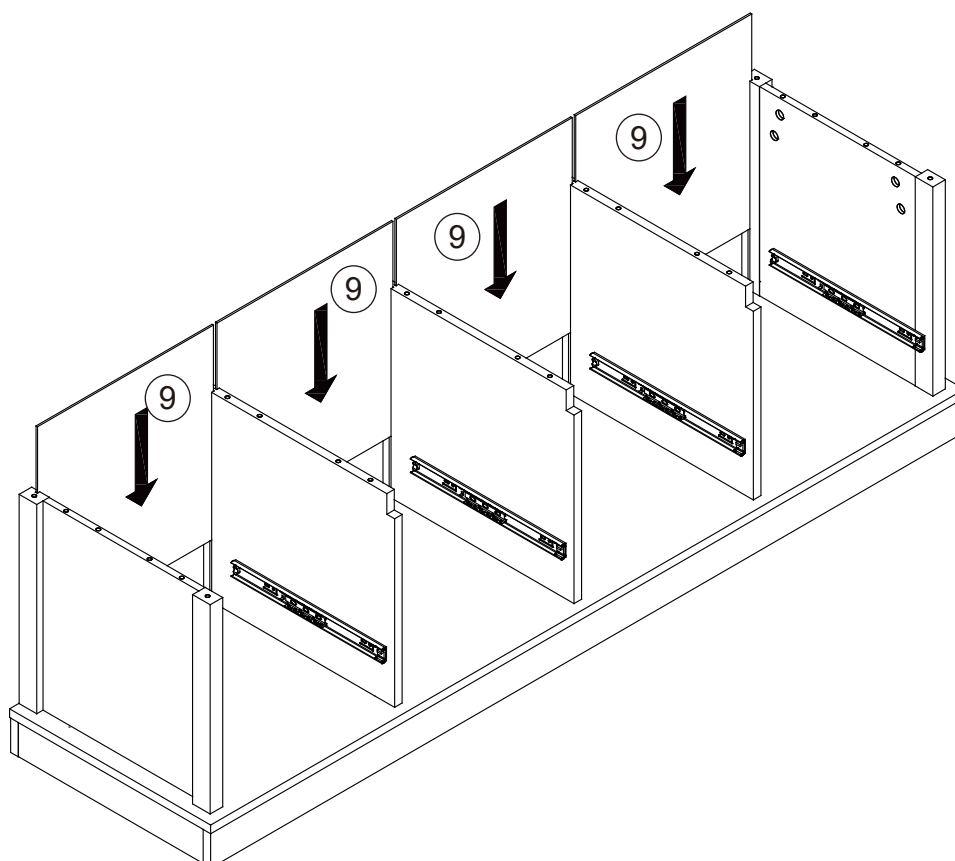



Assembly Instructions

Step 39




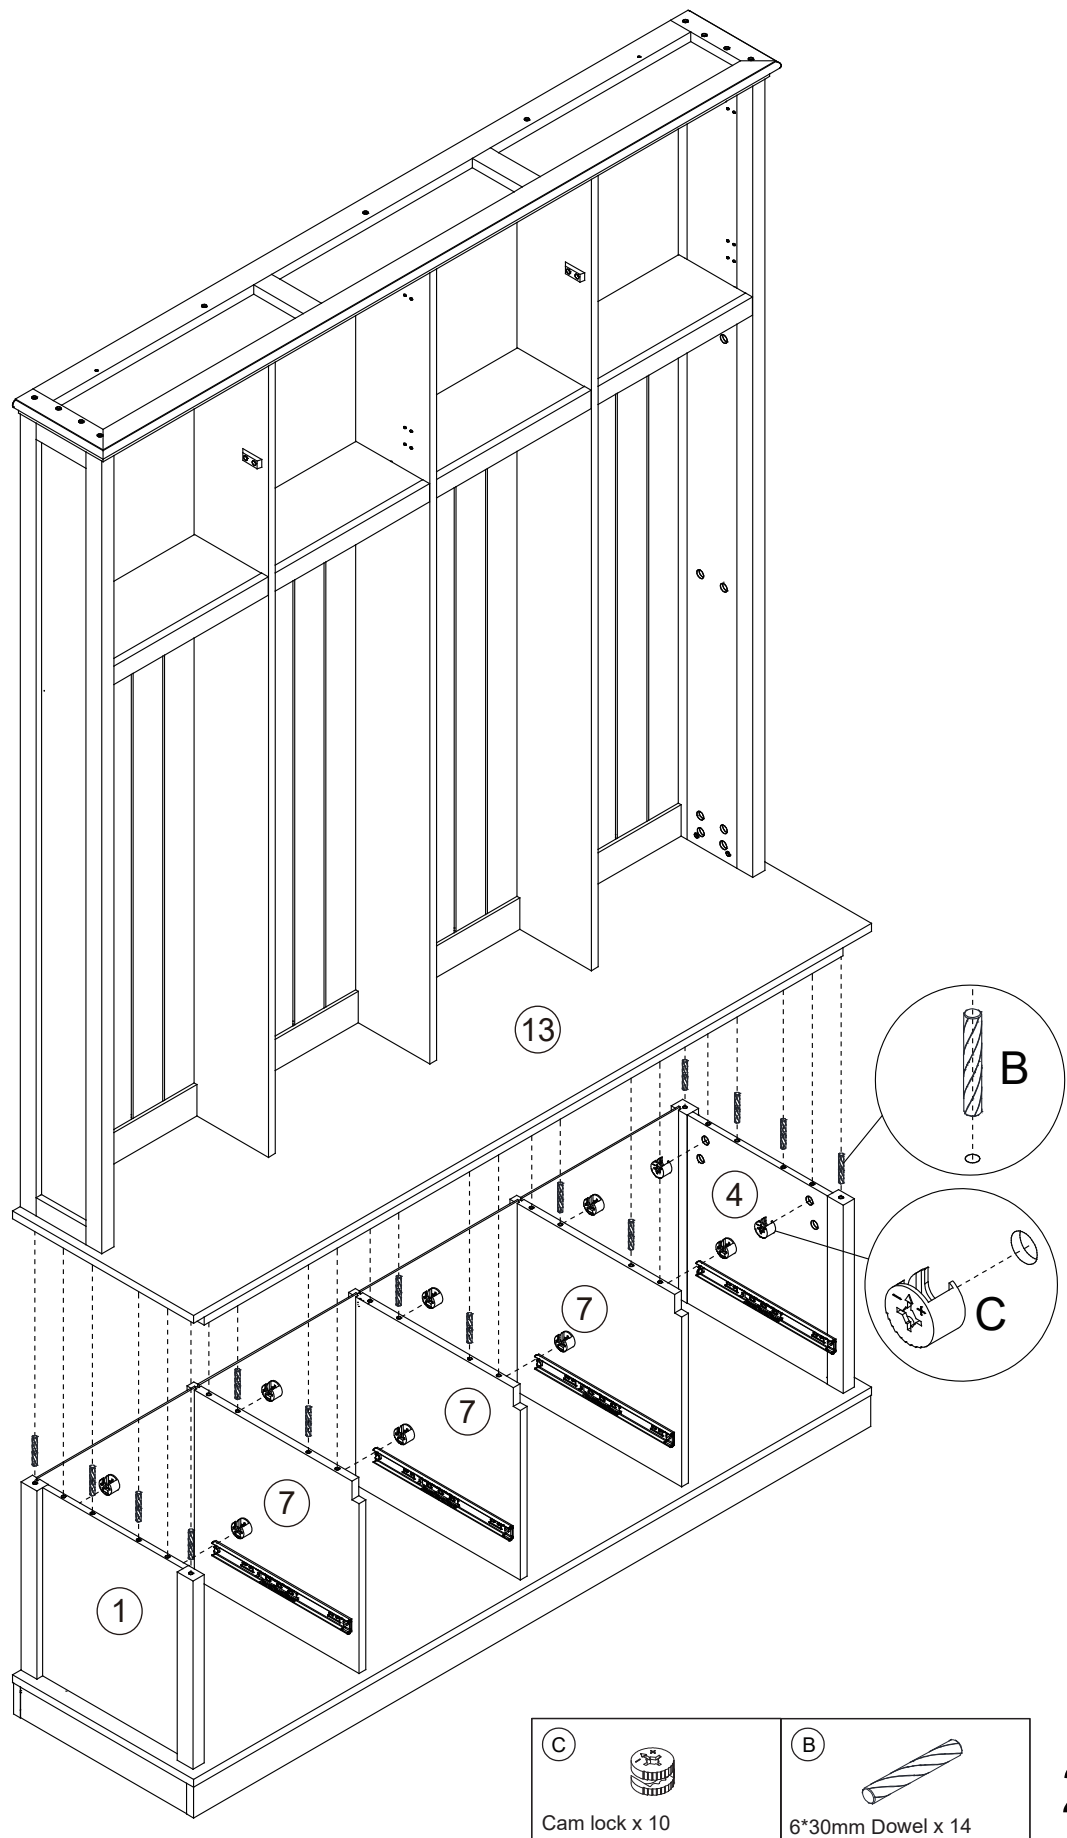


Assembly Instructions

Step 40

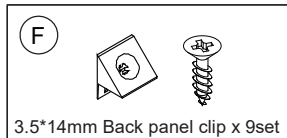
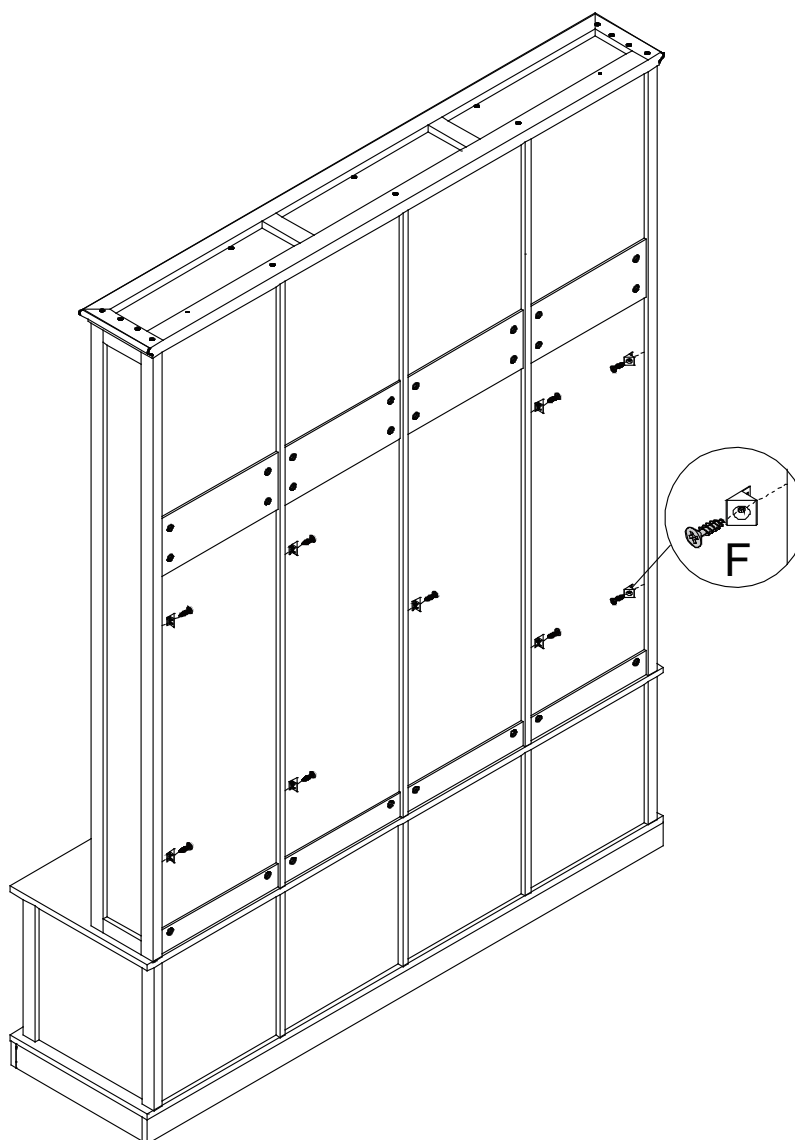


Step 41

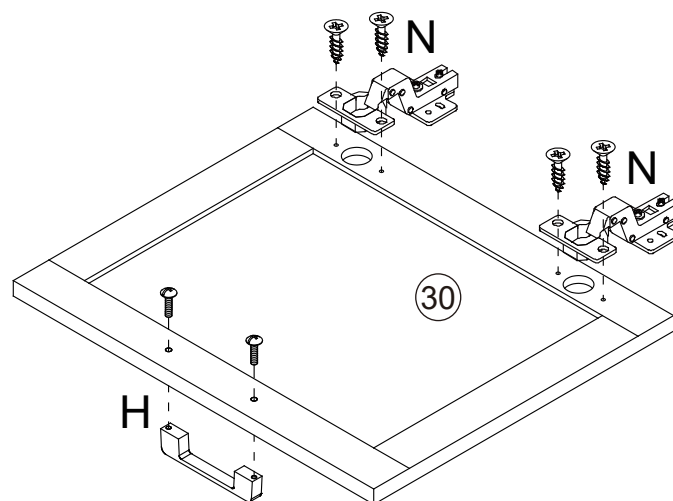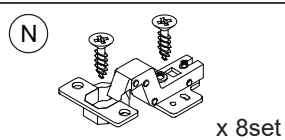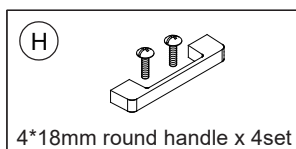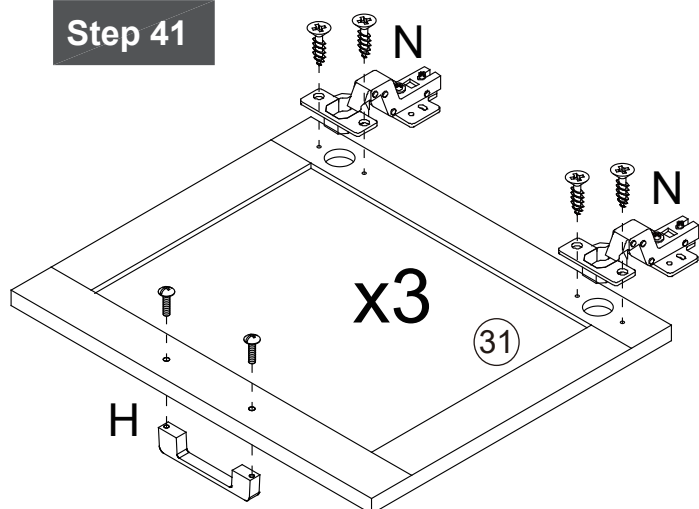


Assembly Instructions


Step 42

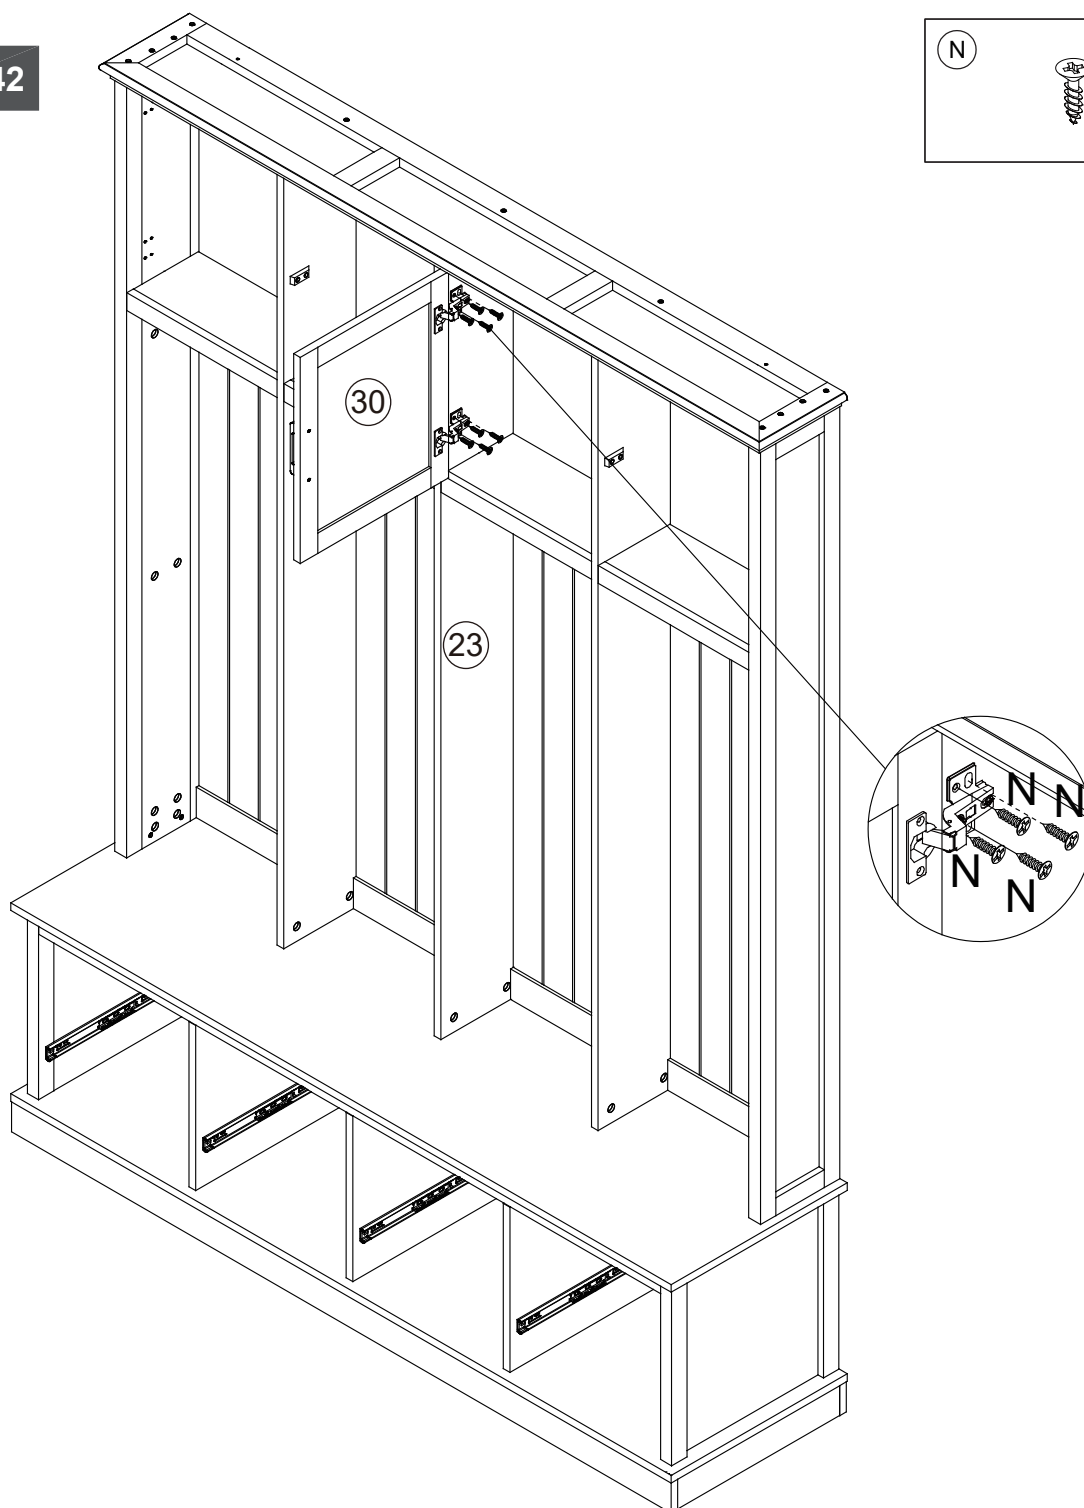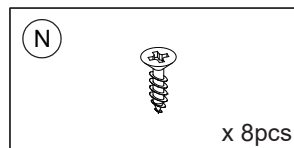


If the door can't close, please adjust the hinges as below.

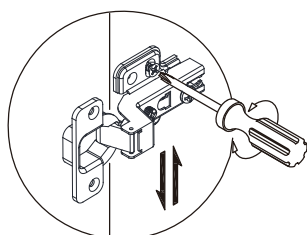

This is used to adjust the door panel in the up and down direction.

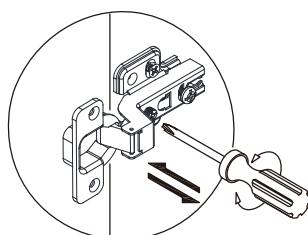




This is used to adjust the door panel in the left and right direction.

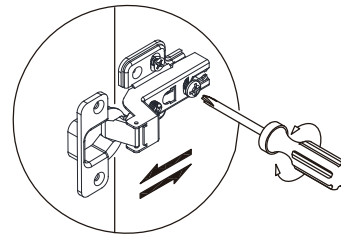

This is used to adjust the door panel in the front and rear.







Assembly Instructions

Step 43

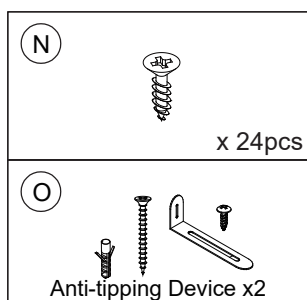
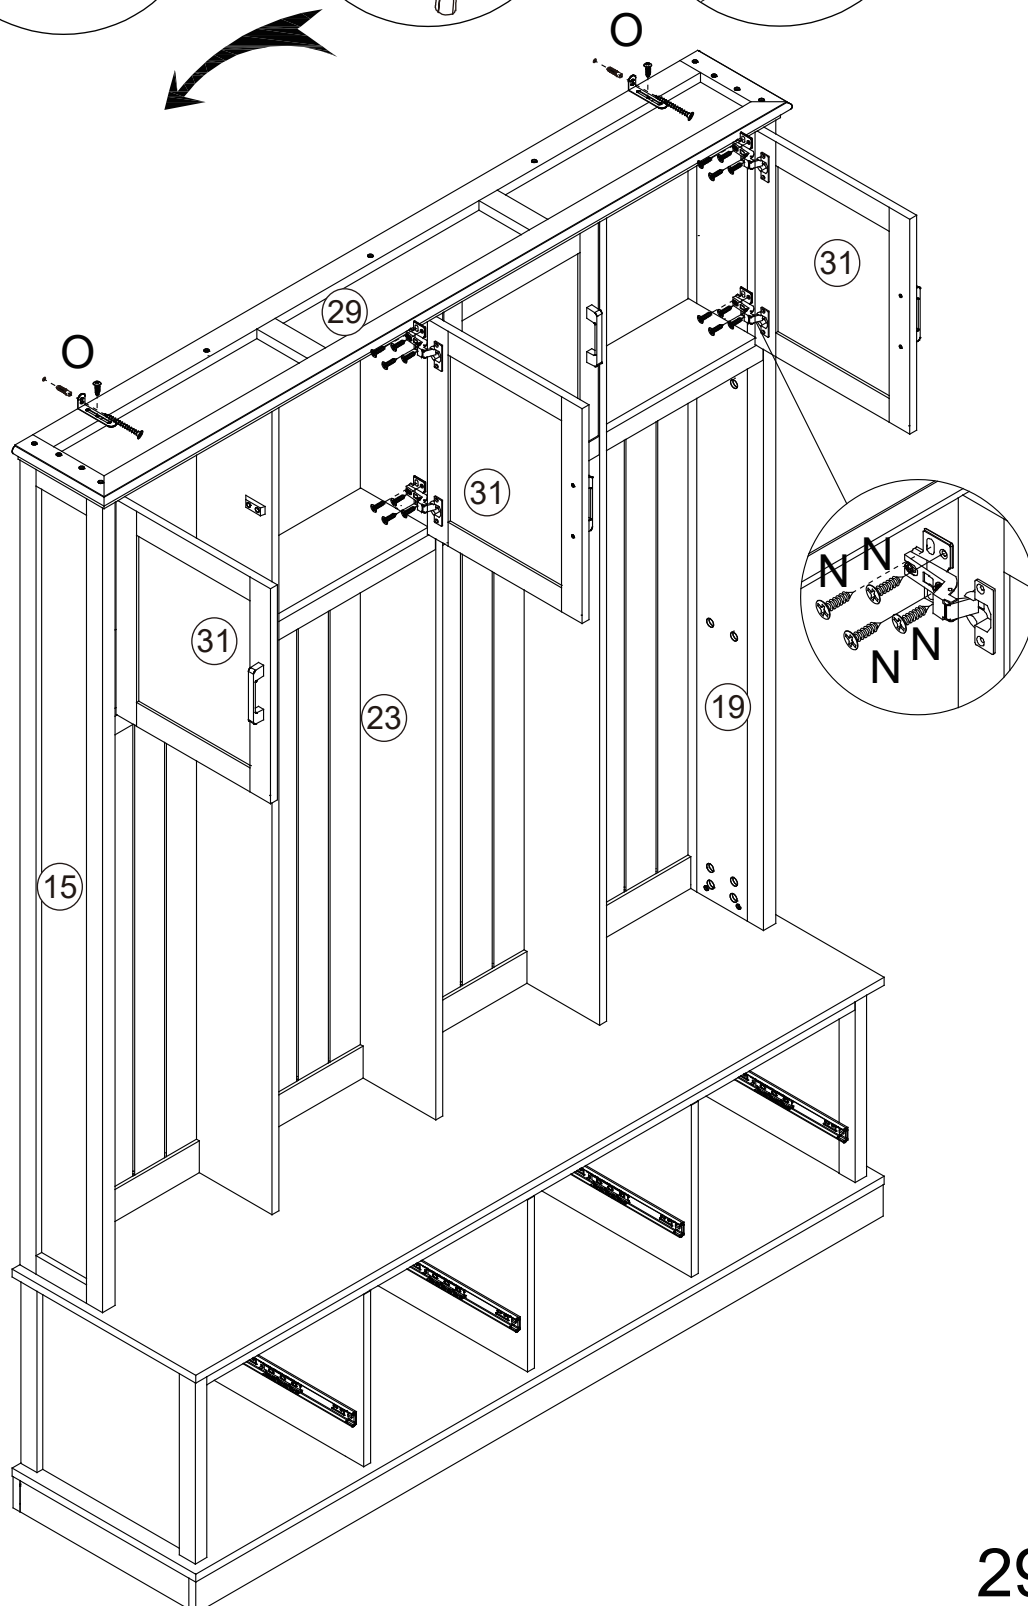
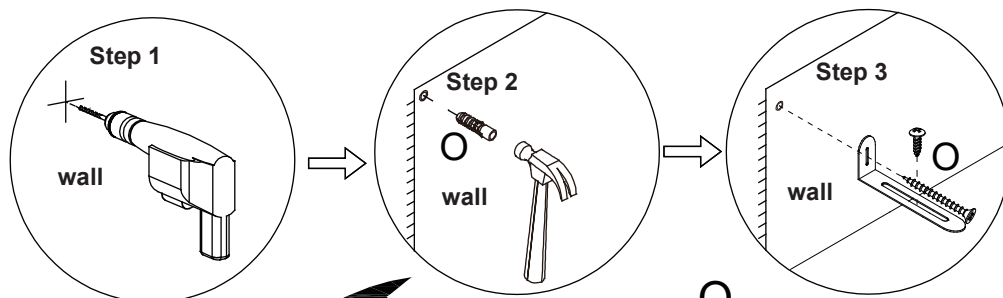


Assembly Instructions

Step 44

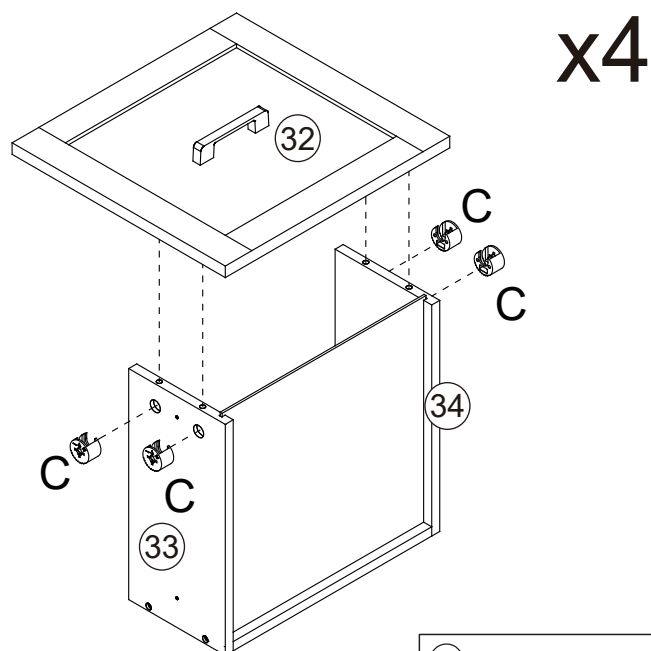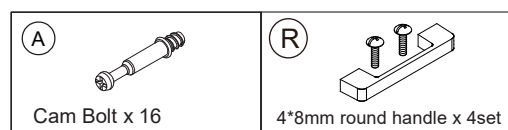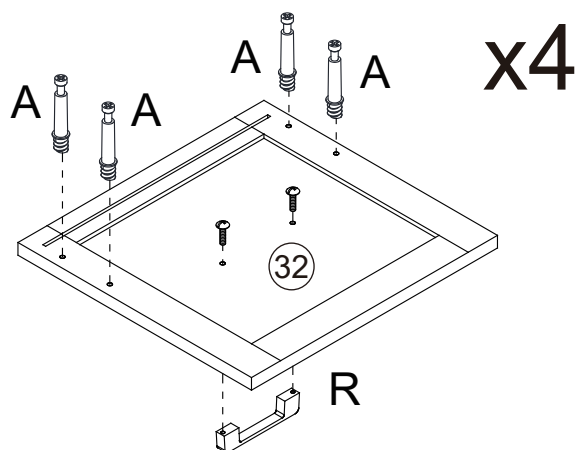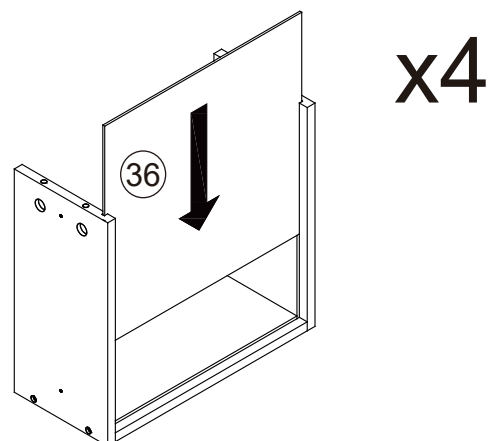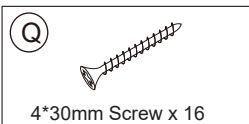
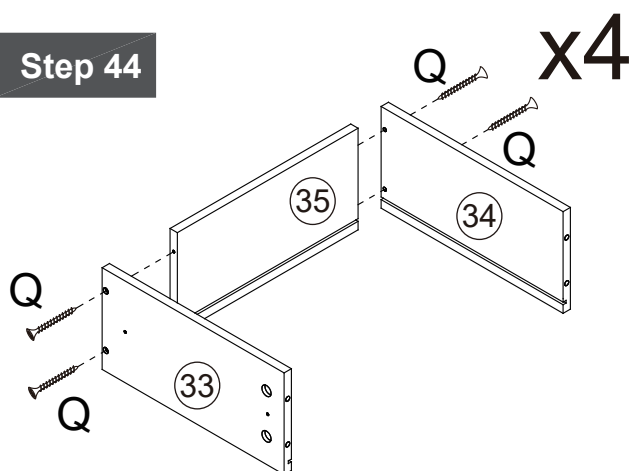


Step 45

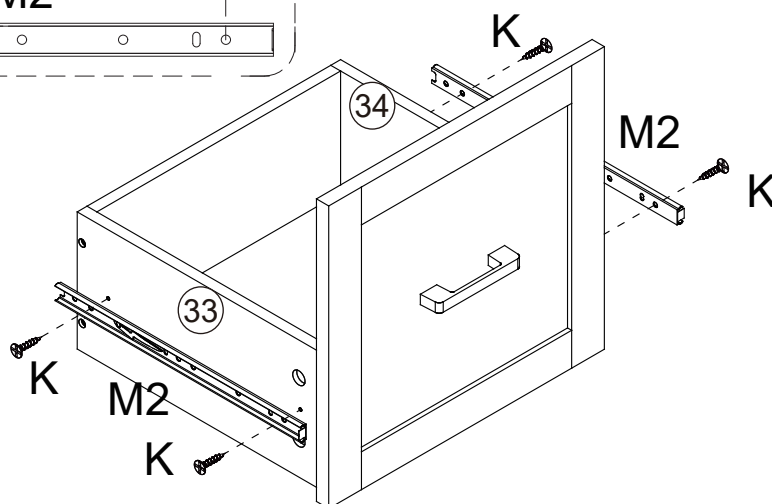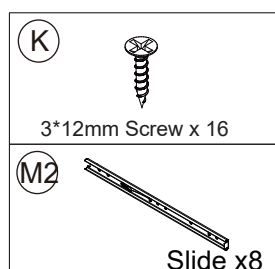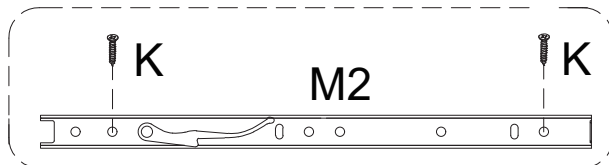

Assembly Instructions

Step 46

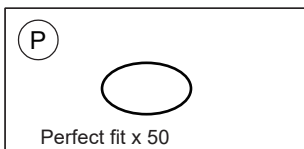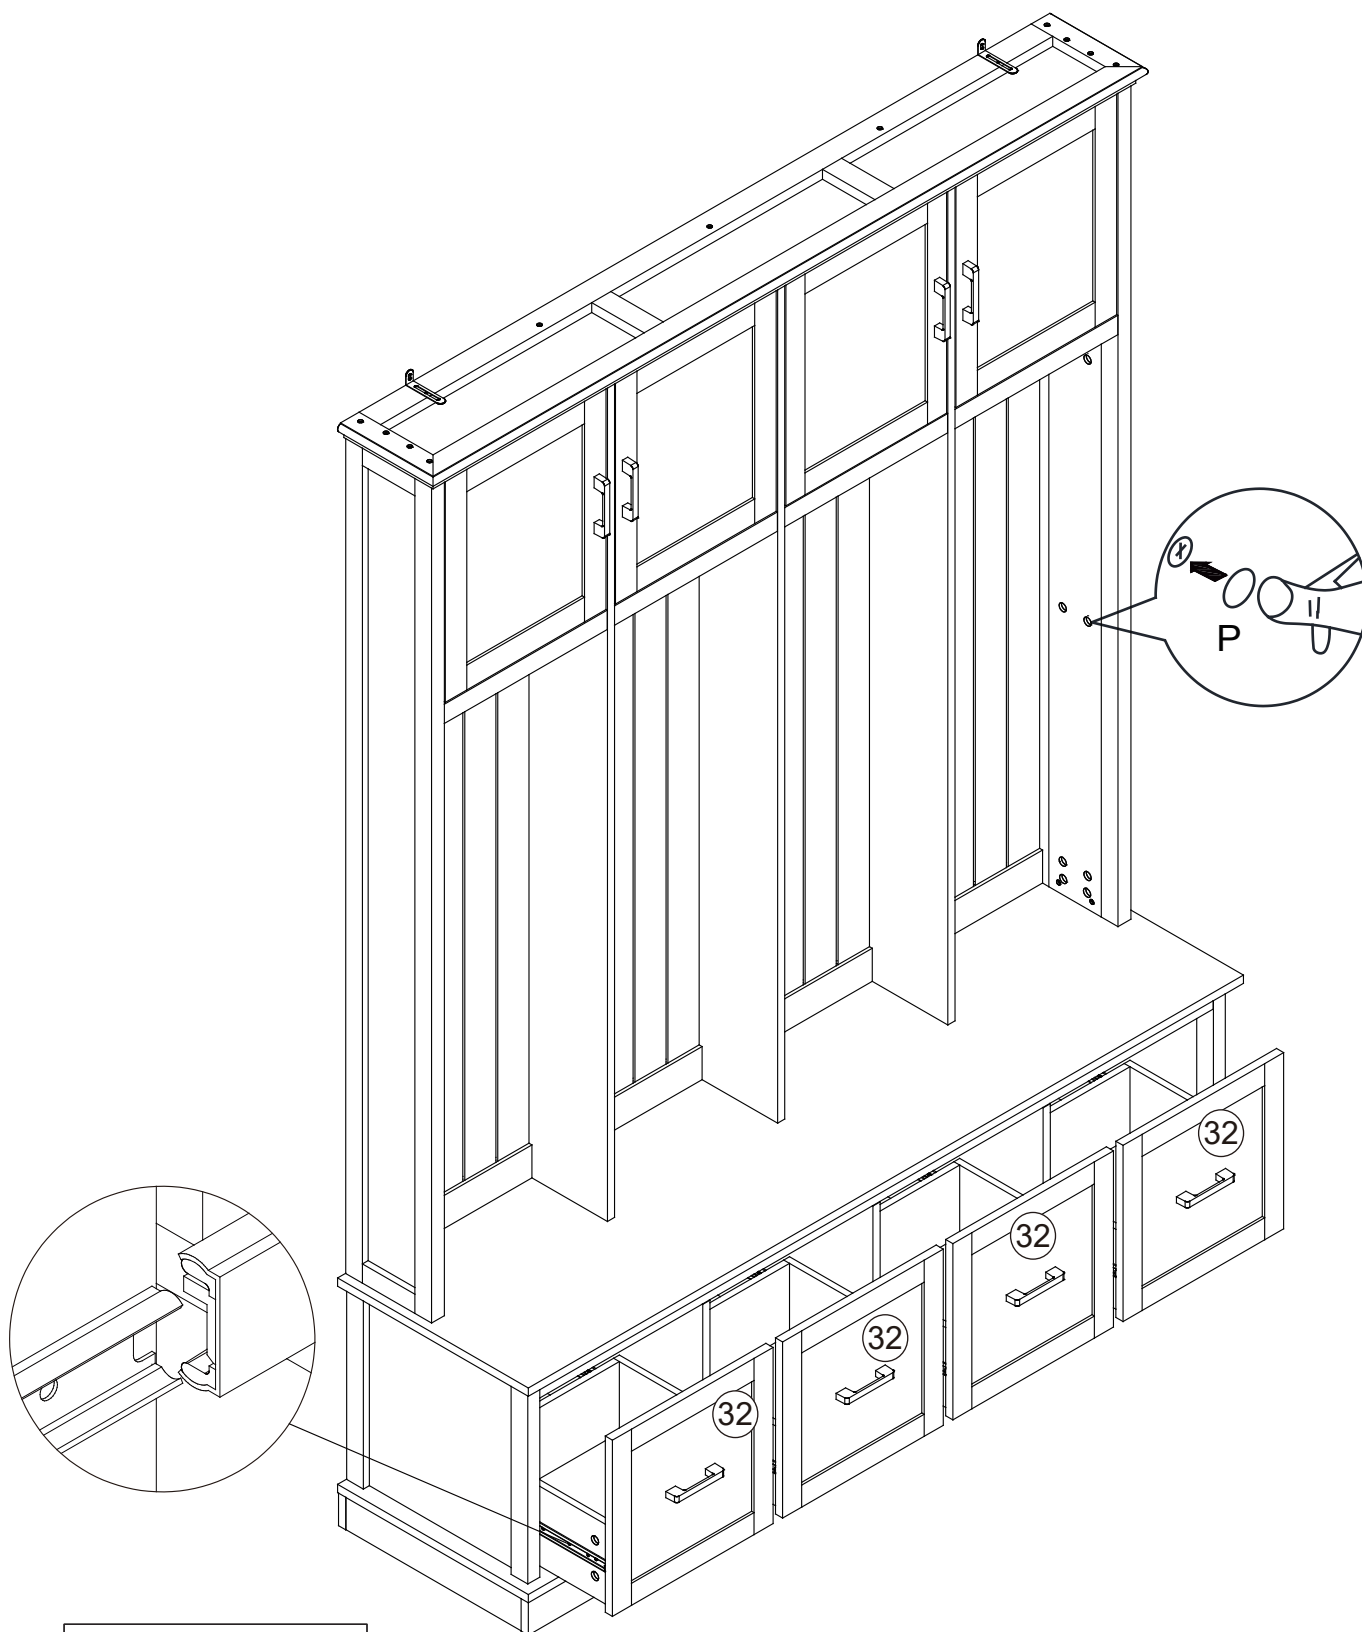

Assembly Instructions

Finish

