



INSTALLATION & ASSEMBLY

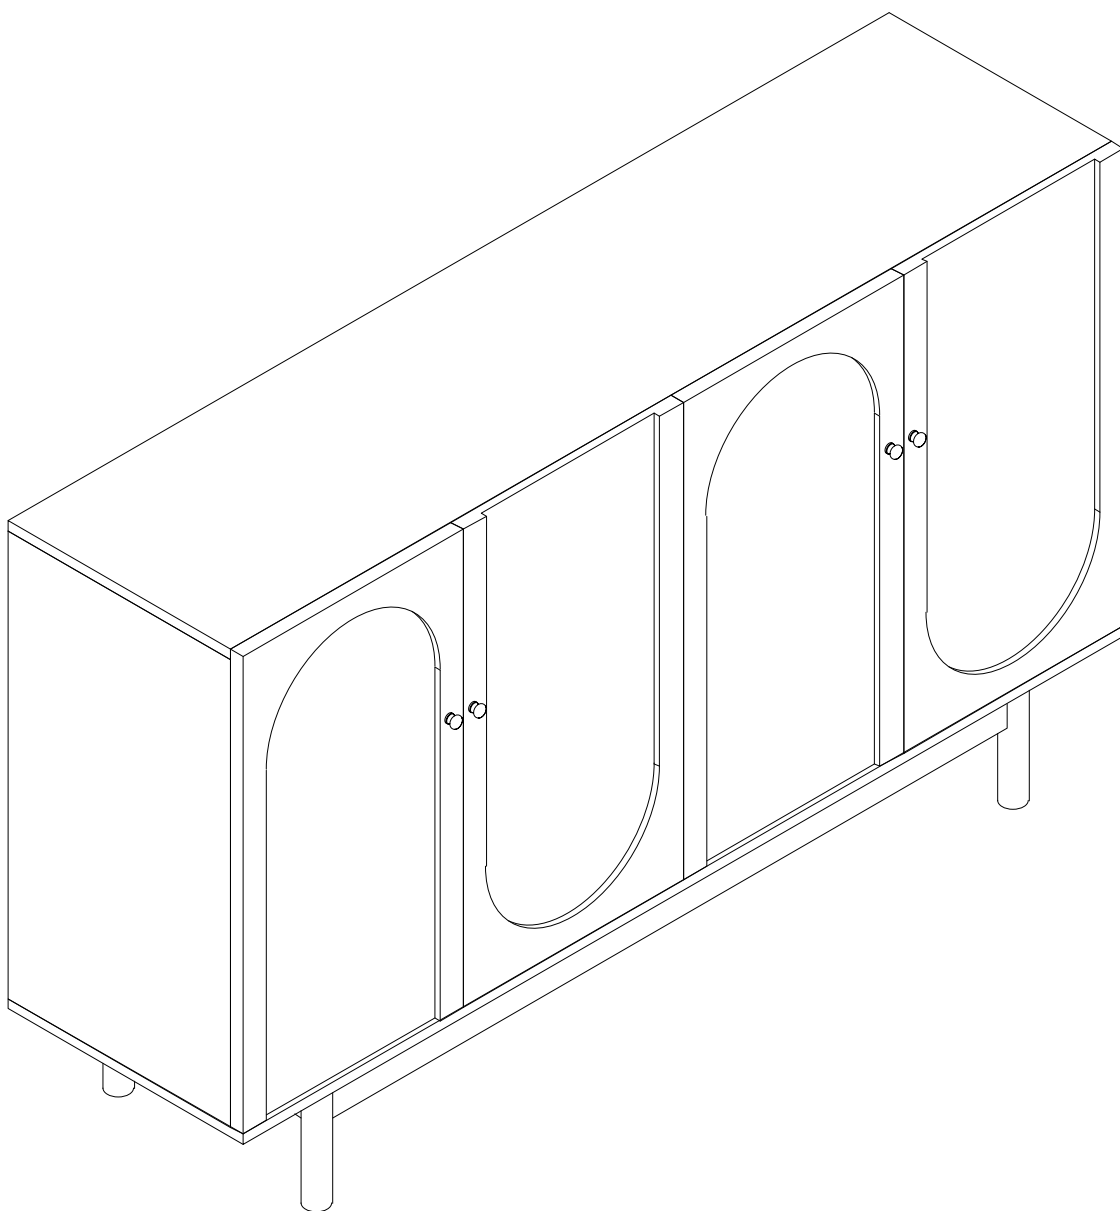


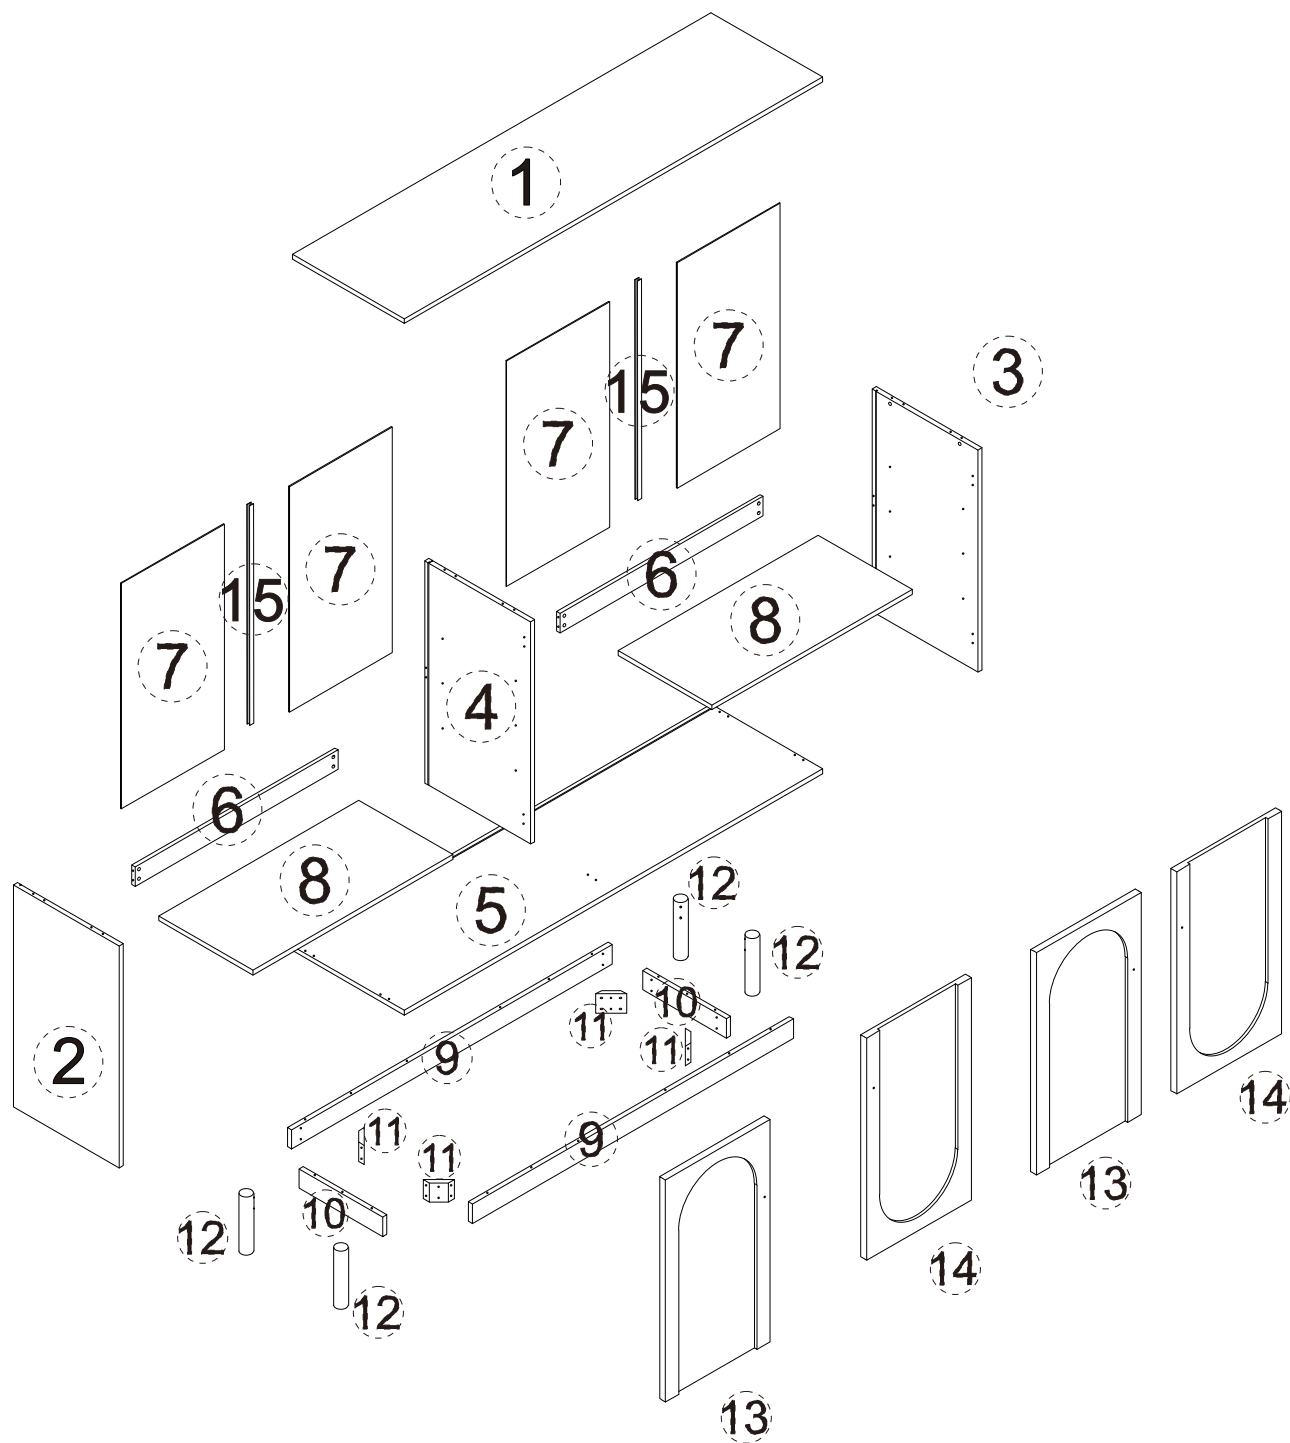


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK




**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

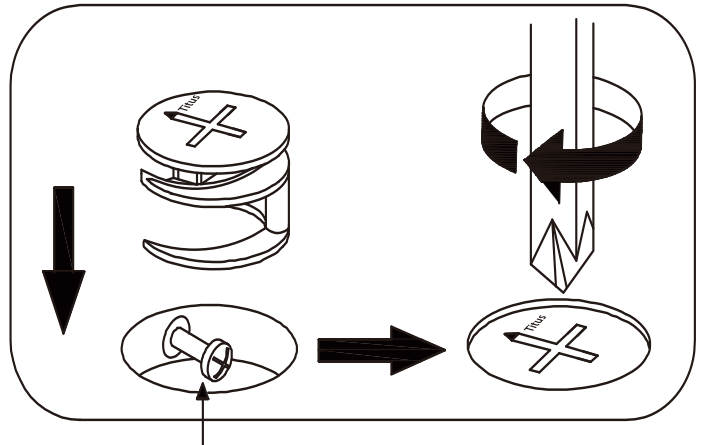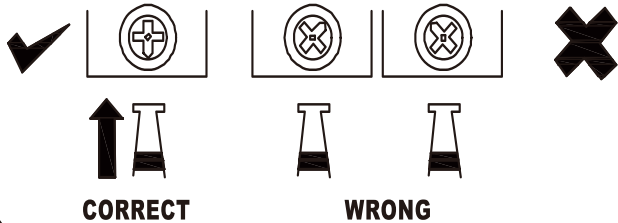

Quickfit head needs to be in centre

QUICKFIT

Tighten until shoulder is flush with panel. DO not overtighten or undertighten (see example below)

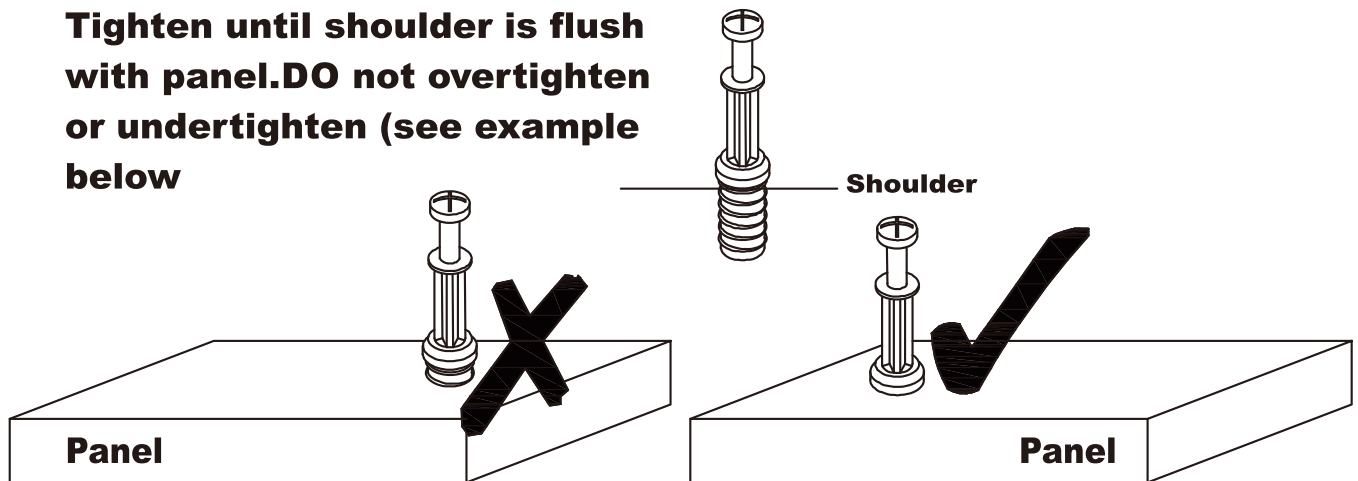


Assembly Steps

HOW TO ADJUST THE HINGES TO
ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

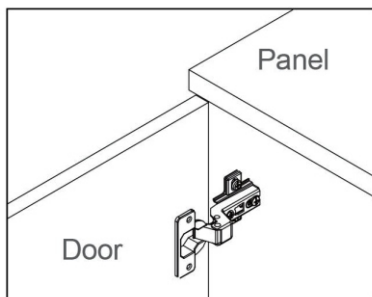


STEP 2

Adjust the door panels up or down

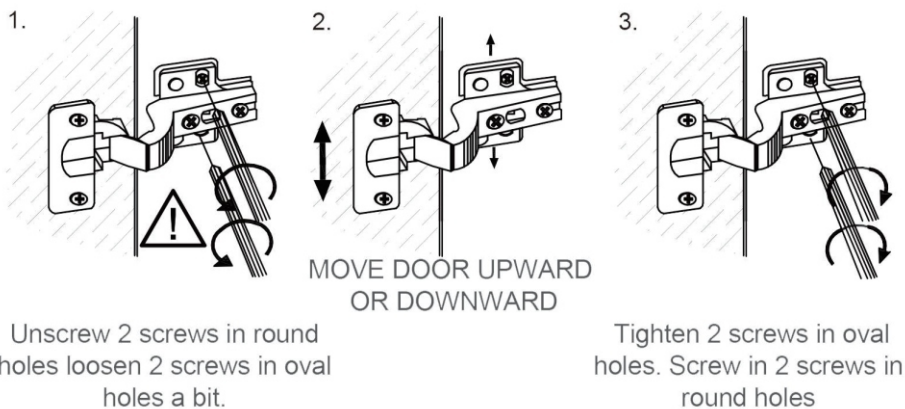


STEP 3

Adjust the flush between door panel and side panel

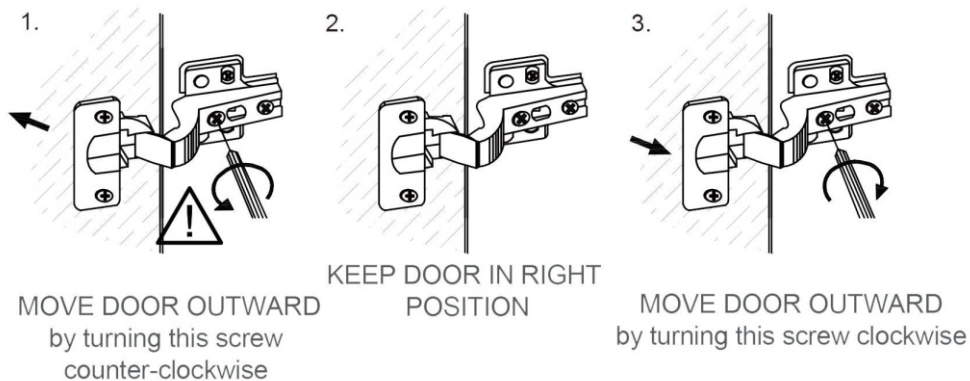


STEP 4

Adjust the Gap between door panel and side panel

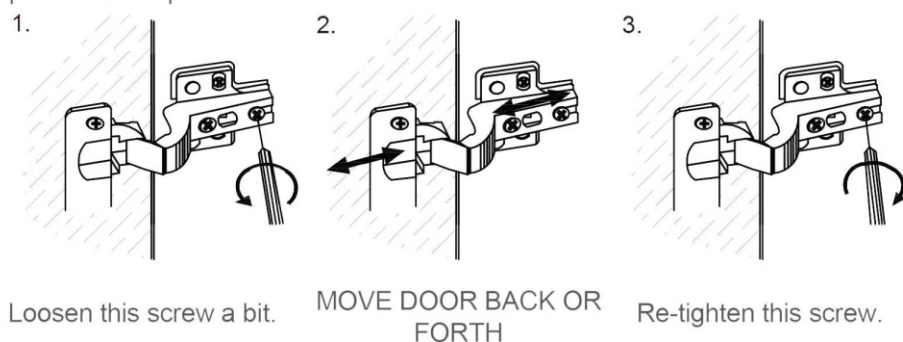

1

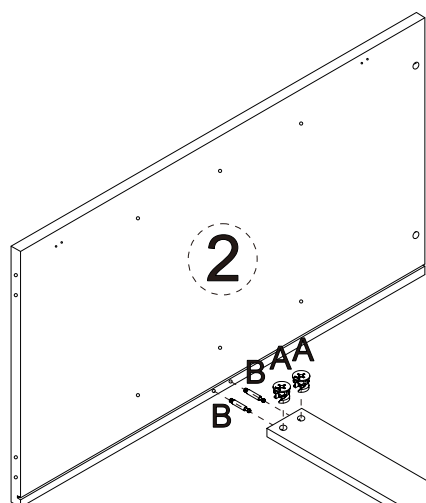

Connect part 2/4 to part 6 with hardware A/B.

6

A A

B

B

4




Ax4



Bx4

2

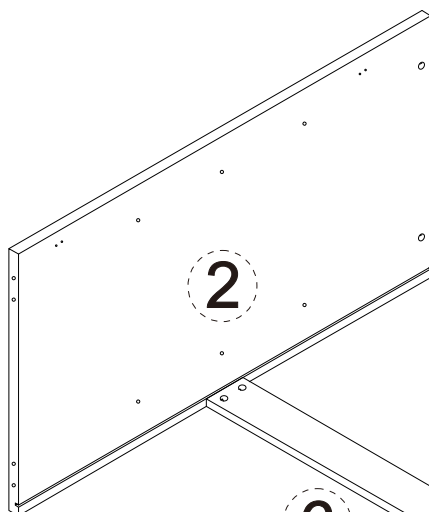

2

6

4

B

B

A A

6




Ax2



Bx2


Connect part 6 to part 4 with hardware A/B.

3

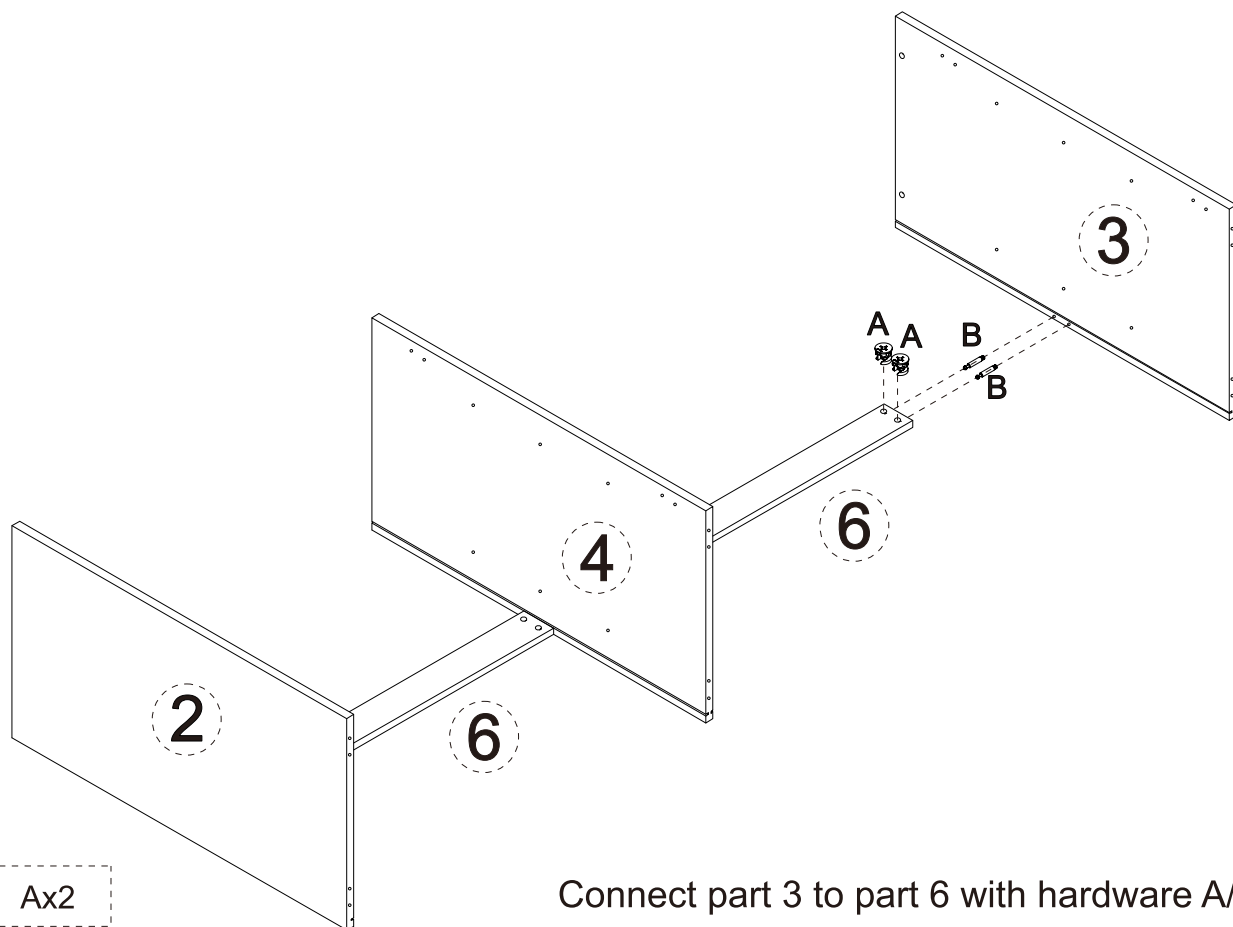

Connect part 3 to part 6 with hardware A/B.


4

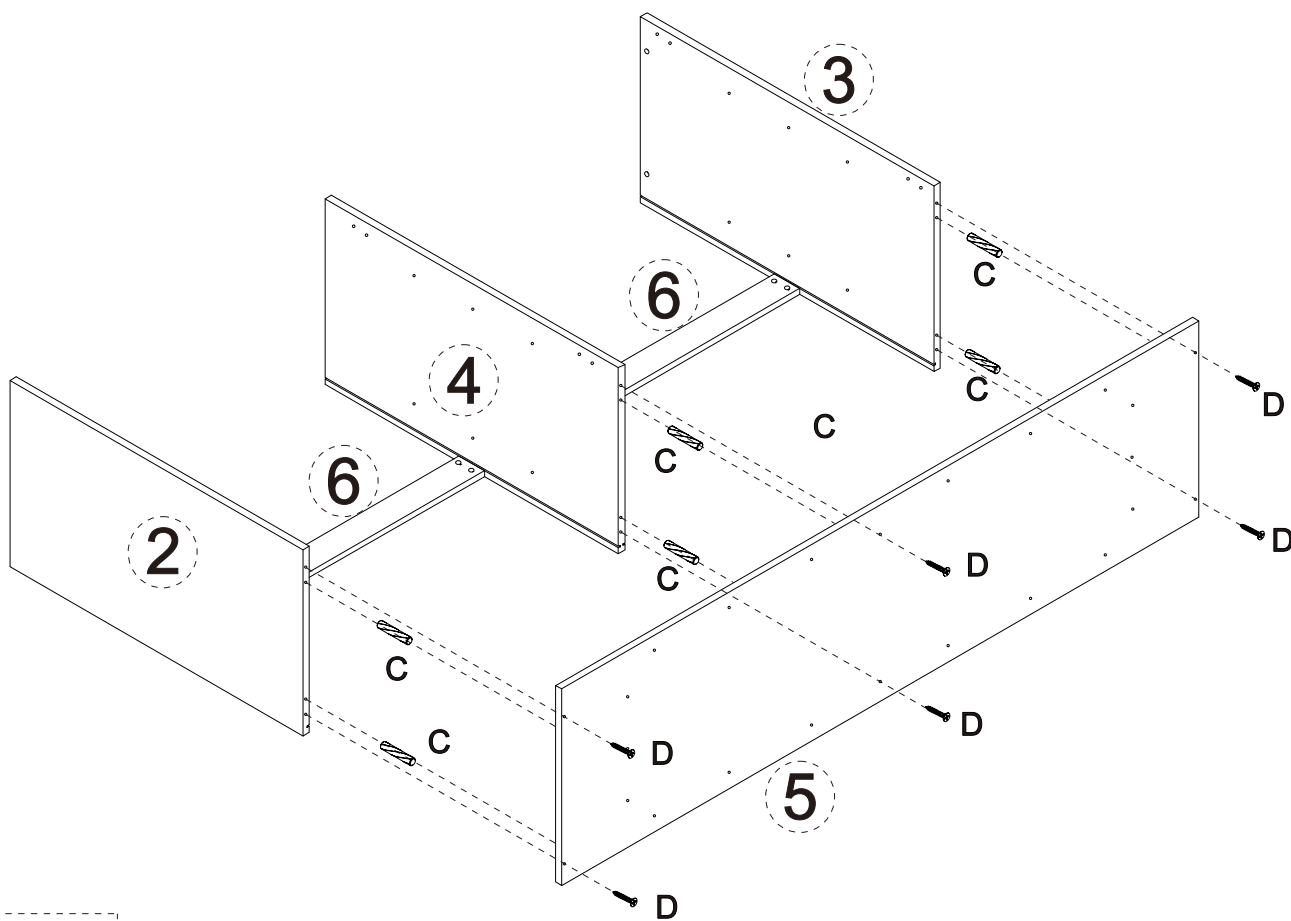

Connect part 5 to part 2/3/4 with hardware C/D.


5

Connect part 11 to part 9/10 with screw E.

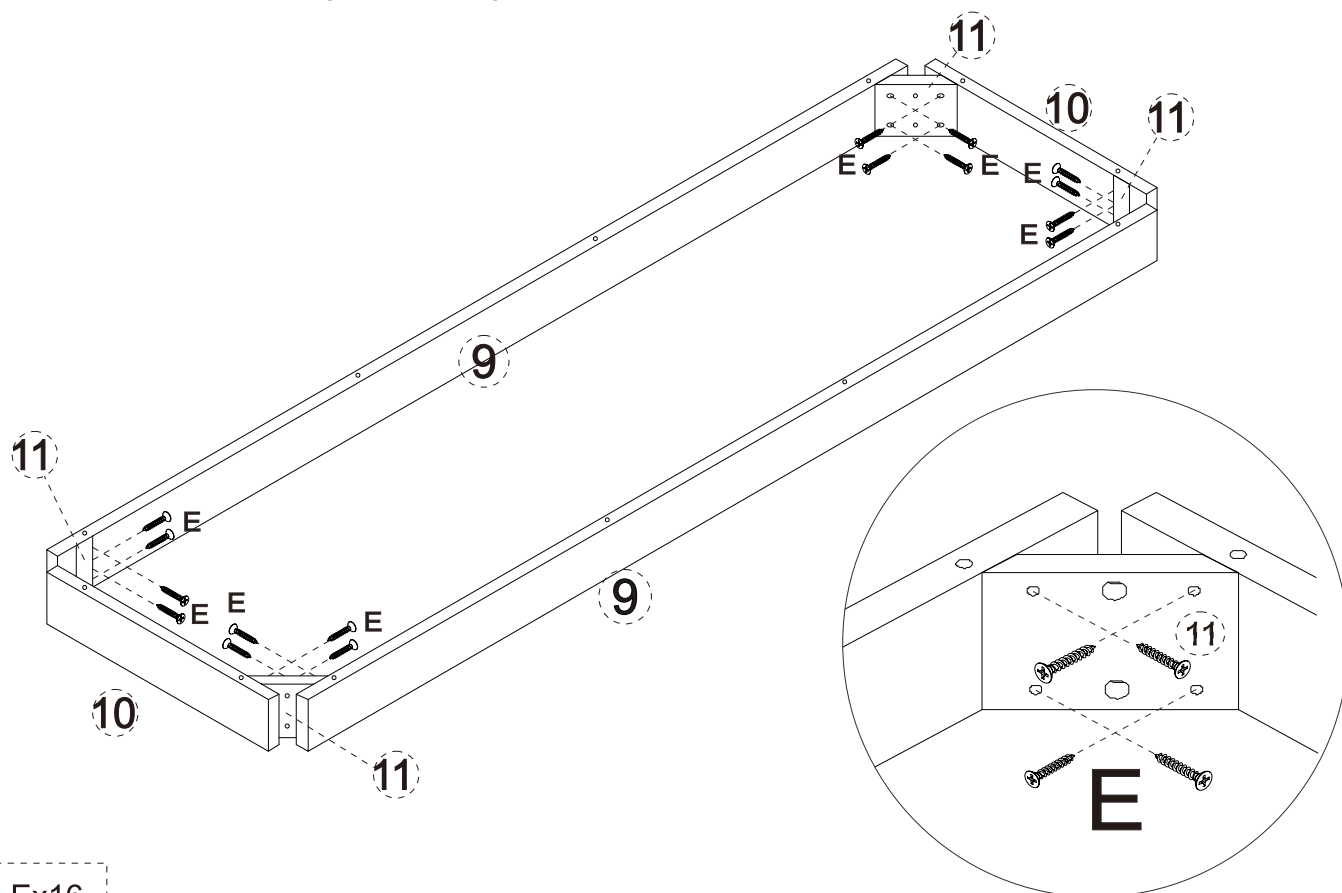

Ex16

6

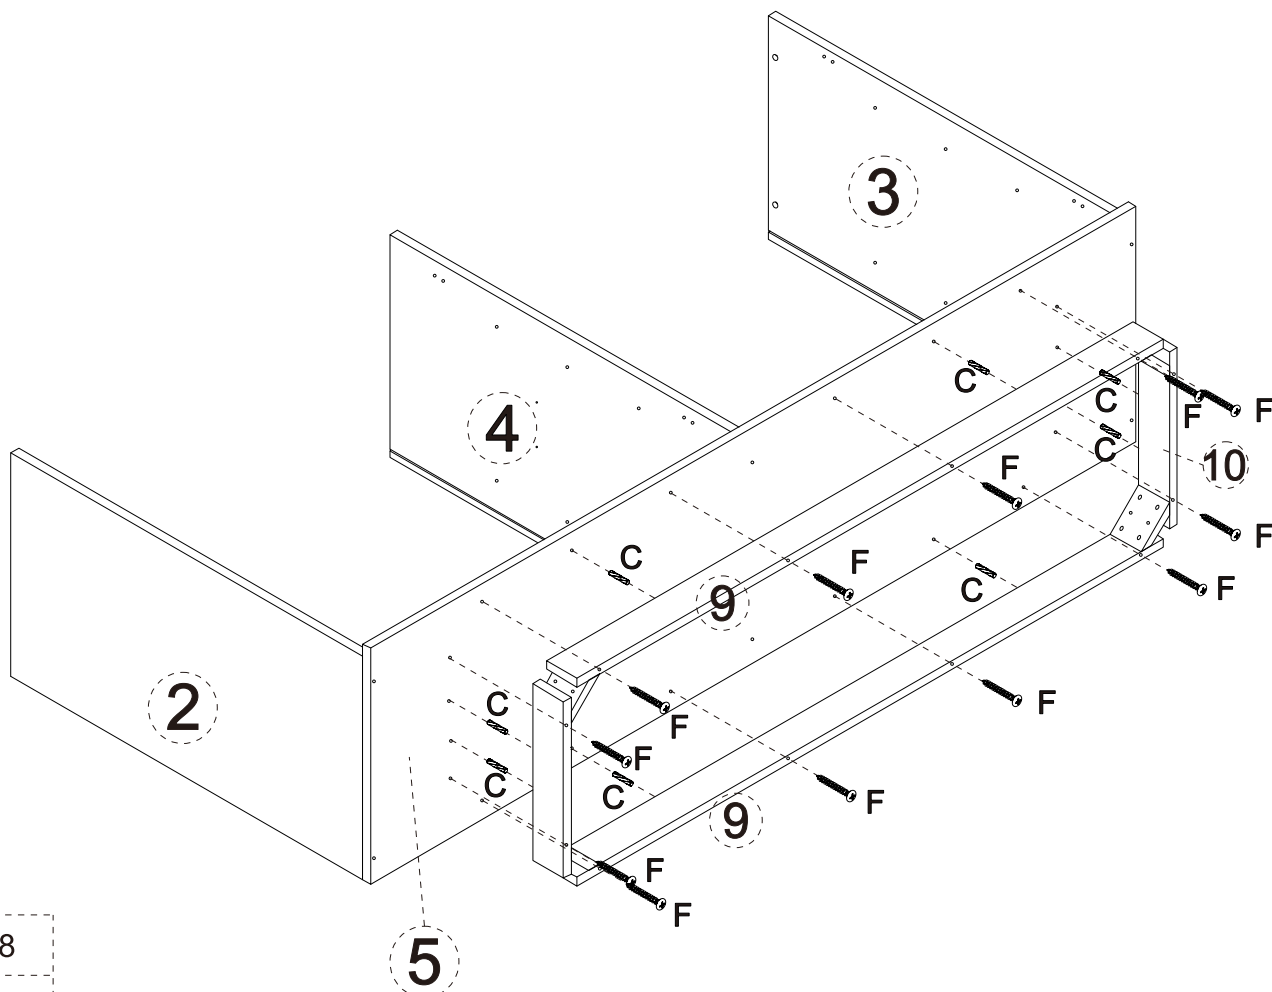

Cx8




Fx12


Connect part 9/10 to part 5 with hardware C/F.

7

Connect part 12 to part 9/10 with hardware G/H.


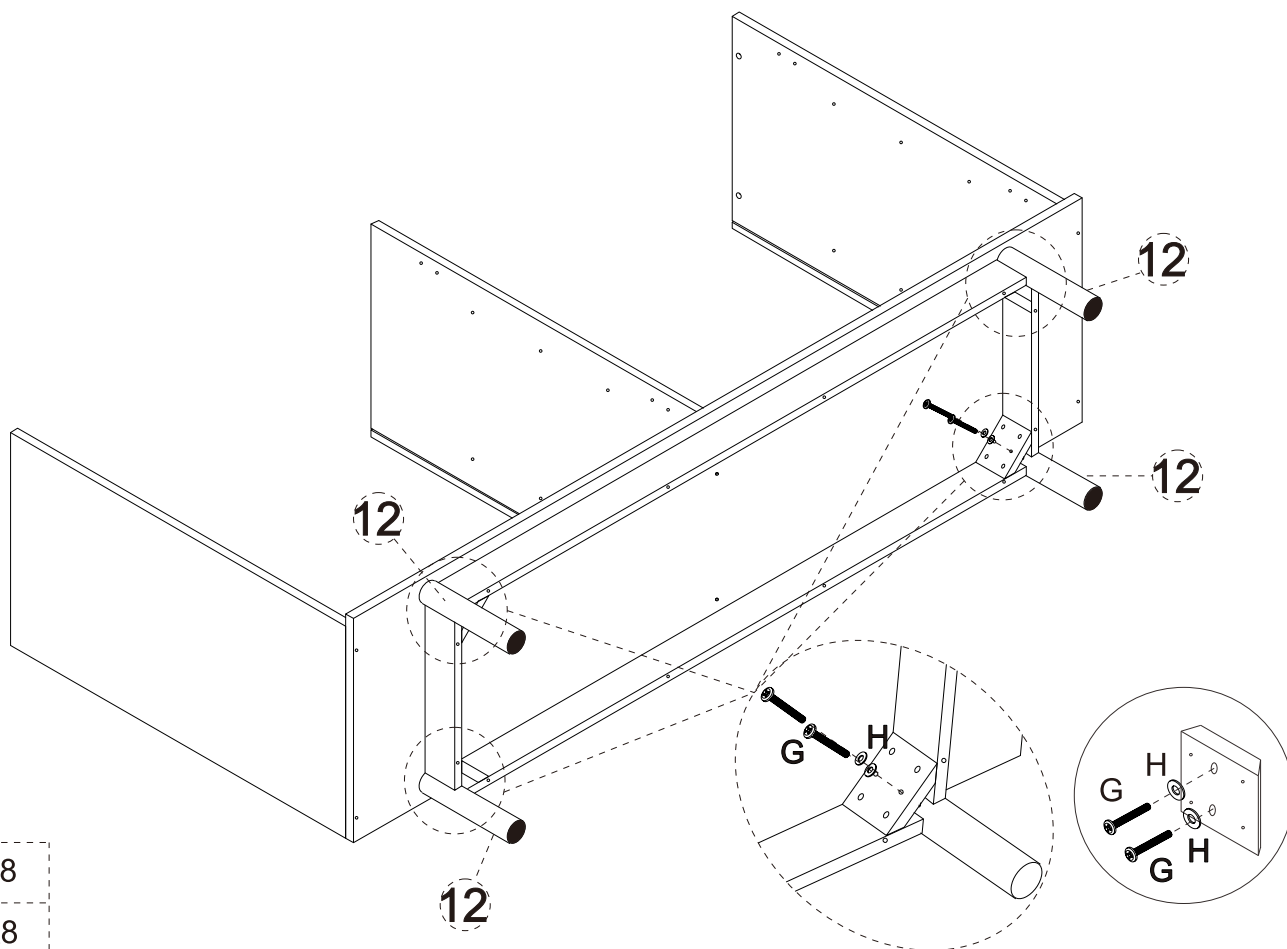


8

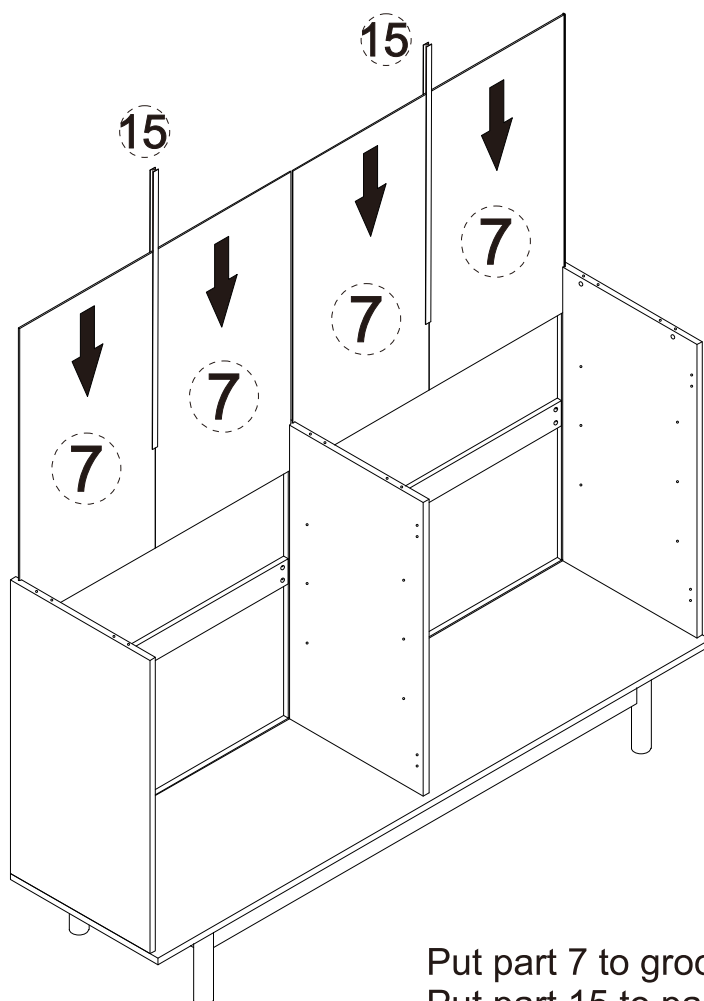

Put part 7 to grooves of part 2/3/4/5,
Put part 15 to part 7.

9

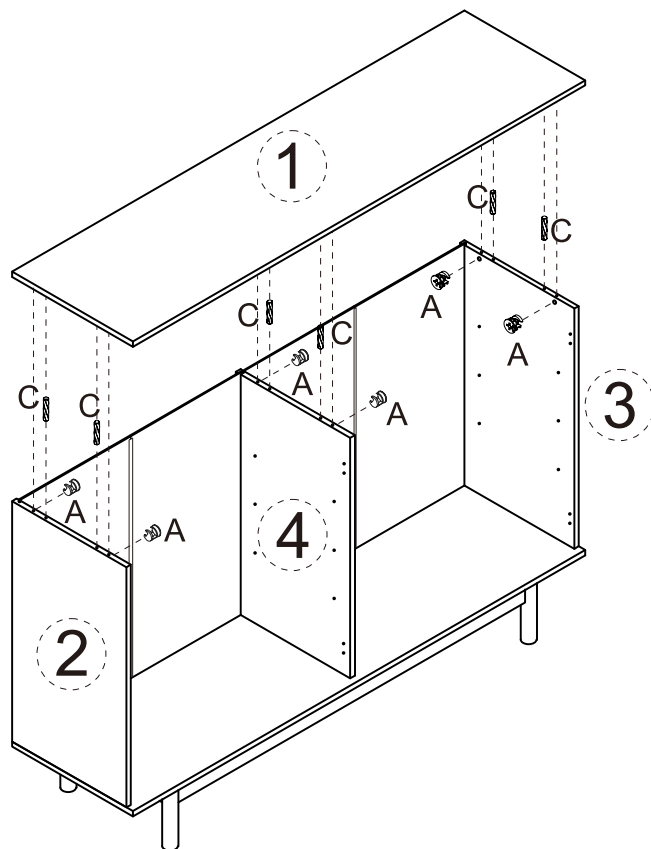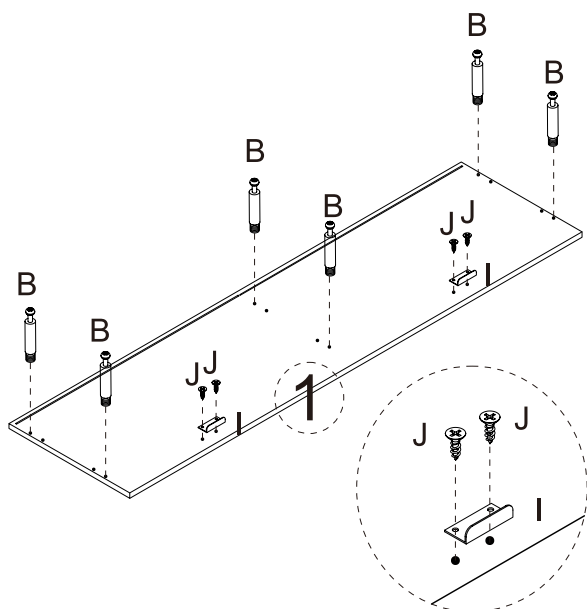

Ax6



Bx6



Ix2








Cx6



Jx4

Connect part I to part 1 with screw J. Screw hardware B to part 1.
Connect part 1 to part 2/3/4 with hardware C/A.

10

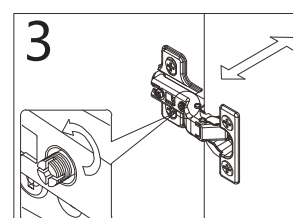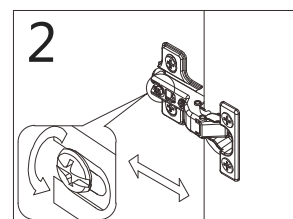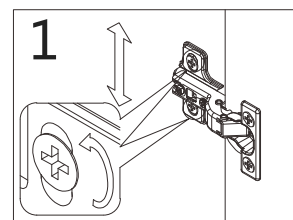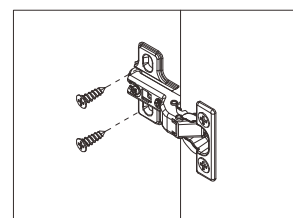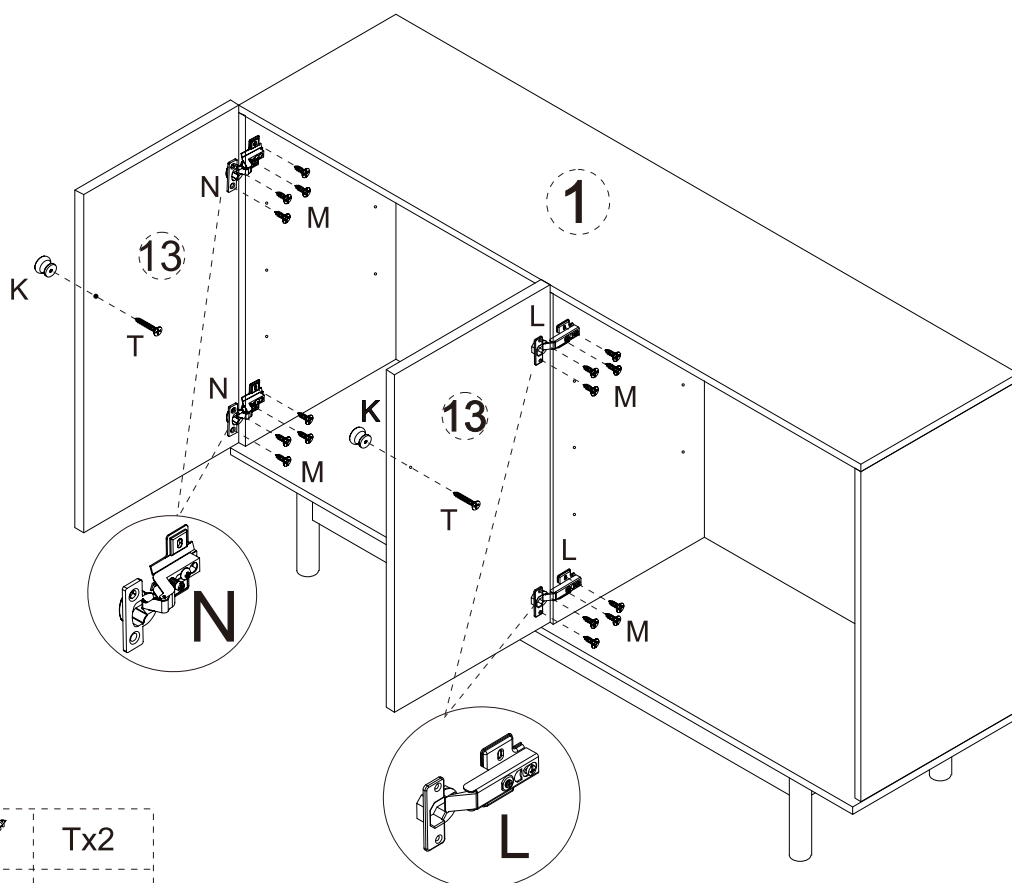

Tx2



Kx2



Mx16



Nx2




Lx2

Connect part K to part 13 with screw T. Connect hardware N to part 13/2 with screw M

Connect hardware L to part 13/4 with screw M.


11

Connect part K to part 14 with screw T .
Connect hardware N to part 14/3 with screw M
Connect hardware L to part 14/4 with screw M.

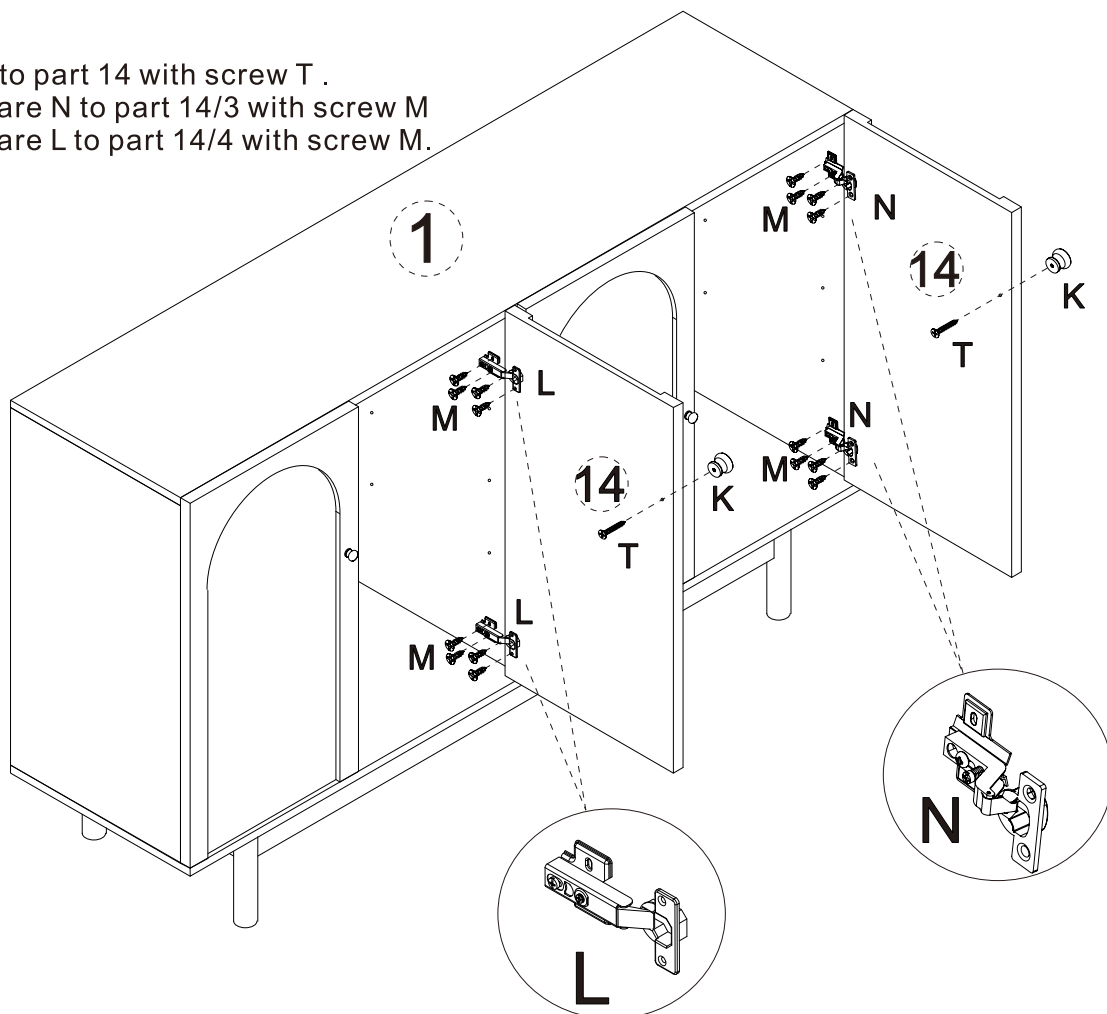

	Tx2
	Kx2
	Mx16
	Nx2
	Lx2




12

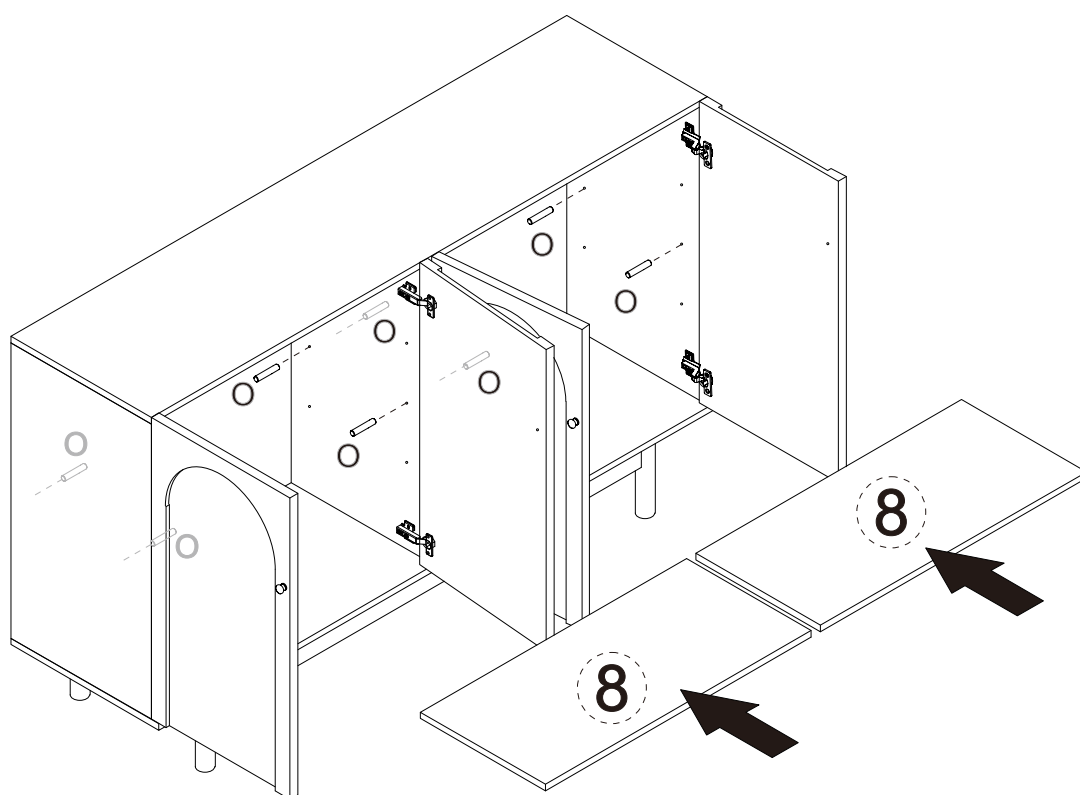

Put hardware O to part 2/3/4 .Put part 8 on hardware O.



	Ox8
--	-----

13

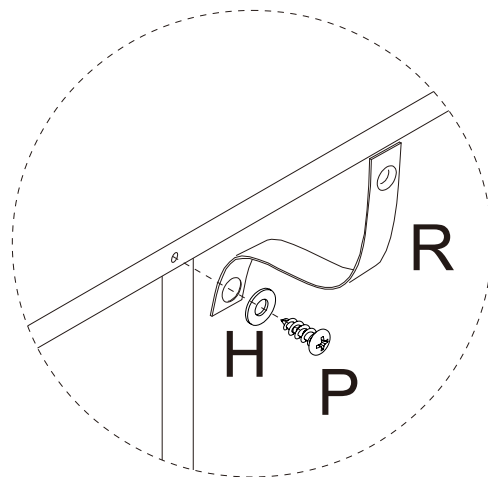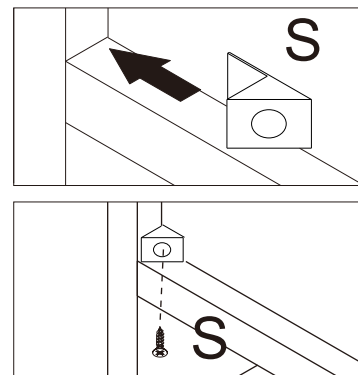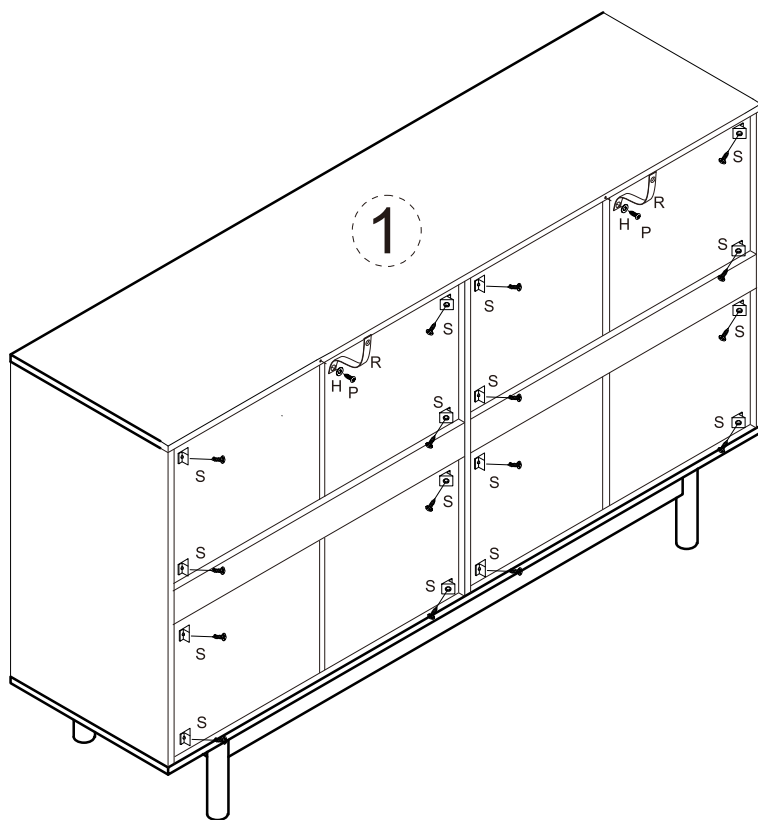

	Px2	Connect hardware S to back of cabinet with matched screw. Connect hardware H/R to cabinet with screw P.
	Hx2	
	Rx2	
	Sx16	

14

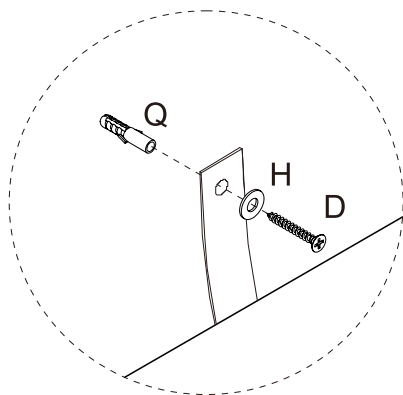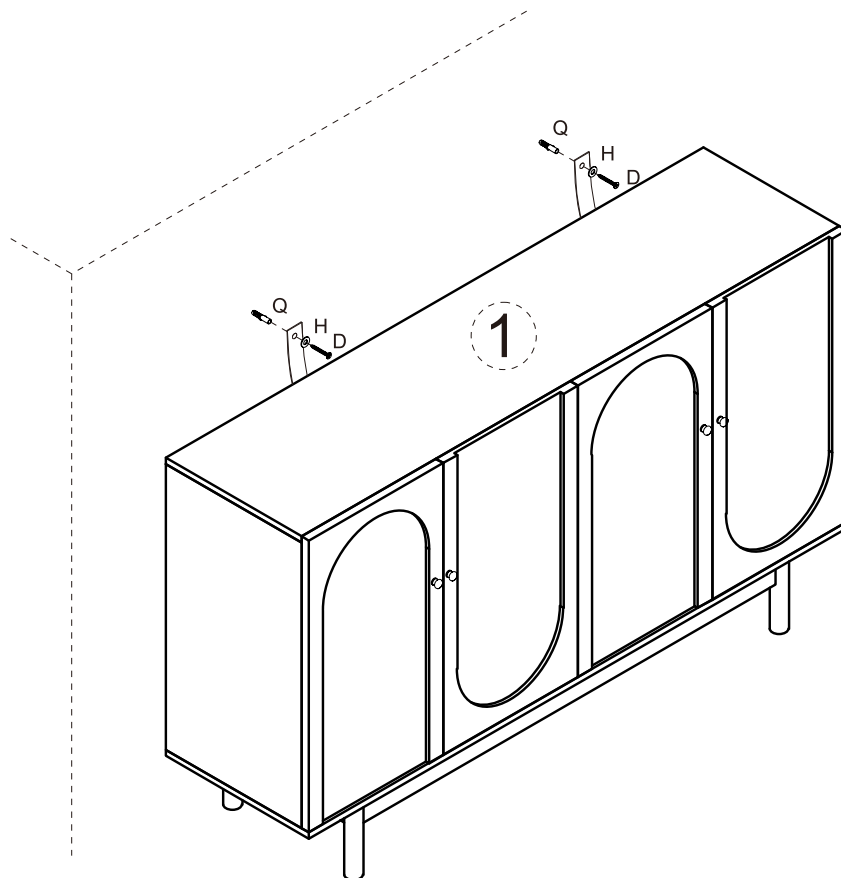

	Dx2	Connect hardware R to wall with hardware Q/H/D. Congratulations on your successful installation of this product!
	Hx2	
	Qx2	