



## Member List

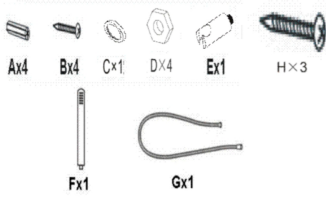



## Tools

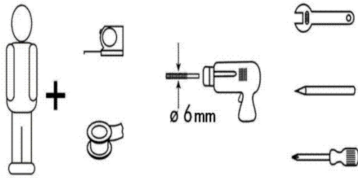


### WARNING!

Before testing, please turn on the faucet and leave the water running for about 3 minutes to evacuate the air and dirt trapped in the pipes, in order to prevent these residues causing some damage to the shower panel.

# INSTRUCTION

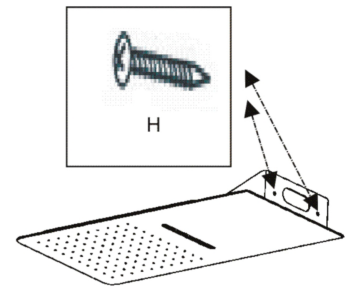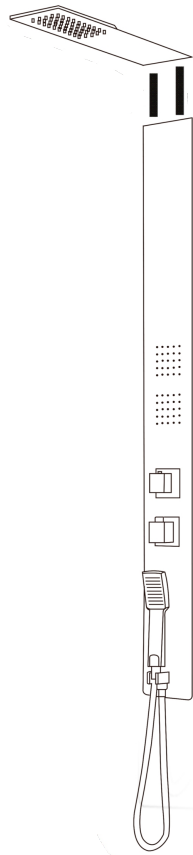


E:holder  
F:hand shower  
G:flexible pipe

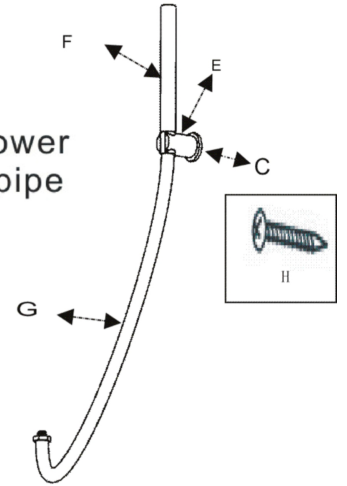

## INSTRUCTIONS

**WARNING!** Before drilling, please make sure there are no pipes or cables in the wall.

1. Drill the holes in the wall.

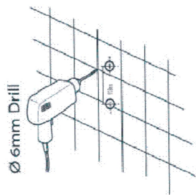

2. Insert the wall plugs inside the holes

