


Installation Instruction

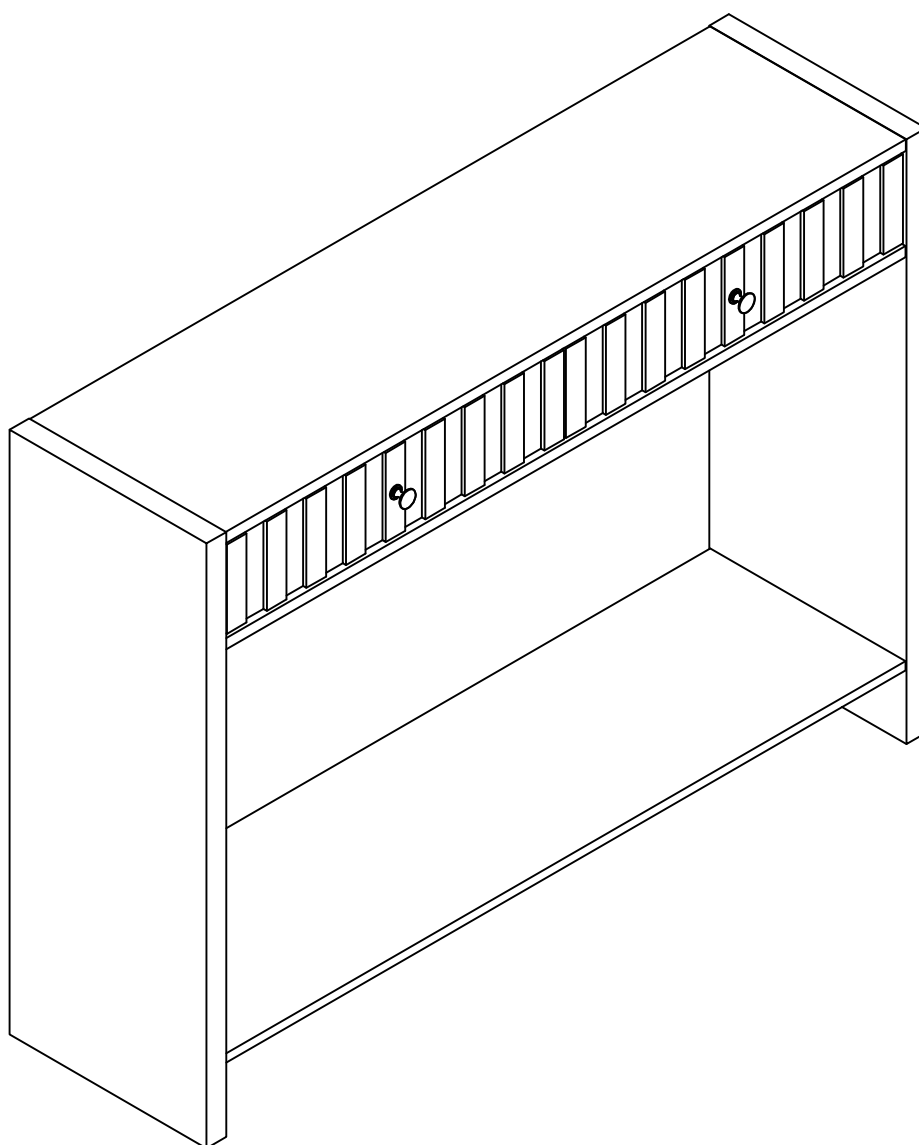

Assembling


Estimated time for assembly



45 : 00

What you need


- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation




100 | **35**
lbs table top lbs per

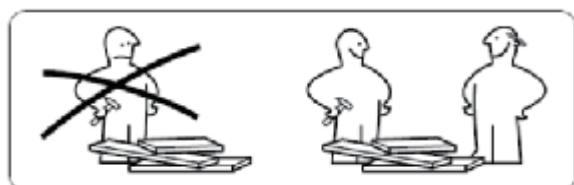

What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	40
B	Cam Lock 15X9MM	40
C	Wooden Dowel M6X30MM	9
D	Screw M4X40MM	16
E	Screw M3.5X14MM	2
F	Metal shake handshandle	2
G	Nylon Strap	2
H	Screw M3.0X12MM	16
I	Cam Bolt M4X20MM	2
J	Foot nail	7
K	Anchor	2
L	Hole position sticker	40
M	Flat-head screwdriver	1
CL	Left mother extended orbit	2
CR	Right mother extended orbit	2
DL	Left public extension track	2
DR	Right public extends track	2

The Hardwares

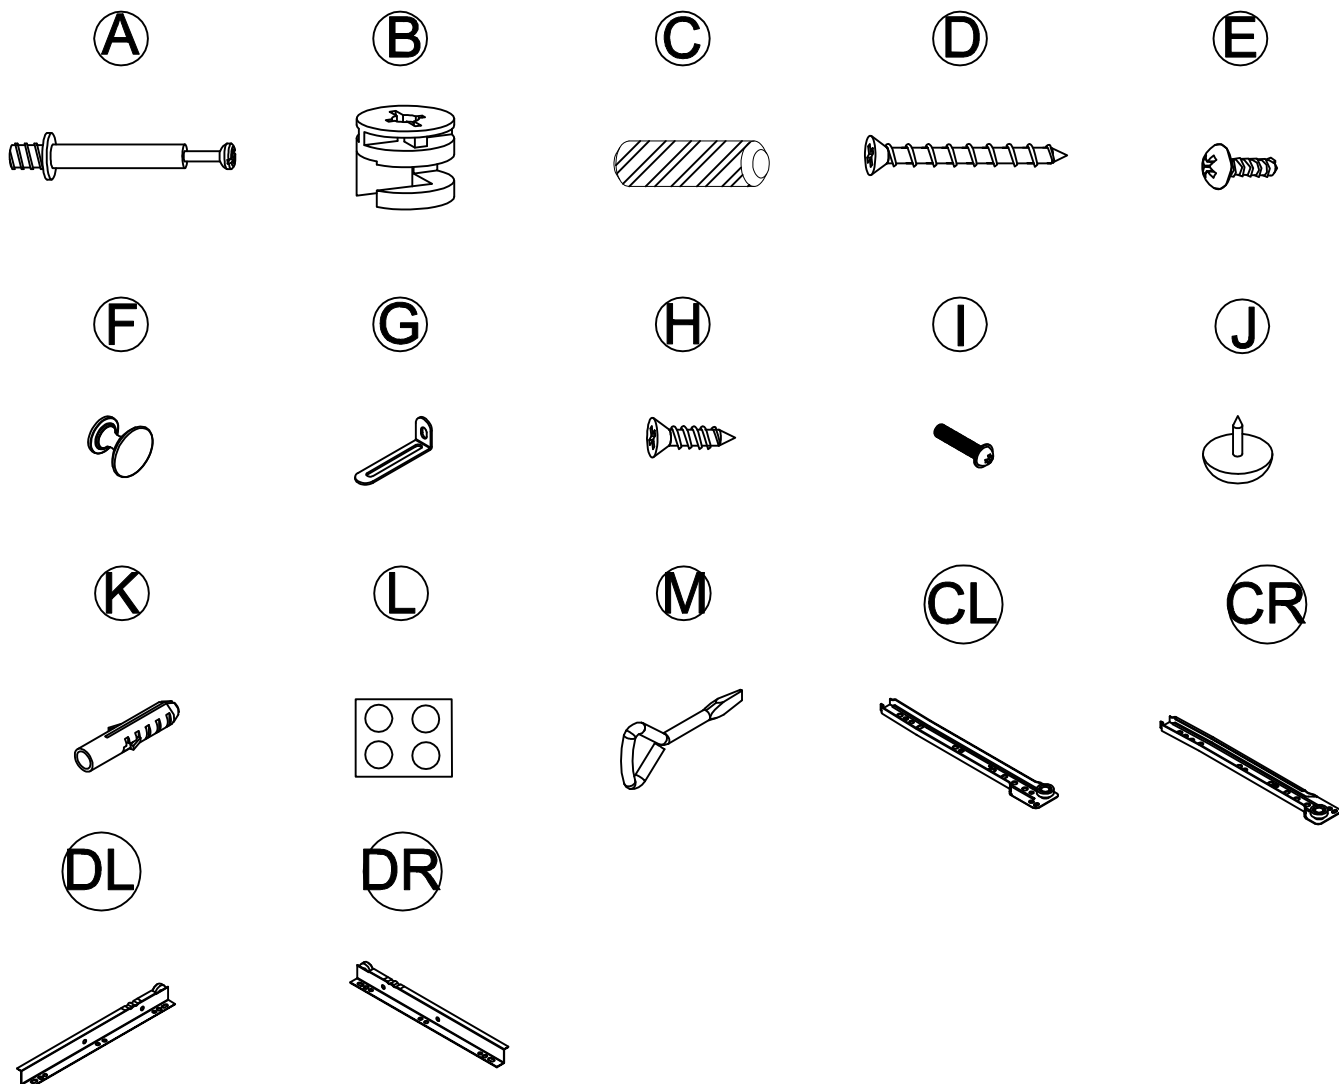


IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.

Included Accessories

Code	Description	Qty
1	Cabinet Top	1
2	Bottom Panel	1
3	Left Side Panel	1
4	Right Side Panel	1
5	Neutral plate	1
6	Drawer left panel	2
7	Drawer right side panel	2
8	The drawer bottom	2
9	After the drawer board	2
10	Reinforcing strip	2
11	Left-hand drawn noodles	1
12	Right-hand side drawn noodles	1
13	Laminate	1
14	Backboard	1
15	Reinforcing plate	1

The Accessoriess



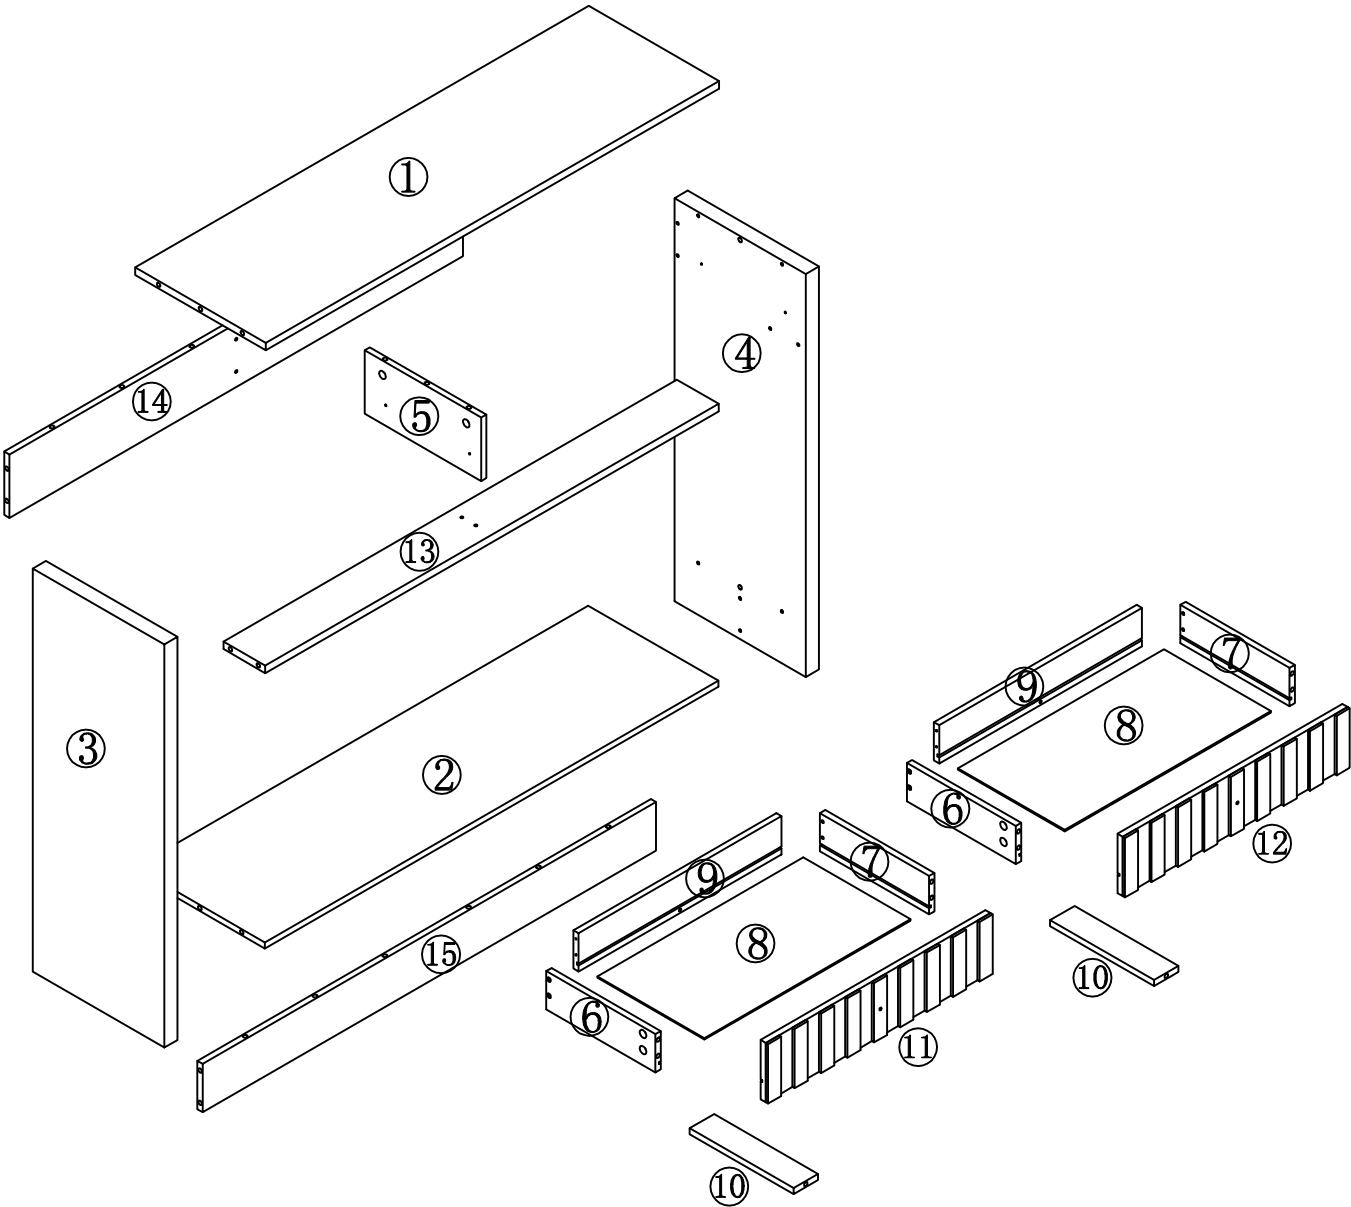


Step 1


H	x 4
	


CL	x 1
	

CR	x 1
	

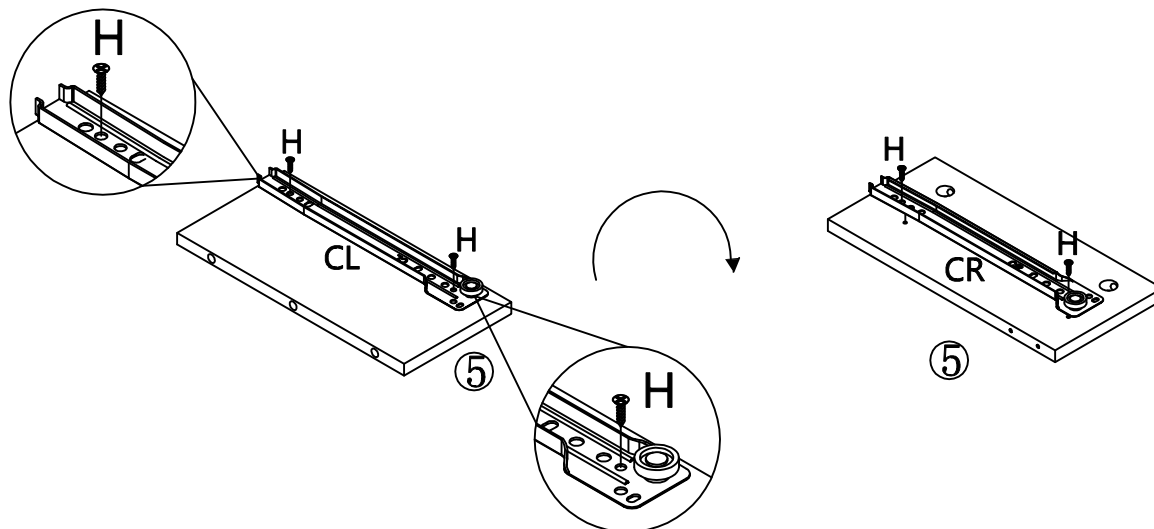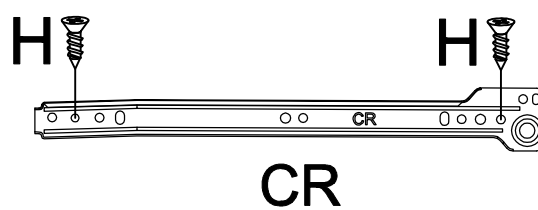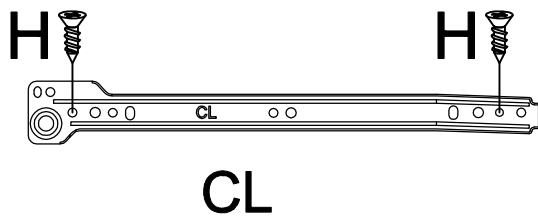


Step 2


D	x 2
	

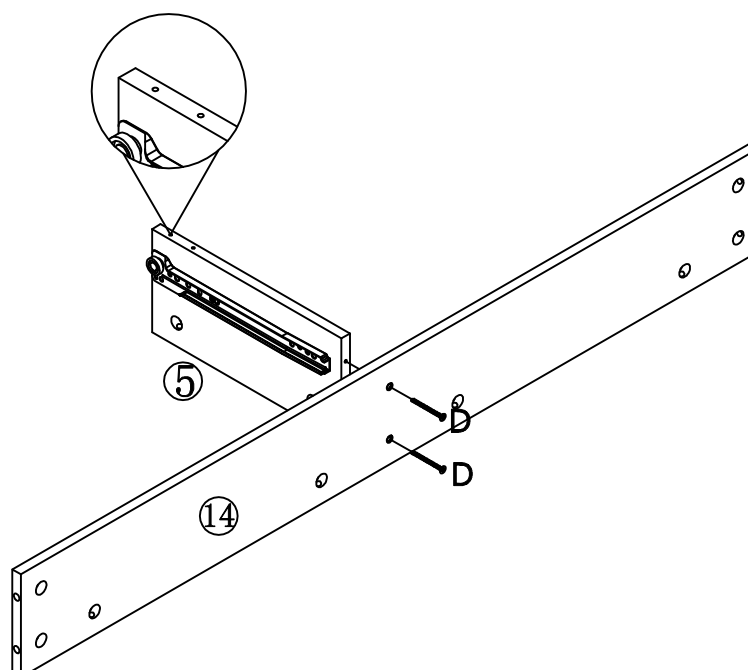


Step 3

D	x 2
	


notice that board ⑬ has a PVC edge facing this way

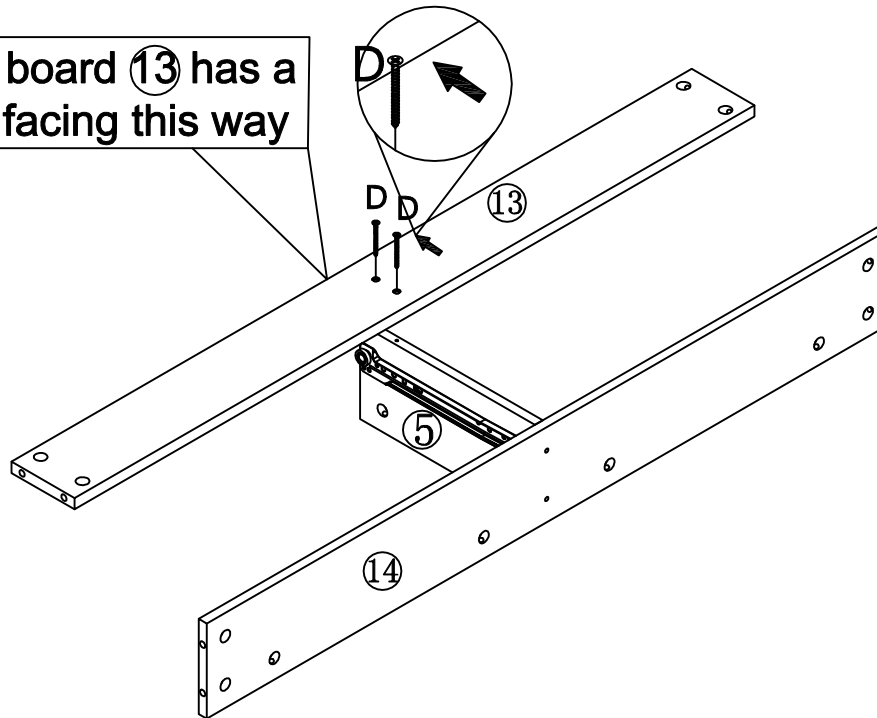





Step 4

A	x 6
	




C	x 3
	

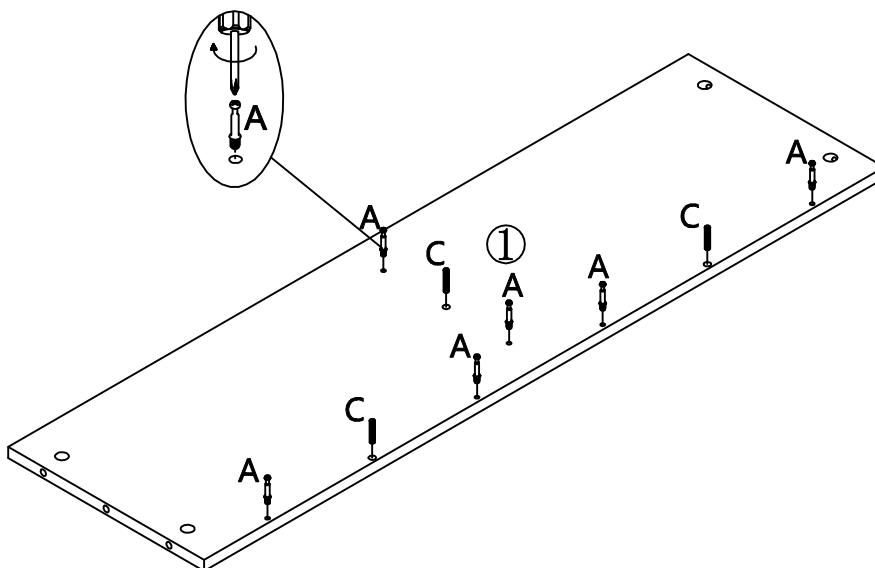


Step 5

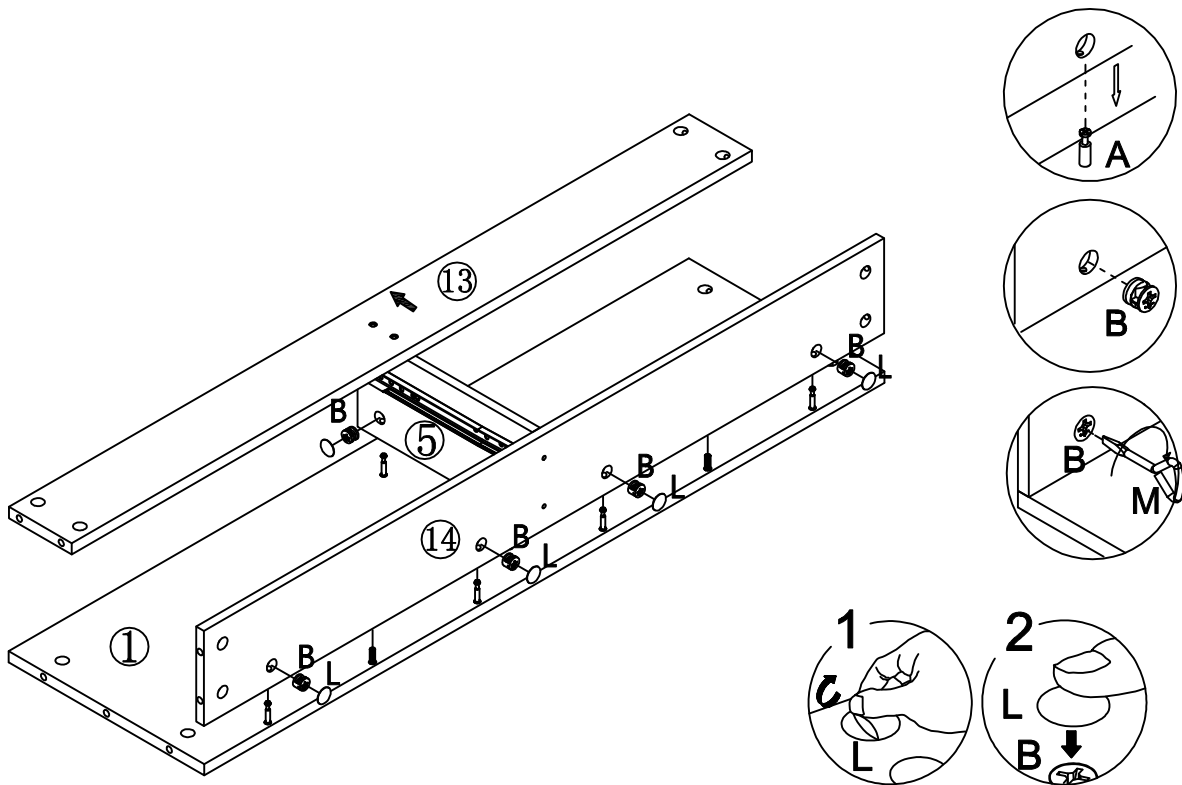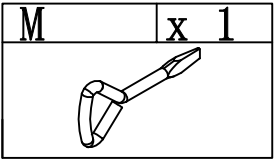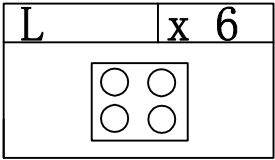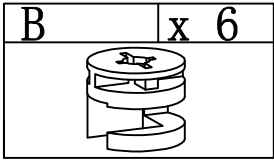


Step 6

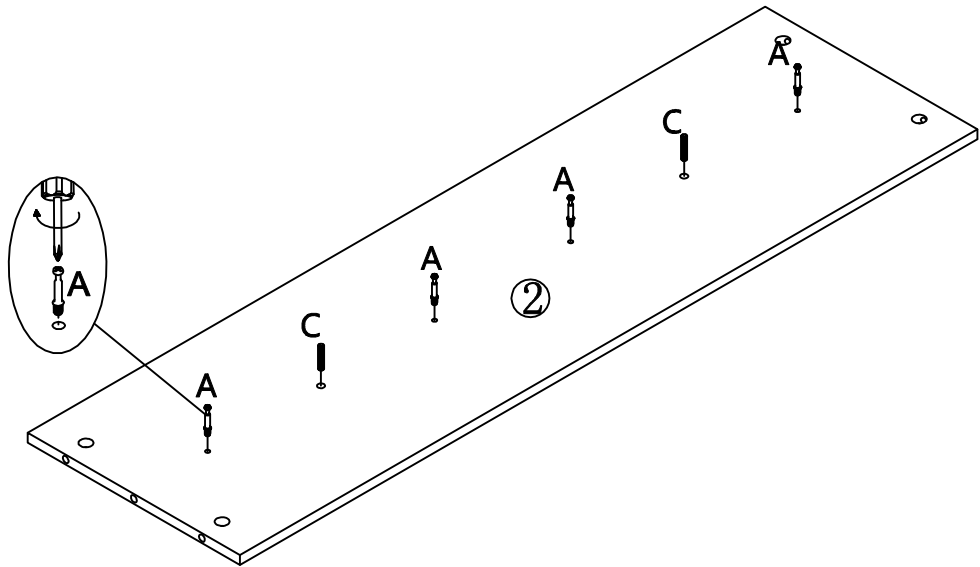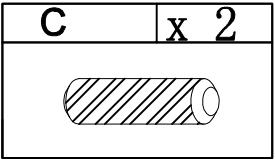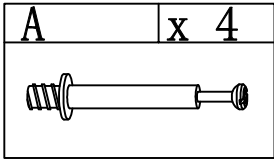


Step 7

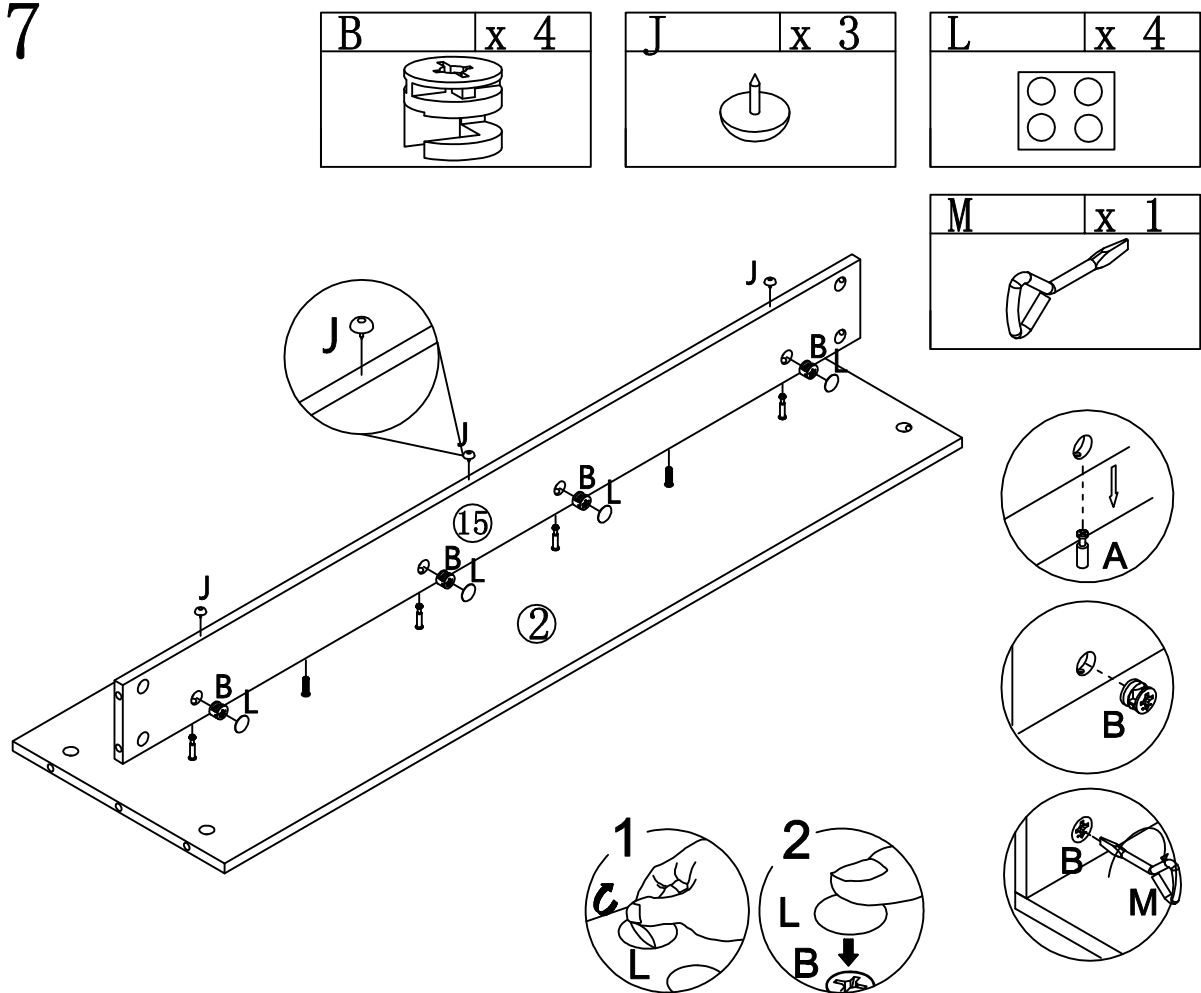


Step 8

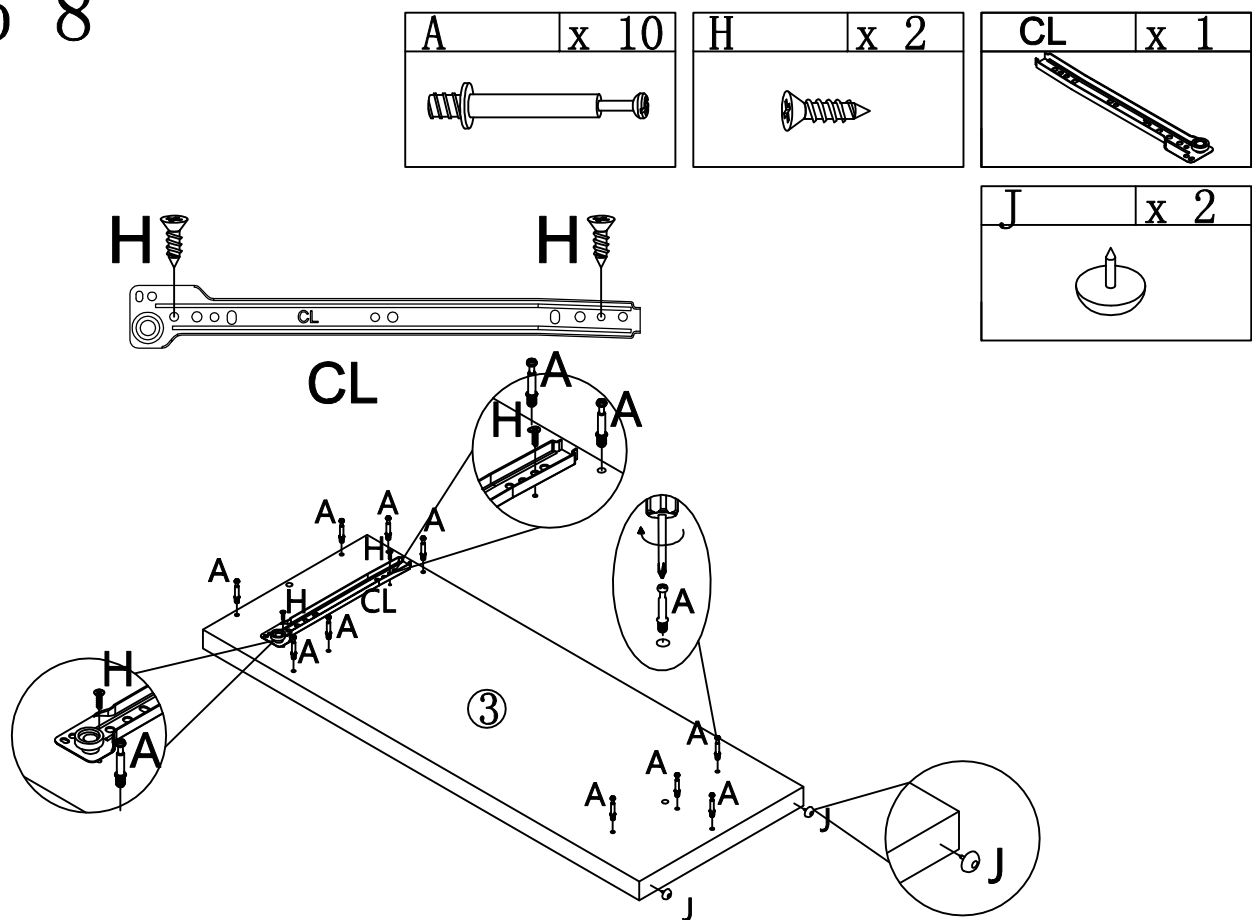











Step 9

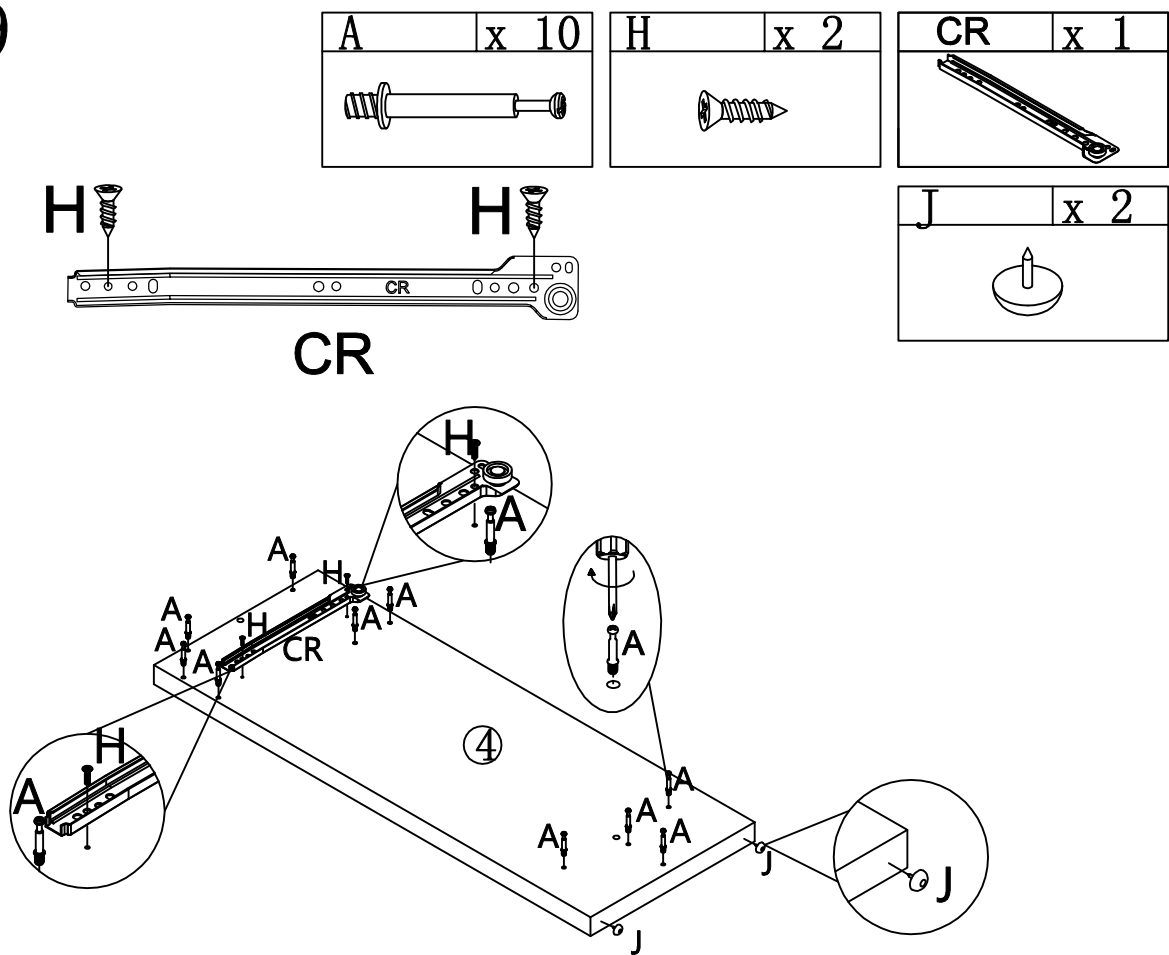


Step 10

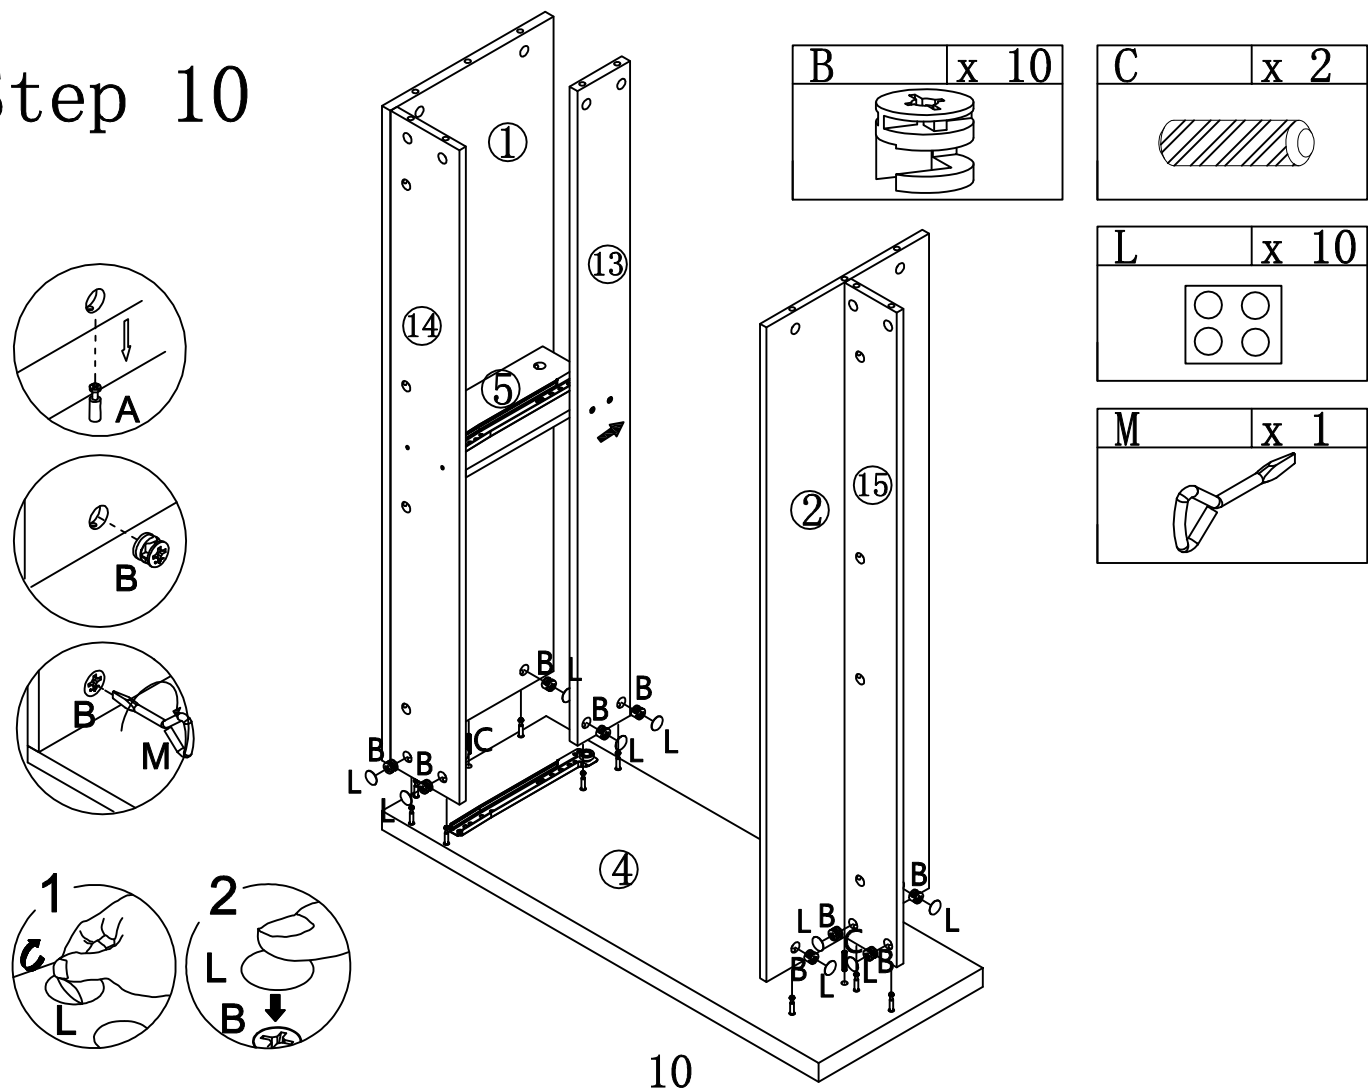

Step 11

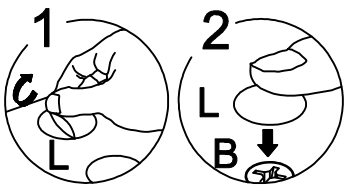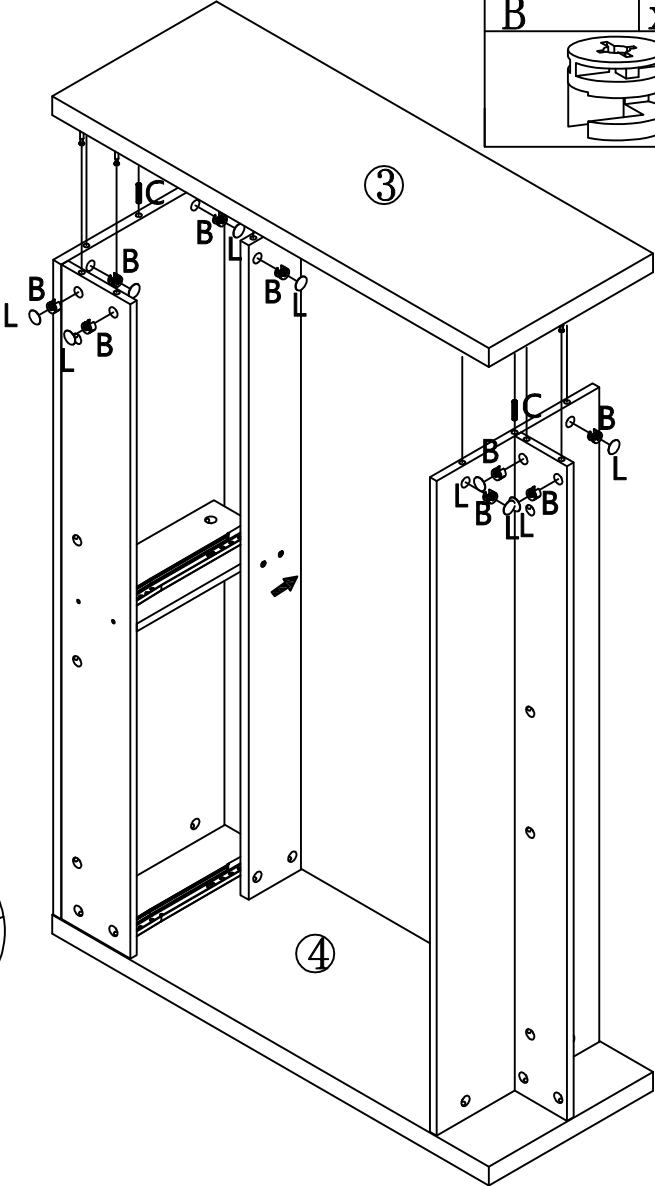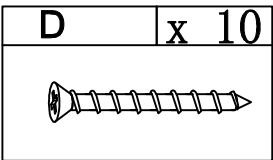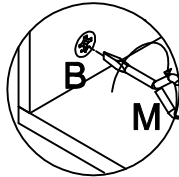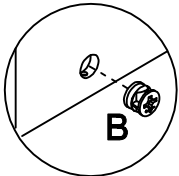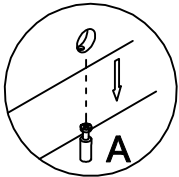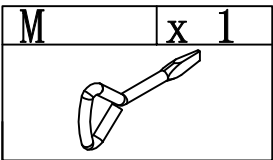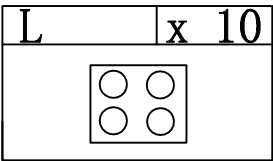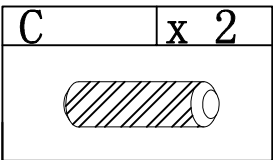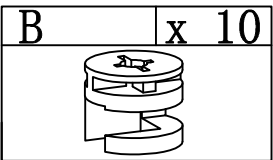


Step 12

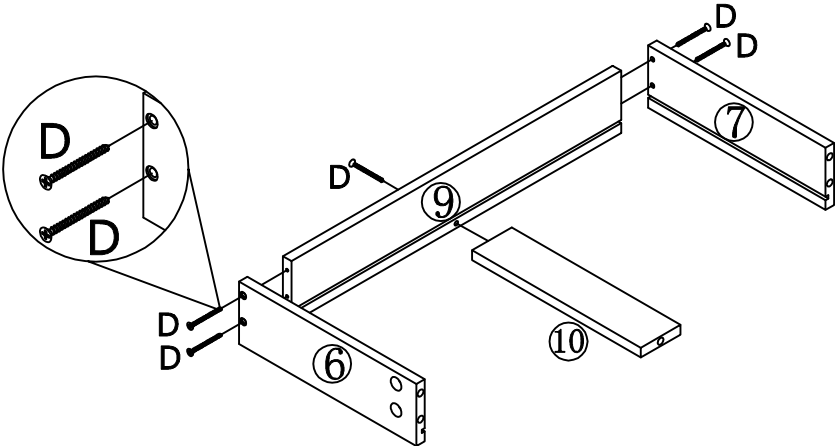




X 2

Step 13










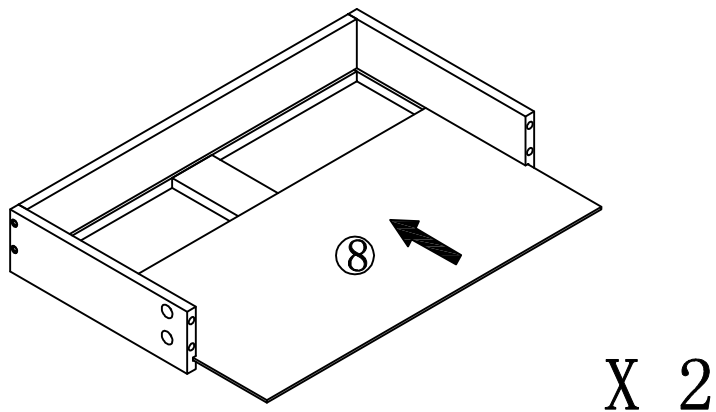


Step 14





A	x 10
	

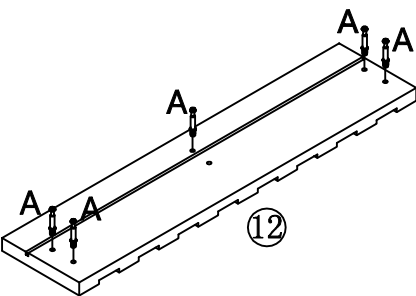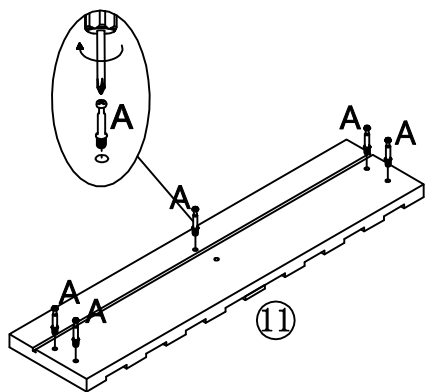

Step 15

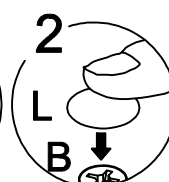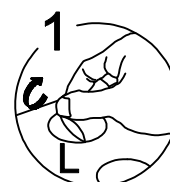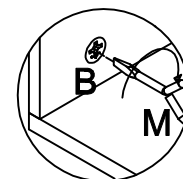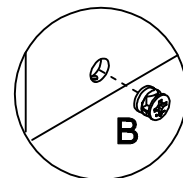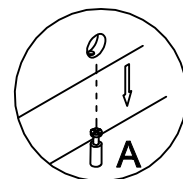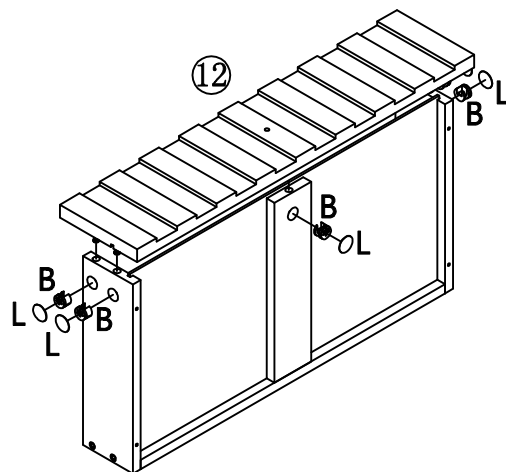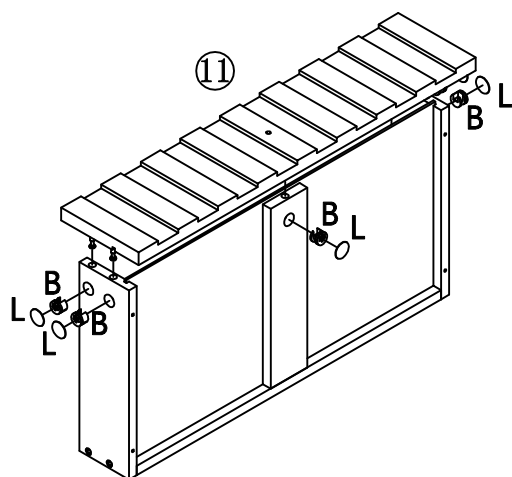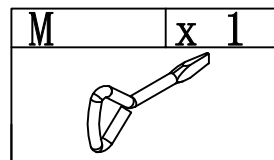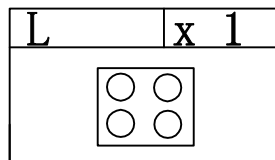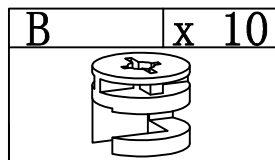



Step 16

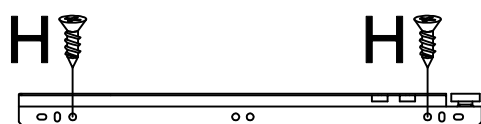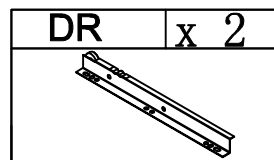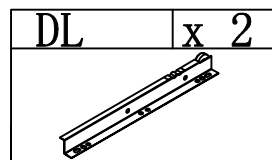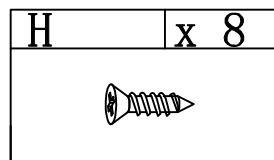





DL




DR

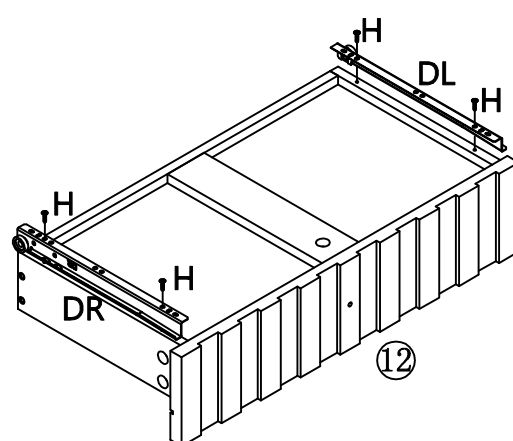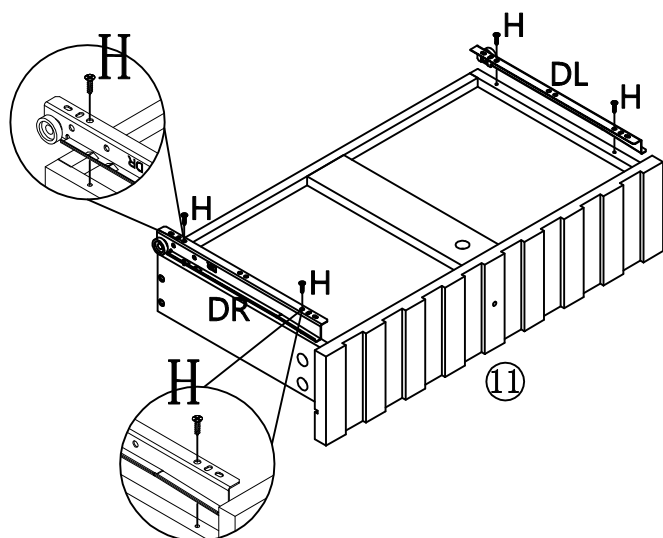





Step 17

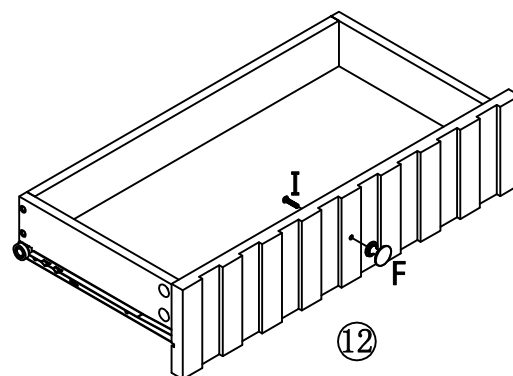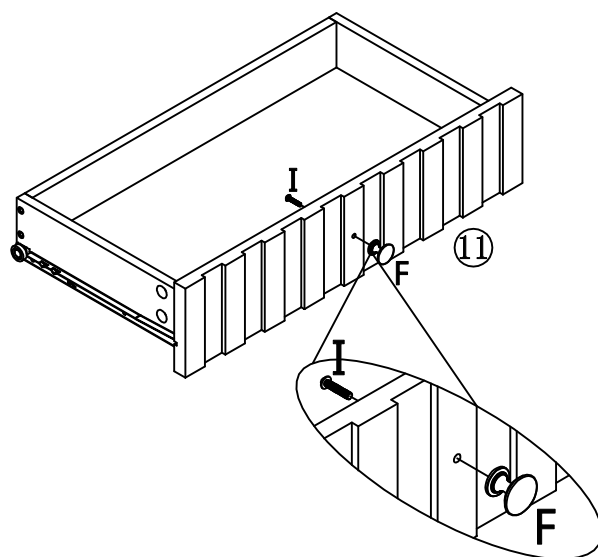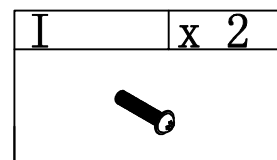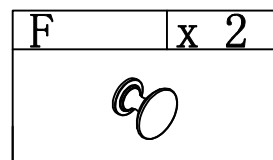

Step 18

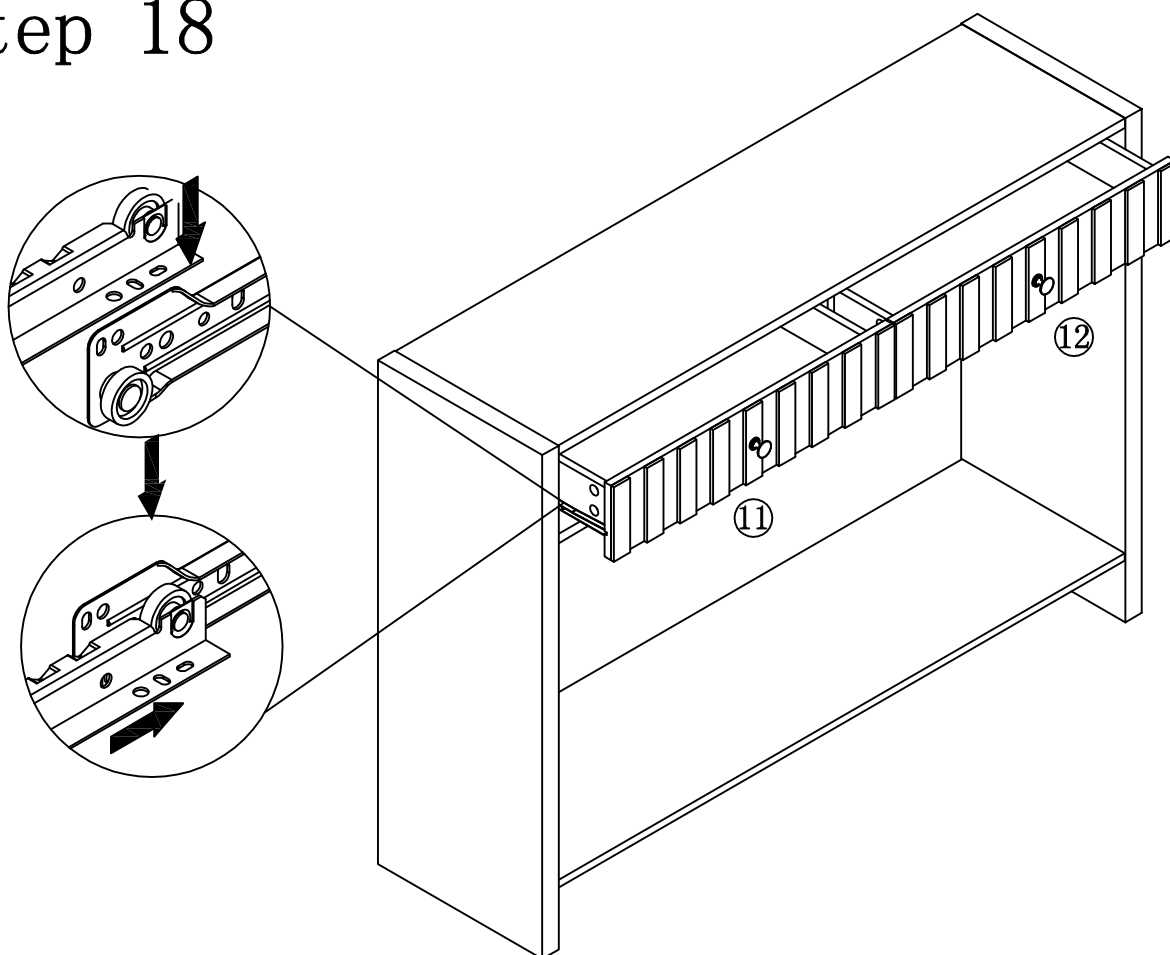

Step 19

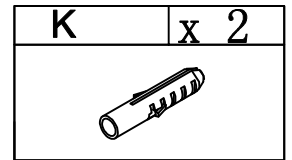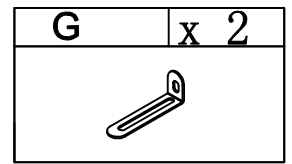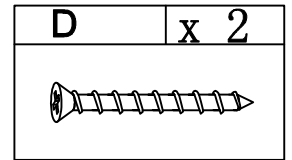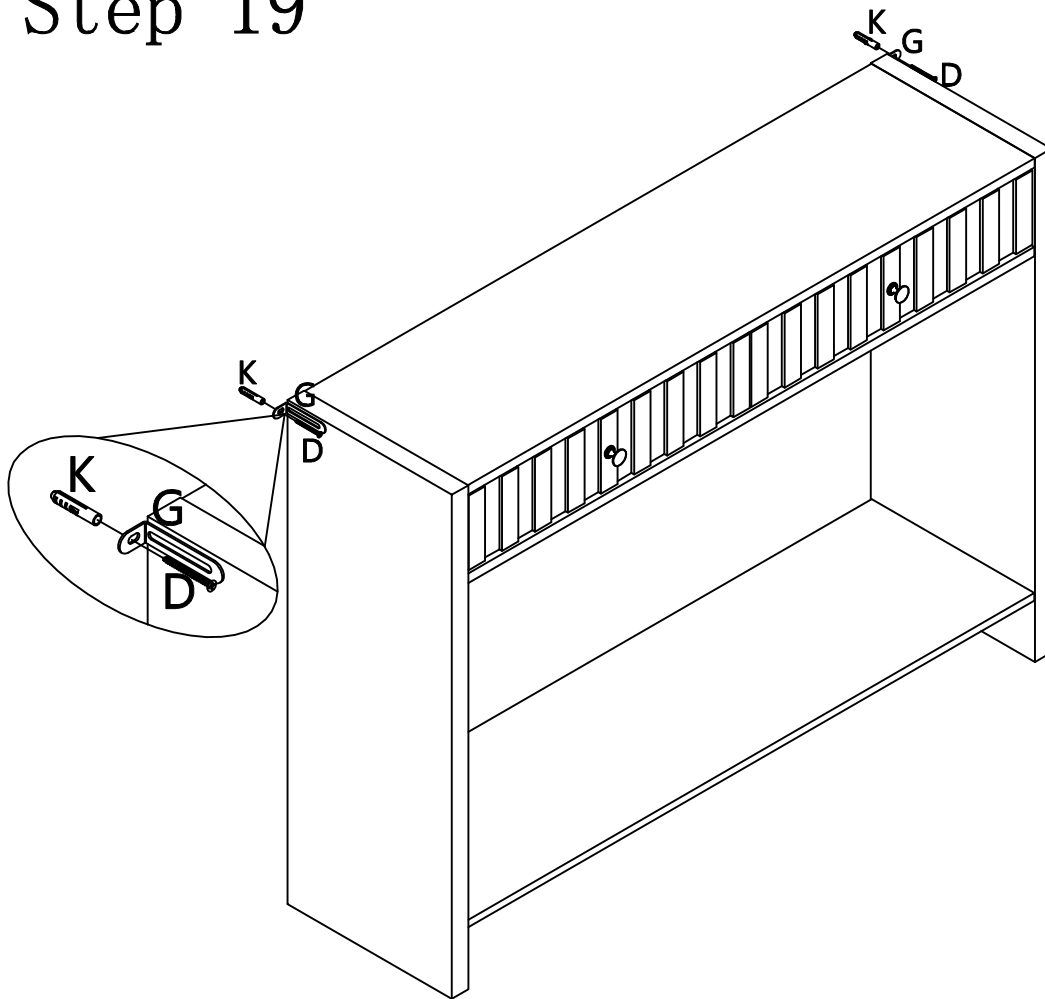

Step 20

