



# SHOE BENCH

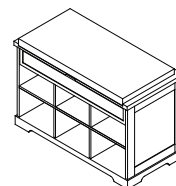








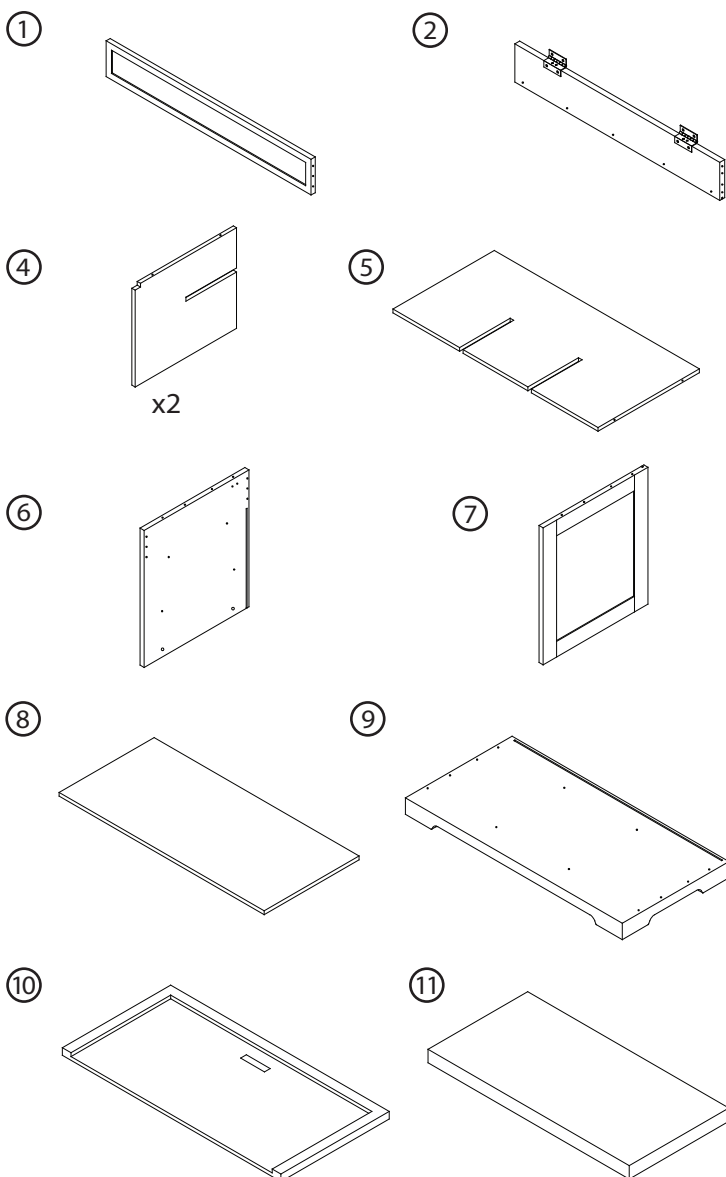
## Wooden Shoe Bench with Cushion and Storage

### NOTE:


- \* Read all instructions before starting
- \* Assemble on rug or cardboard to prevent scratches to the floor and product.

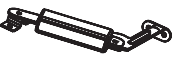

### HARDWARE

- |   |   |                           |
|---|---|---------------------------|
| A |  | Locking Bolt<br>16Pcs     |
| B |  | Large Cam<br>8Pcs         |
| C |  | Small Cam<br>8Pcs         |
| D |  | Left Hinge Weight<br>1Pc  |
| E |  | Right Hinge Weight<br>1Pc |
| F |  | Screws<br>12Pcs           |
| G |  | Wooden Dowel<br>32Pcs     |
| H |  | Screw Cover<br>16Pcs      |

### TOOLS RECOMMENDED

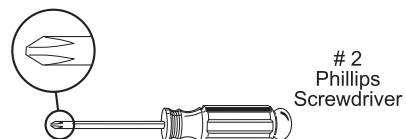


**DO NOT TIGHTEN ANY SCREWS AND BOLTS UNTIL THE UNIT IS ASSEMBLED**

1


Connect panels (1) and (2) perpendicularly to panel (3) using the locking bolt(A) and wooden dowel(G).

Slide both (4) panels into the slots of panel (5)


STRUCTURE A

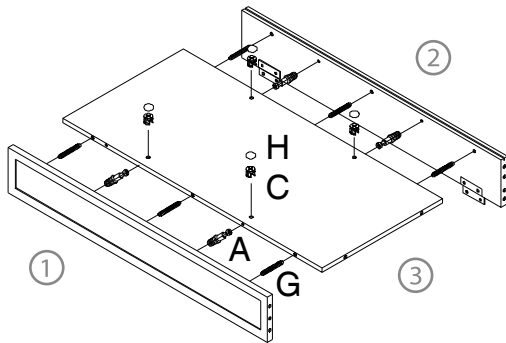

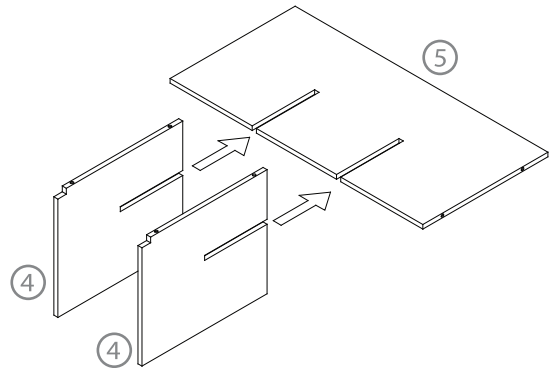

STRUCTURE B

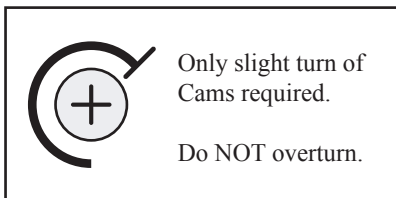


Attach the panels by inserting and tightening the Small Cams (C). Apply the Screw Covers (H) onto of the Cams.



C - Small Cam   
H - Screw Cover 

2

Combine structure (A) with structure (B) with wooden dowel(G) in place

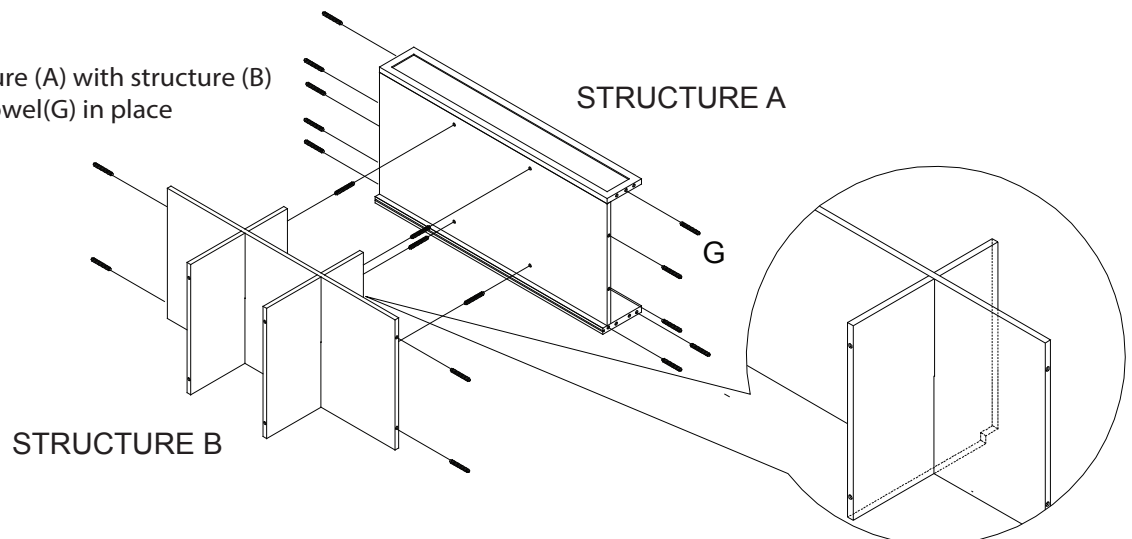

3

Connect panels(6) and (7) perpendicularly to structure(A) and structure(B) using the locking bolt(A) and wooden dowel(G).

B - Large Cam




H - Screw Cover



Only slight turn of Cams required.


Do NOT overturn.

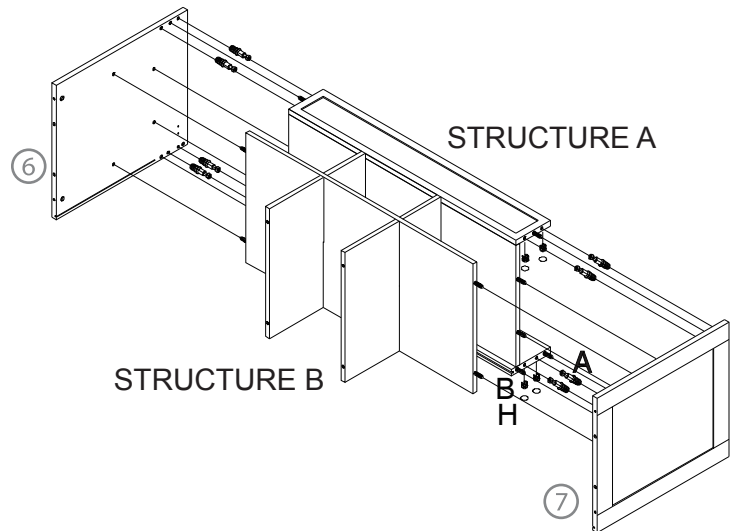

Attach the panels by inserting and tightening the Large Cams (B). Apply the Screw Covers (H) onto of the Cams.

4

Slide back panel (8) into place and prepare wooden dowel (G) for the next step.

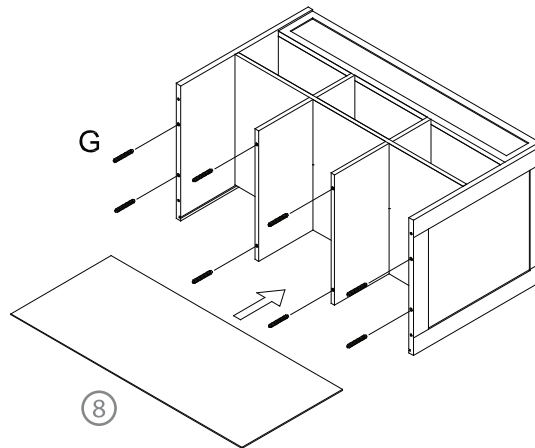

5

Attach bottom panel (9) to the open side of structure B using the locking bolt(A) and wooden dowel(G).

Attach the panels by inserting and tightening the Small Cams (C). Apply the Screw Covers (H) onto of the Cams.




Only slight turn of Cams required.

Do NOT overturn.

C - Small Cam




H - Screw Cover

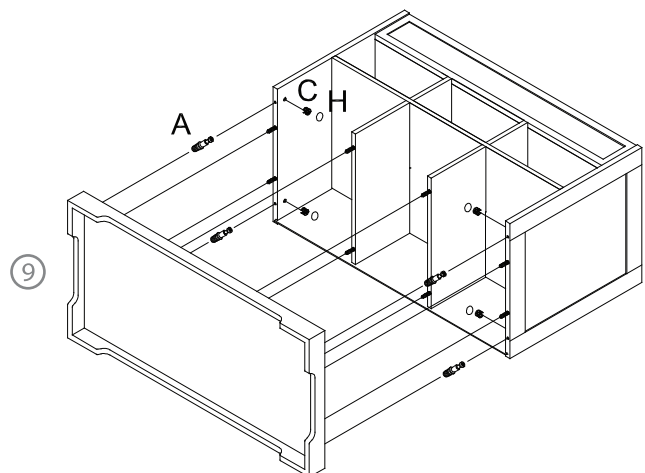


6

Attach hinge weights (D&E) with the screws(F)

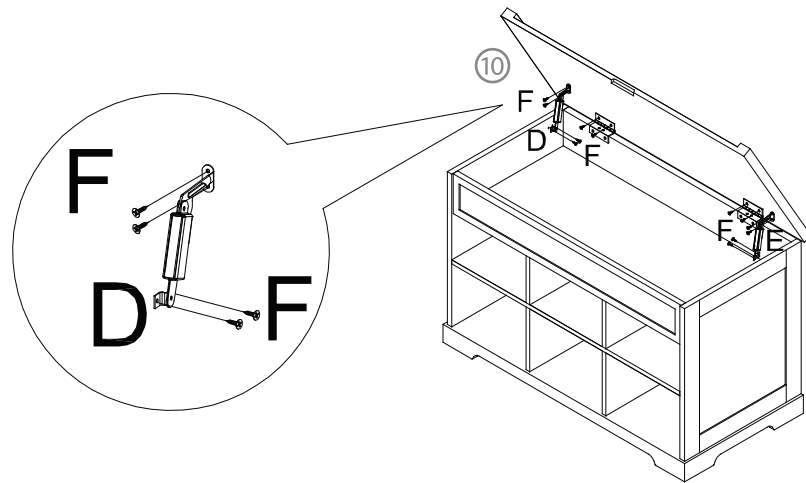

7

Set the cushion on top in its place

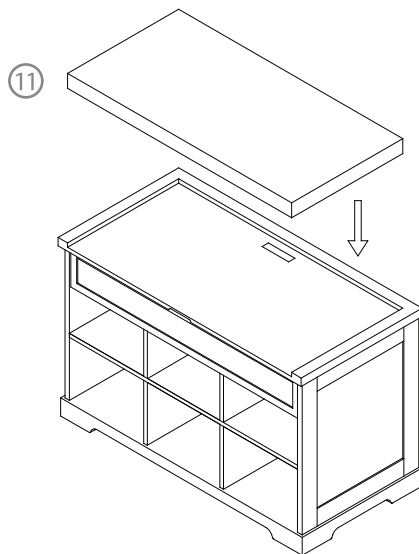

**ALL DONE!**

