

BOOKCASE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS :


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.







Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

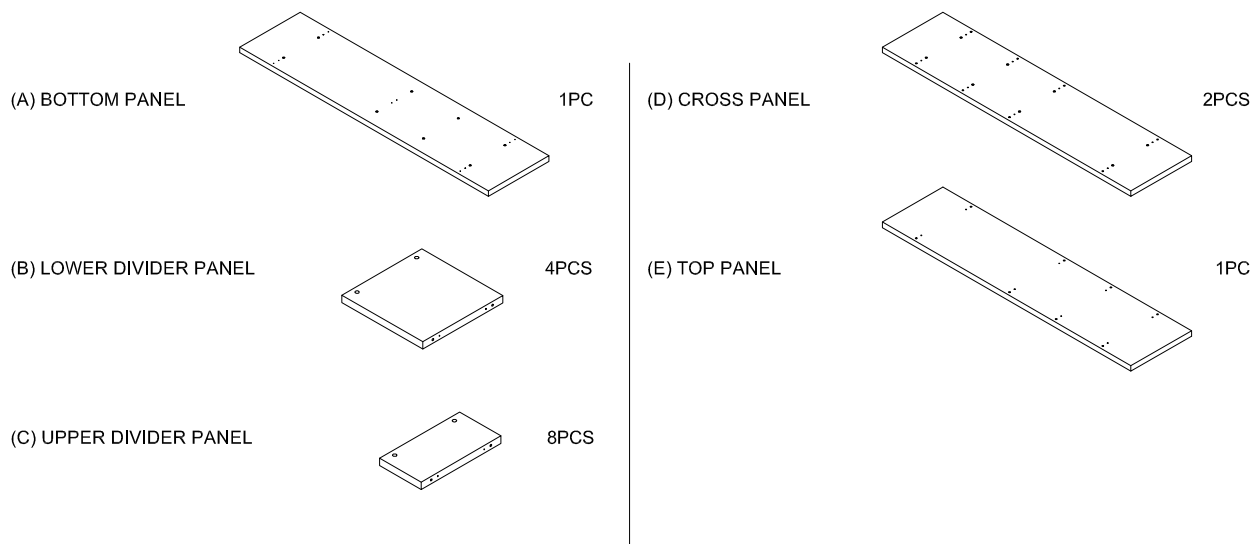





Z HARDWARE PACKAGE							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1PC	5	BOLT $\varnothing$ 9.5x55mm FOR BOTTOM PANEL		24PCS
2	WOODEN DOWEL $\varnothing$ 8x30mm		48PCS	6	FOOT 50x50x18mm		5PCS
3	CAM BOLT $\varnothing$ 7x35.5mm		24PCS	7	SCREW $\varnothing$ 5x22.5mm FOR FOOT		10PCS
4	CAM LOCK $\varnothing$ 15x12mm		24PCS	8	STICKER $\varnothing$ 20mm		4PCS

ASSEMBLY INSTRUCTION

It needs two persons and takes about twenty minutes to assemble the item.

STEP 1 : Insert Wooden dowel (2) into the holes on the two sides of Lower divider panel / Upper divider panel(B)/(C).

Insert and screw Cam bolt (3) into the holes on the Top panel (E), and Cross panel (D).

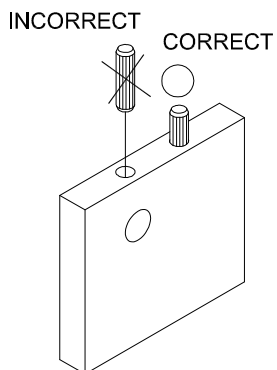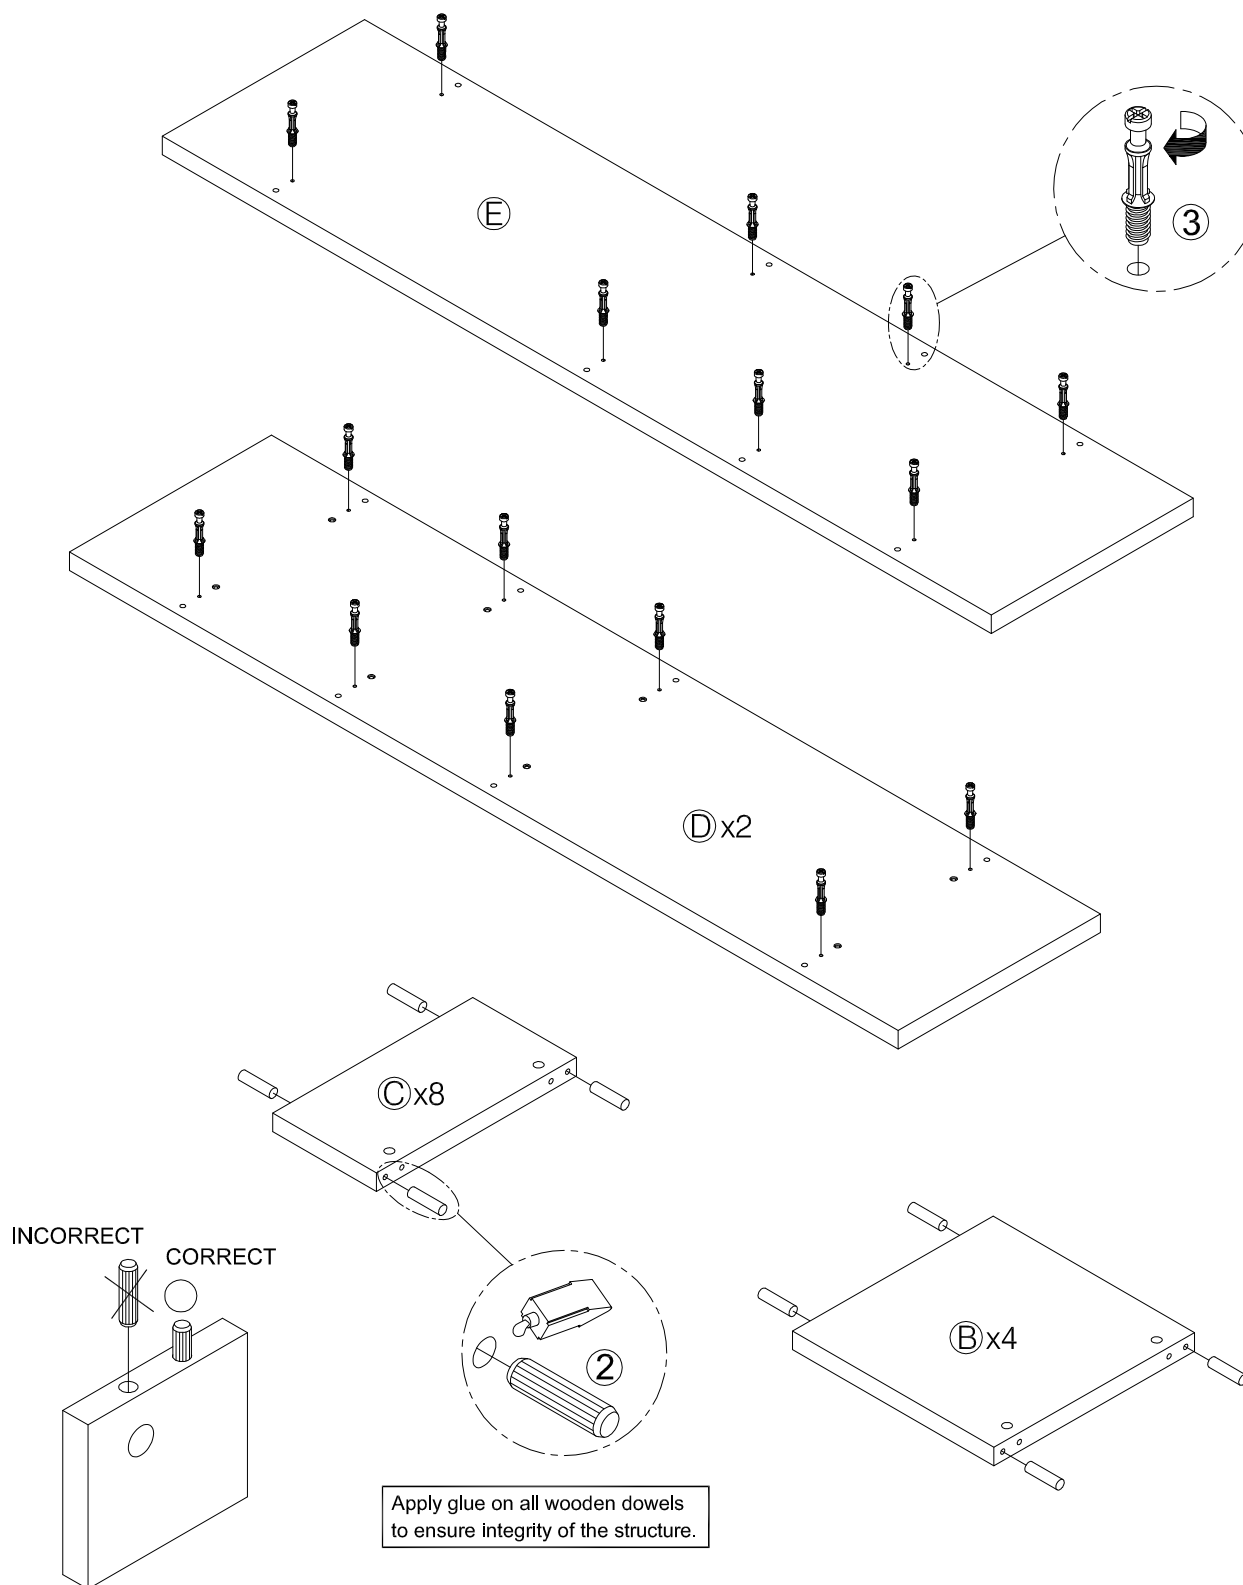




ASSEMBLY INSTRUCTION

STEP 2 : Connect Upper divider panels (C) to the Top panel (E) and Cross panel (D), using the Bolts (5), tighten with screw driver (NOT INCLUDED).


Insert Cam locks (4) to the Upper divider panel (C) to attach to the Cam bolts (3) tighten with screw driver (NOT INCLUDED).

Then place the wood colored stickers (8) on top of the Cam locks.

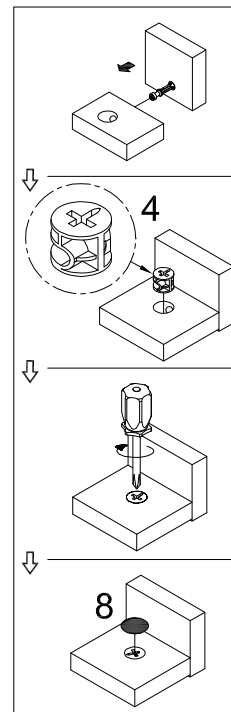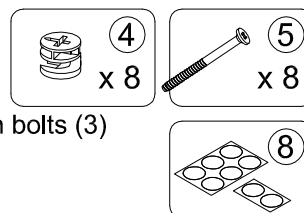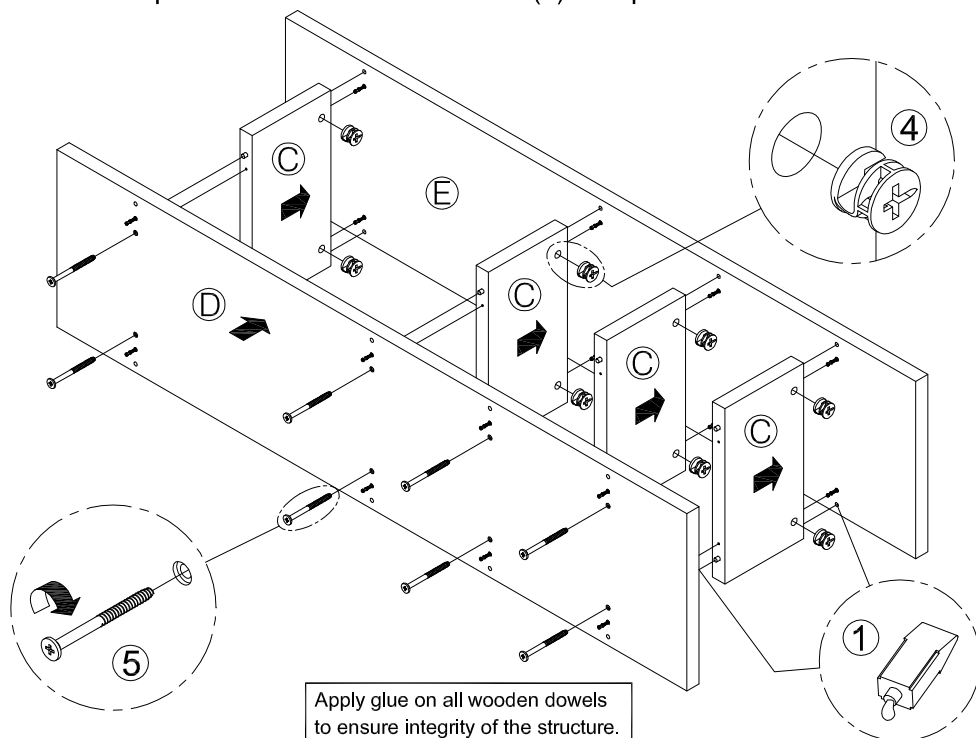

STEP 3 : Connect Upper divider panels (C) to the assemble piece from (STEP 2), and Cross panel (D), using the Bolts (5), tighten with screw driver (NOT INCLUDED). Insert Cam locks (4) to the Upper divider panel (C) to attach to the Cam bolts (3) tighten with screw driver (NOT INCLUDED).

Then place the wood colored stickers (8) on top of the Cam locks.


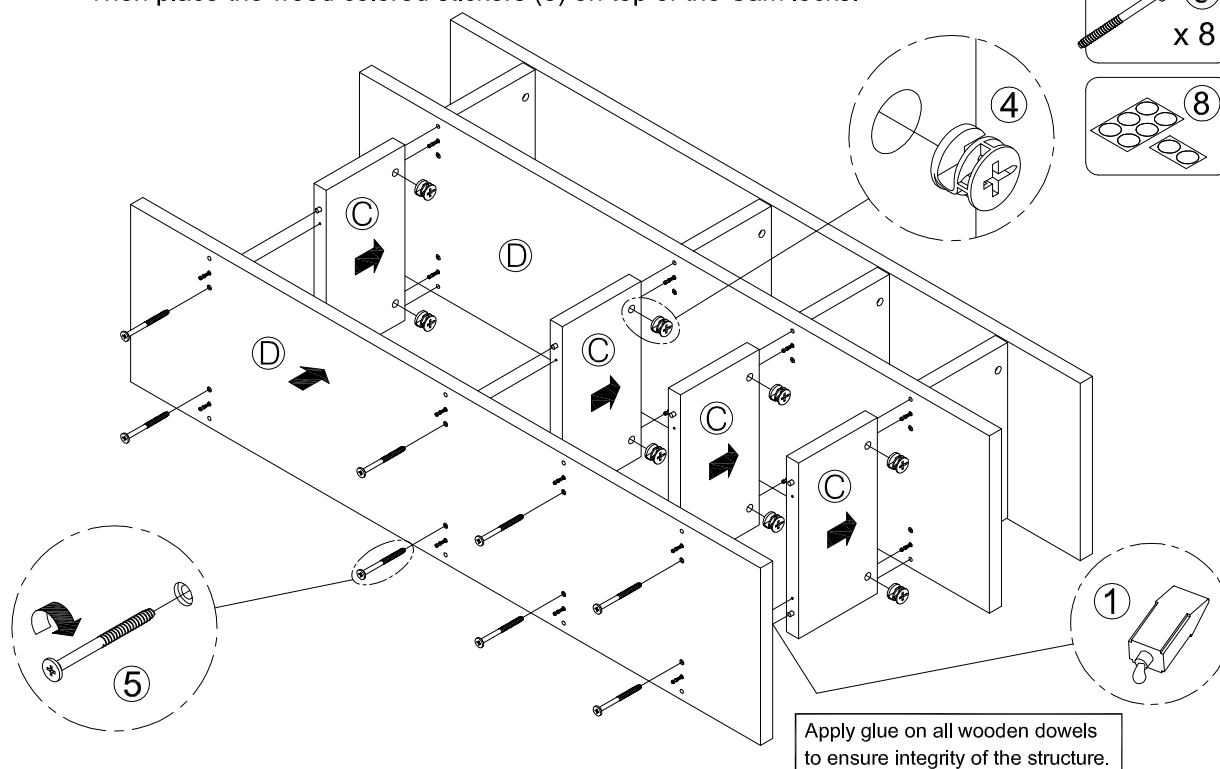


ASSEMBLY INSTRUCTION


STEP 4 : Connect Upper divider panels (B) to the assemble piece from (STEP 3), and Bottom panel (A), using the Bolts (5), tighten with screw driver (NOT INCLUDED).

Insert Cam locks (4) to the Upper divider panel (B) to attach to the Cam bolts (3) tighten with screw driver (NOT INCLUDED).



Then place the wood colored stickers (8) on top of the Cam locks.

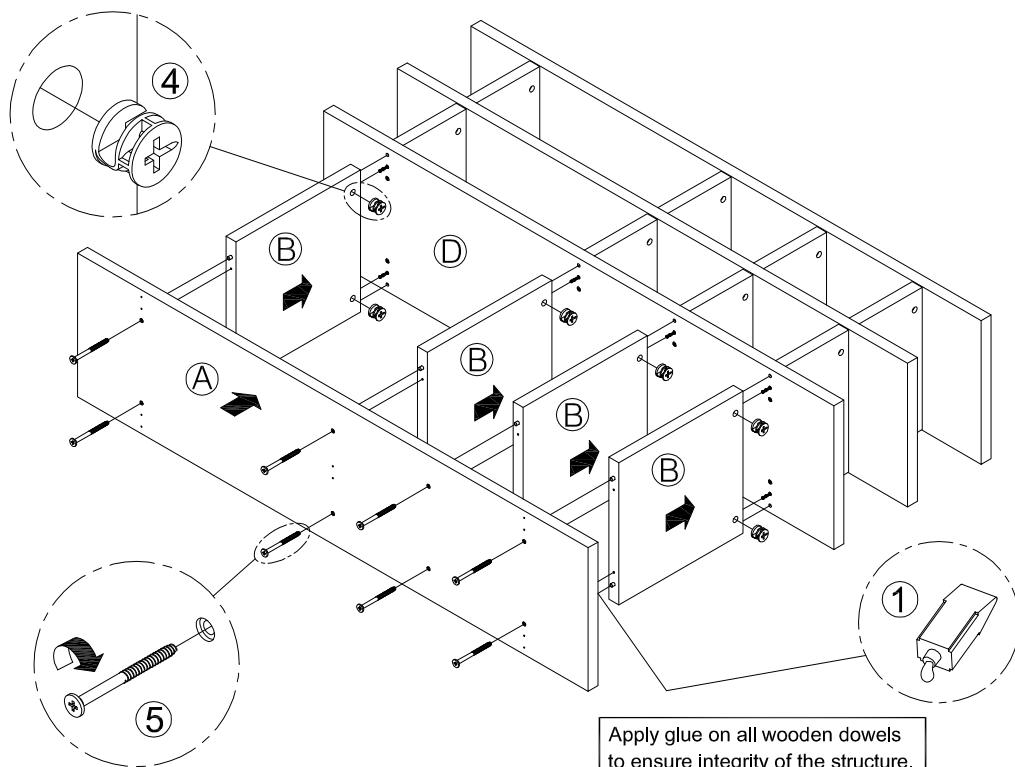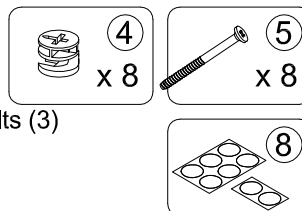

Apply glue on all wooden dowels to ensure integrity of the structure.

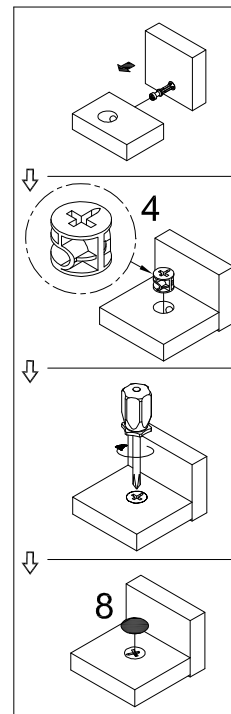

STEP 5 : Fasten Foot (6) on the Bottom panel (A) with Screws (7).

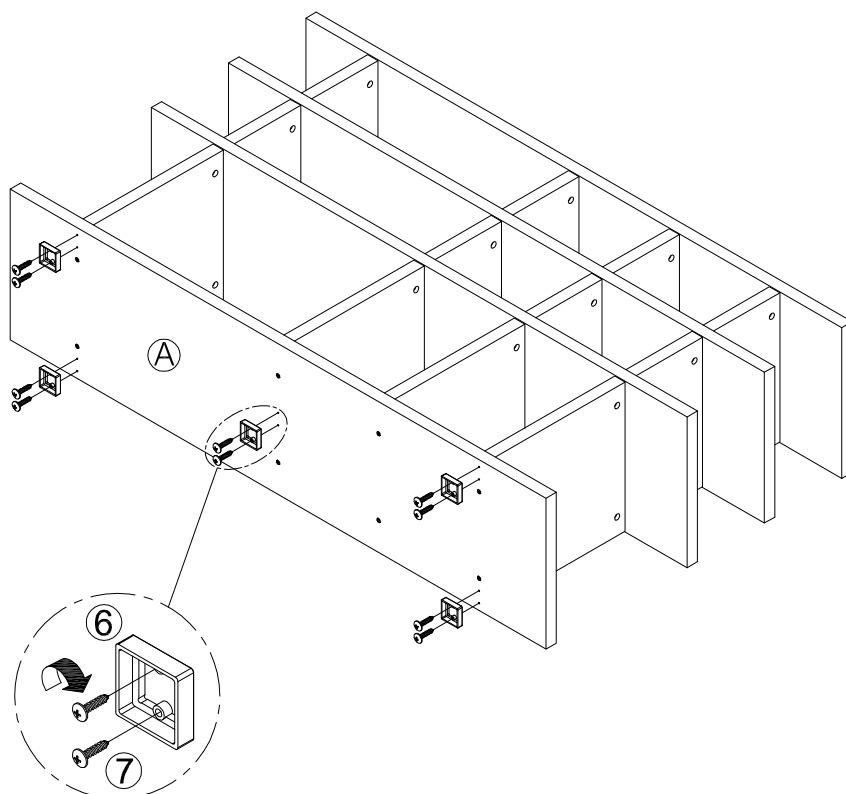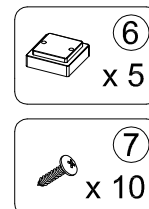

FINISH

