



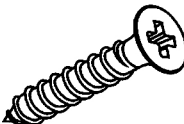



Sku:6090-Medoc-M2

ASSEMBLY INSTRUCTION

BILL OF MATERIAL (NUMBER AND QUANTITY)


A	6	 Φ25*H35mm	B	6	 Φ25*H100mm
C	6		D	6	
E	12		F	3	 Φ25*H250mm
J	2	 L1200*W250mm	H	6	 Φ25*H90mm
K	6		L	24	
M	24				

Exploded View

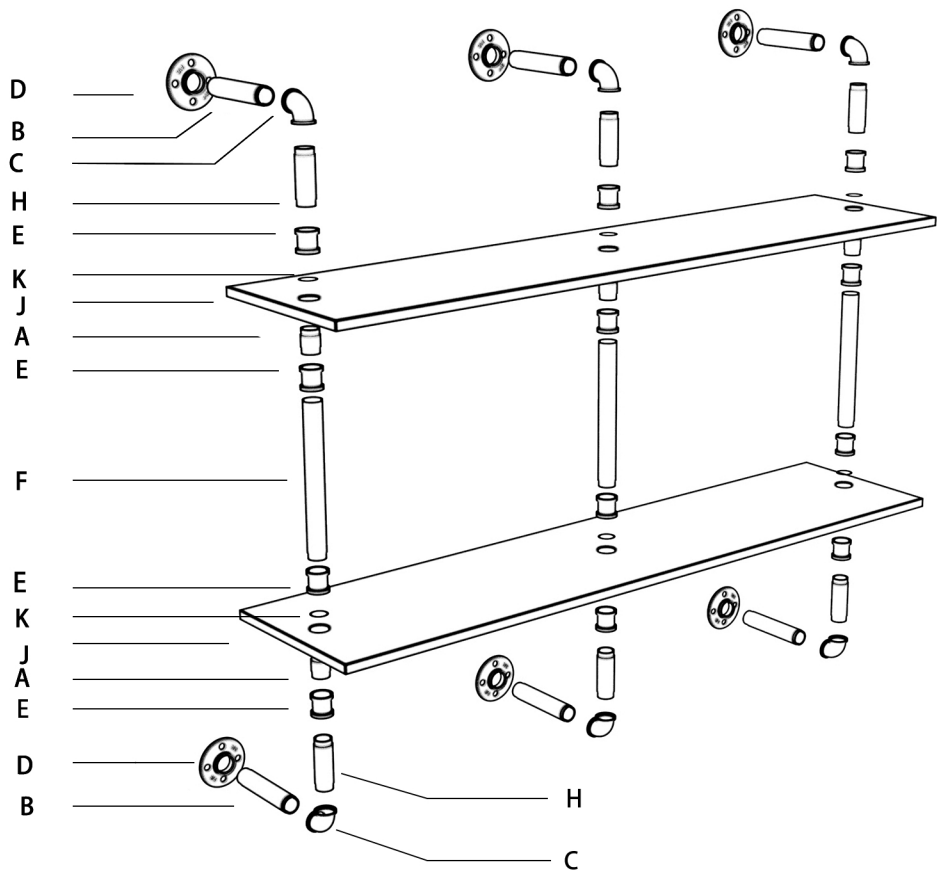


Installation procedures


step 1

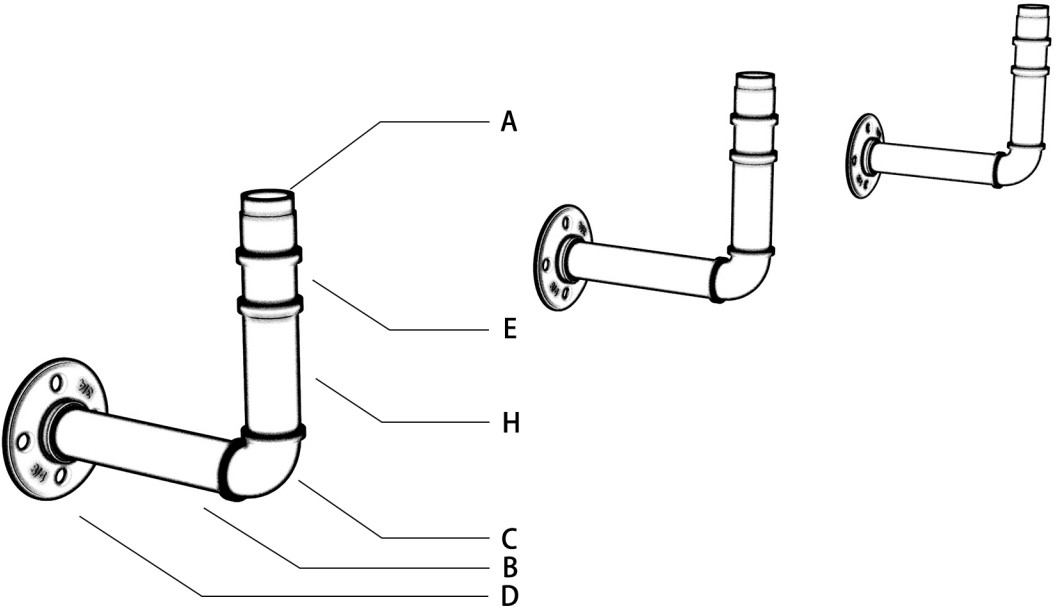


step 2

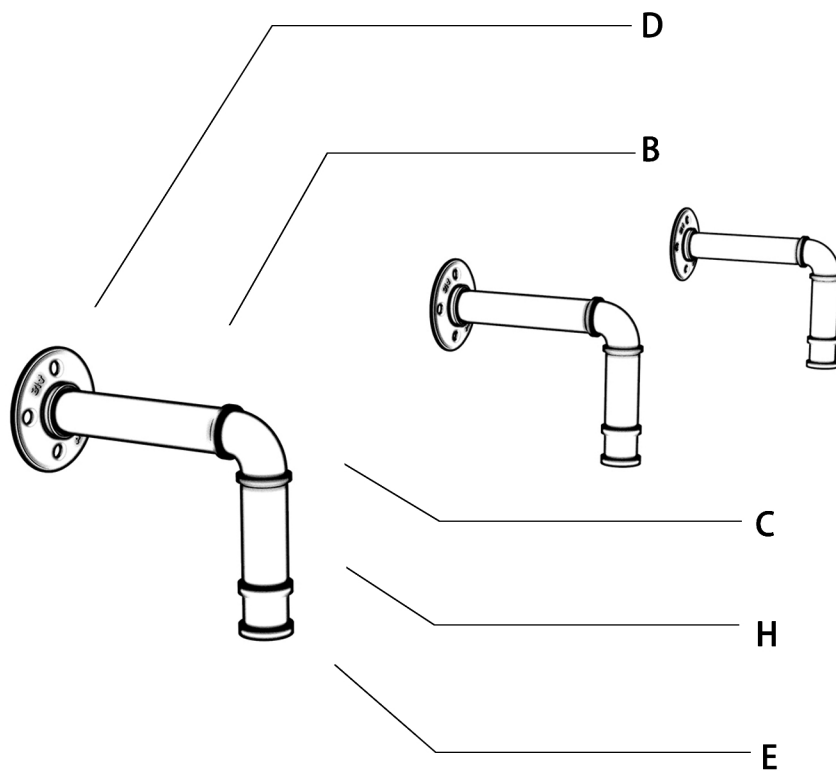


step 3

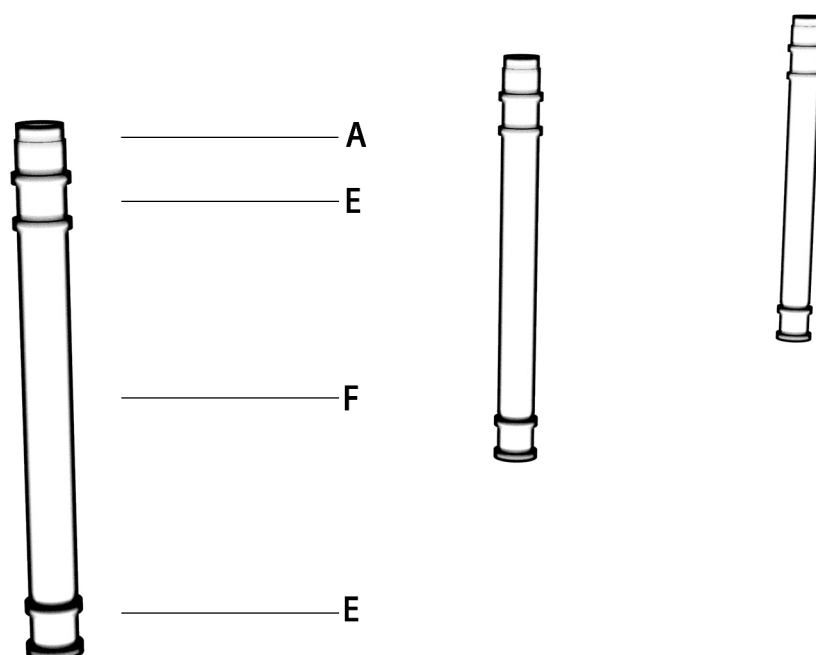

step 4

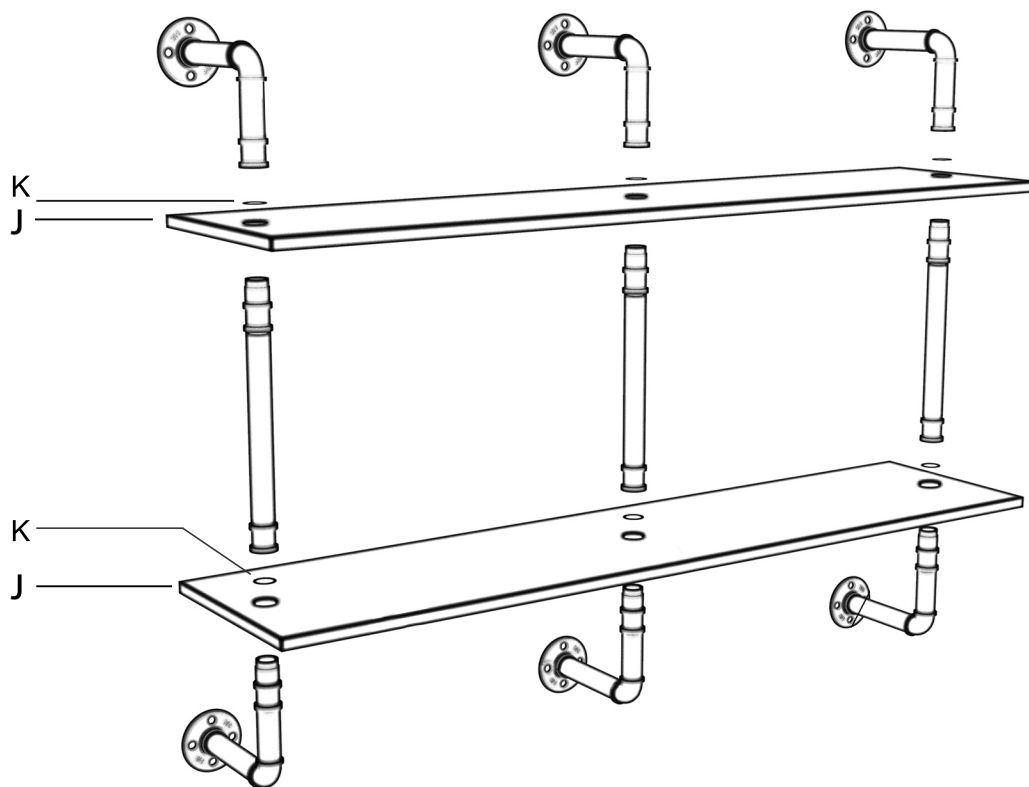

step 5

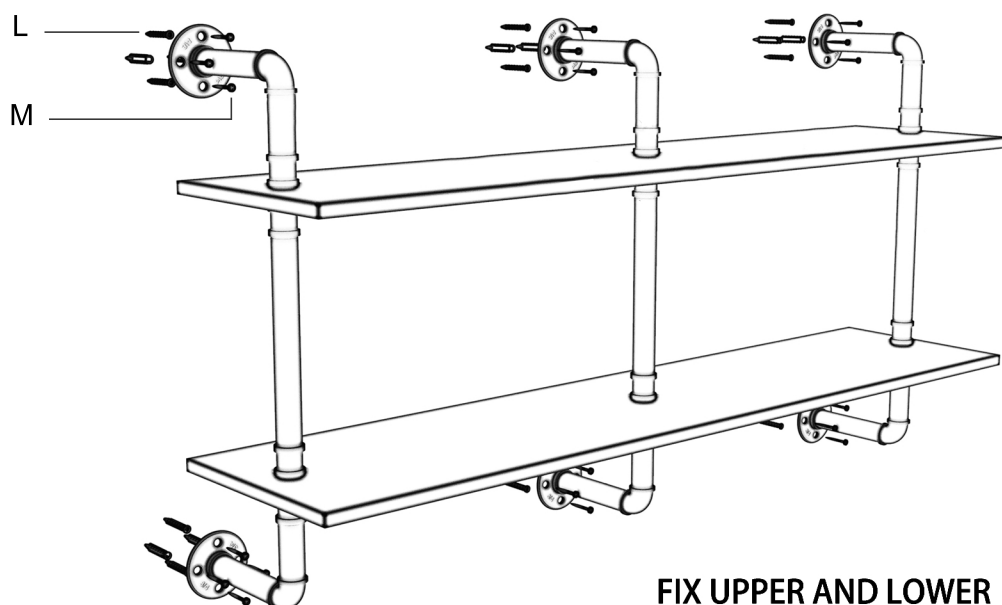

FIX UPPER AND LOWER

COMPLETED DRAWING

