


ASSEMBLY INSTRUCTION



DE - MONTAGEANWEISUNG
 FR - INSTRUCTIONS DE MONTAGE
 DK - MONTAGEVEJLEDNING
 CZ - NÁVOD K MONTÁŽI
 ES - INSTRUCCIONES DE MONTAJE
 FI - ASENNUSOHJE



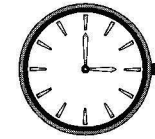



HR - UPUTE ZA MONTAŽU
 SE - MONTERINGSANVISNING
 SI - NAVODILA ZA MONTAŽO
 TR - MONTAJ TALIMATI
 NO - MONTASJEANVISNING
 IT - ISTRUZIONI DI MONTAGGIO







GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ
 NL - MONTAGE INSTRUCTIE
 PT - INSTRUÇÕES DE MONTAGEM
 PL - INSTRUKCJA MONTAŻU
 HU - SZERELÉSI UTASÍTÁS




30 min




- ①  HW-ST-02-038 (6 x 80) x 8
- ②  HW-ST-07-141 (6.5x10.5x1.5) x 8
- ③  HW-ST-07-060 (6.5x14x1) x 17
- ④  HW-ST-03-119 (6 x 13) x 4
- ⑤  HW-ST-02-105 (6 x 40) x 9
- ⑥  HW-ST-18-017 (4 x 48) x 1

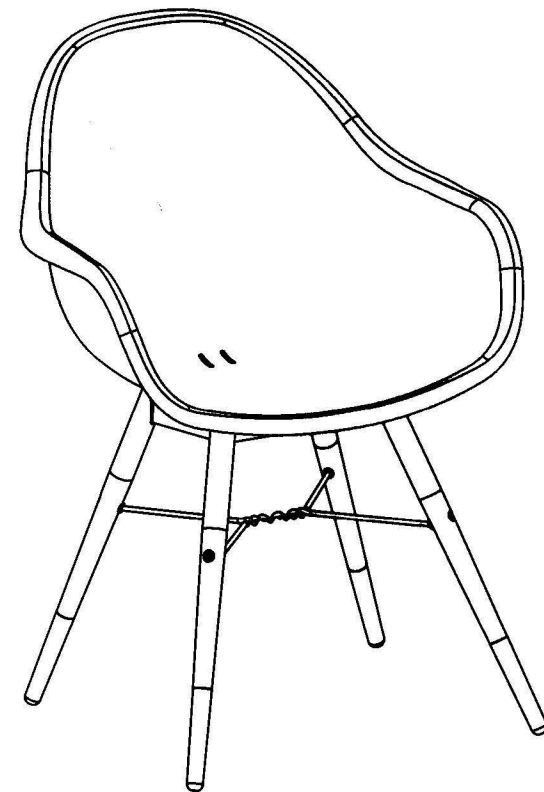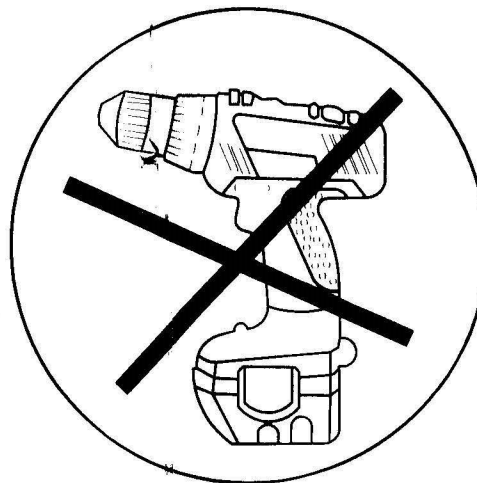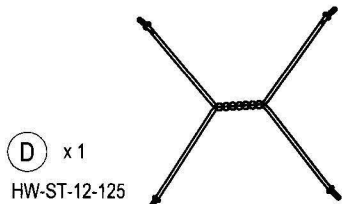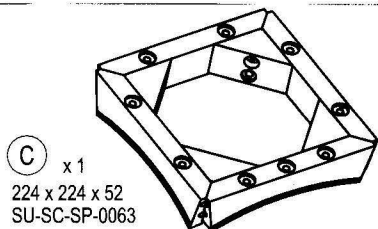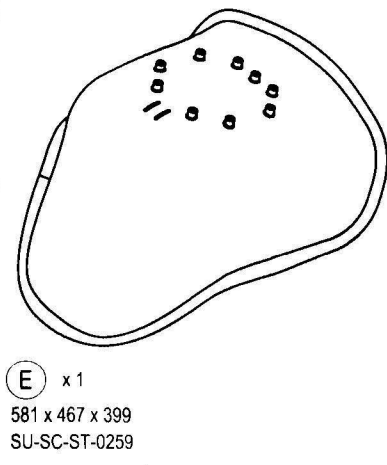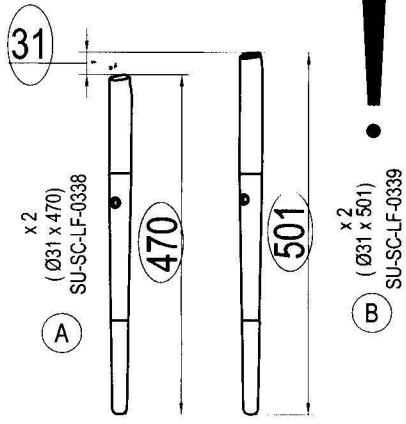






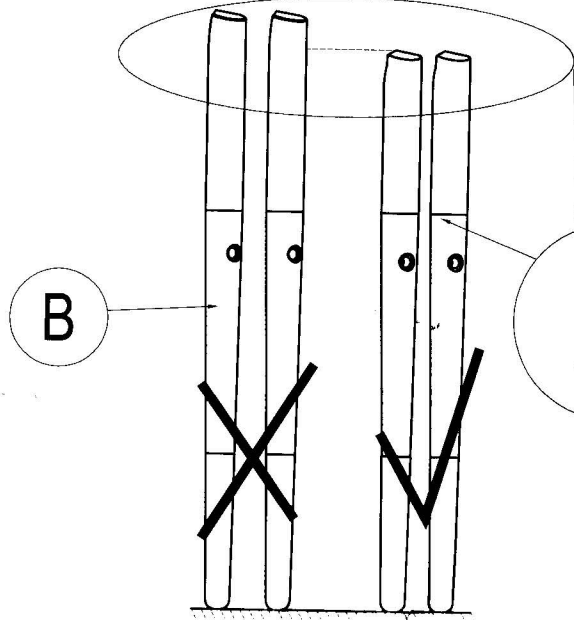


!

A





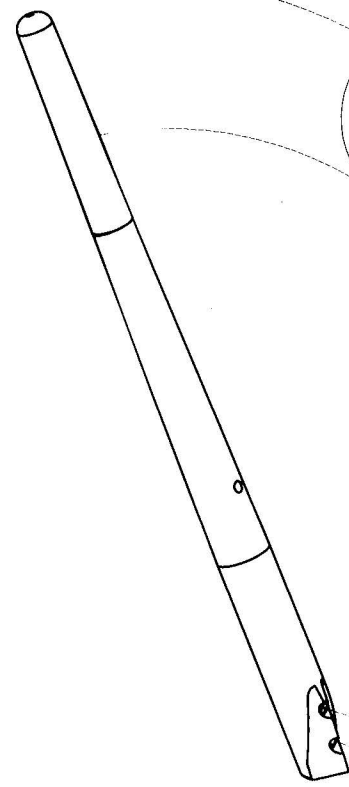



A

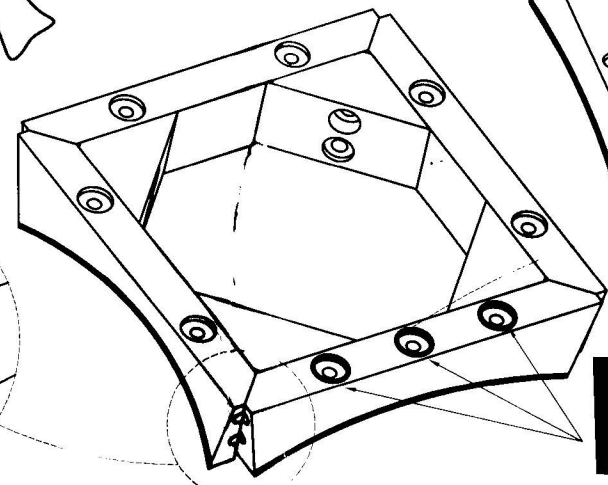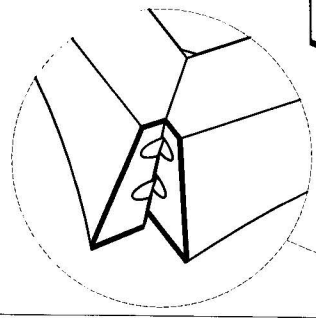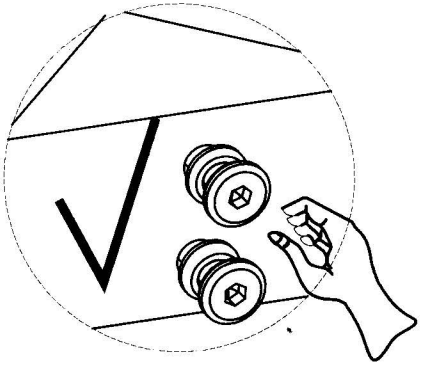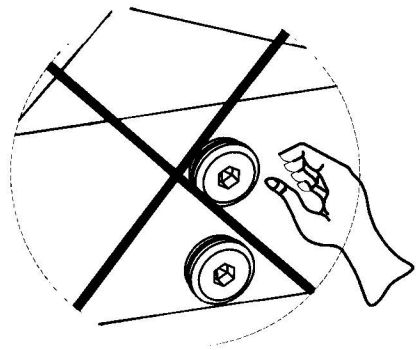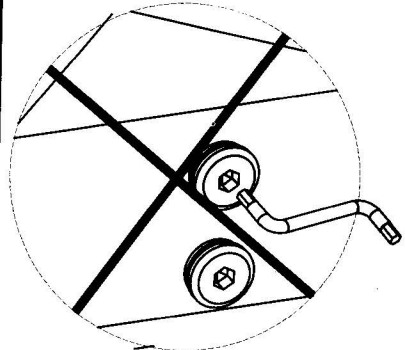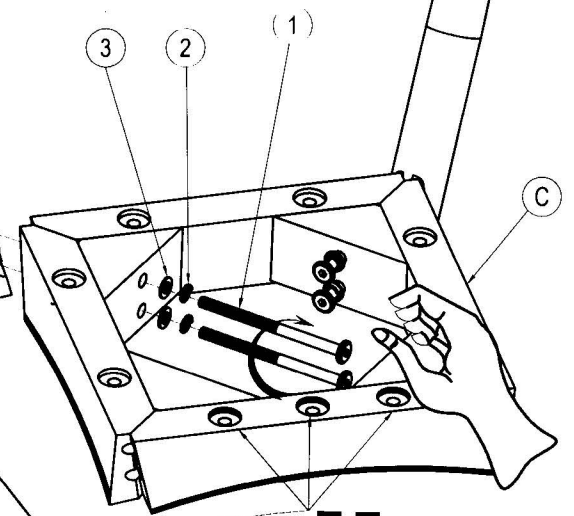


!!


!!

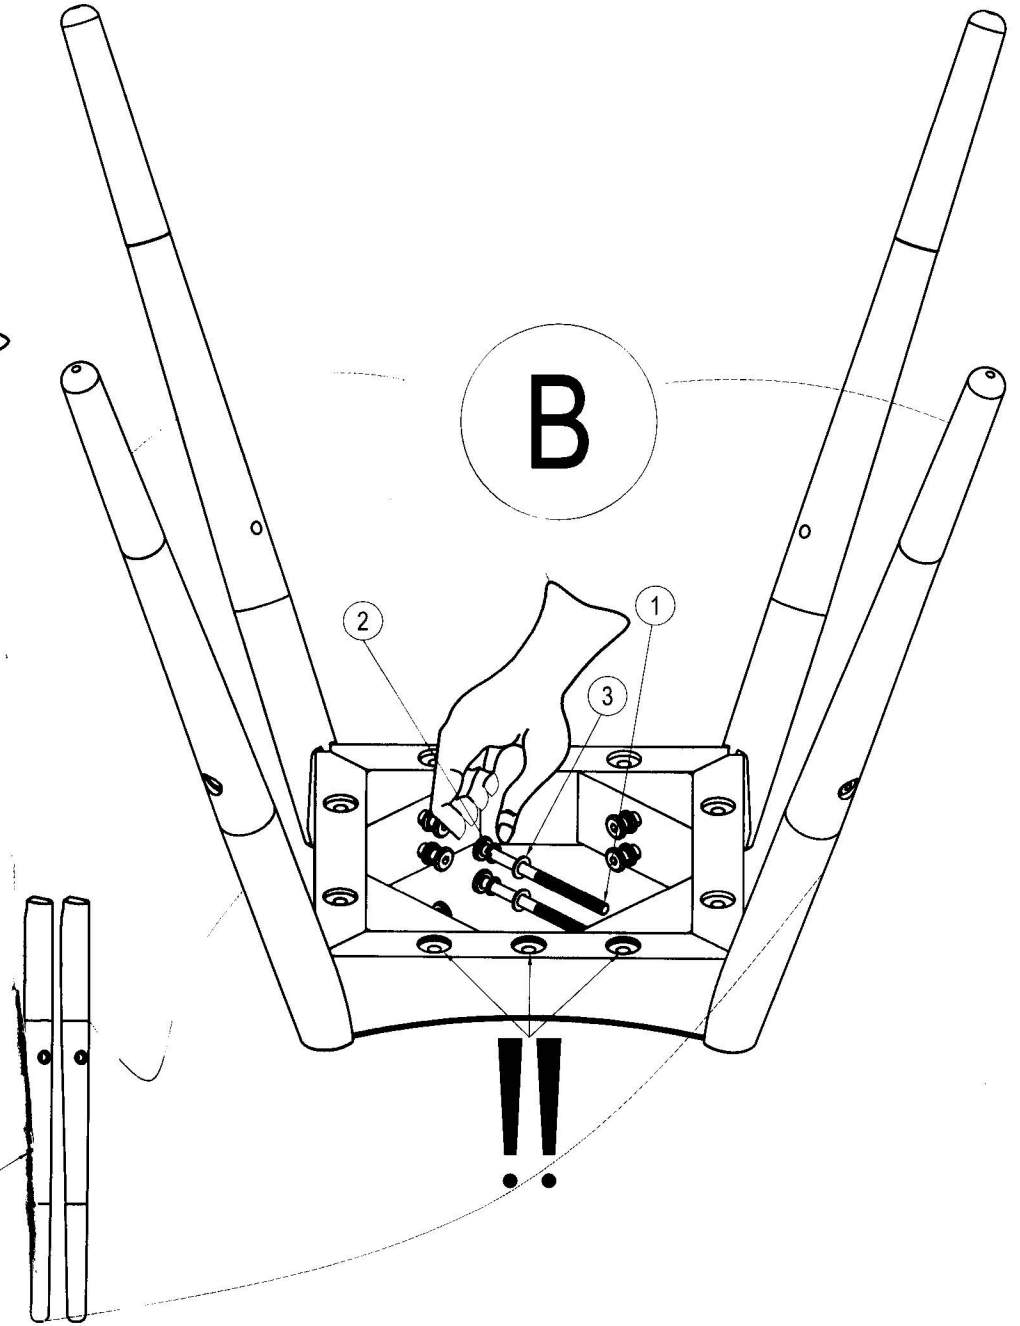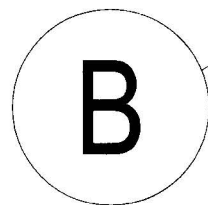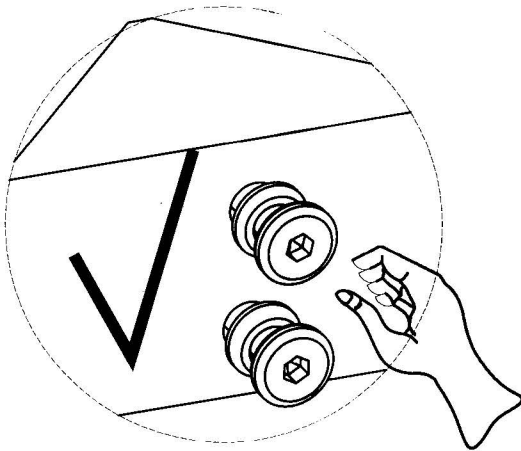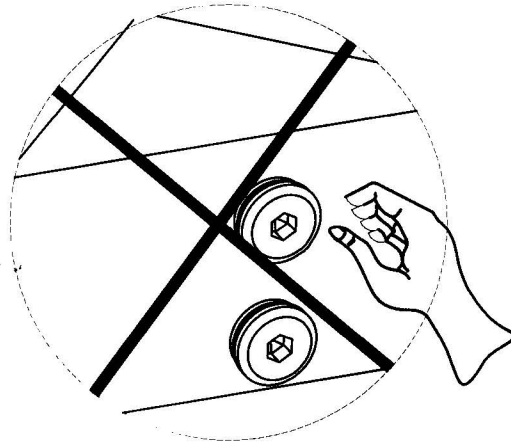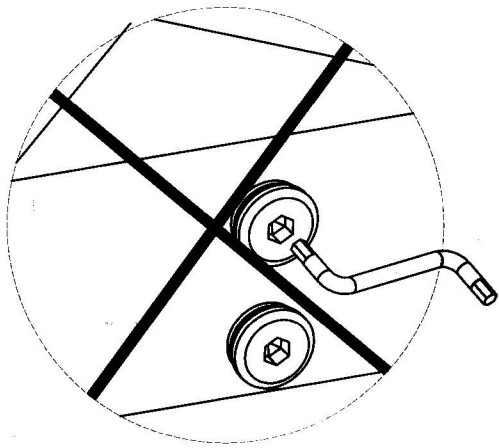


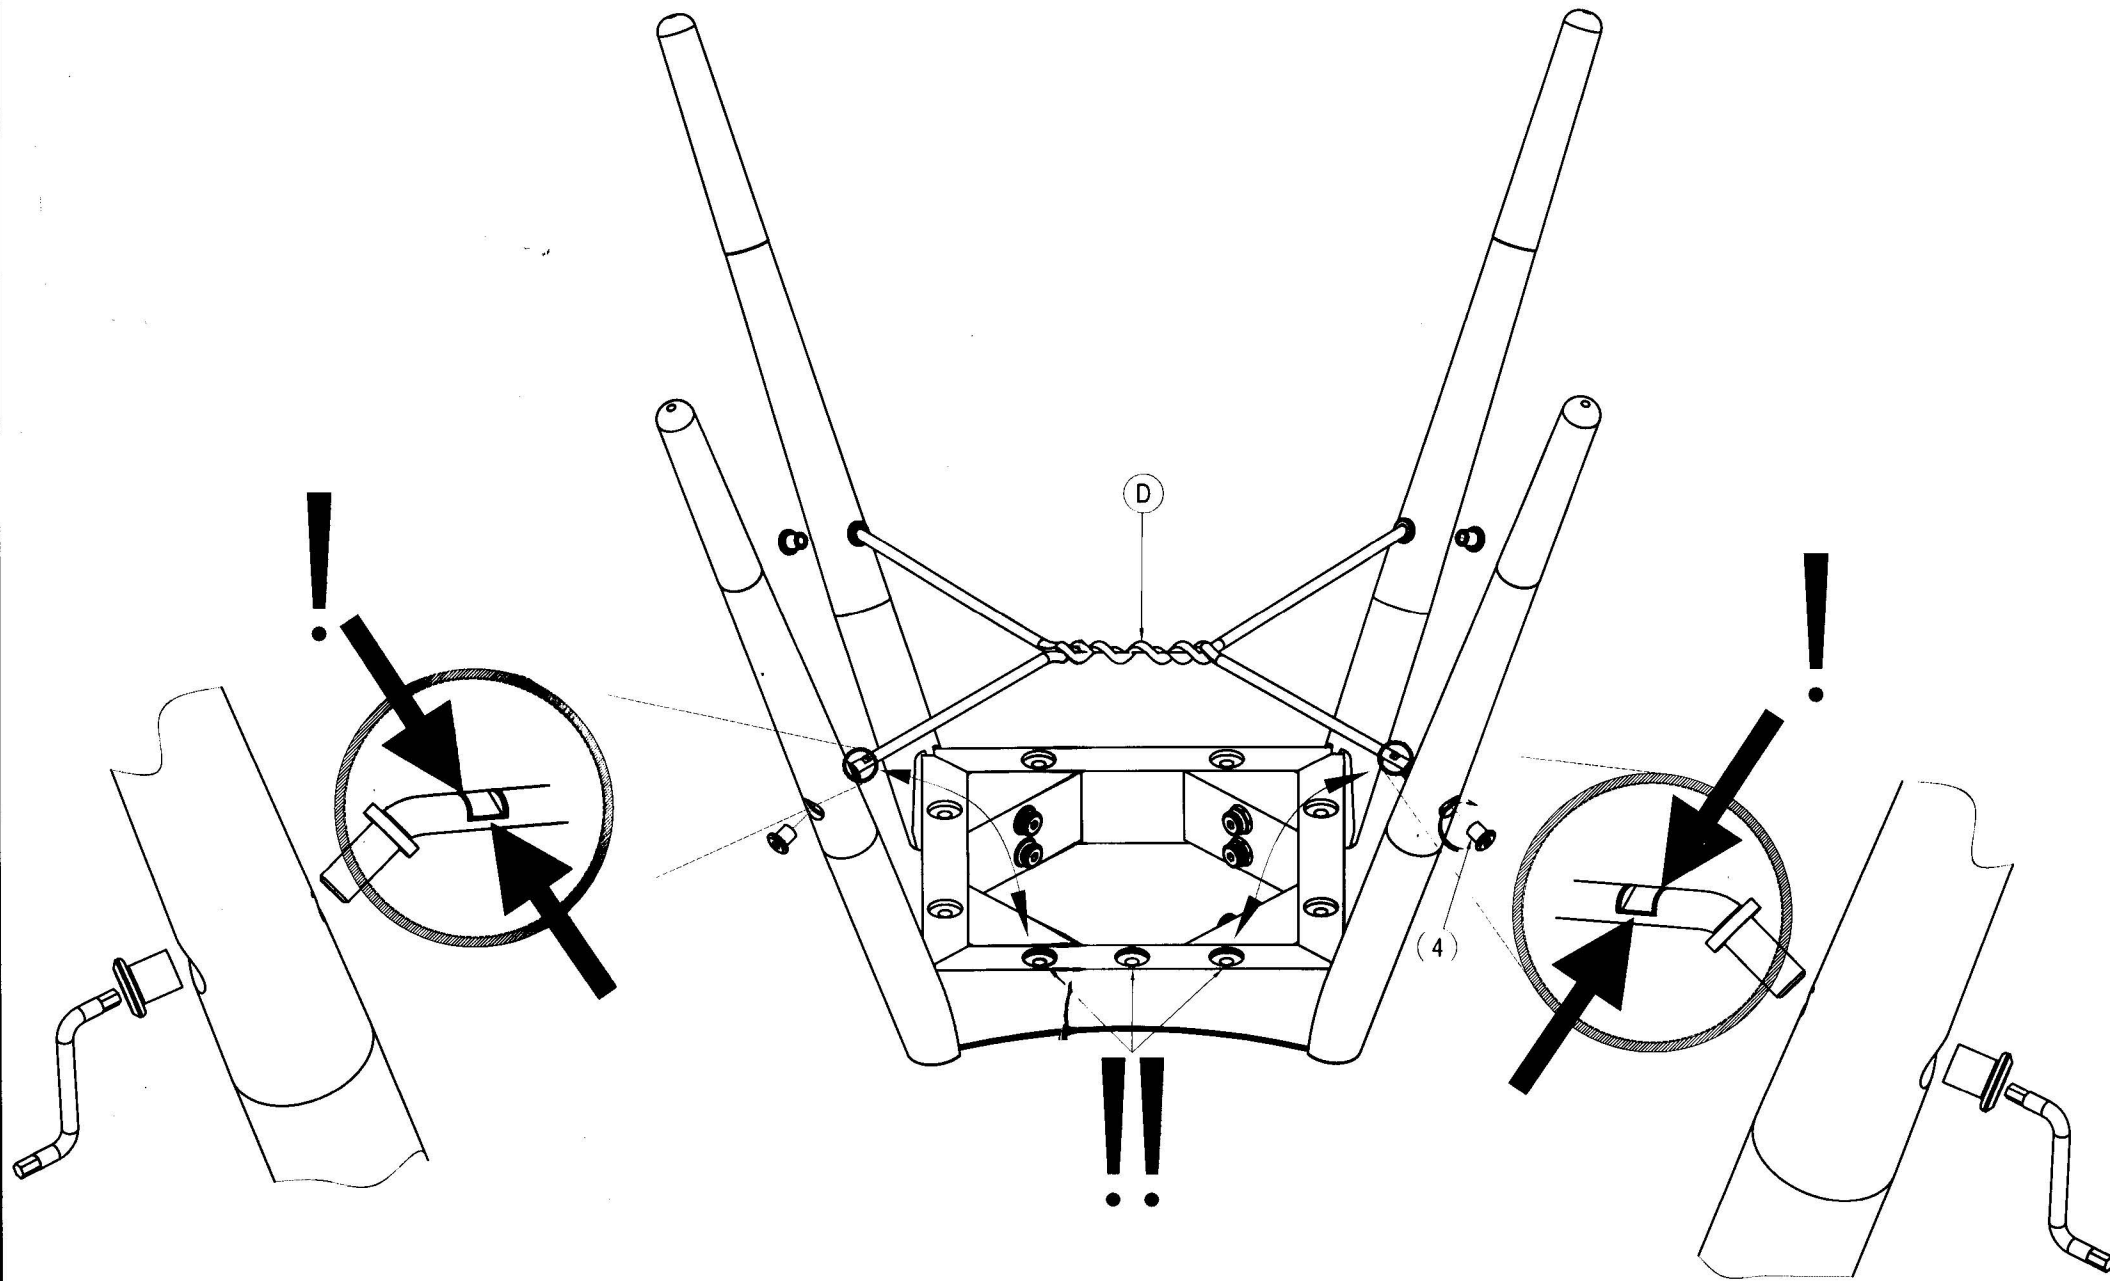


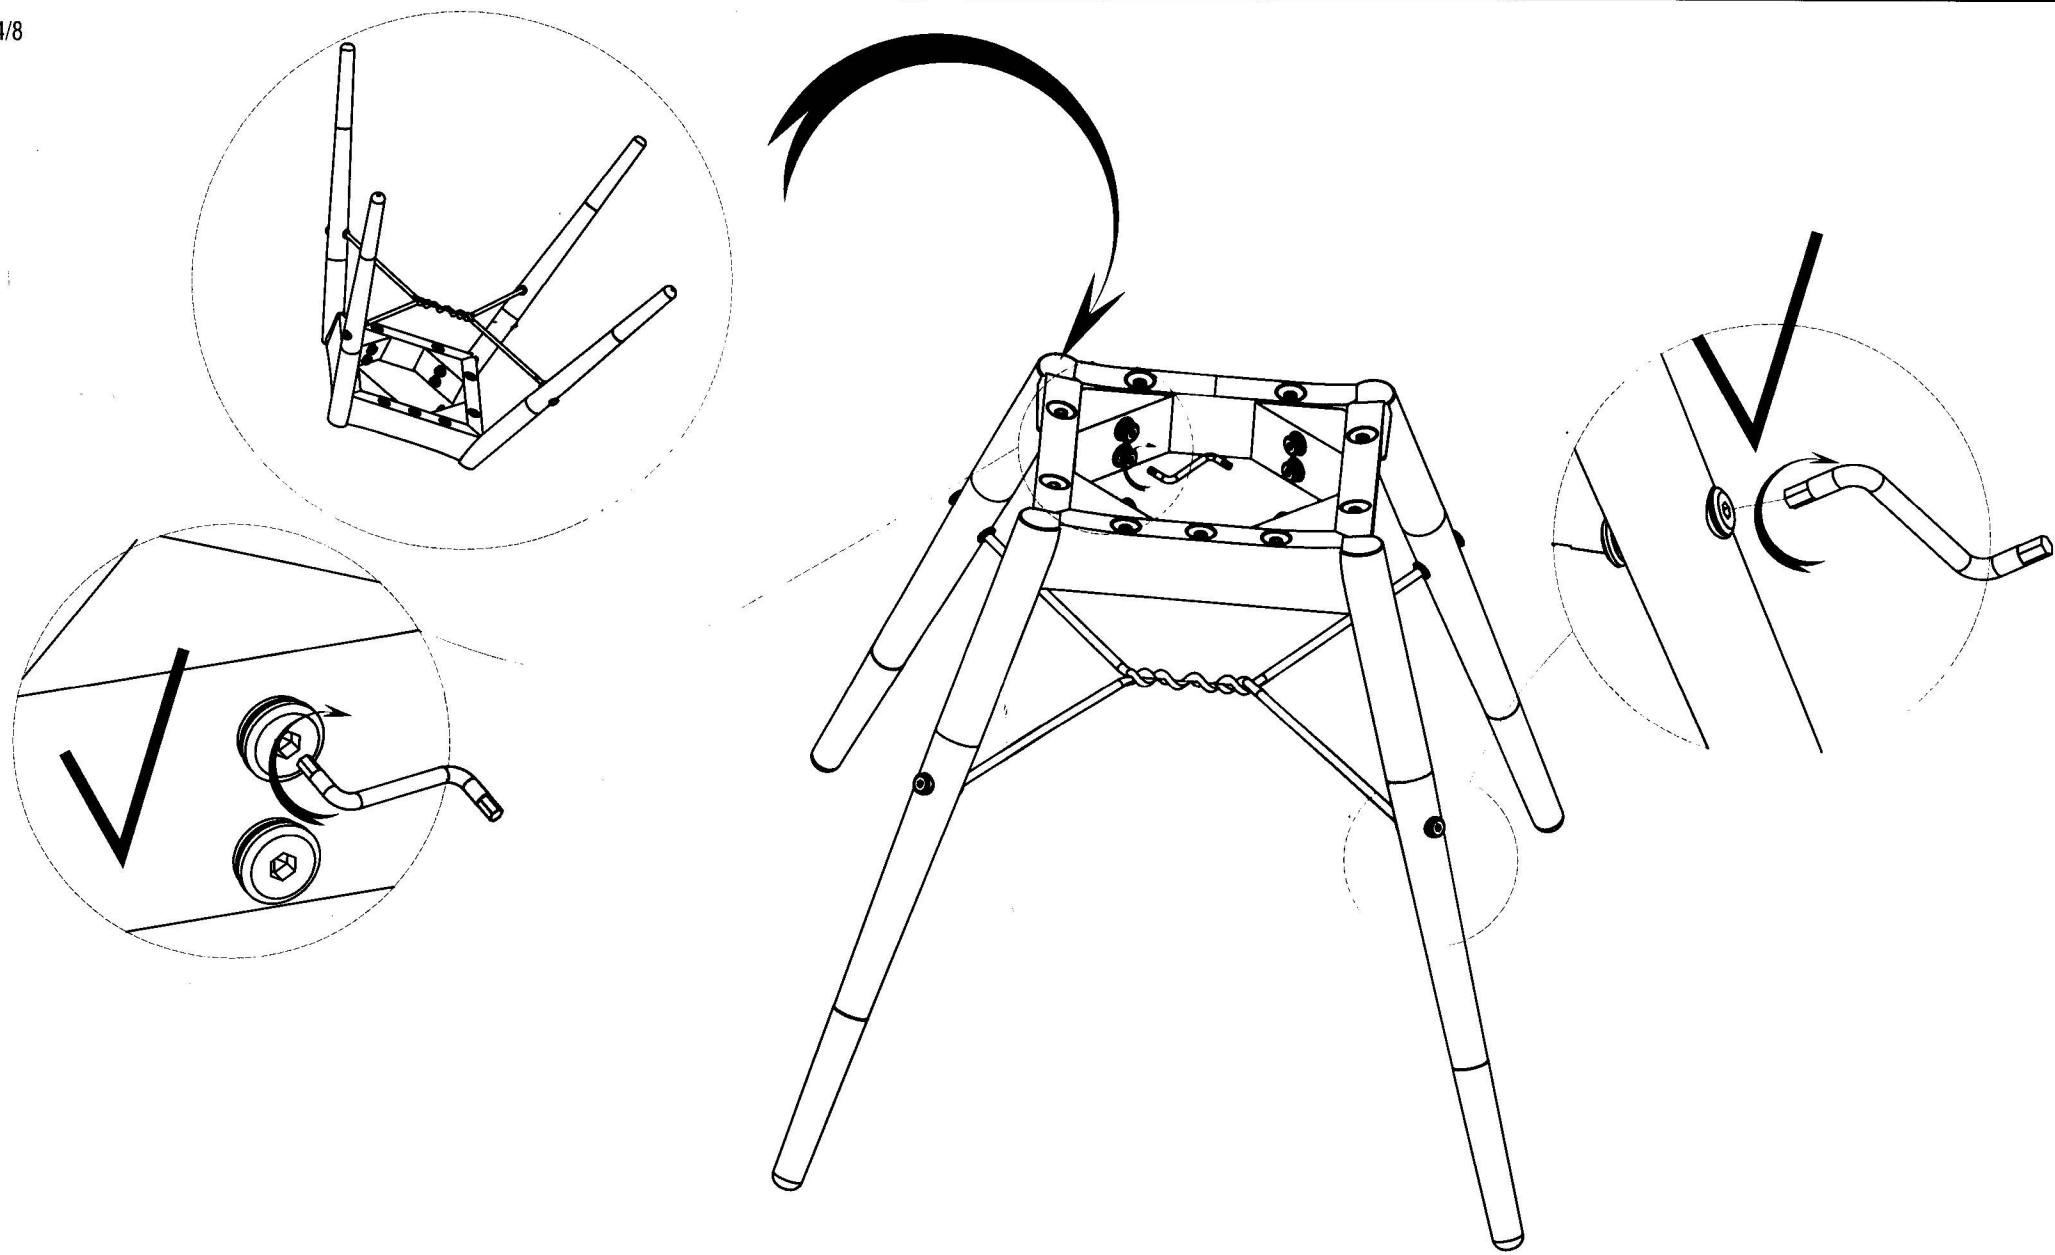



5/8

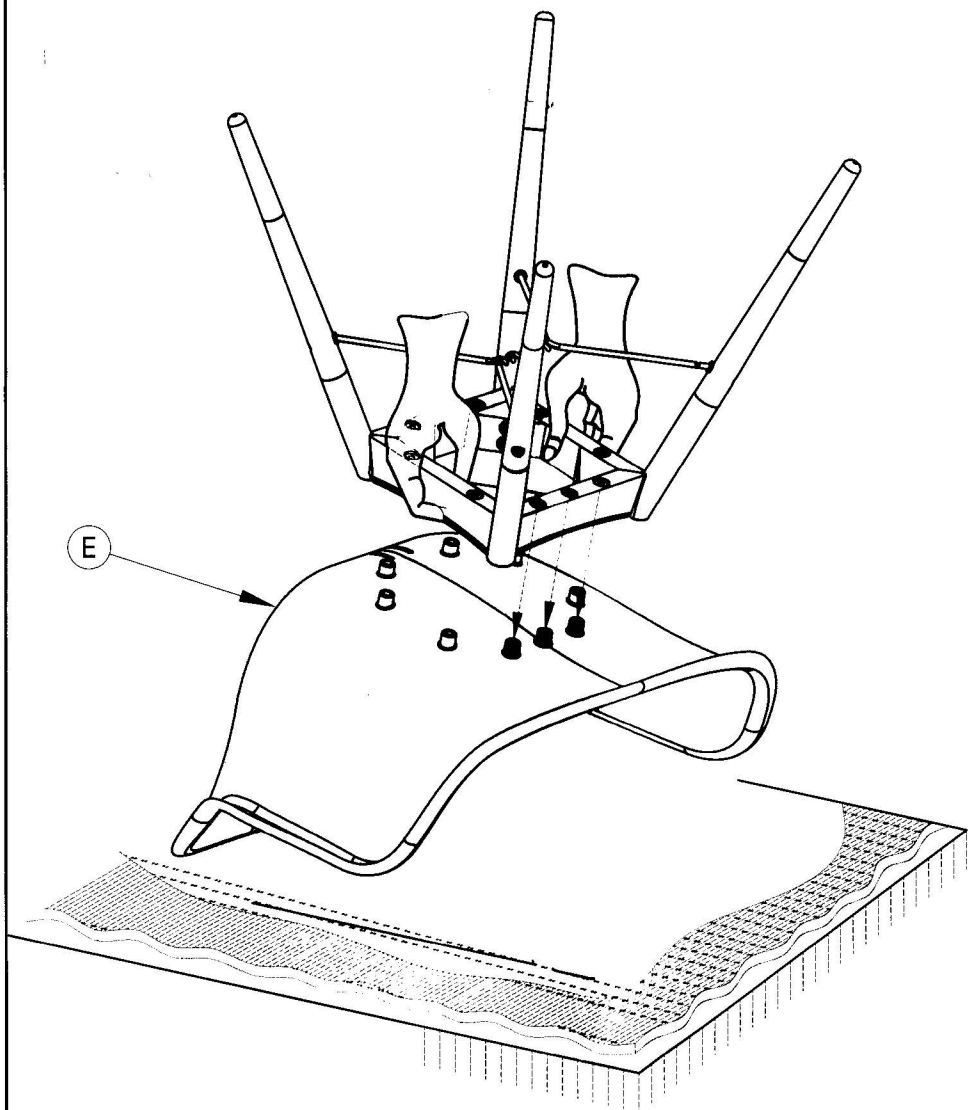

6/8

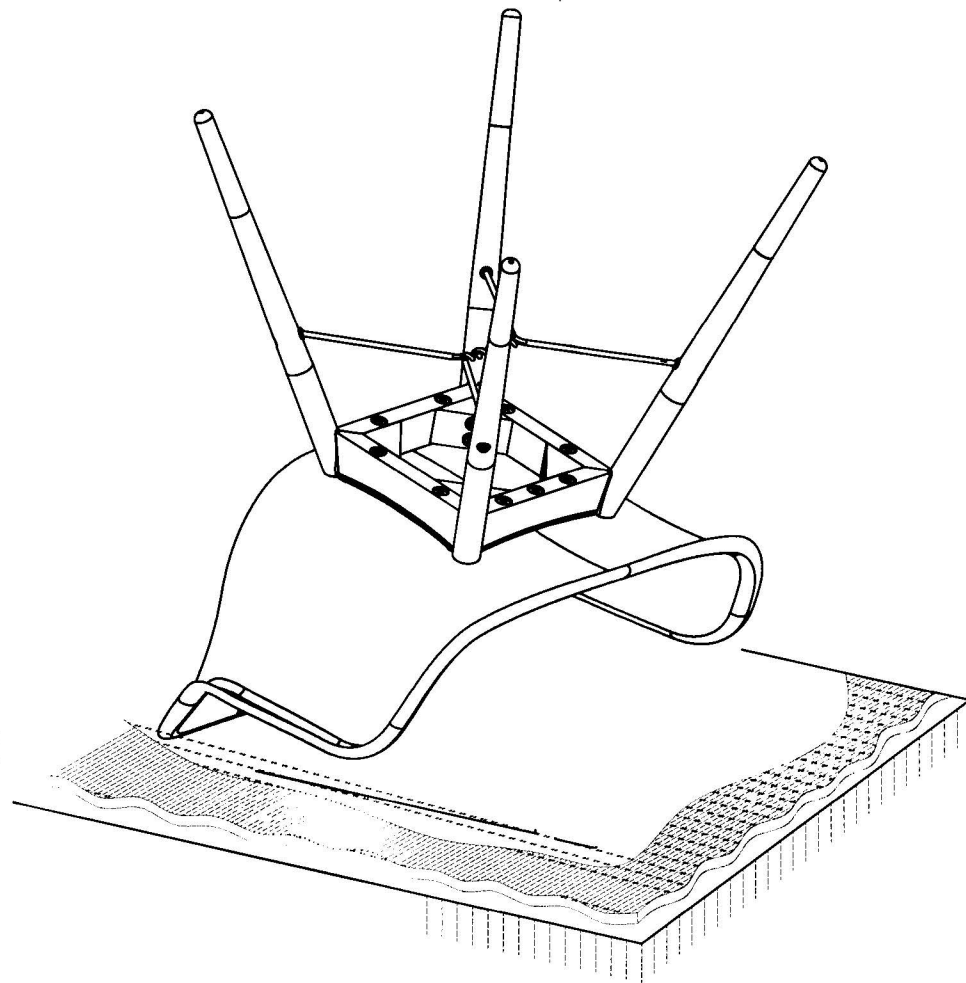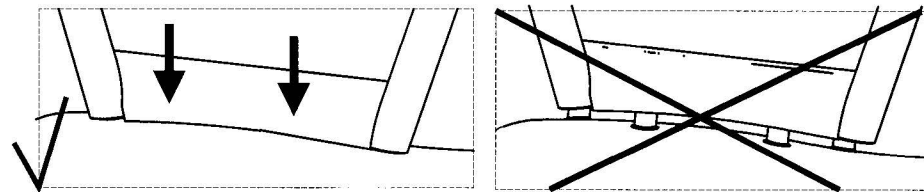

7/8

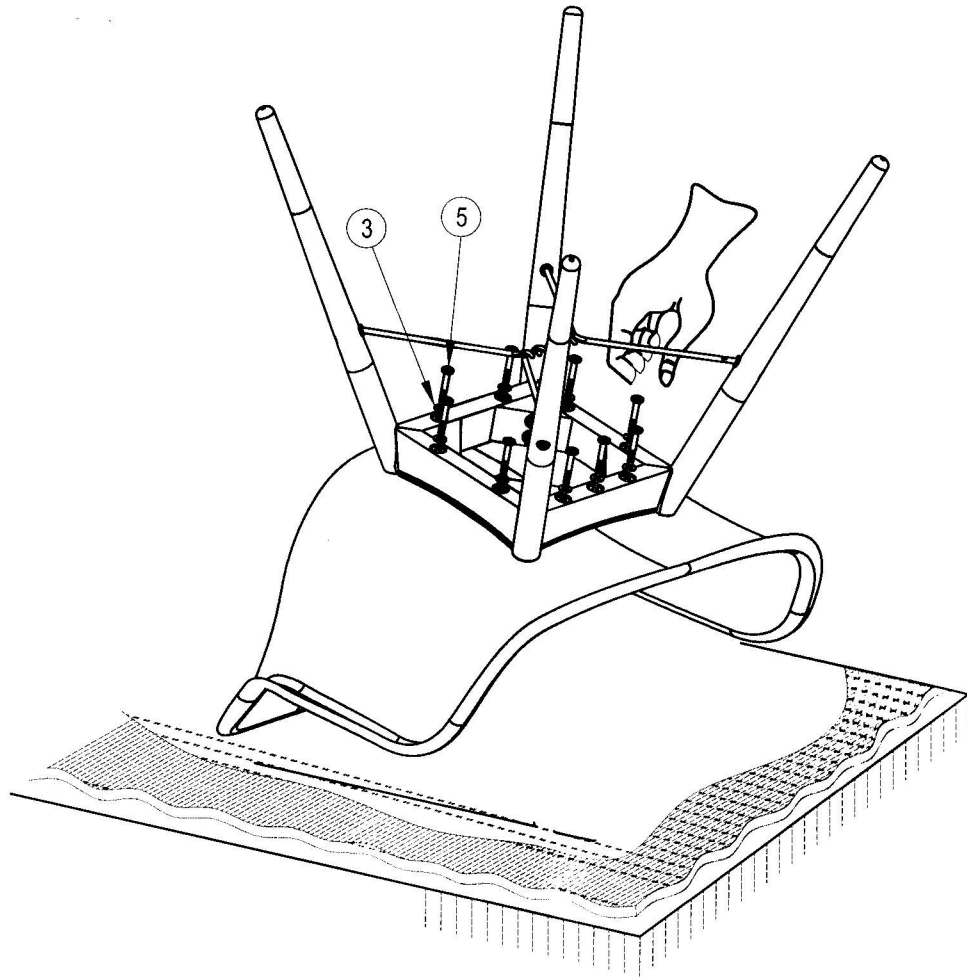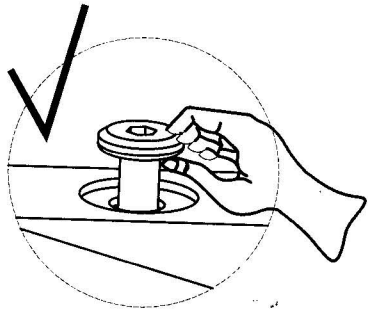

8/8

