


SHELF DOOR ASSEMBLY INSTALLATION

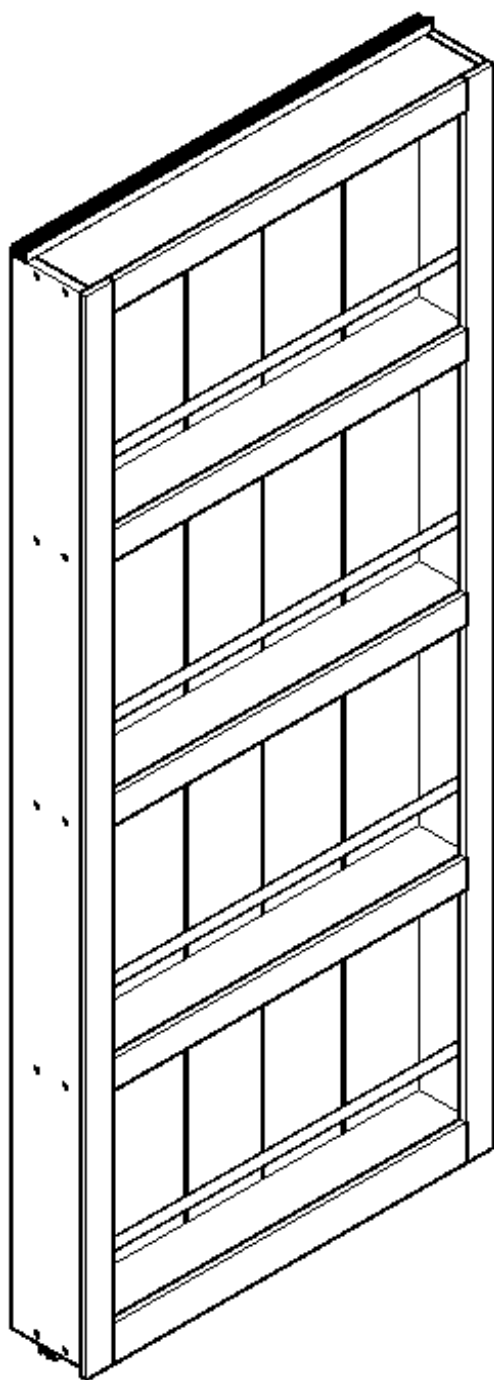


ASSEMBLY INSTRUCTIONS


For best results, carefully follow the instructions in this guide. Glue and other adhesives are not required, and we do not recommend their use during the assembly process.

First, remove all parts from the box and place them on a flat, open surface. Then, using the guide drawings at the bottom of this page, identify each slat.


Any question please email dooraftersale@gmail.com

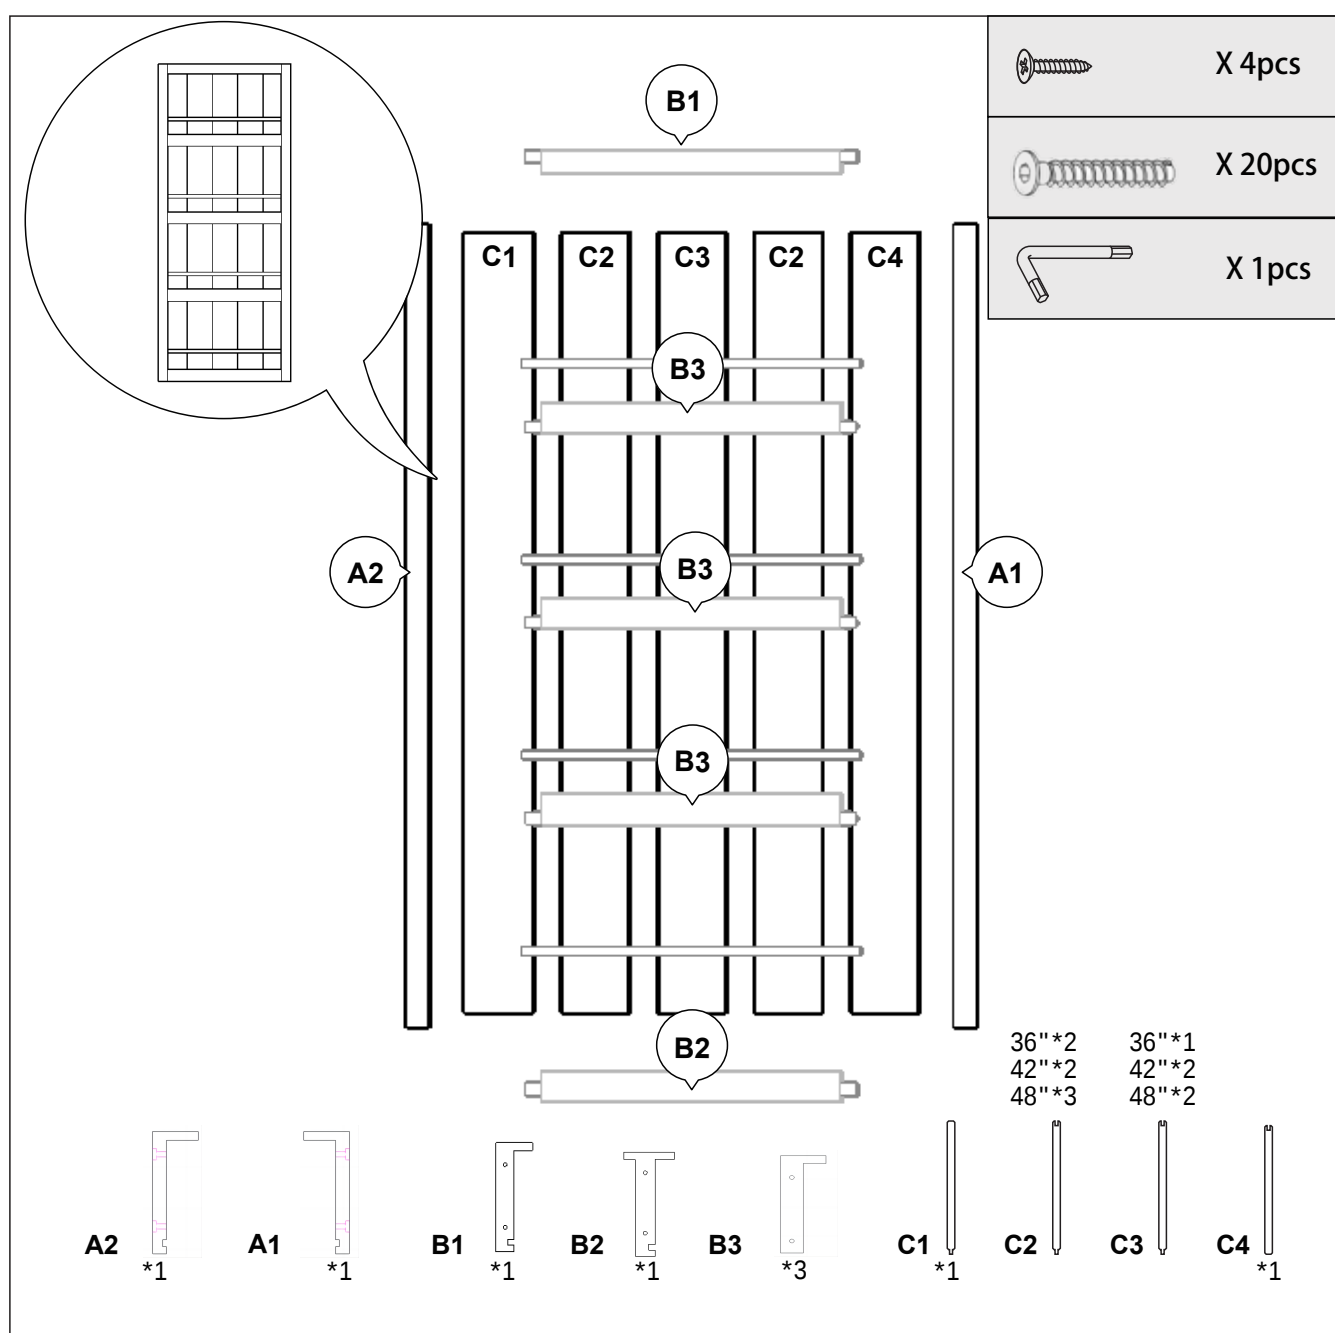

1.

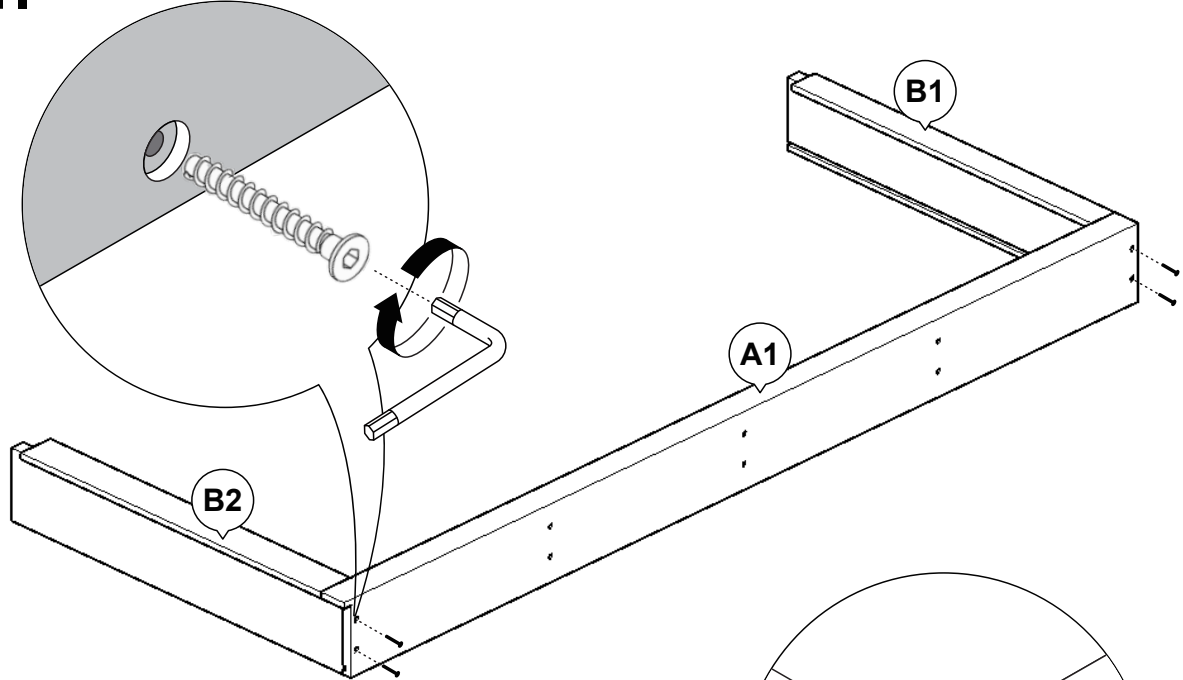

2.

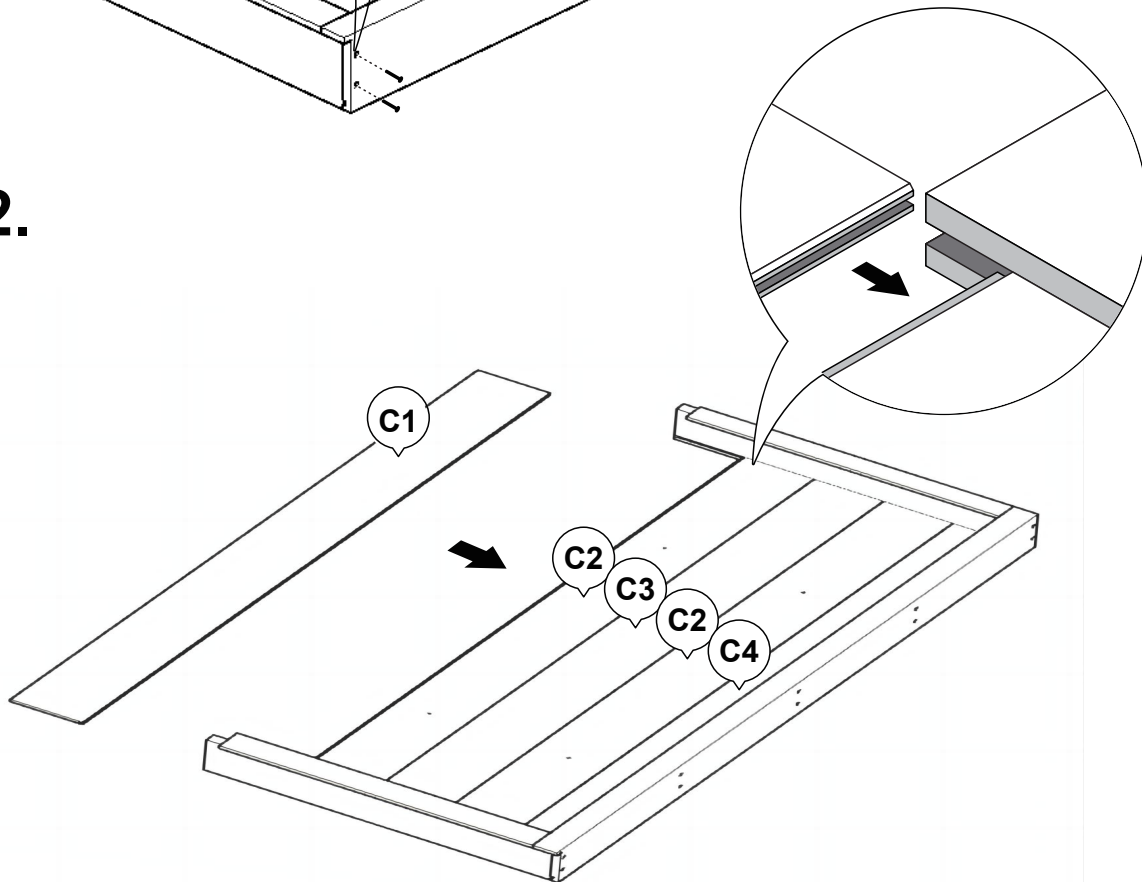


Notice:


A1' s screw hole is on the right side. B1&B2 should be fastened with four carriage bolts.
Both C2&C3 has groove and tongue. Only C2 has tiny screw holes on the slats.

3.

B3

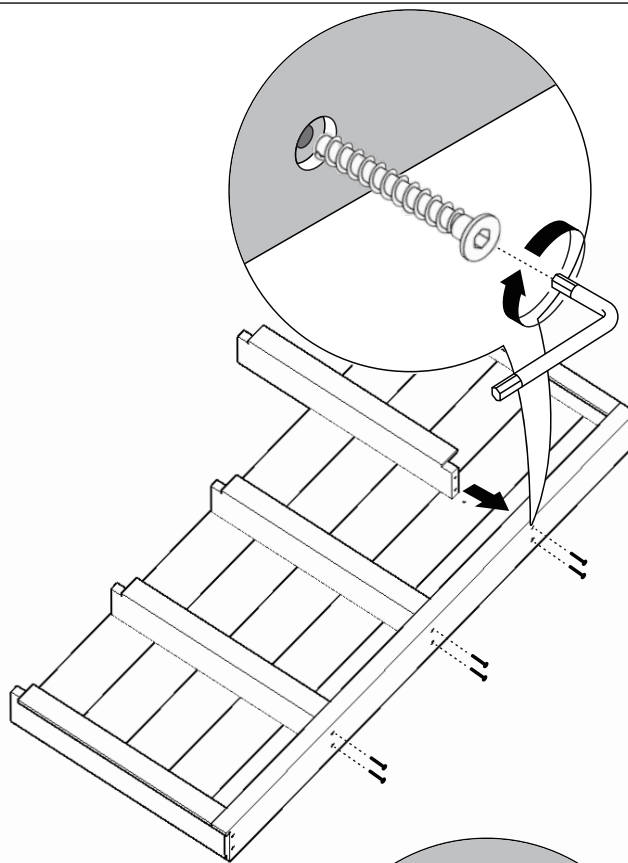


4

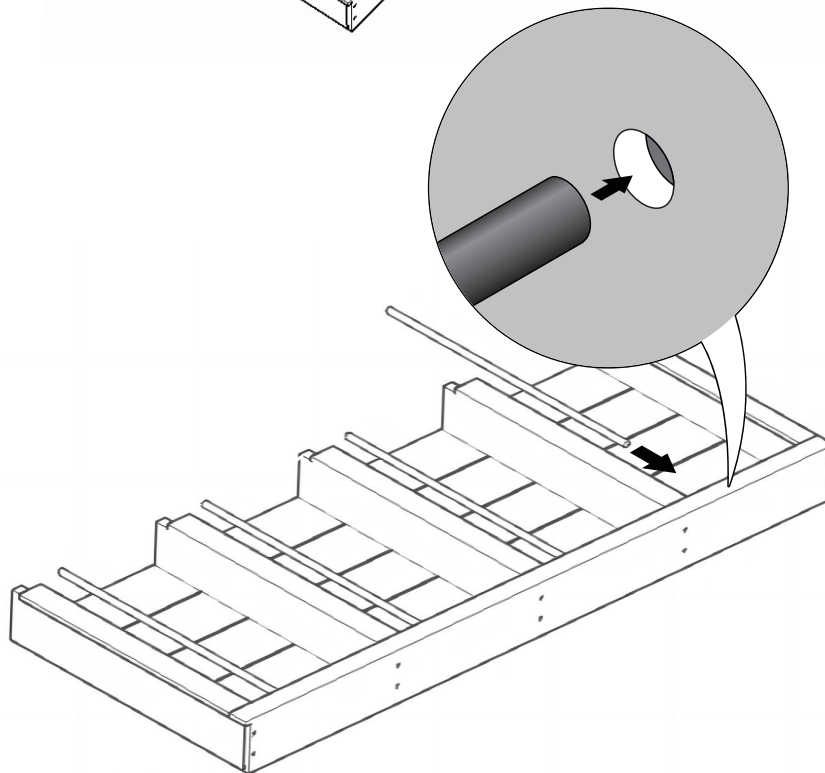


Notice:

Fasten B3 with six carriage bolts. Do not overtighten the bolt.

5.

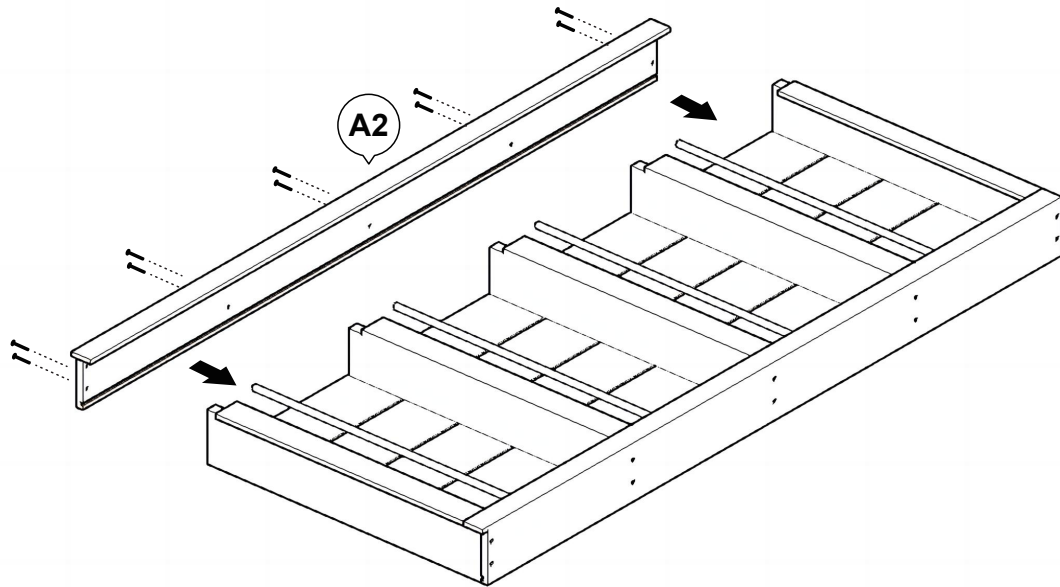

6.

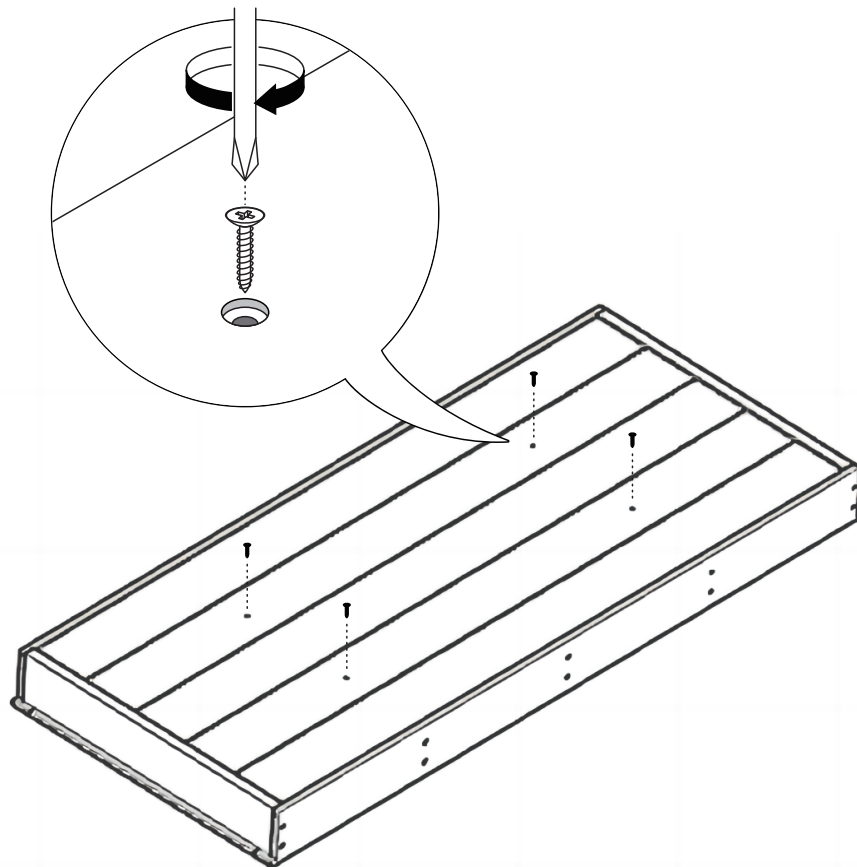

Notice:

When you finish the A2 installation, please fasten the C2 slats with B3 with four short screws.