



Assembly Instructions for 3310 Swivel Rocker


Step 1:

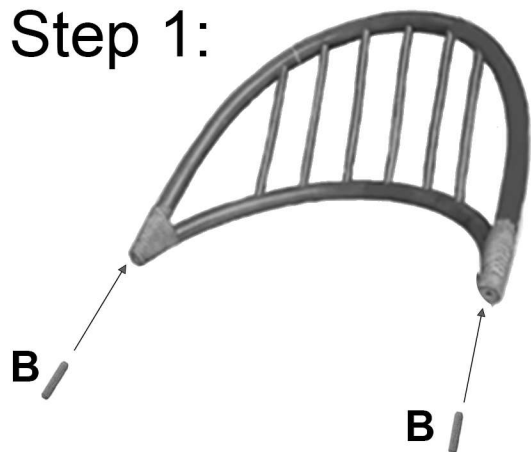

Step 2:

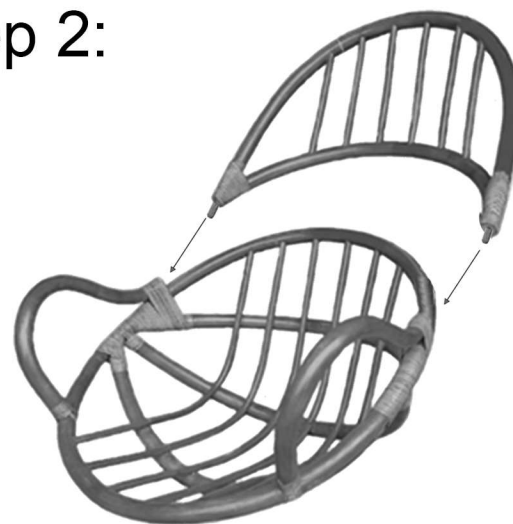


Parts

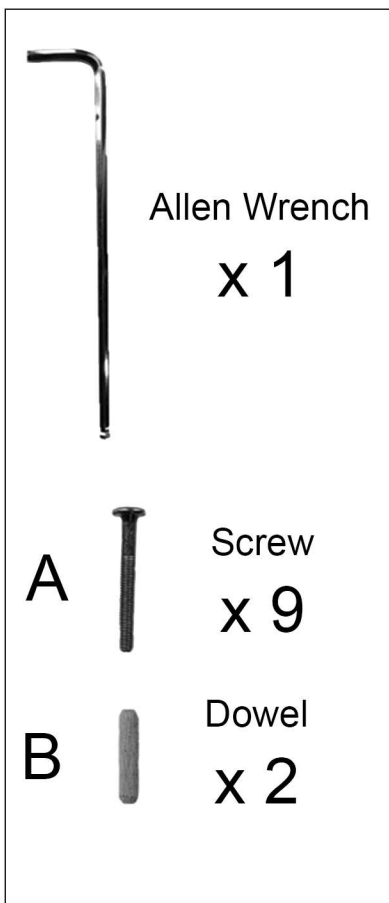


Insert dowels into pre-fitted holes in back top piece

Insert back top piece into pre-fitted holes located in top of each armrest

Step 3:

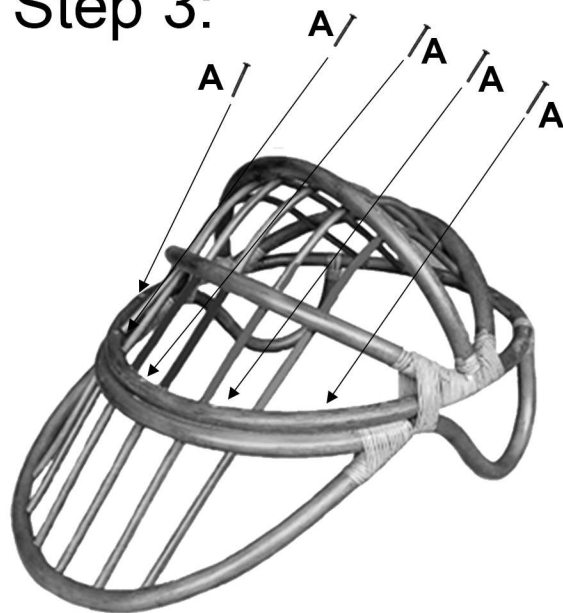

Step 4:

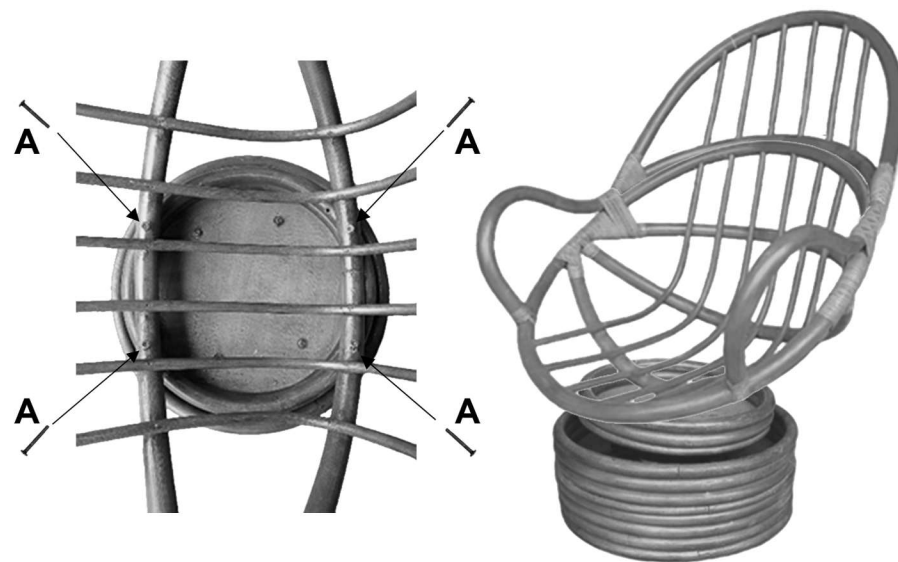

With unit laying down on floor as shown above, use allen wrench to screw five screws into pre-drilled holes

Rest completed seat unit on base assembly with the "front" sticker matching front of seat, and use allen wrench to screw in four screws into pre-drilled base holes