


ASSEMBLY INSTRUCTIONS

36INCH MIRROR CABINET



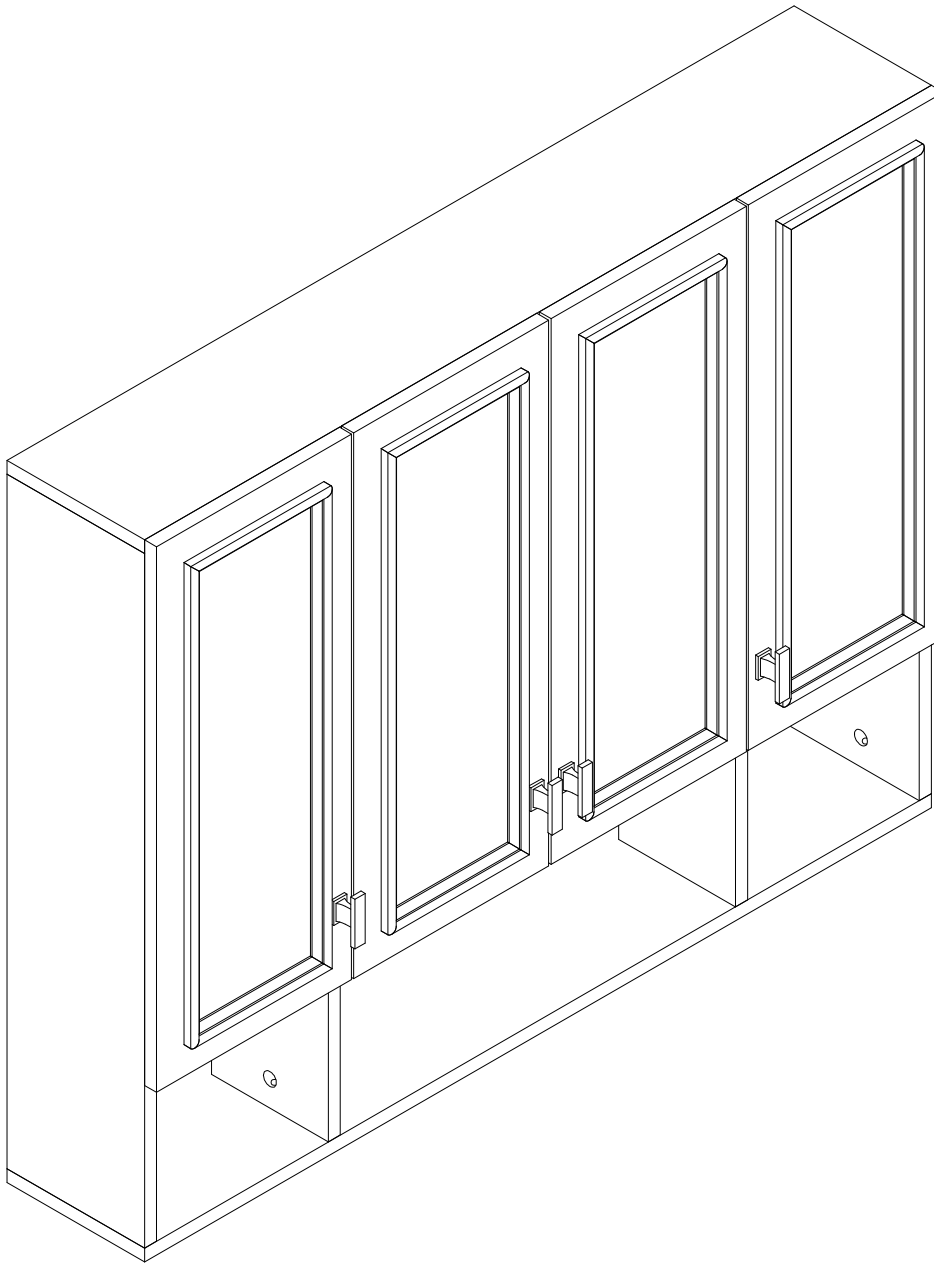


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

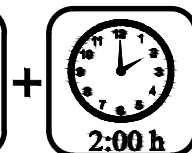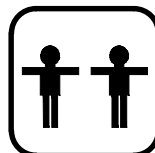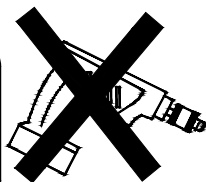

Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions







	Diagram A	Insert Cam Bolt into hole as shown in diagram A.	
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View - CABINET








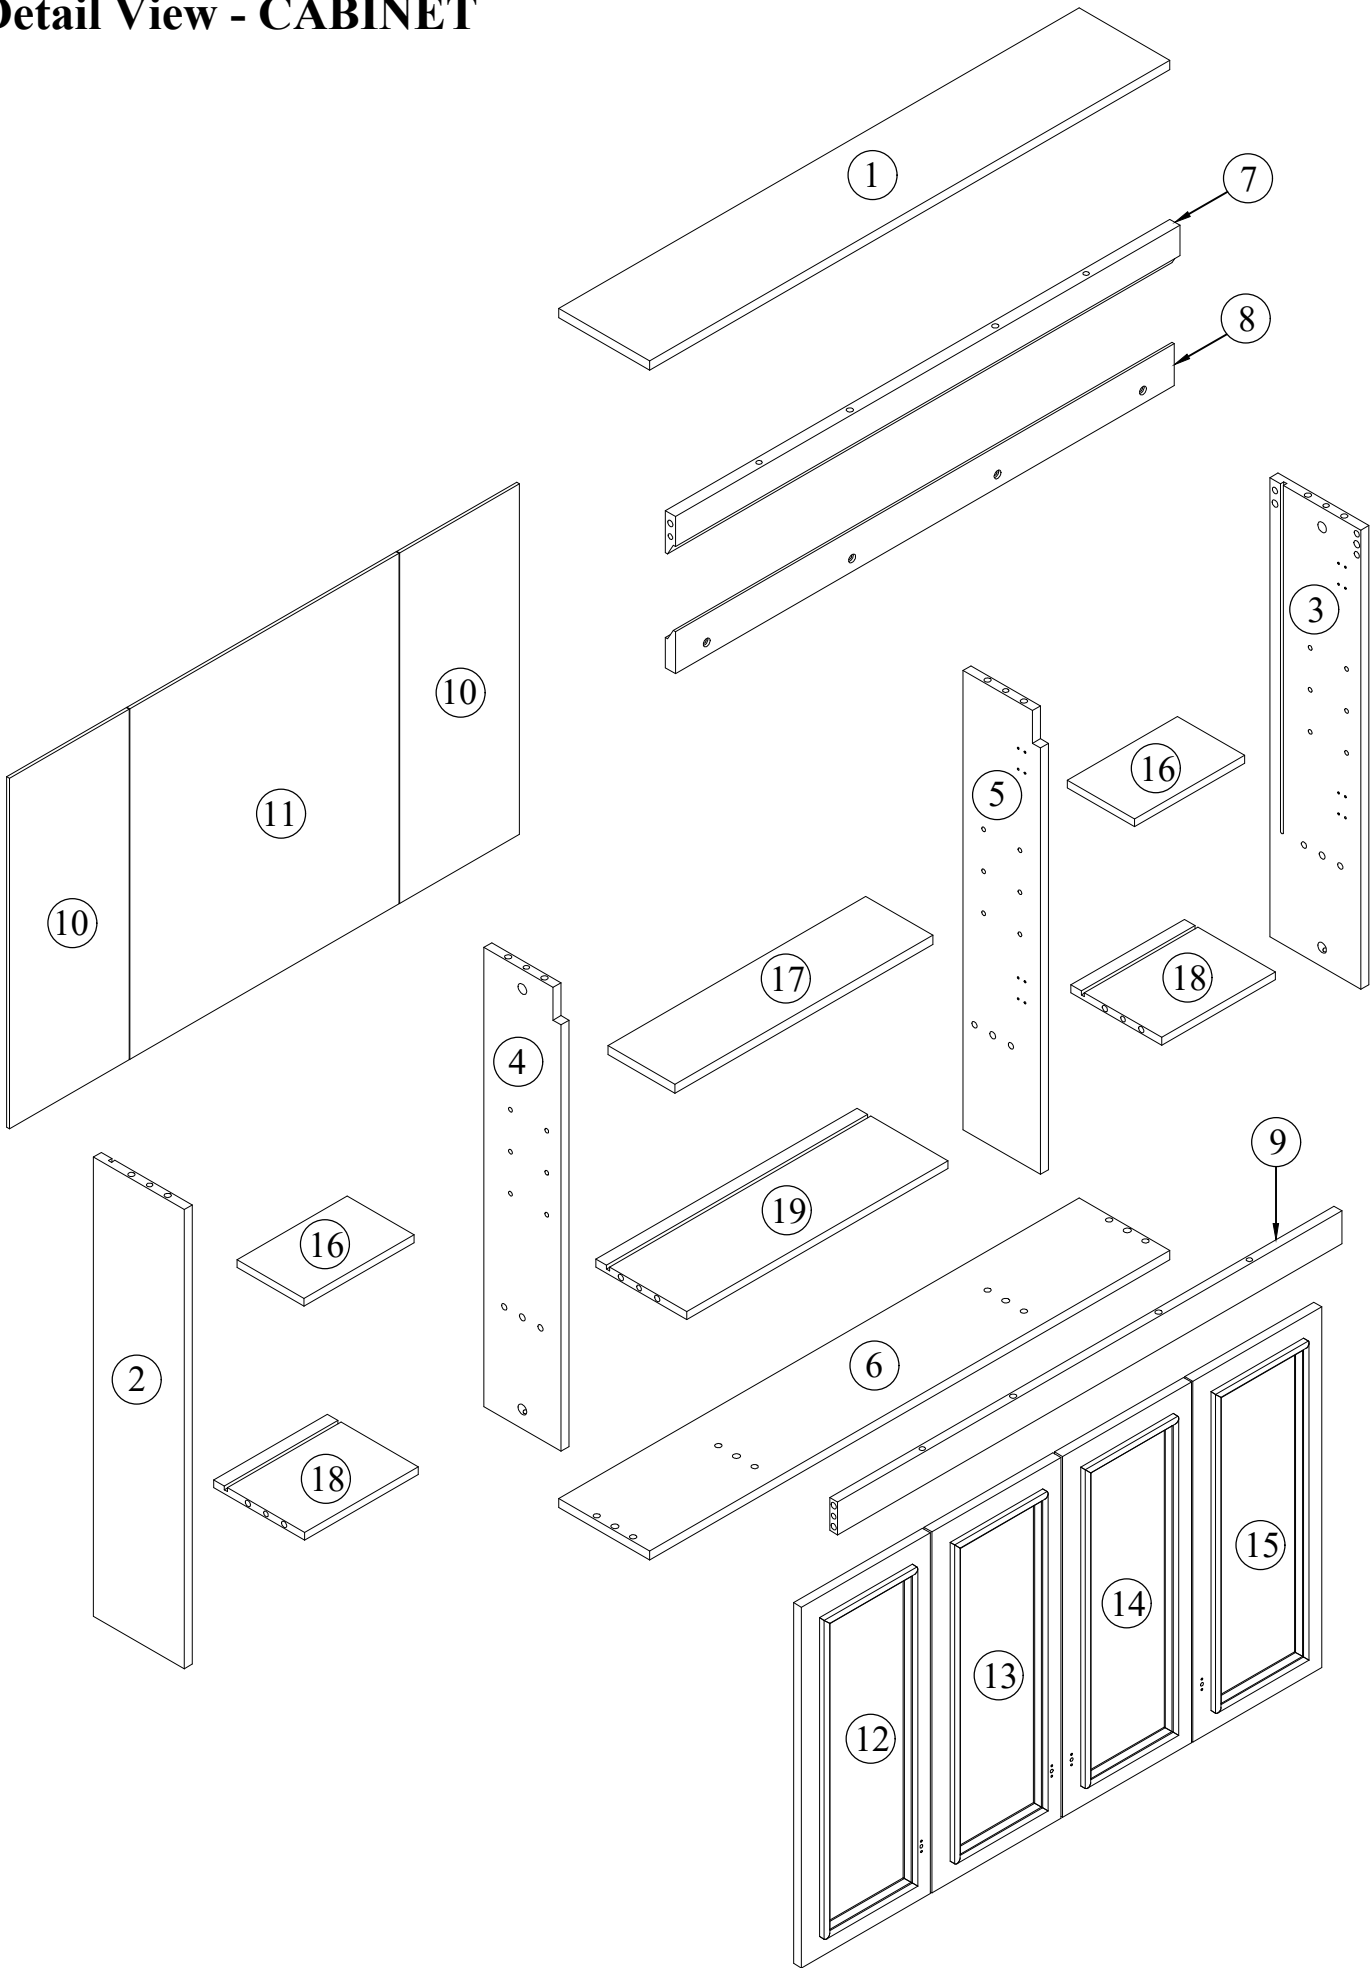


Identifying the Hardware-Identify the hardware using the illustrations below.










Part List-N710P496239

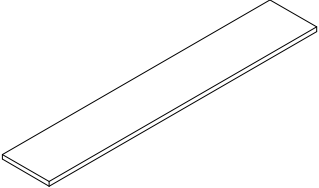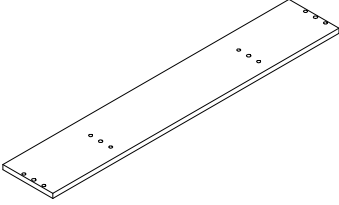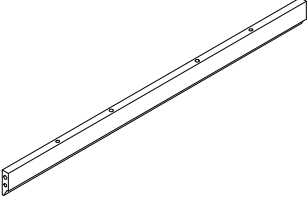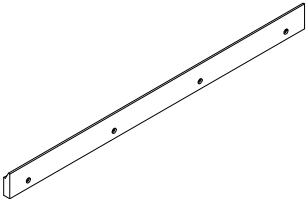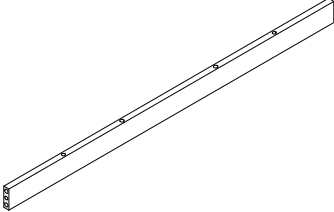1  Top Panel - 1pc	2  Side Panel (L) - 1pc
3  Side Panel (R) - 1pc	4  Mid Panel (L) - 1pc
5  Mid Panel (R) - 1pc	6  Bottom Panel - 1pc
7  Top Panel Rear - 1pc	8  Connect Bar - 1pc
9  Crossbar Top - 1pc	10  Back Panel (L+R) - 2pcs

Part List-N710P496239

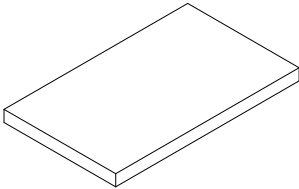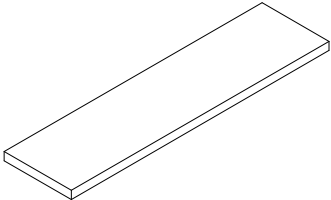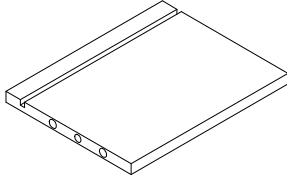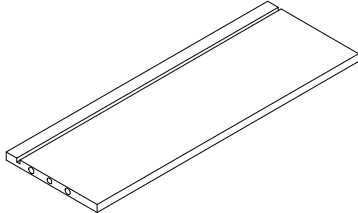
11  Back Panel Mid - 1pc	12  Door (L) - 1pc
13  Door (L) - 1pc	14  Door (R) - 1pc
15  Door (R) - 1pc	16  Adjustable Shelf (R+L) - 2pcs
17  Adjustable Shelf Middle - 1pc	18  Bottom Middle Panel (R+L) - 2pcs
19  Bottom Middle Panel - 1pc	

Hardware List

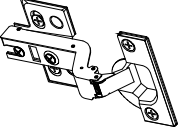

A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(22pcs)	Three in one lock(22pcs)	Wood dowel(38pcs)
D  ø7xø3.5x15mm	E 	F 
Flat head screw(4pcs)	Damping hinge (4pcs)	Damping hinge (4pcs)
G  ø7xø3.5x12mm	H 	I  ø5/32"x15mm
Flat head screw(48pcs)	Handle(4pcs)	Handle screw(4pcs)
J 	K  ø10xø5x60mm	L  ø12x55mm
Laminate pad(12pcs)	Flat head screw (4pcs)	Plastic stopper (4pcs)

STEP: 1

A




18PCS

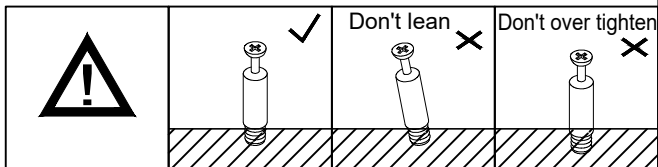
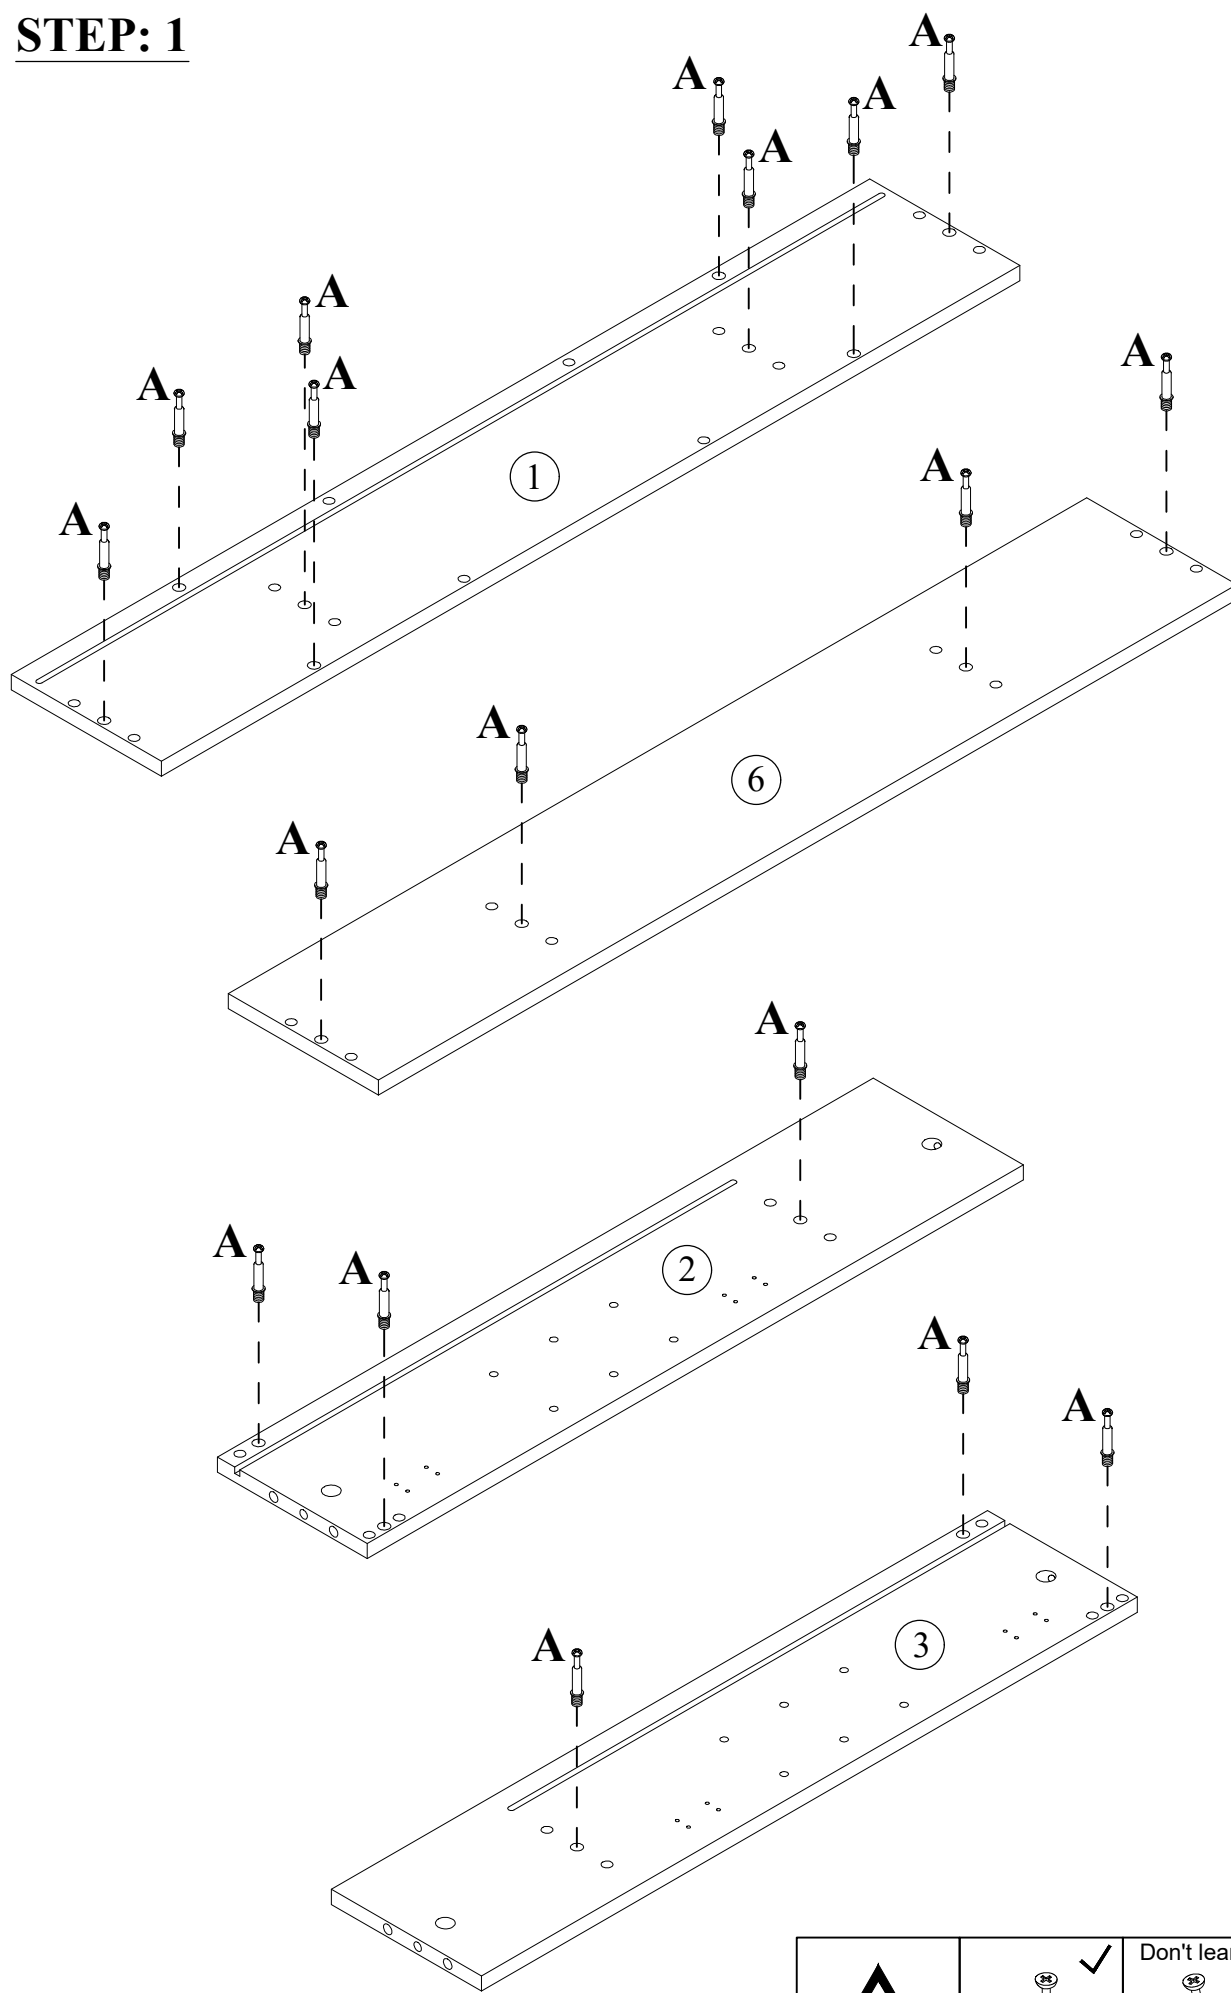


STEP: 2


A




4PCS

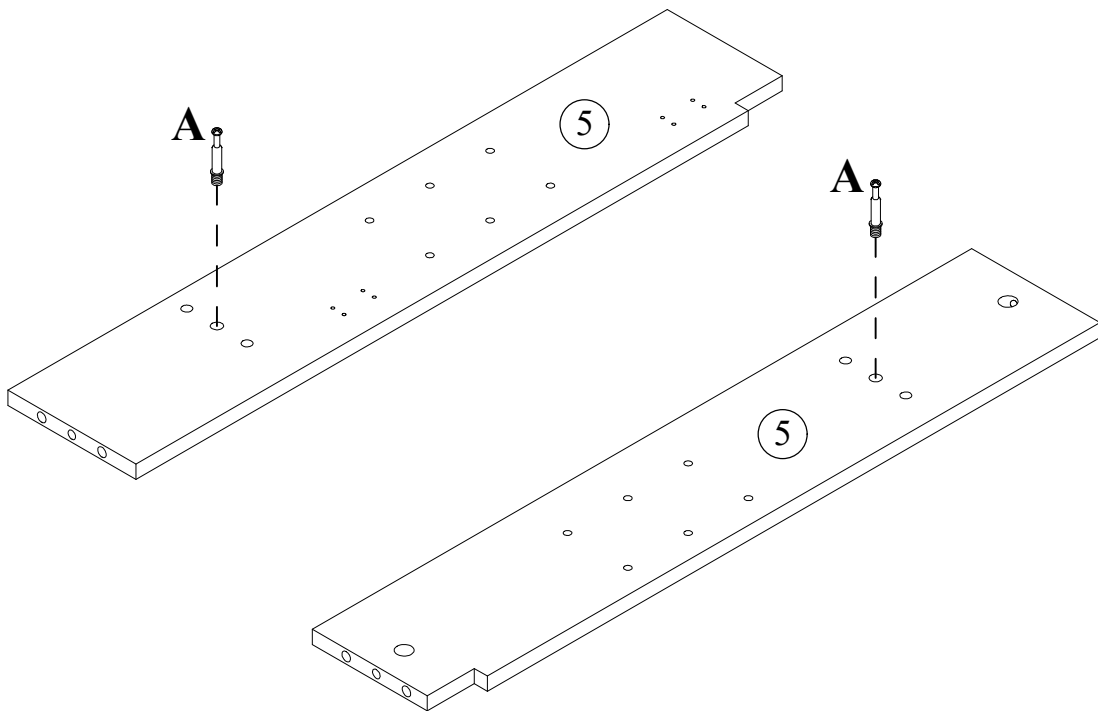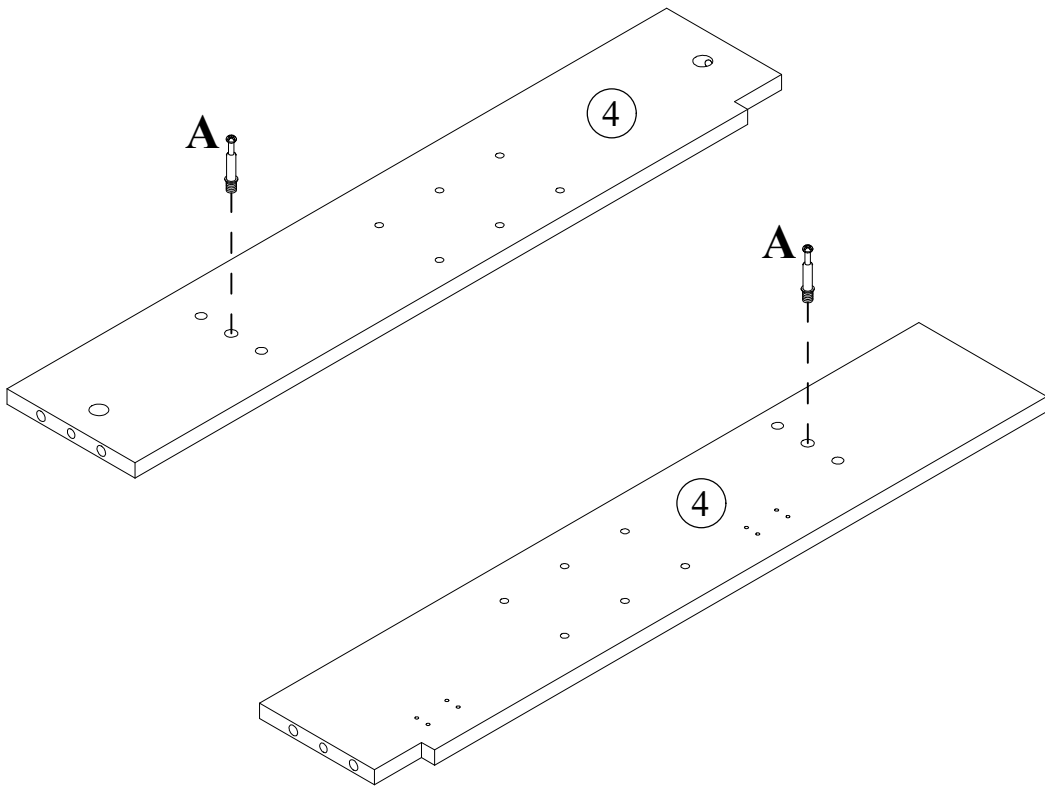


STEP: 3

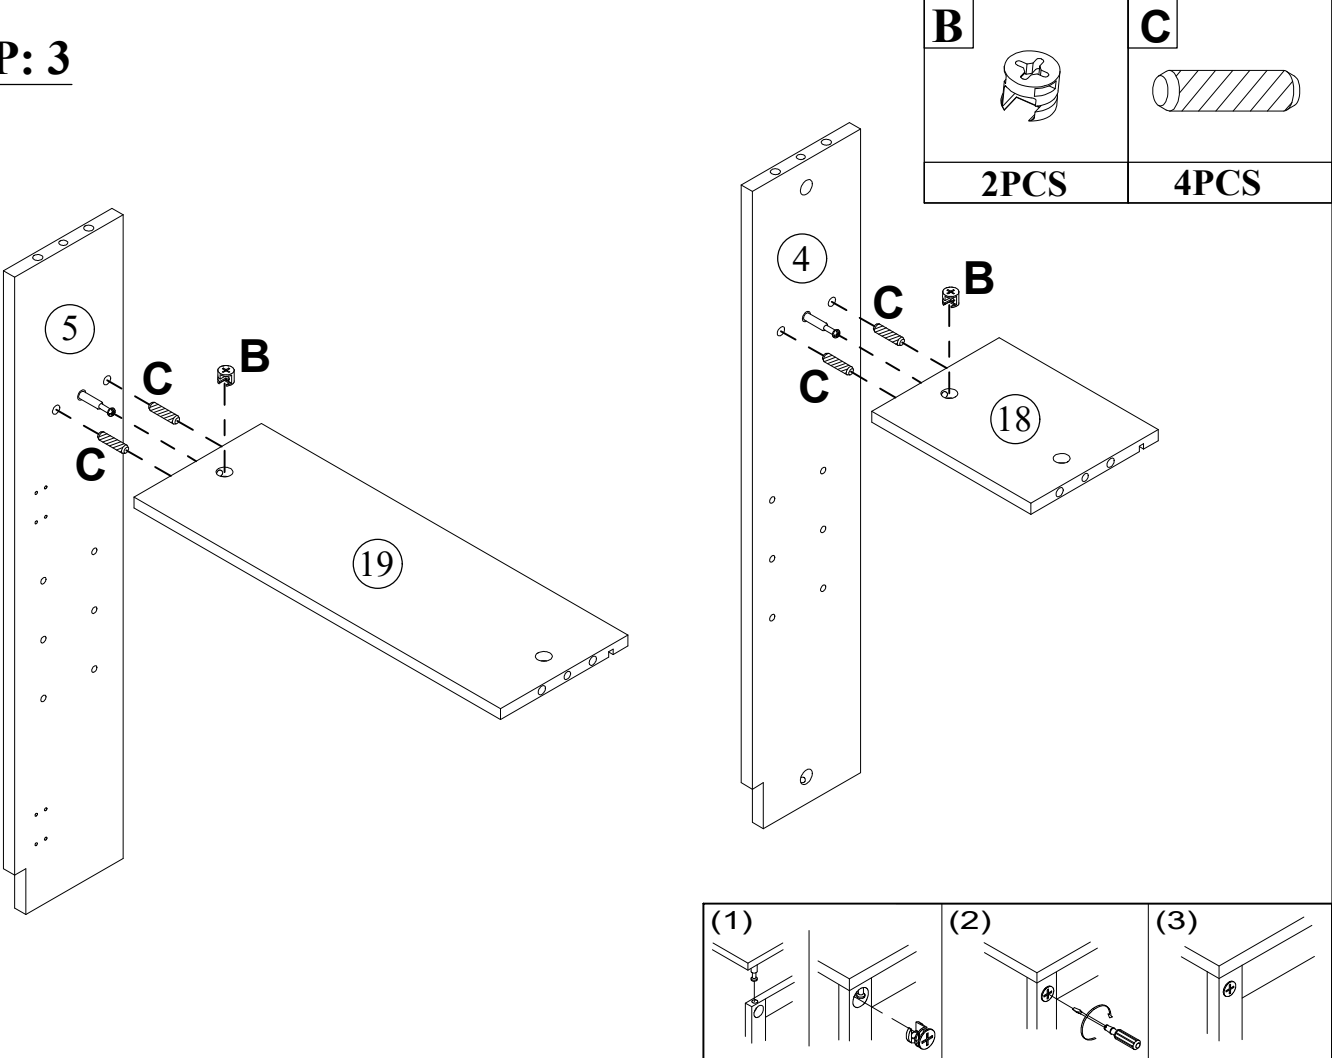

STEP: 4

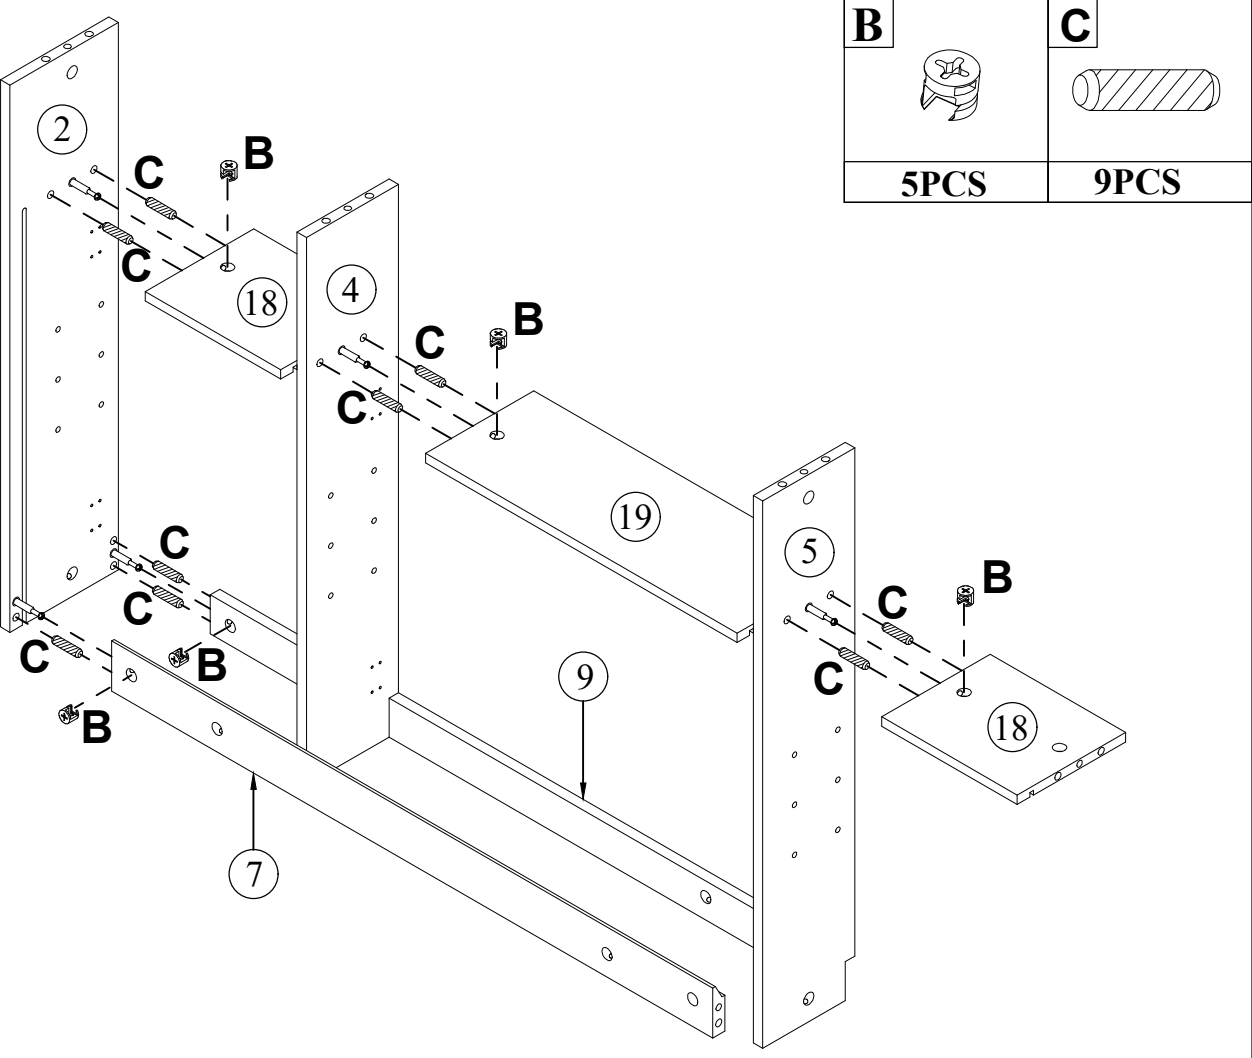


STEP: 5

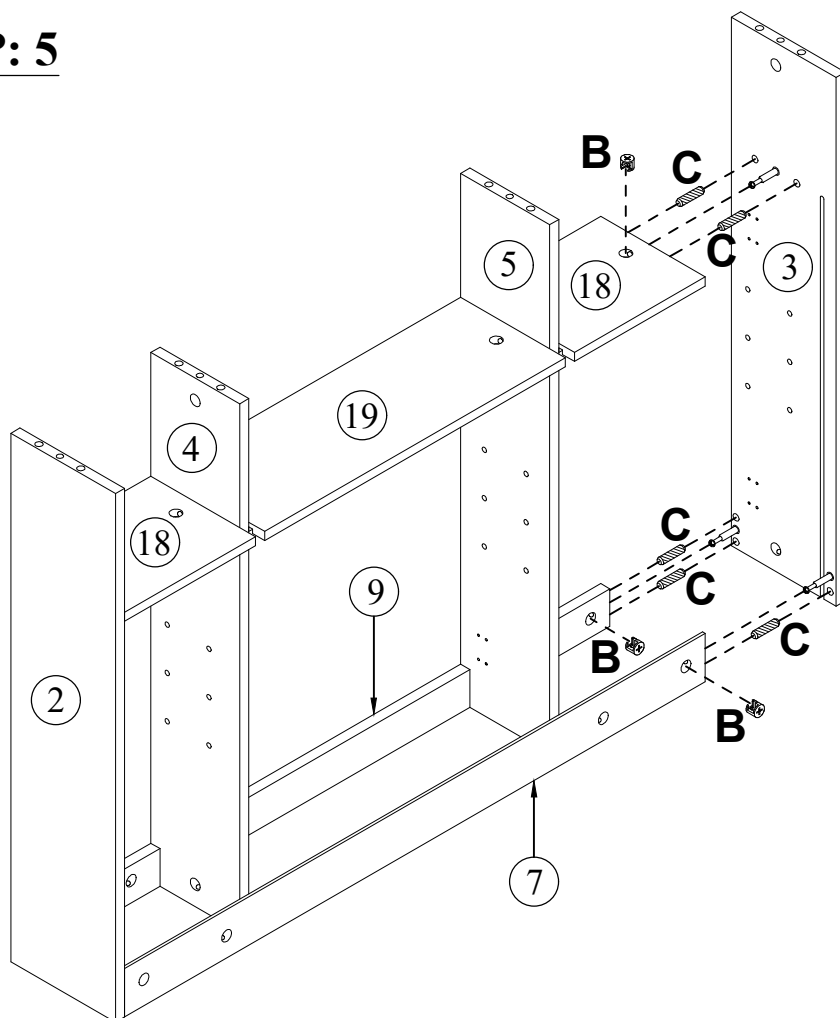


B	C
	
3PCS	5PCS

STEP: 6

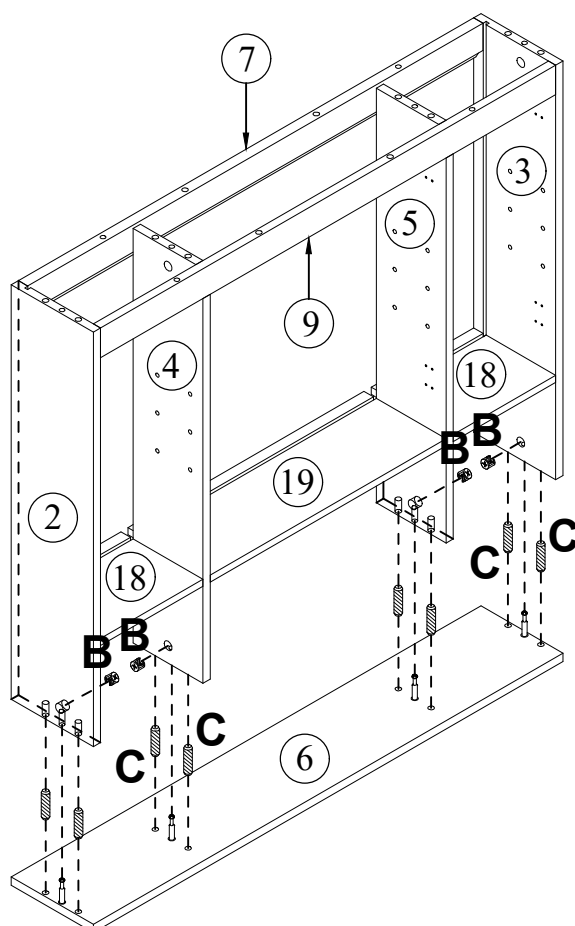


B	C
	
4PCS	8PCS


STEP: 7

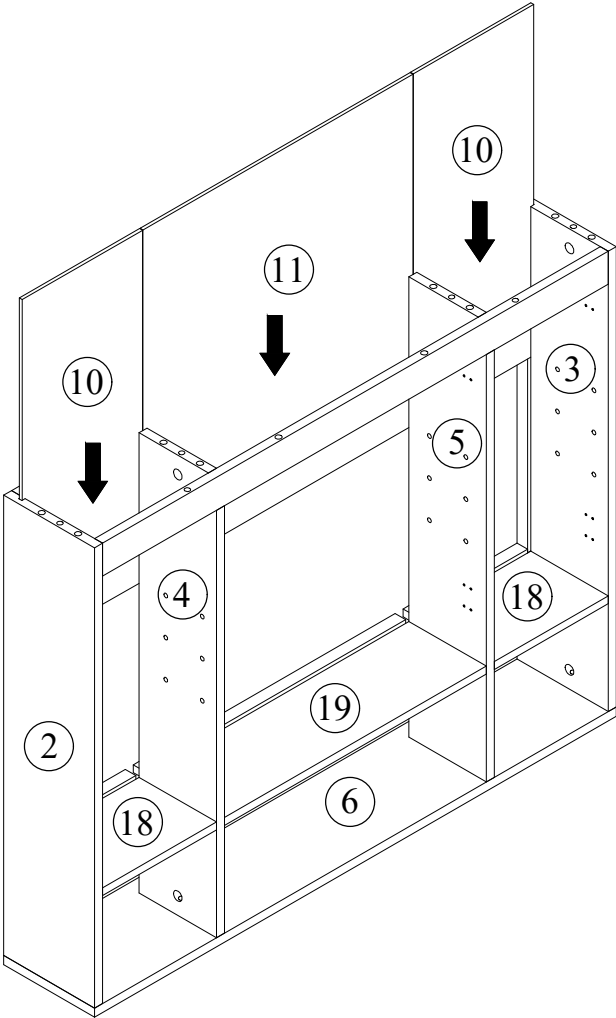

STEP: 8

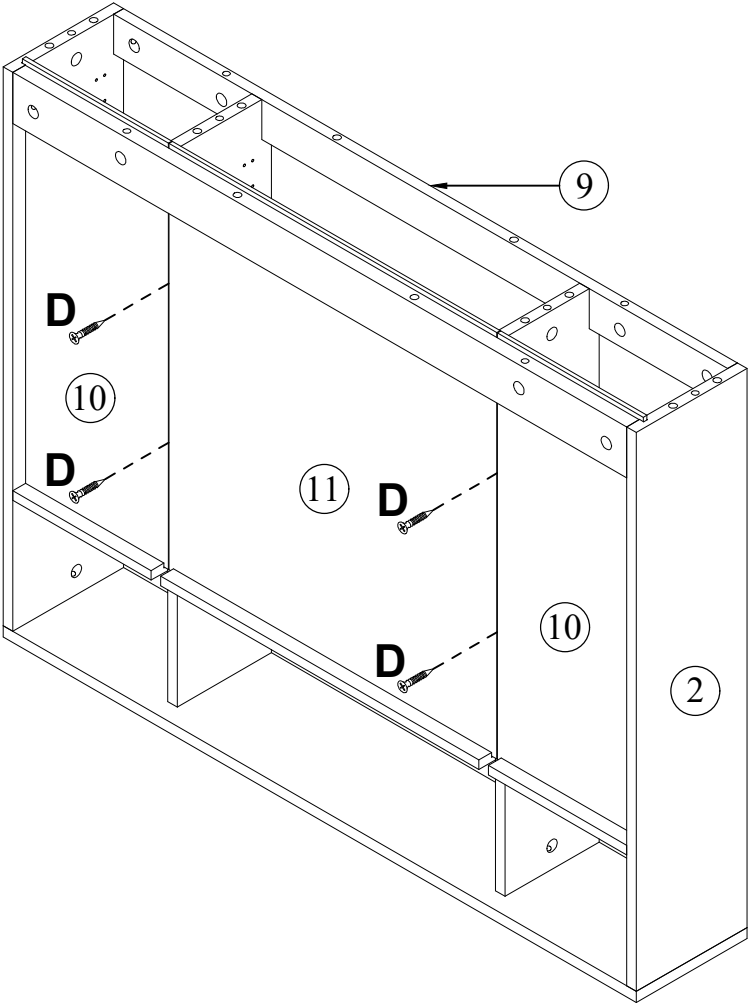


D



4PCS


STEP: 9

B	C
	
8PCS	12PCS

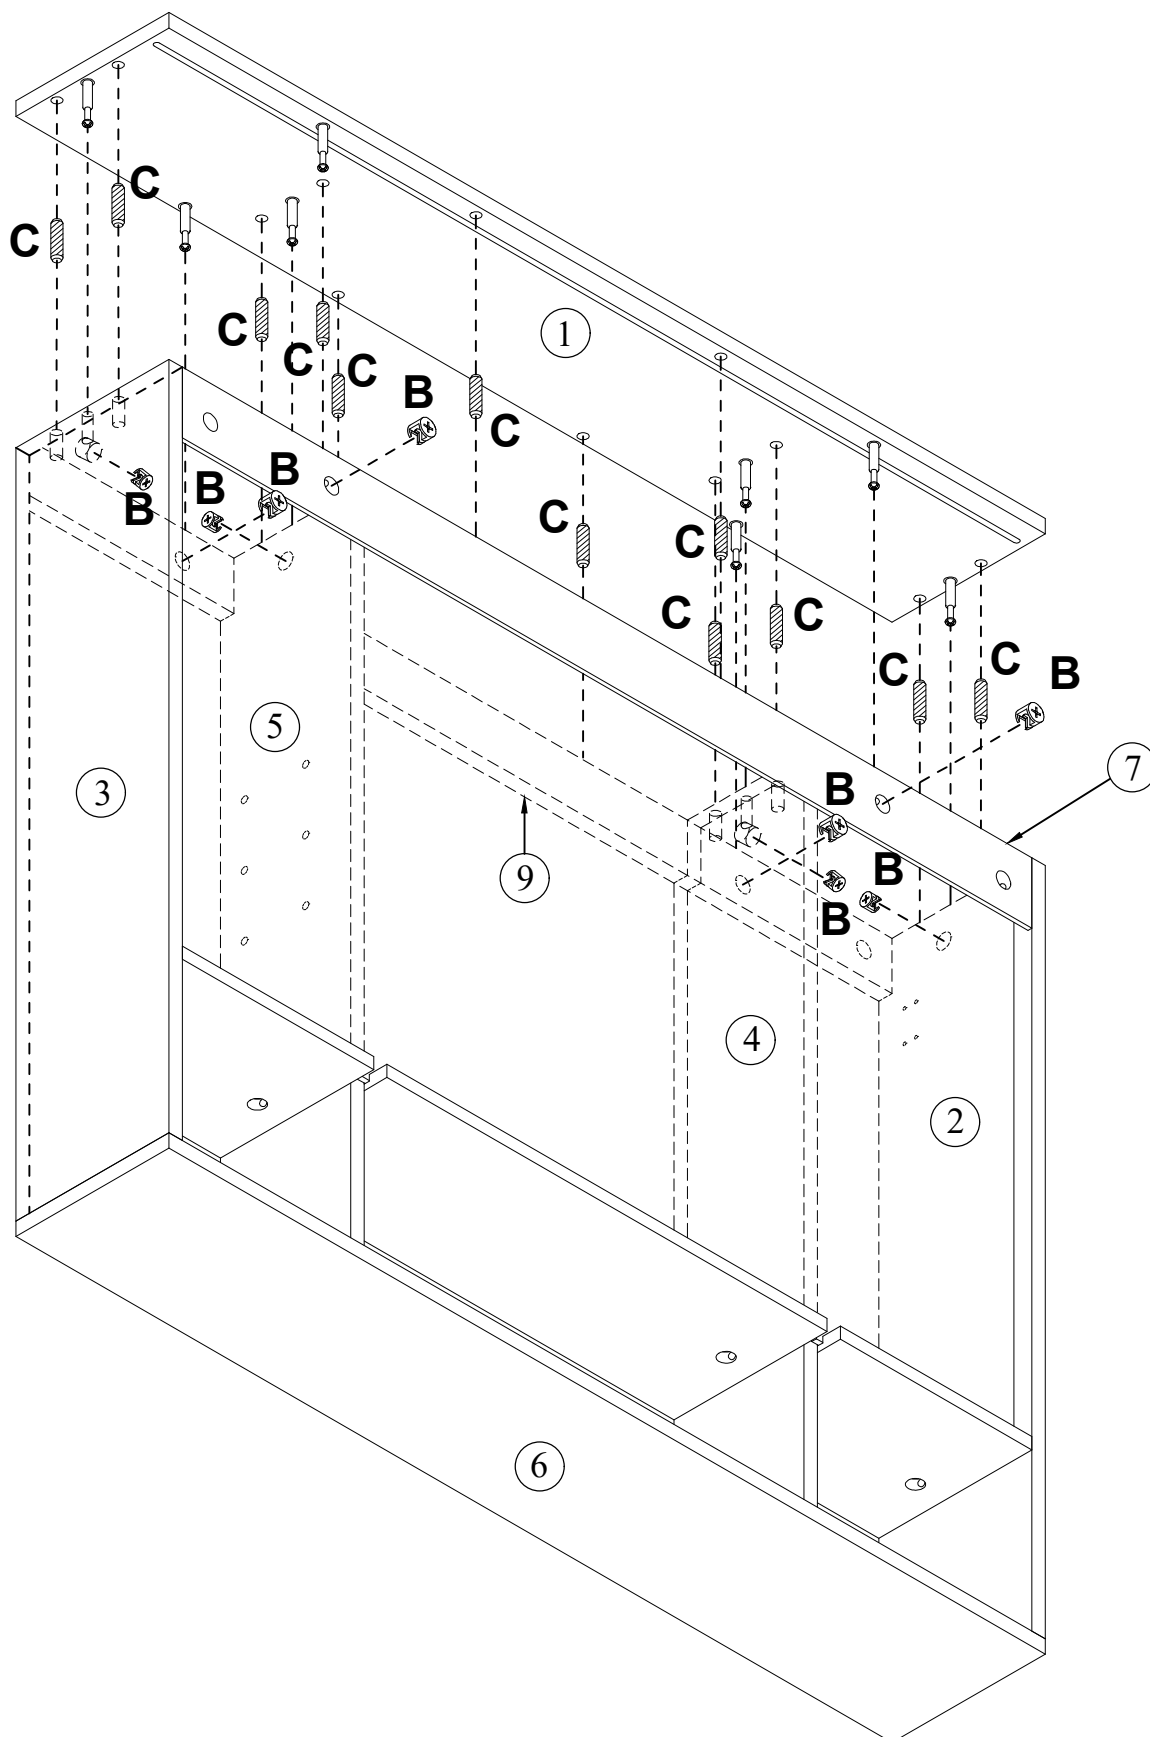


STEP: 10


E	F	G
		
4PCS	4PCS	16PCS

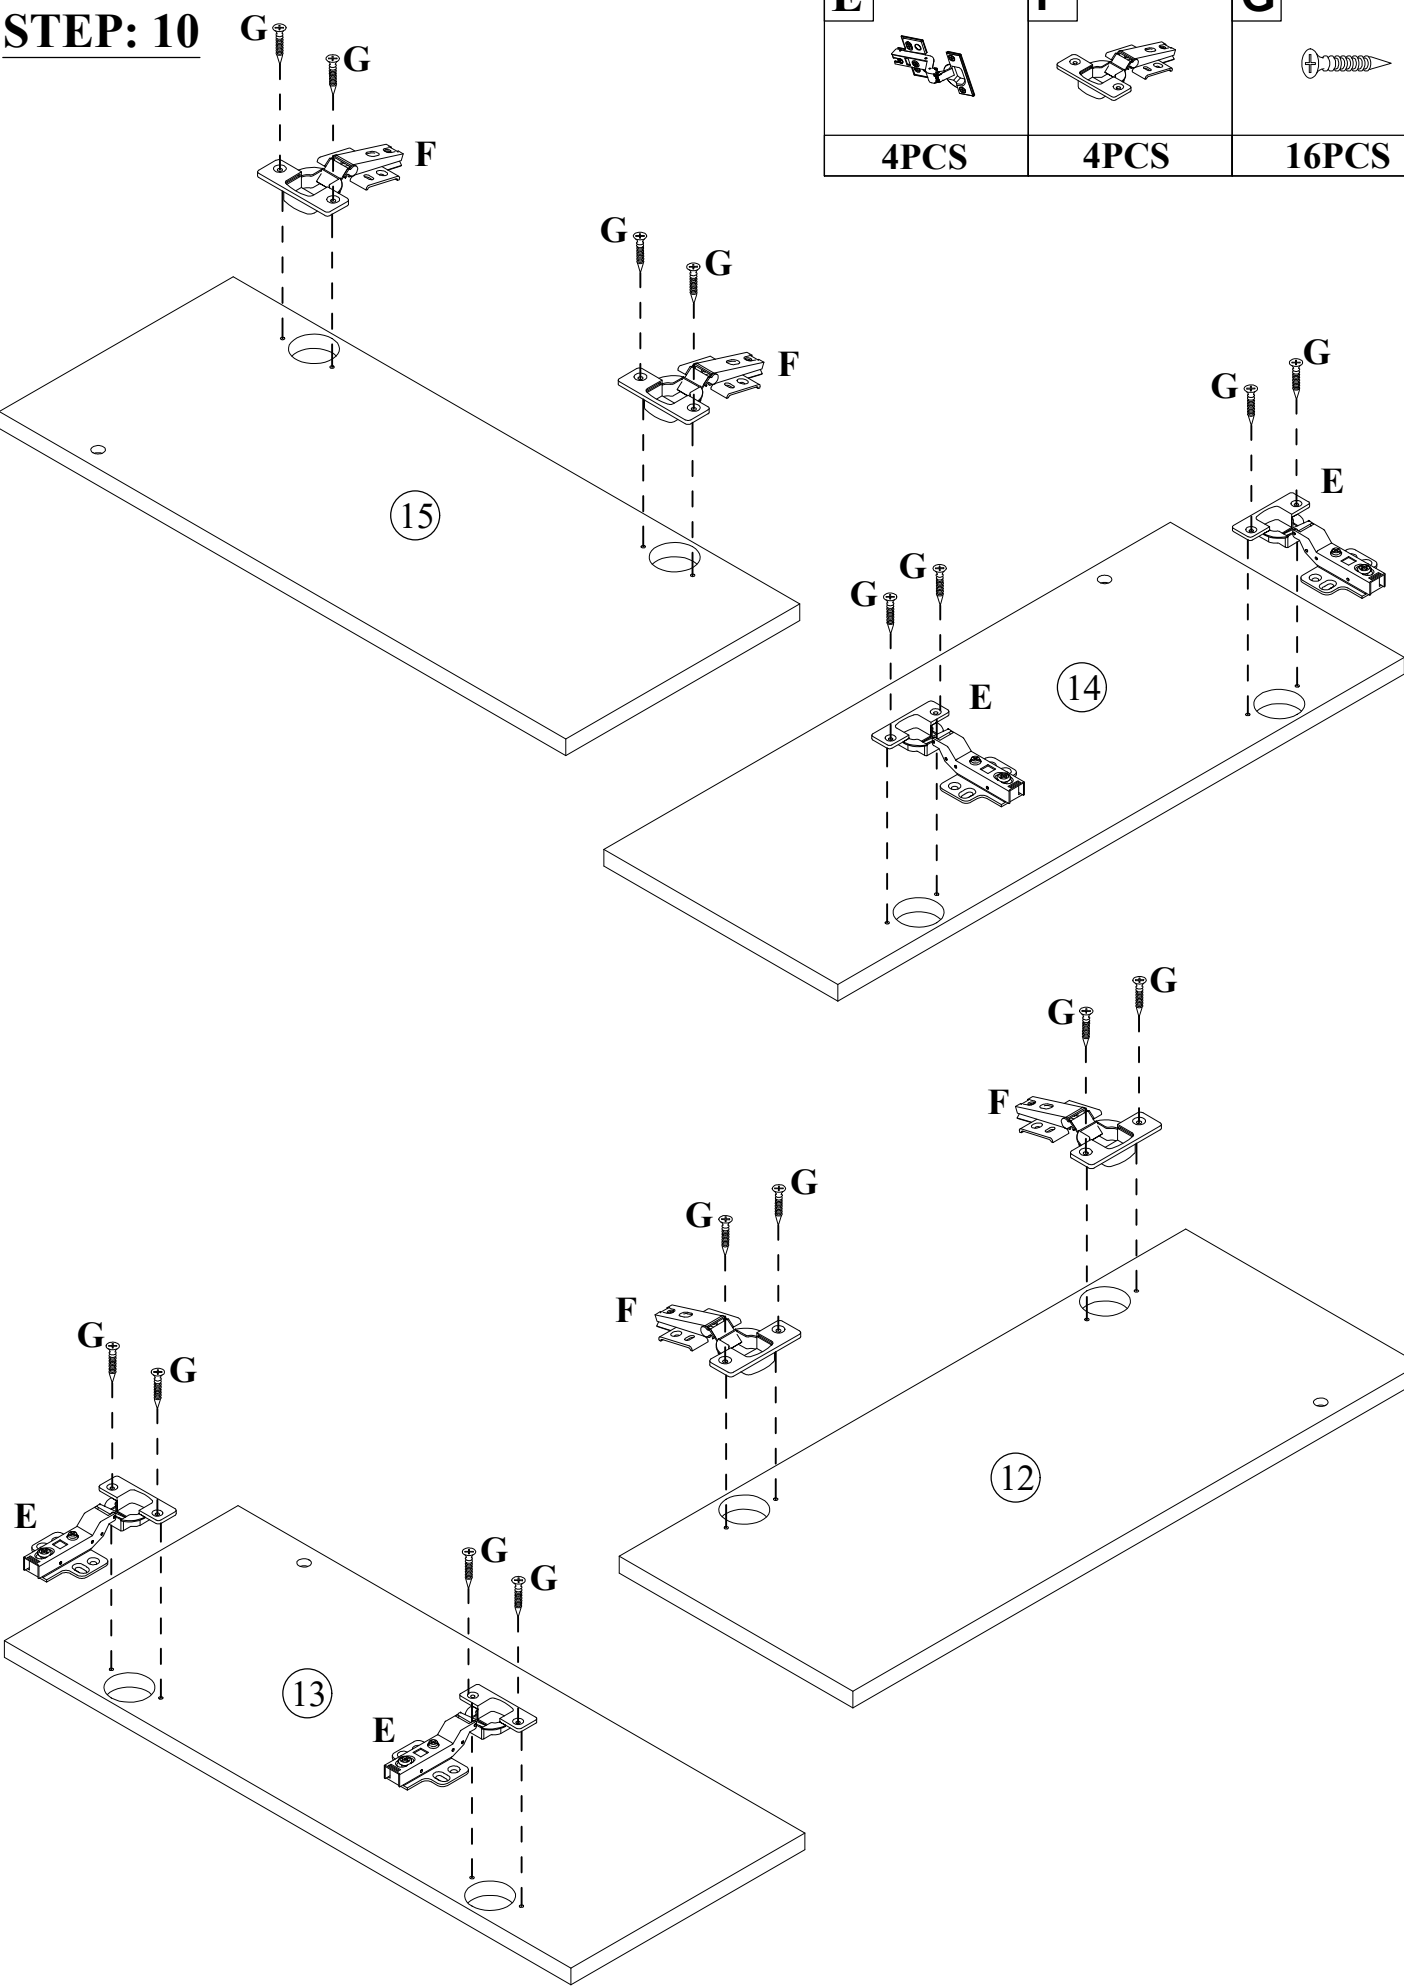

STEP: 11

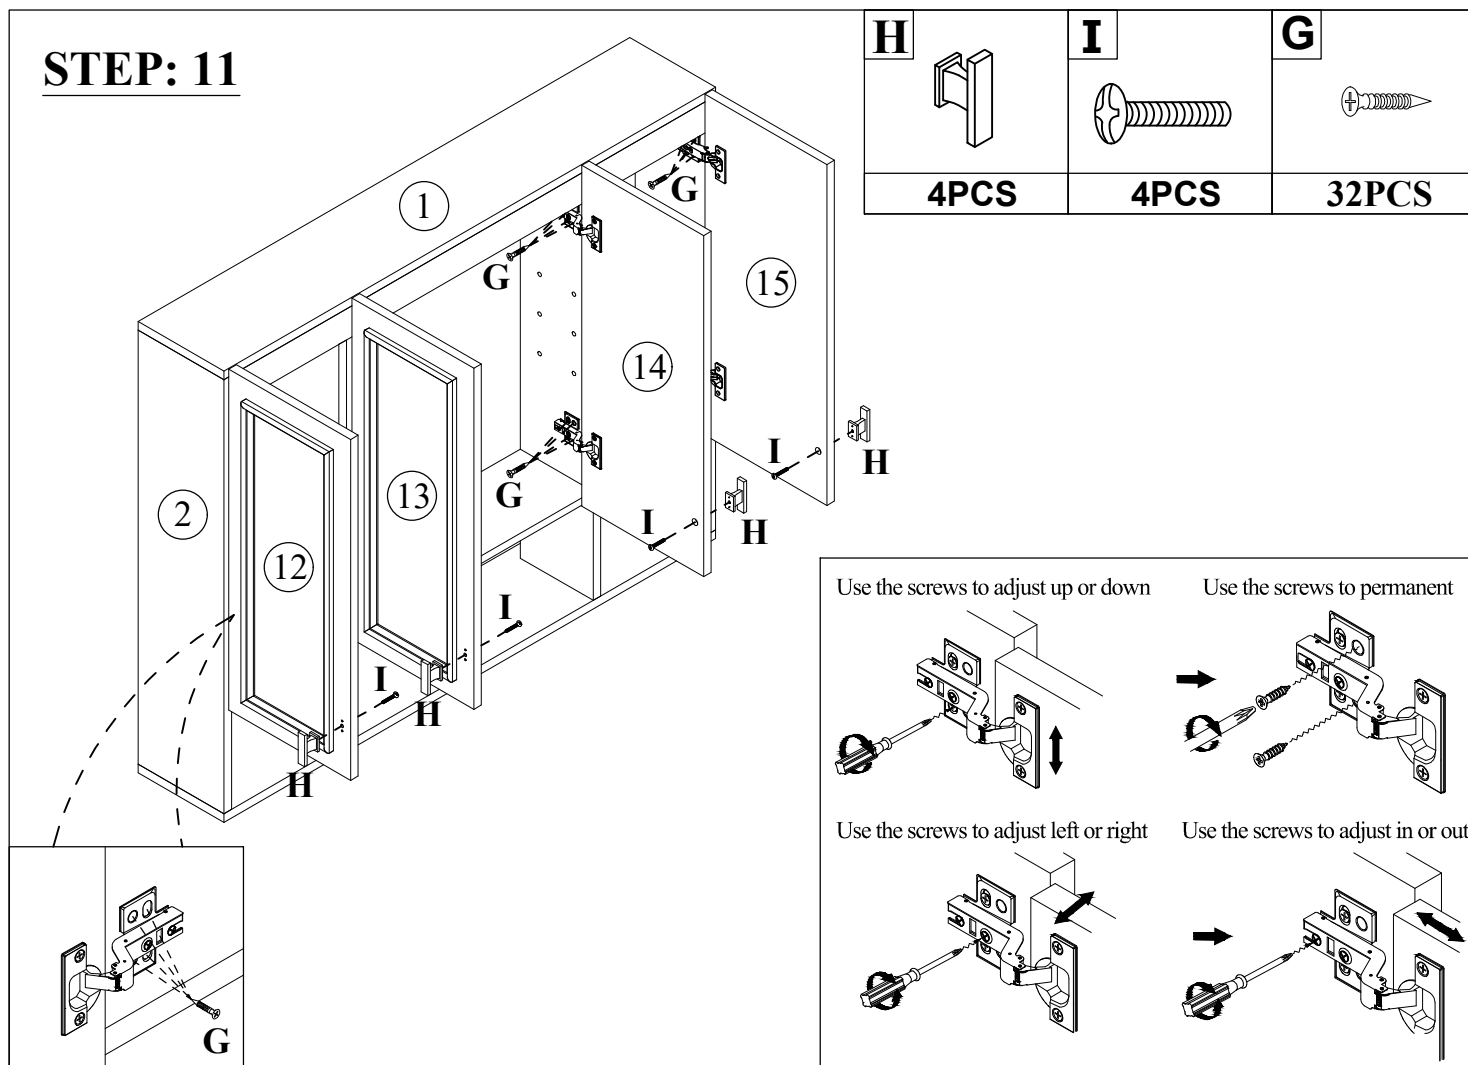


STEP: 12

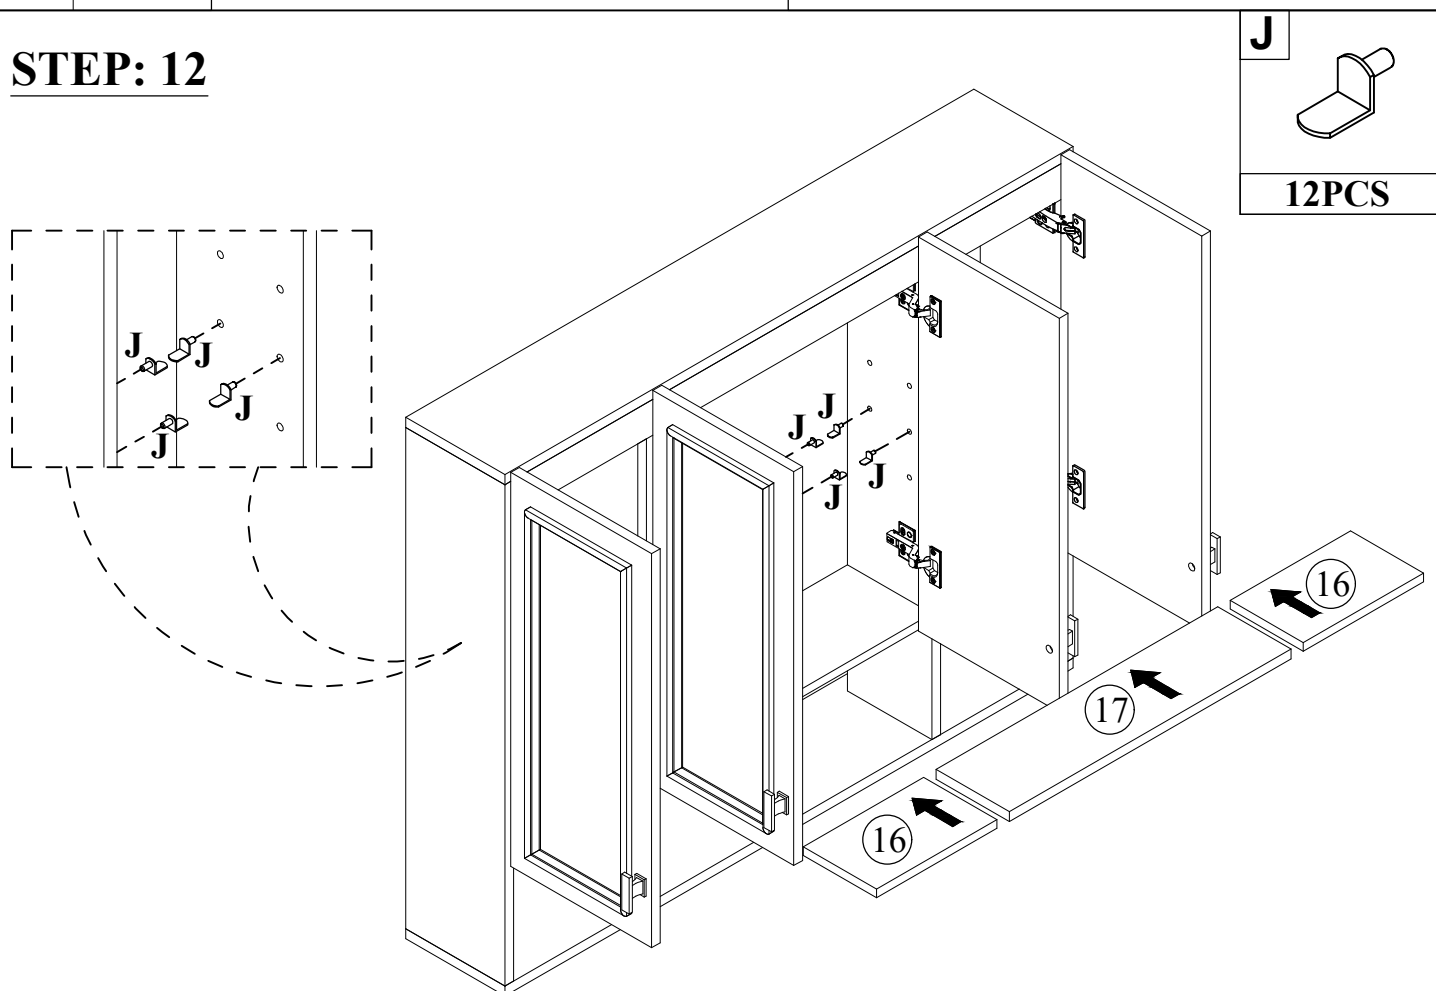

STEP: 13

Option: 1

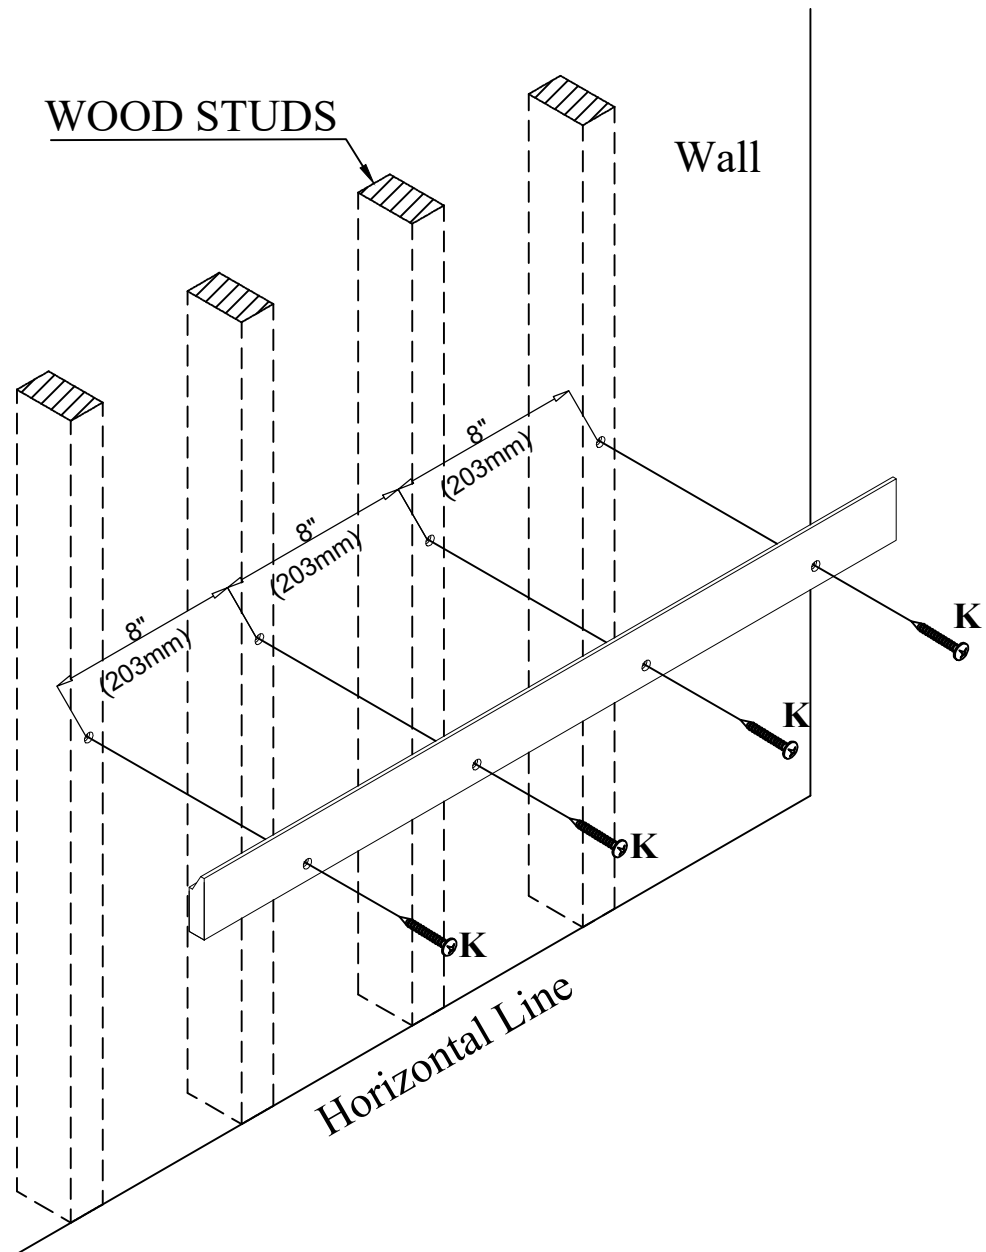K**4PCS**

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.



The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.




Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.

STEP: 13

Option: 2

K	L
	
4PCS	4PCS

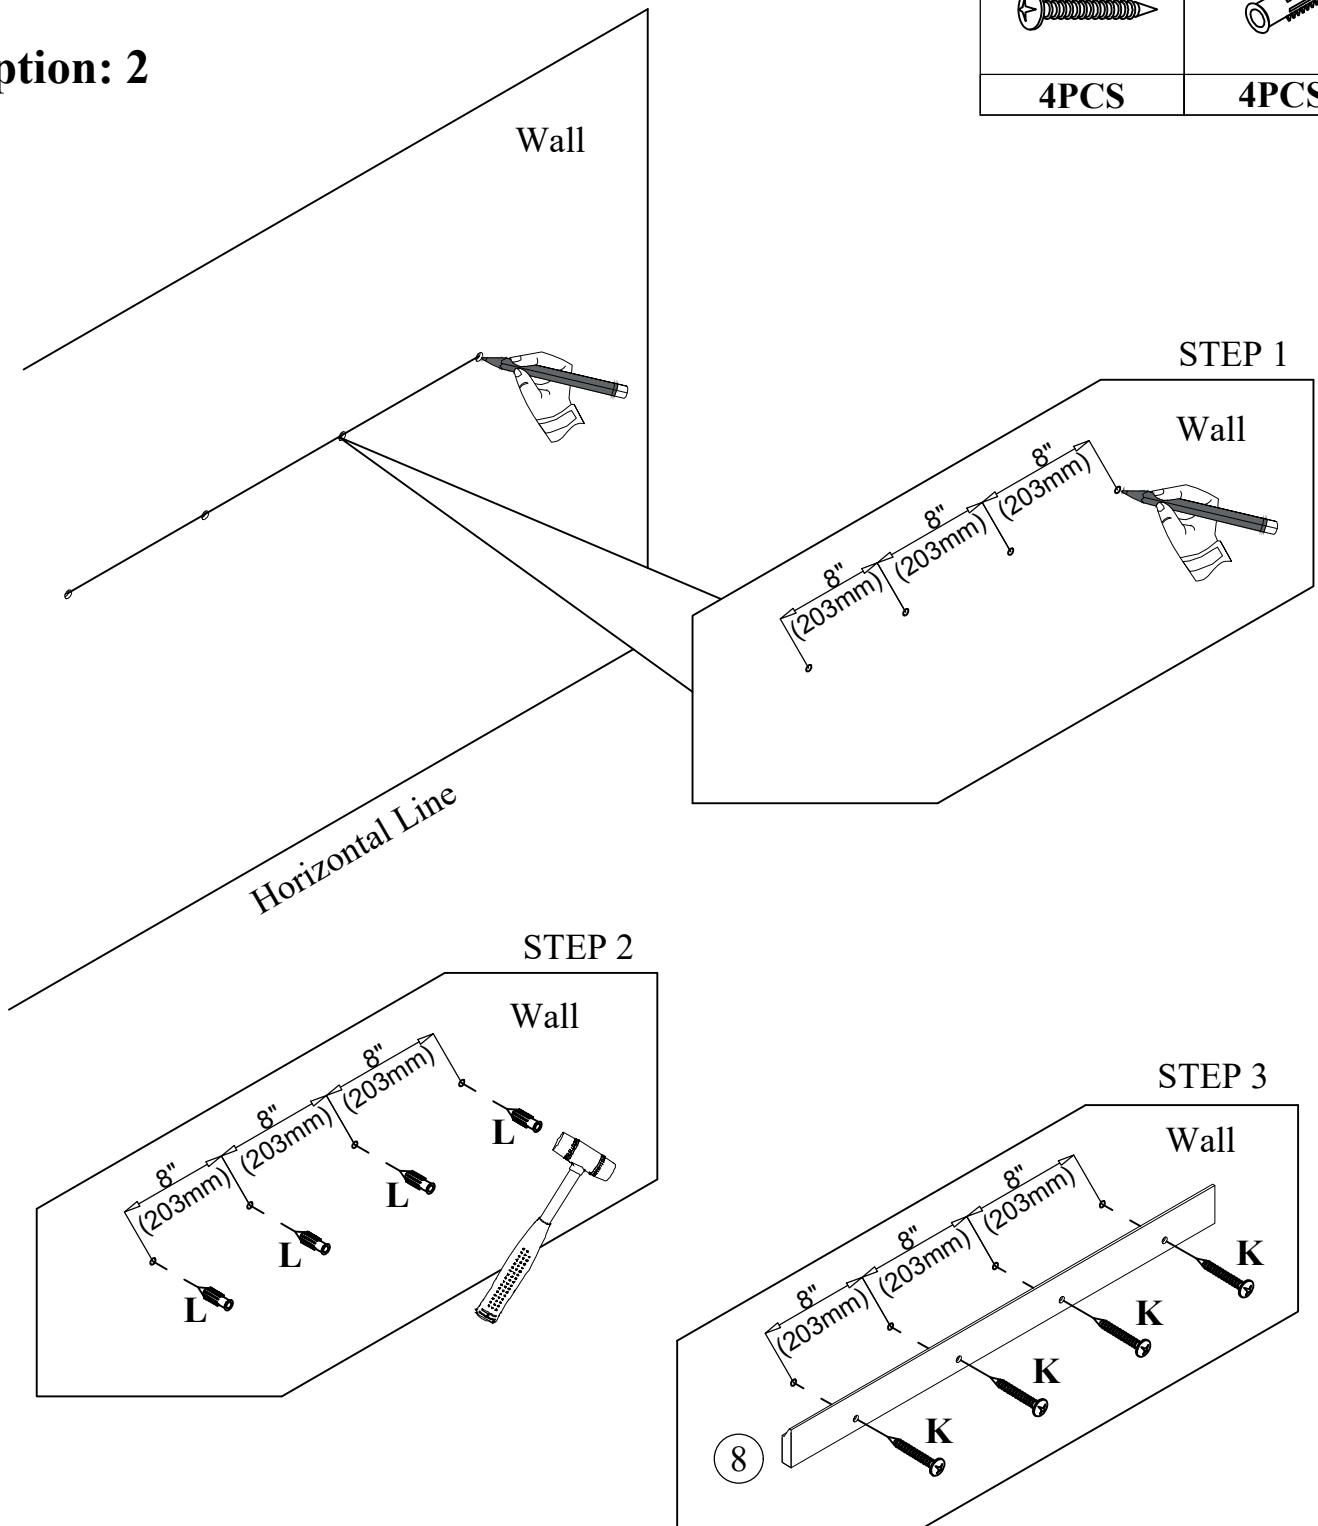

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.




The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.





Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.

STEP: 14


Wall

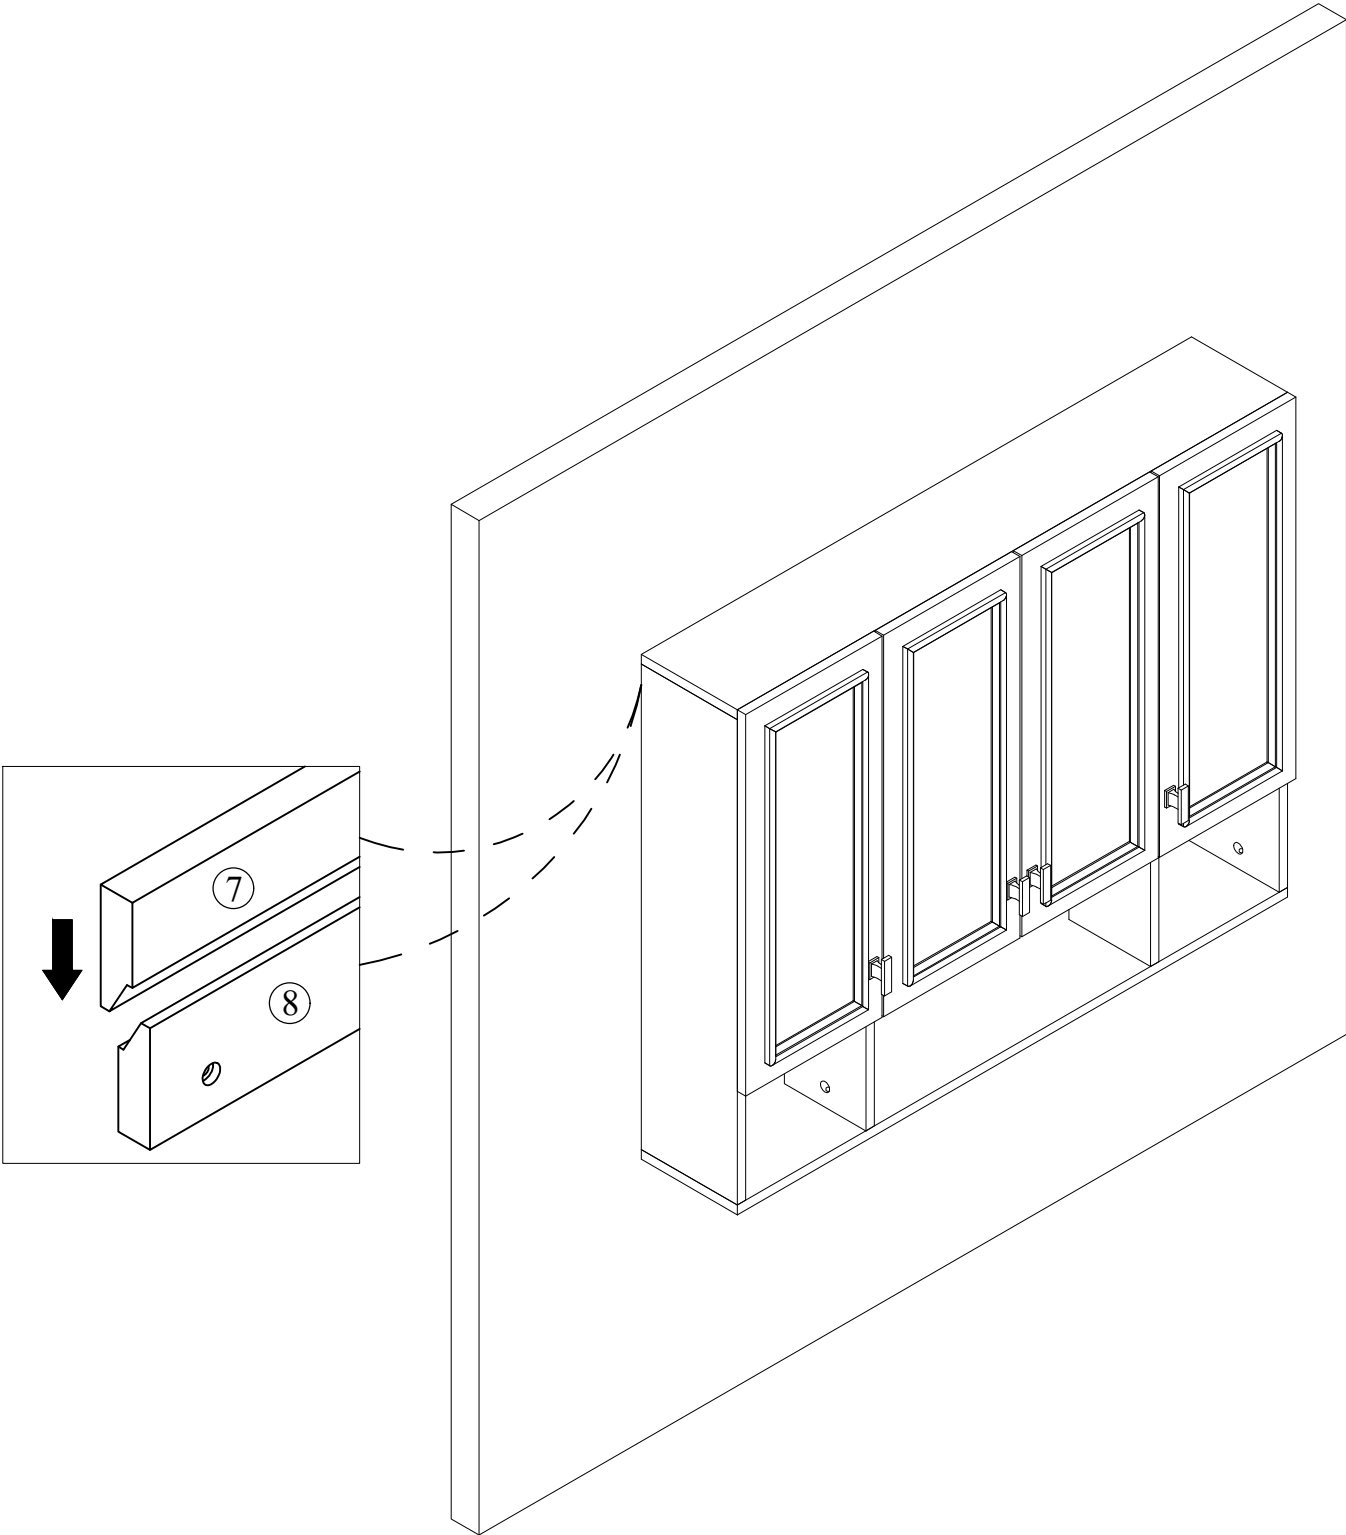

STEP: 15

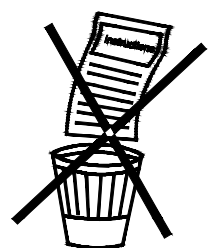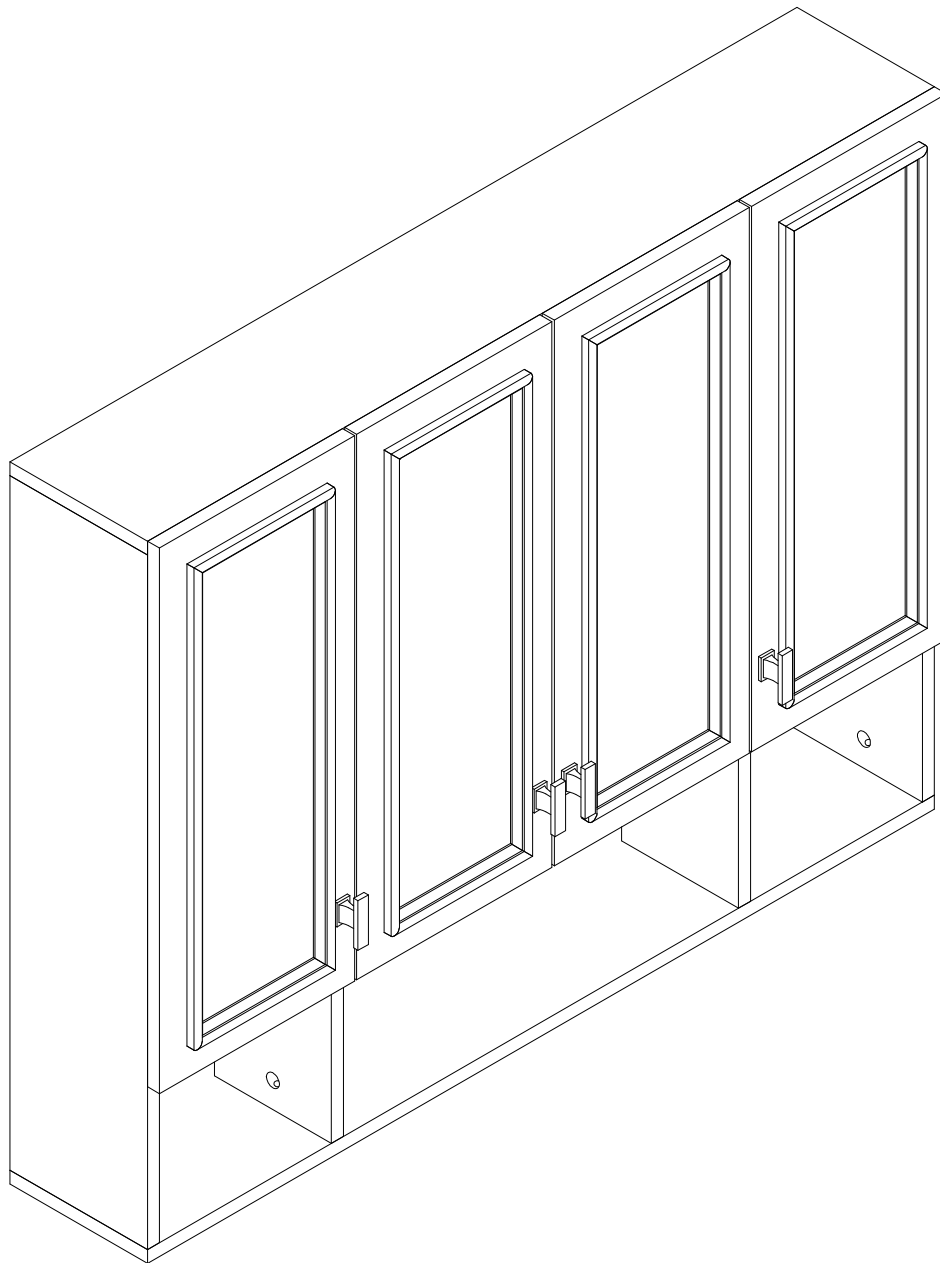


HINGE ADJUSTMENTS

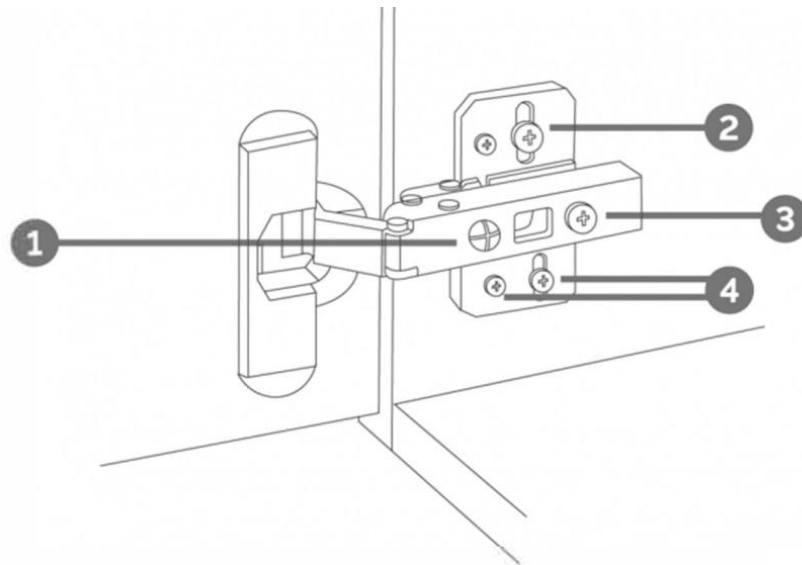


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

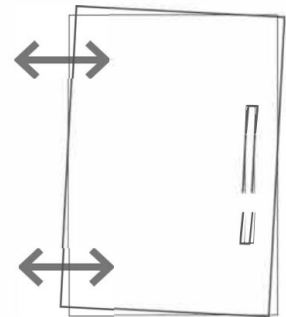

2 4 Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

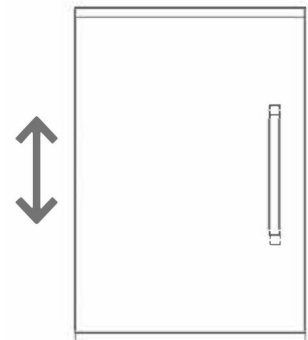

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

