


1 1/2 IN. X 12 IN. PIPE LEGS

NEED HELP OR ADVICE ON PUTTING THIS KIT TOGETHER? MISSING PIECES?
CONTACT US.

2 PACK

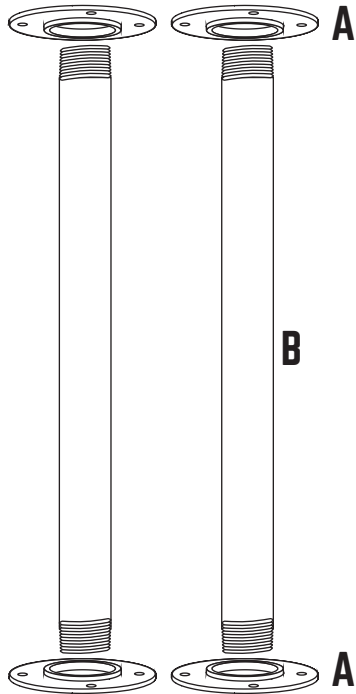

PARTS LIST

A- 1 1/2 IN. FLANGES (4)
B- 1 1/2 IN. 12 IN. PIPE LEGS (2)


INCLUDED
3/4 IN. SCREWS (8)

This kit is made of industrial grade authentic pipe. It is coated in oil post production to prevent rust. The kit should be cleaned and sealed to prevent rusting. See Clean and Seal sheet for more information on cleaning and sealing your pipe kit.

INSTALLATION INTO WOOD

1. Put barn door handle together as shown above.
2. Screw in 1 screw then level/straighten as needed.
3. Screw in the remaining screws to secure handle to wood.

RECOMMENDED TOOLS

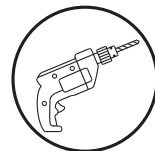

**RECOMMENDED
DRILL FOR
INSTALLATION**