




Installation instructions

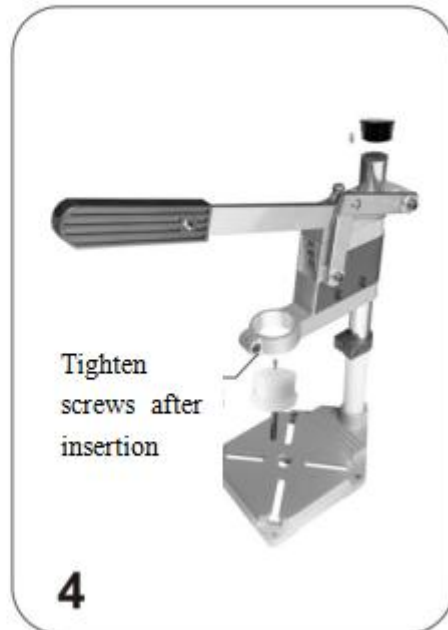

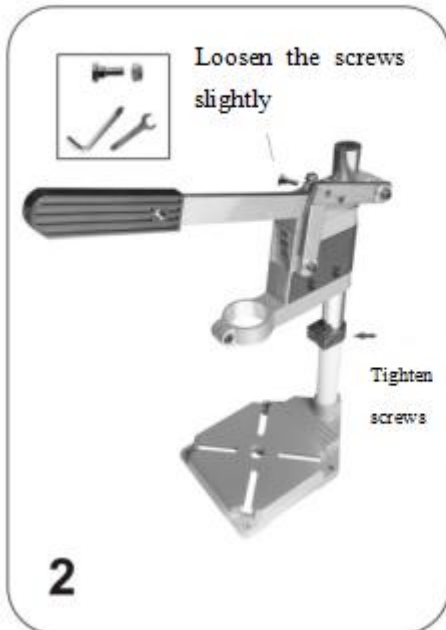

For carton, lubricate it with edible oil or white oil.

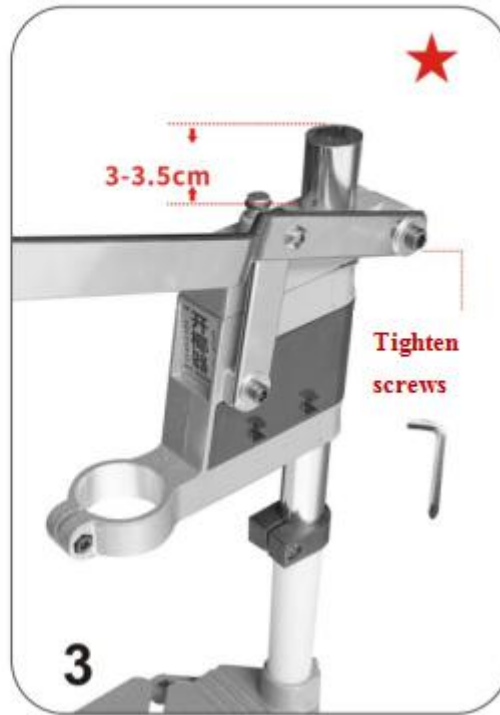

After use, use disposable chopsticks to poke the coconut residue down to prevent blocking.