


Note:

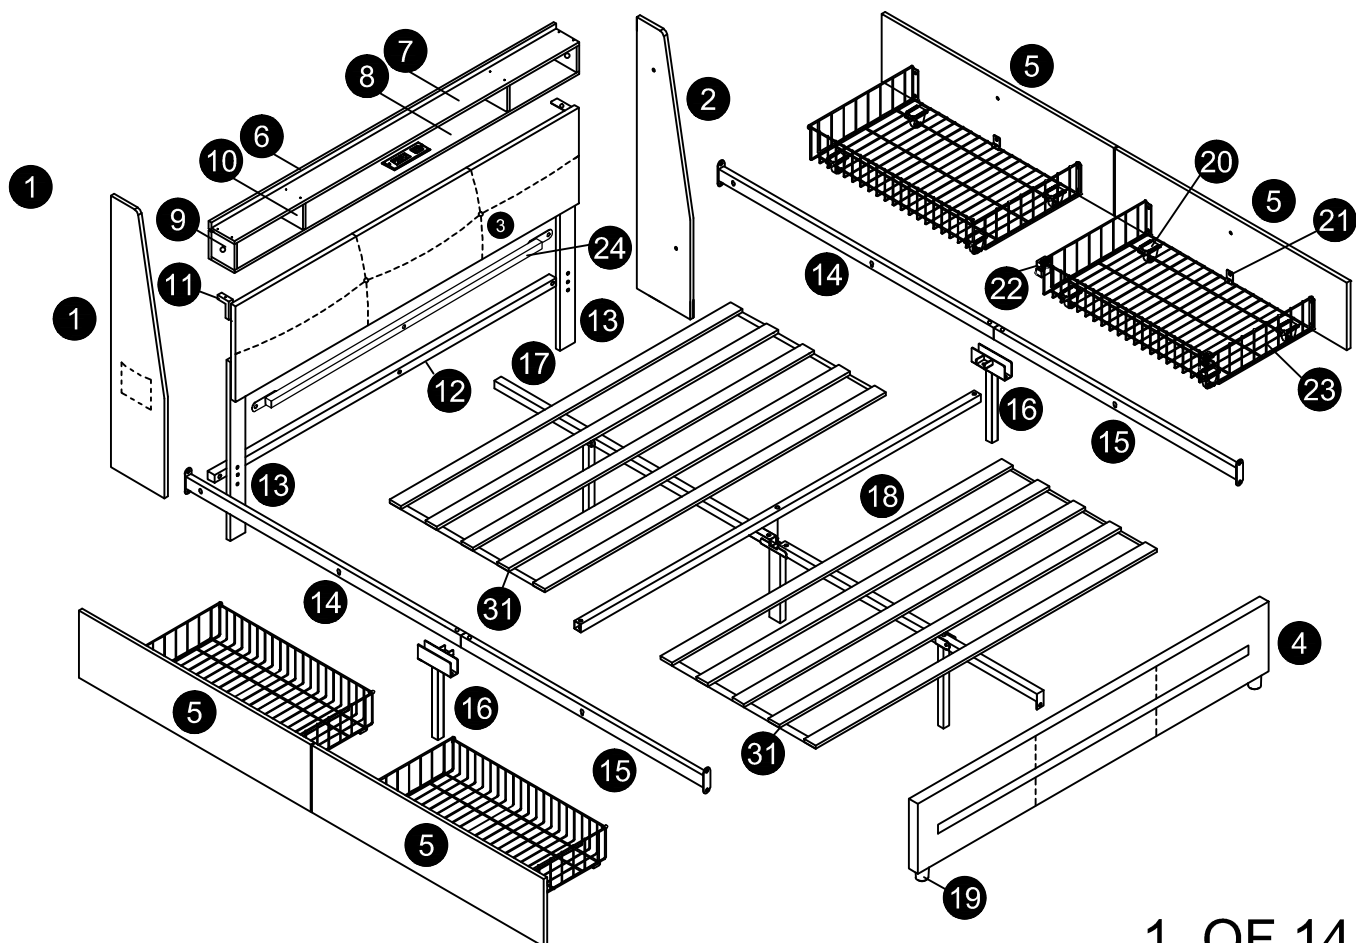












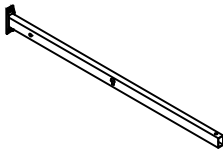
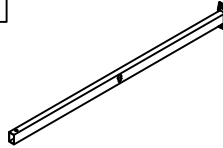

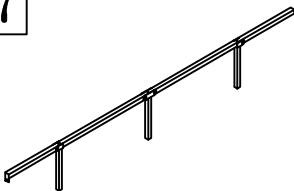
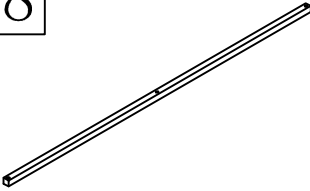

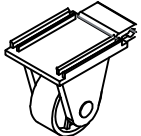


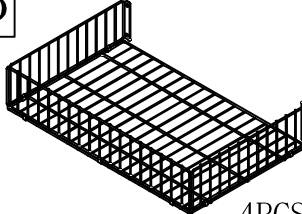





Should be assembled on flat ground to keep balance.

It needs at least two people to install.



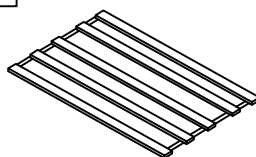

Before starting the assembly, you must read the whole manual and follow the instructions.



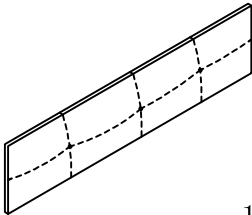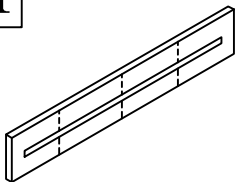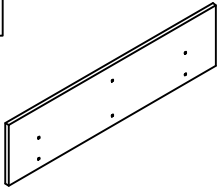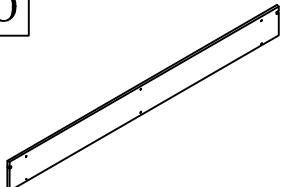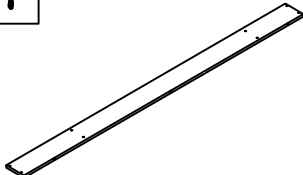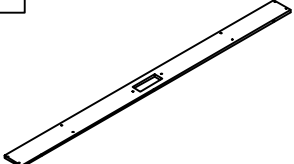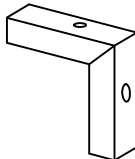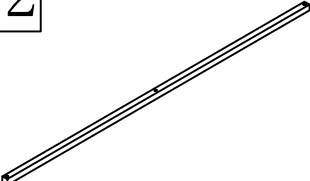

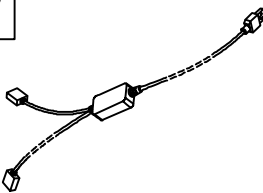



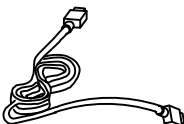




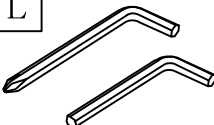
Part list

1  1PC	2  1PC	3  1PC	4  1PC
5  4PCS	6  1PC	7  1PC	8  1PC
9  2PCS	10  2PCS	11  4PCS	12  1PC
13  2PCS	14  2PCS	15  2PCS	16  2PCS
17  1PC	18  1PC	19  2PCS	20  16PCS
21  4PCS	22  8PCS	23  4PCS	24  1PC
25  1PC	26  1PC	27  1PC	28  1PC



Part list


29		1PC	30		5PCS	31		2PCS	32		2PCS
----	---	-----	----	---	------	----	--	------	----	---	------

Hardware list


A	 M8*50mm 8PCS	B	 M8*35mm 13PCS	C	 M8*20mm 10PCS	D	 M8*25mm 2PCS	E	 M6*12mm 22PCS
F	 M6*20mm 4PCS	G	 M5*30mm 24PCS	H	 M4*12mm 3PCS	I	 M6*30mm 9PCS	J	 M4*65MM 1PC
K	 M3*65MM 1PC	L	 M5*65MM 2PCS						

Step1

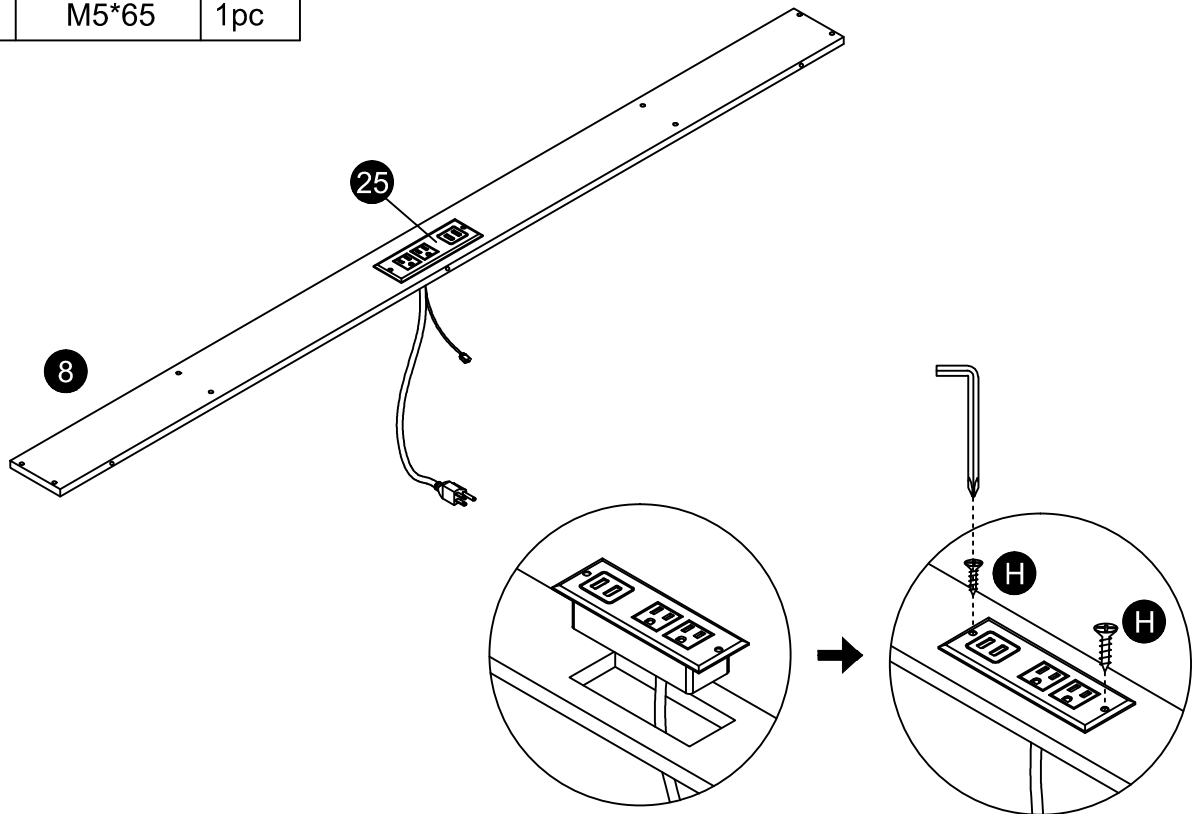

H		M4x12mm	2pcs
L		M5*65	1pc

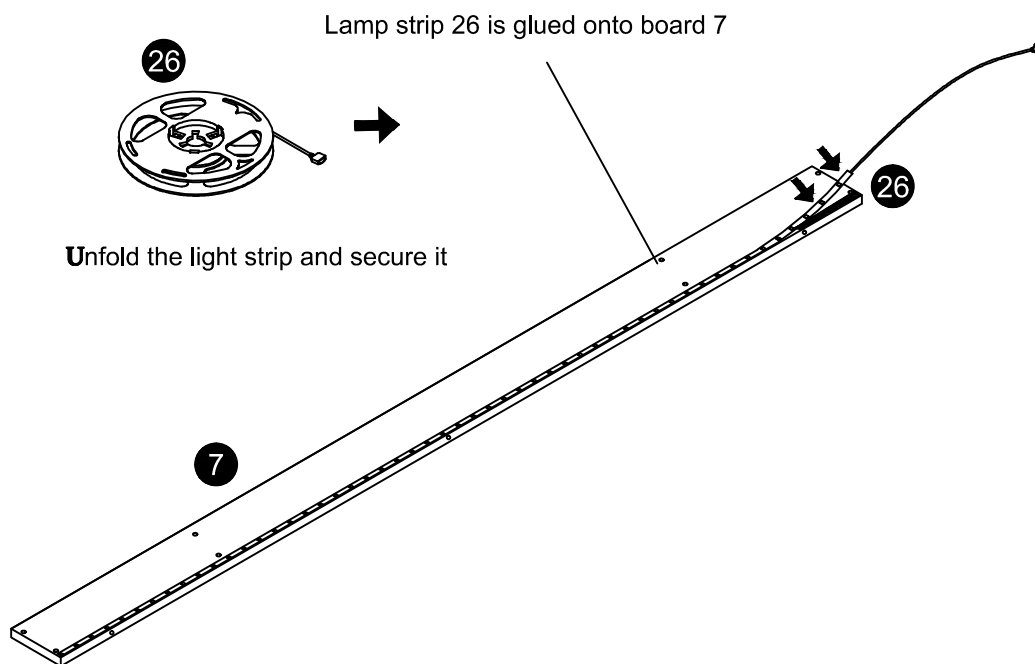



Step2





Step3


G		M5x30mm	16pcs
K		S3	1pc

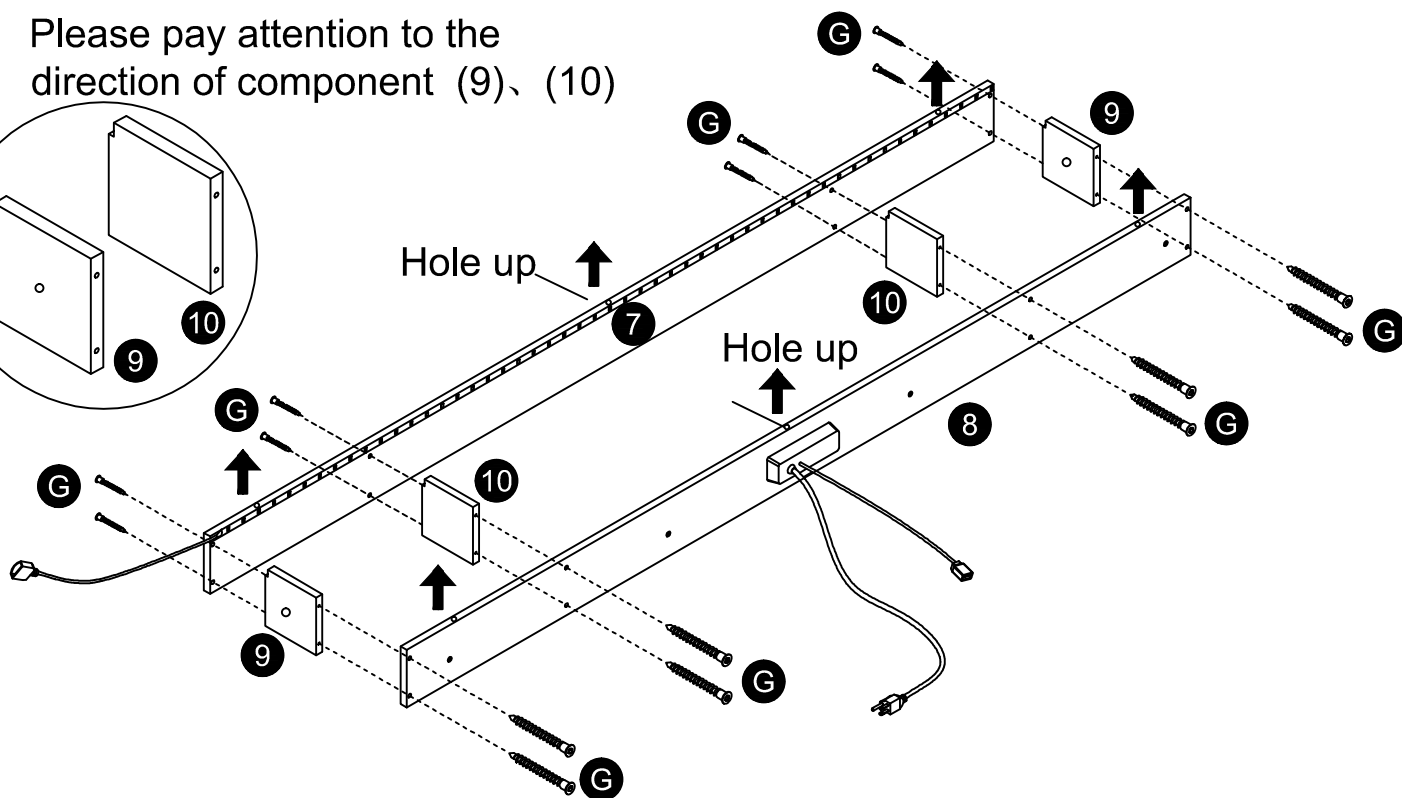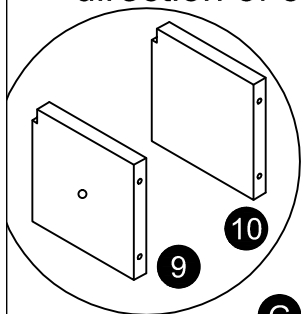Please pay attention to the direction of component (9)、(10)






Step4

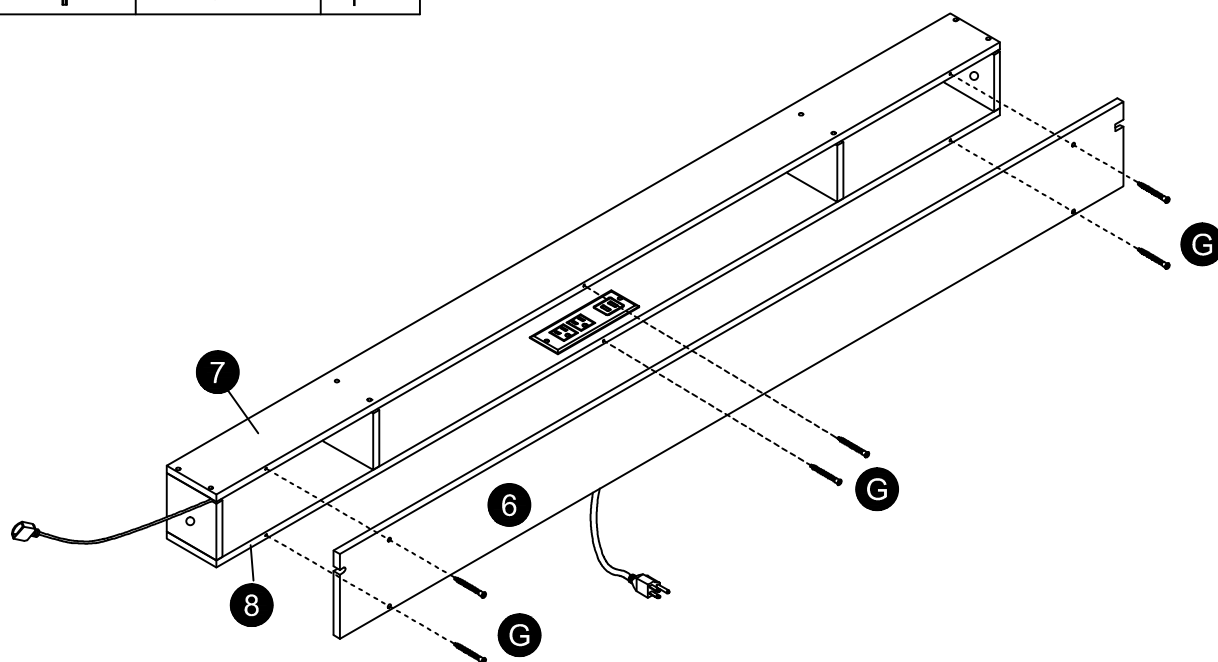G		M5x30mm	6pcs
K		S3	1pc






Step5

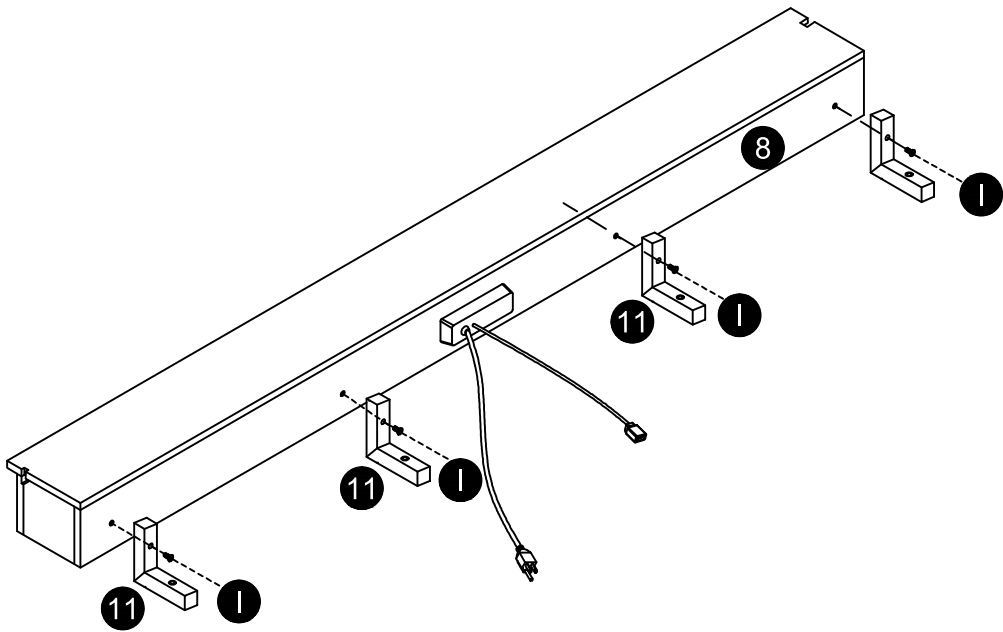I		M6x30mm	4pcs
J		M4x65mm	1pc







Step6

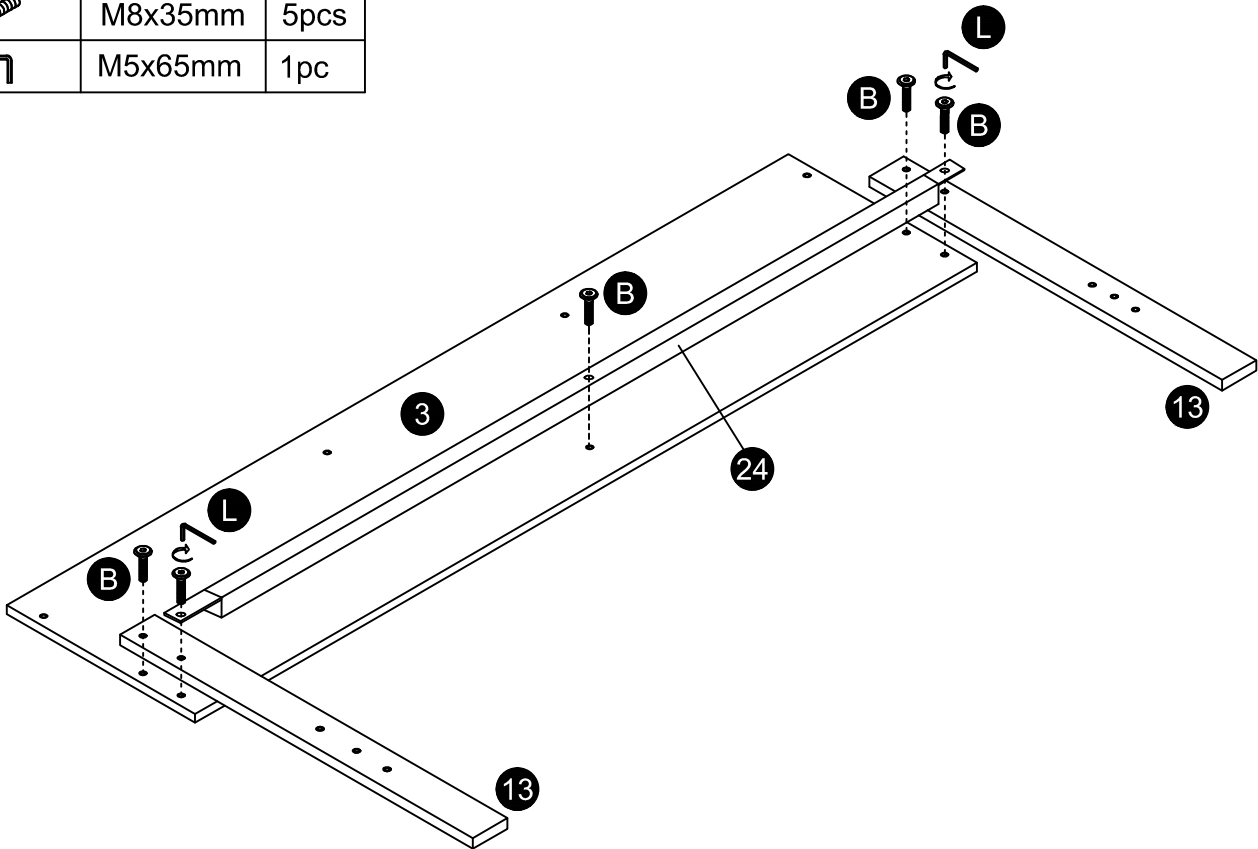B		M8x35mm	5pcs
L		M5x65mm	1pc






Step7

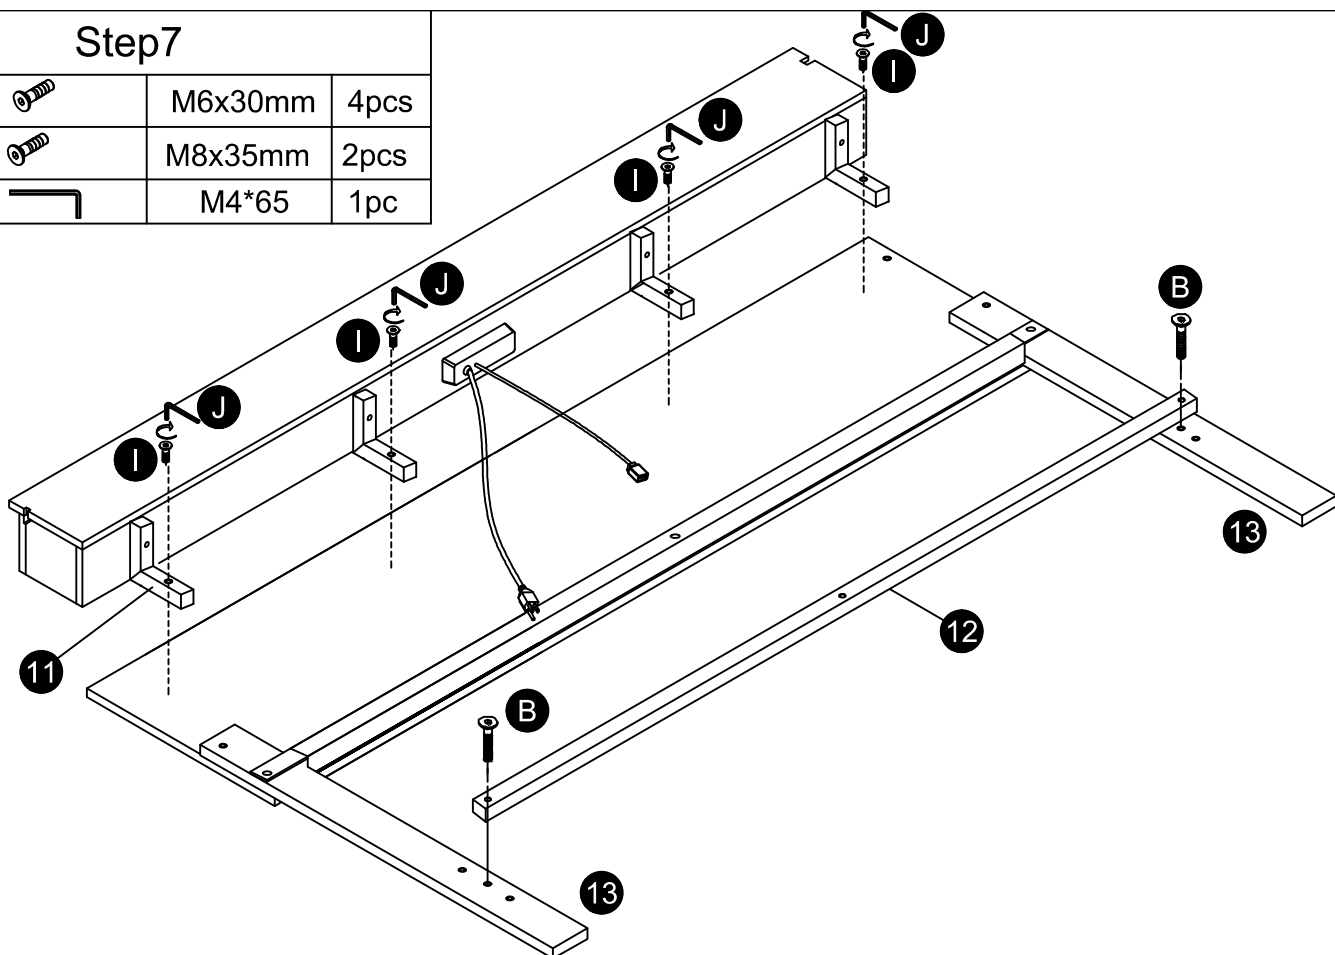I		M6x30mm	4pcs
B		M8x35mm	2pcs
J		M4*65	1pc




Step8

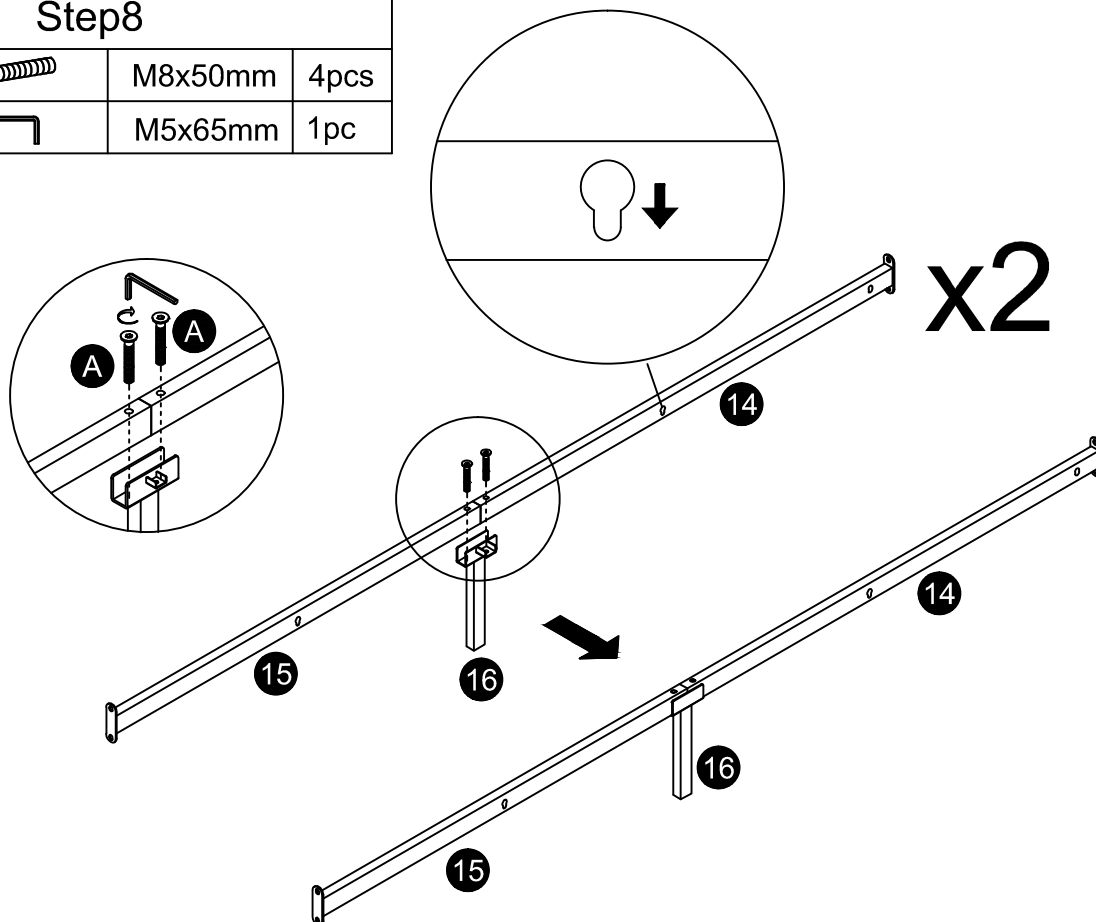


A		M8x50mm	4pcs
L		M5x65mm	1pc

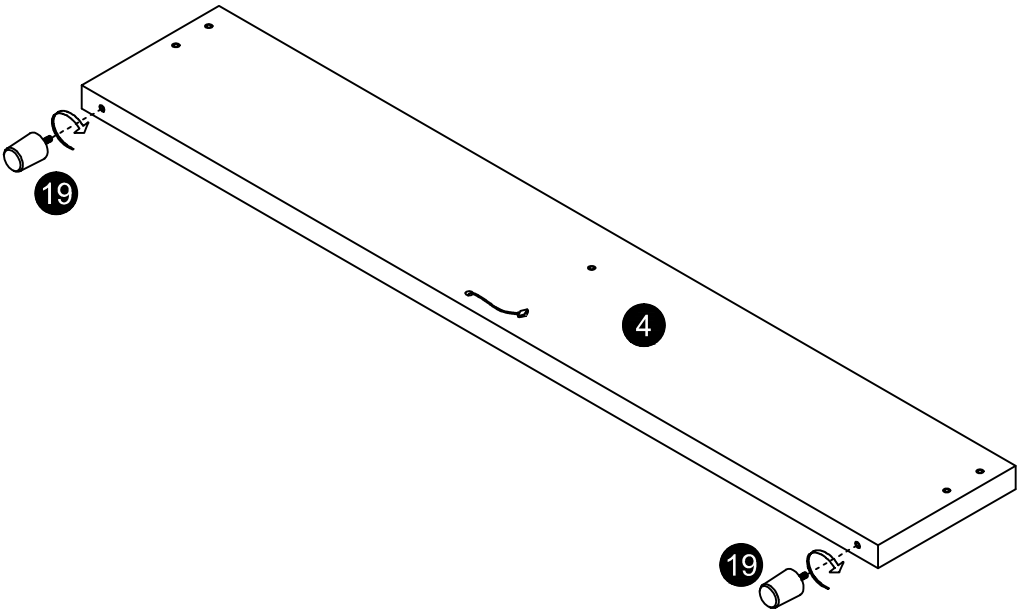


Step9






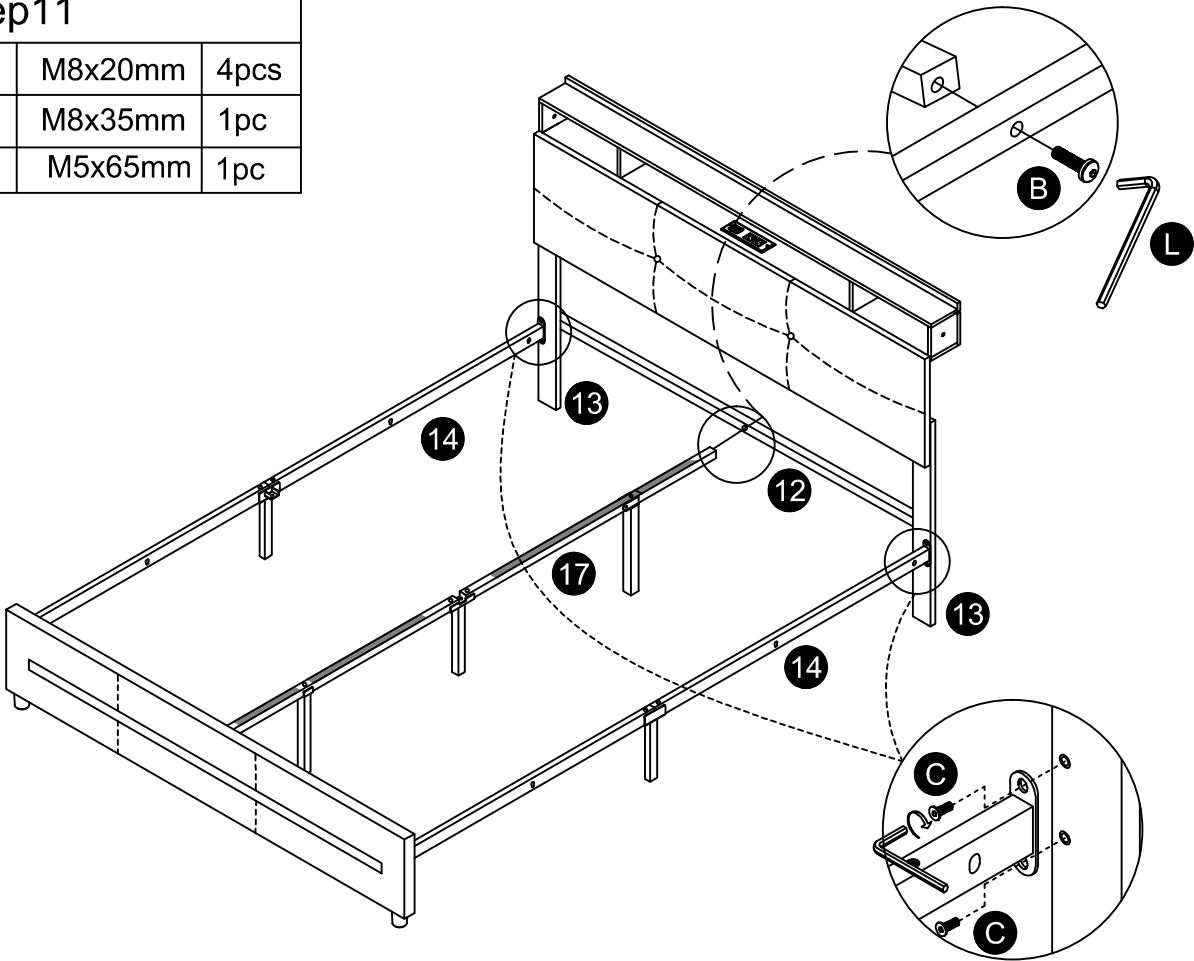
Step10

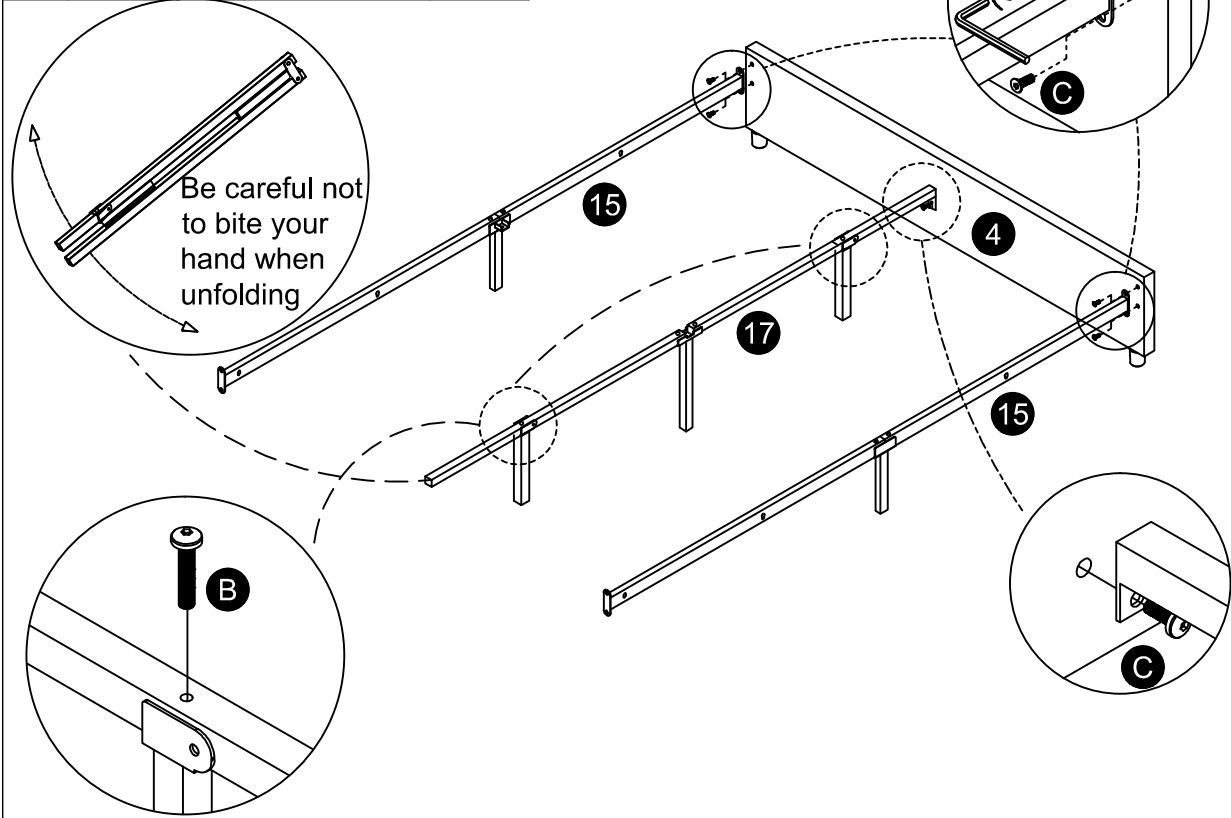C		M8x20mm	5pcs
B		M8x35mm	2pcs
L		M5x65mm	1pc






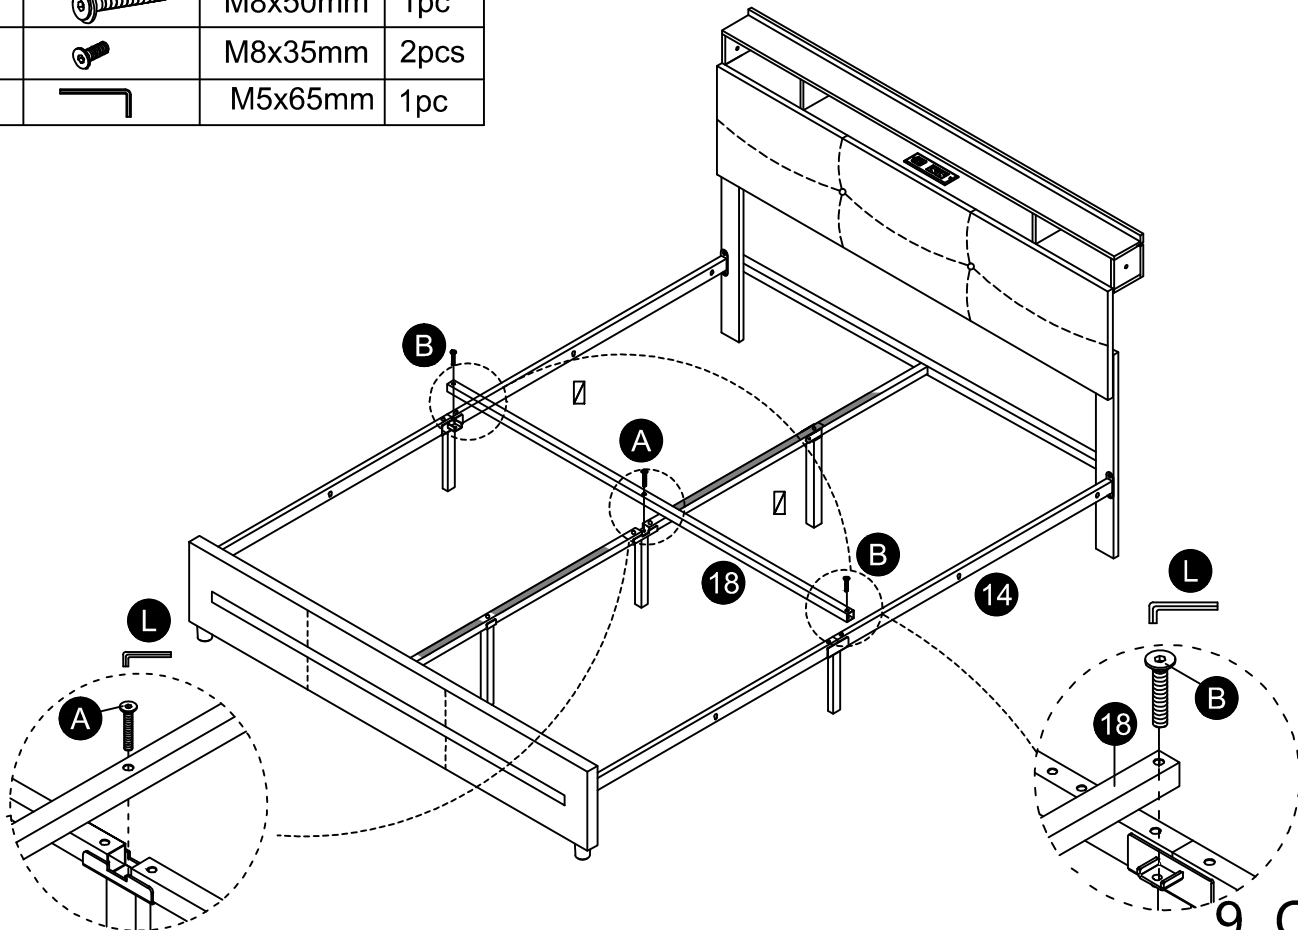
Step11

C		M8x20mm	4pcs
B		M8x35mm	1pc
L		M5x65mm	1pc






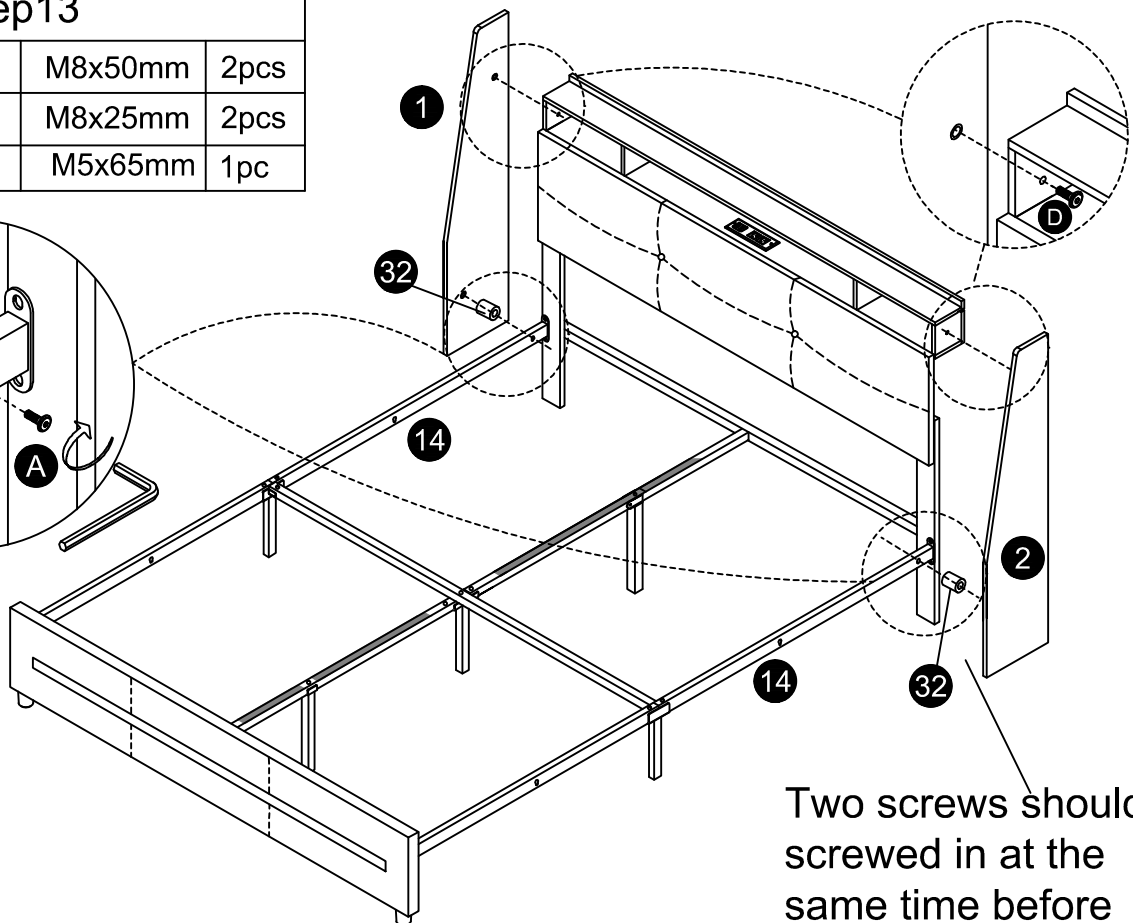
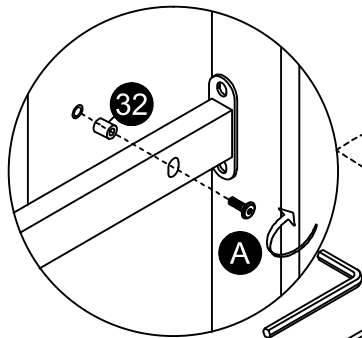
Step12

A		M8x50mm	1pc
B		M8x35mm	2pcs
L		M5x65mm	1pc




Step13

A		M8x50mm	2pcs
D		M8x25mm	2pcs
L		M5x65mm	1pc




Two screws should be screwed in at the same time before tightening

Step14

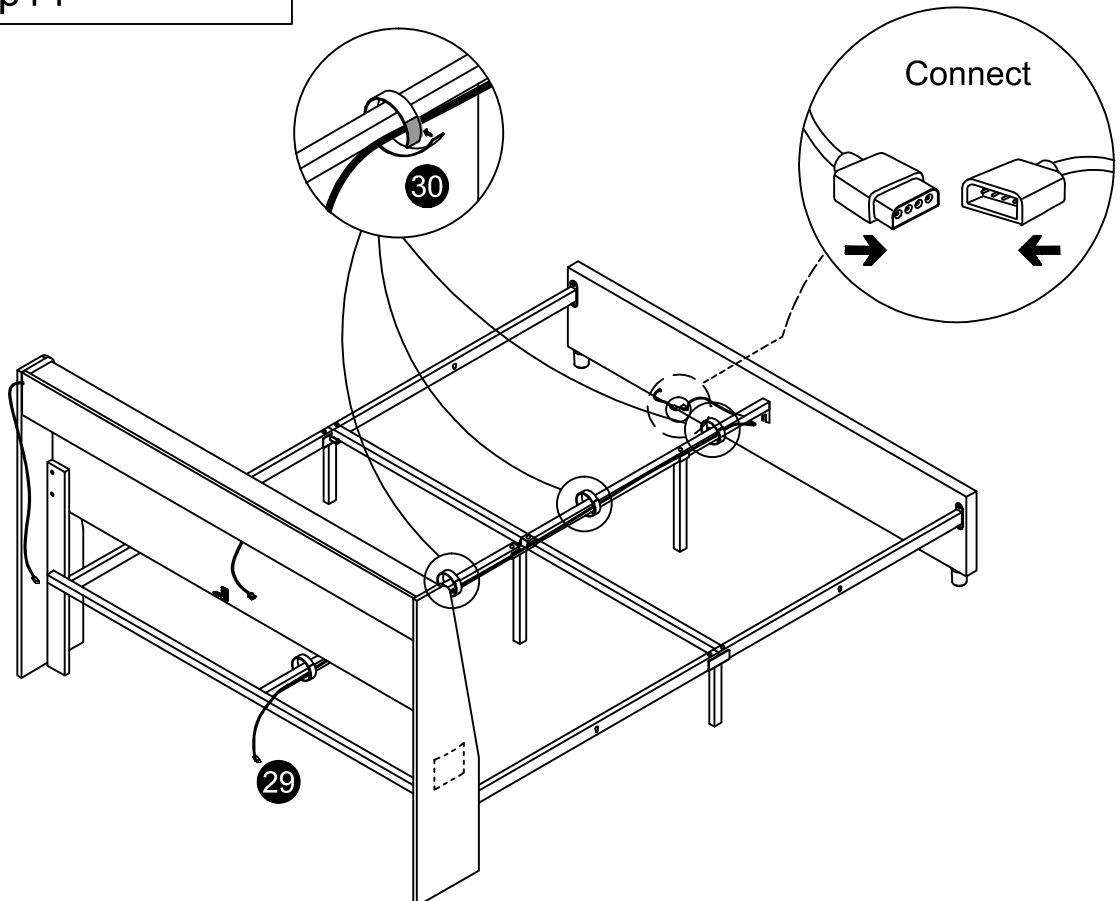


Step15

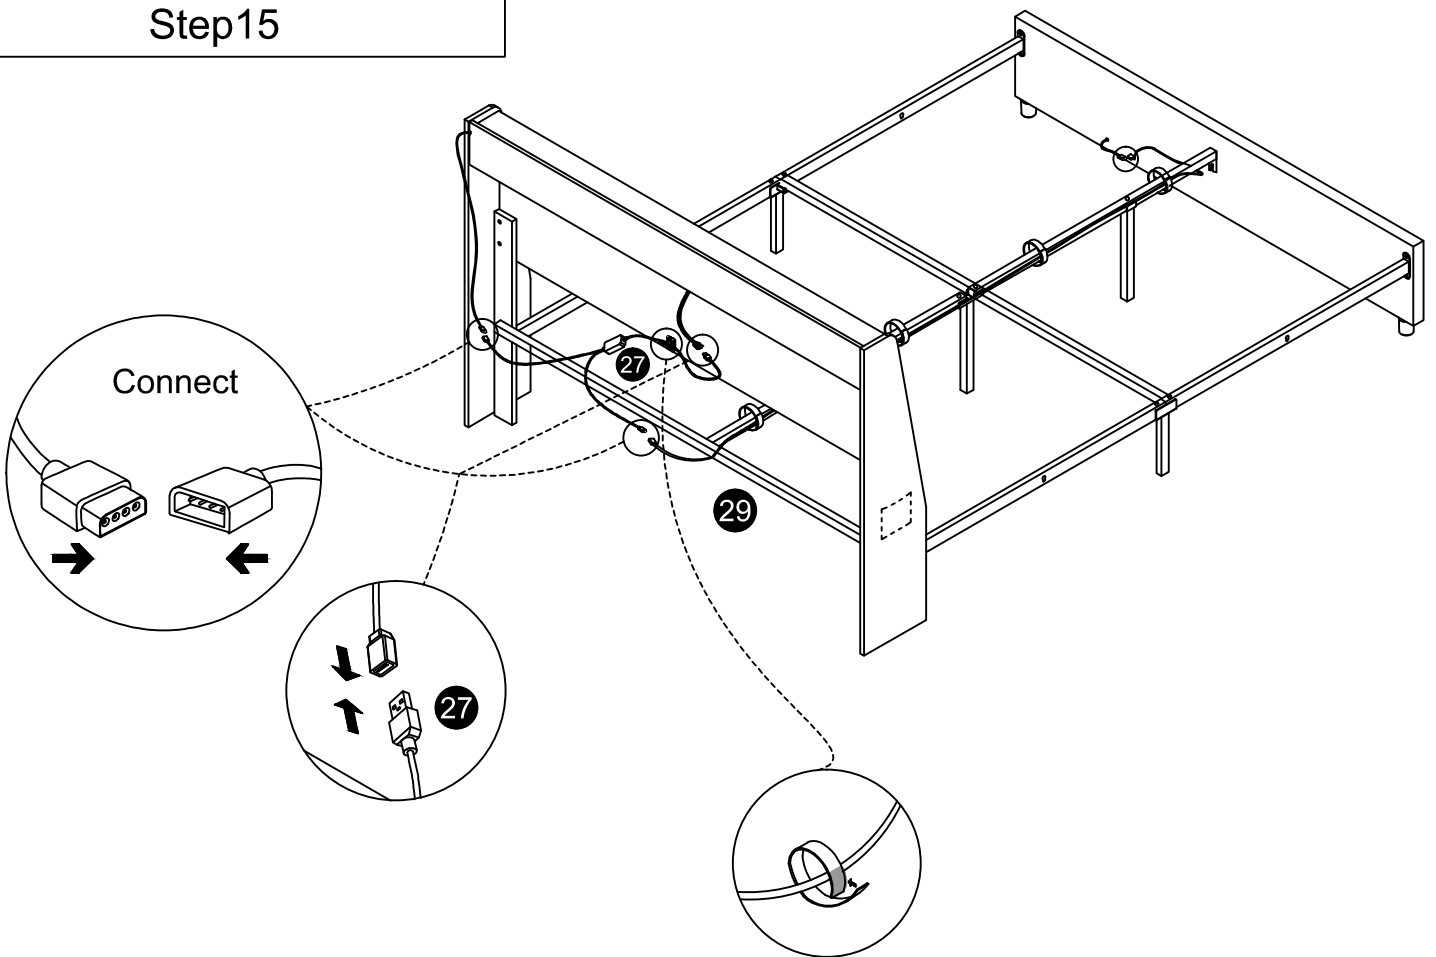


1. From the inside of the foot to the back, the magic band is tied all the way. Please tie the wires with magic tape

2. After all wires are connected, except for the large power plug that must be connected to the power supply, other wires can be folded and tied into the large magic tape on the back.


Step16

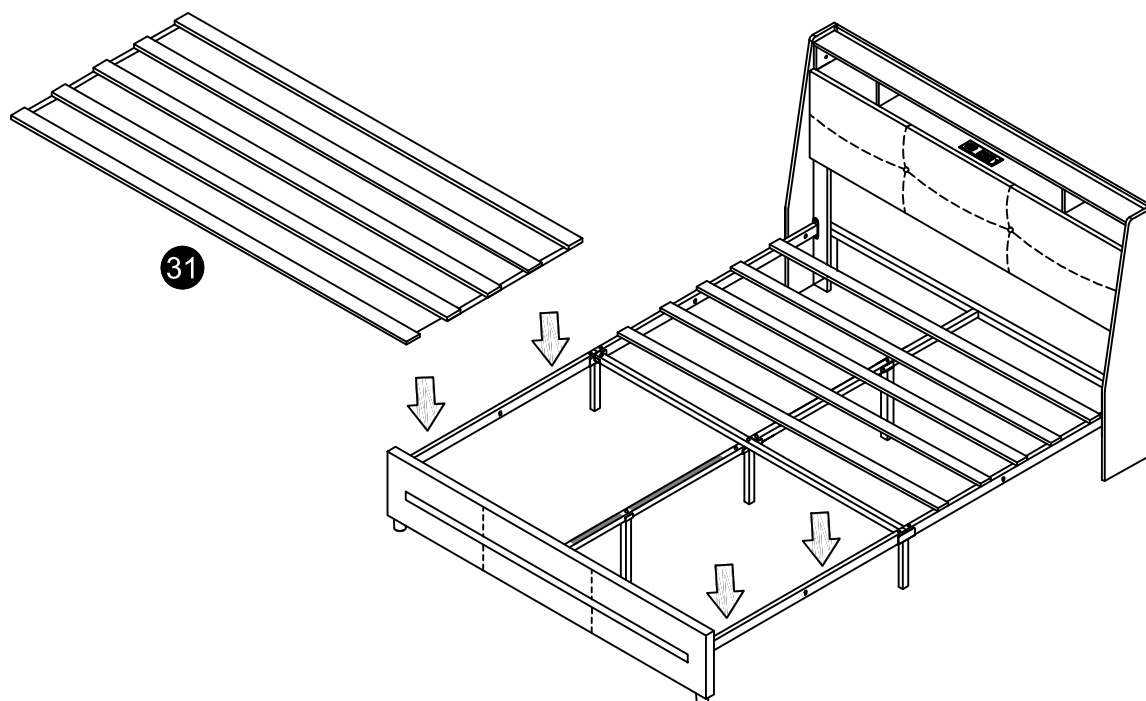


Step17

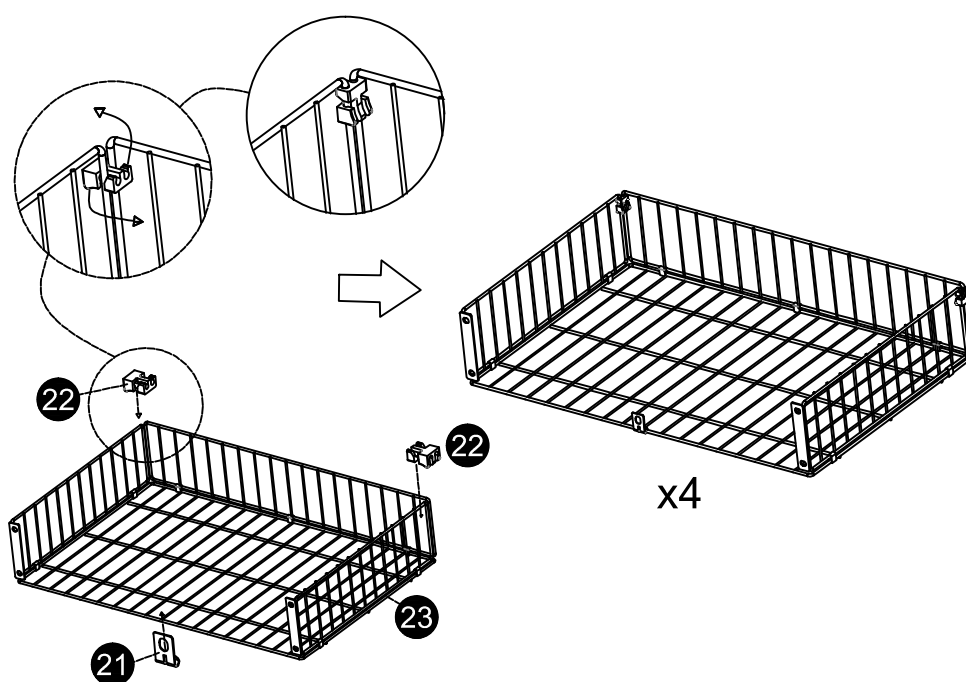



Step18

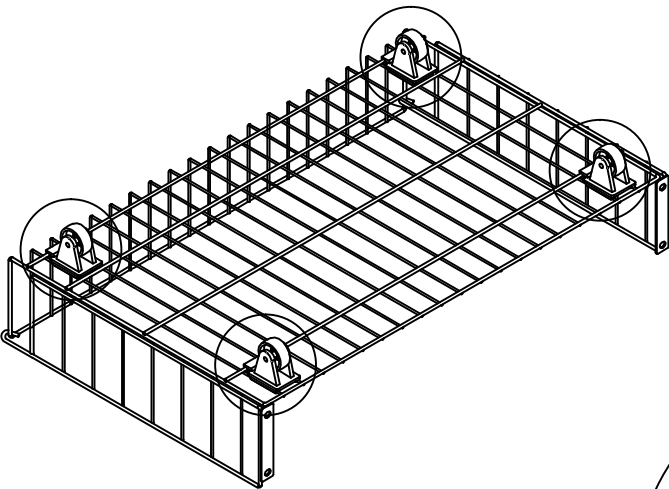


x4

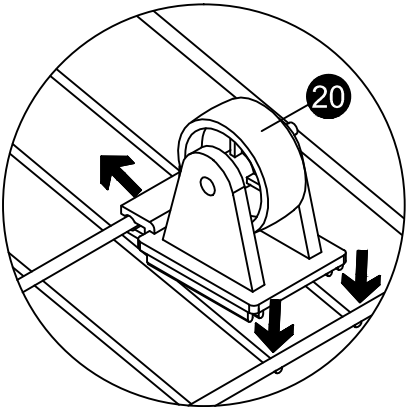




Step19

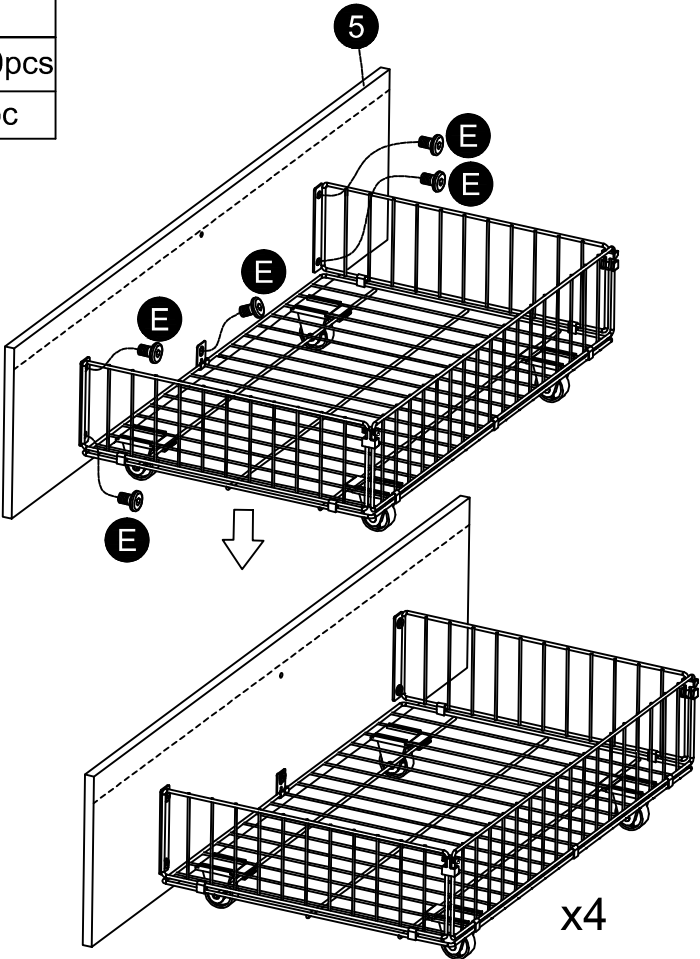E		M6x12mm	20pcs
J		M4x65mm	1pc





Step20

F		M6x20mm	4pcs
J		M4x65mm	1pc

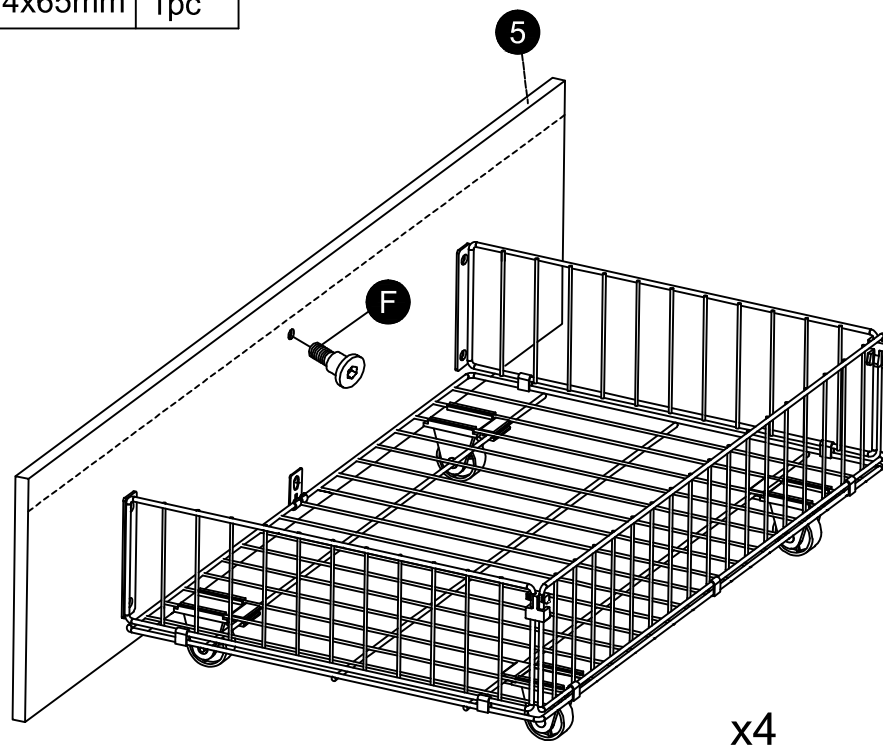

Step21

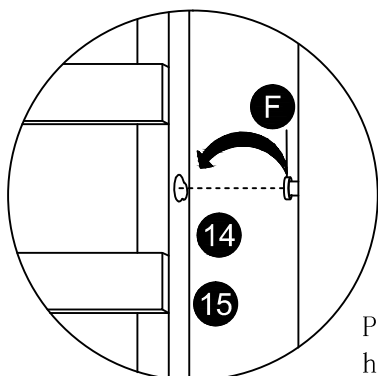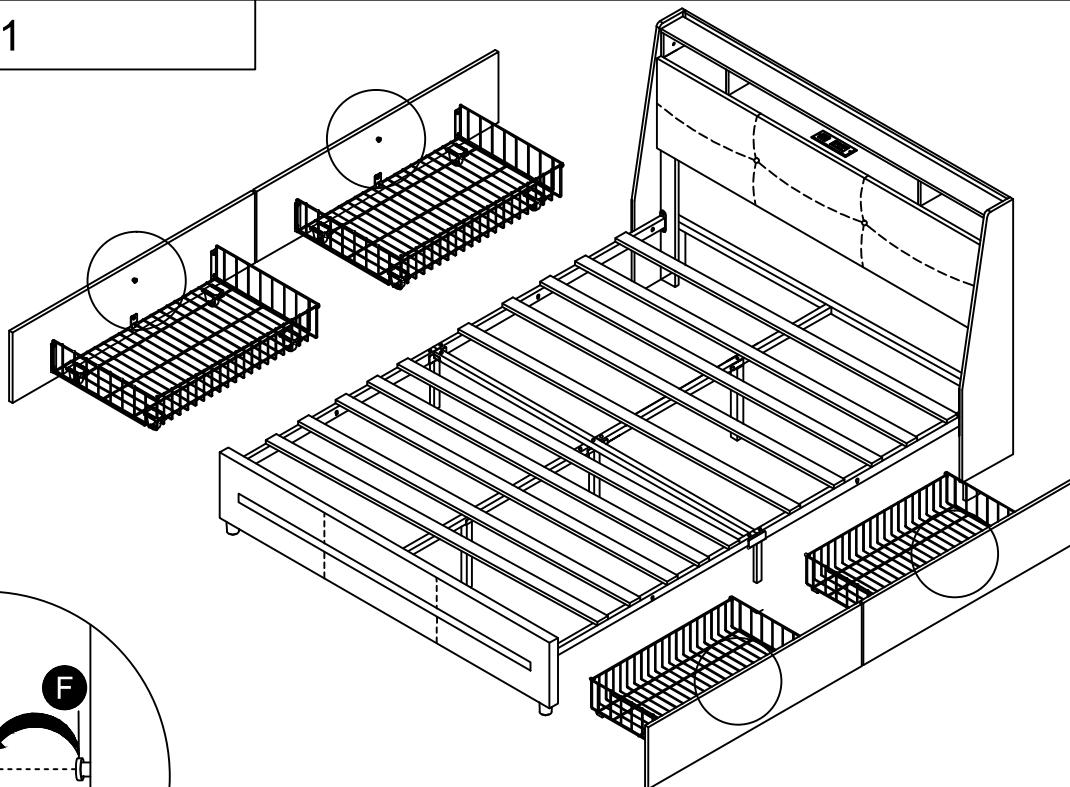

Please hang component (F) in the hole of component (14) (15)