



ASSEMBLY INSTRUCTION

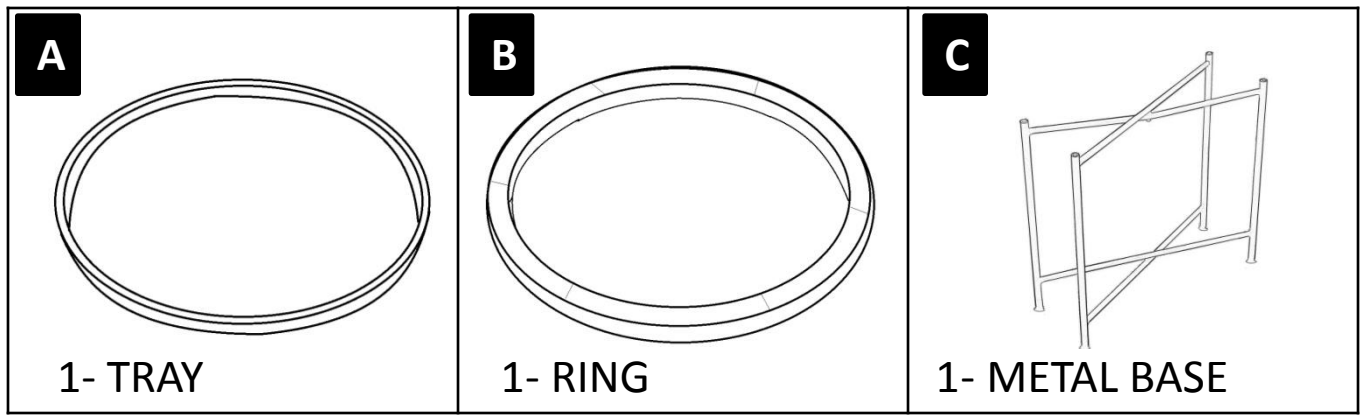

1. KEEP THE RING UPSIDE DOWN AND FIT THE METAL BASE IN THE 4 HOLES

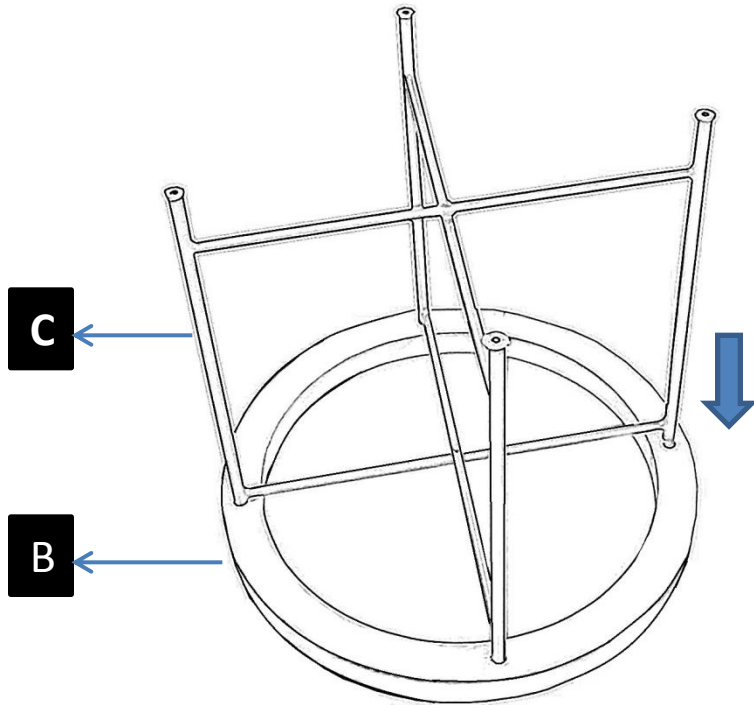

2. KEEP THE PIECE IN UPRIGHT POSITION & PLACE THE TRAY.

