

## Hardware and Tools BOLT 0.39" x 3.15" Ø 10mm x 80mm A Qty: 08 WASHER 0.39" x 0.91' x 0.08" Ø 10mm x 23mm x 2mm B Qty: 08

OPEN WRENCH K17

01

## **Before Starting:**

С


Qty:

- Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Always read the instructions carefully before beginning assembly to ensure that you have all required contents.
- 3. To prevent choking hazards, keep the packaging material out of reach of small children
- 4. Do not over tighten the bolts as this may damage the thread.
- 5. Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.
- 6. The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.


## **Assembly Instructions**

ASSEMBLY REQUIRES TWO PEOPLE



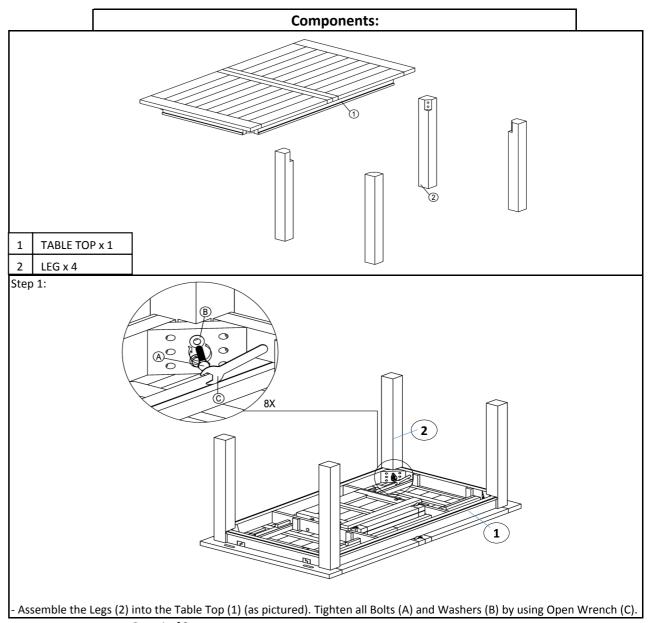

## **Assembly Instructions Continued**

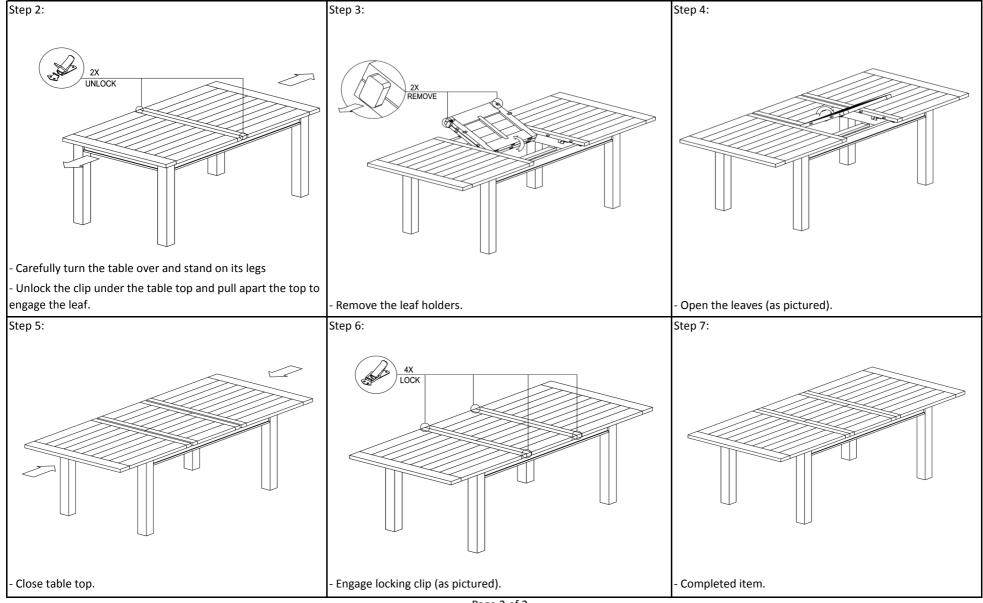

Page 2 of 2