
Homocentric Square Door Toilet Cabinet

Product ID. 7AY3W

Scan for Support
support@garvee.com

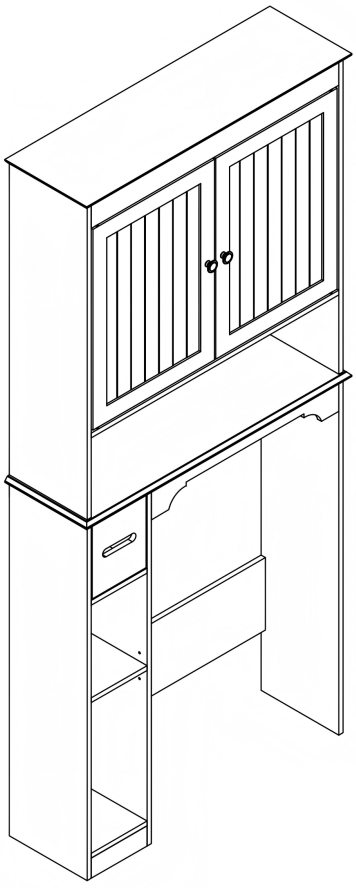


Distributed by
GARVEE.com


V260602B6W1


V:202511

























ASSEMBLY INSTRUCTIONS






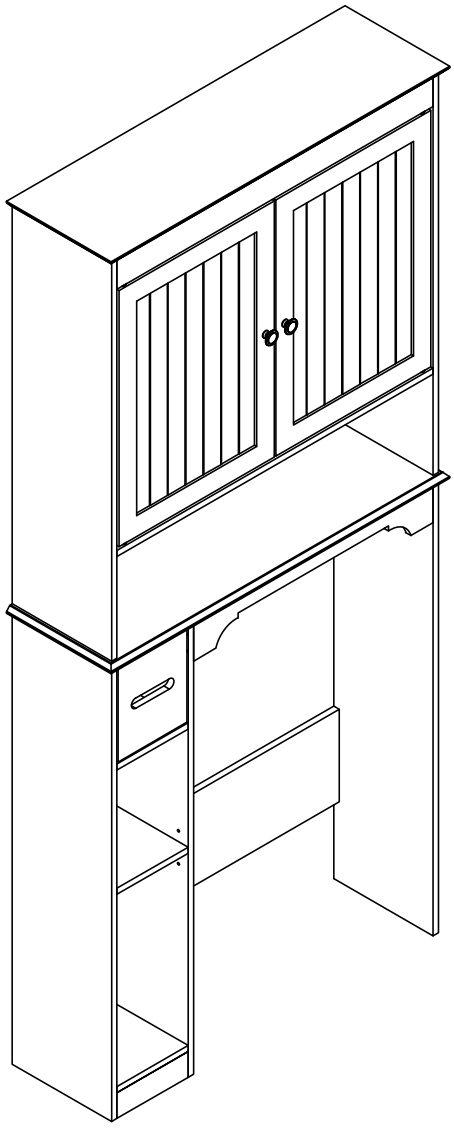


SKU:PHK_375T

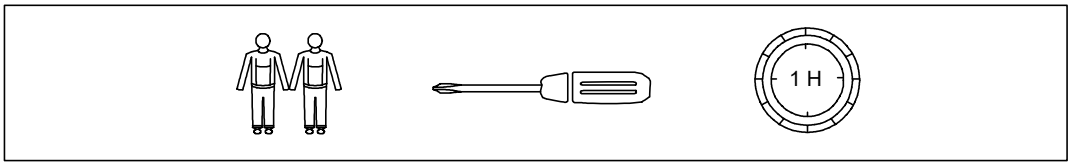


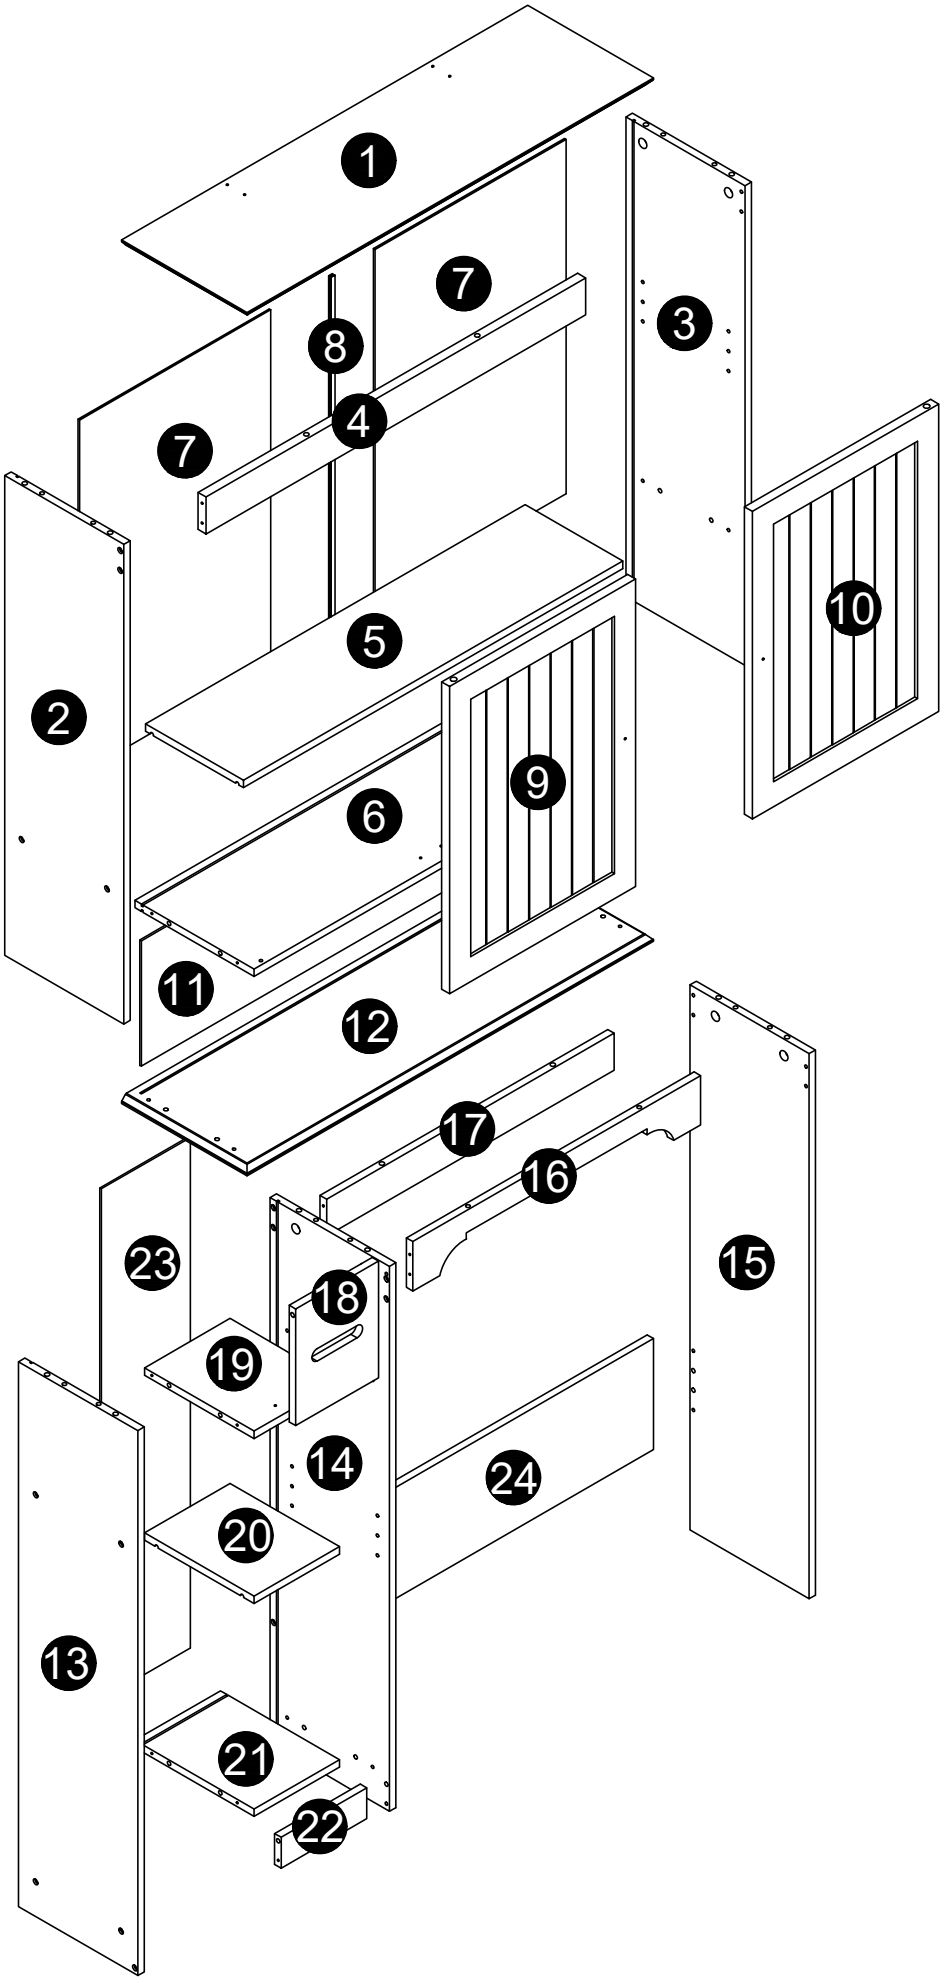
1
7
3
8
4
7
10
2
5
9
6
11
12
17
16
15
23
18
19
14
24
20
13
21
22

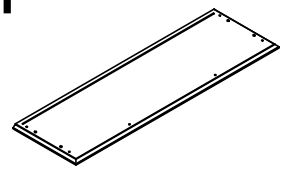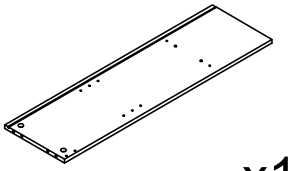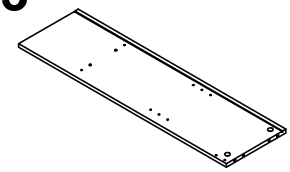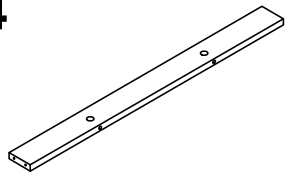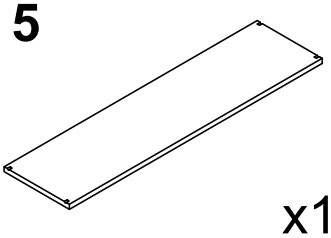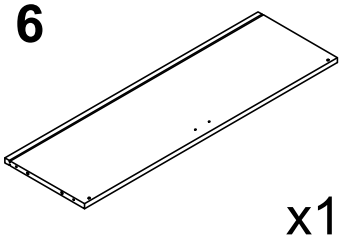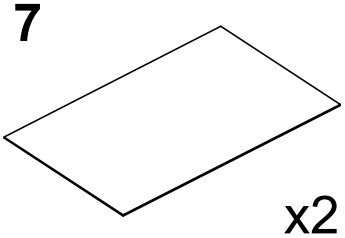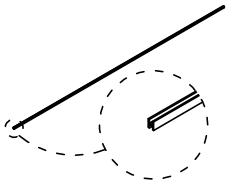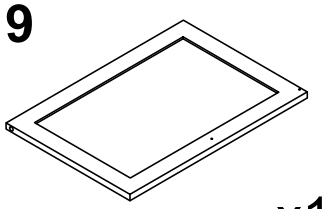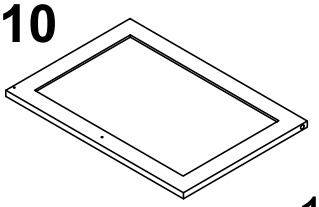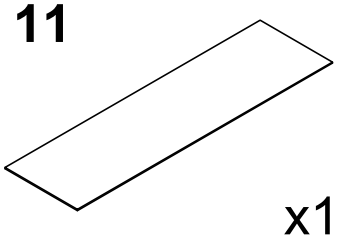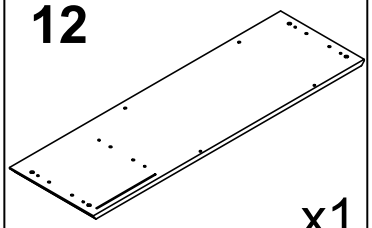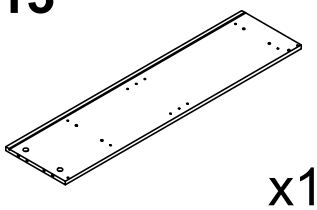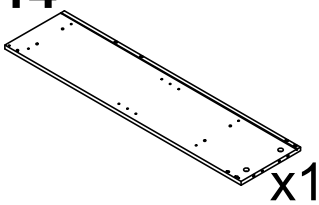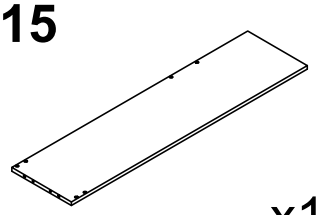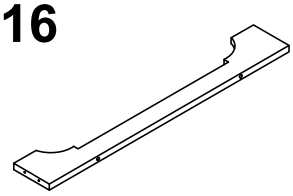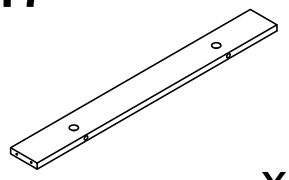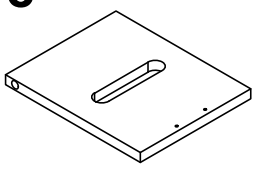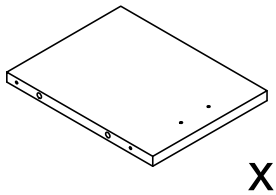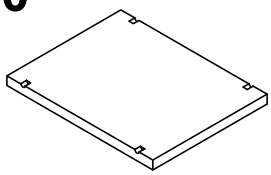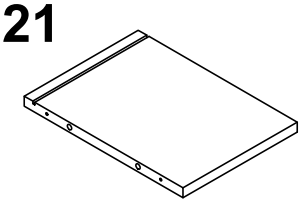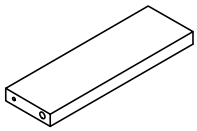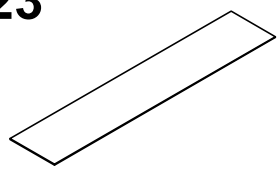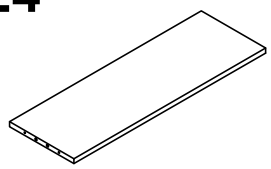1  x1	**2**  x1	**3**  x1	**4**  x1
5  x1	**6**  x1	**7**  x2	**8**  x1
9  x1	**10**  x1	**11**  x1	**12**  x1
13  x1	**14**  x1	**15**  x1	**16**  x1
17  x1	**18**  x1	**19**  x1	**20**  x1
21  x1	**22**  x1	**23**  x1	**24**  x1

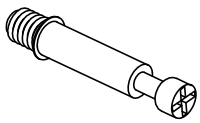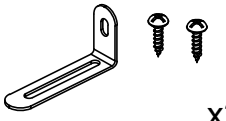
A 6x35mm  x14(+1)	**B** 15x10mm  x14(+1)	**C** 6x30mm  x34(+2)	**D** 6x35mm  x36(+3)	**E** 3.5x12mm  x4(+2)
F  x1	**G** 3x16mm G1 G2  x2	**H** 3x16mm H1 H2  x22(+2)	**I** 4x14mm I1 I2  x2	**J**  x8
K 18mm  x26(+2)	**L**  x6	**M**  x2	**N** 4x20mm N1 N2  x2	**O** 6x30mm  x2


Step 1

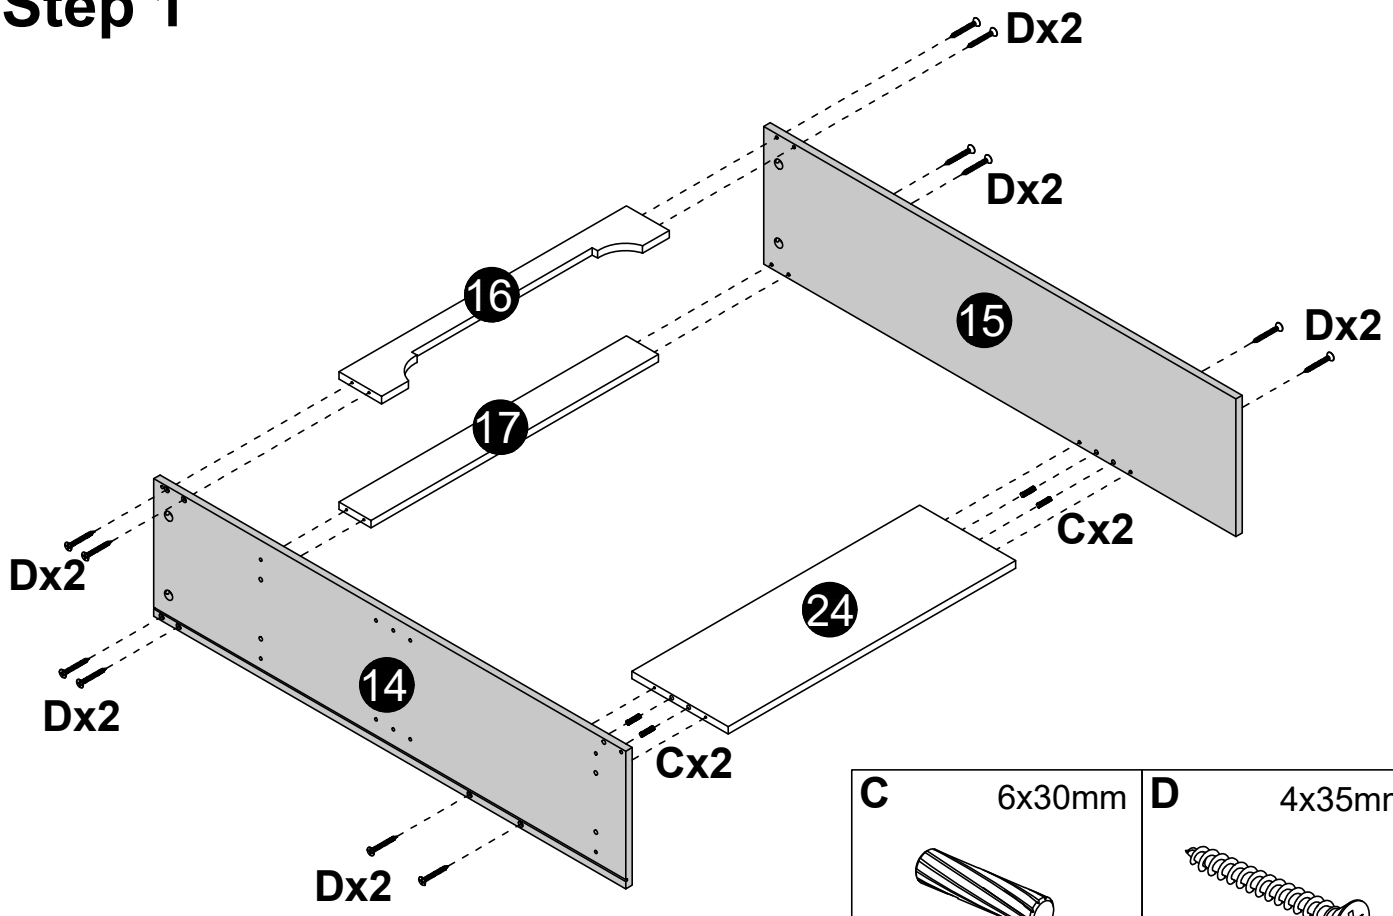


C	6x30mm	D	4x35mm
	x4		x12

Step 2

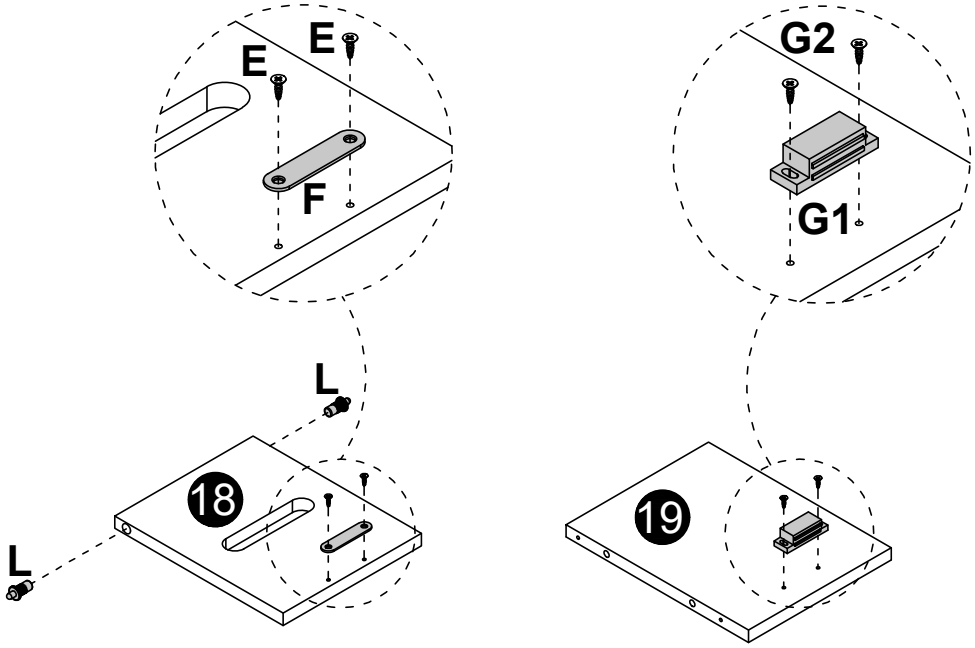


E	3.5x12mm	F		G	3x16mm	L	
				G1 G2			
	x2		x1		x1		x2

Step 3

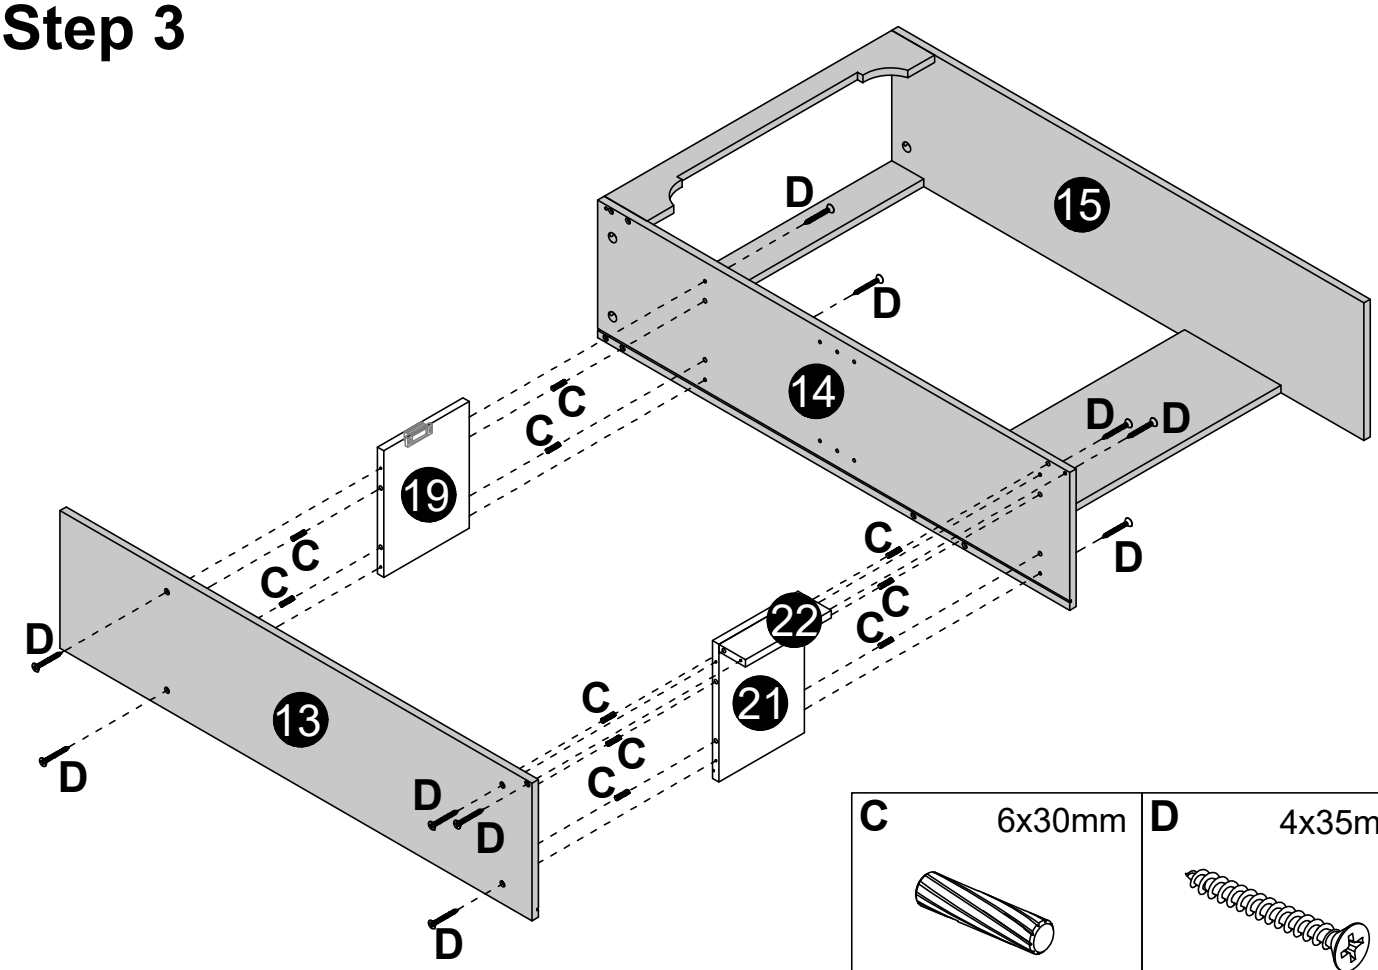

C	6x30mm	D	4x35mm
	x10		x10

Step 4

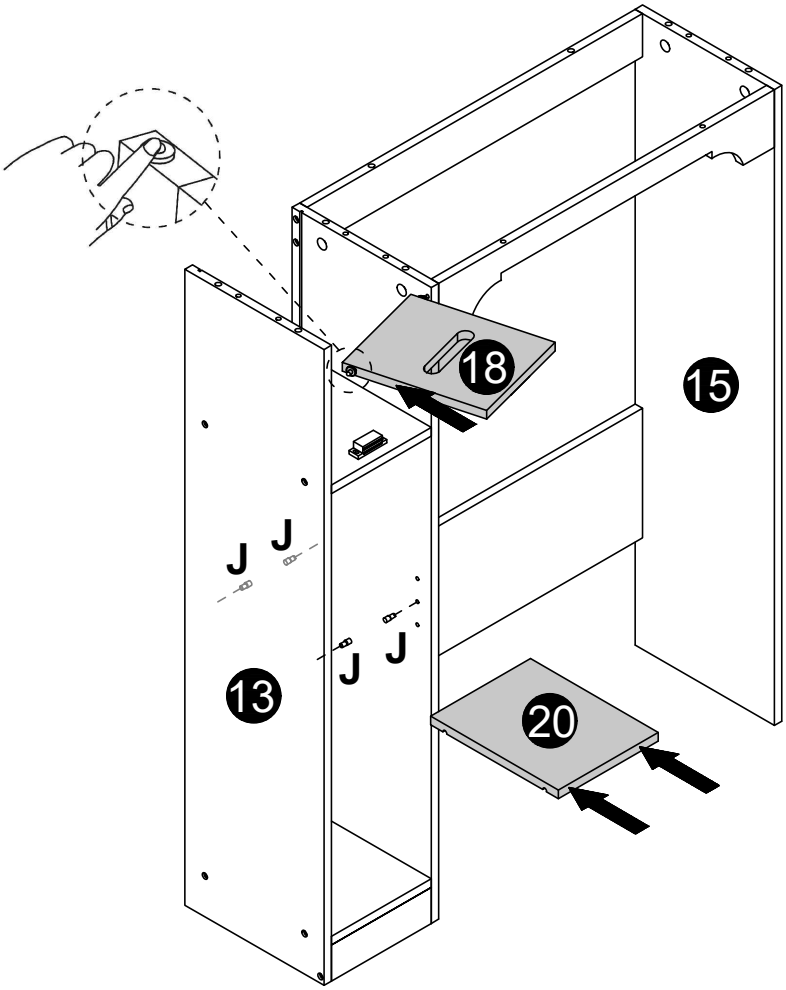


⚠ WARNING

Note the installation direction of Part 18, the side of the F iron piece faces inward!


J

x4

Step 5

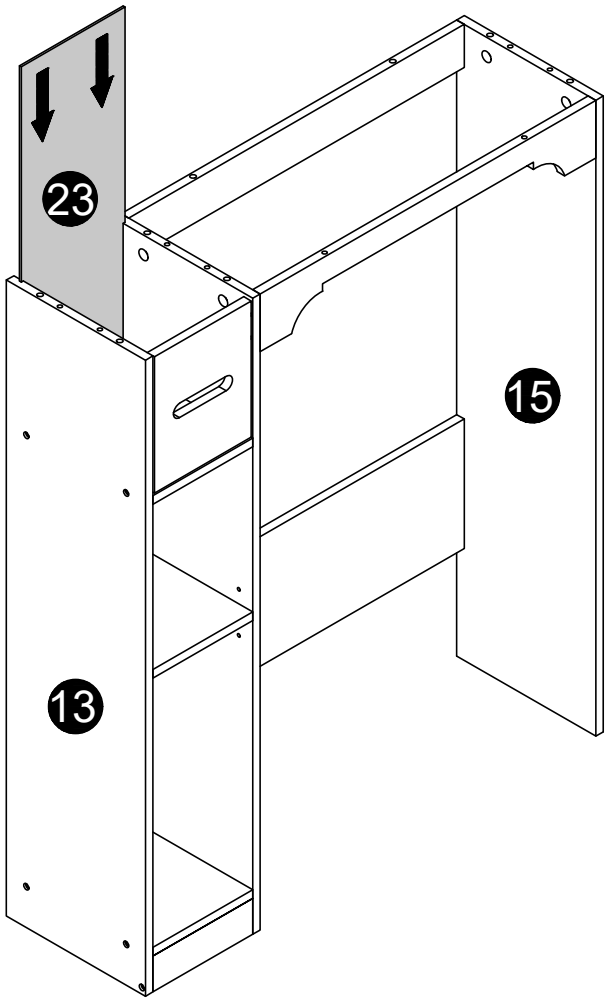


Step 6

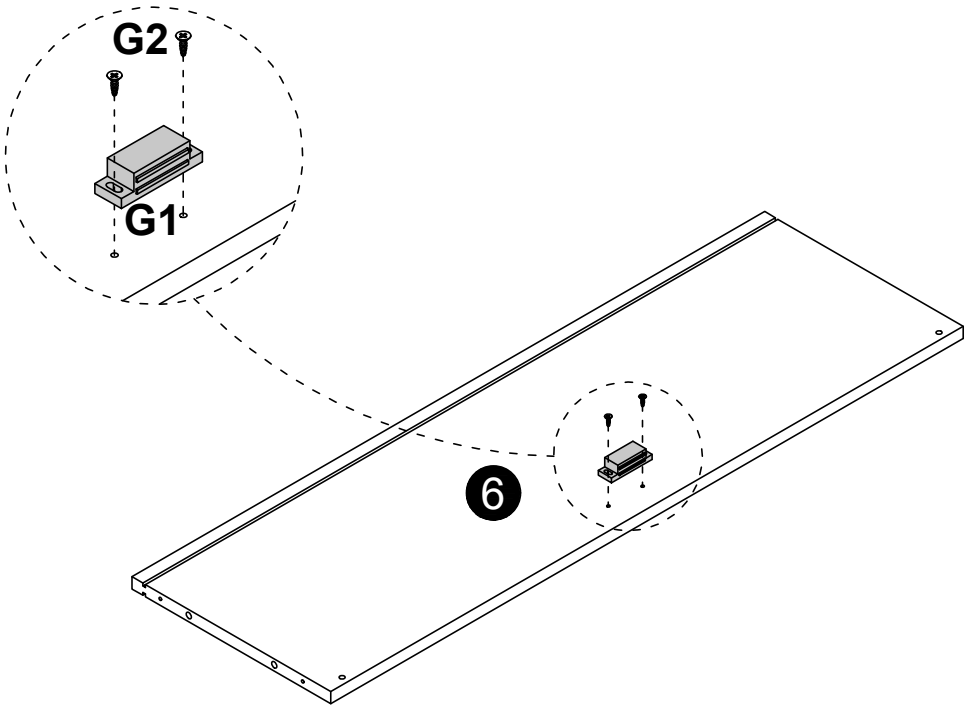


G 3x16mm

G1 G2




x1

Step 7

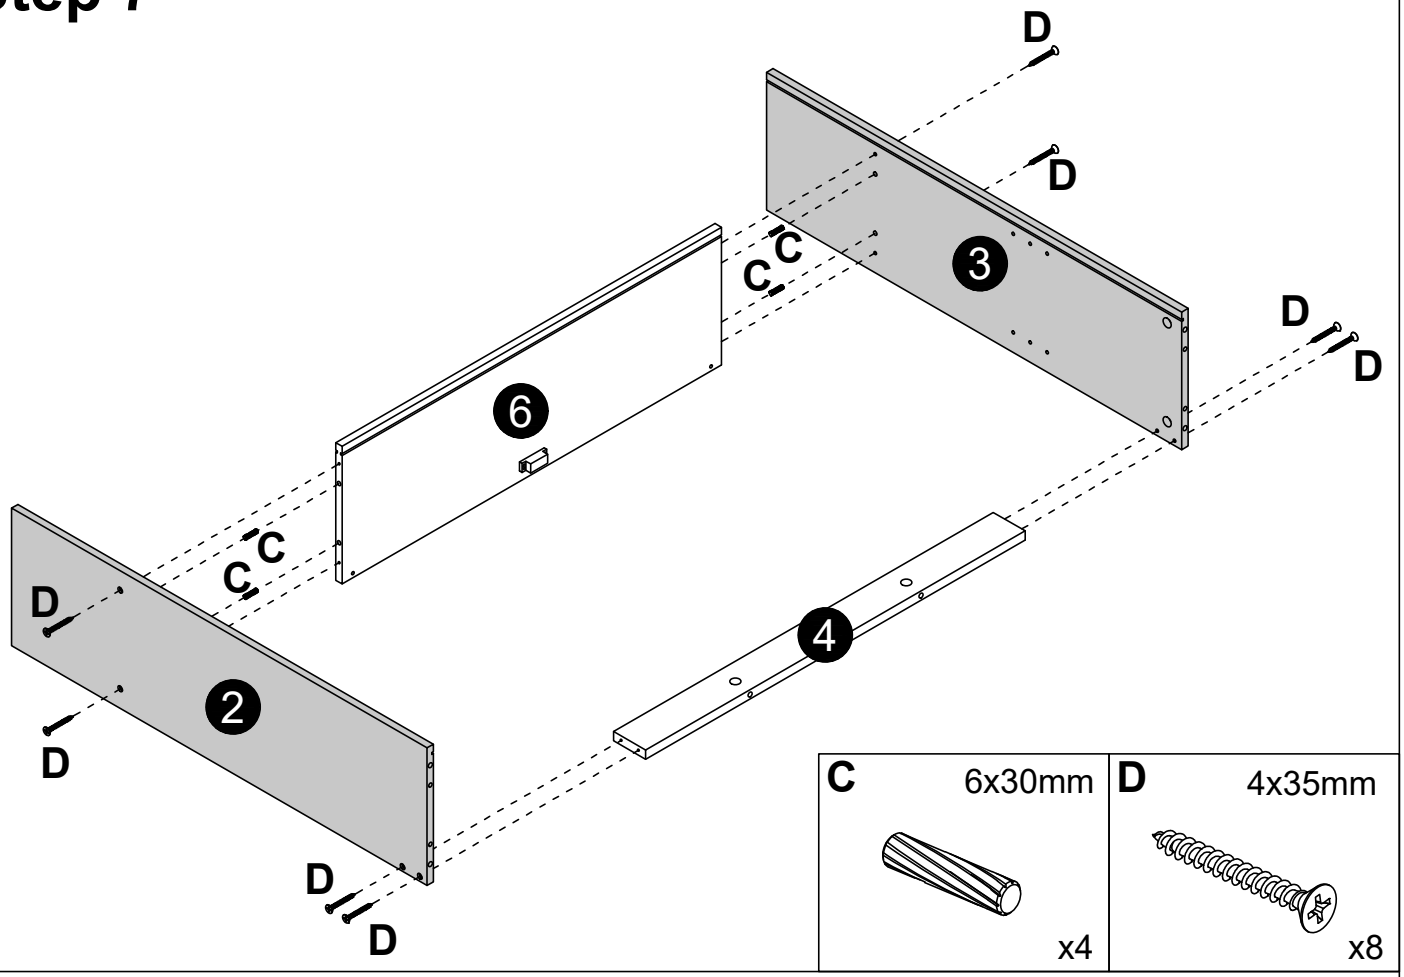


C	6x30mm	D	4x35mm
	x4		x8


Step 8

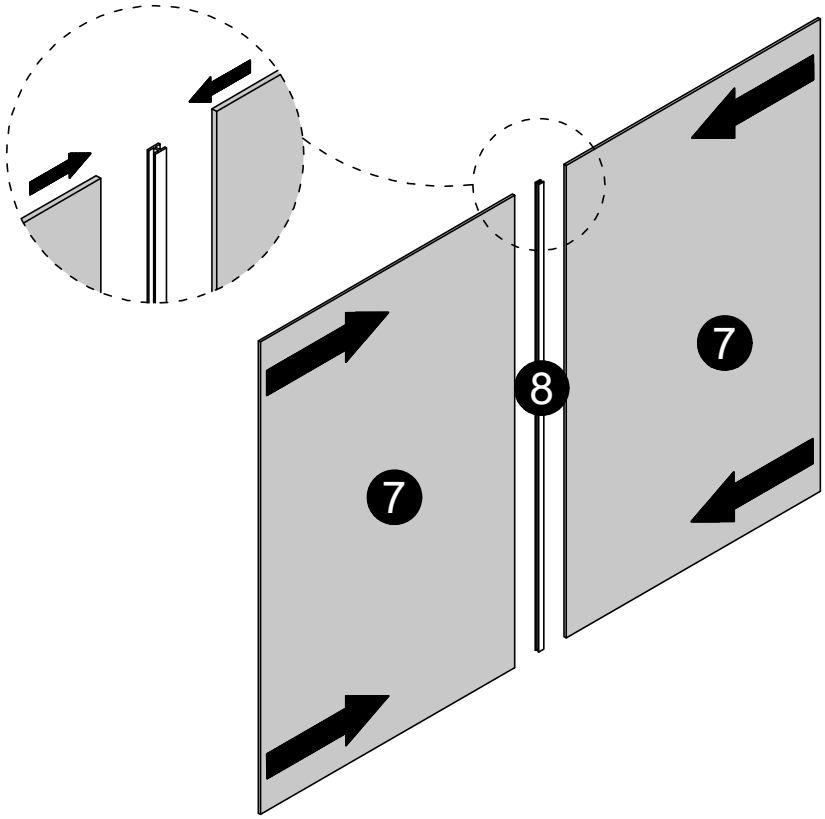


Step 9

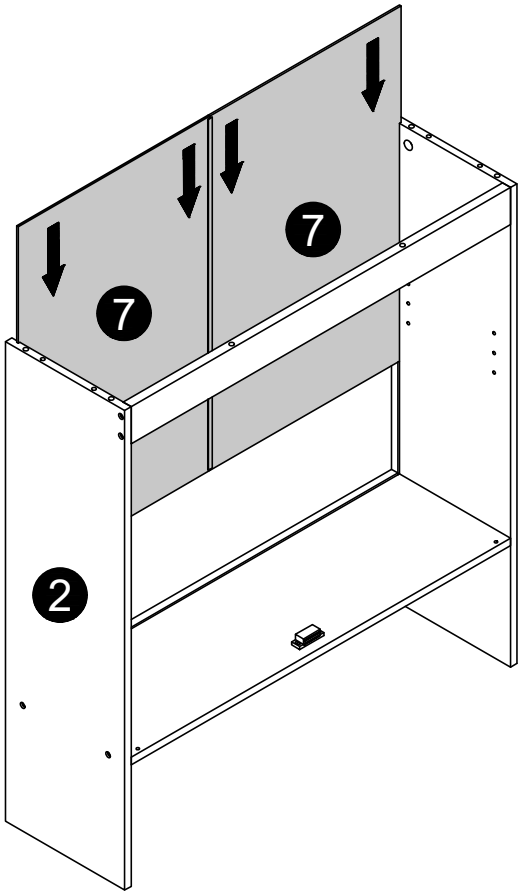

Step 10

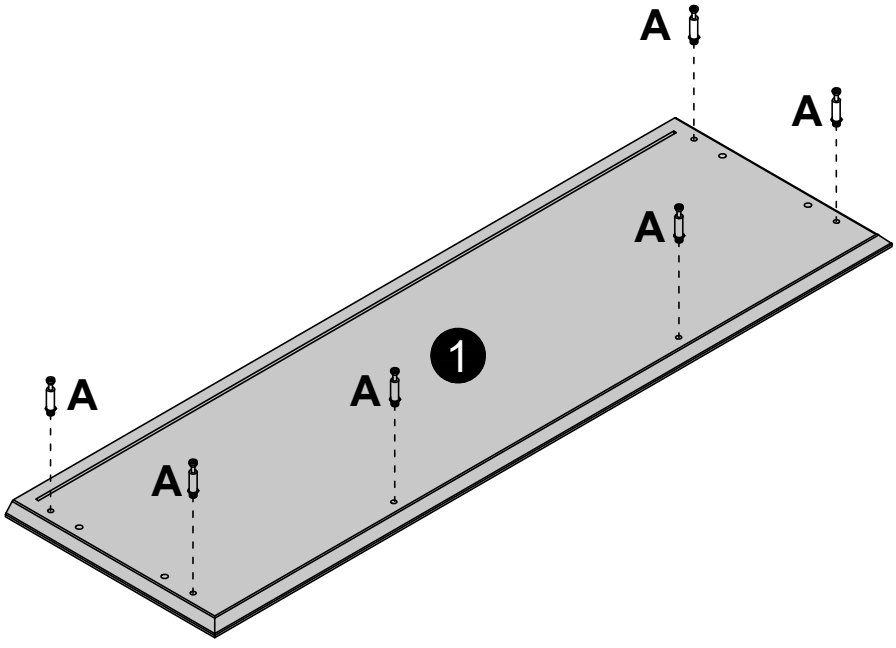

A 6x35mm

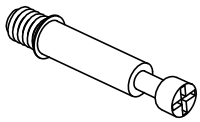


x6

Step 11


⚠ WARNING

Note the installation direction of Part 1!

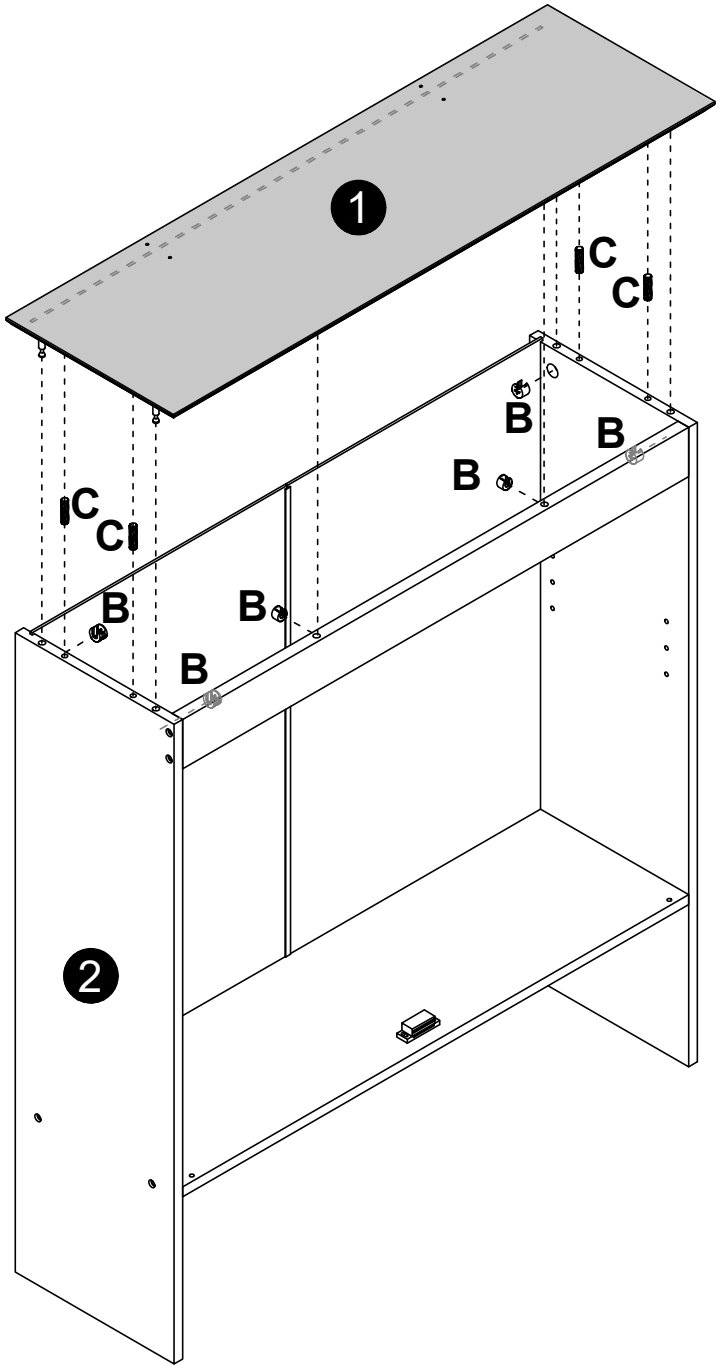


B	15x10mm	C	6x30mm
	x6		x4

Step 12


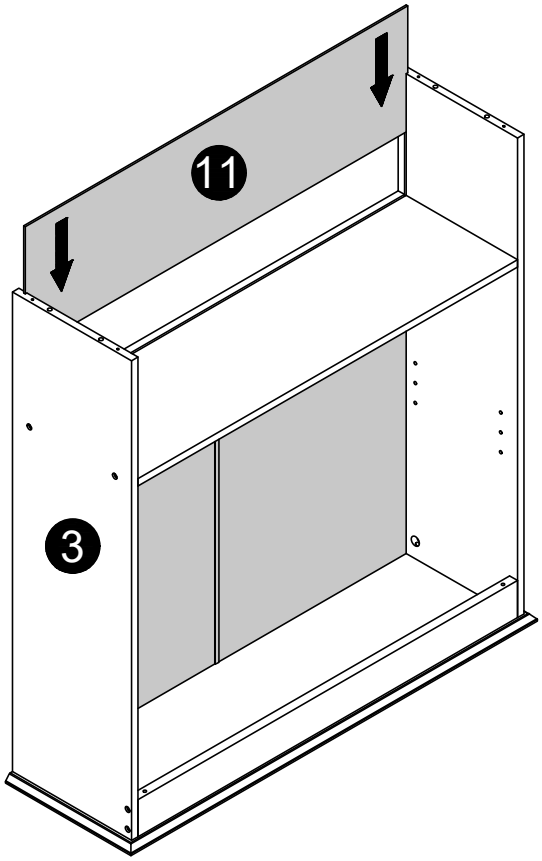


Step 13

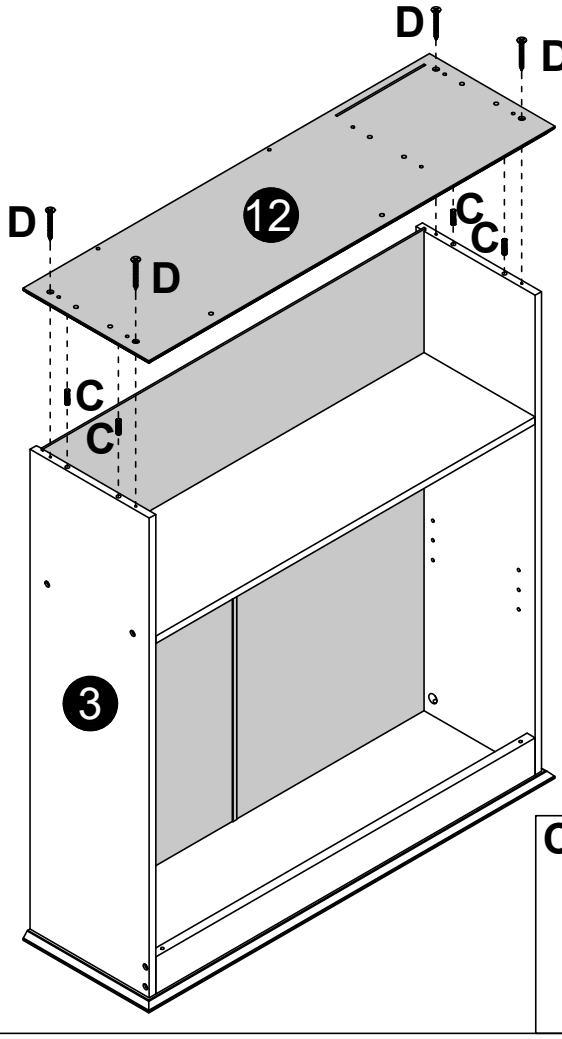


WARNING


Note the installation direction of Part 12!

C	6x30mm	D	4x35mm
	x4		x4

Step 14

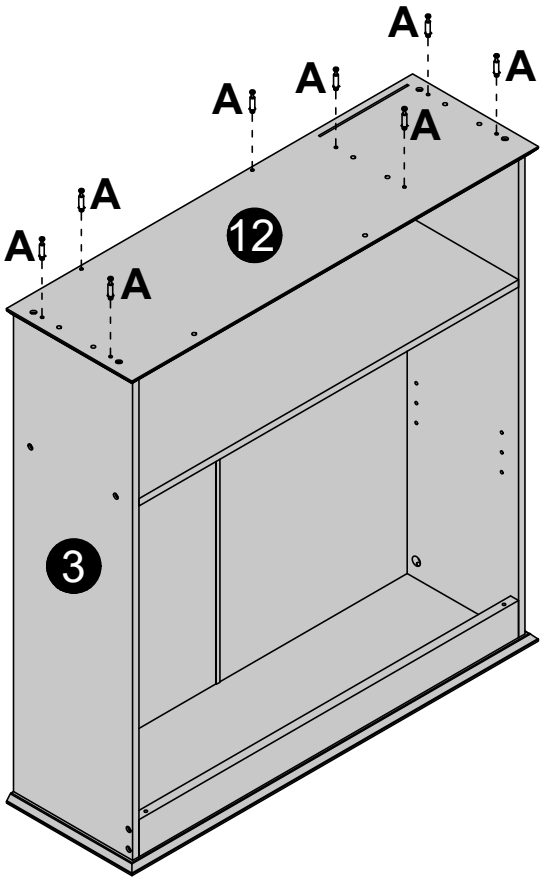


A 6x35mm

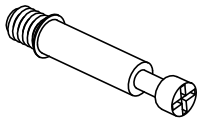


x8

Step 15

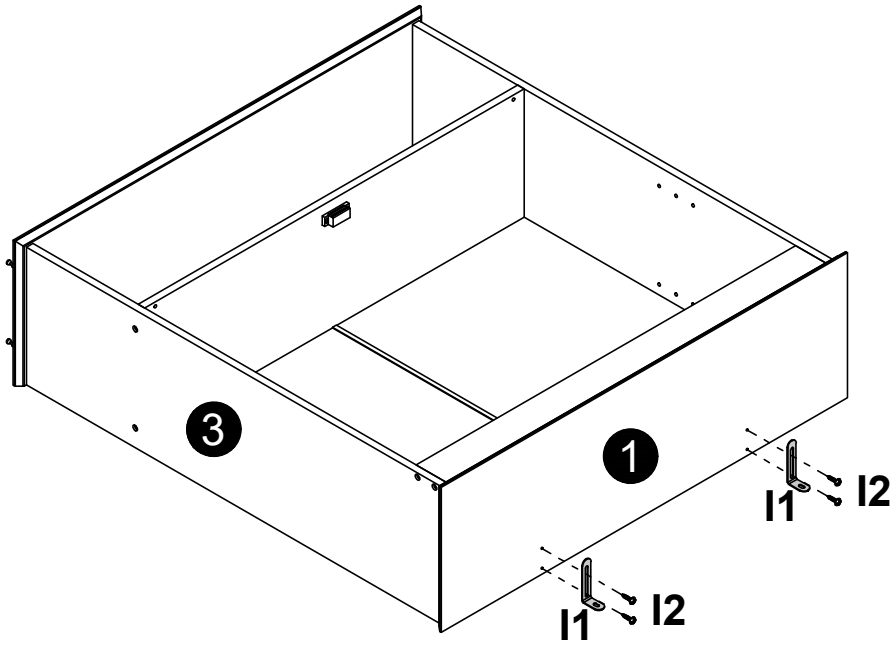


I 4x14mm


I1 I2

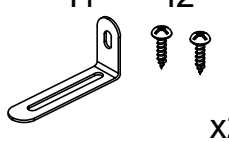

x2


Step 16

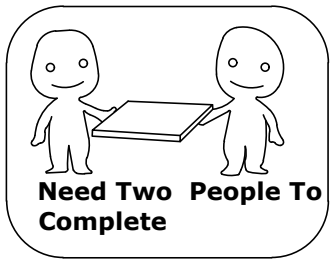

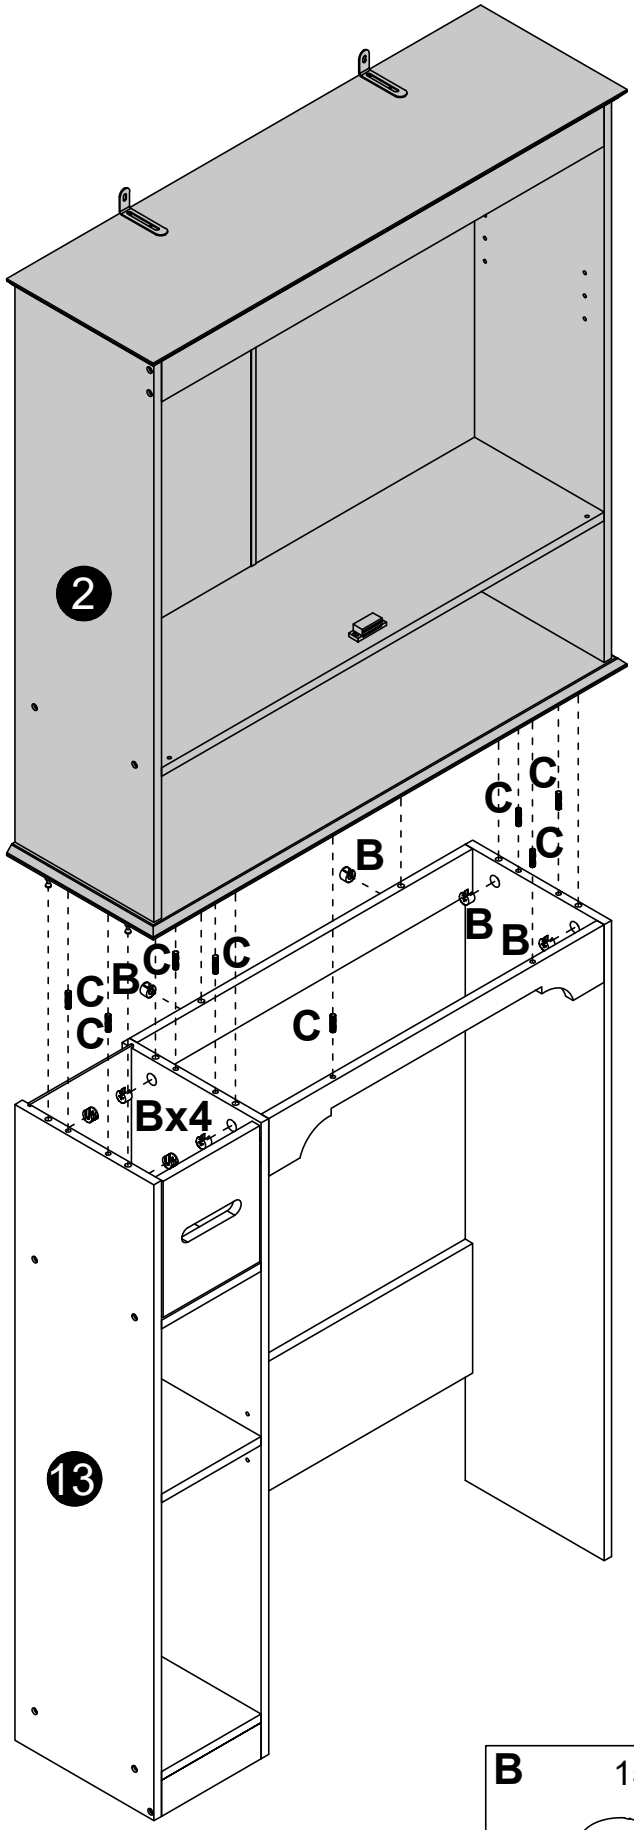

B	15x10mm	C	6x30mm
	x8		x8


Step 17

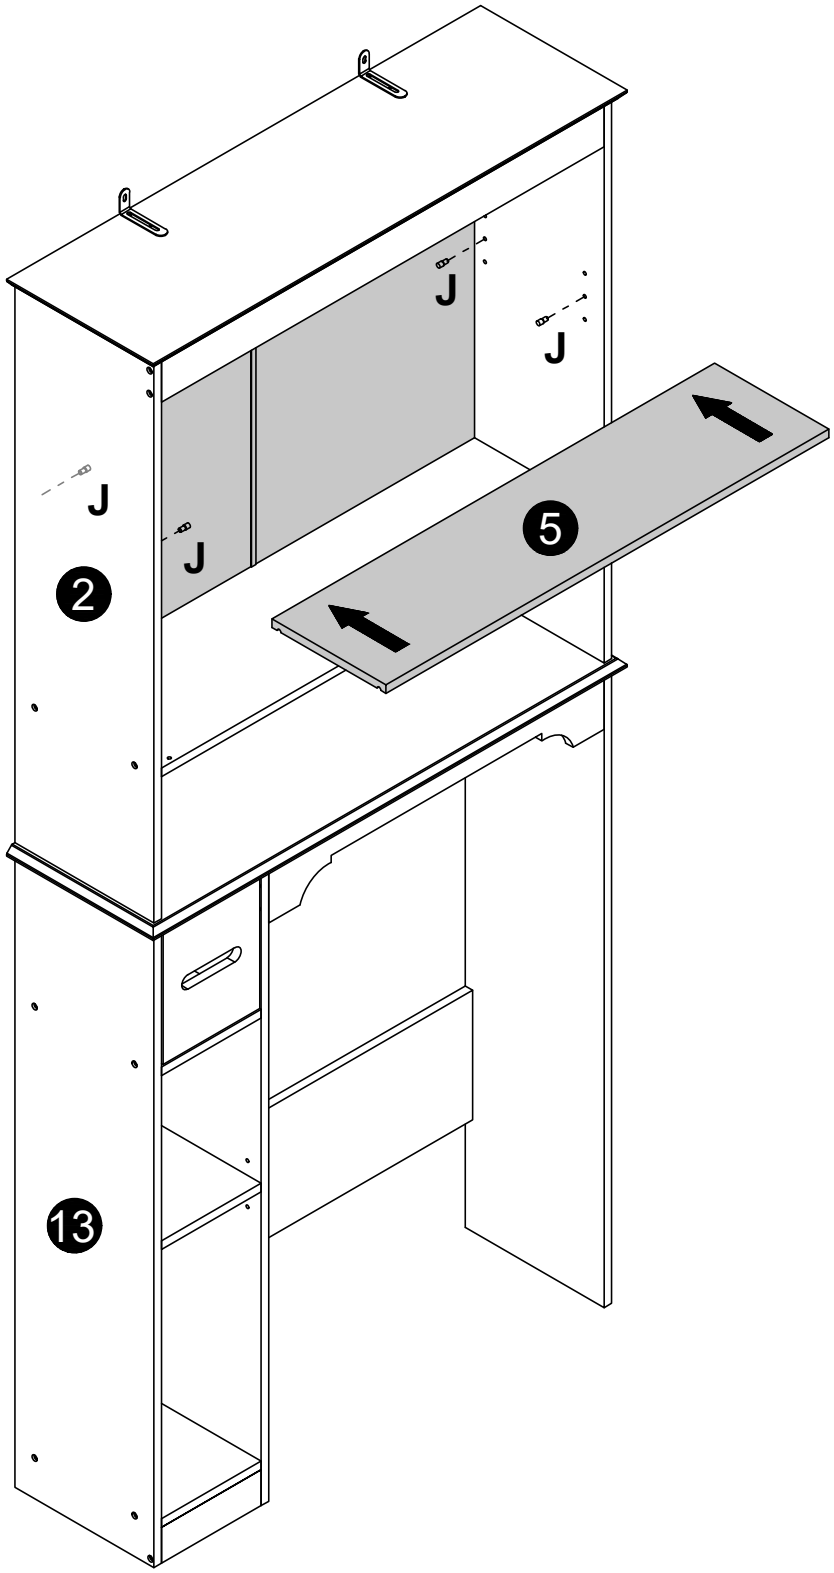

J


x4

Step 18

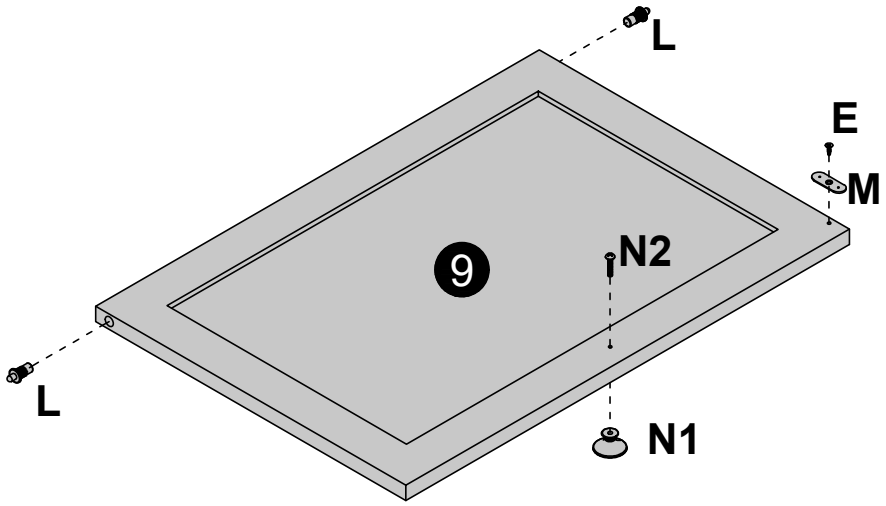


E 3.5x12mm	L	M	N 4x20mm
x1	x2	x1	N1 N2 x1

Step 19

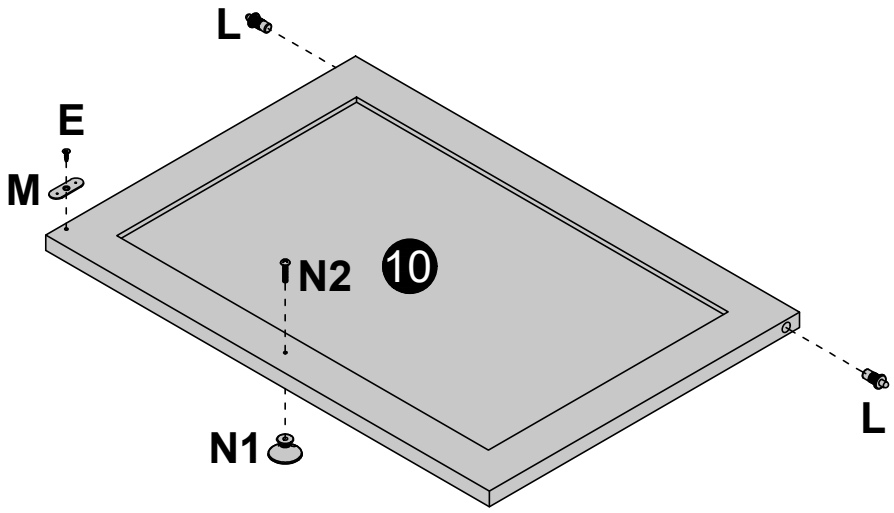


E 3.5x12mm	L	M	N 4x20mm
x1	x2	x1	N1 N2 x1

Step 20

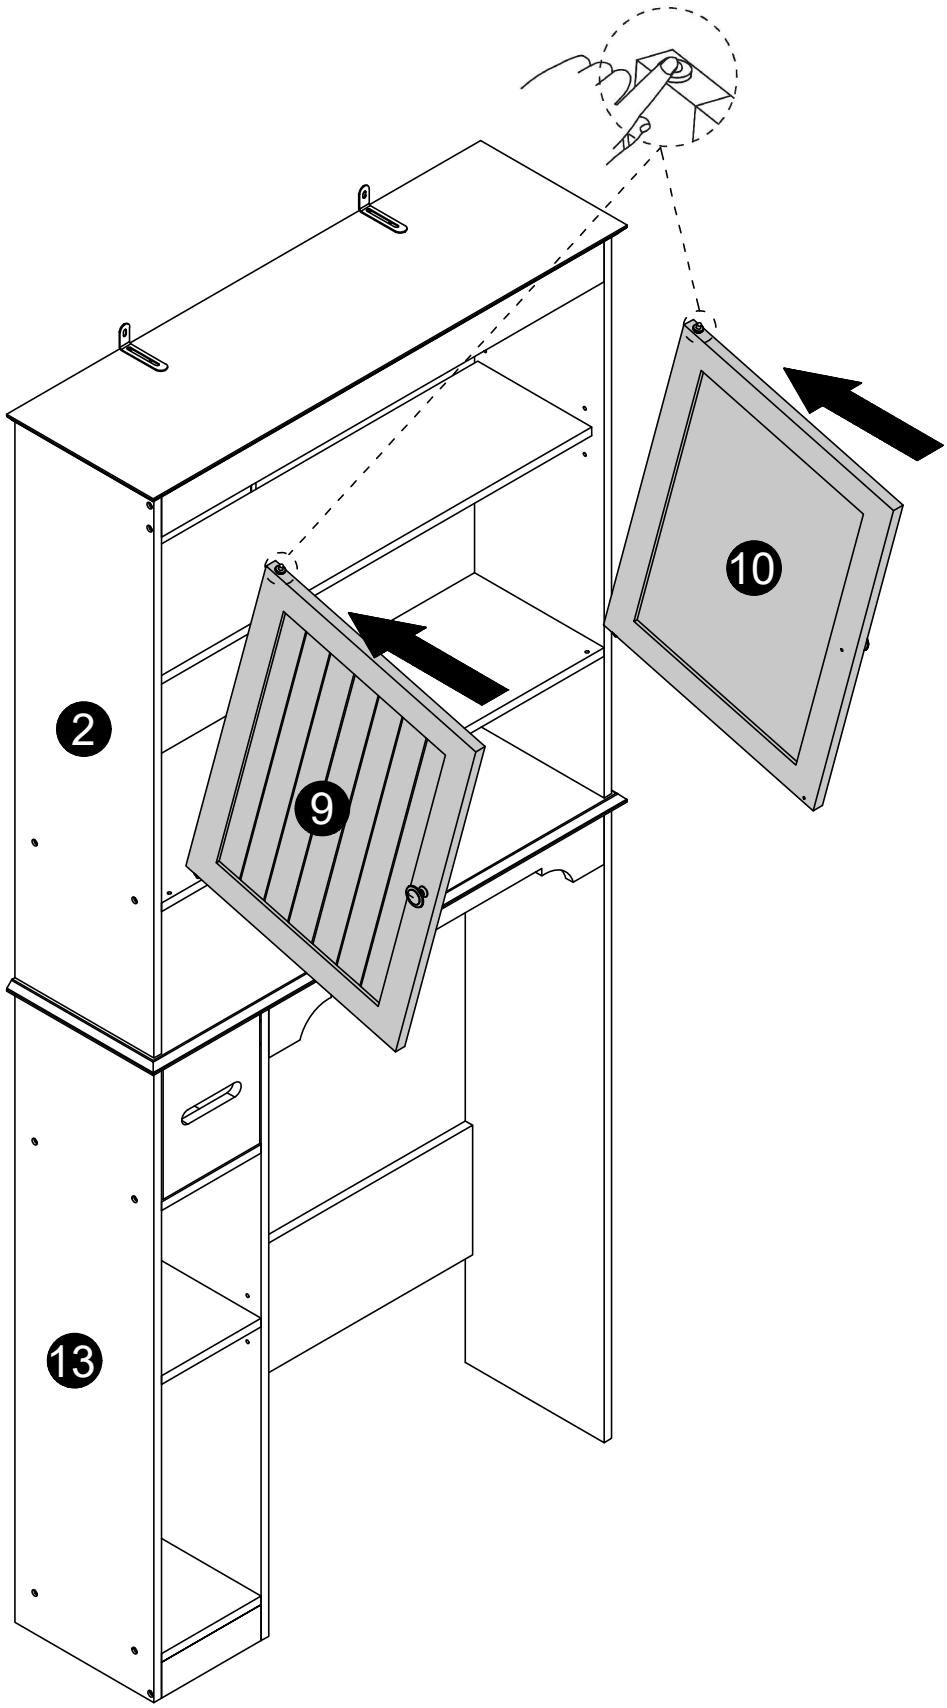


Step 21

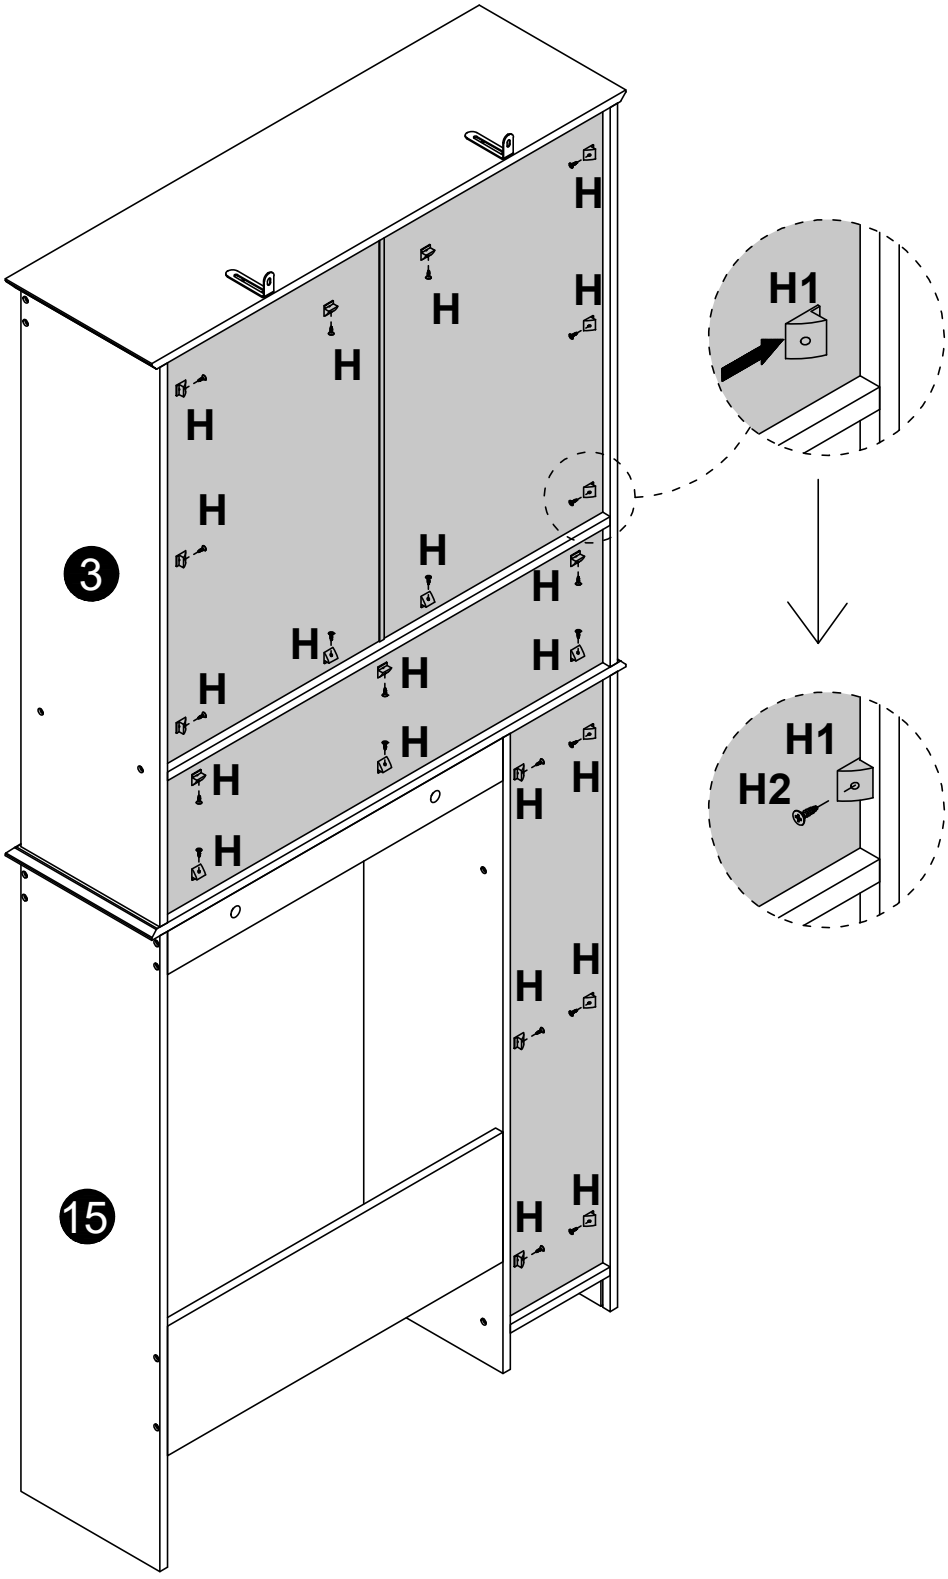


H	3x16mm
H1	H2
	x22


Step 22

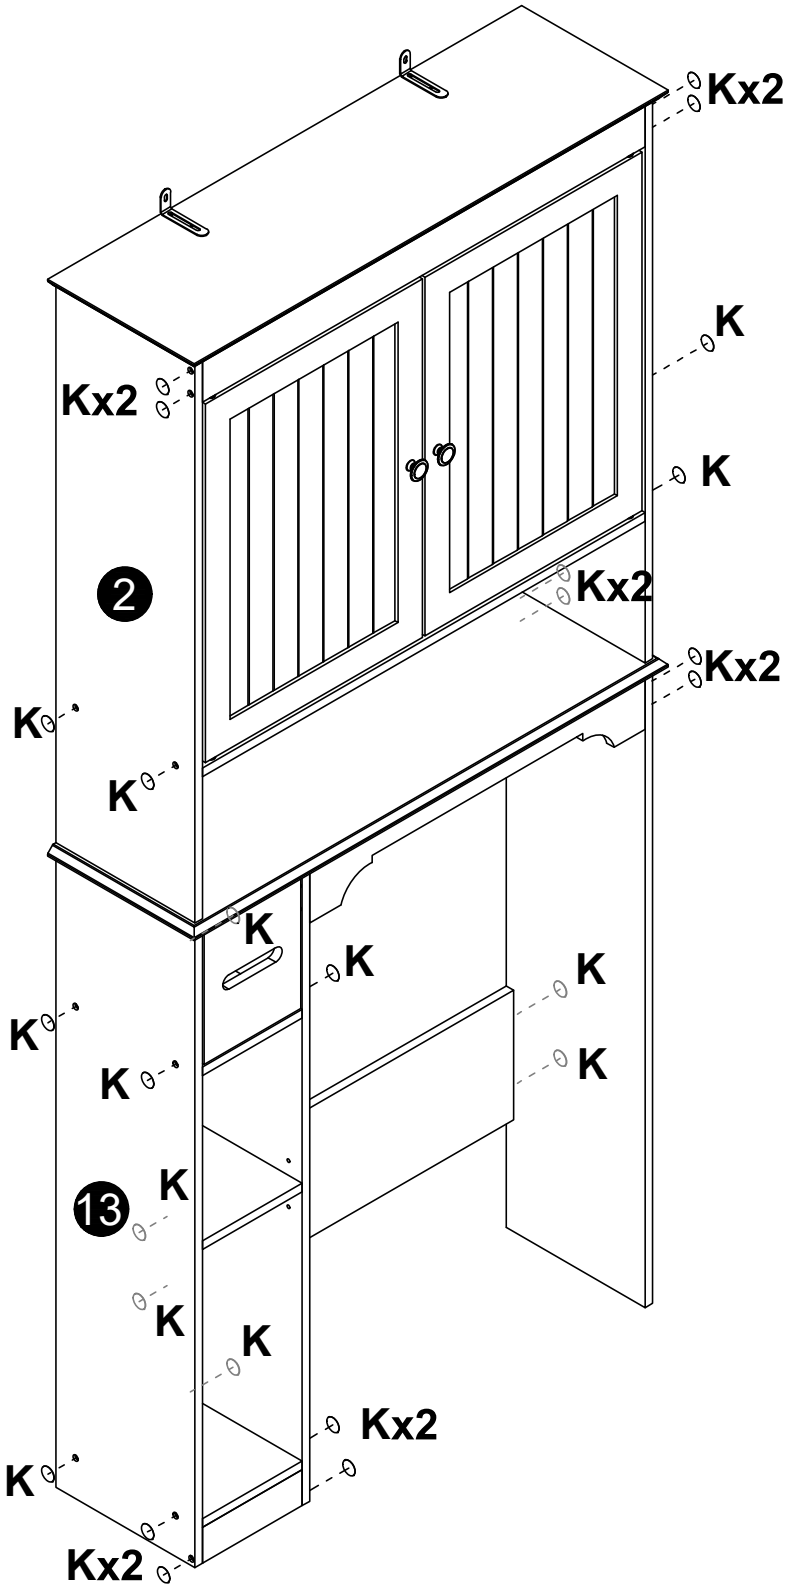



K	18mm	x26

Step 23

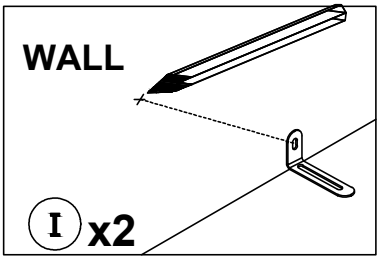

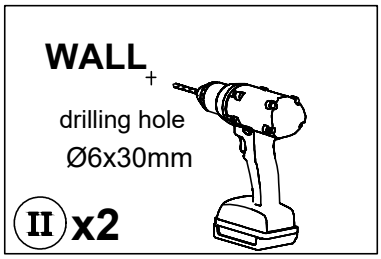

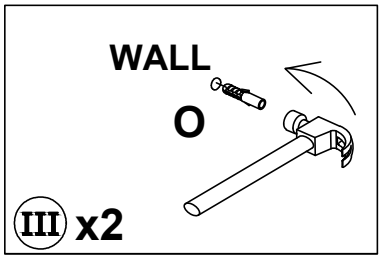

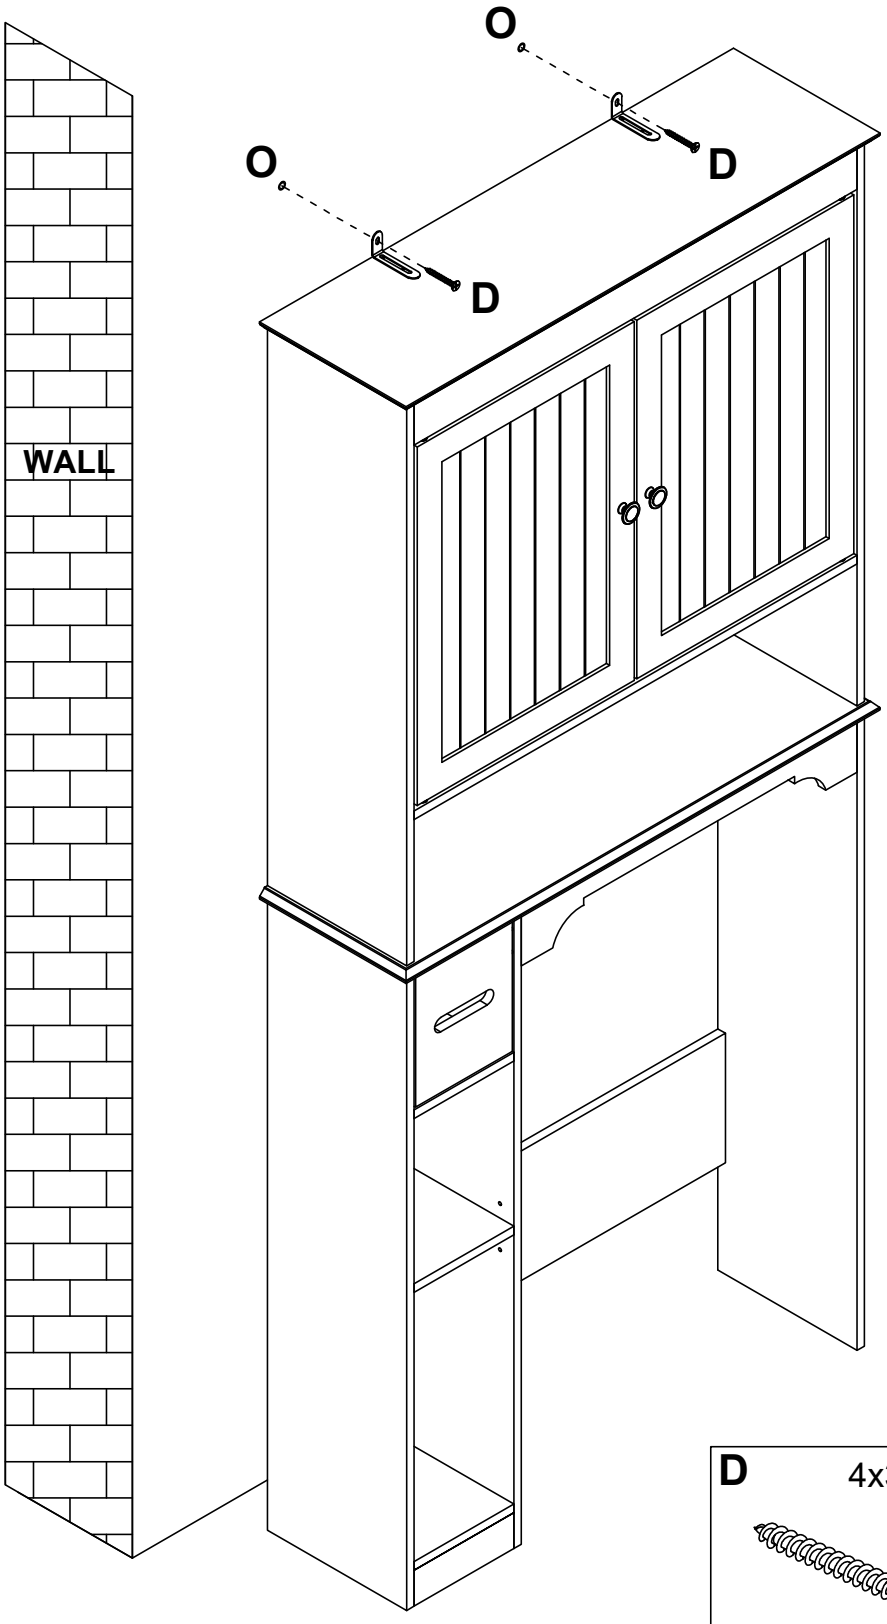

D 4x35mm	O 6x30mm
x2	x2

GARVEE

support@garvee.com