




















BEDSIDE TABLE

–Instruction Manual–

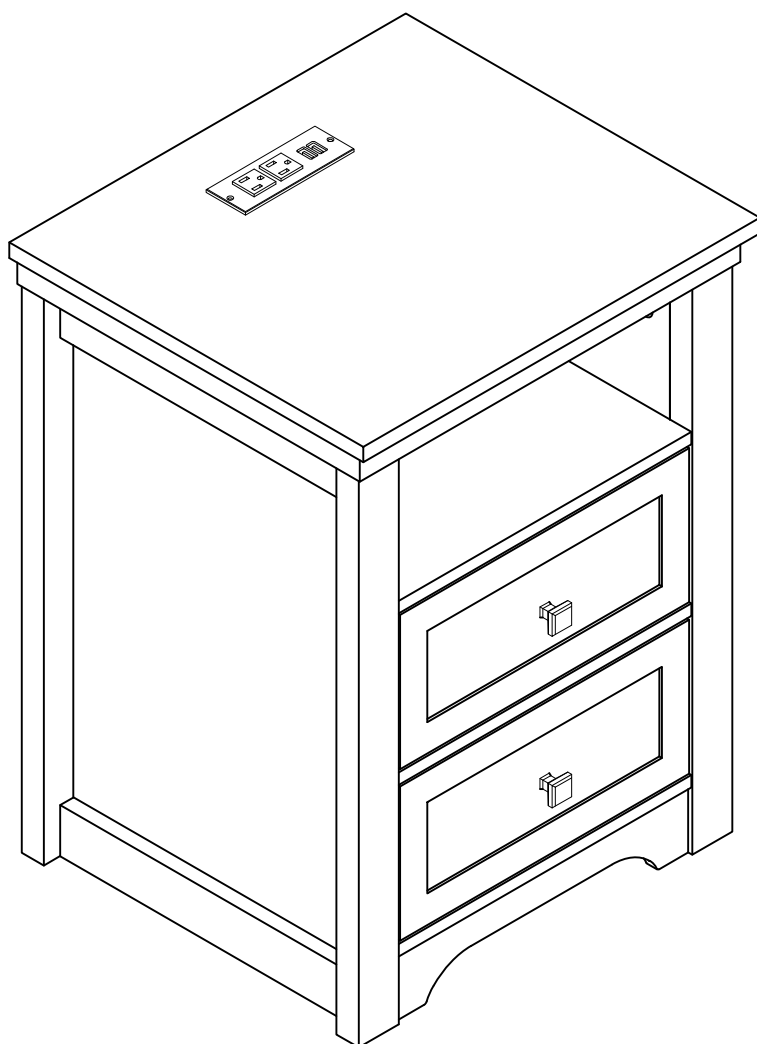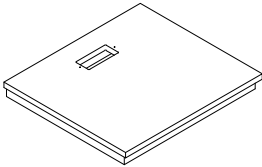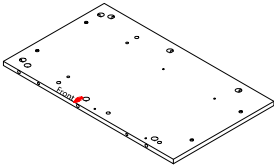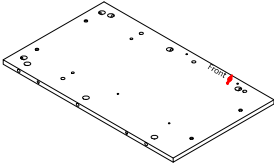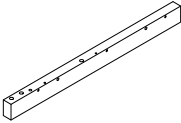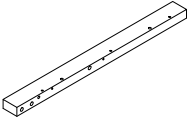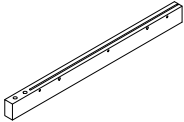

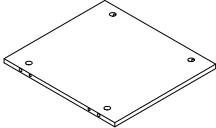



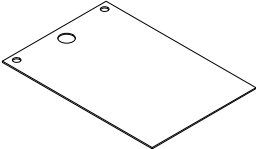









Size: W 17.7xD 15.7xH 23.6 in

HARDWARE LIST


1  1PC	2  1PC	3  1PC	4  1PC	5  1PC
6  1PC	7  1PC	8  4PCS	9  1PC	10  1PC
11  1PC	12  1PC	13  1PC	14  1PC	15  2PCS
16  2PCS	17  2PCS	18  2PCS	19  2PCS	

HARDWARE LIST

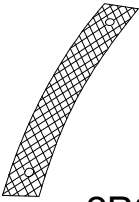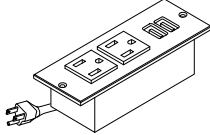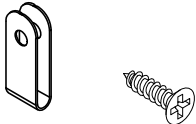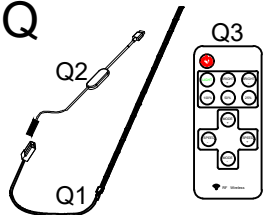
A  6x35mm 42(+2)PCS	B  42(+2)PCS	C  6x30mm 18(+1)PCS	D  M3.5x12mm 20(+2)PCS	E  M3.5x35mm 10(+2)PCS
F  M4x14mm 2 SET	G  M3x14mm 6(+1)PCS	H  6PCS	I  4(+2)PCS	J  M3.5x25mm 8(+1)PCS
K  2PCS	L  M3.5x16mm 2PCS	M  black 1PC	N  M3.5x12mm black 2(+1)PCS	O  2PCS
P  M3x10mm 3 (+1)SET	Q  1SET			




CL
x2
L300mm




CR
x2
L300mm



DL
x2
L300mm




DR
x2
L300mm

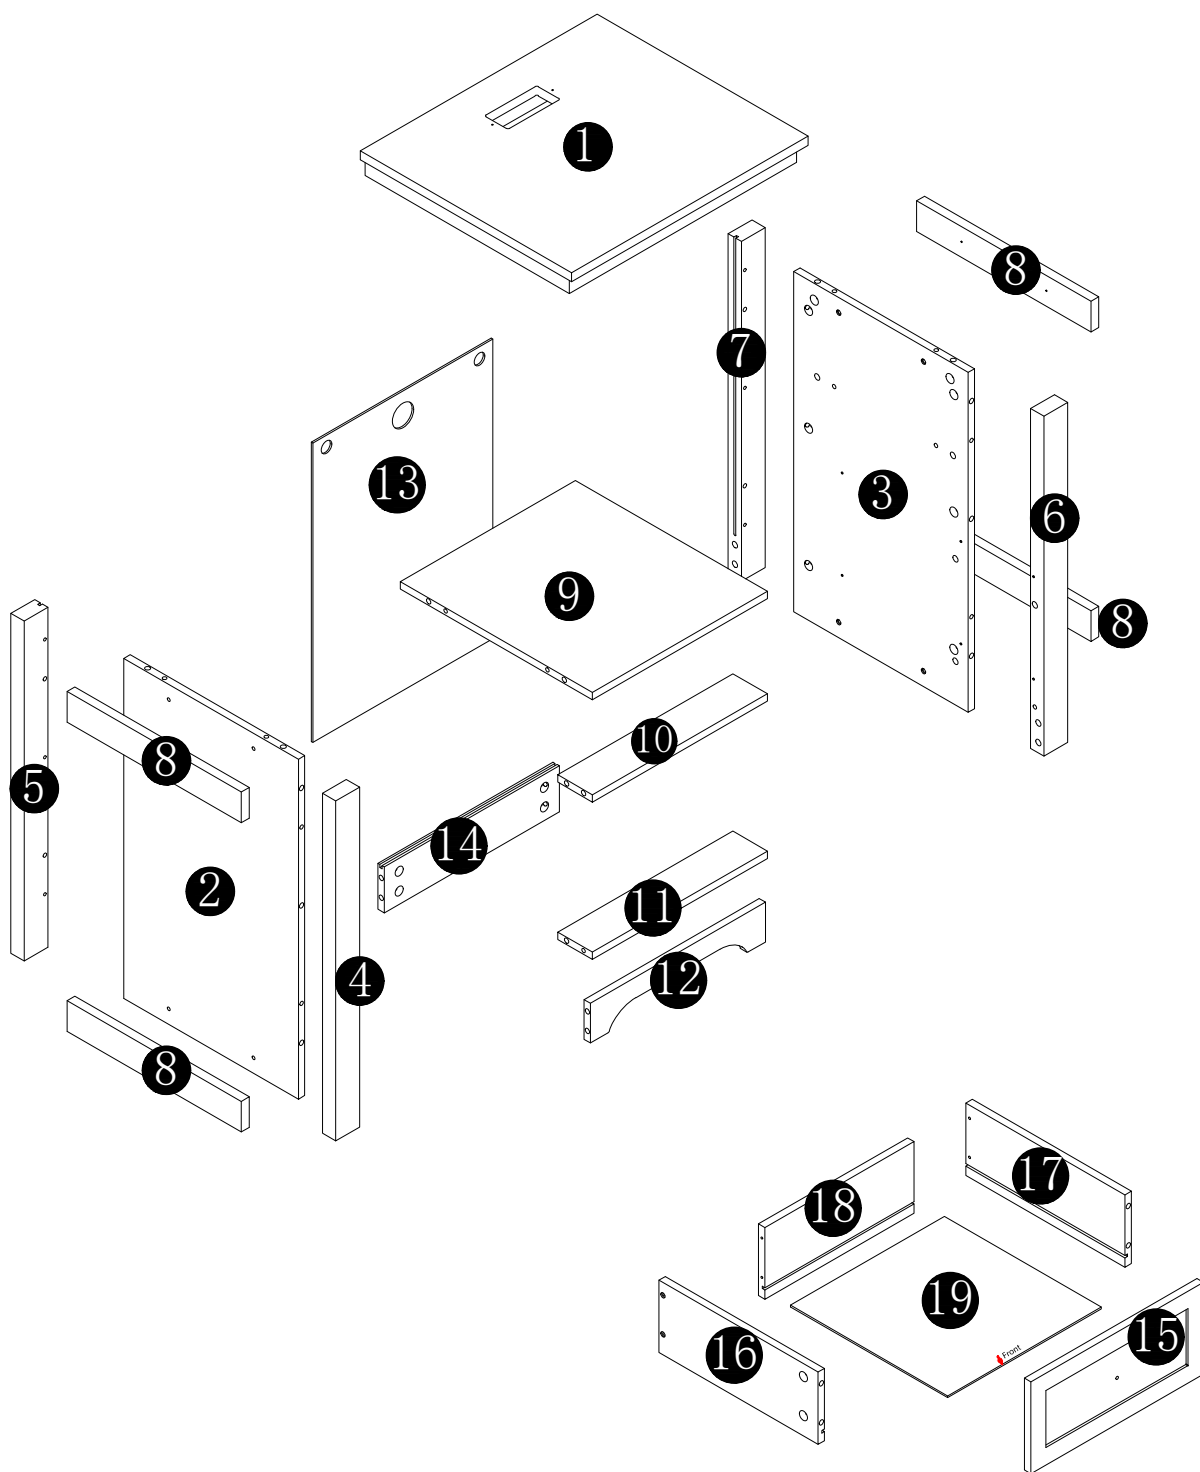


x2

Tips

*This furniture requires 2 people to assemble.
Make sure no parts missing or damaged before assembly.*


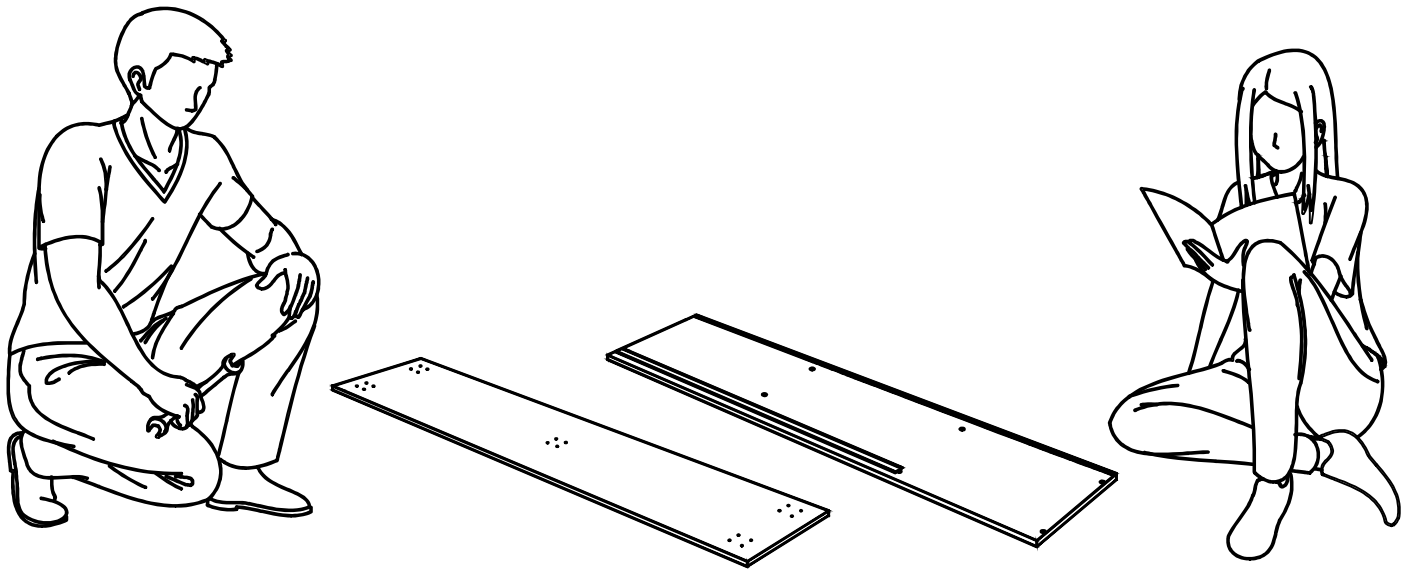


CAM BOLT INSTALLATION AS BELOW

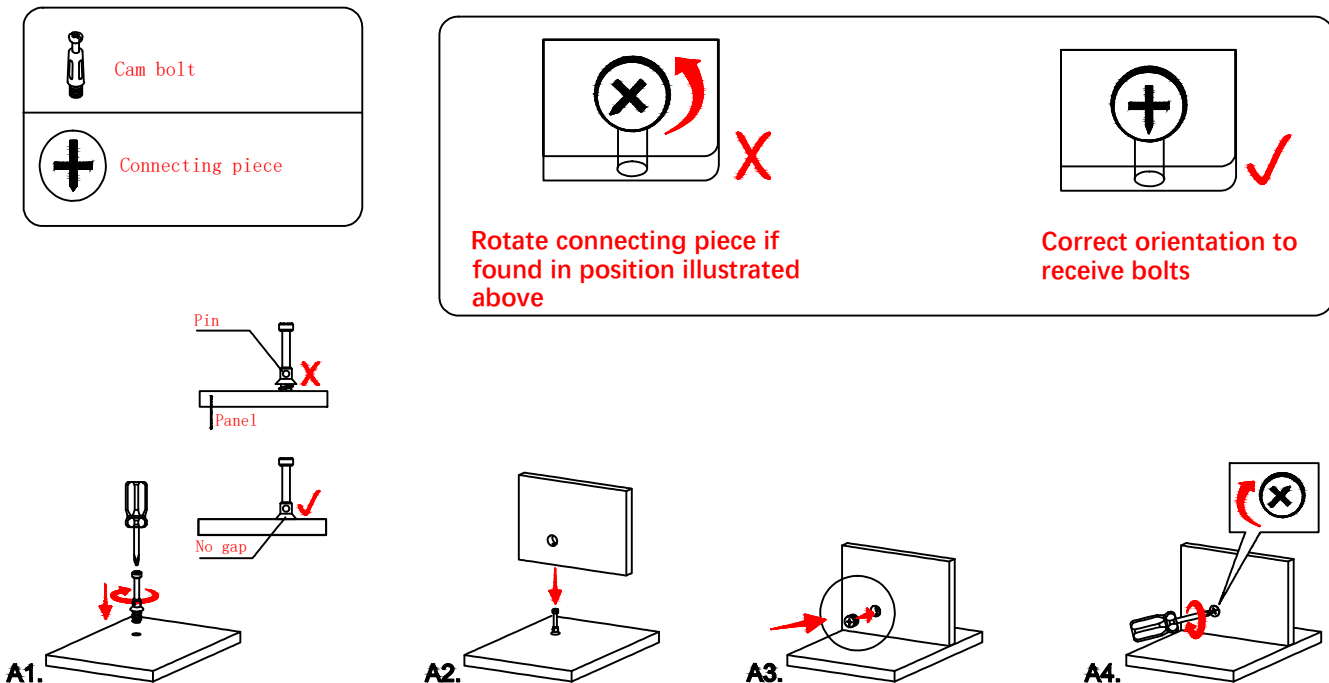

CAUTION: Please confirm the parts list before installation

YOU MAY NEED (NOT SUPPLIED)

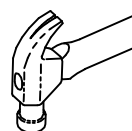



Step:1

A



6*35

11PCS

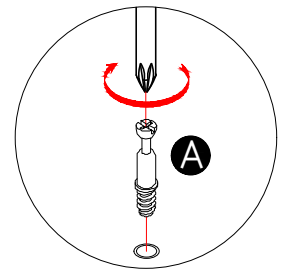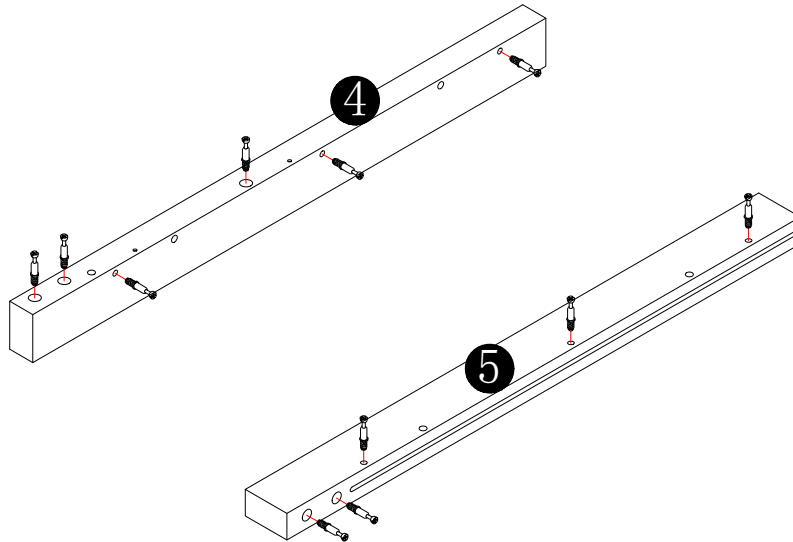

Screw (a) member into hole as shown



Step:2

A







6*35

11PCS



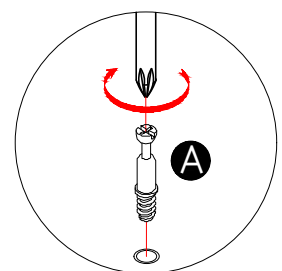
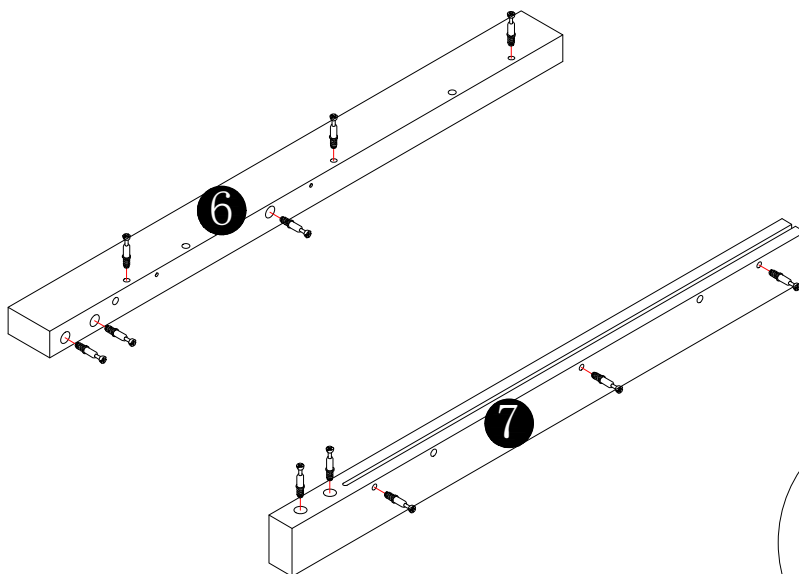


Screw (a) member into hole as shown


Step:3

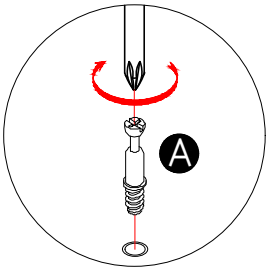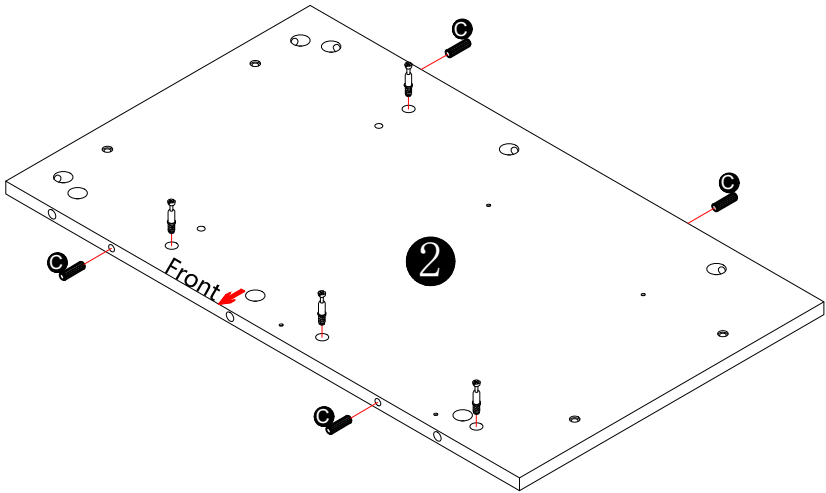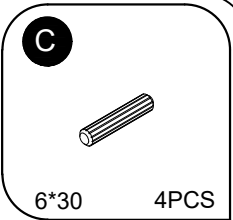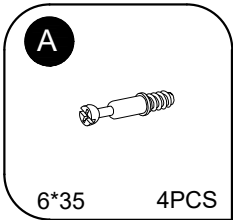

Step:4

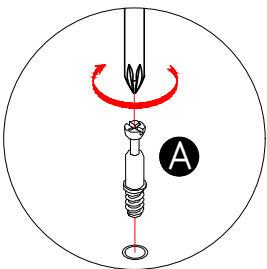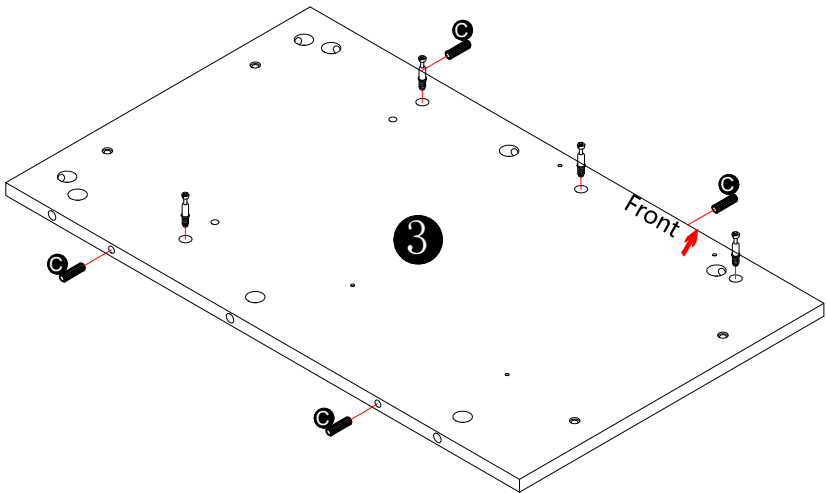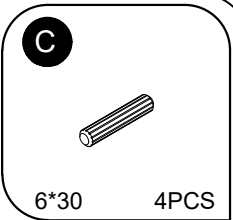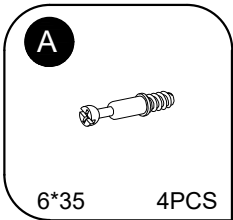


Step:5

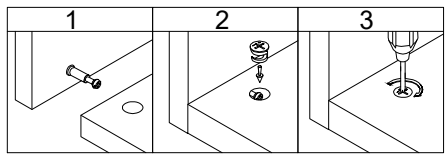


B



Ø15*10 6PCS

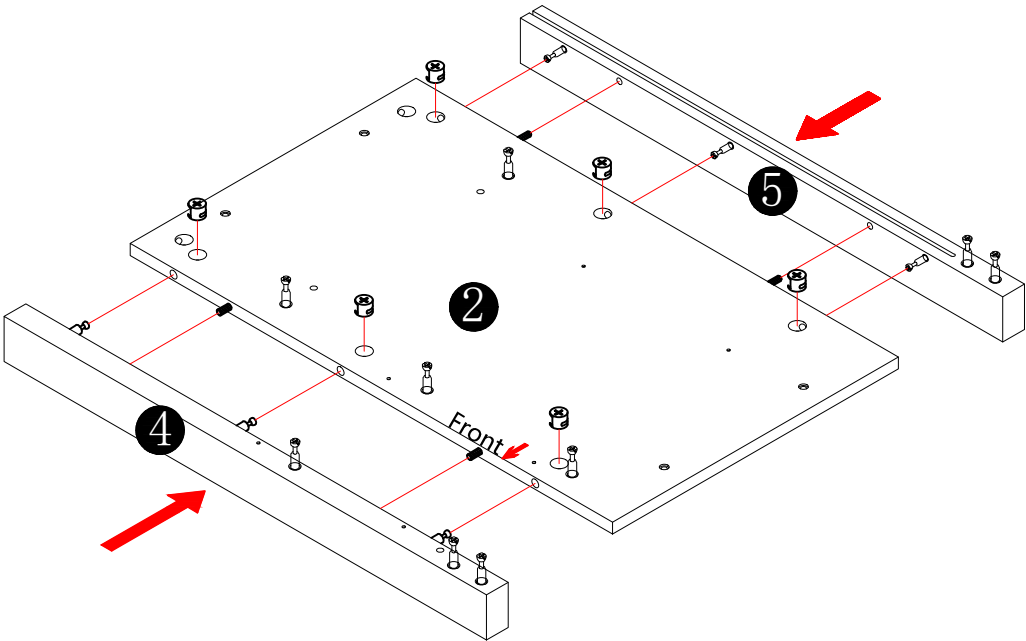


Step:6

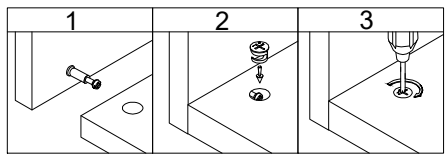



B





Ø15*10 6PCS

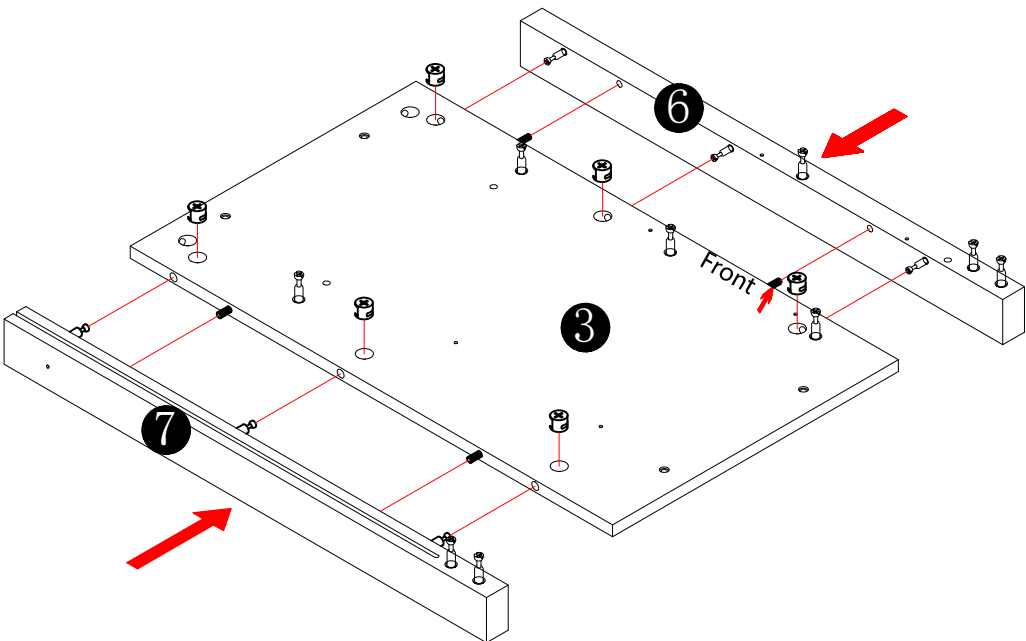

Step:7

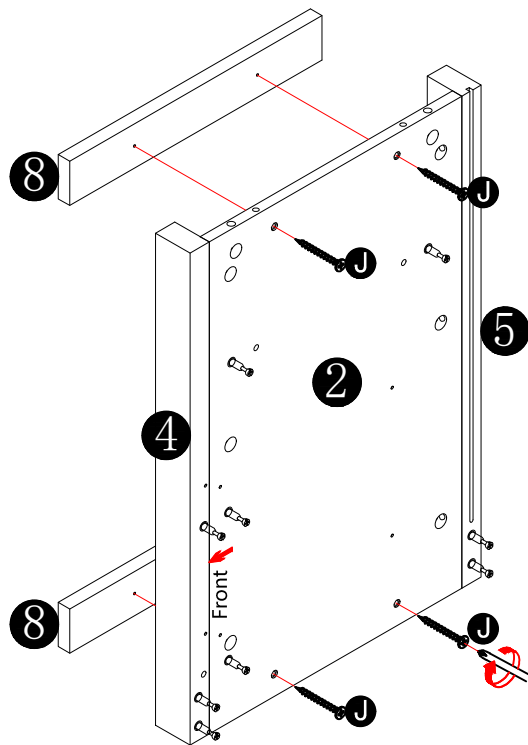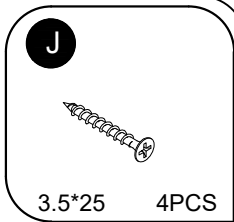

Step:8

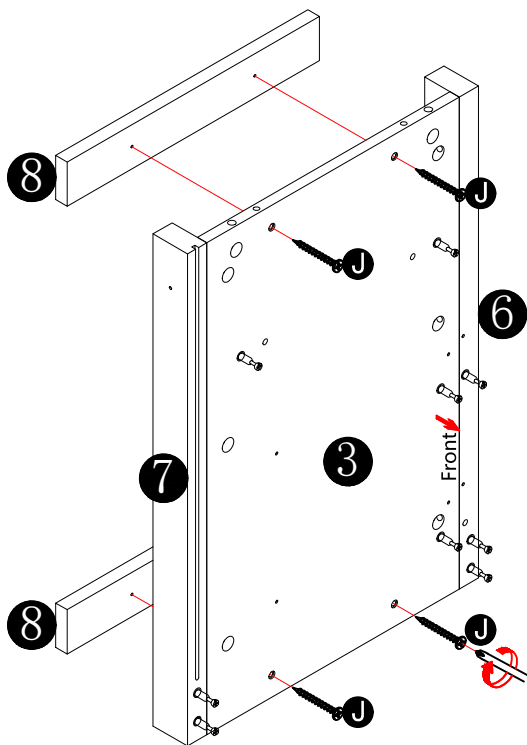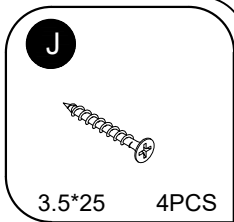

Step:9

CL



12"

2PCS

D






3.5*12

6PCS

I



2PCS

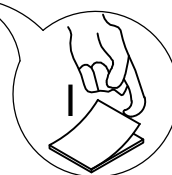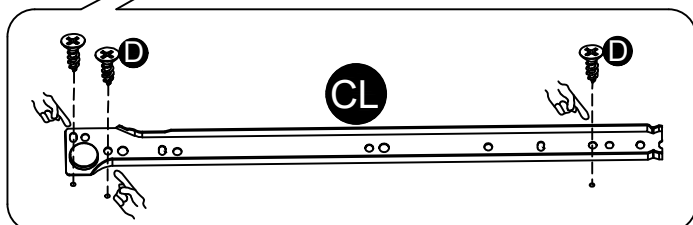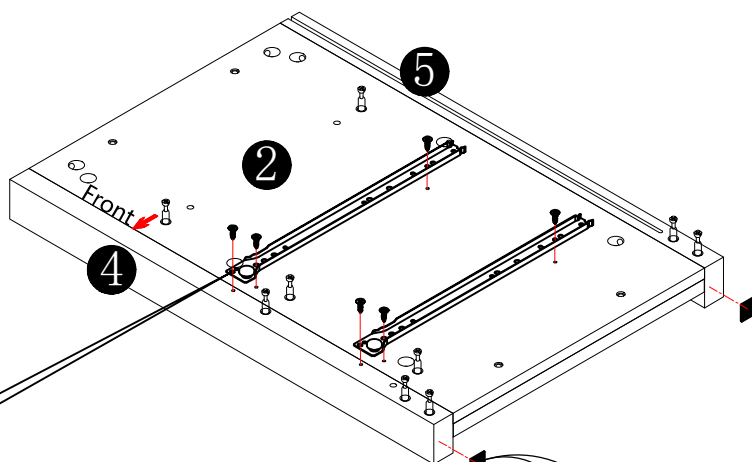

Step:10

CR



12"

2PCS

D






3.5*12

6PCS

I



2PCS

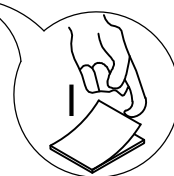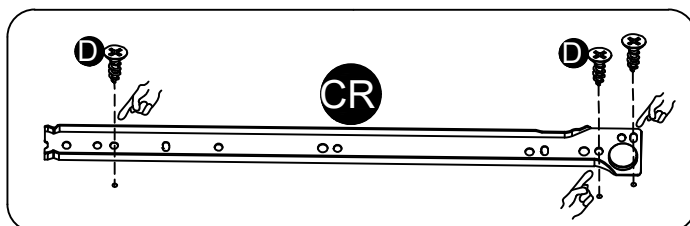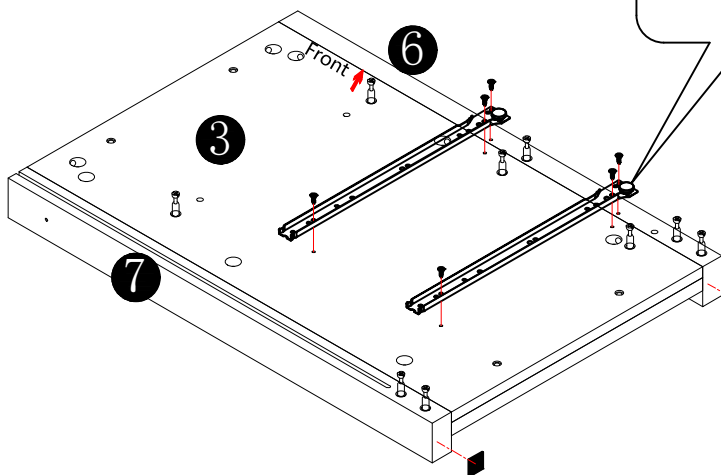


Step:11

C



6*30

6PCS

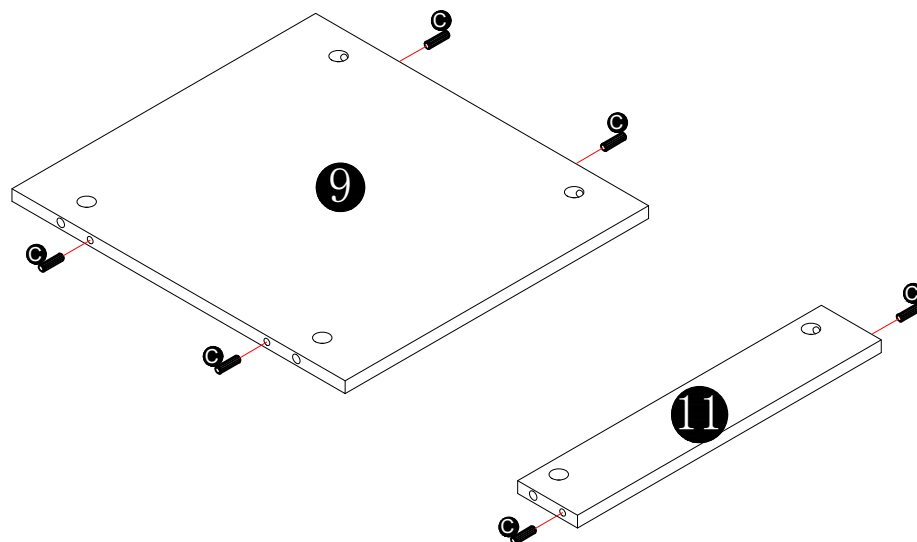



Step:12

B





Ø15*10

9PCS

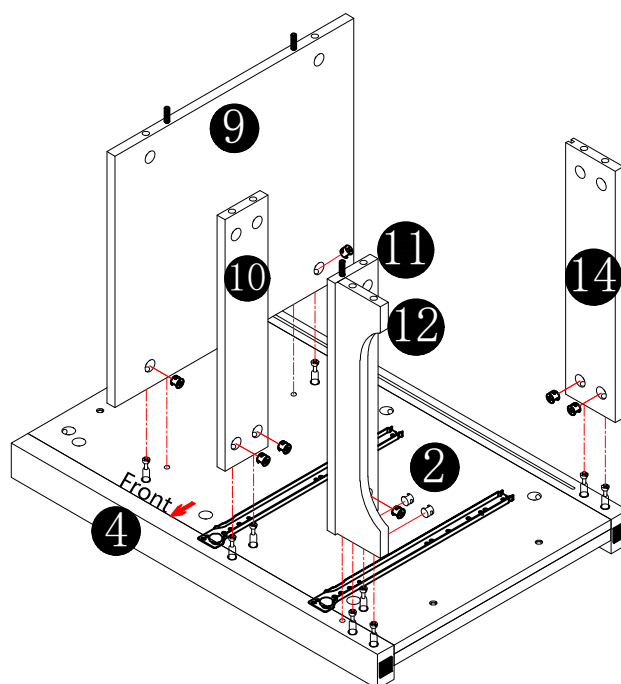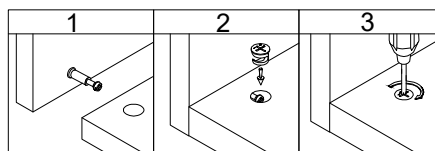

Step:13

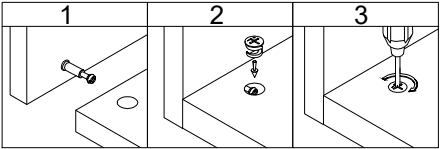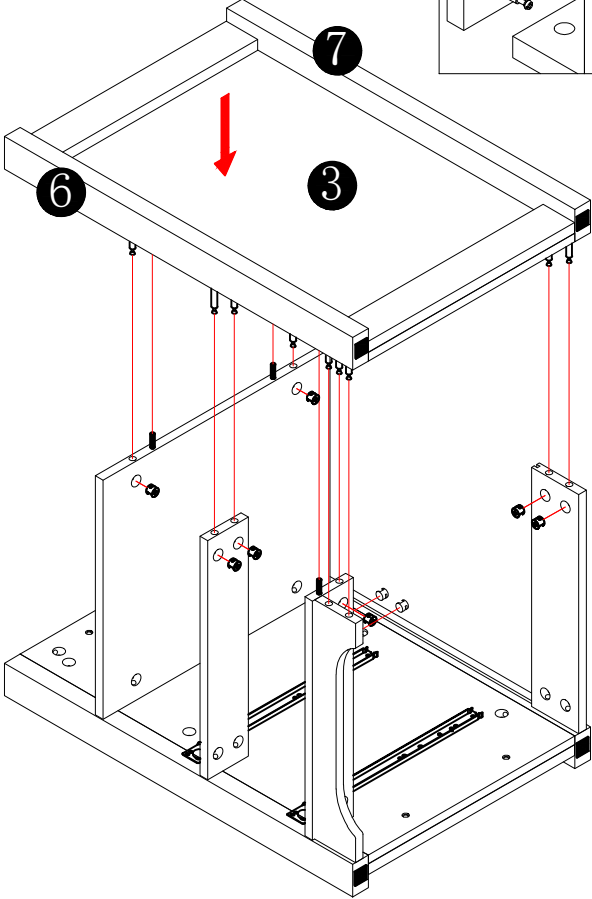


B



Ø15*10 9PCS

Step:14

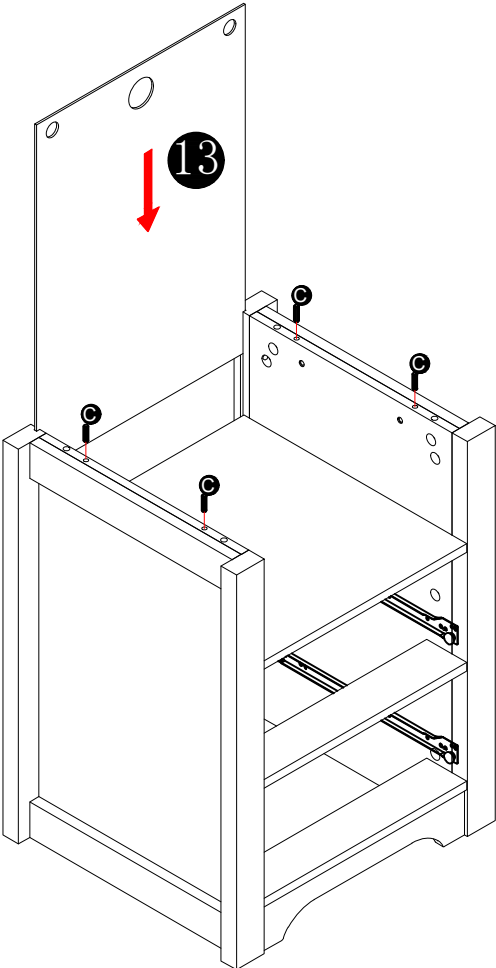


C




6*30 4PCS




Step:15

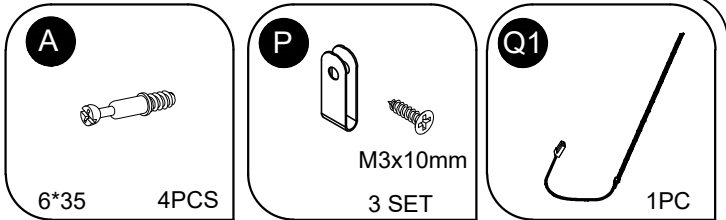





Before installing the LED strip
Peel off the blue sticker on the back of the LED strip

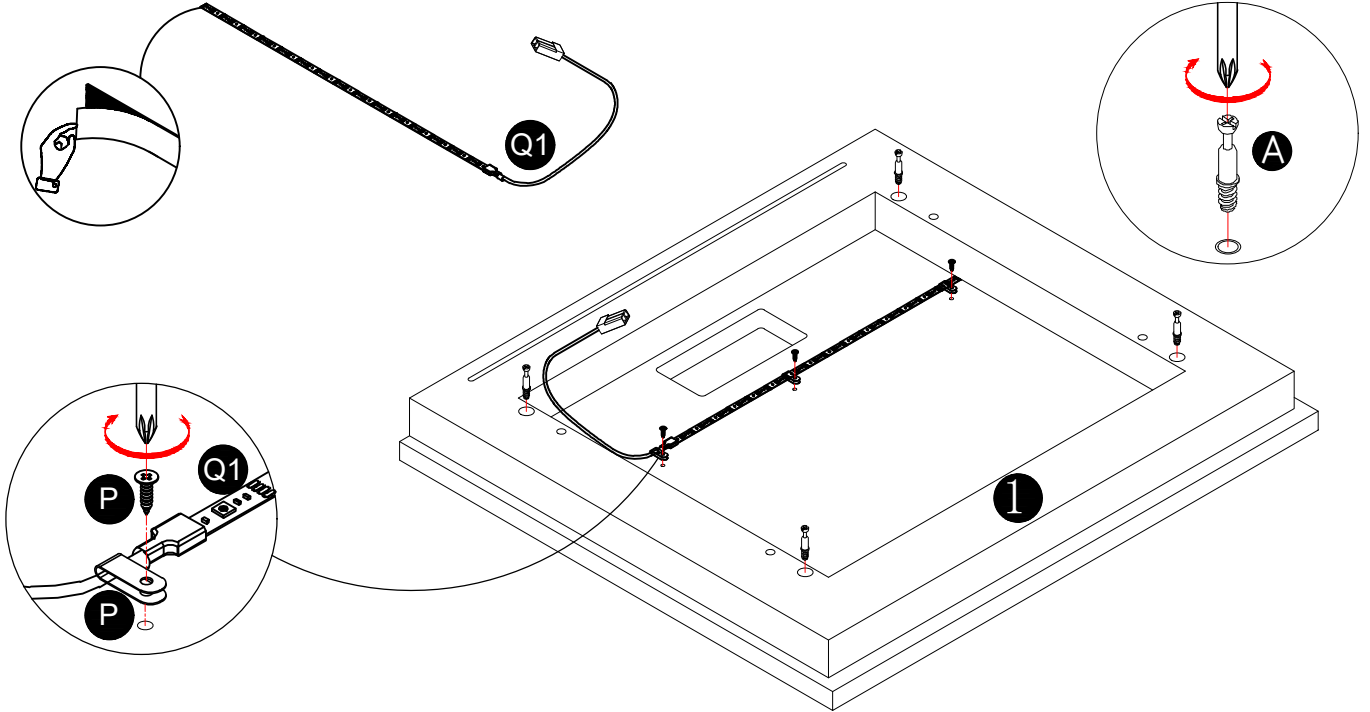

Step:16

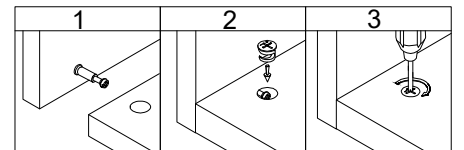
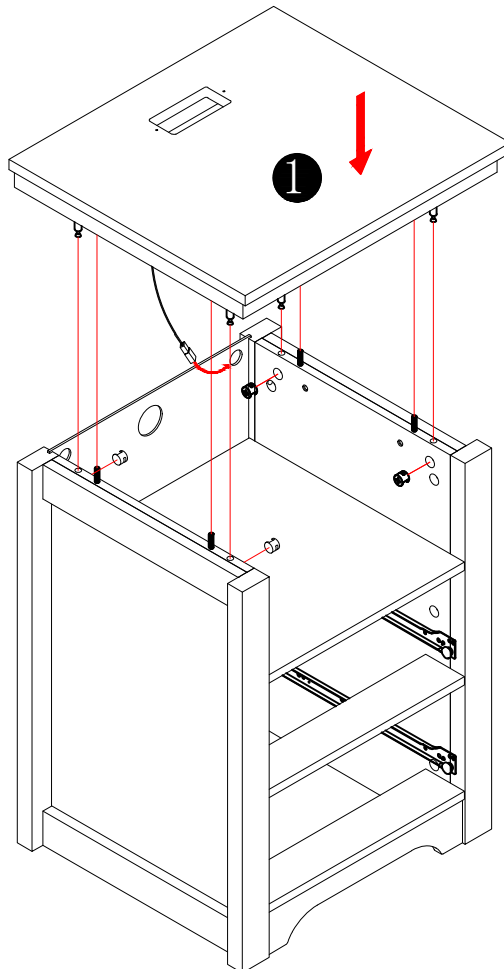
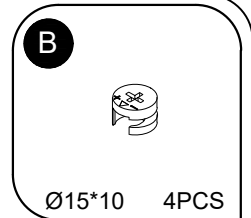


Step:17

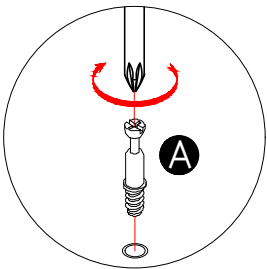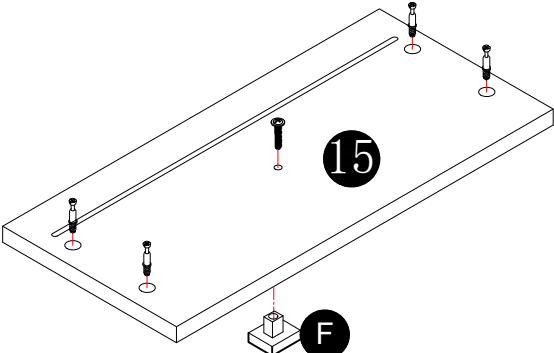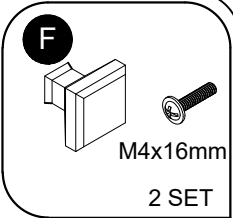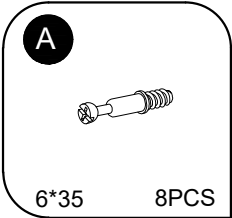


x2

Step:18

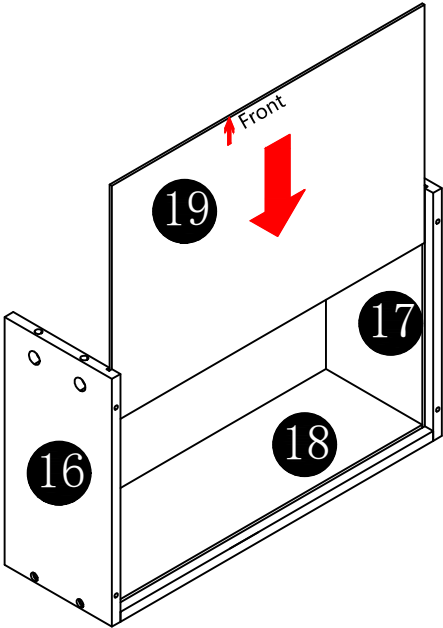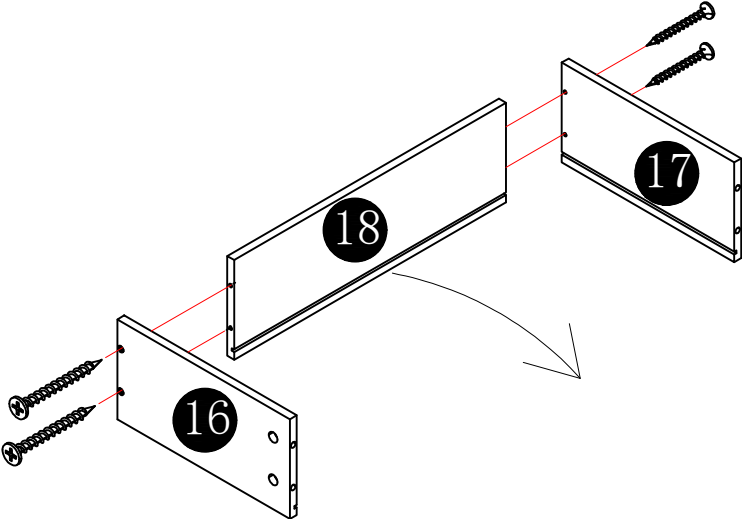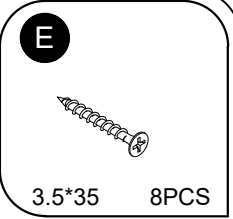

x2


Step:19

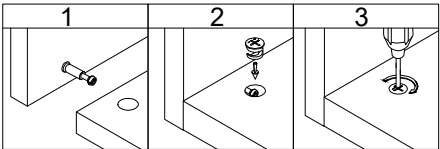

B



Ø15*10 8PCS

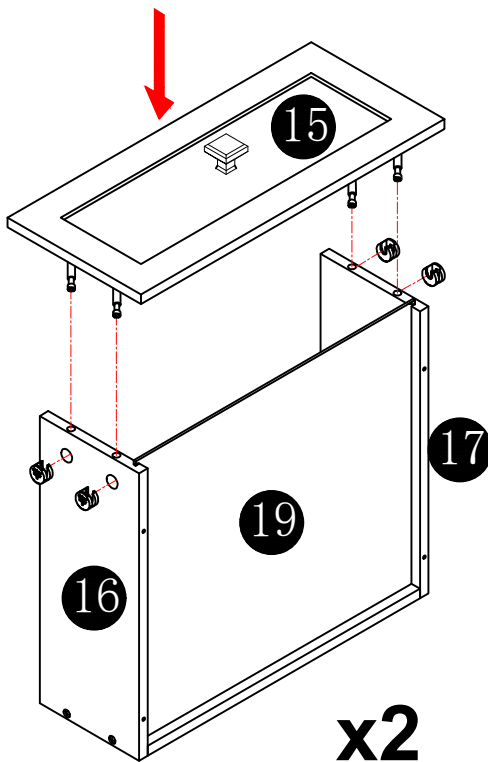

Step:20

DL



12"

2PCS

DR



12"


2PCS

D




3.5*12

8PCS


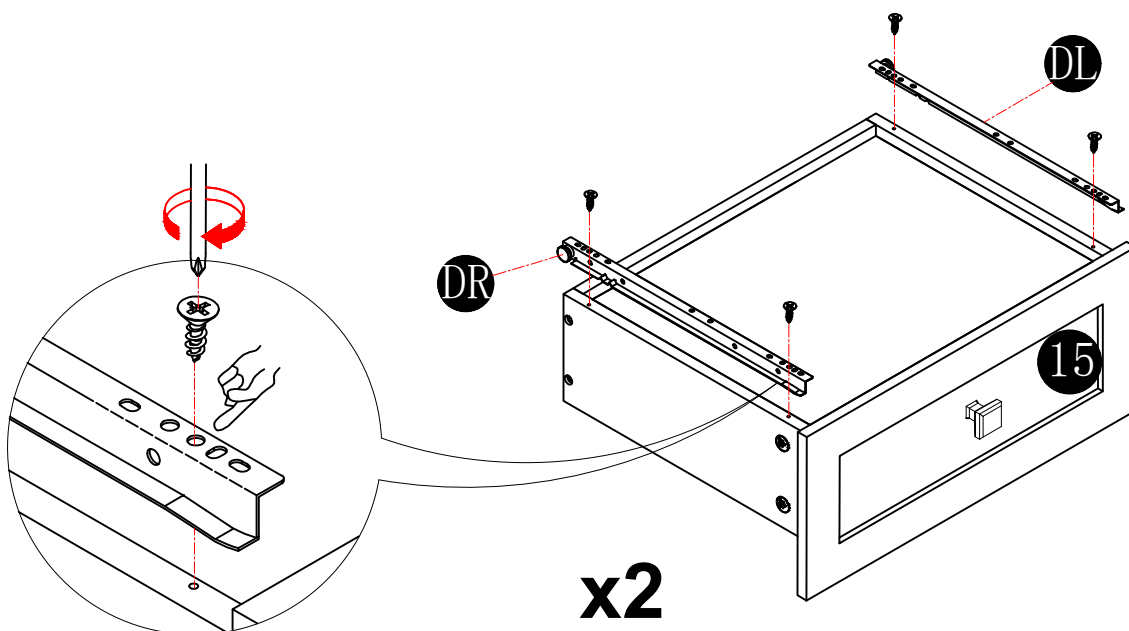


Step:21

(1)

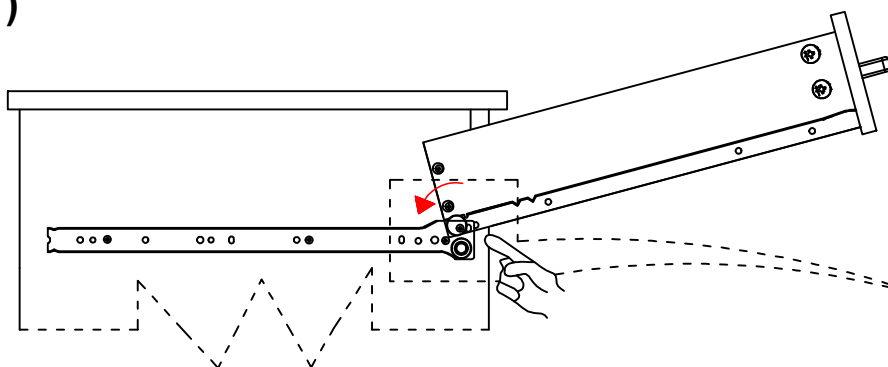


(2)

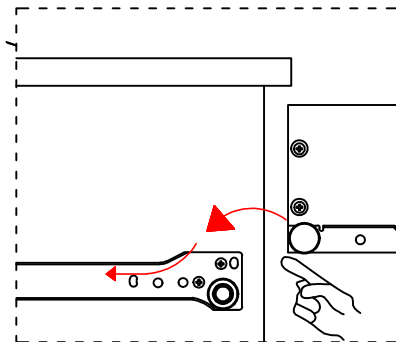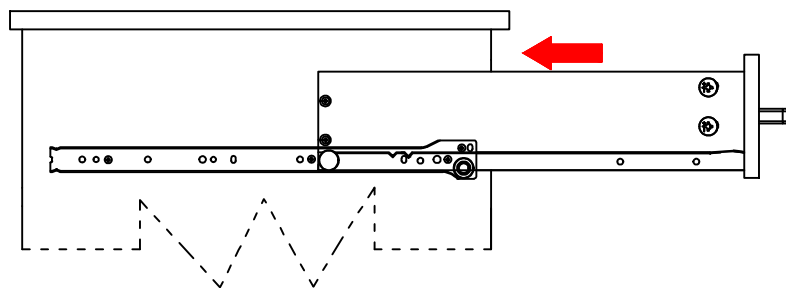

x2

M





1PC

N



3.5*12 2PCS

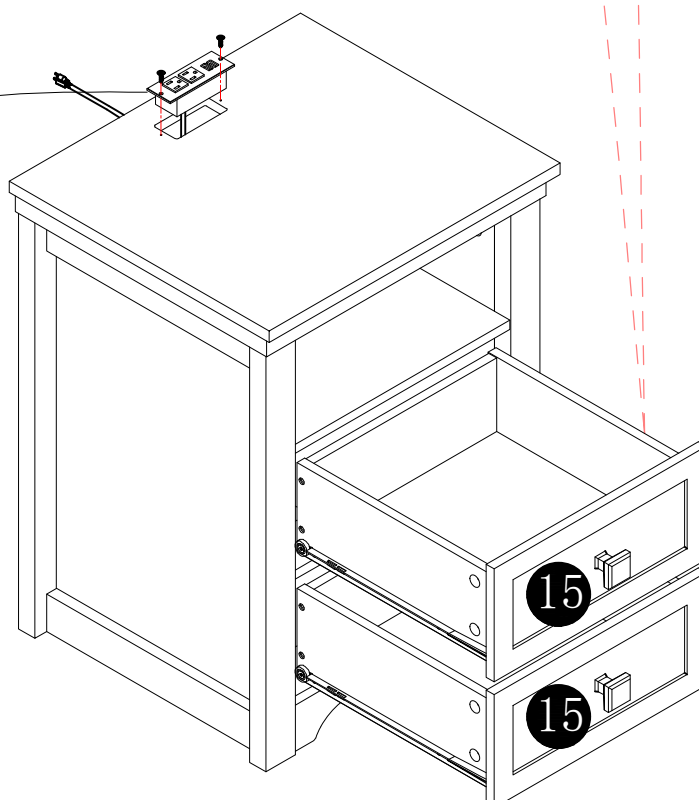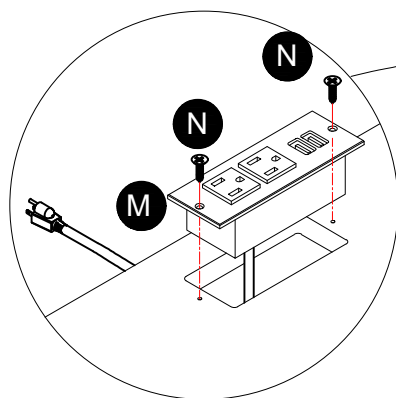


Step:22

LED strip




Wireless remote control board

Q2

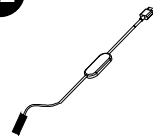

1PC

Q3

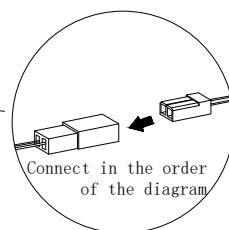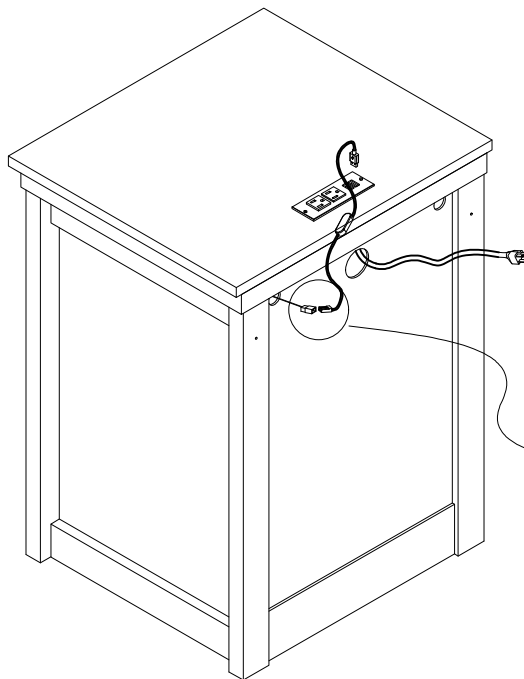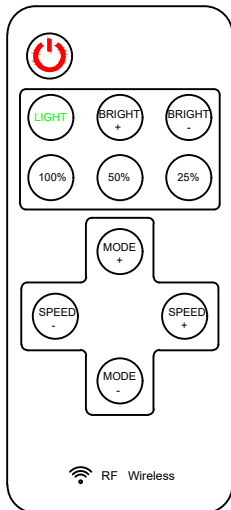

Step:23

G



3*14

6PCS

H



6PCS

K






2PCS

L





3.5*16

2PCS

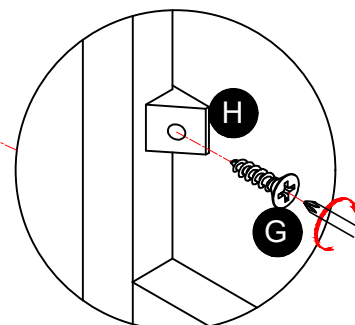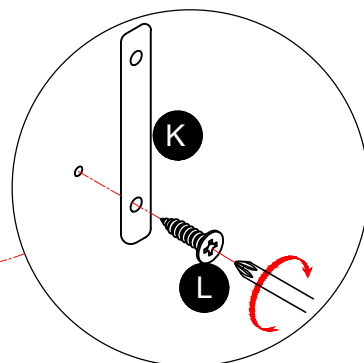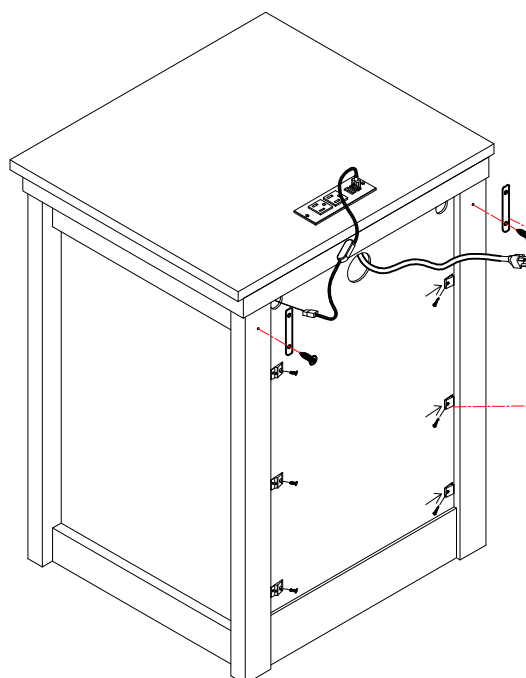

Step:24

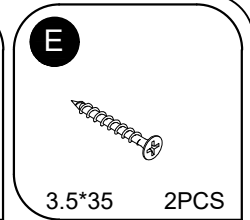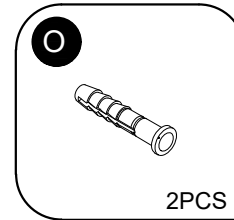

WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

