

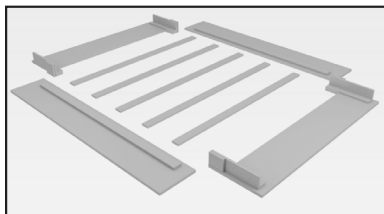
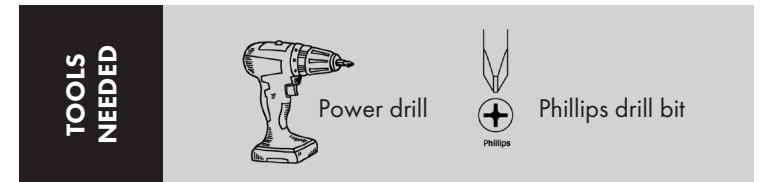
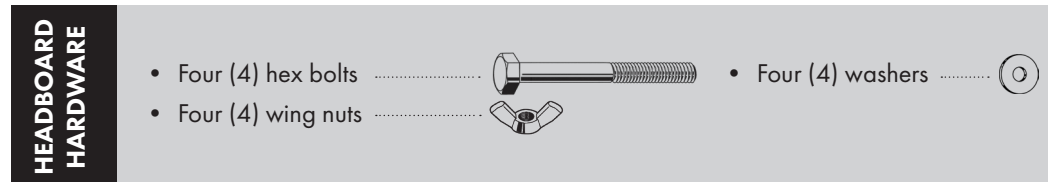
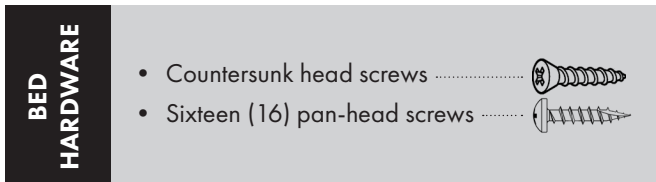
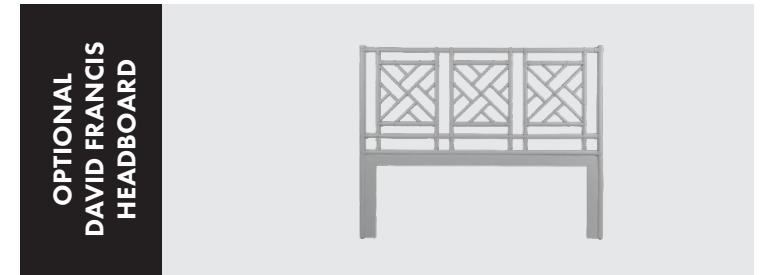



STANDARD BED ASSEMBLY INSTRUCTIONS

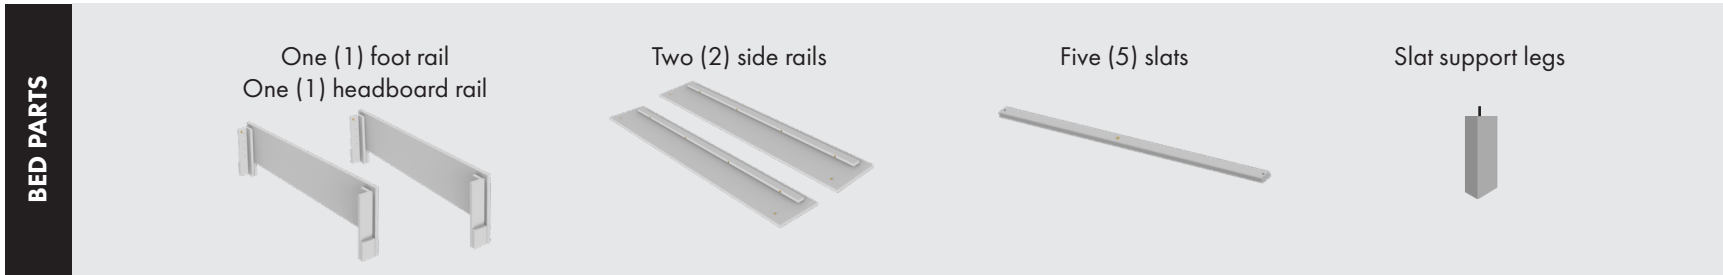


Step 1. Lay out foot rail, headboard rail, and side rails matching each corner with the corresponding numbers.

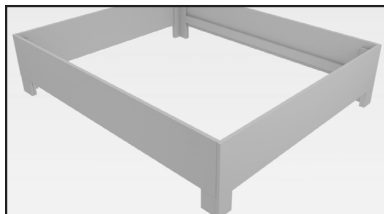


Step 2. Erect foot rail and headboard rail and mount side rails matching the corresponding numbers on each piece.

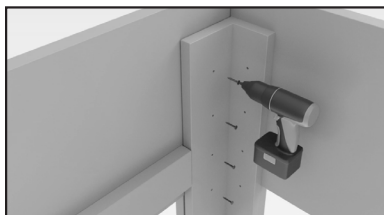


Step 3. Make sure you have perfectly square corners. Using a power drill, fasten four (4) pan-head screws into each connecting corner (4 pan-head screws per corner). Repeat for each corner until bed frame is fully secured.

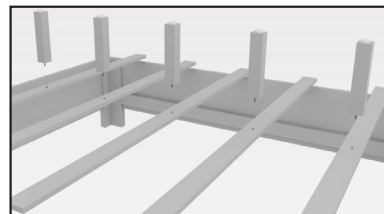


Step 4. Screw one (1) support leg on each slat, on the opposite side of the tee-nut. Place slats, spaced evenly, on the side rails. Using a power drill, fasten one (1) countersunk screw at each end of slats.

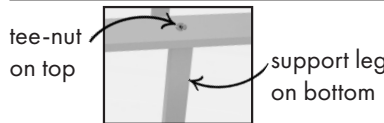

IF YOU PURCHASED A DAVID FRANCIS HEADBOARD, PLEASE CONTINUE ONTO STEP 5.

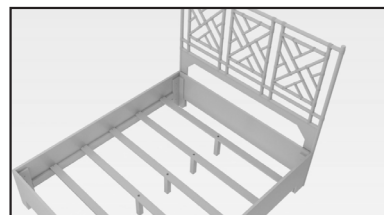


Step 5. Position the headboard against headboard rail. The David Francis nameplate should face the wall.

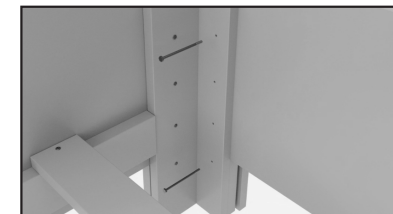

Step 6. Insert two (2) hex bolts through pre-drilled headboard rail from the inside of the headboard rail to the outside of the back of the headboard.



Step 7. Place one (1) washer per bolt, at the back of the headboard, secure with one (1) wingnut.

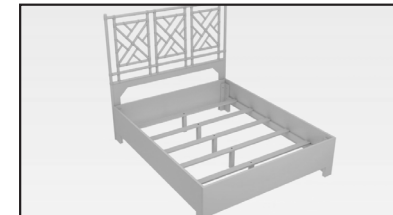

Step 8. Ensure all screws and wingnuts are secure.