
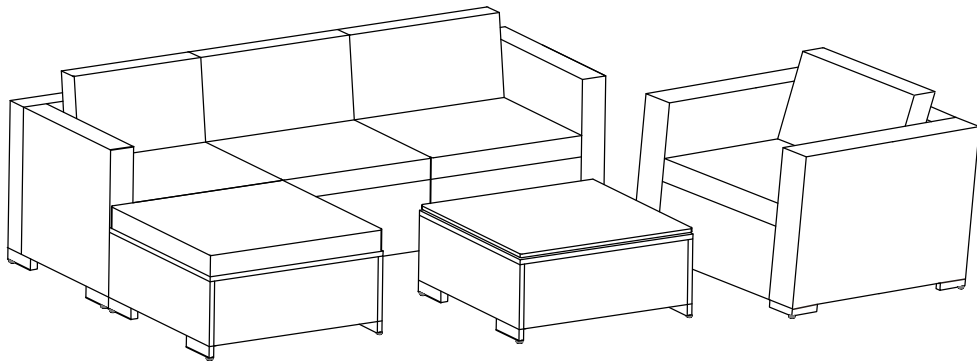
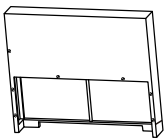
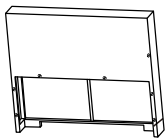

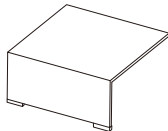

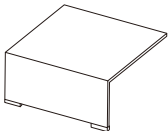

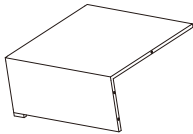
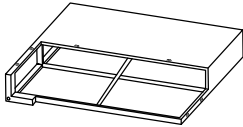


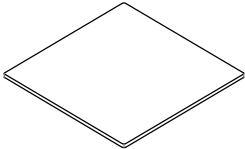
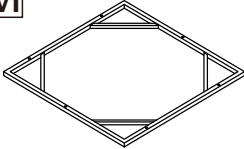







6 Piece Wicker Sofa Set



PART LIST


A  (arm & corner chair)	B  (arm chair)	C  (arm chair)	D  (arm chair)	E  (armless chair)
Right Arm Panel 3 PCS	Left Arm Panel 1 PC	Back Panel 1 PC	Seat Panel 1 PC	Back Panel 1 PC
F  (armless chair)	G  (armless & corner chair)	H  (corner chair)	I  (corner chair)	J  (coffee table & ottoman)
Seat Panel 1 PC	Side Panel 4 PCS	Seat Panel 2 PCS	Back Panel 2 PCS	Side Panel 4 PCS
K  (coffee table & ottoman)	L  (coffee table)	M  (coffee table & ottoman)	N  (armless\corner chair and arm chair)	O  (armless\corner chair and arm chair)
Side Panel 4 PCS	Glass Top 1 PC	Wicker Top 2 PCS	Seat Cushion 4 PCS	Back Cushion 4 PCS
P  (ottoman)				
Seat Cushion 1 PC				

HARDWARE LIST

#1  M6*30mm	#2  M6*40mm	#3  M6*50mm	#4  M6mm	#5  M6mm
Short Bolt 40 PCS (Extra 4)	Medium Bolt 24 PCS (Extra 2)	Long Bolt 20 PCS (Extra 2)	Flat Washer 128 PCS (Extra 12)	Hex Nut 44 PCS (Extra 4)
#6  M6mm	#7  M6mm	#8 		
Allen Wrench 2 PCS	Wrench 2 PCS	Plastic Clip 6 PCS		

Step 1. Lay back panel (part C) upside down on a soft flat surface, such as carpet, as shown below. Attach right arm panel (part A) and left arm panel (part B) to back panel (part C) using medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

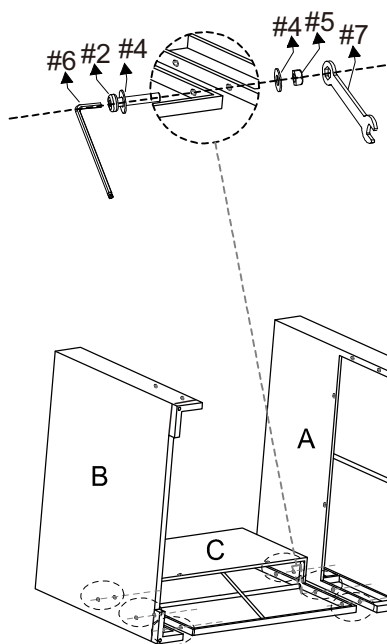

#2		x6
#4		x12
#5		x6
#6		x1
#7		x1


Step 2. Attach seat panel (part D) to right arm panel (part A), left arm panel (part B) and back panel (part C) using long bolts (part #3), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please fully tighten all bolts at this time.

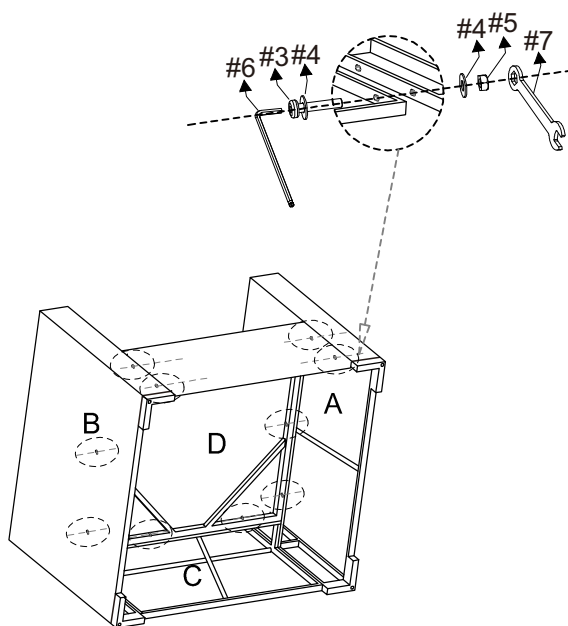


#3		x10
#4		x20
#5		x10
#6		x1
#7		x1

Step 3. Carefully turn unit upright. Add seat cushion (part N) and back cushion (part O) as shown below.

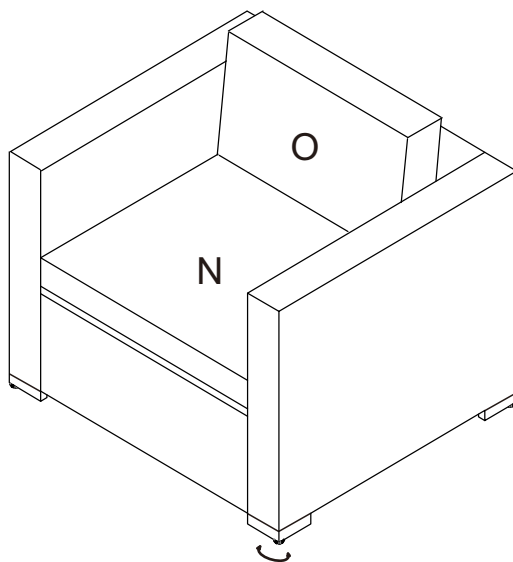


Step 5. Lay back panel (part E) upside down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part F) to back panel (part E) using long bolts (part #3), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

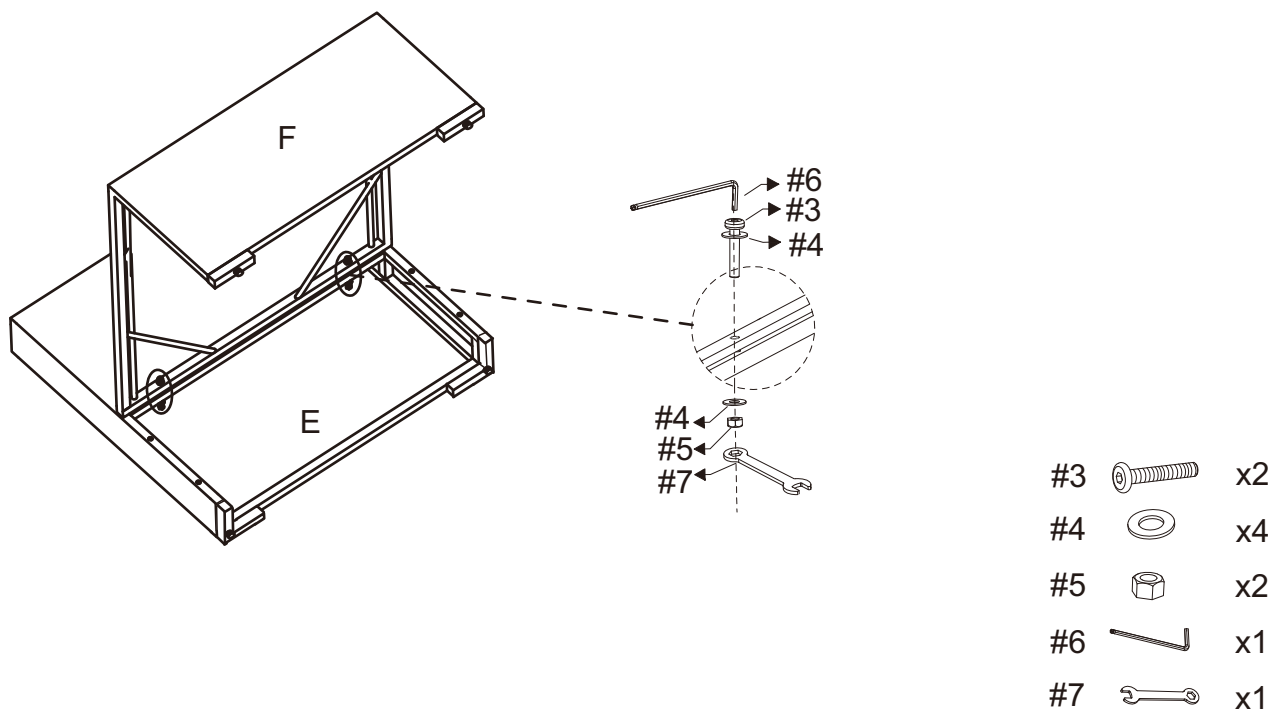


Step 6. Attach side panels (part G) to back panel (part E) and seat panel (part F) using short bolts (part #1), medium bolts (part #2), hex nuts (part #5), flat washers (part #4), allen wrench (part #6) and wrench (part #7).

NOTE: Please fully tighten all bolts at this time.

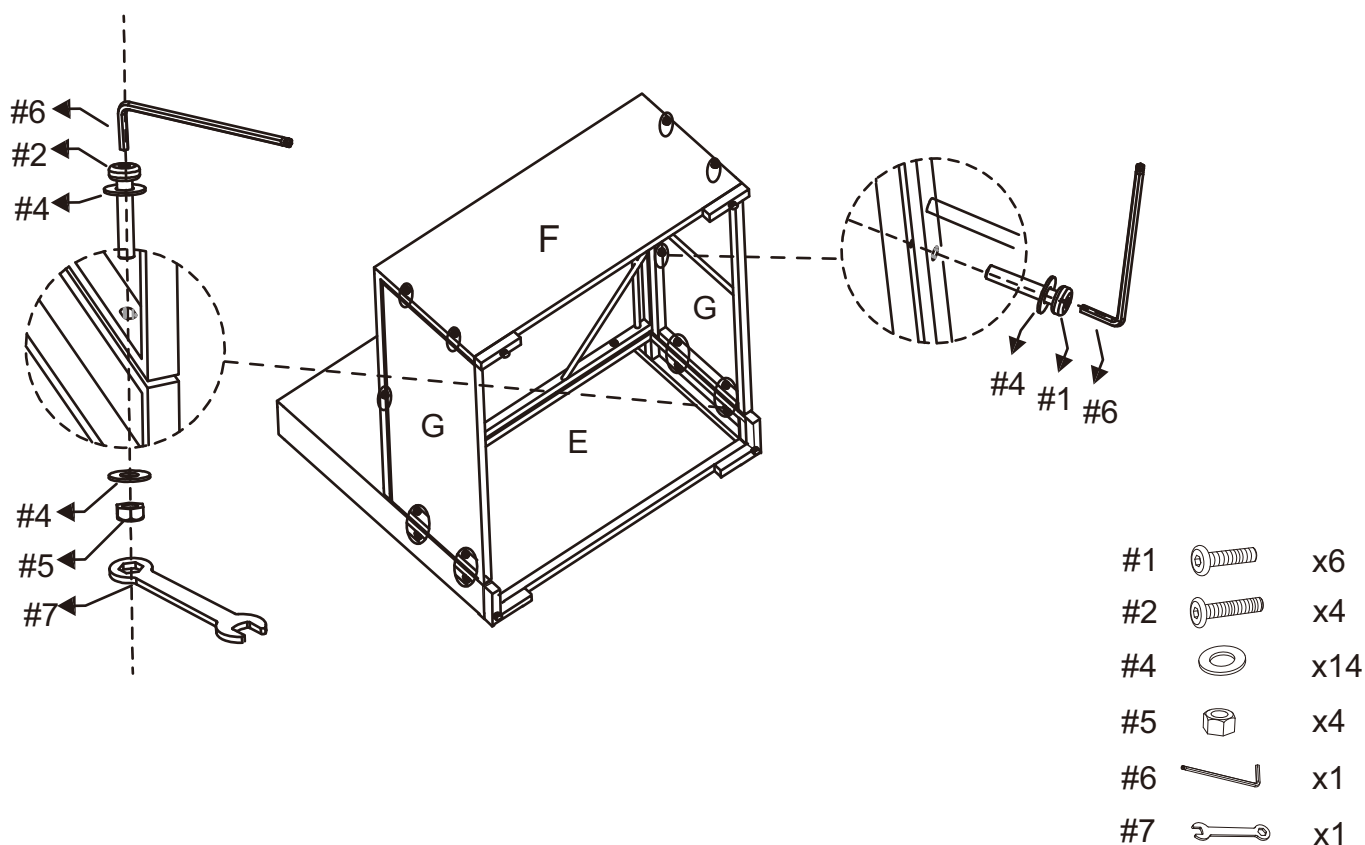


Step 7. Carefully turn unit upright. Add seat cushion (part N) and back cushion (part O) as shown below.

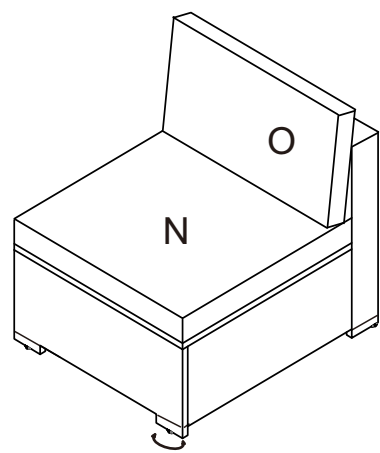


Step 8. Lay right arm panel (part A) upside down on a soft flat surface, such as carpet, as shown below. Attach back panel (part I) to right arm panel (part A) using medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

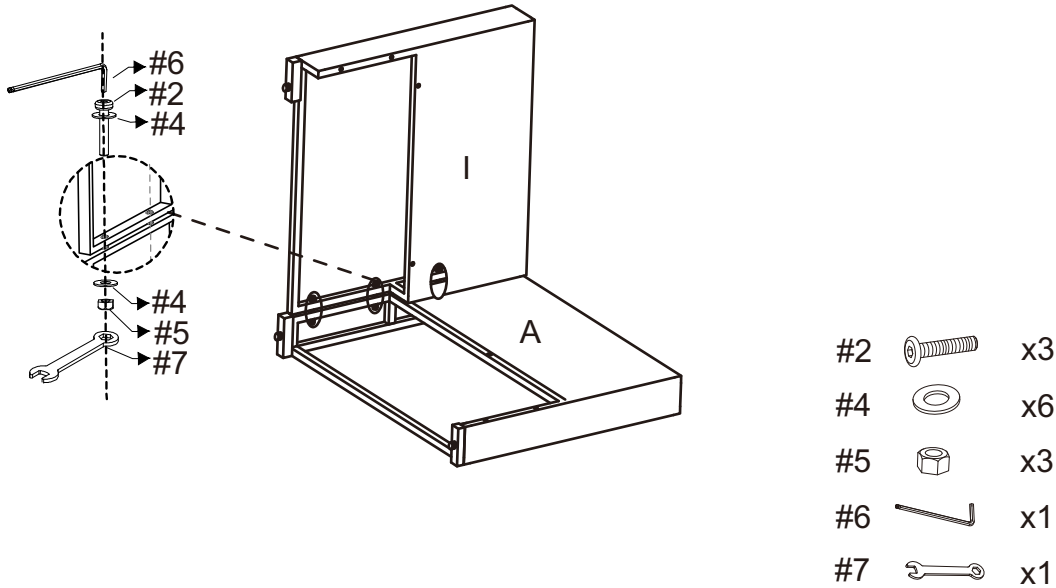


Step 9. Attach seat panel (part H) to back panel (part I) and right arm panel (part A) using medium bolts (part #2), long bolts (part #3), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

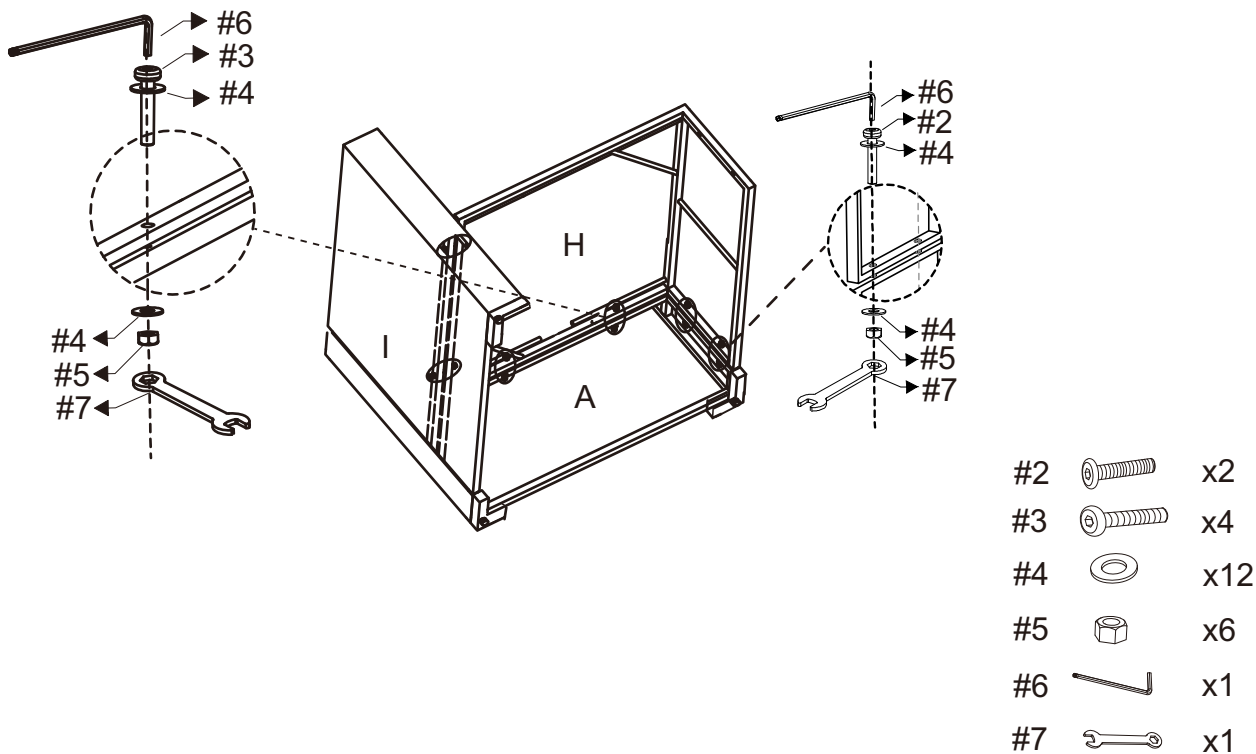


Step 10. Attach side panel (part G) to back panel (part I) and seat panel (part H) using short bolts (part #1), medium bolts (part #2), flat washers (part #4), hex nuts (part #5), allen wrench (part #6) and wrench (part #7).


NOTE: Please fully tighten all bolts at this time.

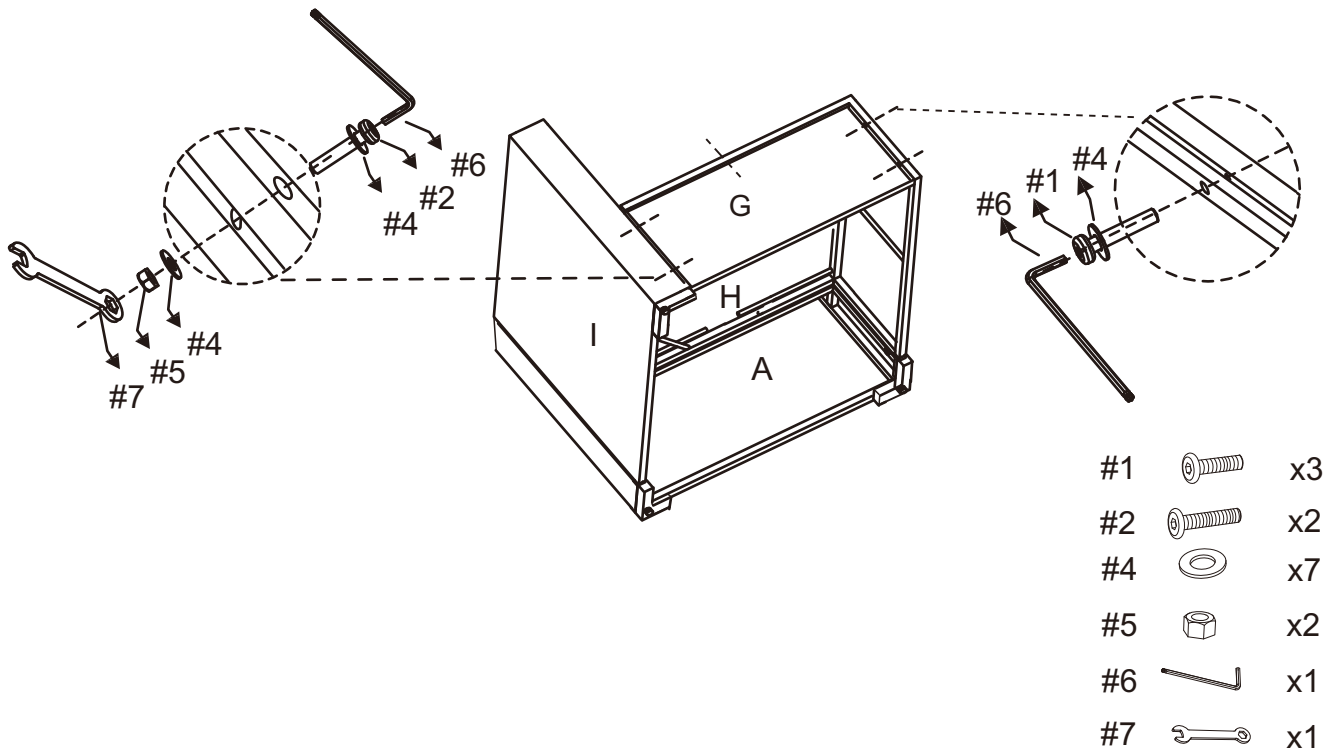

Step 11. Carefully turn unit upright. Add seat cushion (part N) and back cushion (part O) as shown below. Repeat steps 8-11 to assemble remaining corner chair.

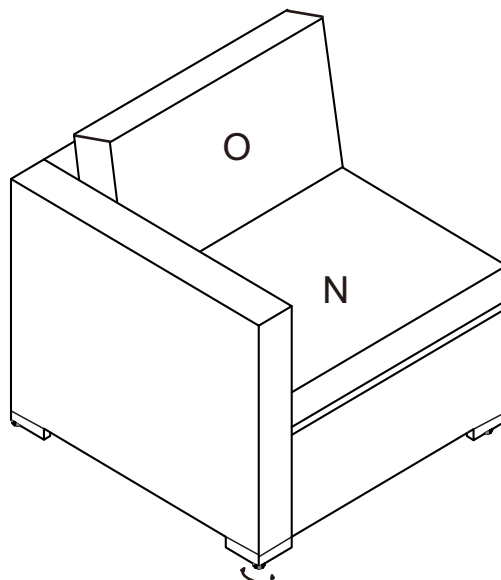


Step 12. Use plastic clips (part #8) to secure additional units together as shown.

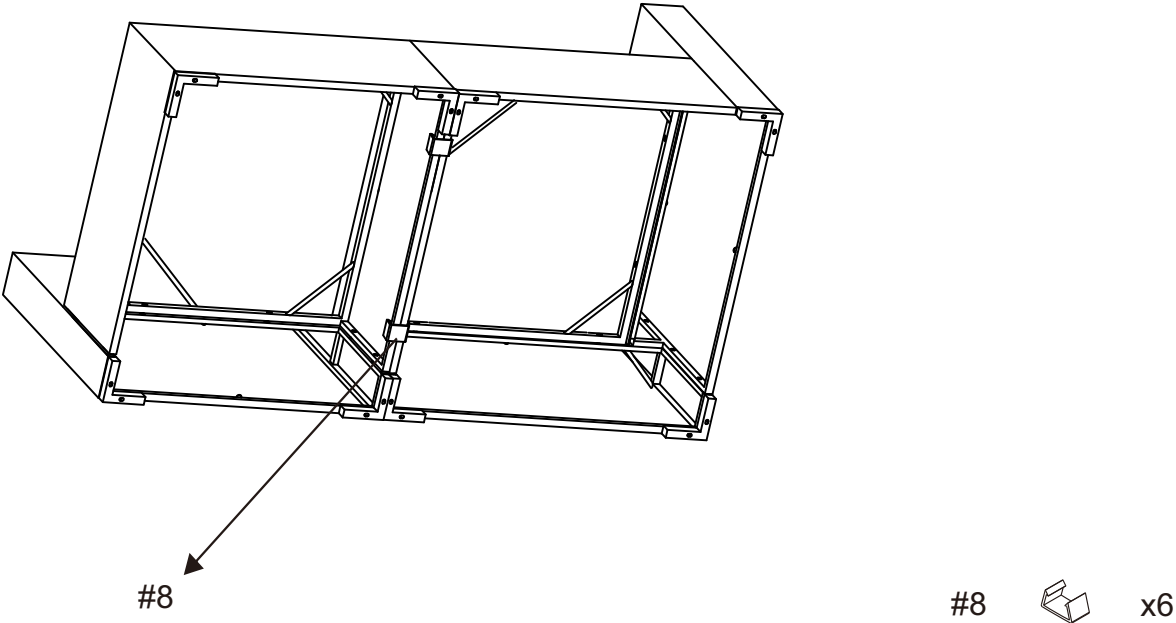


Step 13. Lay wicker top (part M) upside down on a soft flat surface, such as carpet, as shown below. Attach side panels (part J) to wicker top (part M) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

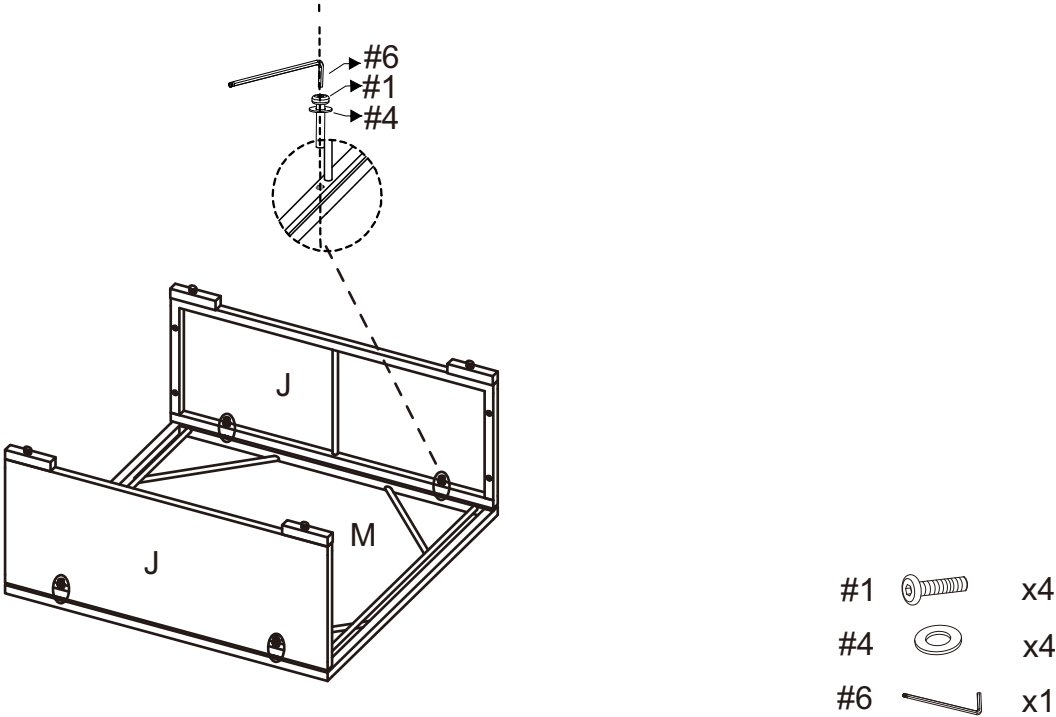


Step 14. Attach side panels (part K) to side panels (part J) and wicker top (part M) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

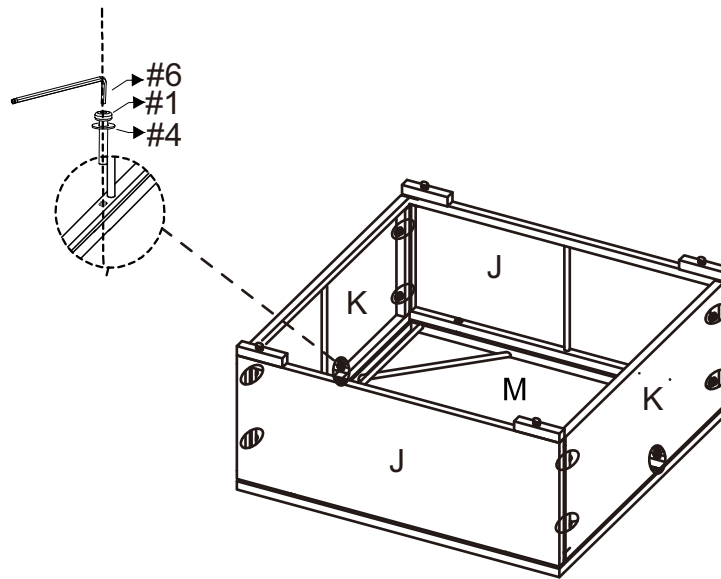


#1		x10
#4		x10
#6		x1

Step 15. Carefully turn unit upright. Place glass top (part L) on wicker top (part M).

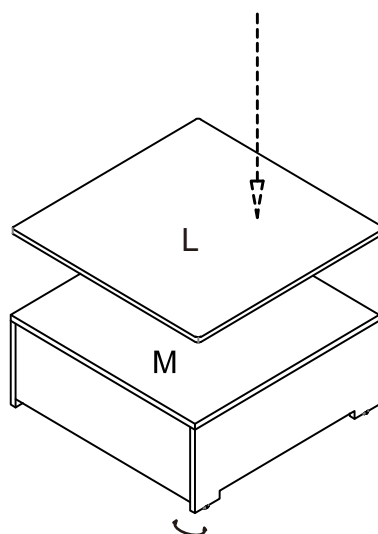

Step 16. Lay wicker top (part M) upside down on a soft flat surface, such as carpet, as shown below. Attach side panels (part J) to wicker top (part M) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

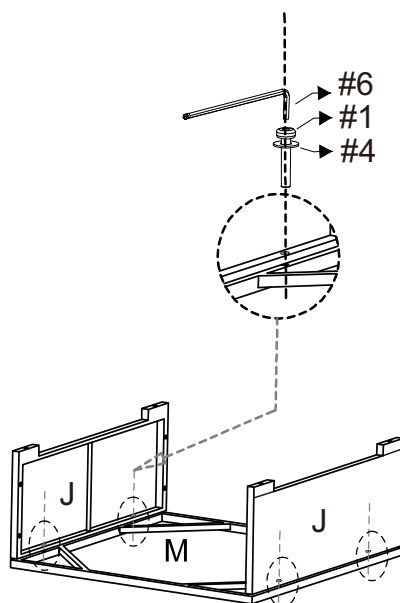

#1		x4
#4		x4
#6		x1

Step 17. Attach side panels (part K) to wicker top (part M) and side panels (part J) using short bolts (part #1), flat washers (part #4) and allen wrench (part #6).

NOTE: Please fully tighten all bolts at this time.

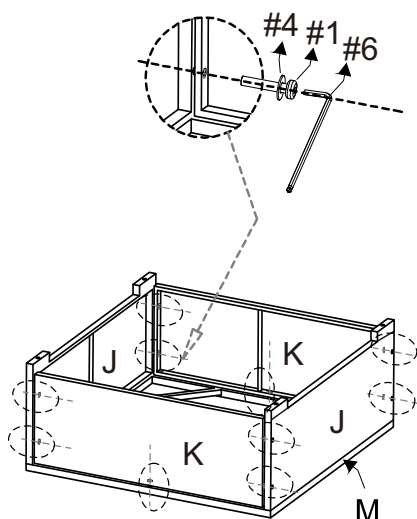

#1		x10
#4		x10
#6		x1

Step 18. Carefully turn unit upright. Add seat cushion (part P) as shown below.

