


Installation & Assembly

Needed for Assembly:

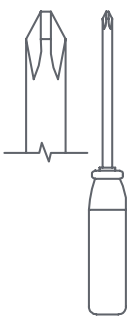


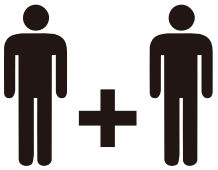



2 People

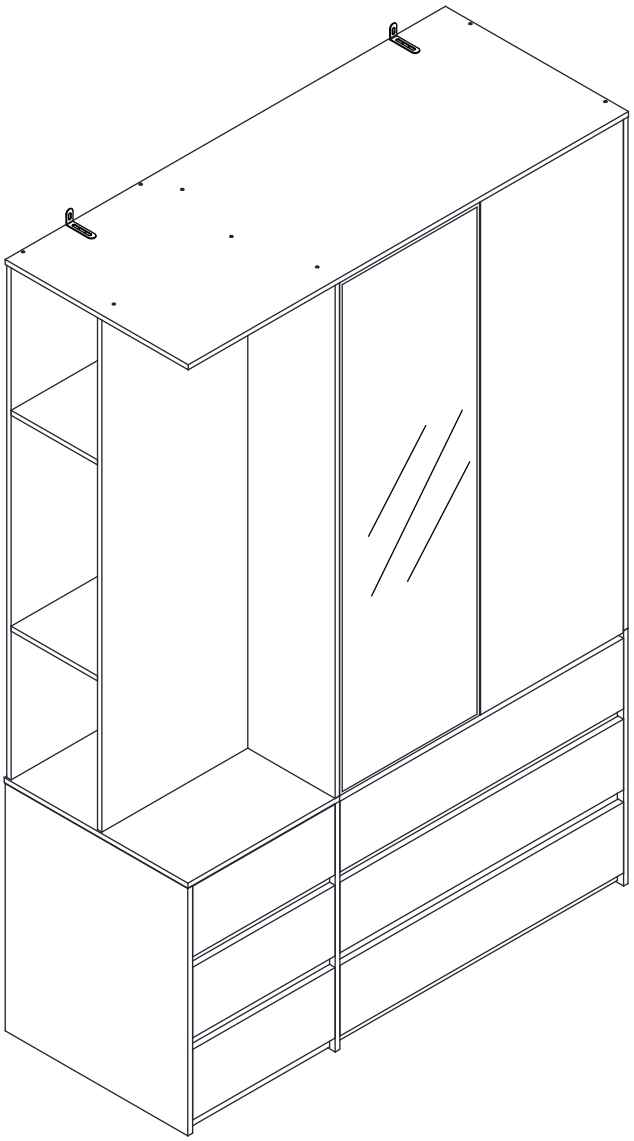

Exploded View

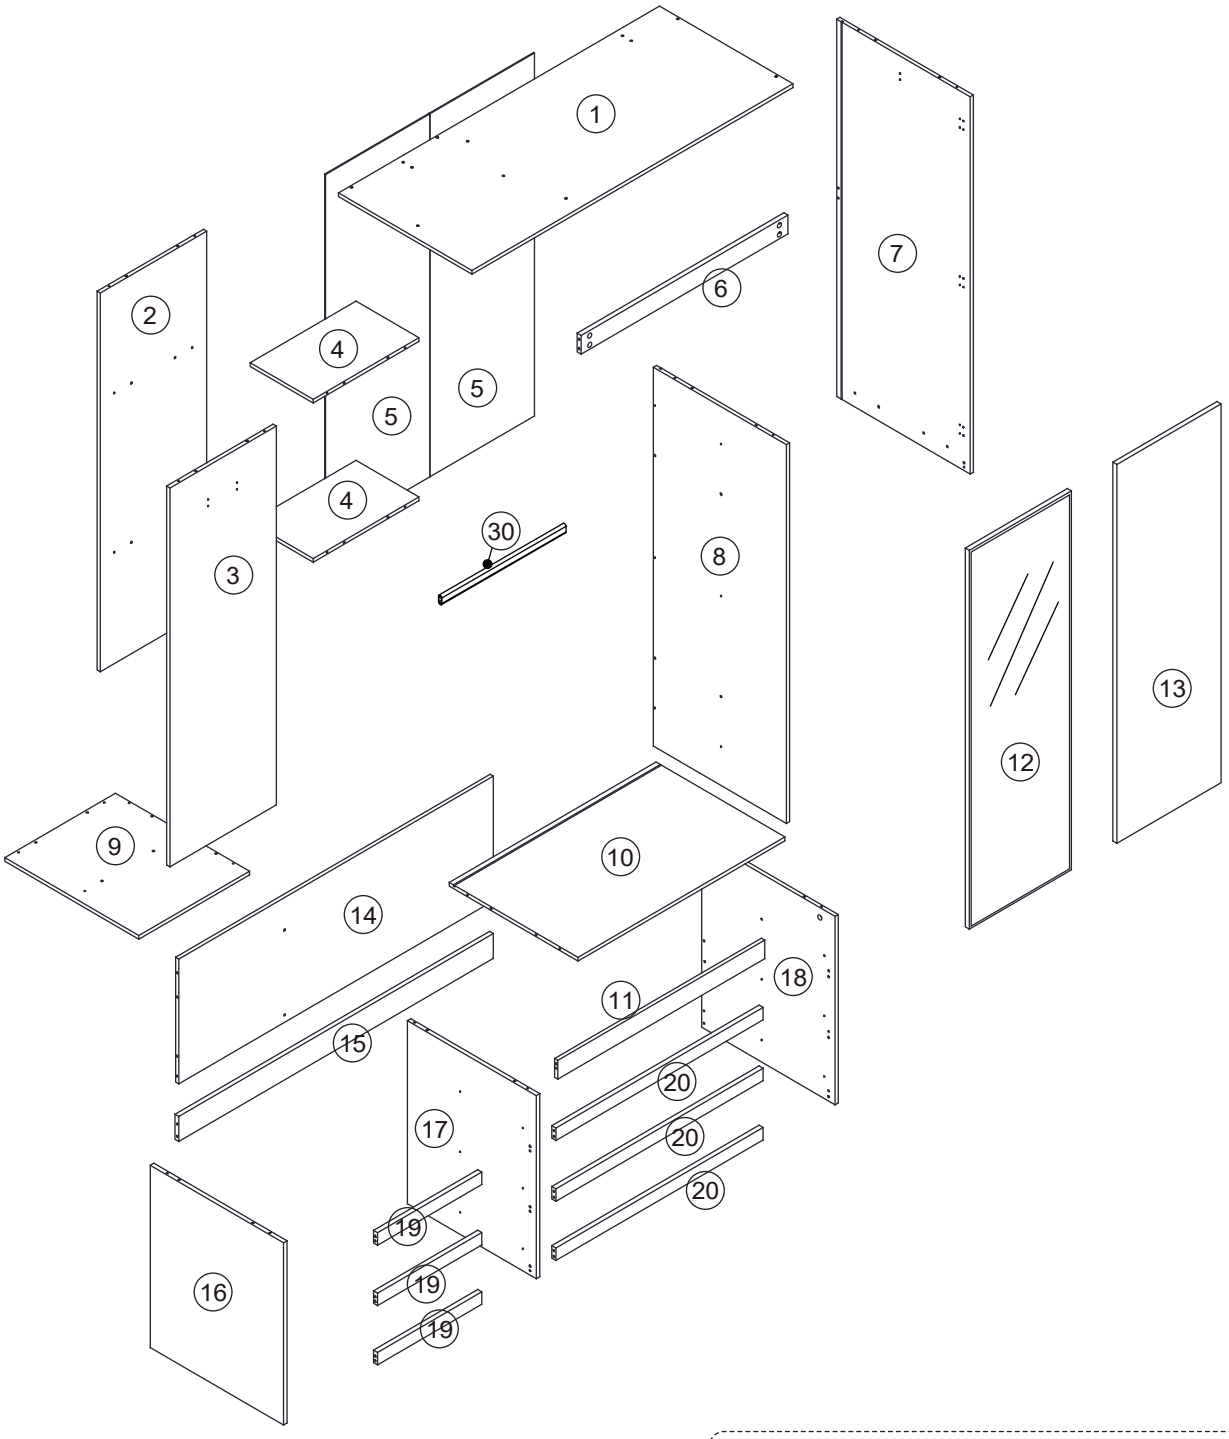


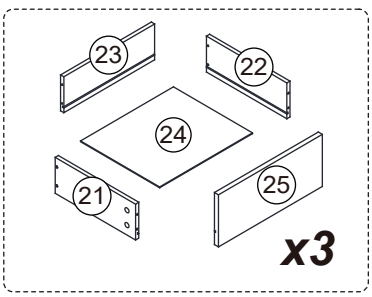


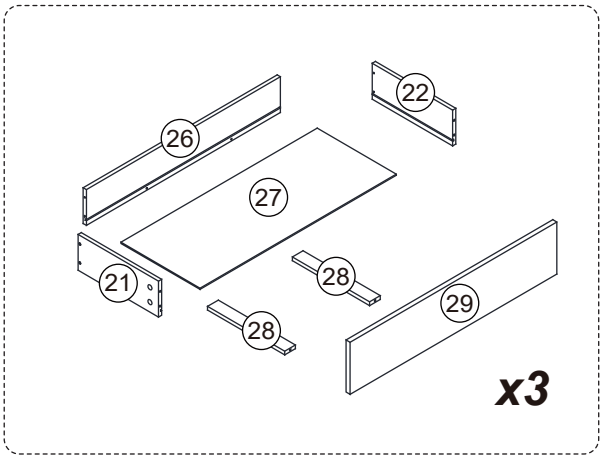


Fittings


A x 74+1
M6 x 35 mm


B x 74+1
φ15 x 9.5 mm


C x 55+1
φ6 x 30 mm



D x 22+1
φ5 x 45mm


E x 58+1
φ3.5 x 12mm



F x 2


G x 1


H x 1


I x 1
4 mm


J x 2


K x 32
φ4 x 35 mm



L x 6
φ35 mm


M x 36
φ4 x 12 mm


N x 2
75 x 15 x 30 mm



O x 4
φ4 x 12 mm



CL x 6
300 mm


CR x 6
300 mm


DL x 6
300 mm



DR x 6
300 mm



P x 2
φ6 x 30 mm


Q x 8

CAM-LOCK



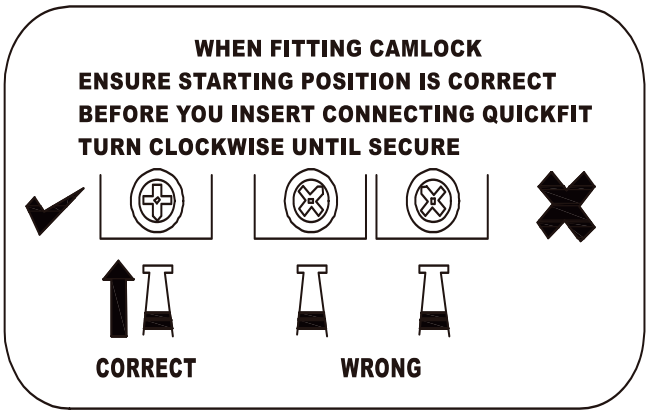


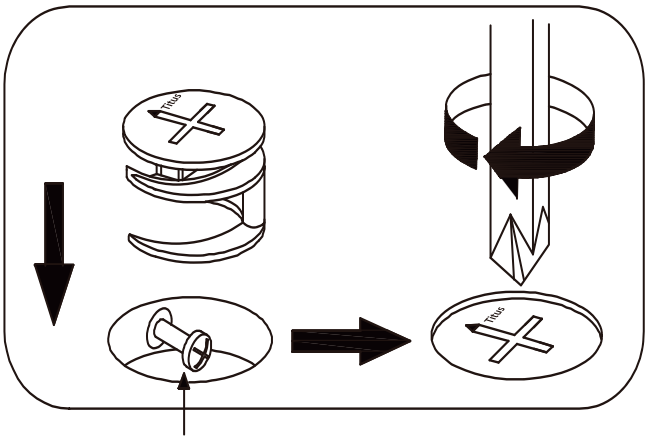


Quickfit head needs to be in centre

QUICKFIT

Tighten until shoulder is flush with panel.DO not overtighten or undertighten (see example below

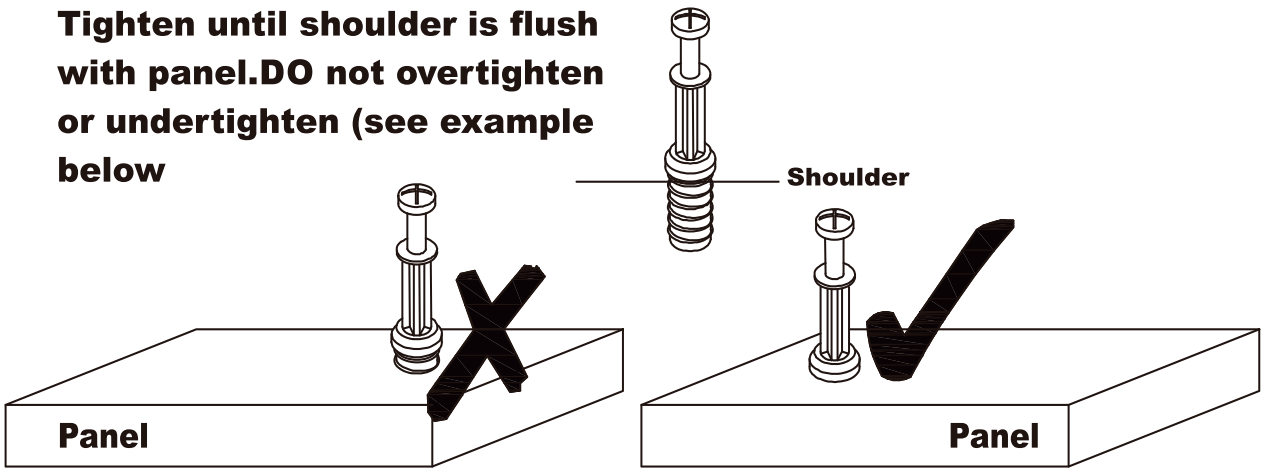

Step 1

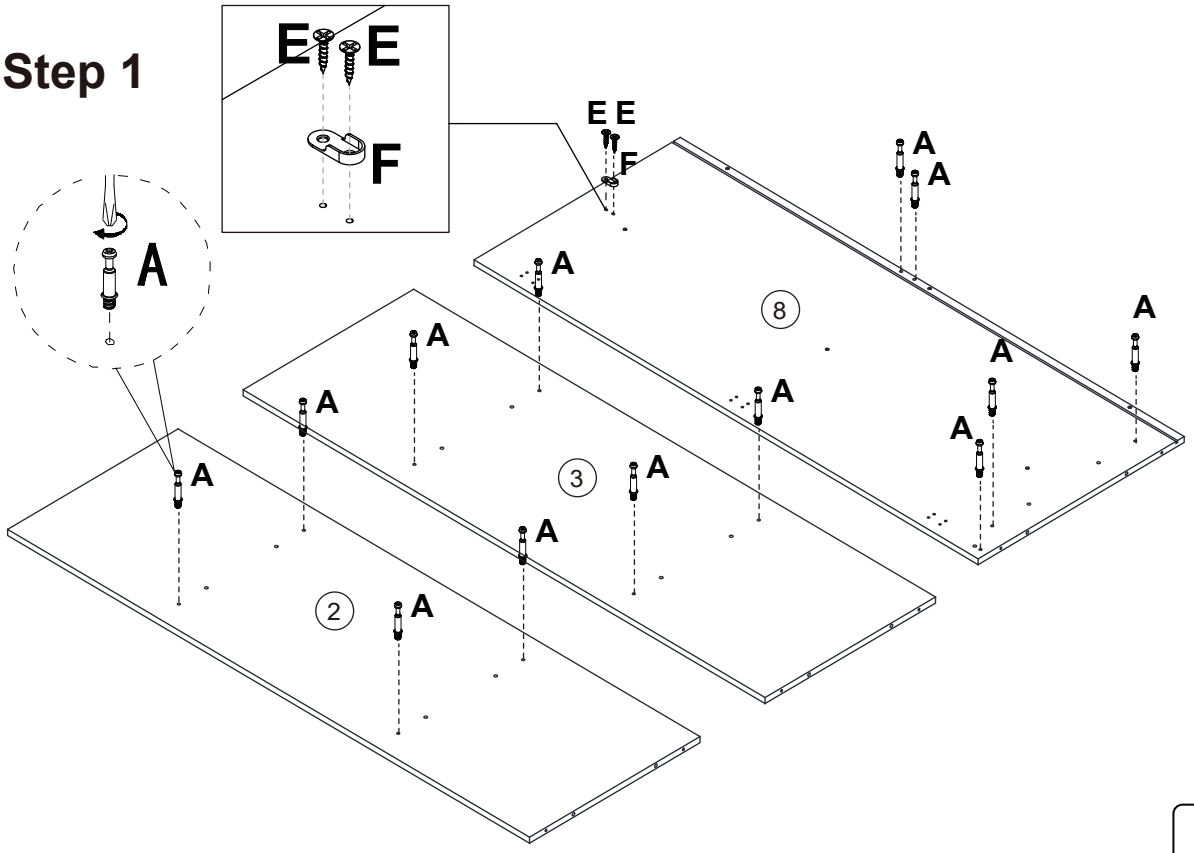


E x 2
φ3 .5x 12 mm

F x 1

A x 13
M6 x 35 mm

Step 2

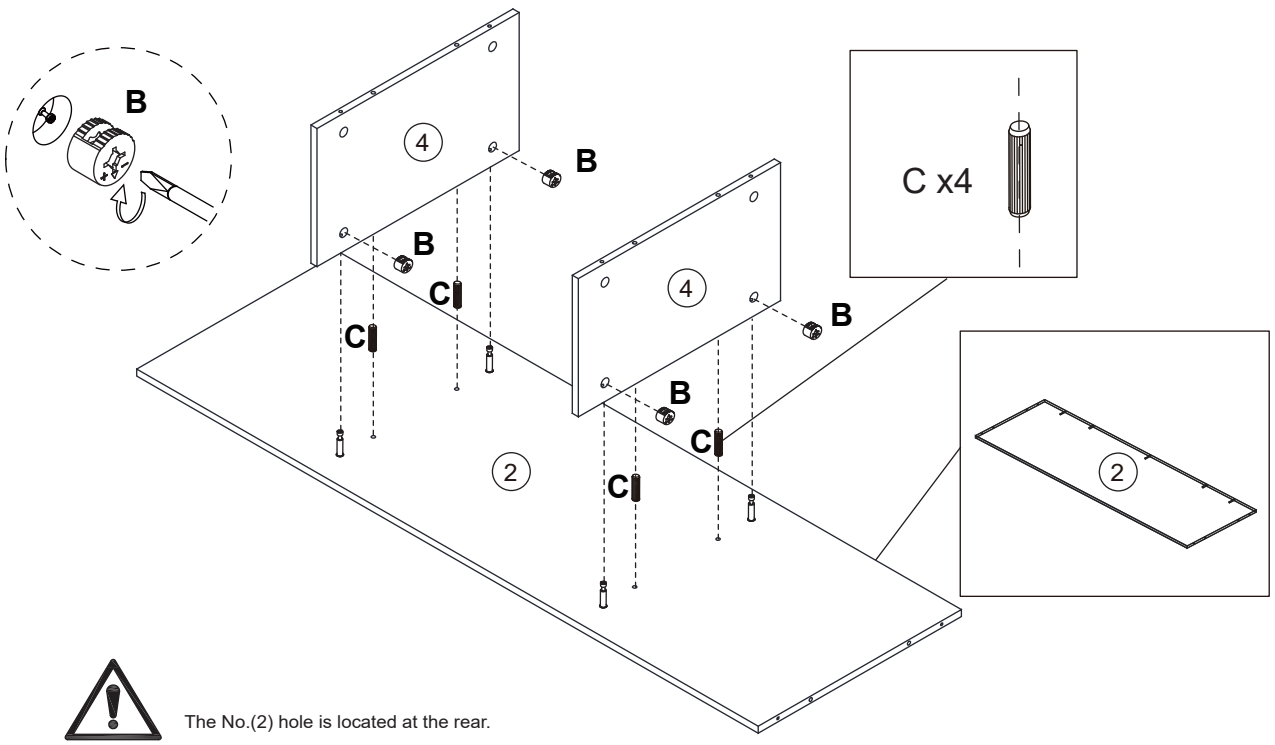



The No.(2) hole is located at the rear.


B x 4
φ15 x 9.5 mm

C x 4
φ6 x 30 mm


Step 3

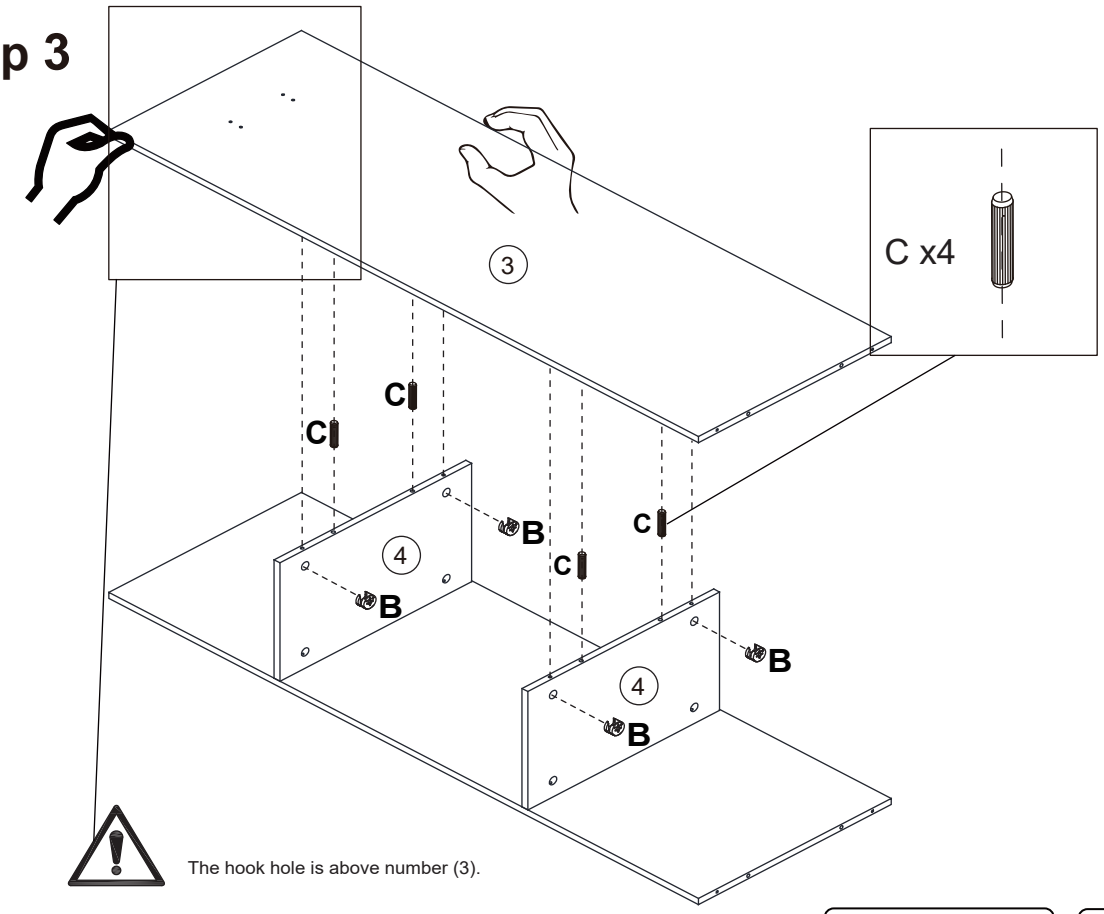

3
C x4
C
C
C
B
C
B
4
4
B
B
The hook hole is above number (3).


B x 4
φ15 x 9.5 mm


C x 4
φ6 x 30 mm


Step 4

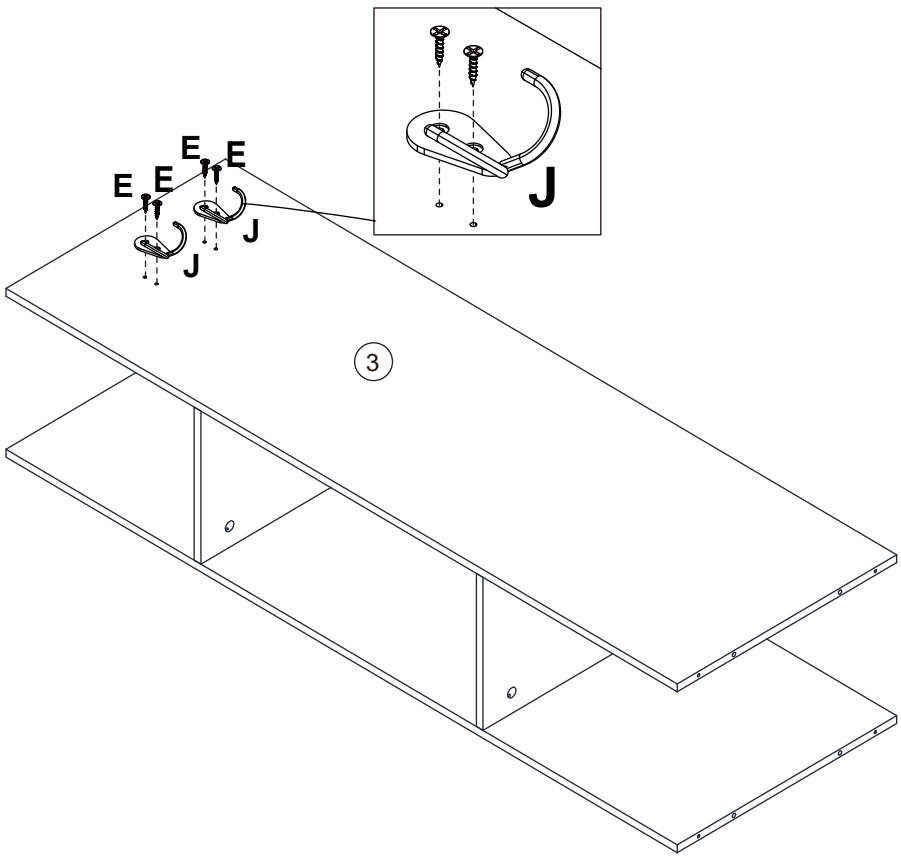

E
E
E
E
J
J
J
3


E x 4
φ3.5 x 12 mm



J x 2


Step 5

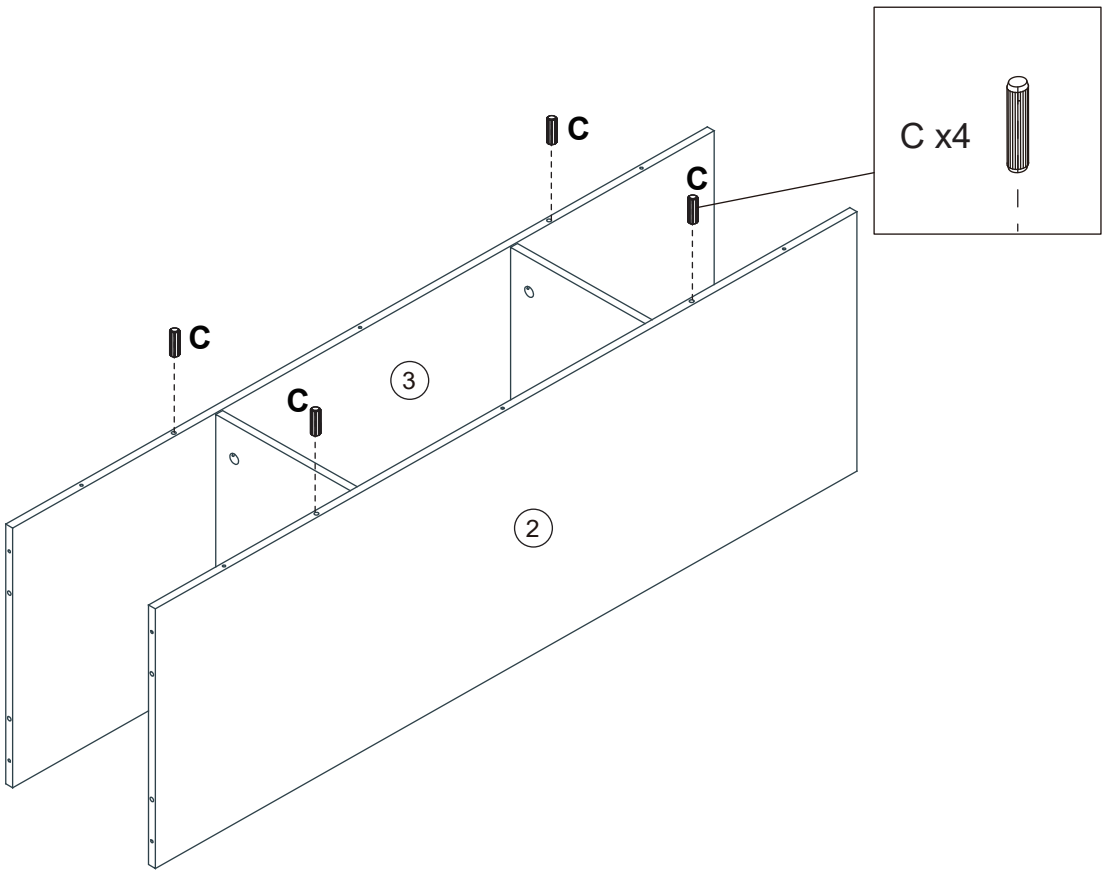





Step 6

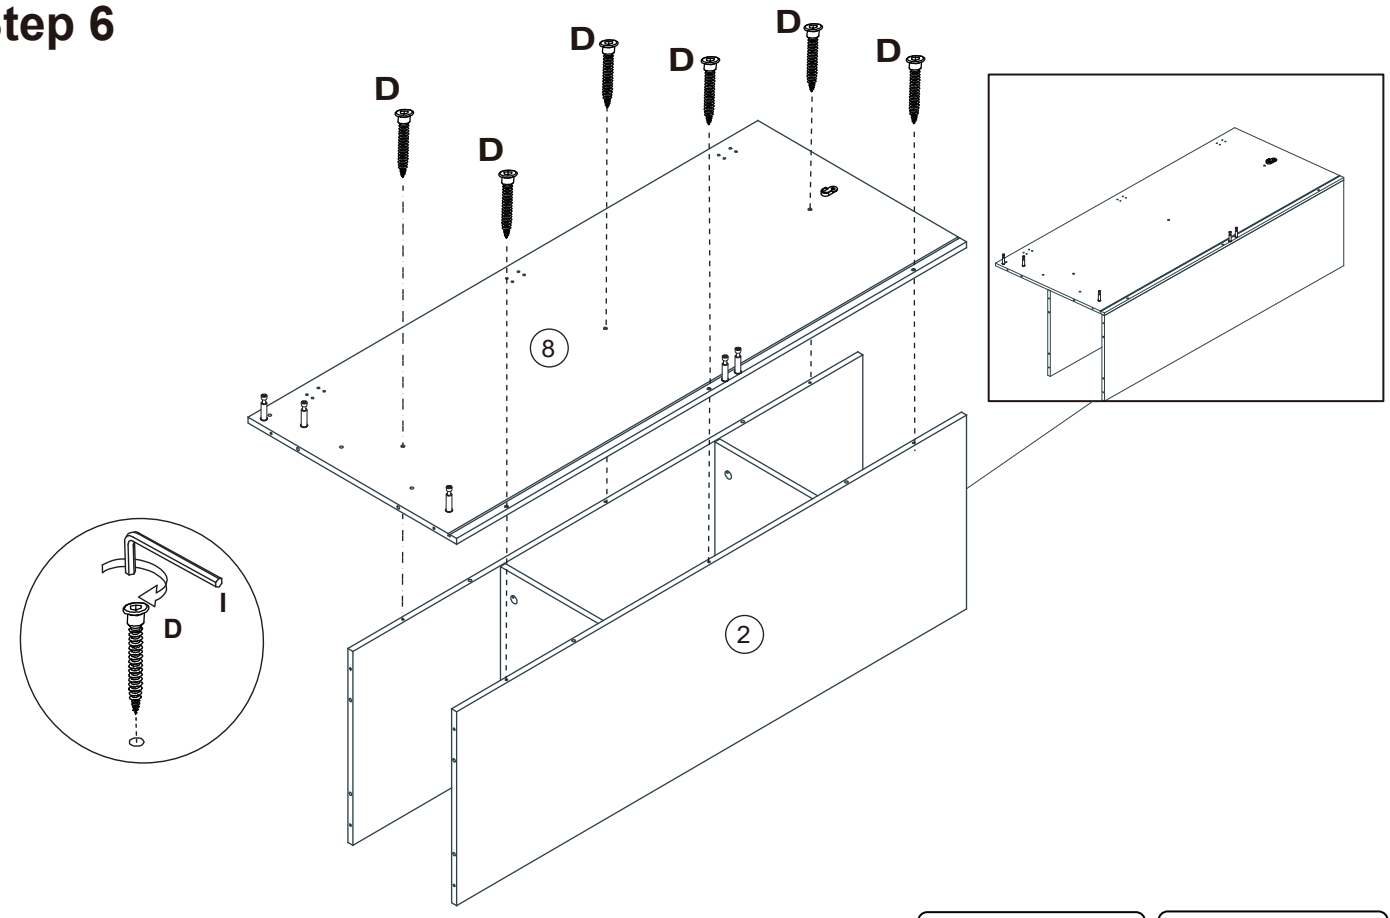







Step 7

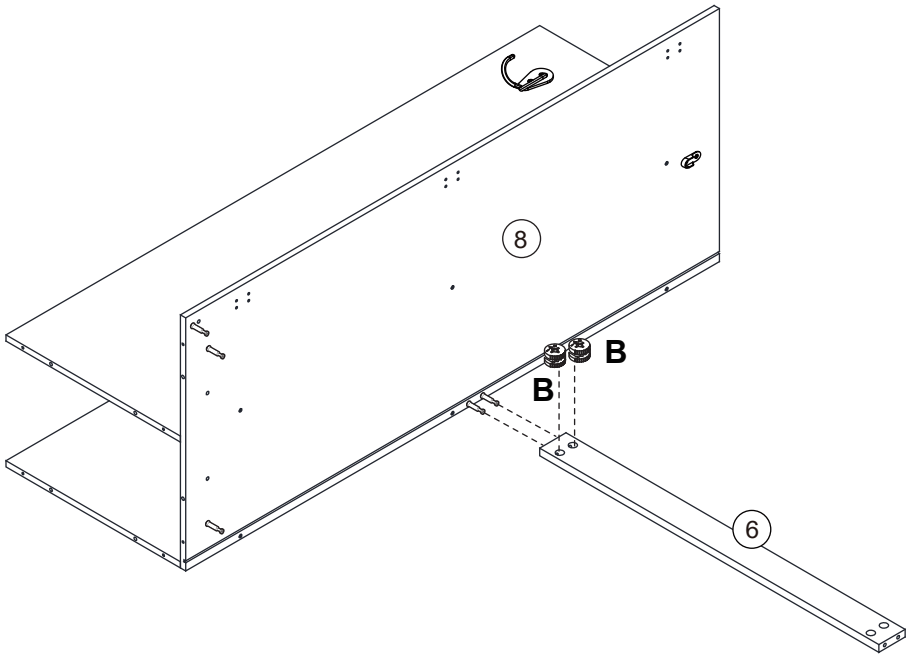



B x 2
φ15 x 9.5 mm


Step8

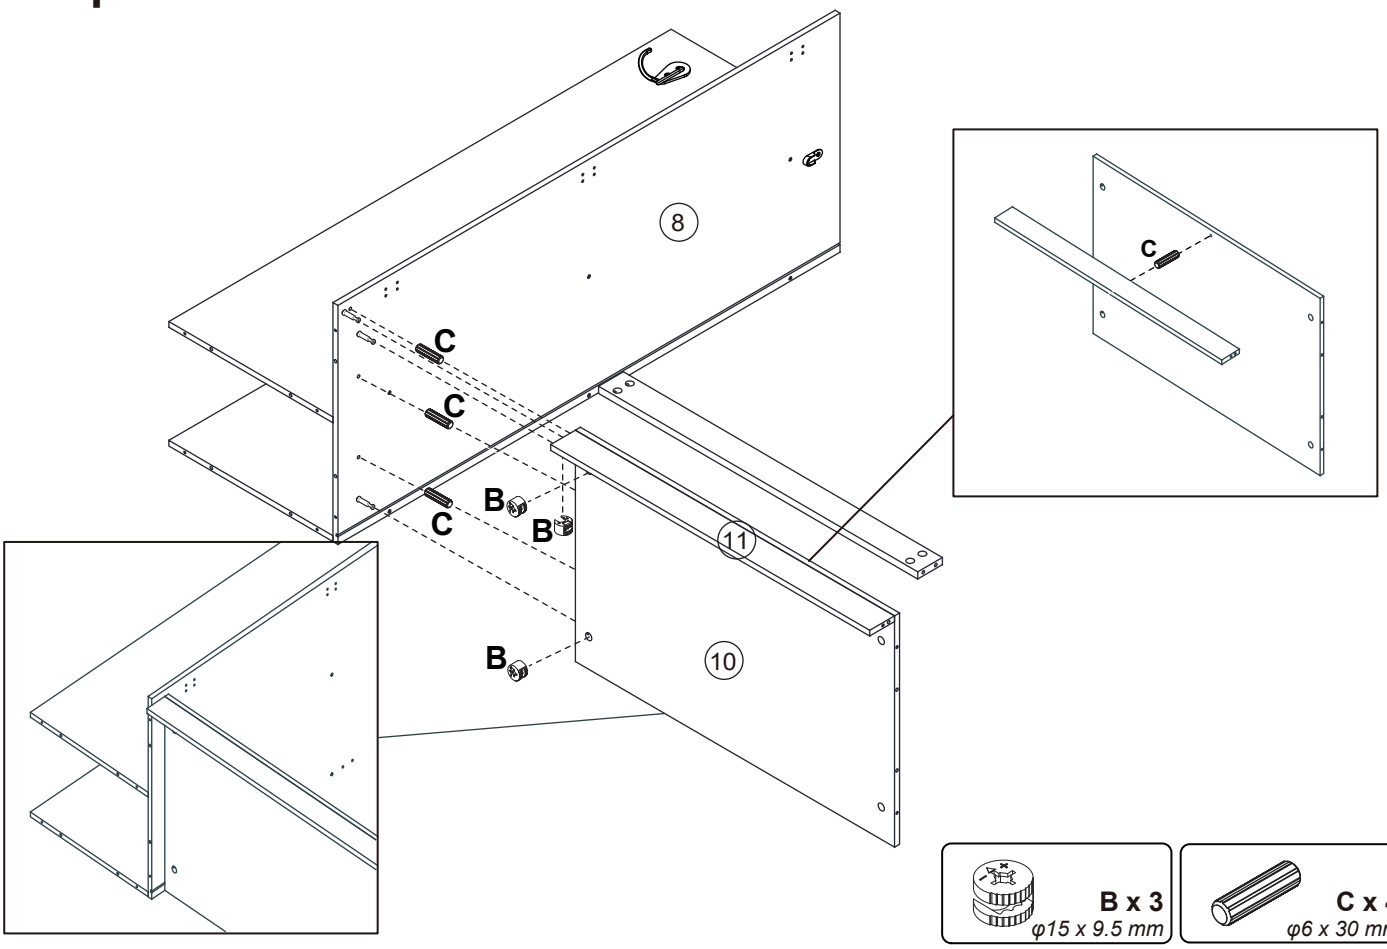

B x 3
φ15 x 9.5 mm

C x 4
φ6 x 30 mm

Step 9

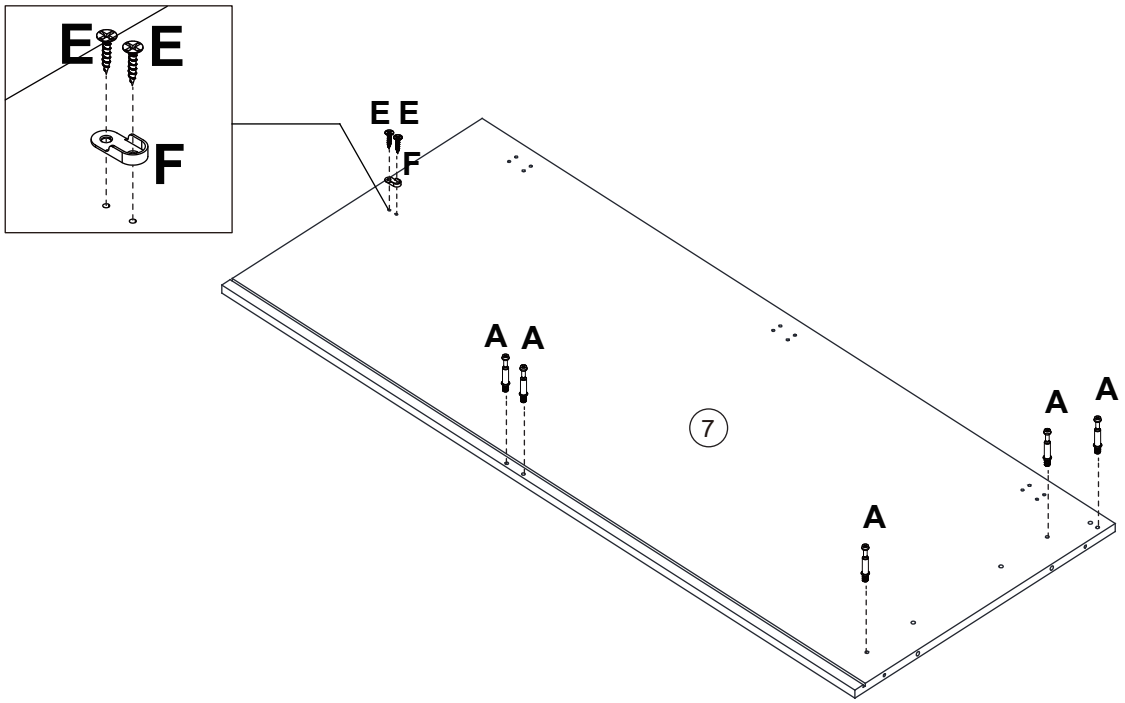


E x 2
φ3.5 x 12 mm

F x 1

A x 5
M6 x 35 mm


Step10

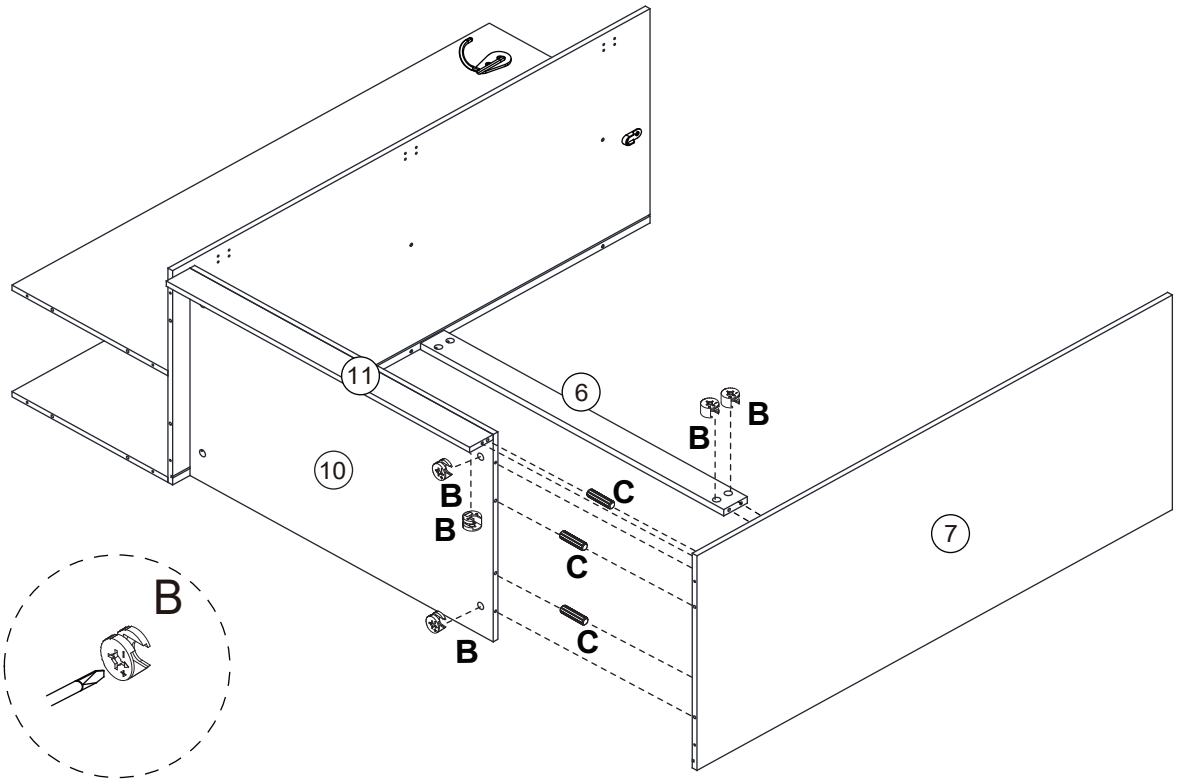


B x 5
φ15 x 9.5 mm


C x 3
φ6 x 30 mm


Step 11

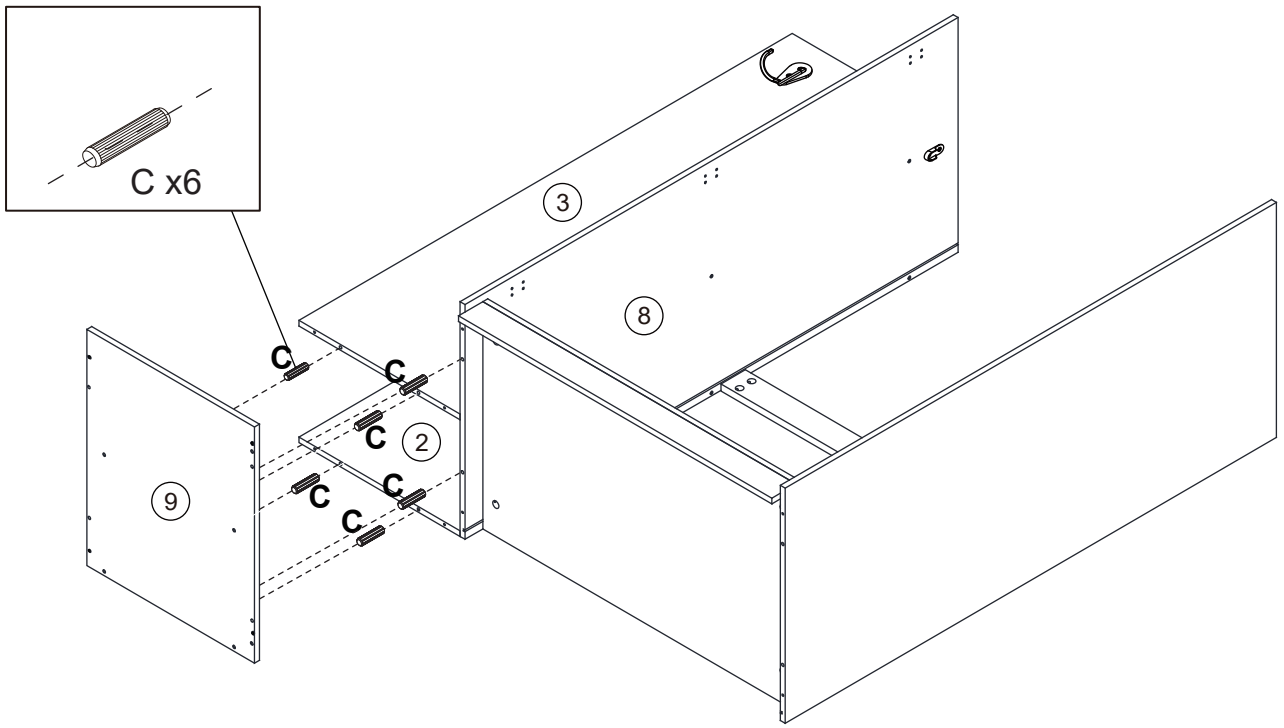





Step 12

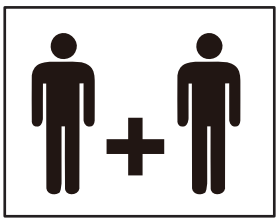

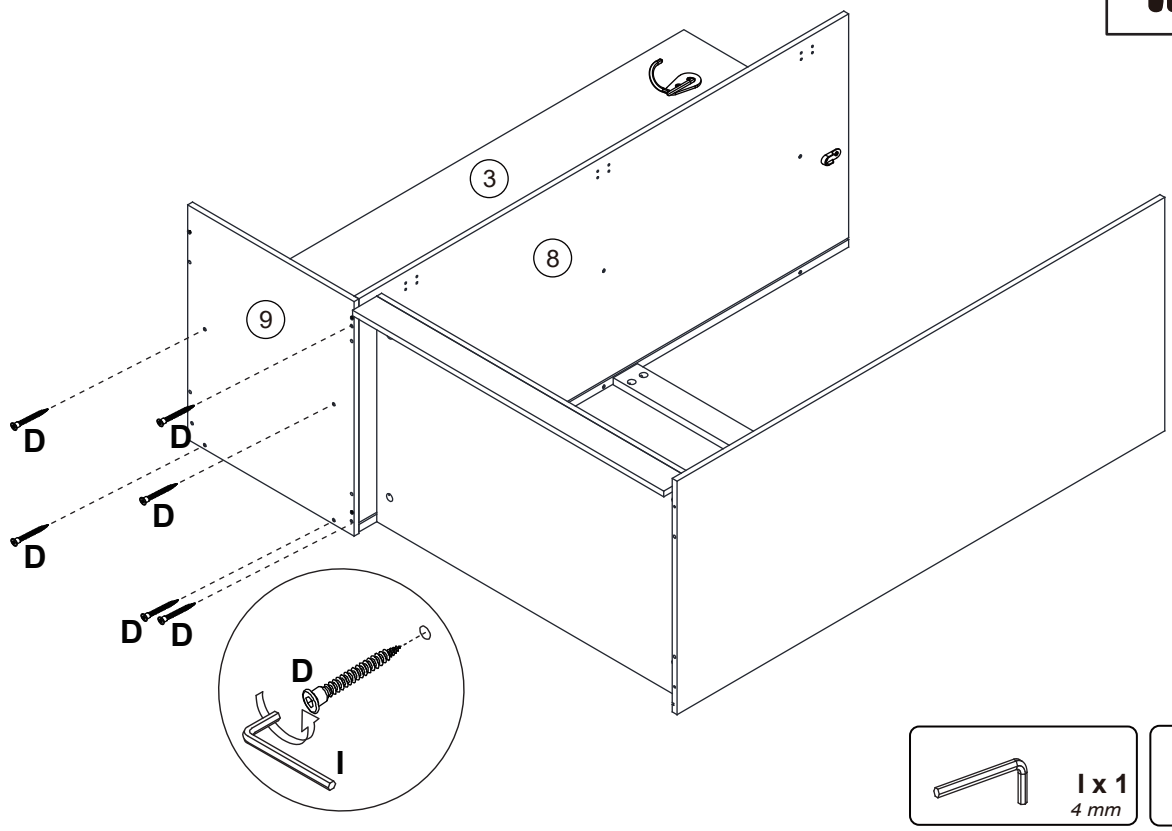




Step 13

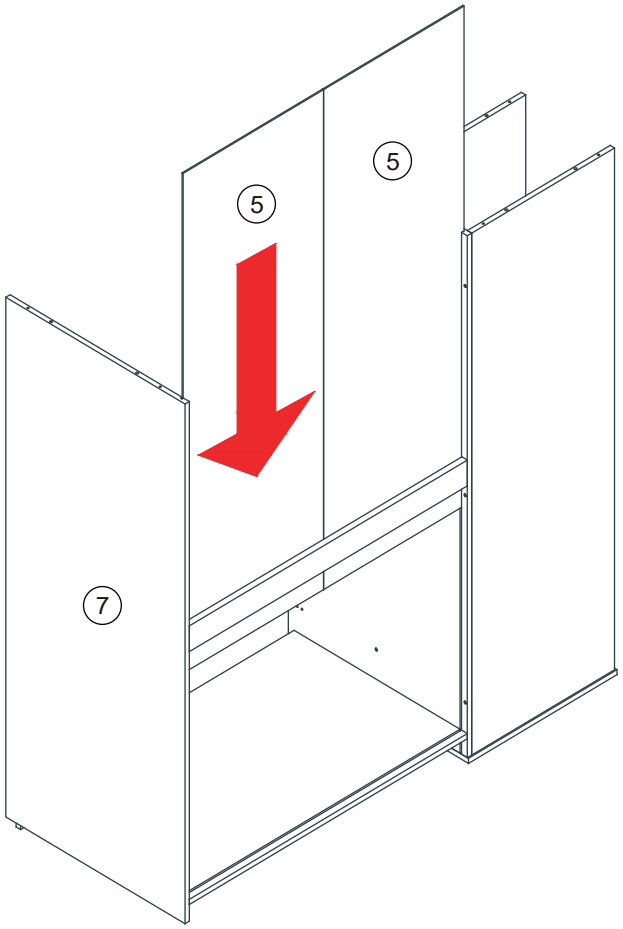


Step 14

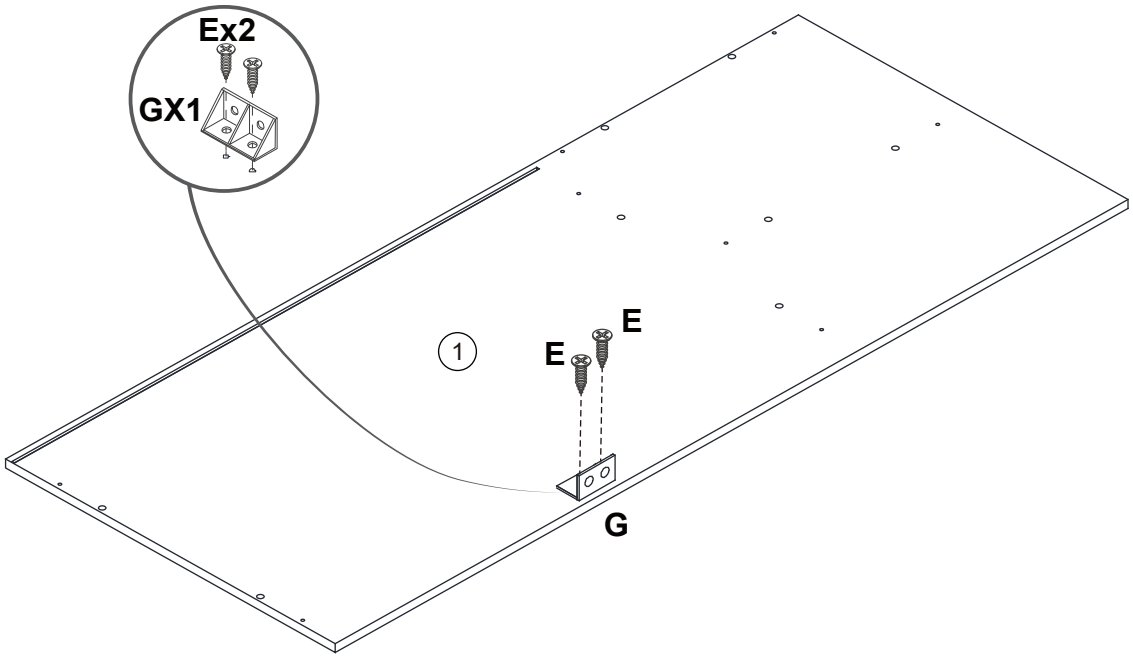


G x 1


E x 2
φ3.5 x 12 mm


Step 15

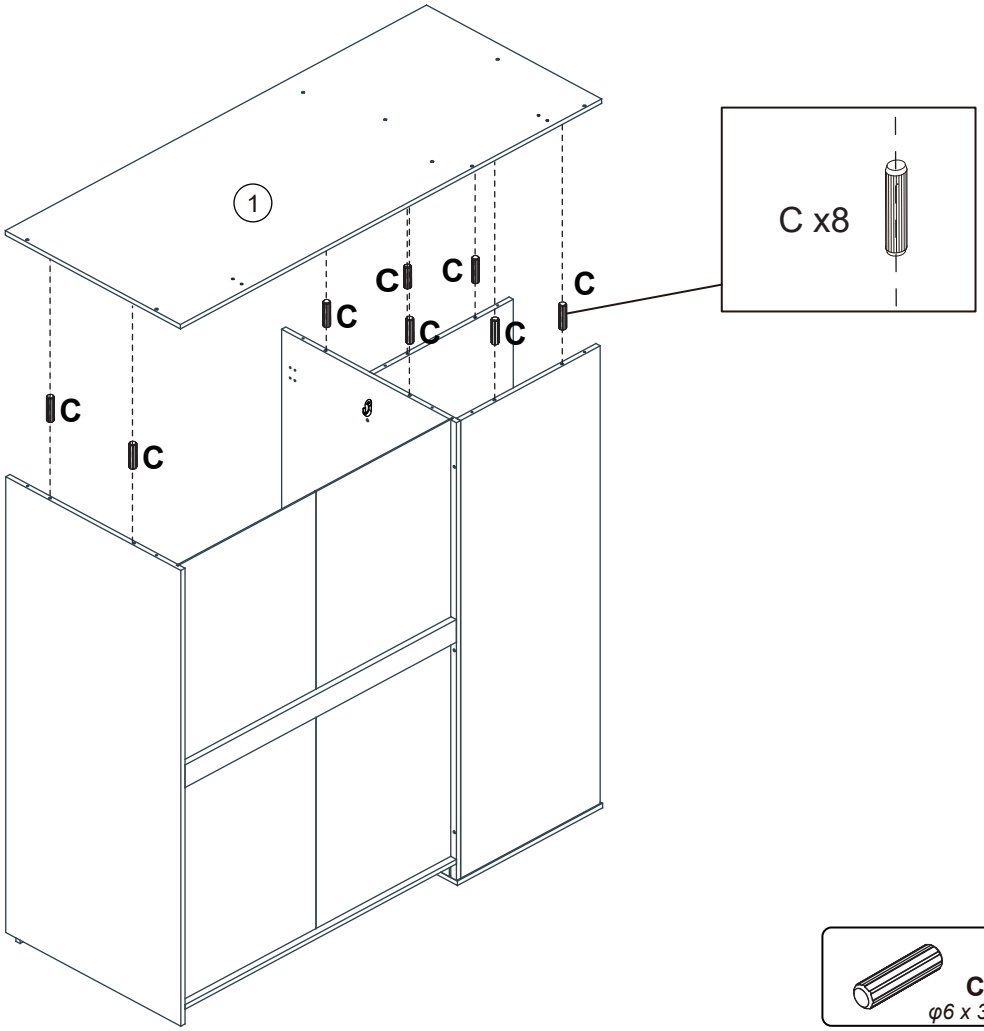


Step 16

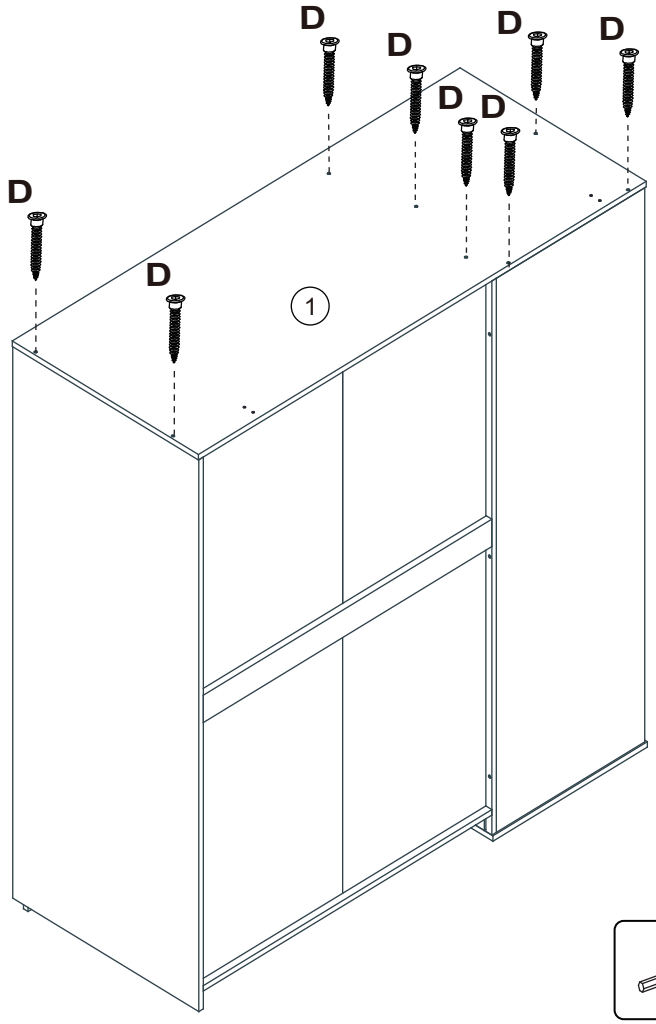


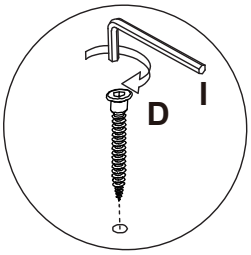







Step 17

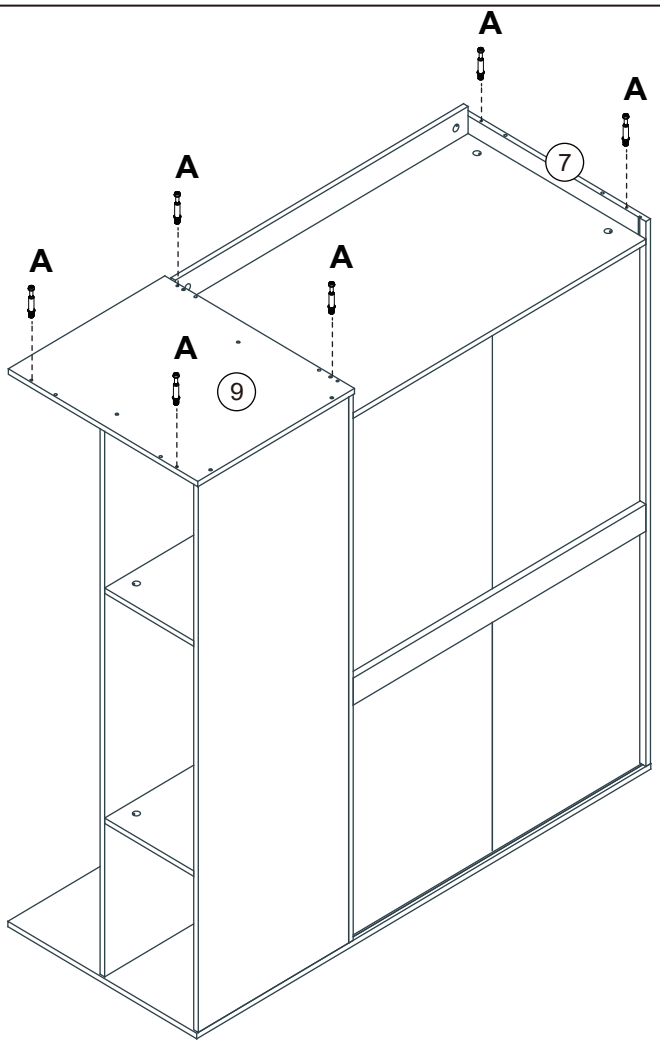





Step 18

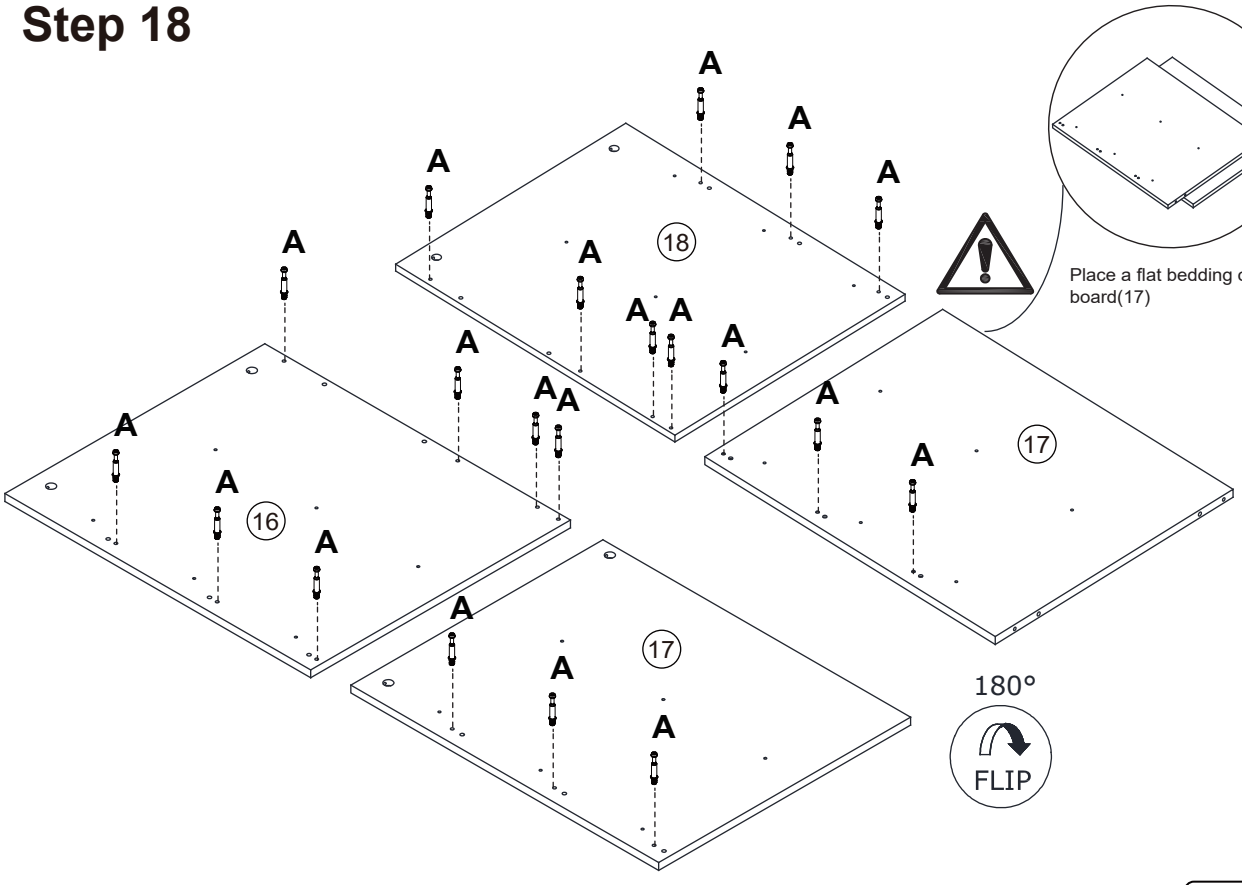

Place a flat bedding on the botton of board(17)





Step 19

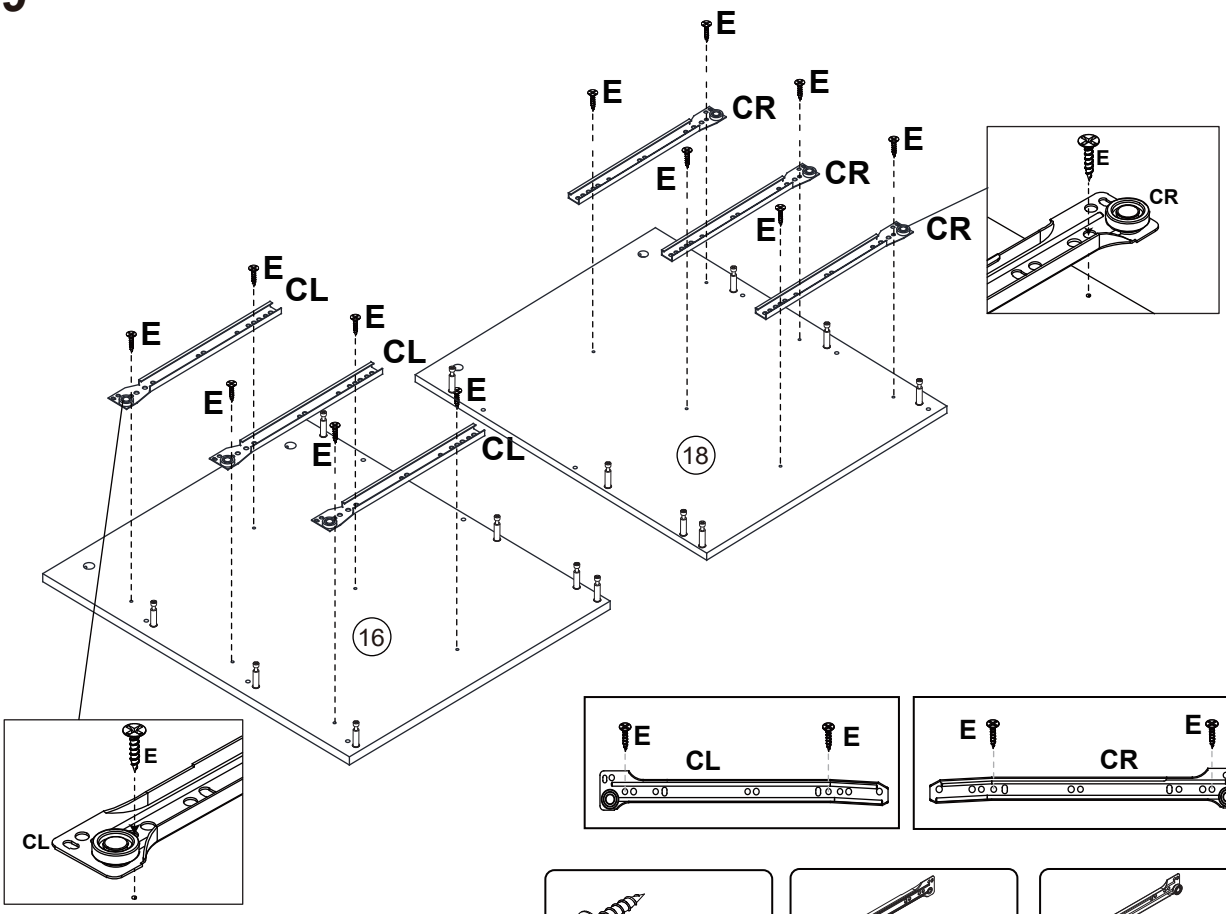




Step 20

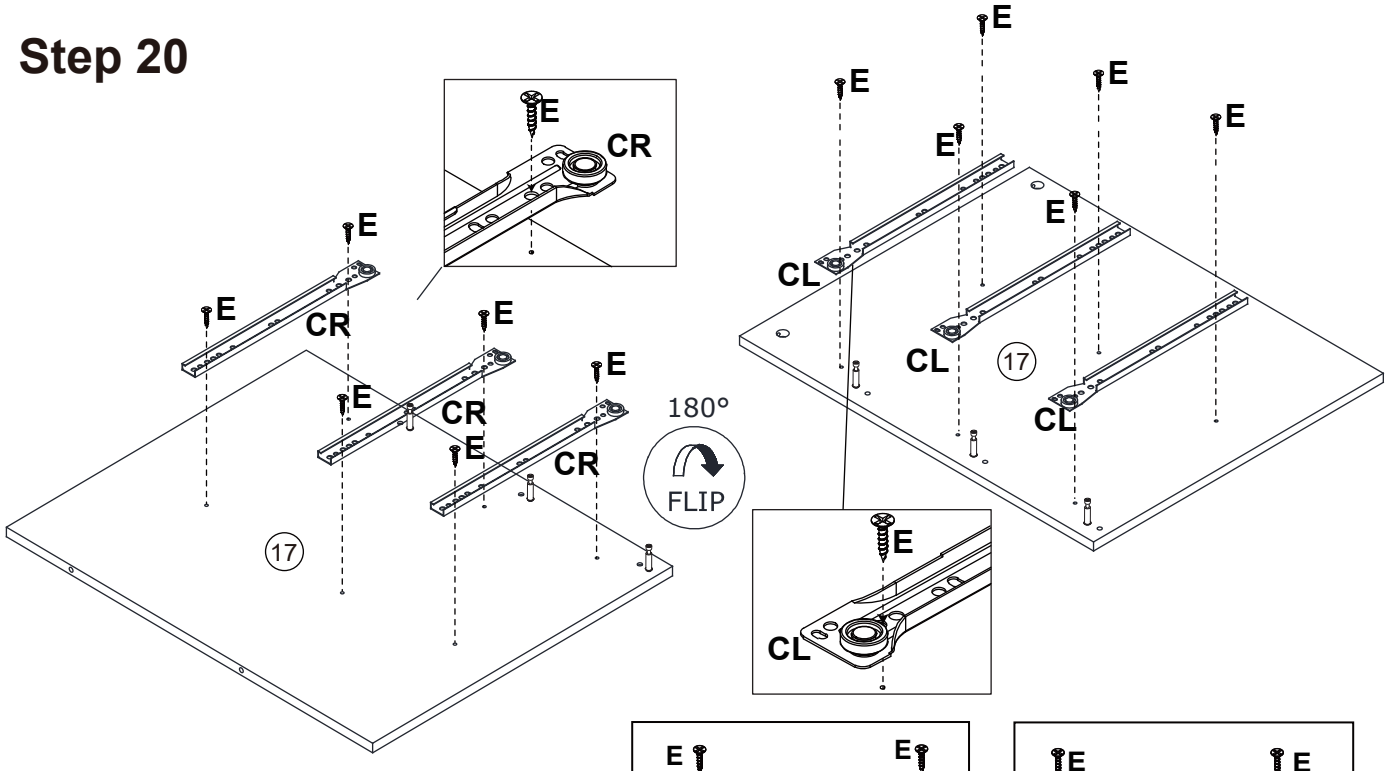


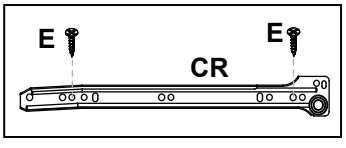


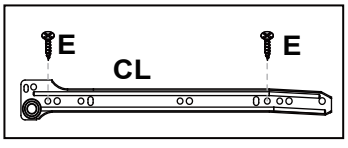





Step 21

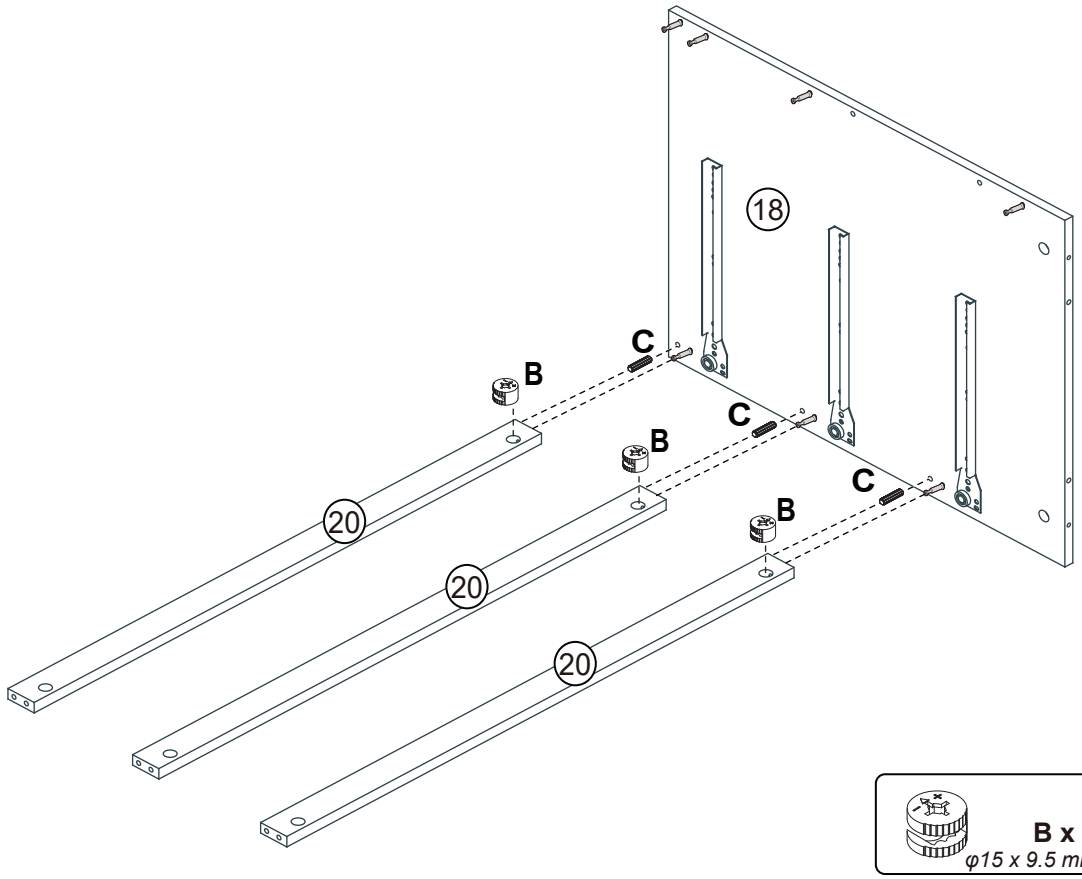





Step 22

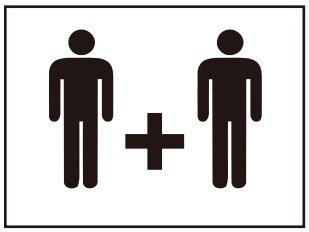


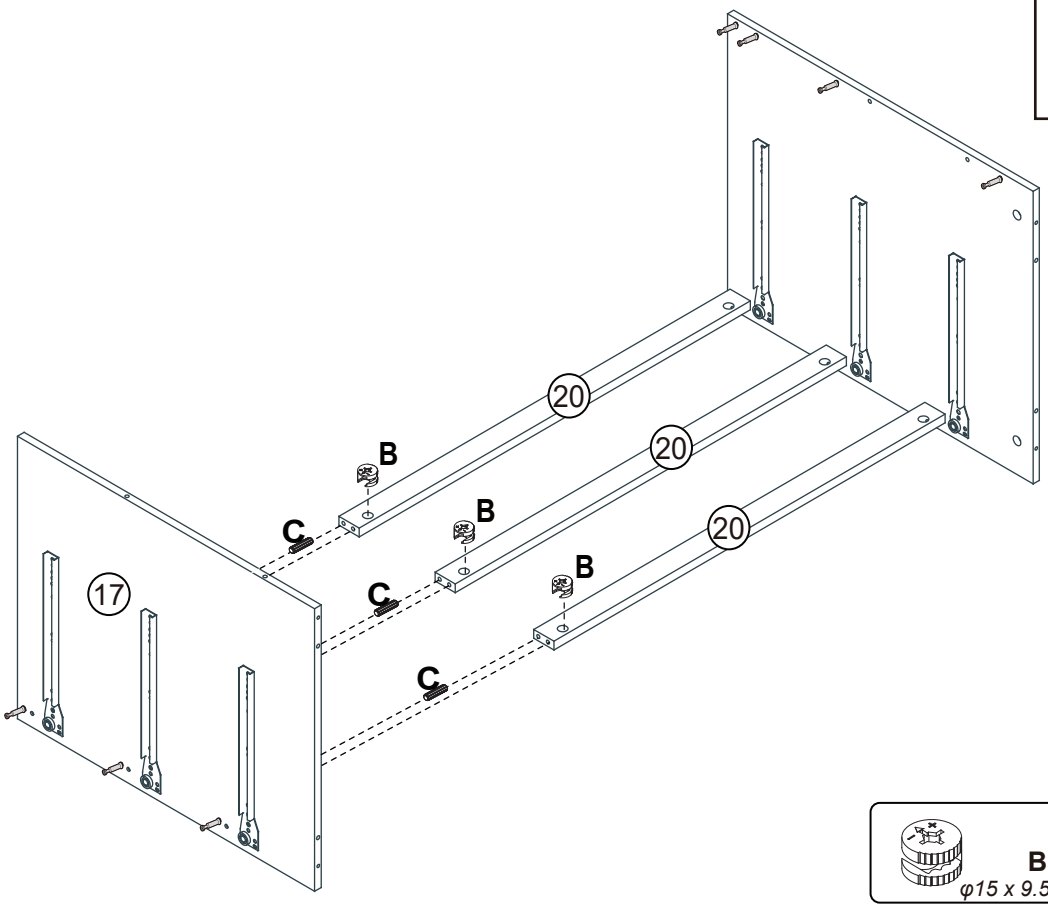





Step 23

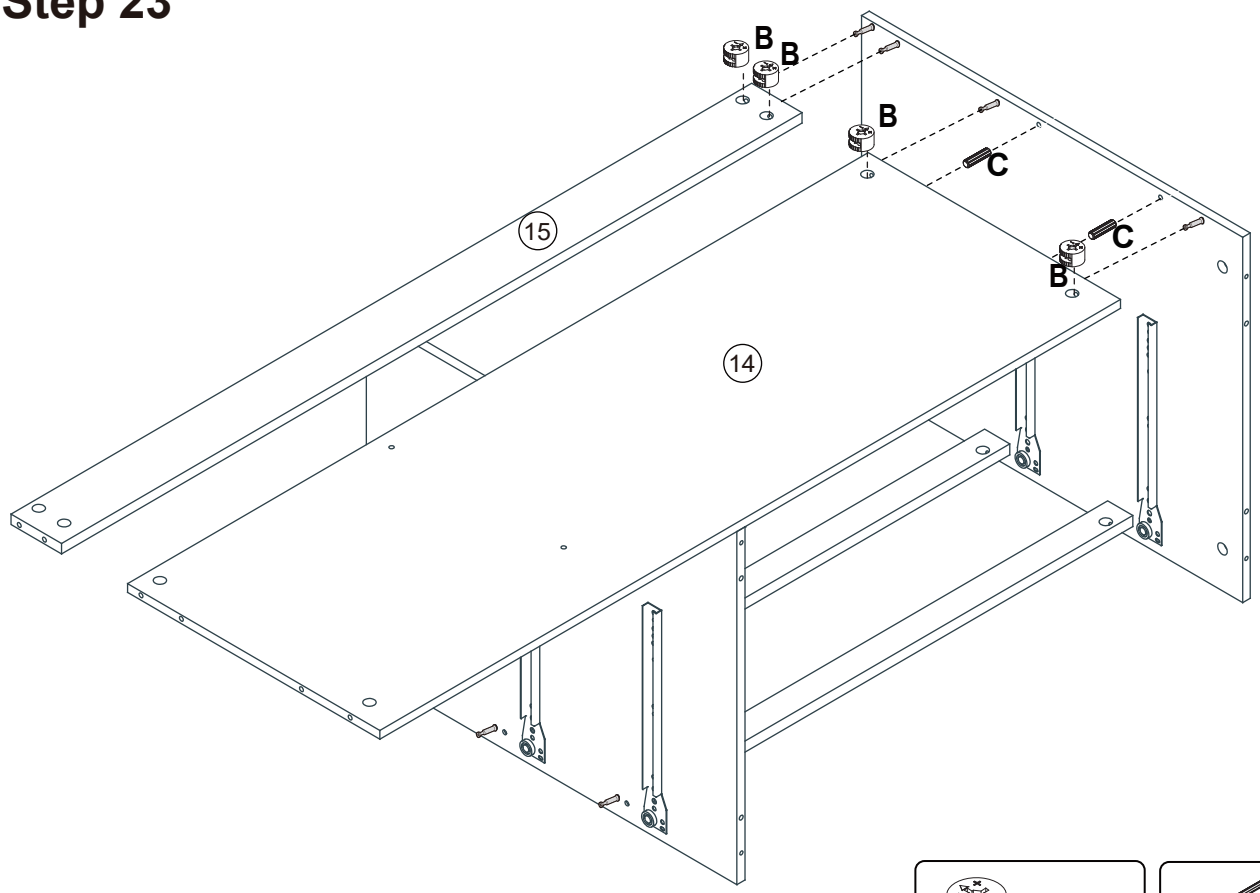





Step 24

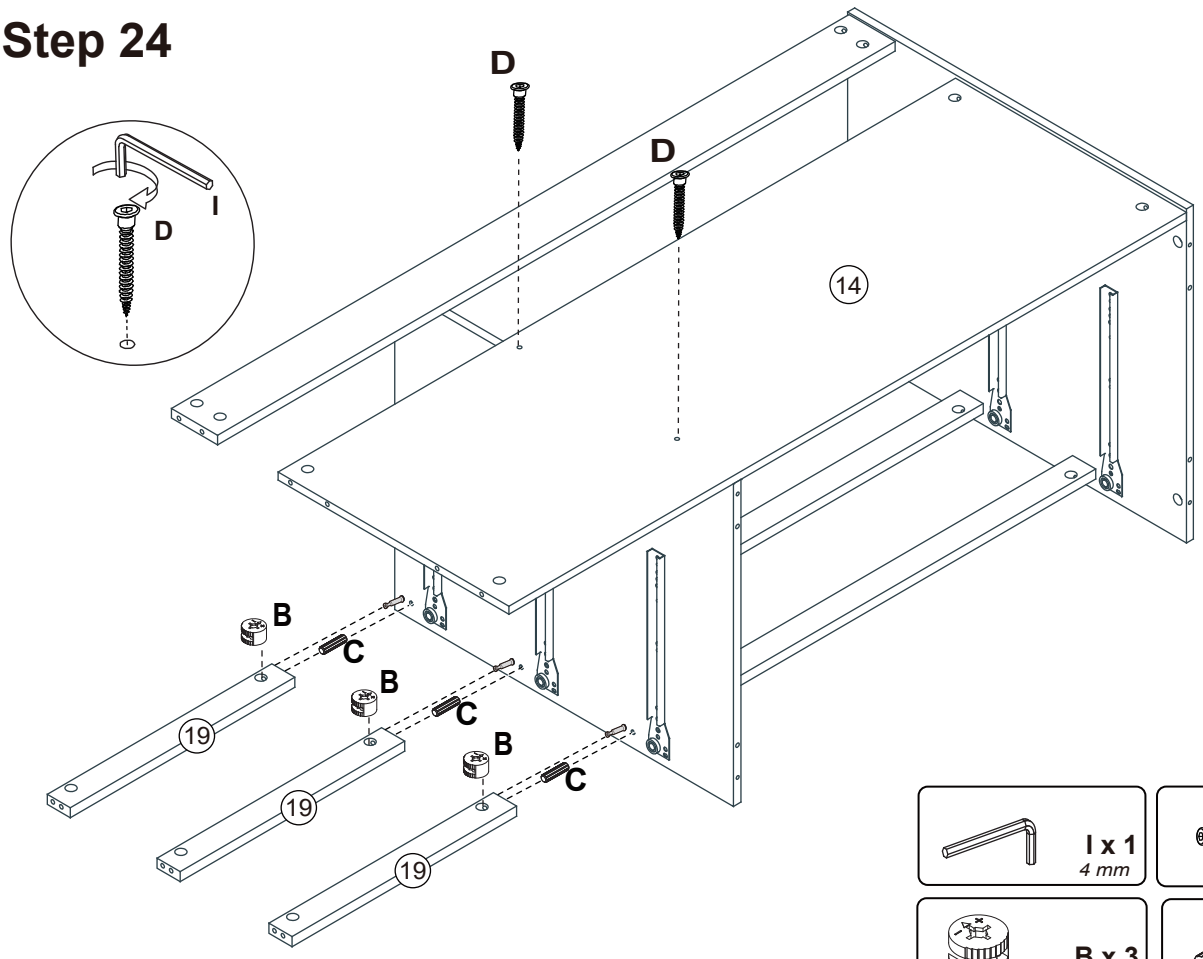

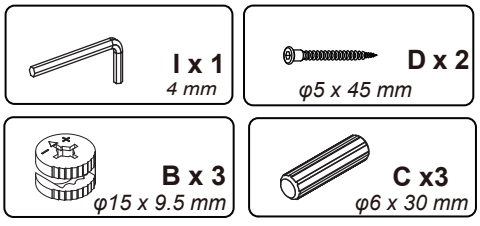



Step 25

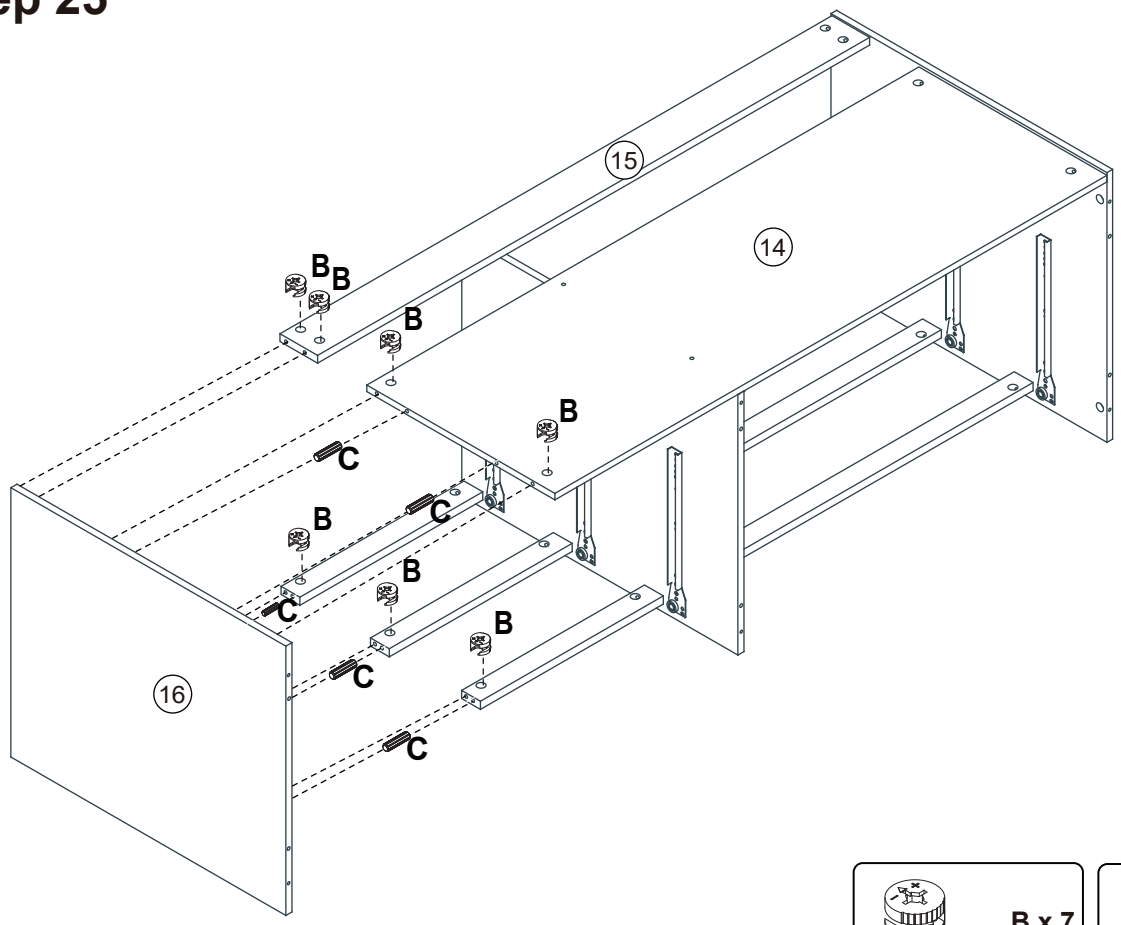





Step 26

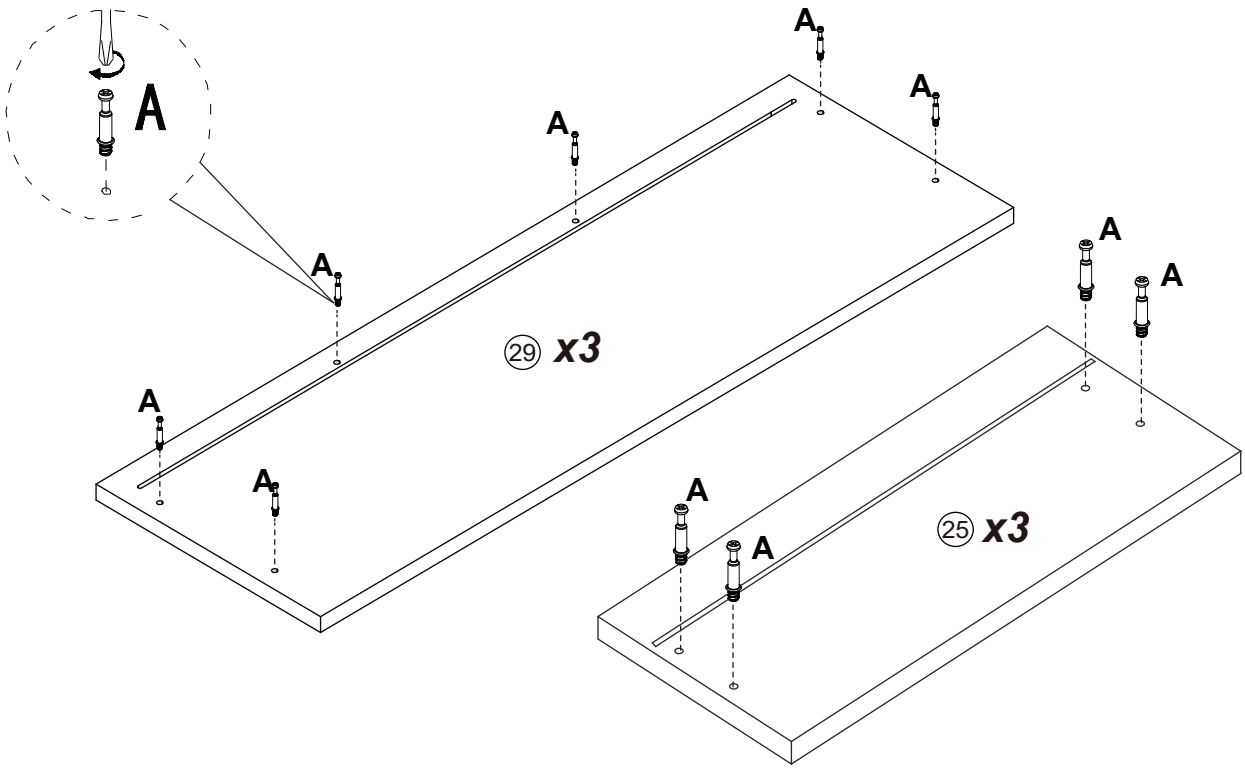




Step 27

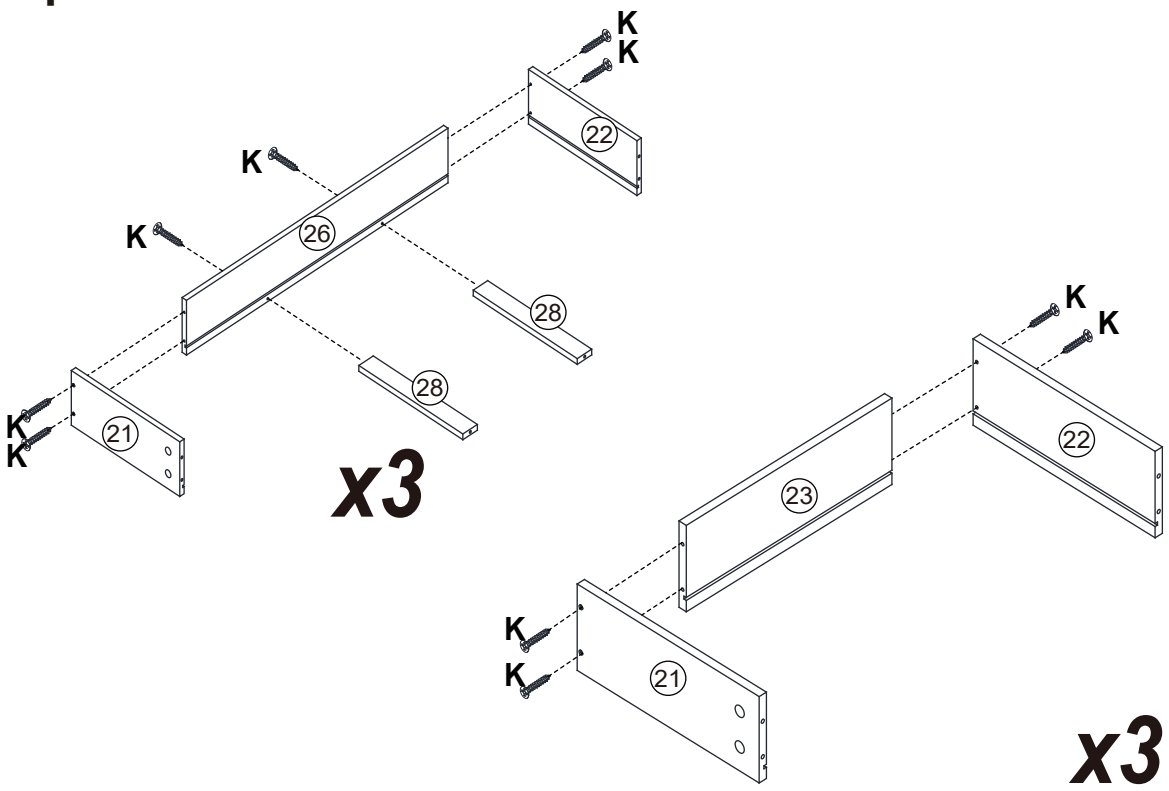





Step 28

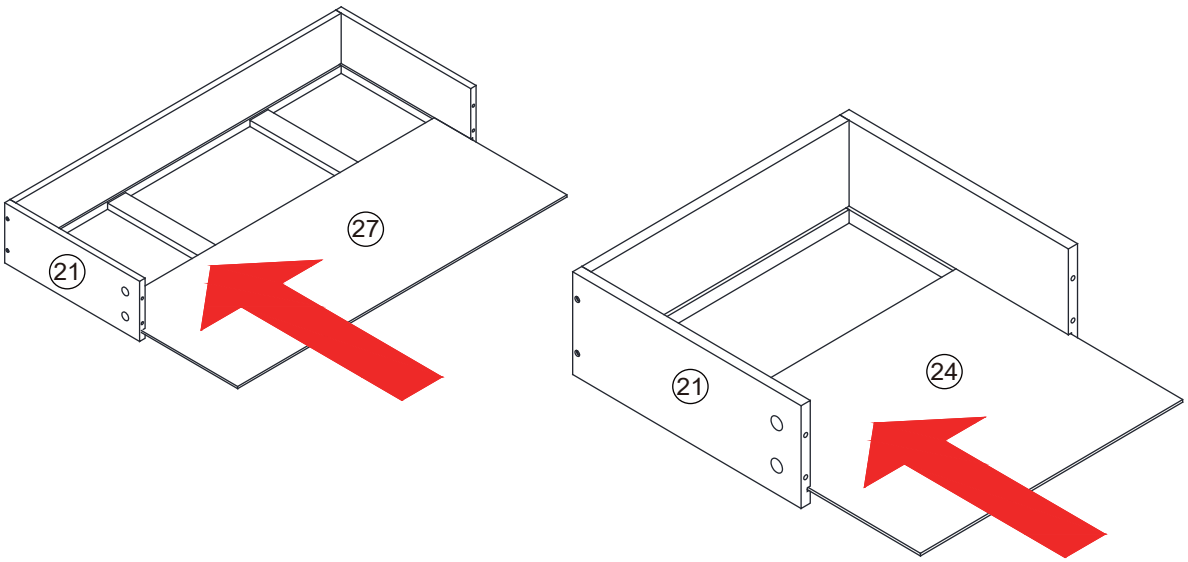



Step 29

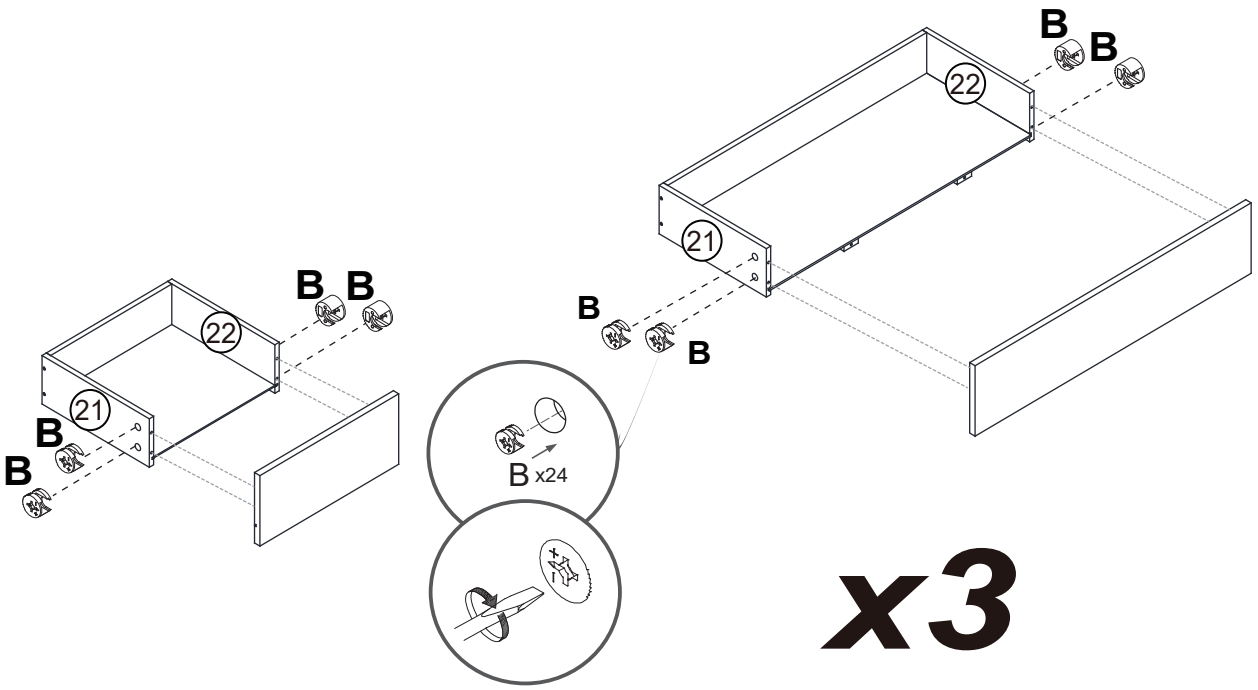




Step 30

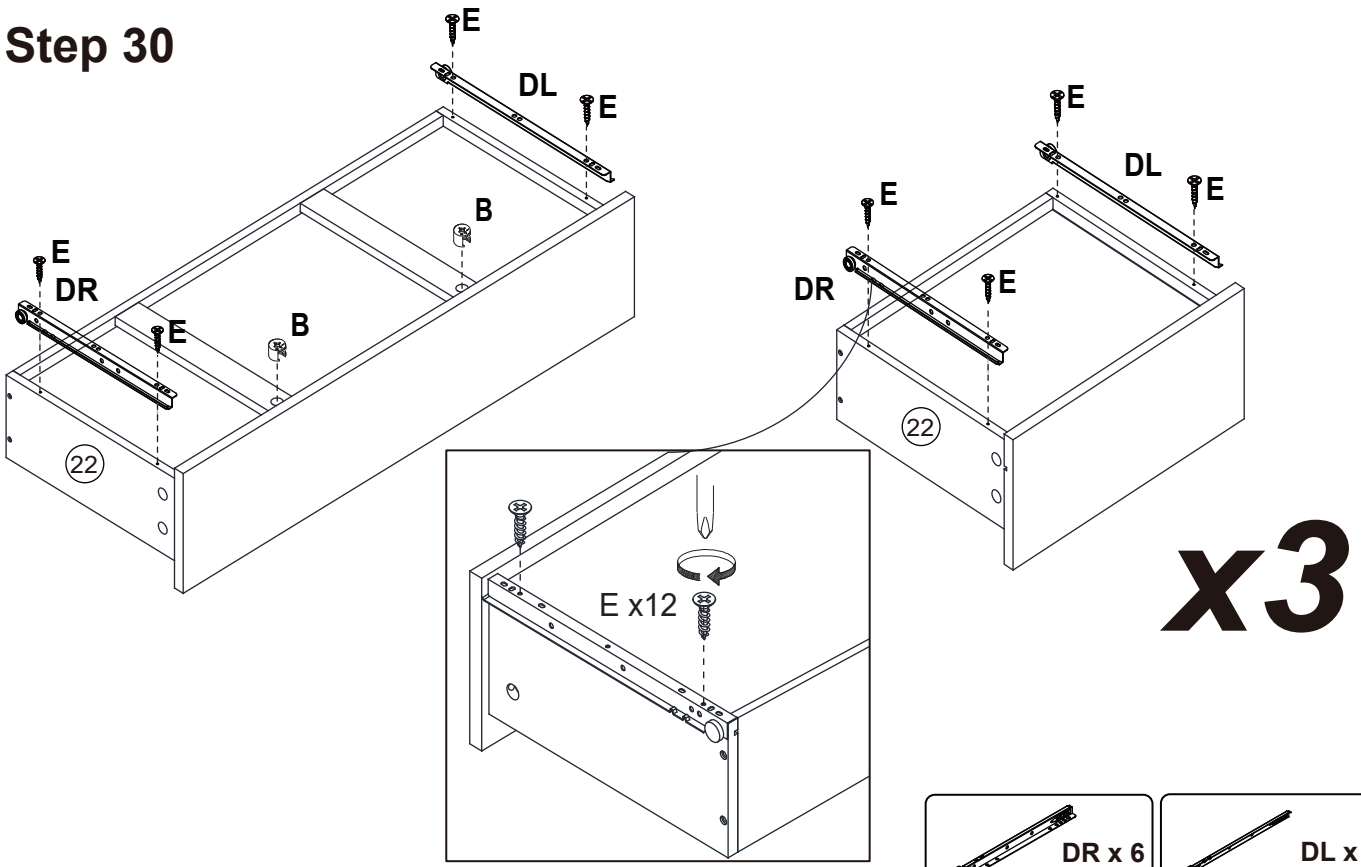

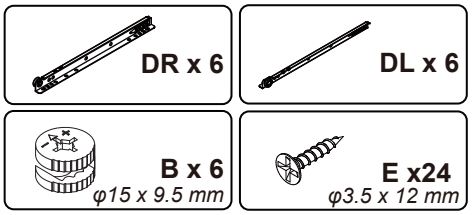


Step 31

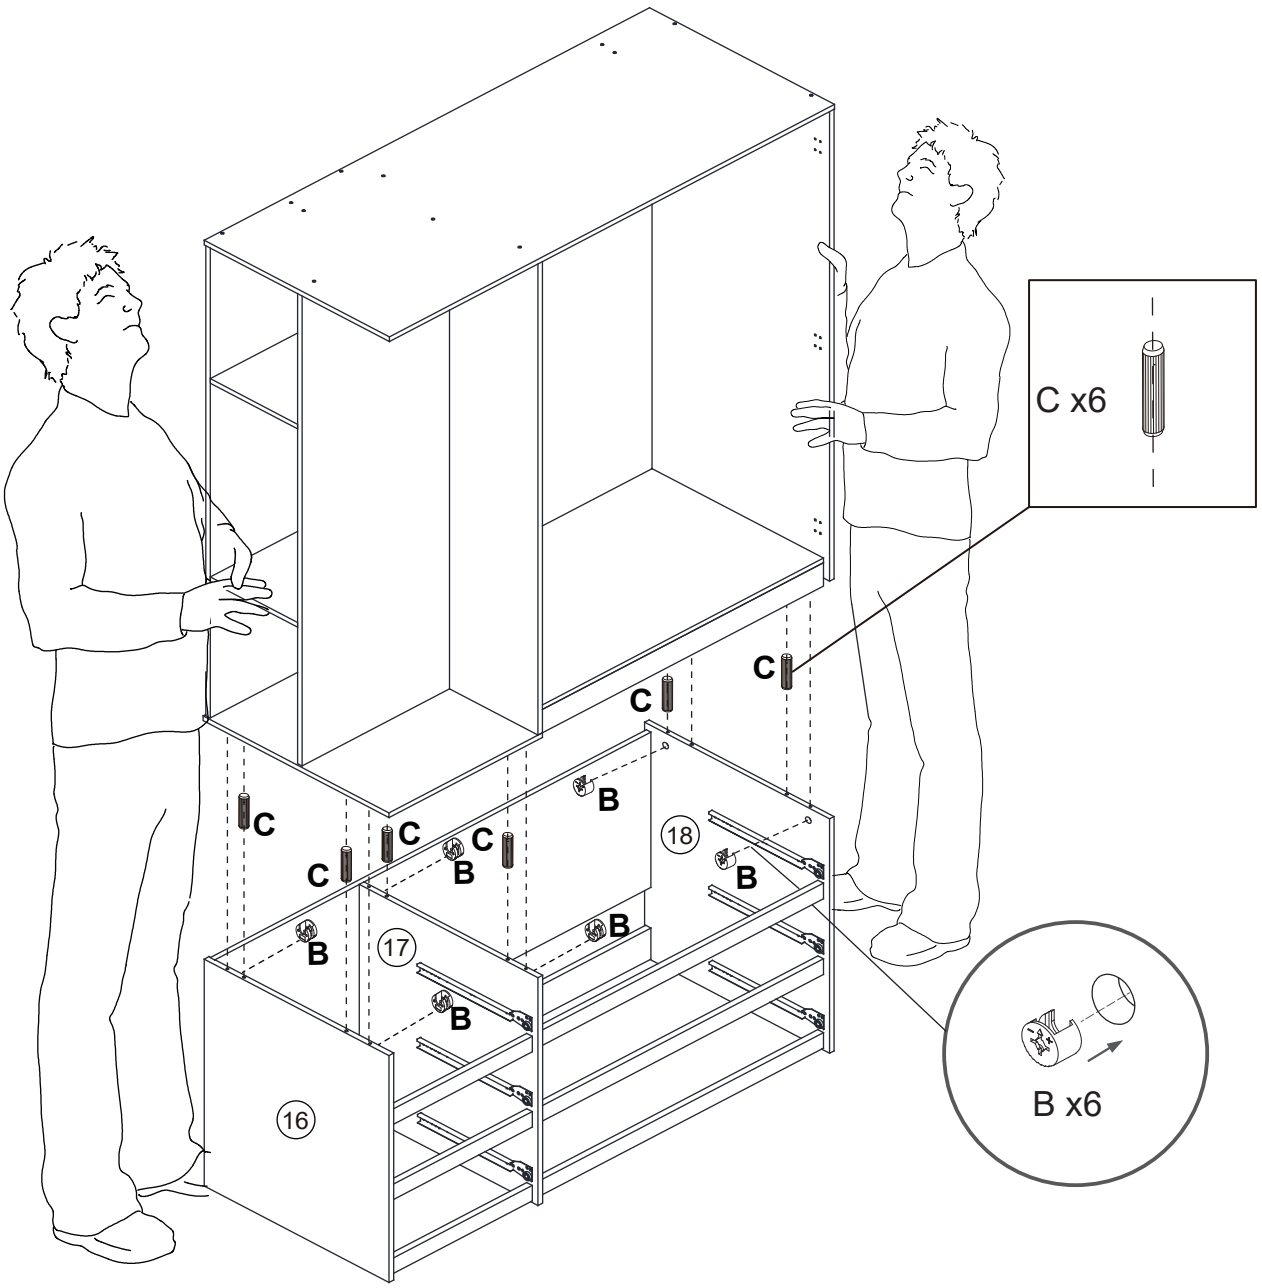


B x 6
φ15 x 9.5 mm


C x 6
φ6 x 30 mm

Step 32

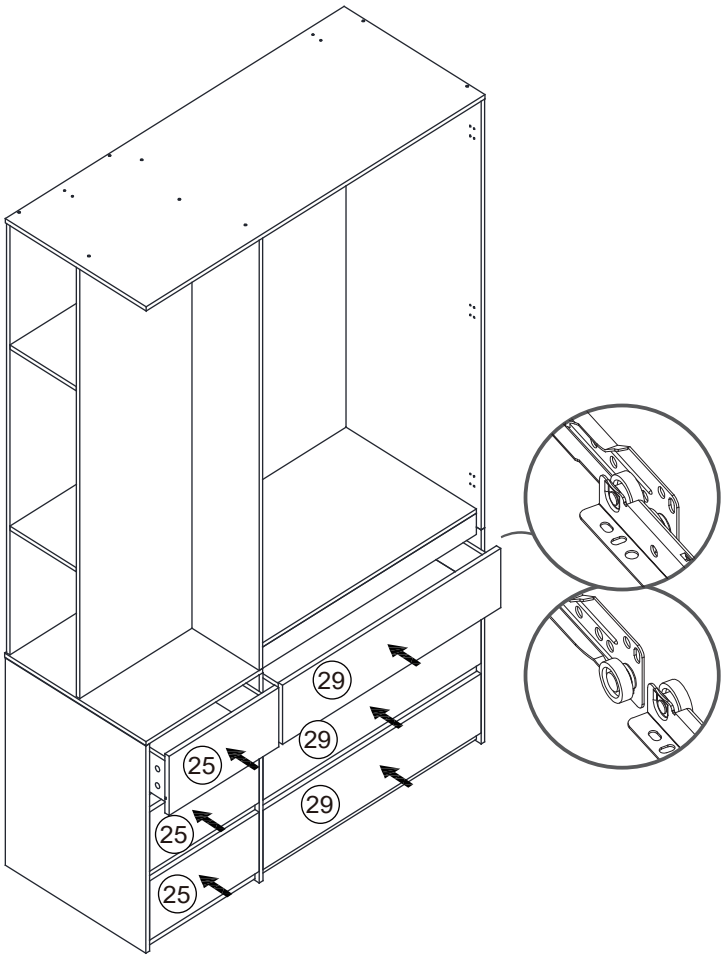


Step 33

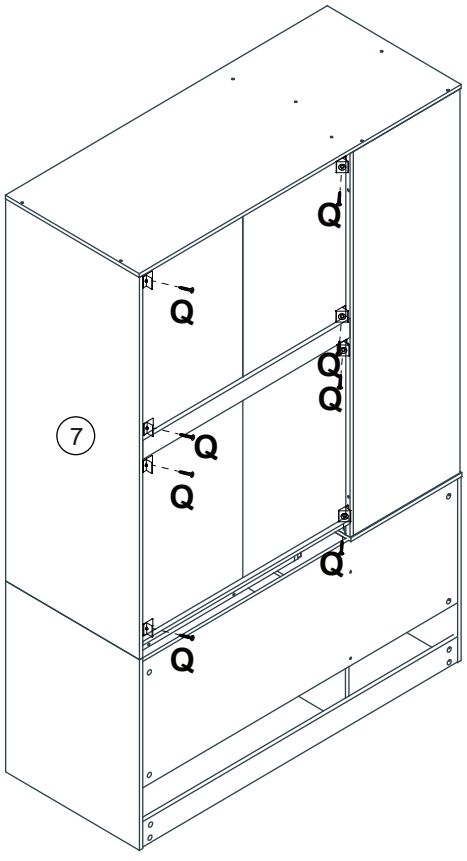




Step 34

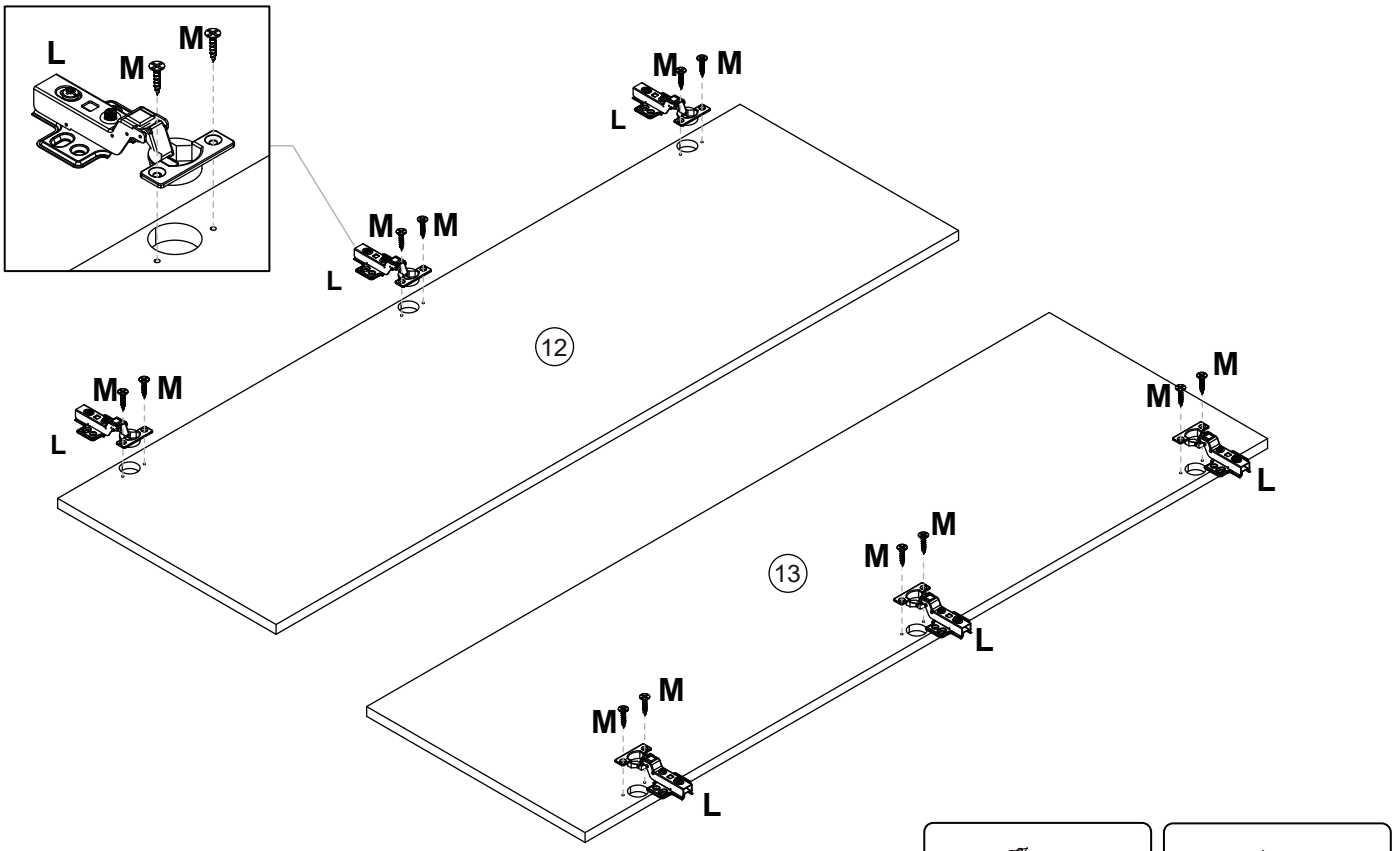

M x 12
φ4 x 12 mm


L x 6

Step 35

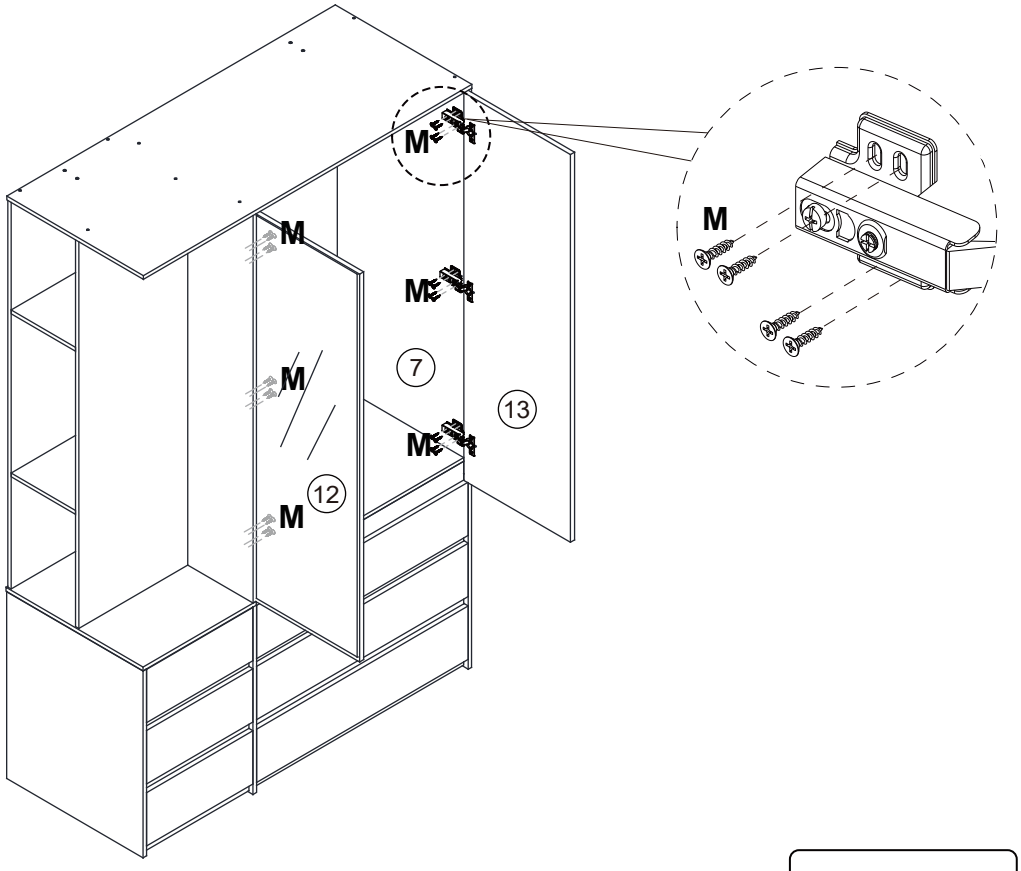



M x 24
φ4 x 12 mm

Step 36

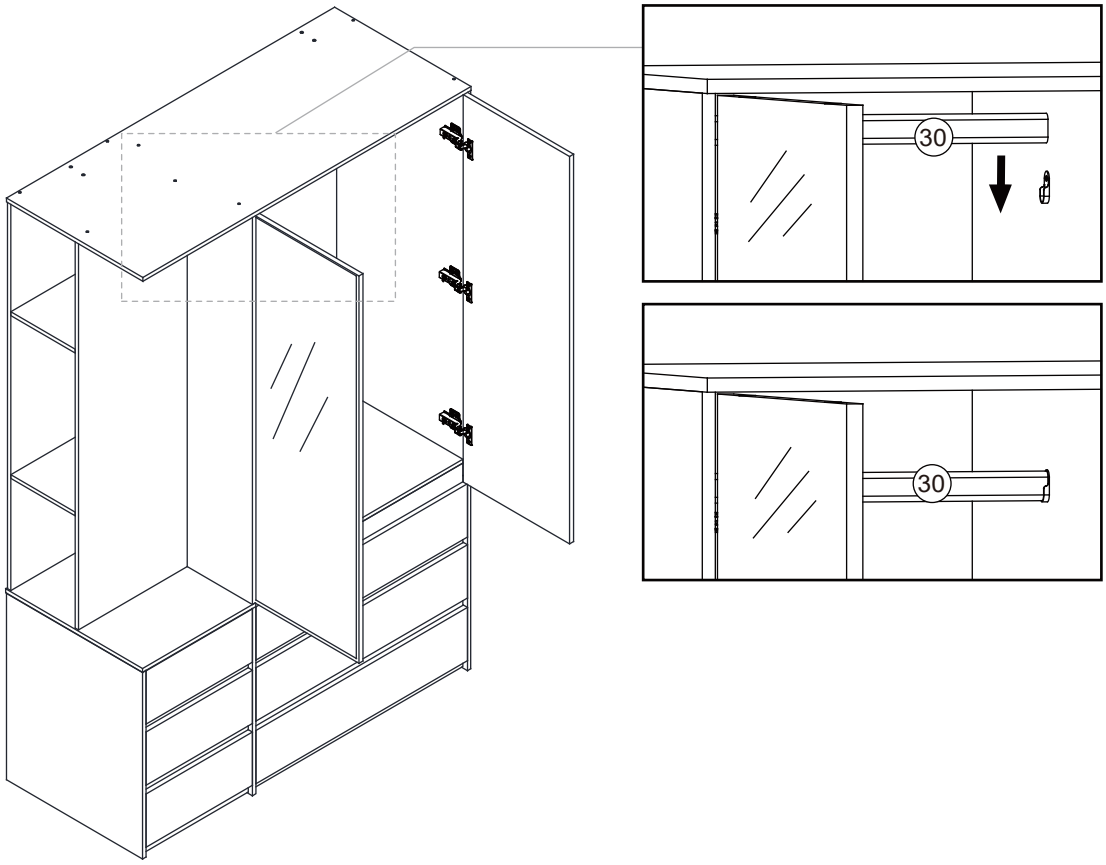



Step 37

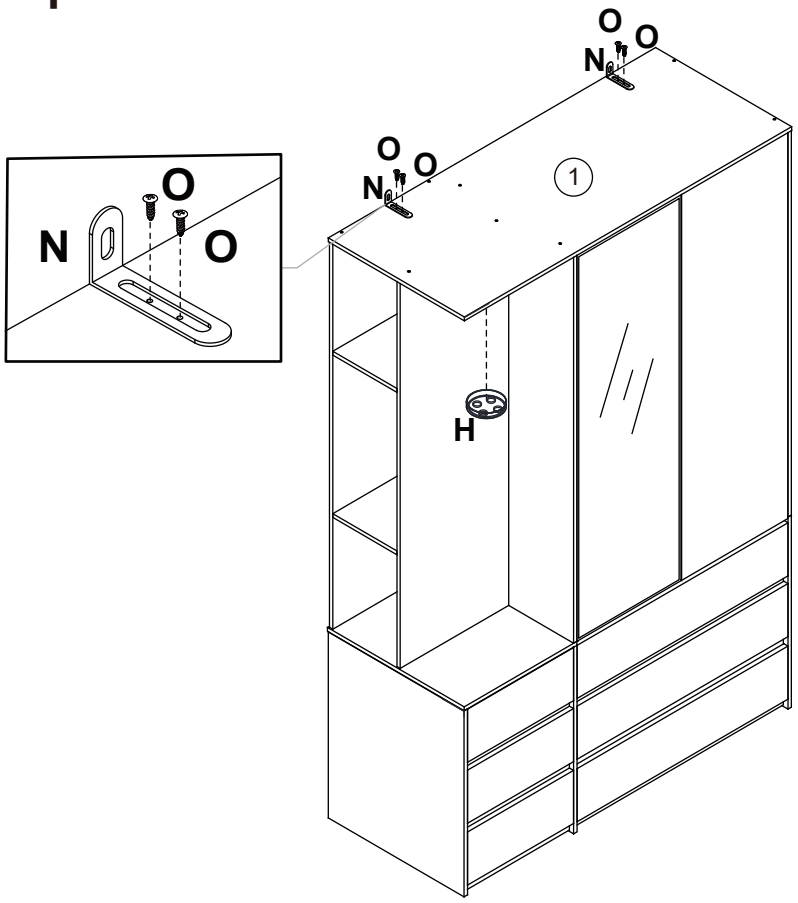

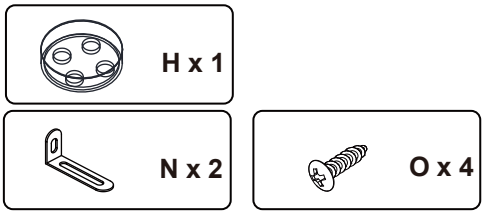


Step 38

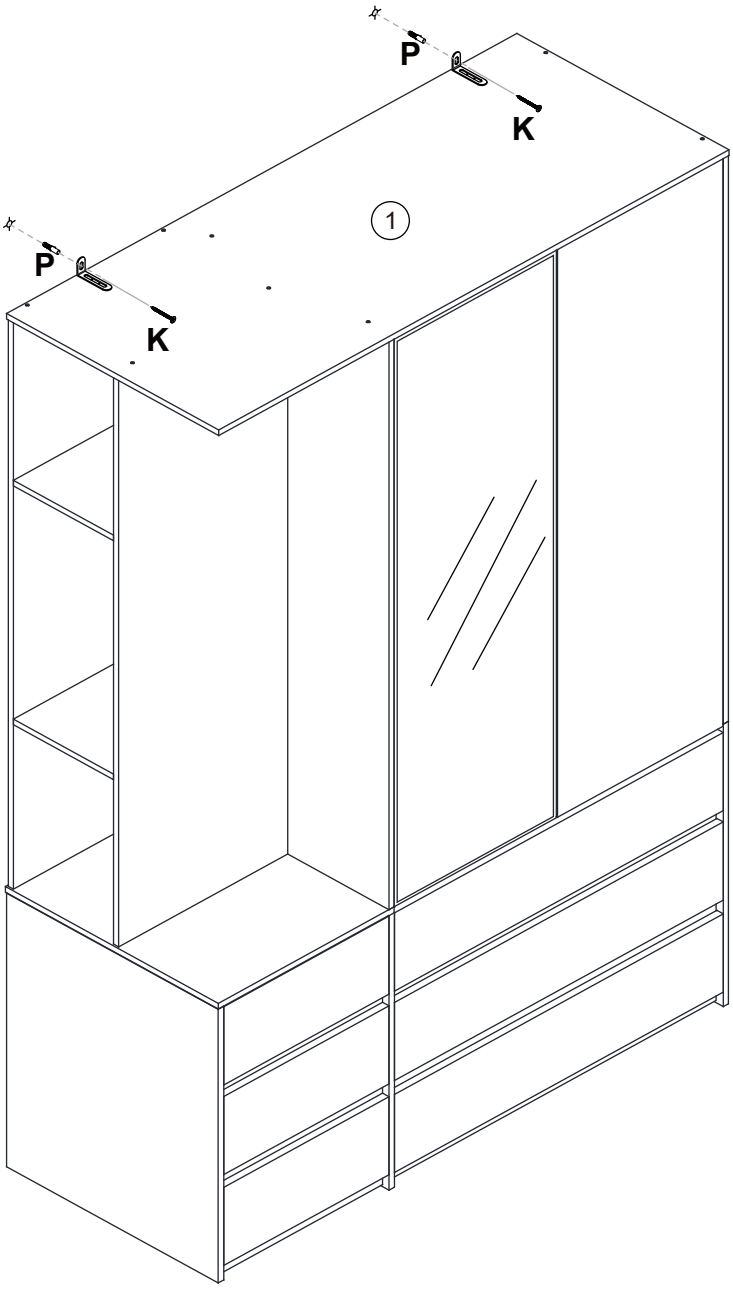


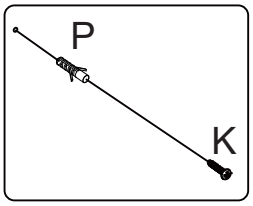


OPTION #1

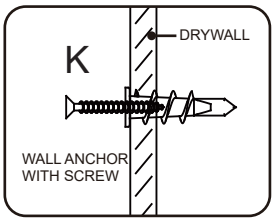


OPTION #2

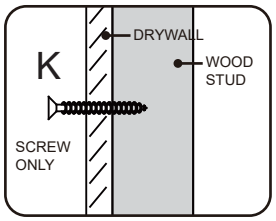





Step 39


Customer Attention:
To align doors and control gap in between doors. Product doors may need adjusting during and after assembly.
This can be done by adjusting appropriate screws. See below illustration.

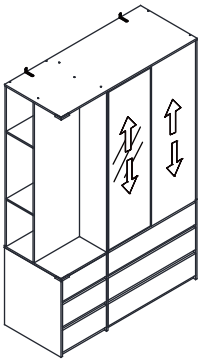

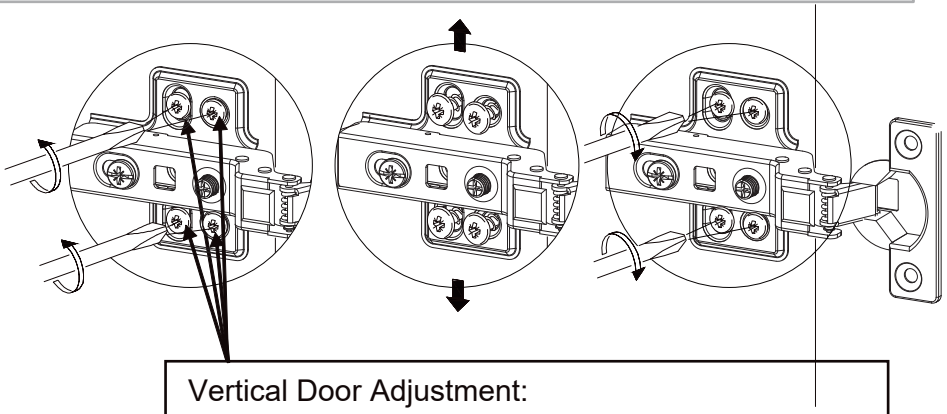



Vertical Door Adjustment:
Loosen both screws on all hinges and lift the door to the desired height.
This allows an even space at the top and bottom between the door and frame.

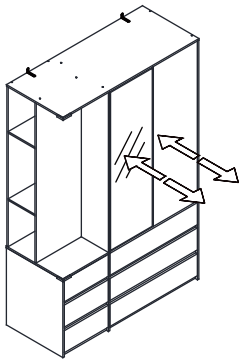

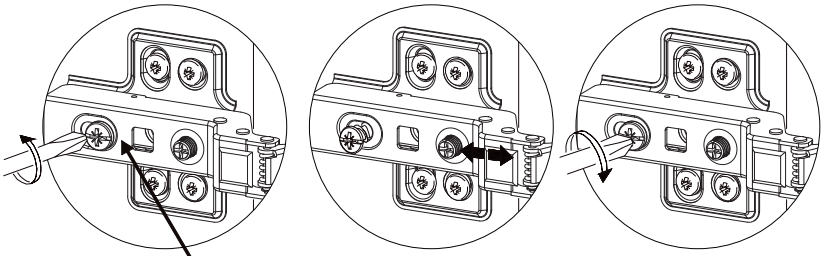

Lateral Door Adjustment:
If door is hinge bound, (rubbing on frame as you close or open door) loosening screw shown and move the door in approriate direction. (In or out)

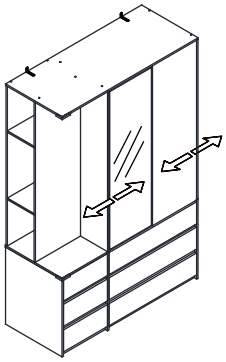

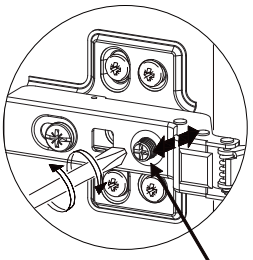

Horizontal Door Adjustment:
Rotate Screw clockwise or anticlockwise.
This will produce an even gap between doors and frame.