



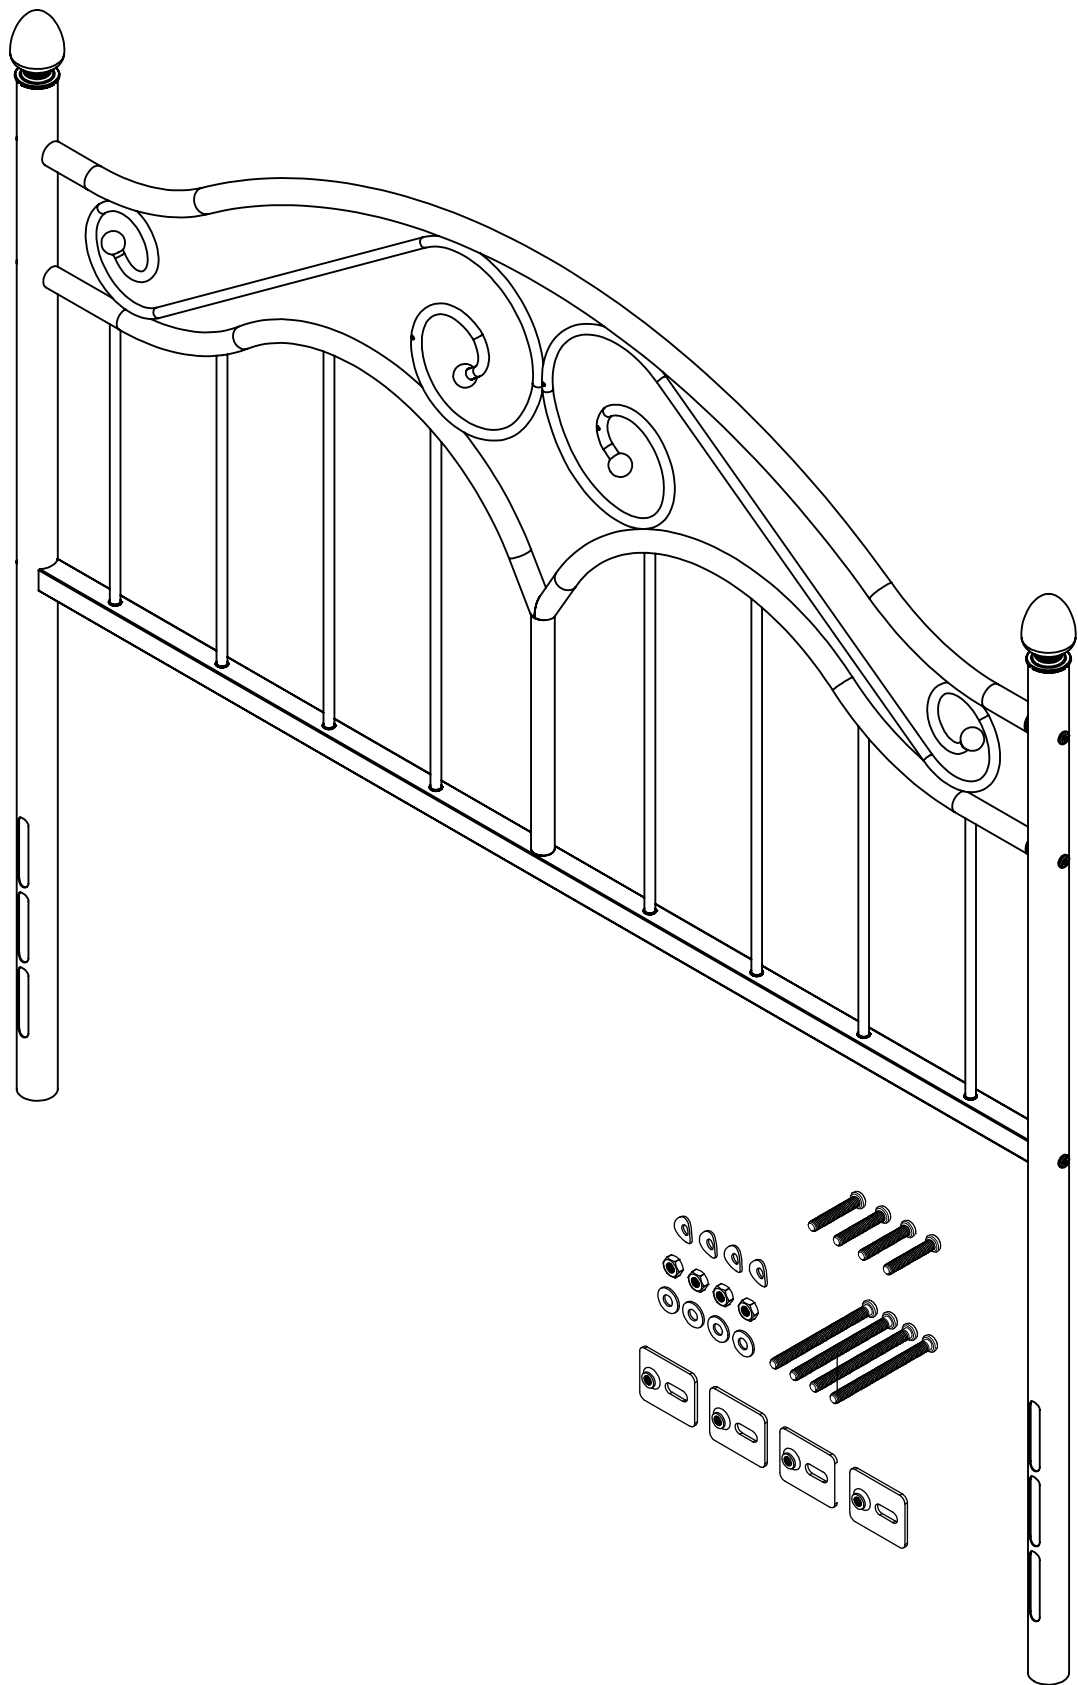
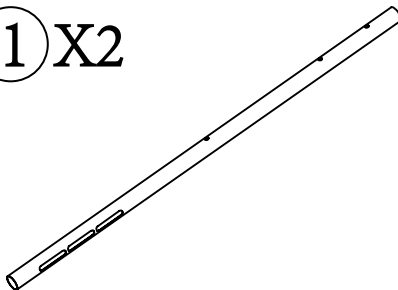
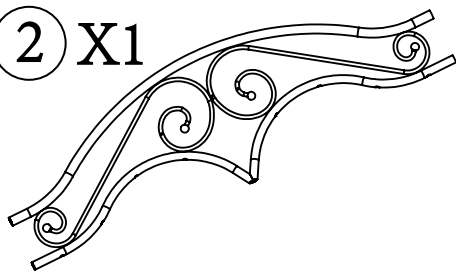
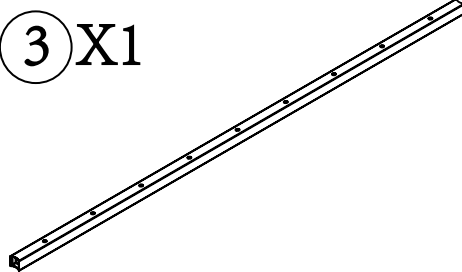


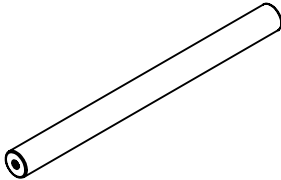

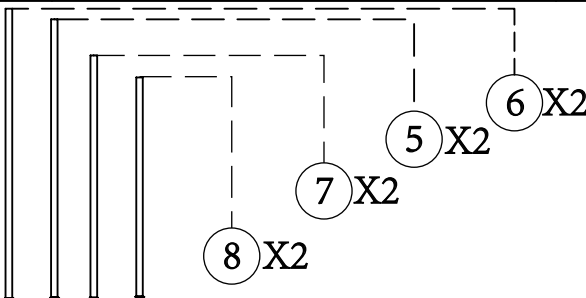



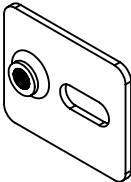







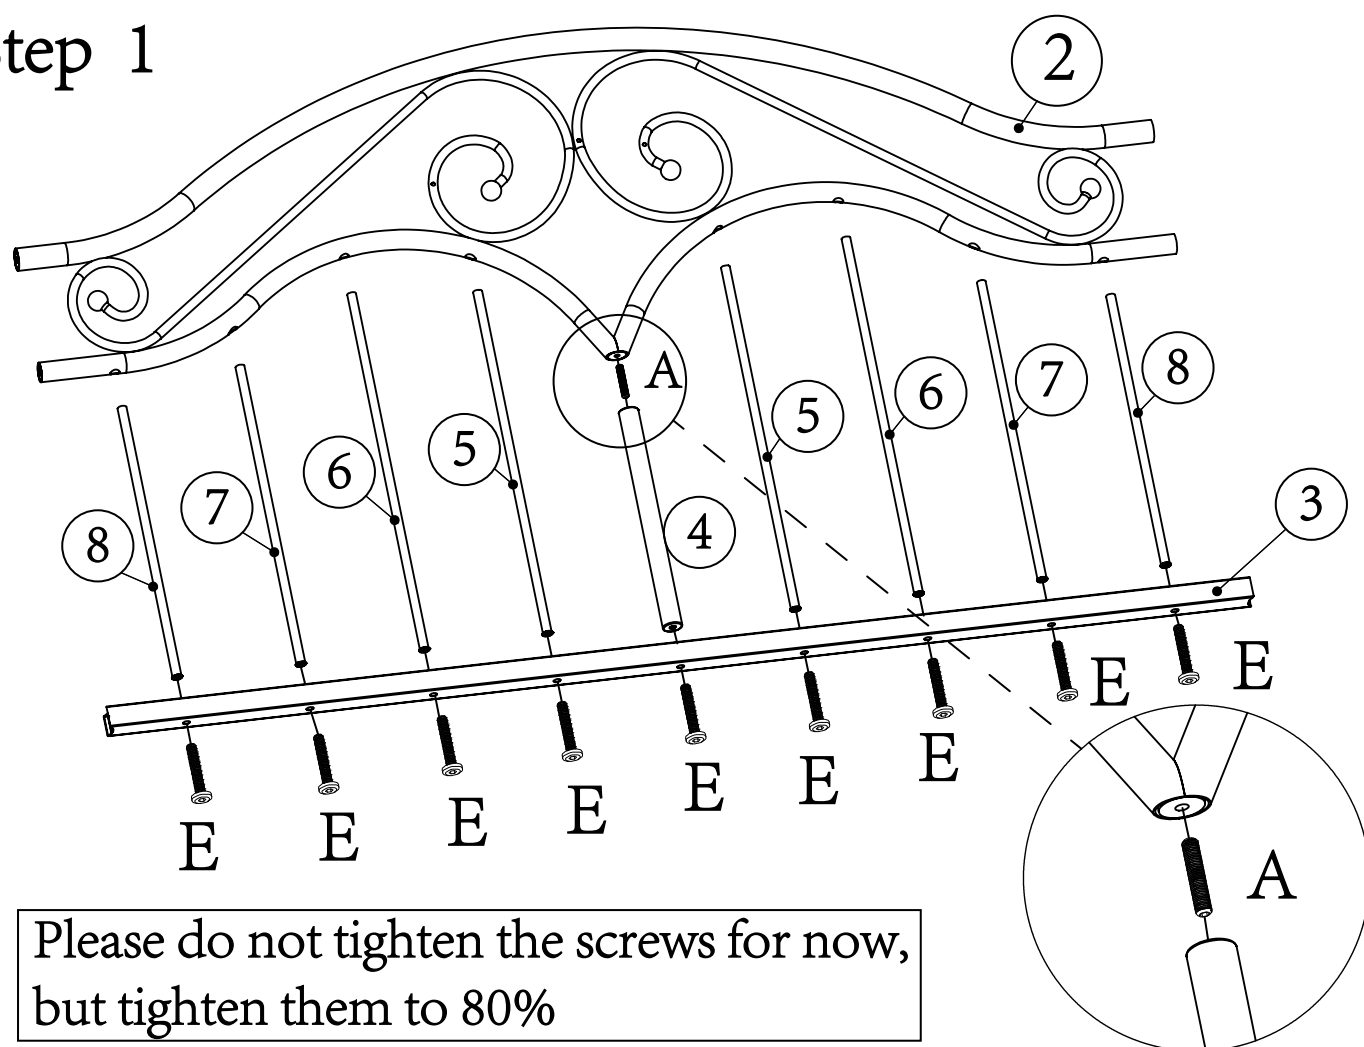


Adjustable Headboard Assembly Instruction




<div>① X2</div> 	<div>② X1</div> 	<div>③ X1</div> 			
<div>④ X1</div> 			<div>⑨ X2</div> 		
<div>⑩ X4</div> 	<div>Ⓐ X1</div>  <div>M6X30</div>	<div>Ⓑ X4</div>  <div>M8X90</div>	<div>Ⓒ X4</div>  <div>M8X45</div>		
<div>Ⓓ X6</div>  <div>M6X60</div>	<div>Ⓔ X9</div>  <div>M6X35</div>	<div>Ⓕ X4</div>  <div>M8</div>	<div>Ⓖ X4</div>  <div>M8</div>	<div>Ⓗ X4</div> 	
<div>Difference screws display(1:1)</div> <div><div><div>Ⓑ</div><div>M8X90</div></div><div><div>Ⓒ</div><div>M8X45</div></div><div><div>Ⓕ</div><div>M8</div></div><div><div>Ⓖ</div><div>M8</div></div><div><div>Ⓐ</div><div>M6X30</div></div><div><div>Ⓓ</div><div>M6X60</div></div><div><div>Ⓔ</div><div>M6X35</div></div></div> <div><div>M6:Screw outer diameter 6mm</div><div>M8:Screw outer diameter 8mm</div></div>					

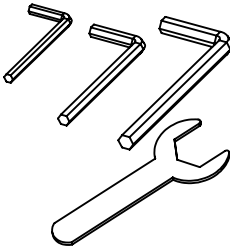Step 1




Step 2

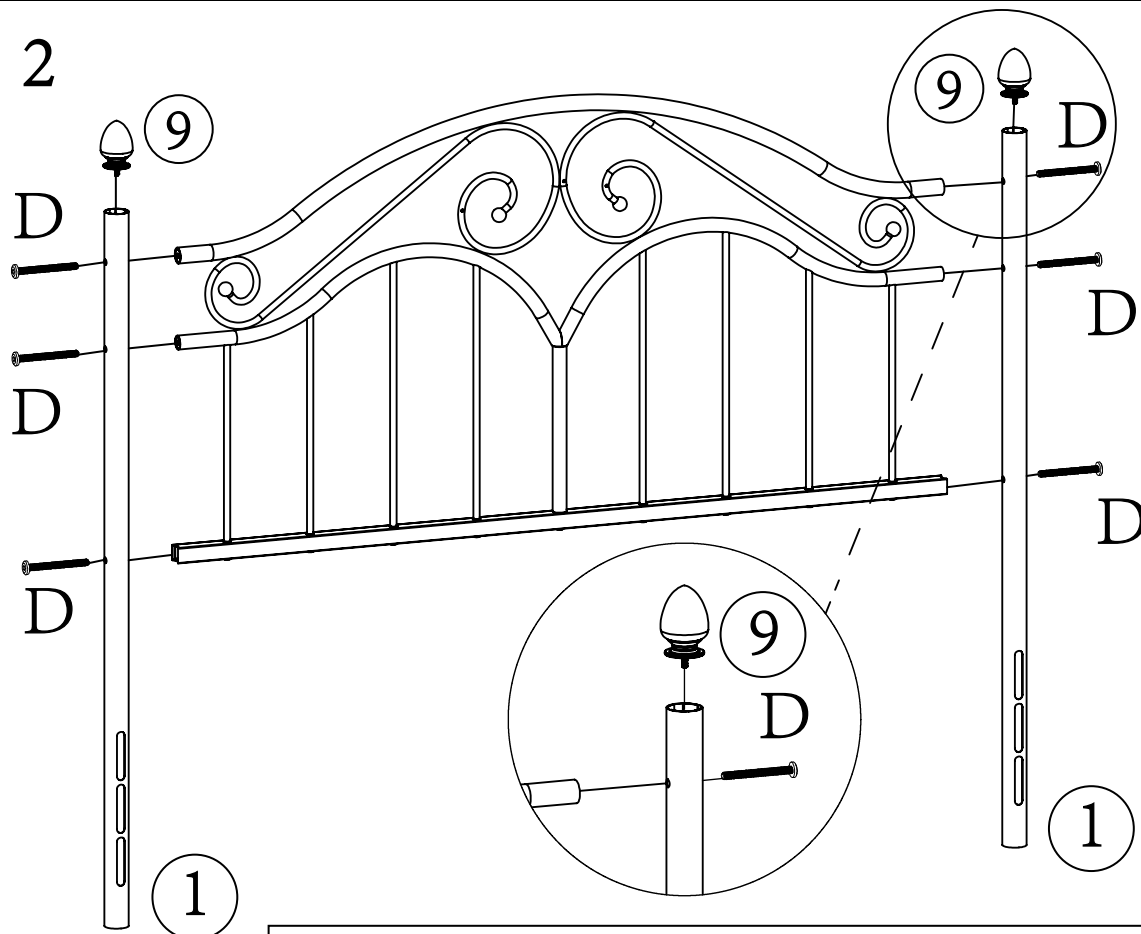

After completing this installation step,
please tighten the screws from the previous step

Step 3

Select the suitable assembly scheme based on the requirement.

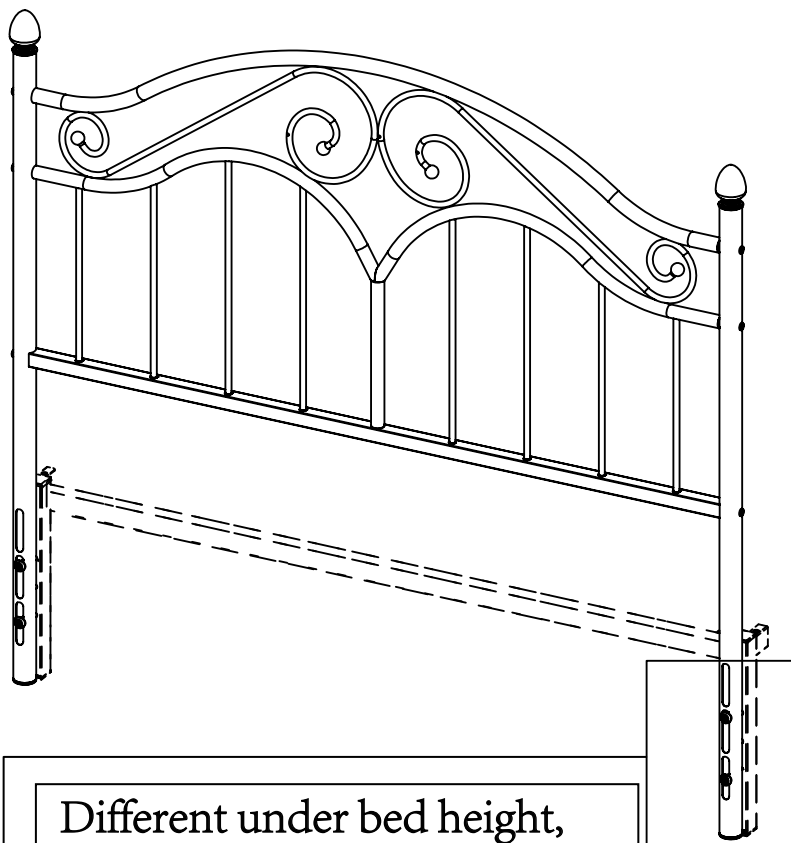

★ :When assembling Part 10, please pay attention to the direction. The direction to the left or right is adjustable.

Different under bed height, use different assembled height.

