






ASSEMBLY INSTRUCTIONS


MID-CENTURY PANEL BED-FULL SIZE

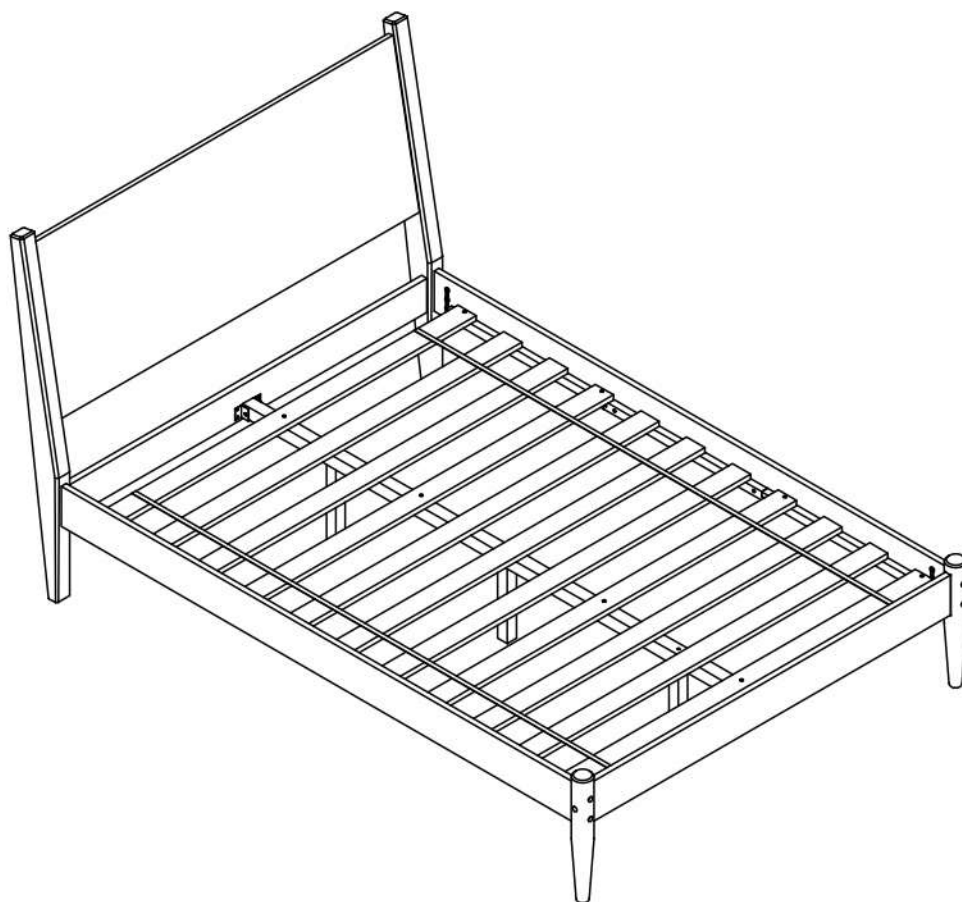

01:00 Hs

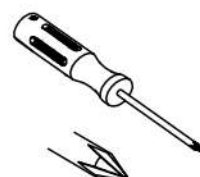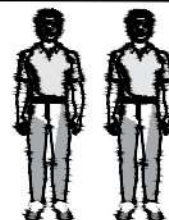

HARDWARE INCLUDED



A - 10,0x40 Wooden Dowel
Qty. 16



B - 1/4x60 Bolt
Qty. 05



C - 3,5x15 Screw
Qty. 08



D - 4x30 Screw
Qty. 12



E - Ø15x13 Cam Lock
Qty. 06



F - Allen Key
Qty. 01




G - 6x36x76 Screwdriver
Qty. 01



H - 1/4x90 Bolt
Qty. 12



J - Wrench
Qty. 01

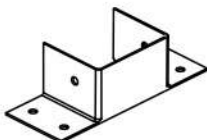


K-Metal Bracket
Qty. 02



L - Wood Hole Plug
Qty. 08




M - 1/4x5 Hex Nut
Qty. 02







N - M6x40 Bolt Shaft
Qty. 06

PARTS INCLUDED

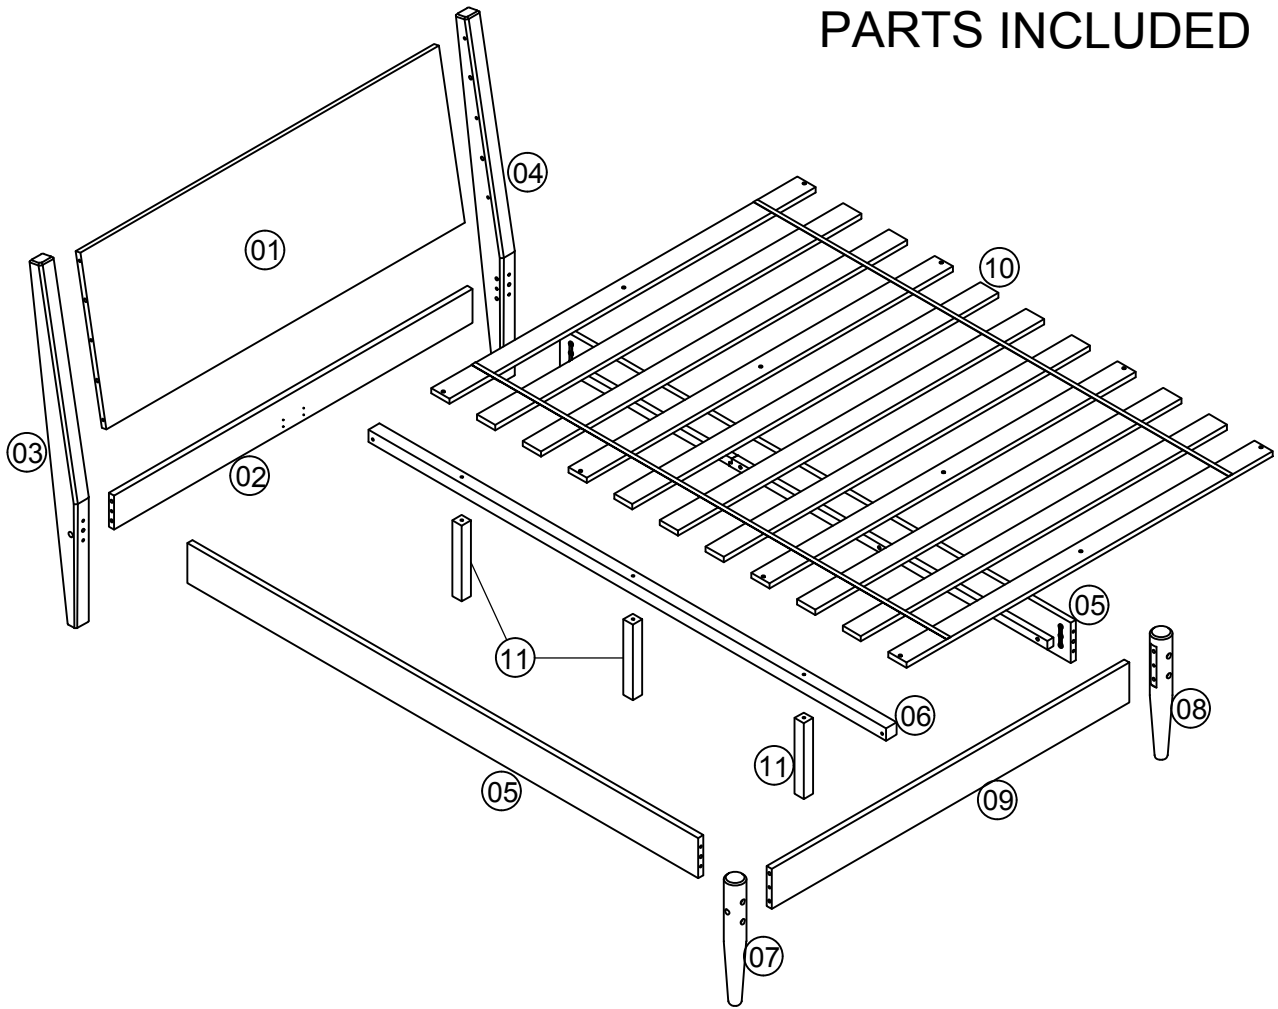

STEP 1

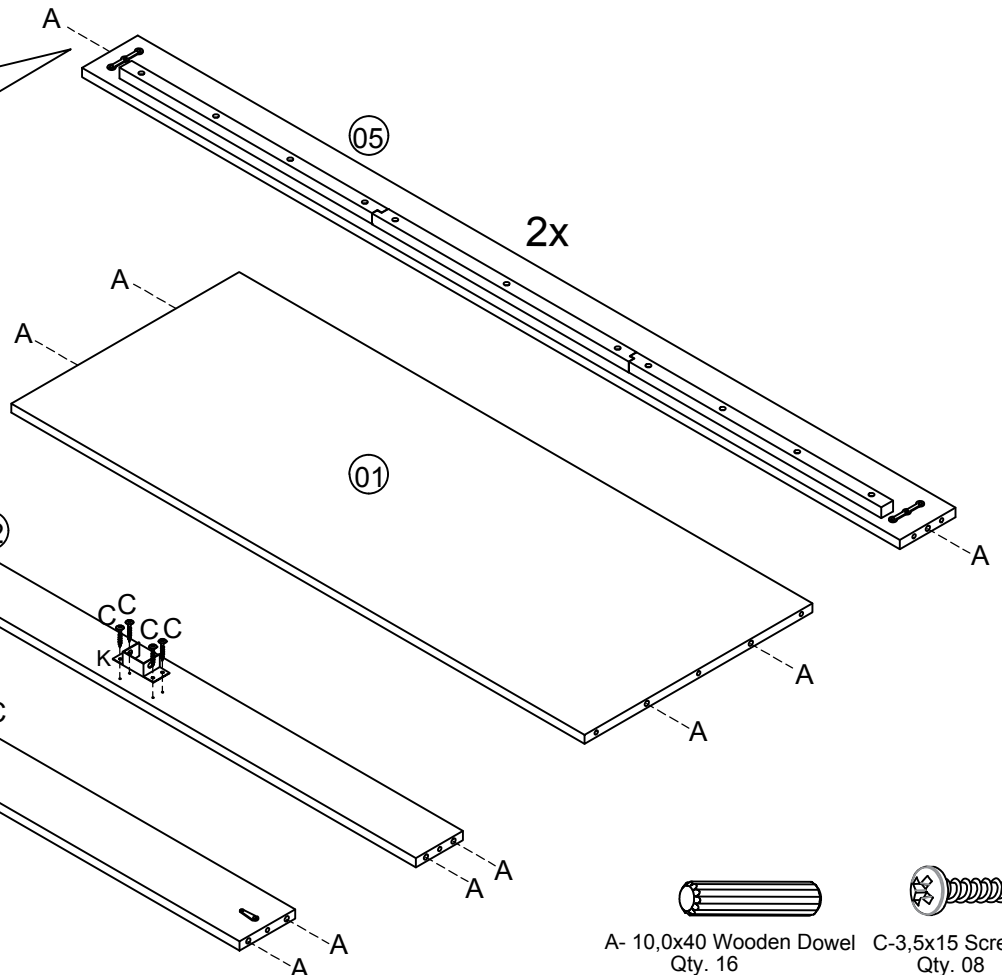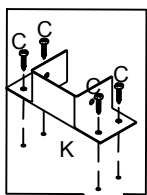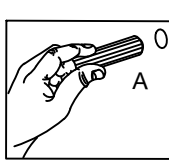

K-Metal Bracket
Qty. 02






A- 10,0x40 Wooden Dowel
Qty. 16







C-3,5x15 Screw
Qty. 08

STEP 2

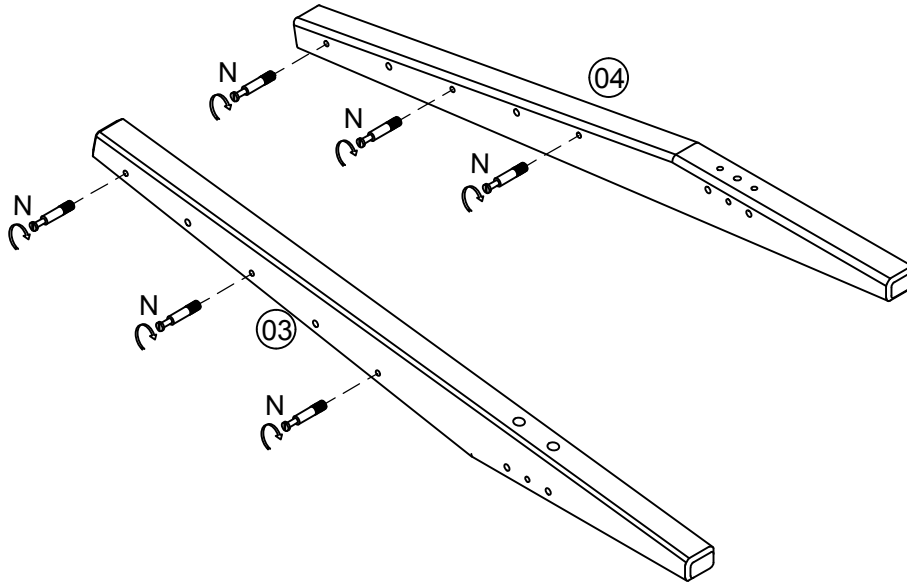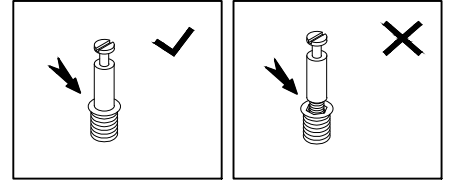

N - M6x40
Qty. 06

STEP 3

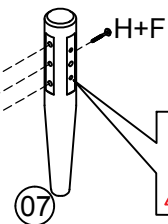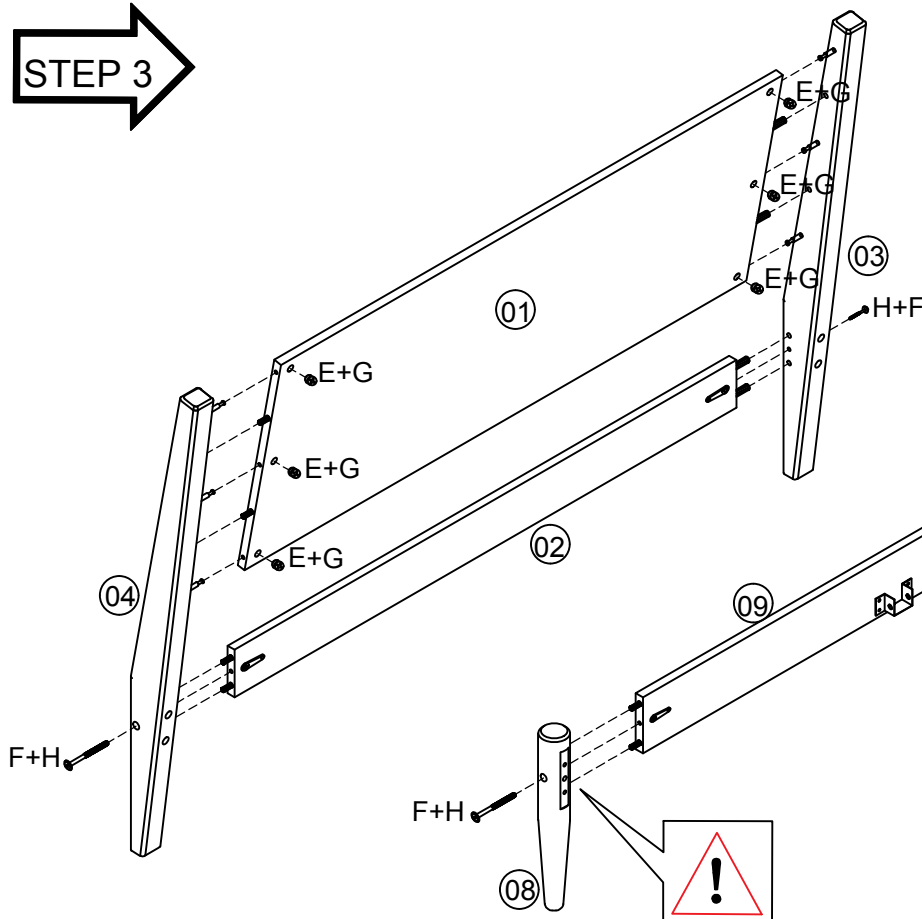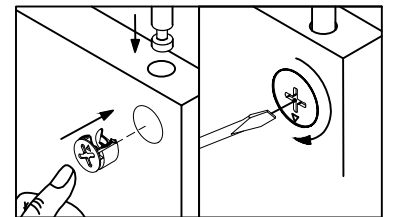

F - Allen Key
Qty. 01



G - 6x36x76
Qty. 01




H - 1/4x90 Bolt
Qty. 04




E - Ø15x13
Qty. 06


STEP 4

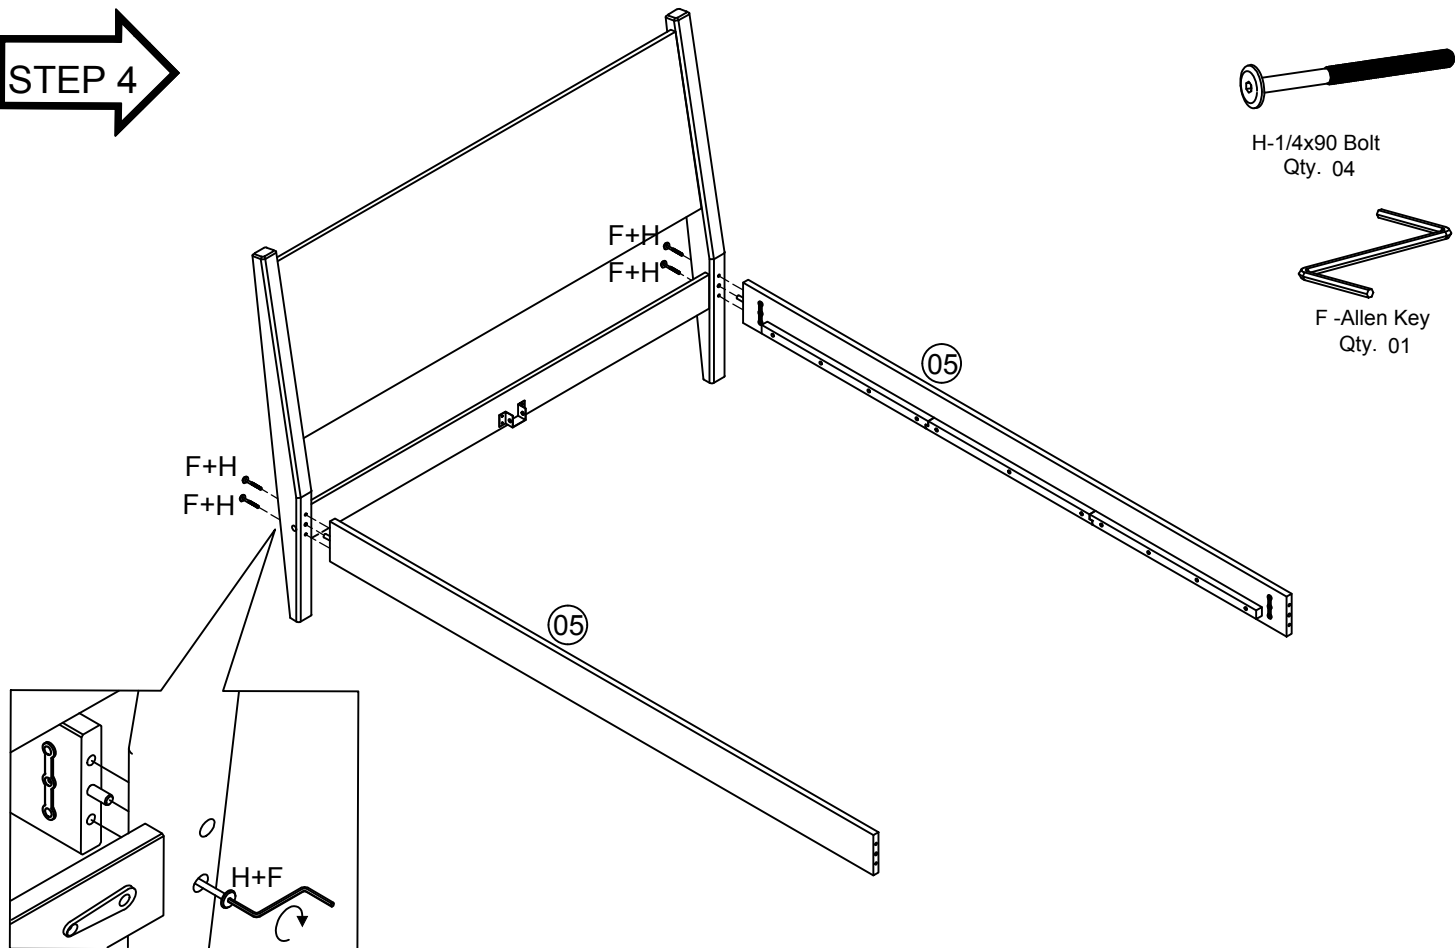


STEP 5

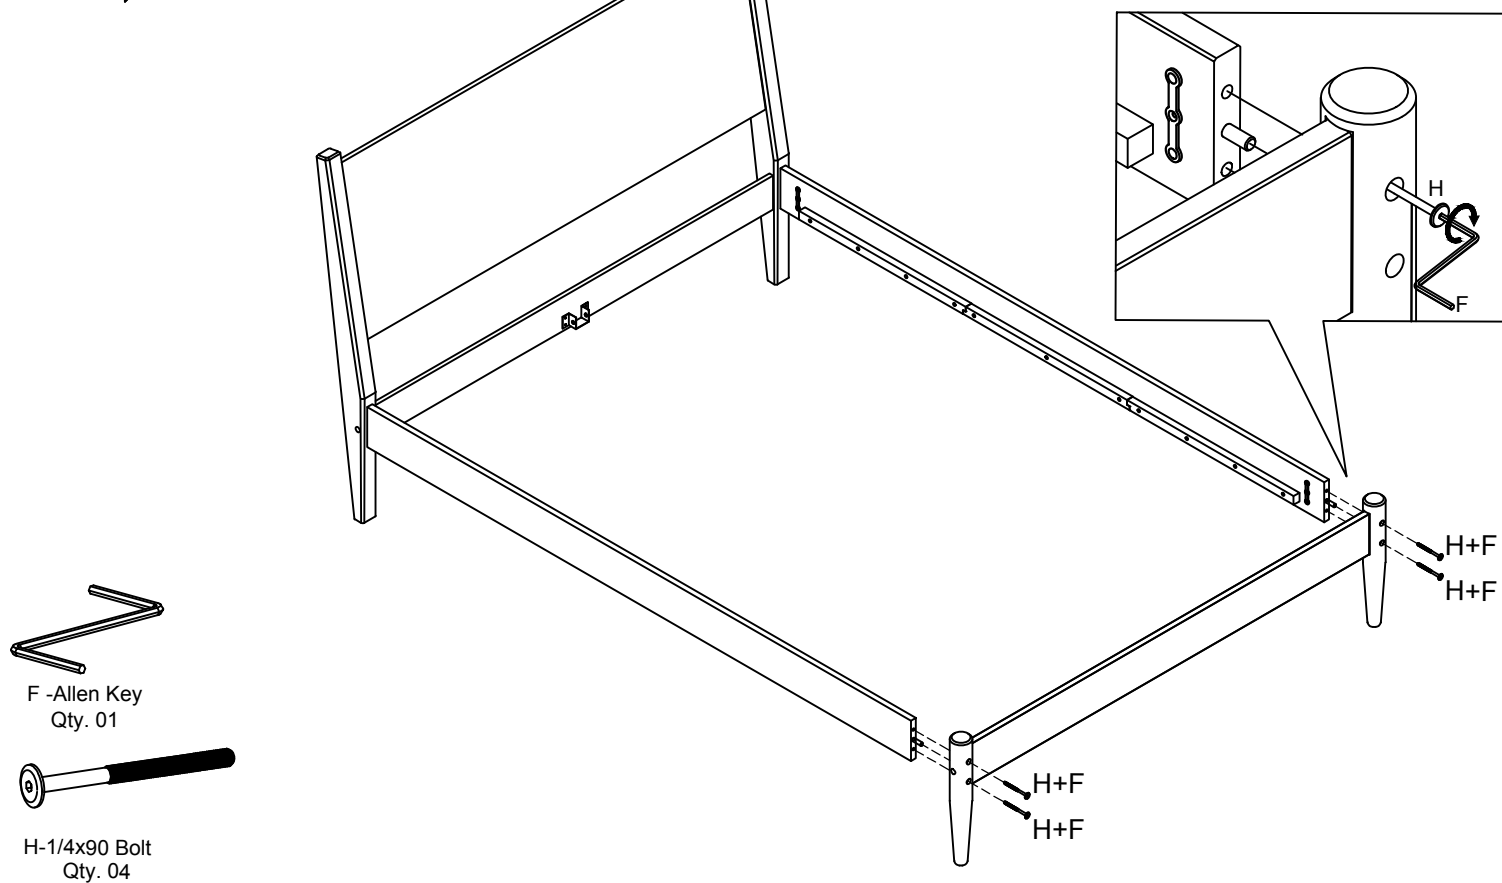

STEP 6

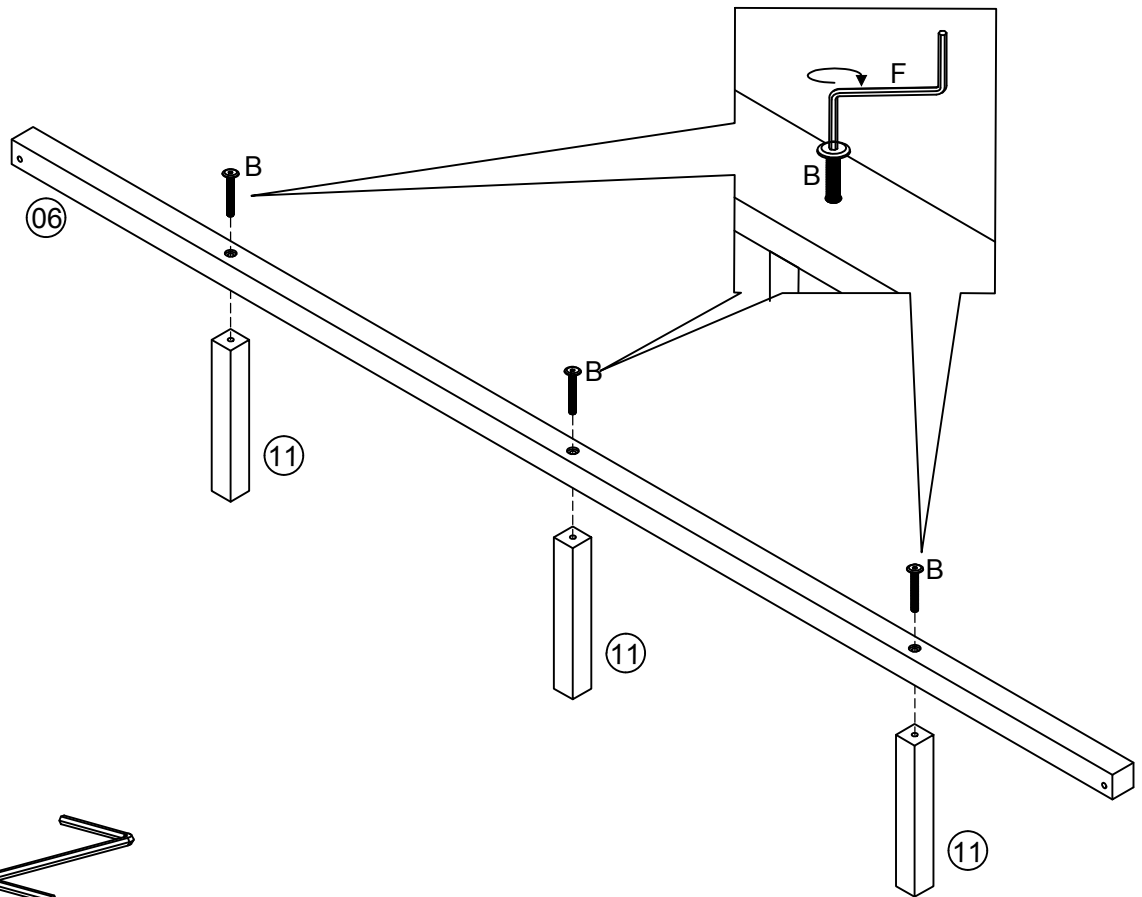


B - 1/4x60 Bolt
Qty. 03



F - Allen Key
Qty. 01

STEP 7



F - Allen Key
Qty. 01




J - Wrench
Qty. 01



M - 1/4x5 Hex Nut
Qty. 02




B - 1/4x60 Bolt
Qty. 02

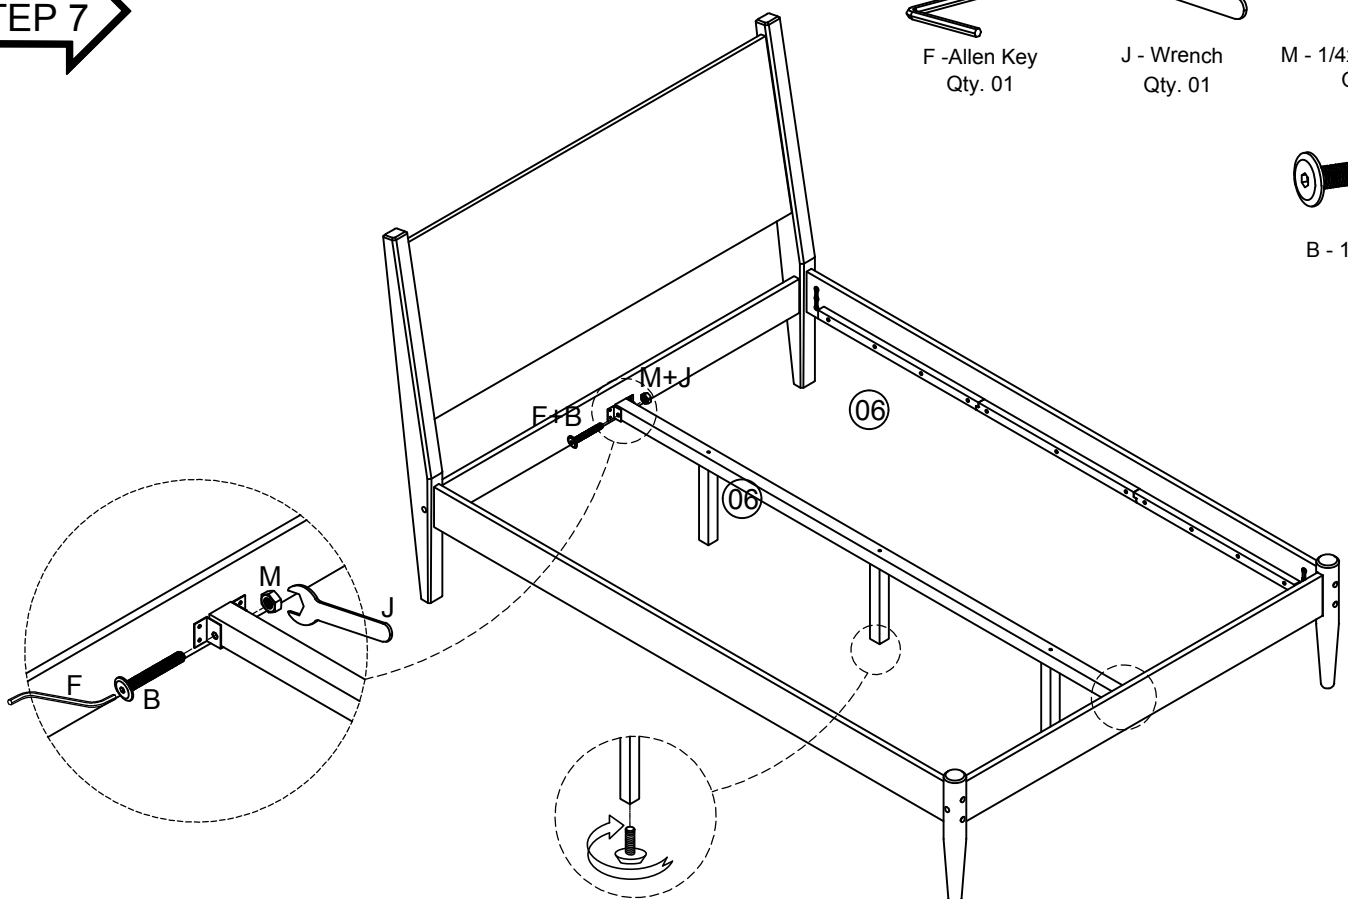


Adjust the leveler to ensure balance.

STEP 8

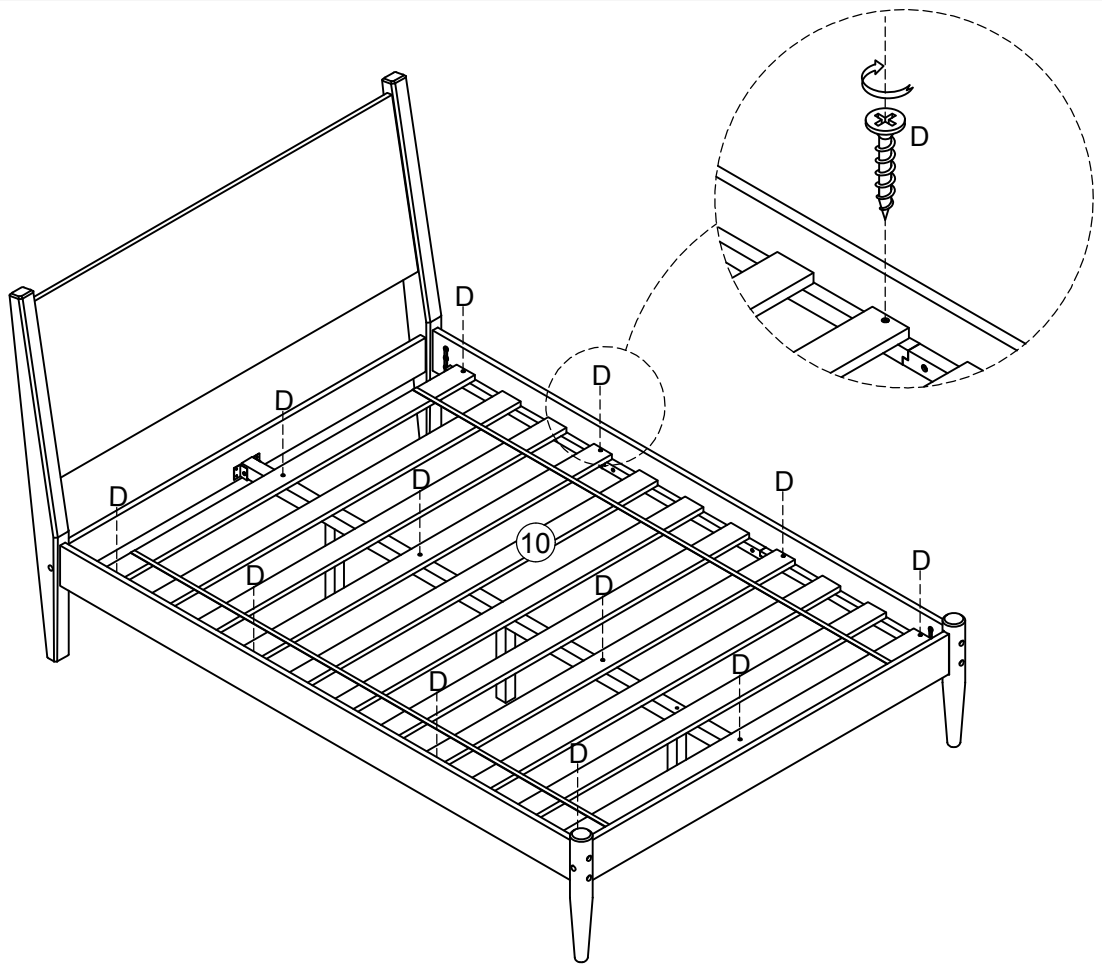

D - 4x30 Screw
Qty. 12

STEP 9

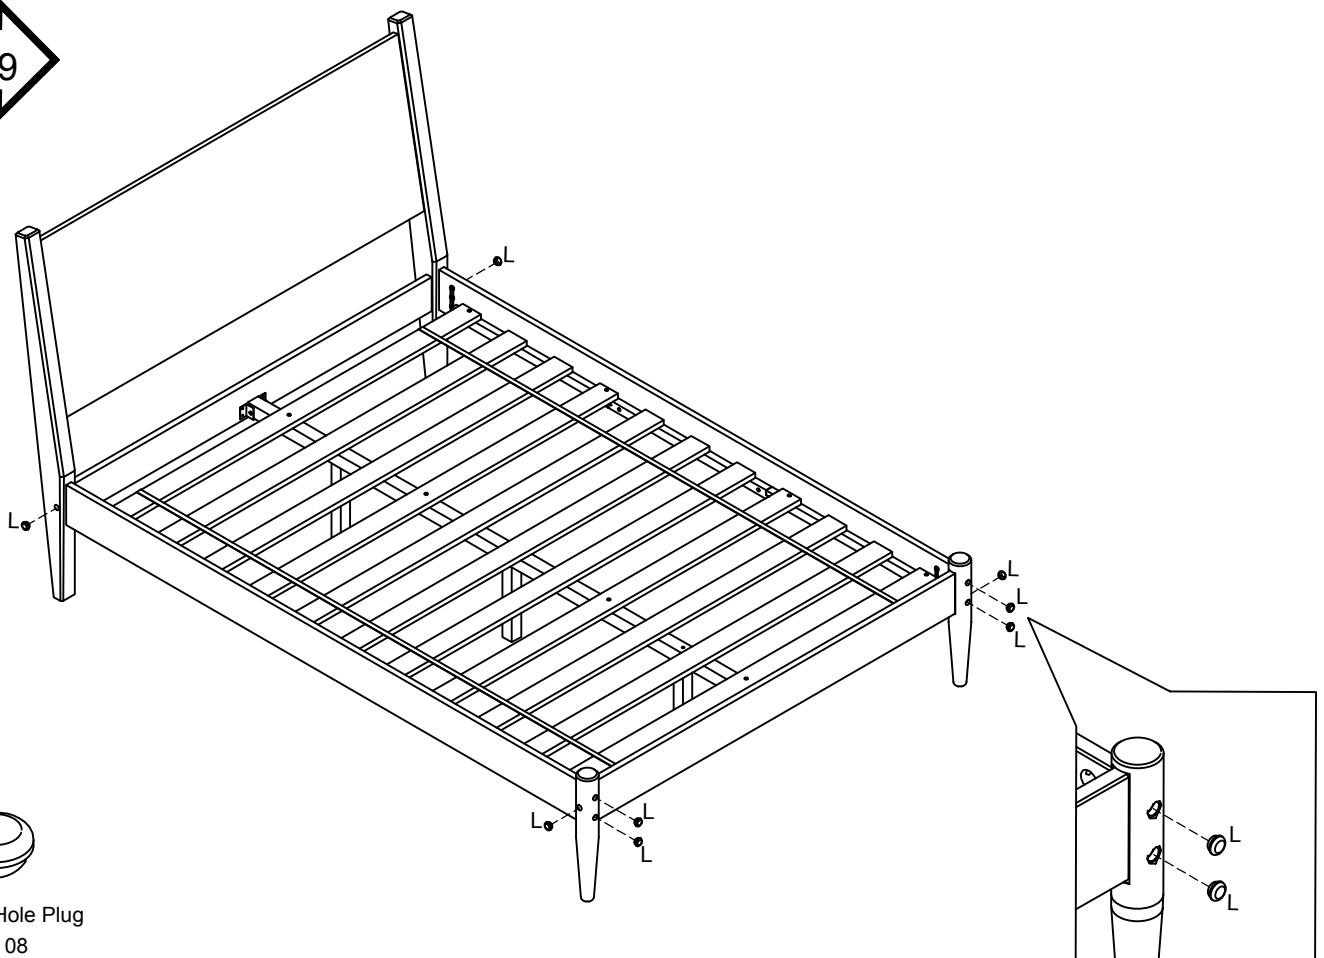

L - Wood Hole Plug
Qty. 08