


ASSEMBLY INSTRUCTION


HARDWARE LIST	CODE	PARTS	QTY.			
	1	ВАСК	1			
	2	FRONT LEG	2			
Ħ	3	BACK LEG	2			

	CODE	PAF	QTY.	
HARDWARE LIST	Α	M8×50MM	9	4
	В	M8×60MM	1	4
НА	С	ALLEN KEY		1

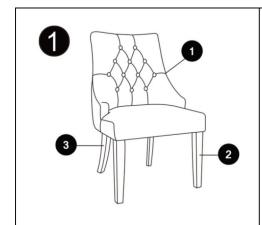

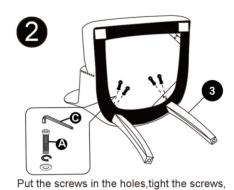

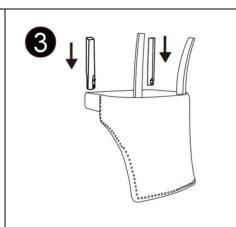

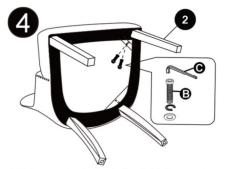


Put the screws in the holes, tight the screws, but not too tight, 90% is ok.




but not too tight,90% is ok.

Then adjust the balance of the chair.

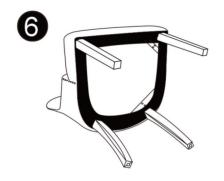

Tight all the screws to 100%.

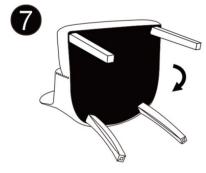

Stick the black part on the seat.

