


ASSEMBLY/INSTALLATION INSTRUCTIONS

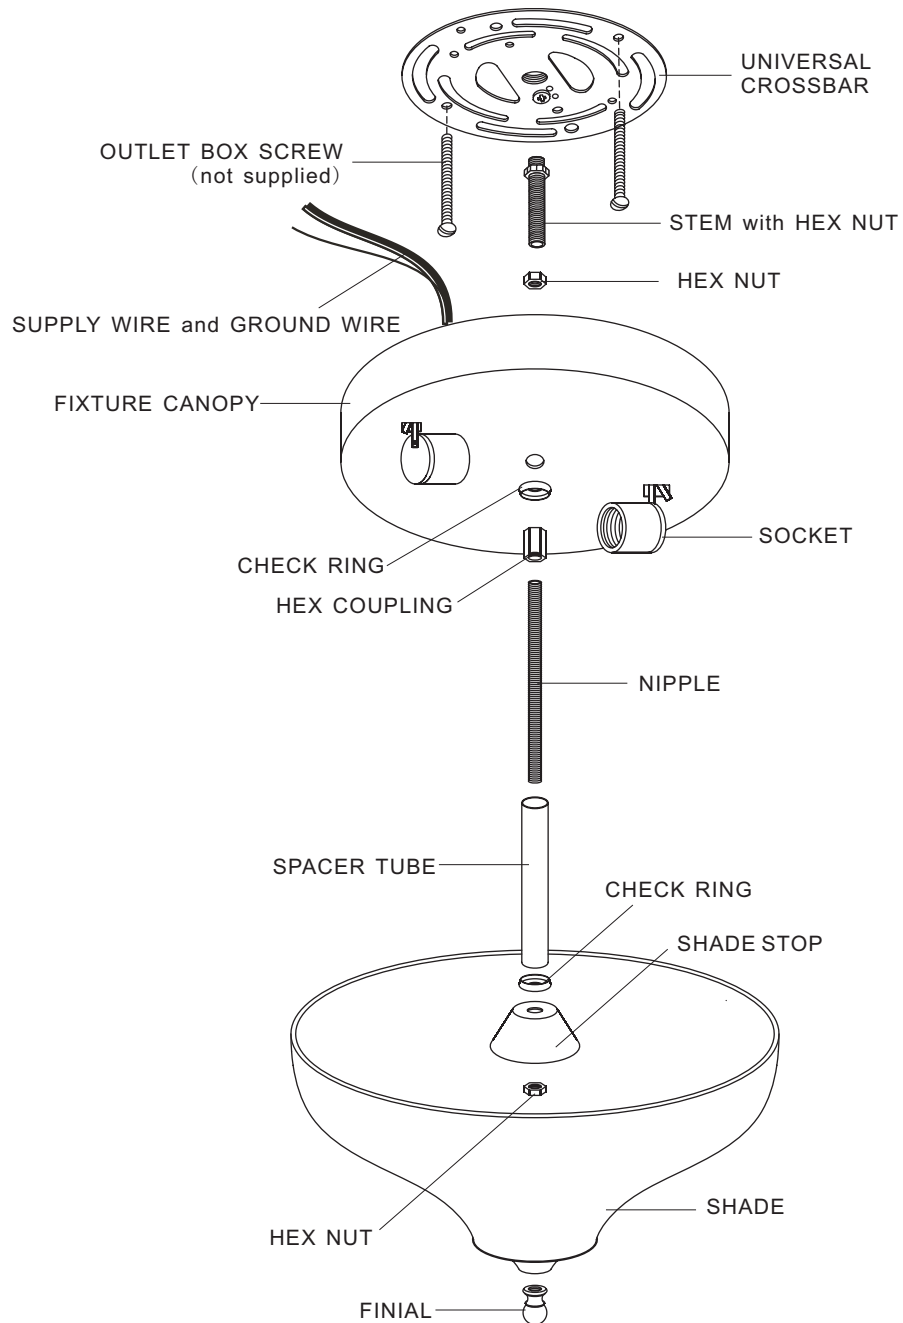

1. Before beginning installation, be sure to carefully unpack all parts referring to the illustration for parts identification.
2. With power to the installation point OFF, locate the UNIVERSAL CROSSBAR and attach to the ceiling mounted OUTLET BOX. Do this using (2) OUTLET BOX SCREWS(not supplied). Locate the STEM with HEX NUT and thread top end into the center of the UNIVERSAL CROSSBAR. Position the FIXTURE CANOPY over the outlet box. Pass the mounting hole on the inside deck of the PAN over the end of STEM with HEX NUT. There should be approx. 3/8" of the end of STEM with HEX NUT protruding from mounting hole on inside deck of FIXTURE CANOPY. If STEM length is in excess of 3/8", thread STEM further into center of STEM. Remove FIXTURE CANOPY and snug HEX NUT against underside of UNIVERSAL CROSSBAR with pliers to secure STEM.
3. Thread another HEX NUT onto the other end of the NIPPLE. Thread this HEX NUT on just enough so the inside surface of the PAN rests against it.
* You may have to trial fit the CEILING CANOPY one more times to insure this distance also. This HEX NUT is needed here to prevent you from crushing down the center of the CEILING CANOPY.
4. **Making the connections:**
Position the FIXTURE CANOPY over the OUTLET BOX. Using wire connectors(not supplied) connect the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK SIDE). Wrap each connection with approved electrical tape.
5. Secure FIXTURE CANOPY to ceiling by aligning and passing mounting hole over end of STEM secure to UNIVERSAL CROSSBAR. Locate CHECK RING over end of STEM and thread HEX NUT onto end of STEM. Hand tighten until snug to secure the FIXTURE CANOPY. Be sure that there are no trapped or pinched wires.
6. Install bulbs referring to fixture markings and/or labels for maximum wattage.
7. Proceed to thread top end of NIPPLE into HEX COUPLING and tighten until snug. Locate SPACER TUBE, CHECK RING and SHADE STOP over end of NIPPLE. Secure them by threading HEX NUT onto end of NIPPLE. Hand tighten until snug.
8. Locate SHADE over end of NIPPLE and thread FINIAL onto end of NIPPLE. Secure it by threading FINIAL onto end of NIPPLE and hand tighten until snug.
9. Restore power to the installation point. Keep this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**