

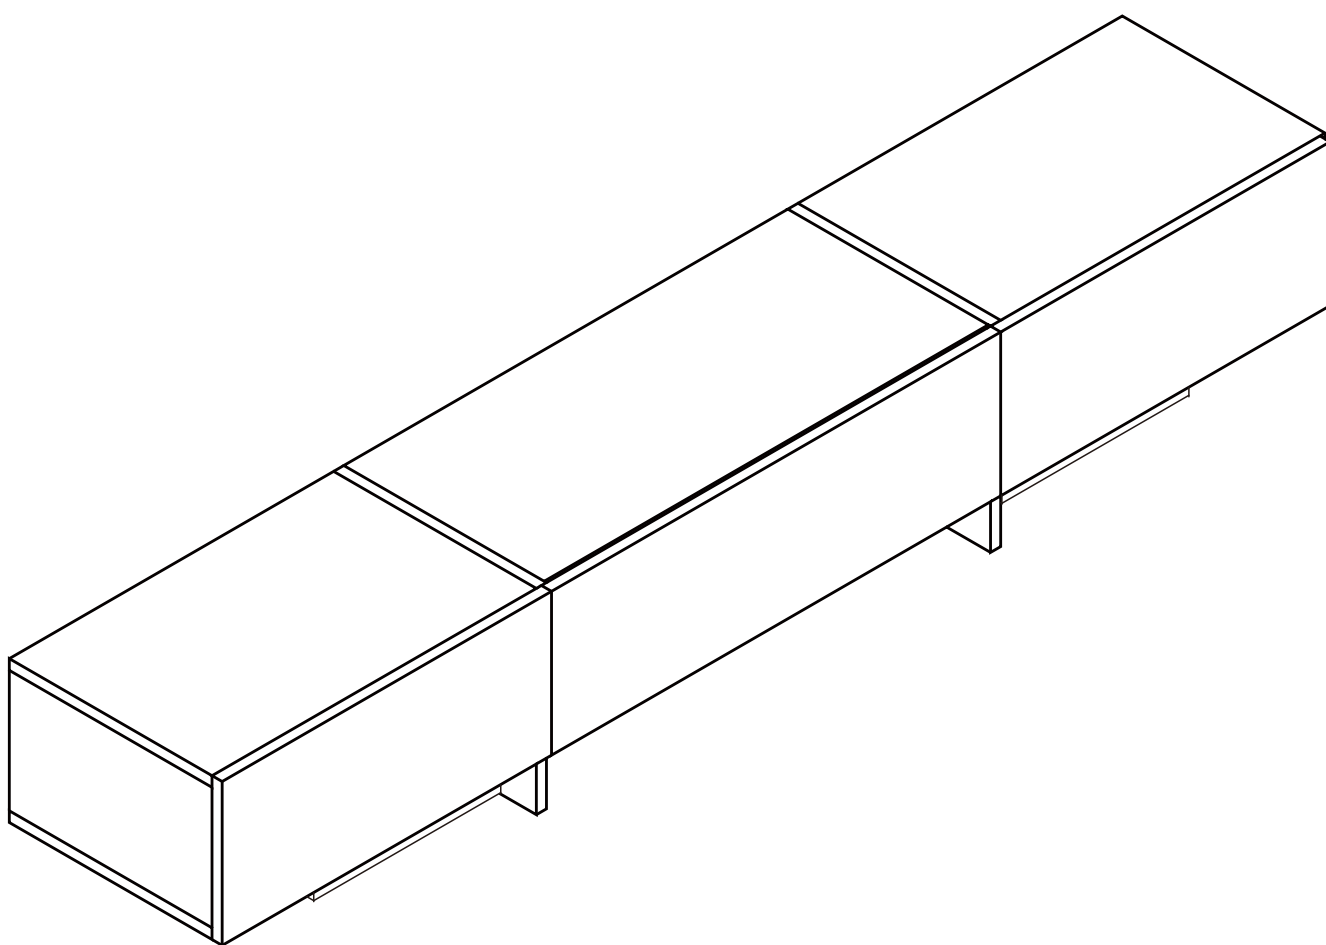
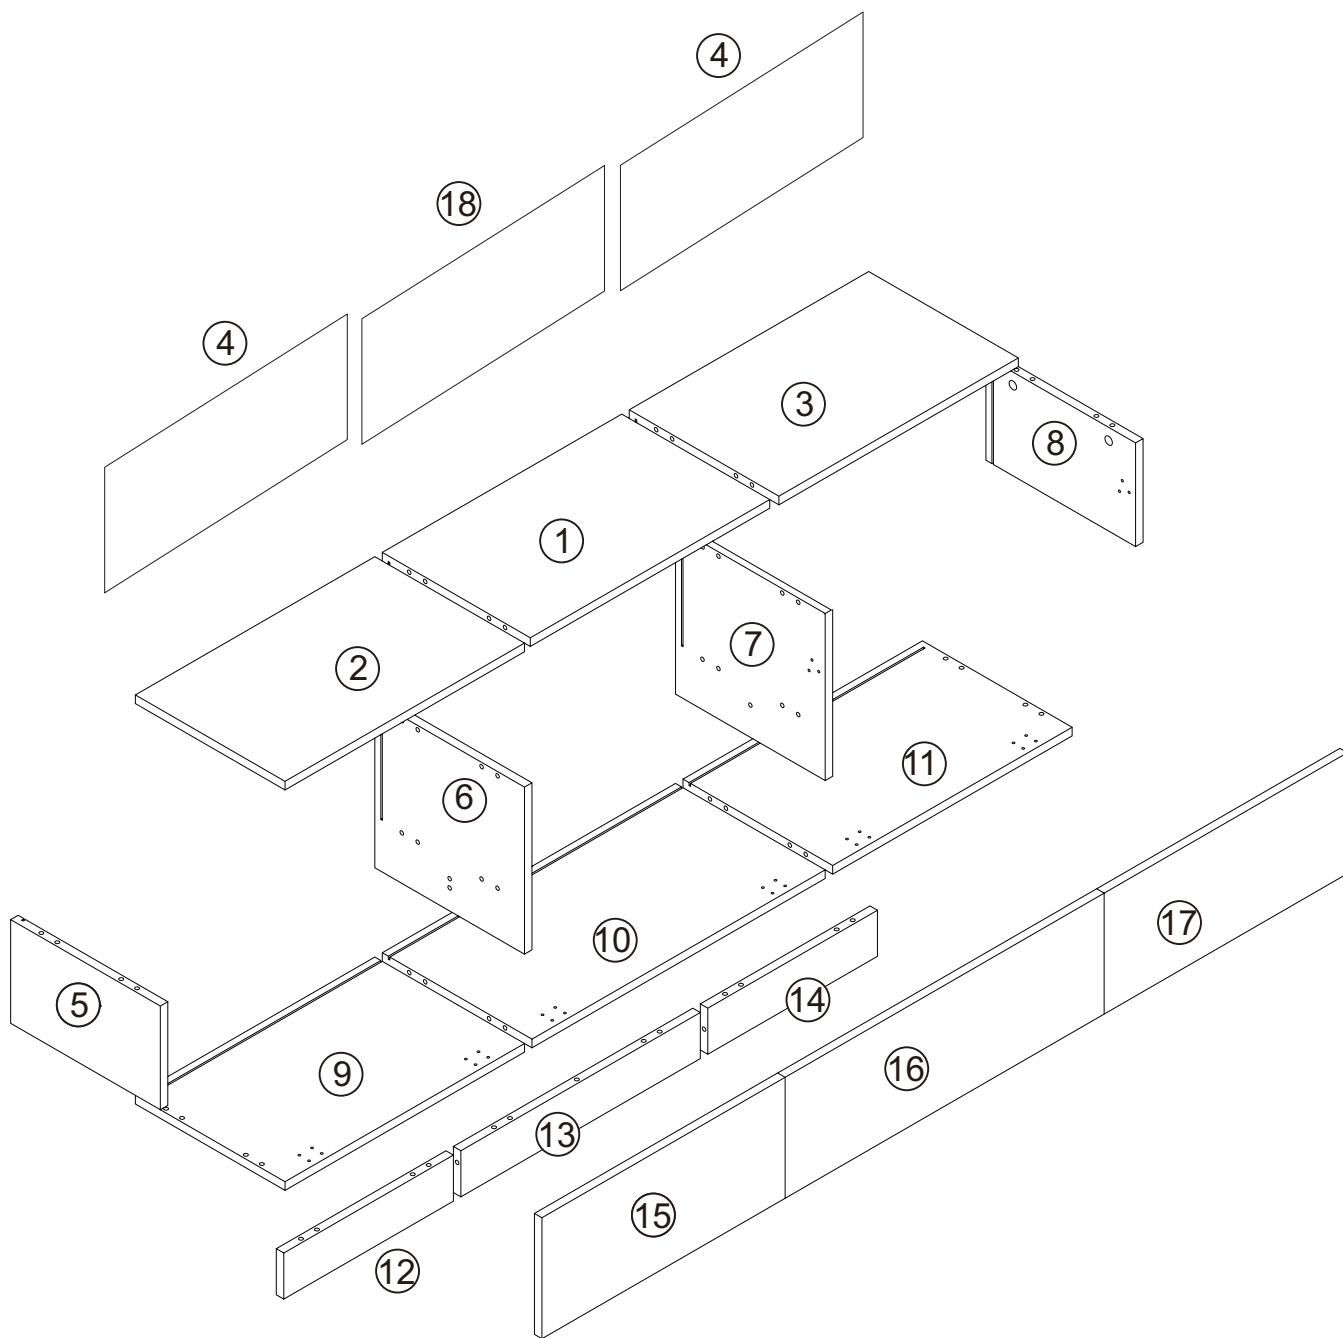
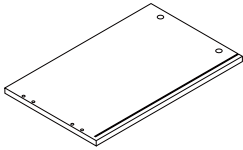
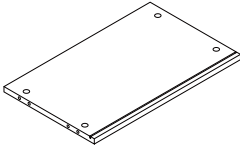
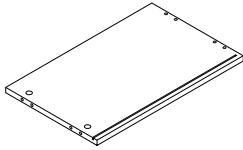
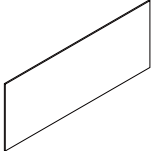




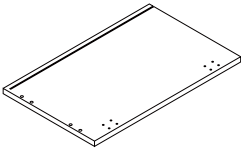
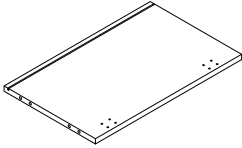
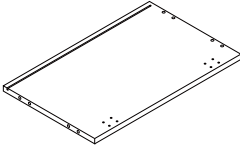



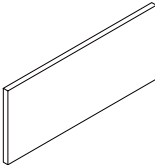
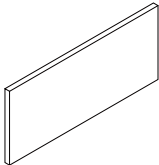





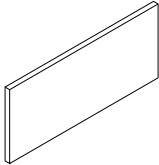


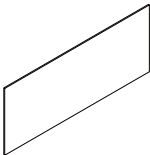

Parts and Operation Elements

					
①	1pc	②	1pc	③	1pc
					
④	2pcs	⑤	1pc	⑥	1pc
					
⑦	1pc	⑧	1pc	⑨	1pc
					
⑩	1pc	⑪	1pc	⑫	1pc
					
⑬	1pc	⑭	1pc	⑮	1pc
					
⑯	1pc	⑰	1pc	⑱	1pc





Hardware

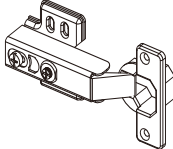 Cam bolt		 Cam Lock		 6x30mm Wood dowel		 4x40mm screw	
A	29+2pcs	B	29+2pcs	C	30+2pcs	D	6pcs
 		 3x12mm screw		 		 3.5x12mm screw	
E	4pcs	F	20+2pcs	G	6 pcs	H	36+2pcs



SPARE BAG

THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

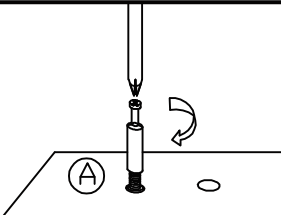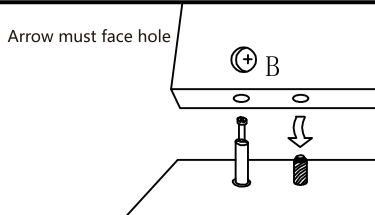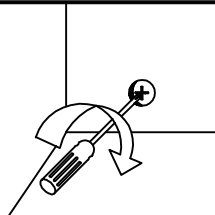							
Gently screw cam bolt into the threaded anchor.		Insert the wood dowel halfway into hole.				Screw the camlock firmly into locked position.	

1



A x2



B x2



C x2

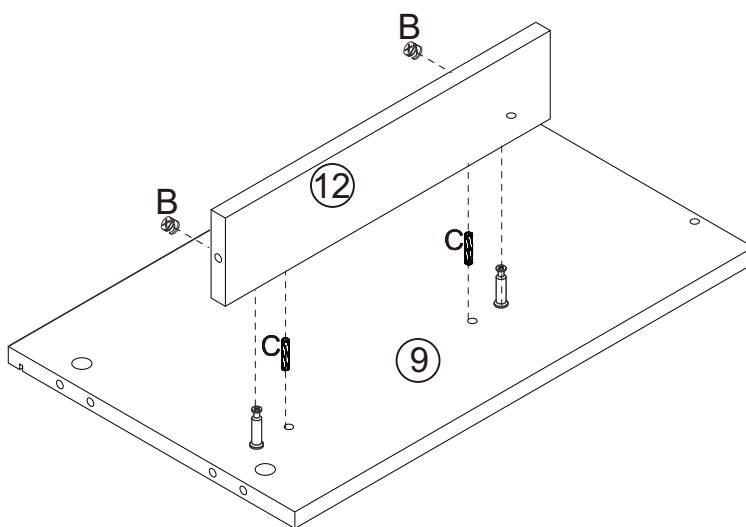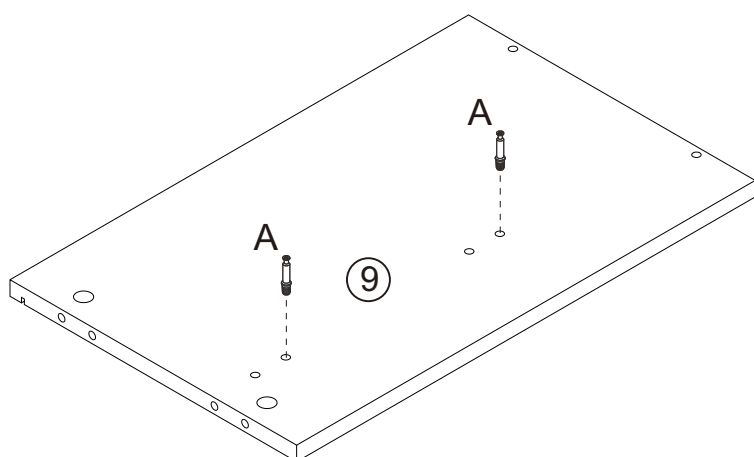

2



A x2



B x2





C x2

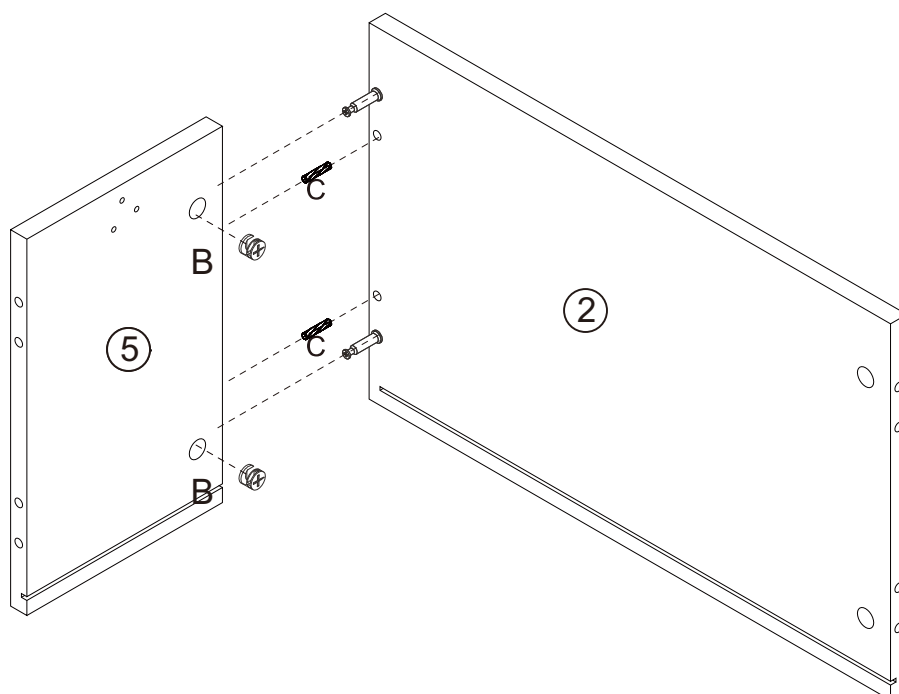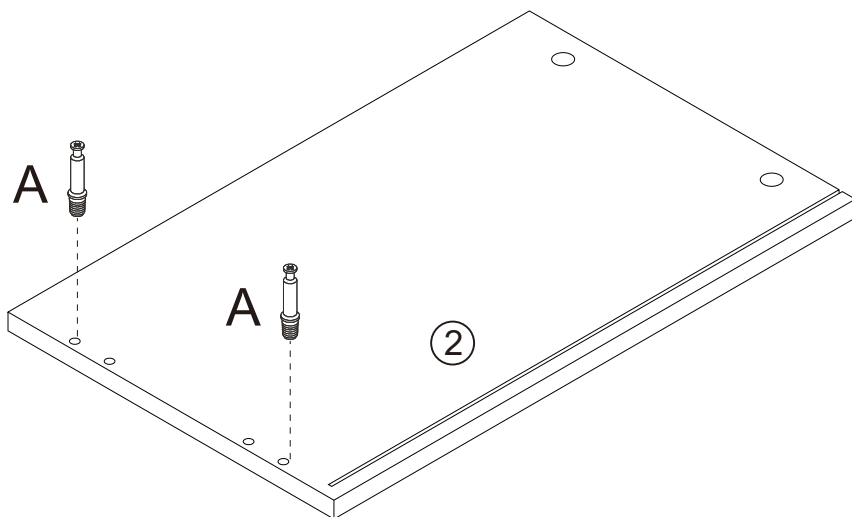

3

D x2

C x2

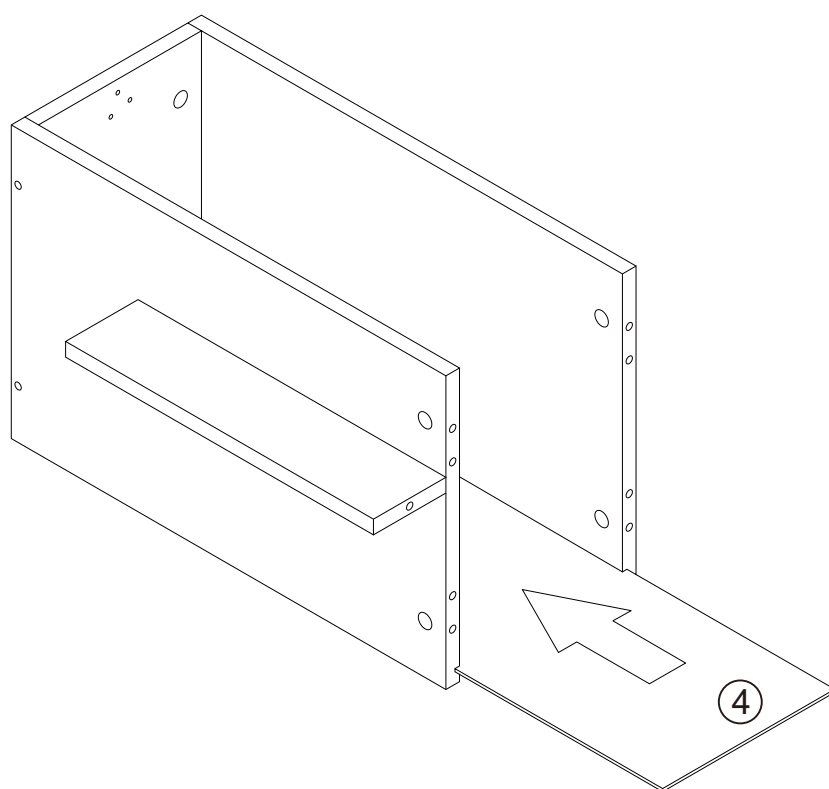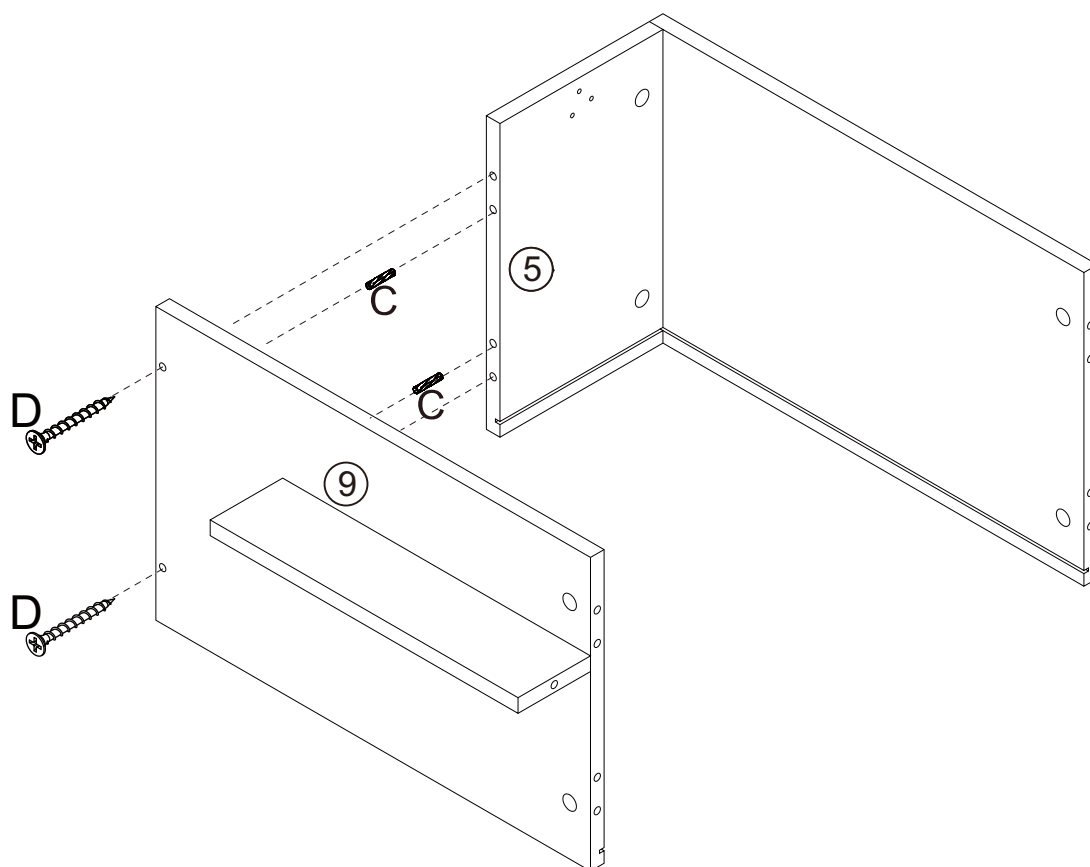

4


A x2



B x2





C x2

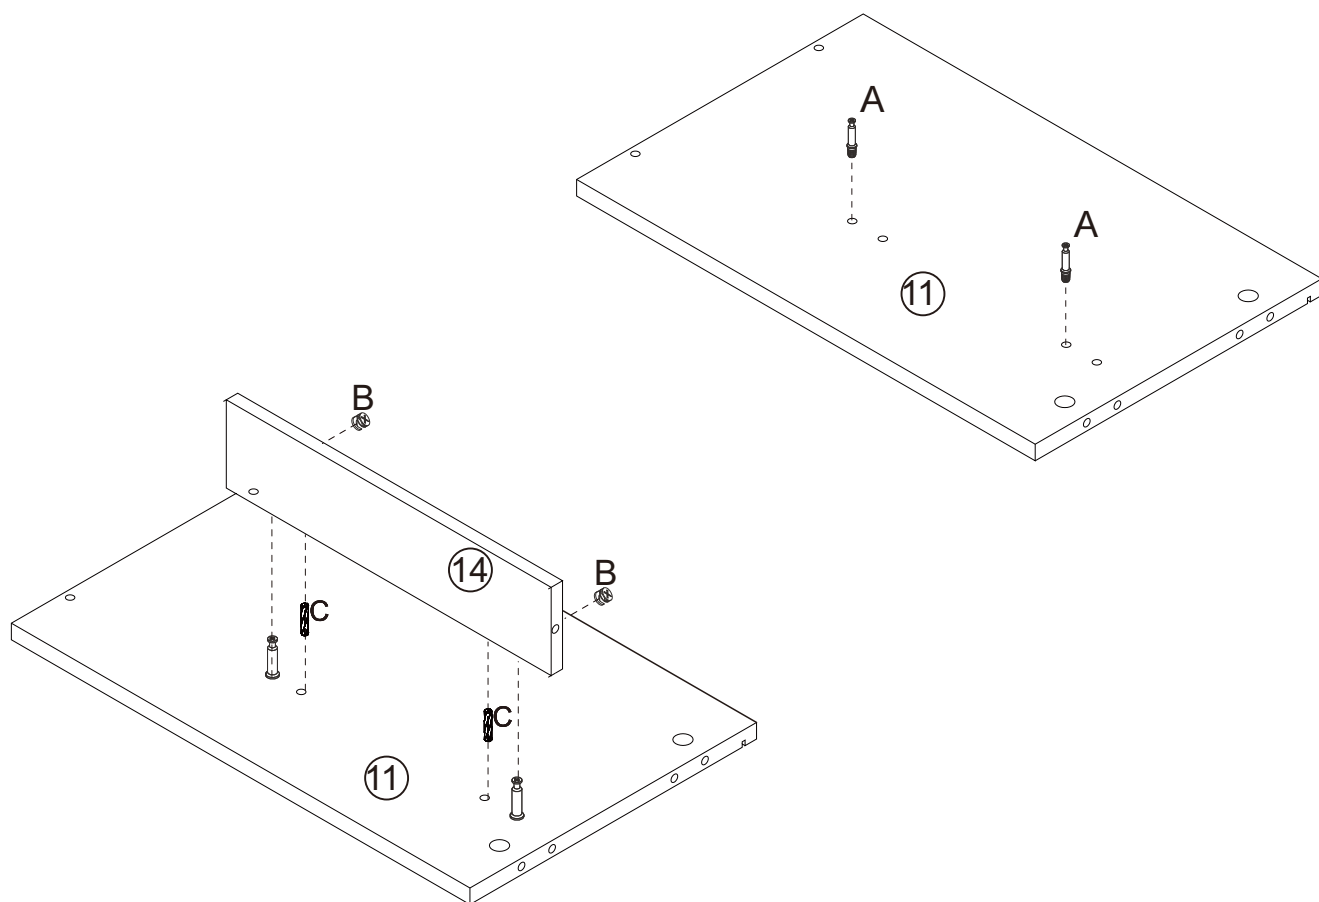

5



- | | | |
|---|---|----|
| A |  | x2 |
| B |  | x2 |
| C |  | x2 |

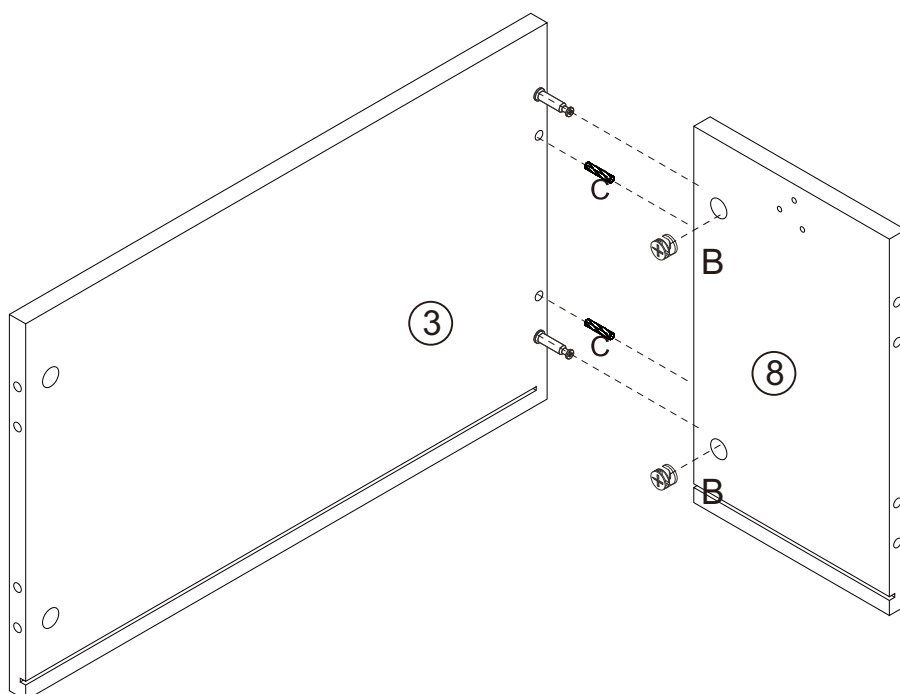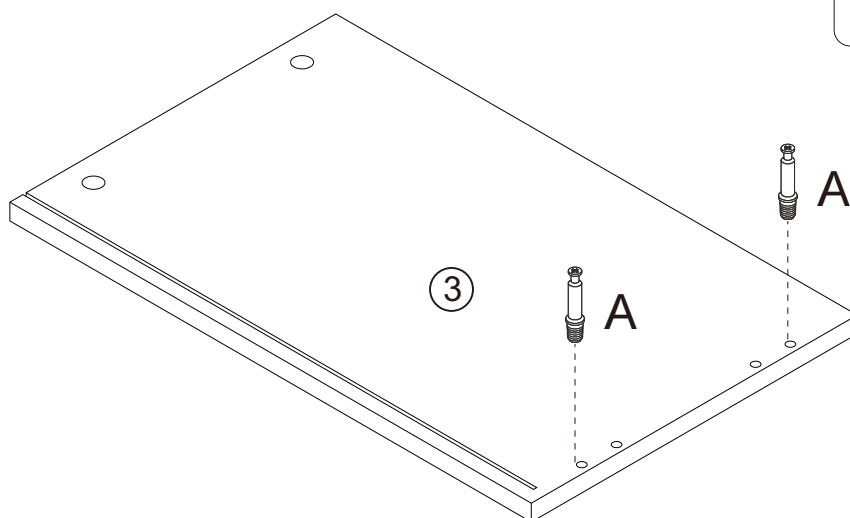

6



D x2

C x2


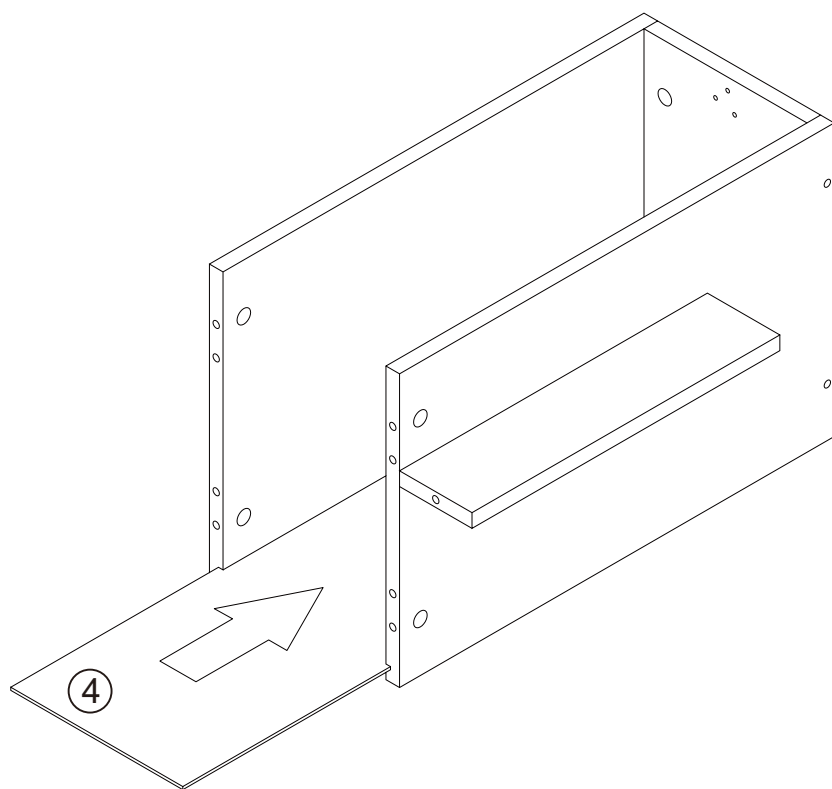
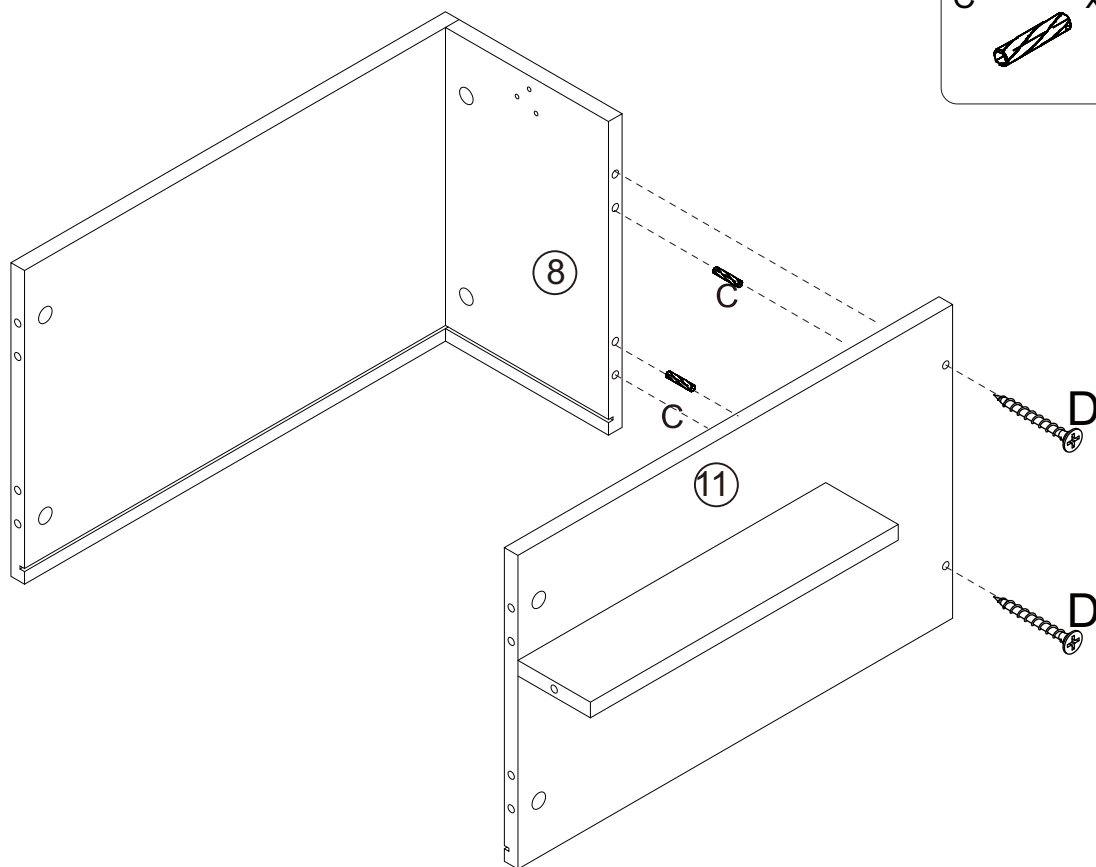


7


- | | | |
|---|---|----|
| A |  | x3 |
| B |  | x3 |
| C |  | x2 |

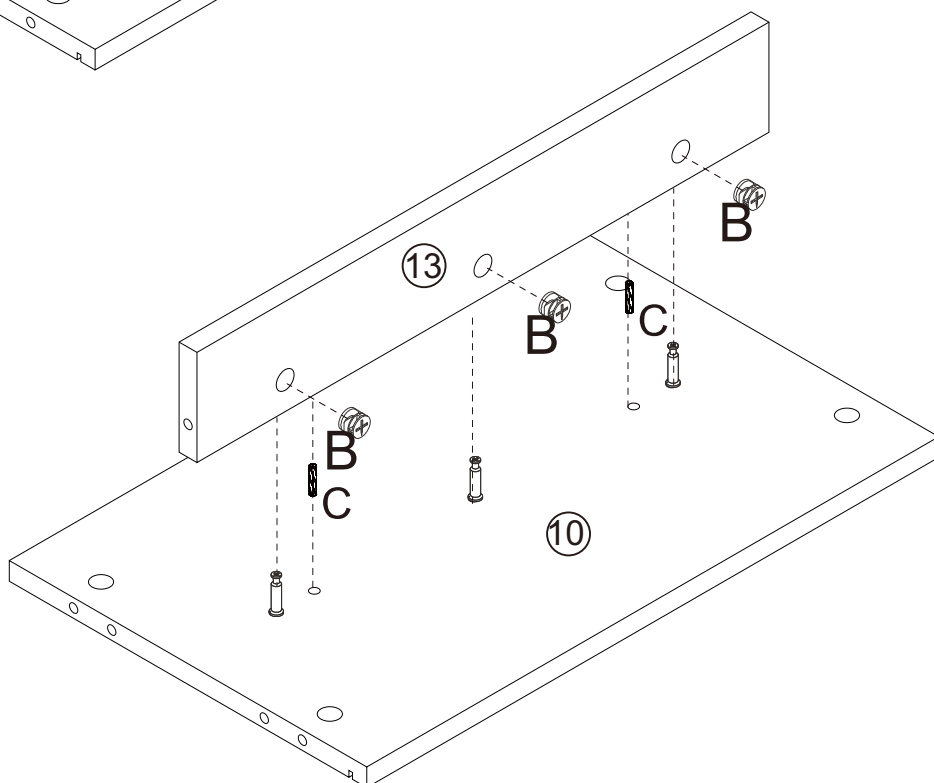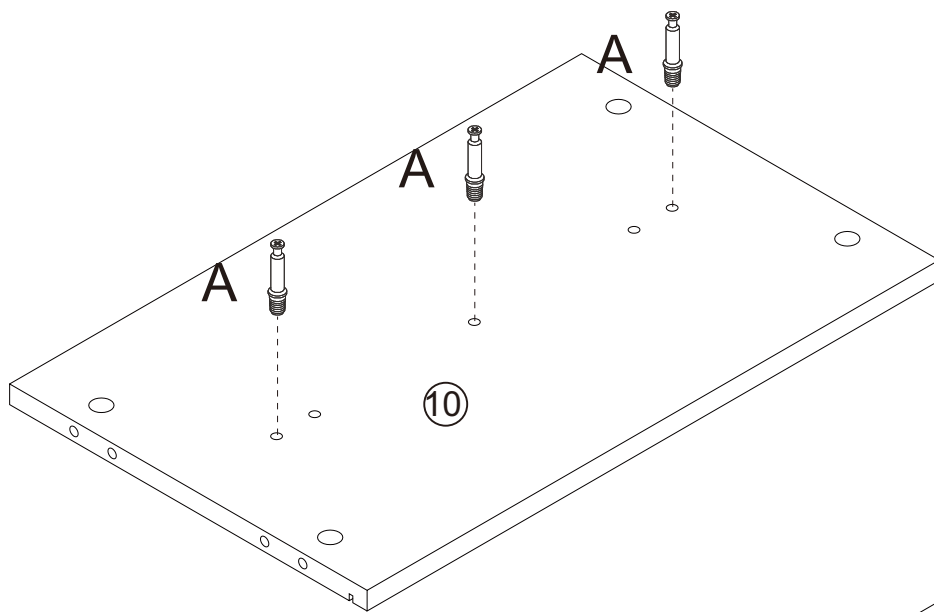

8

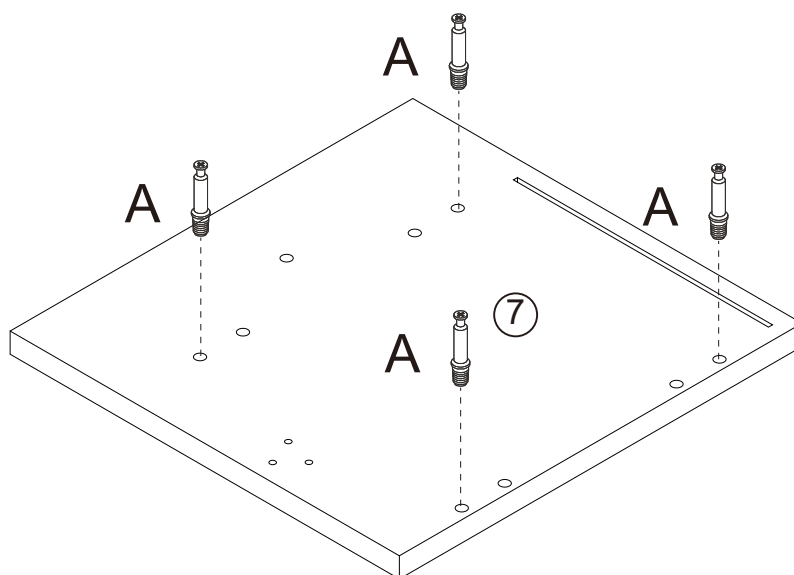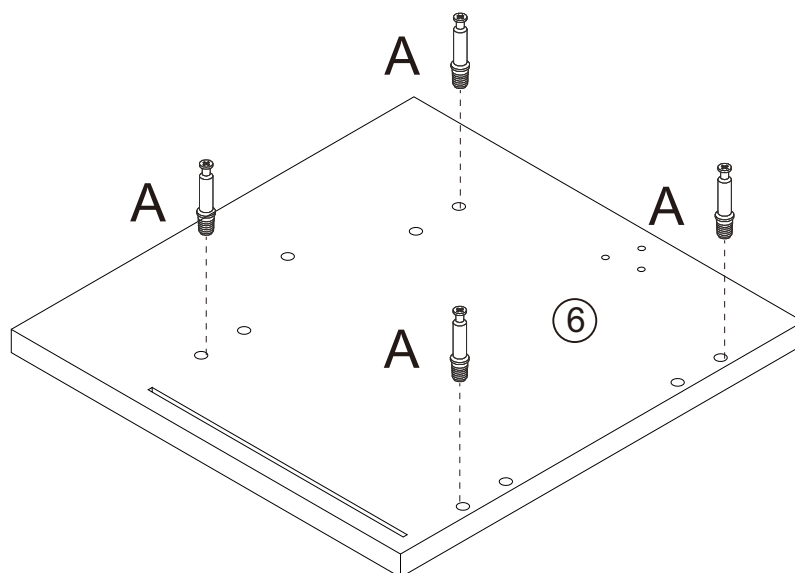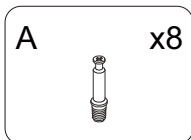

9

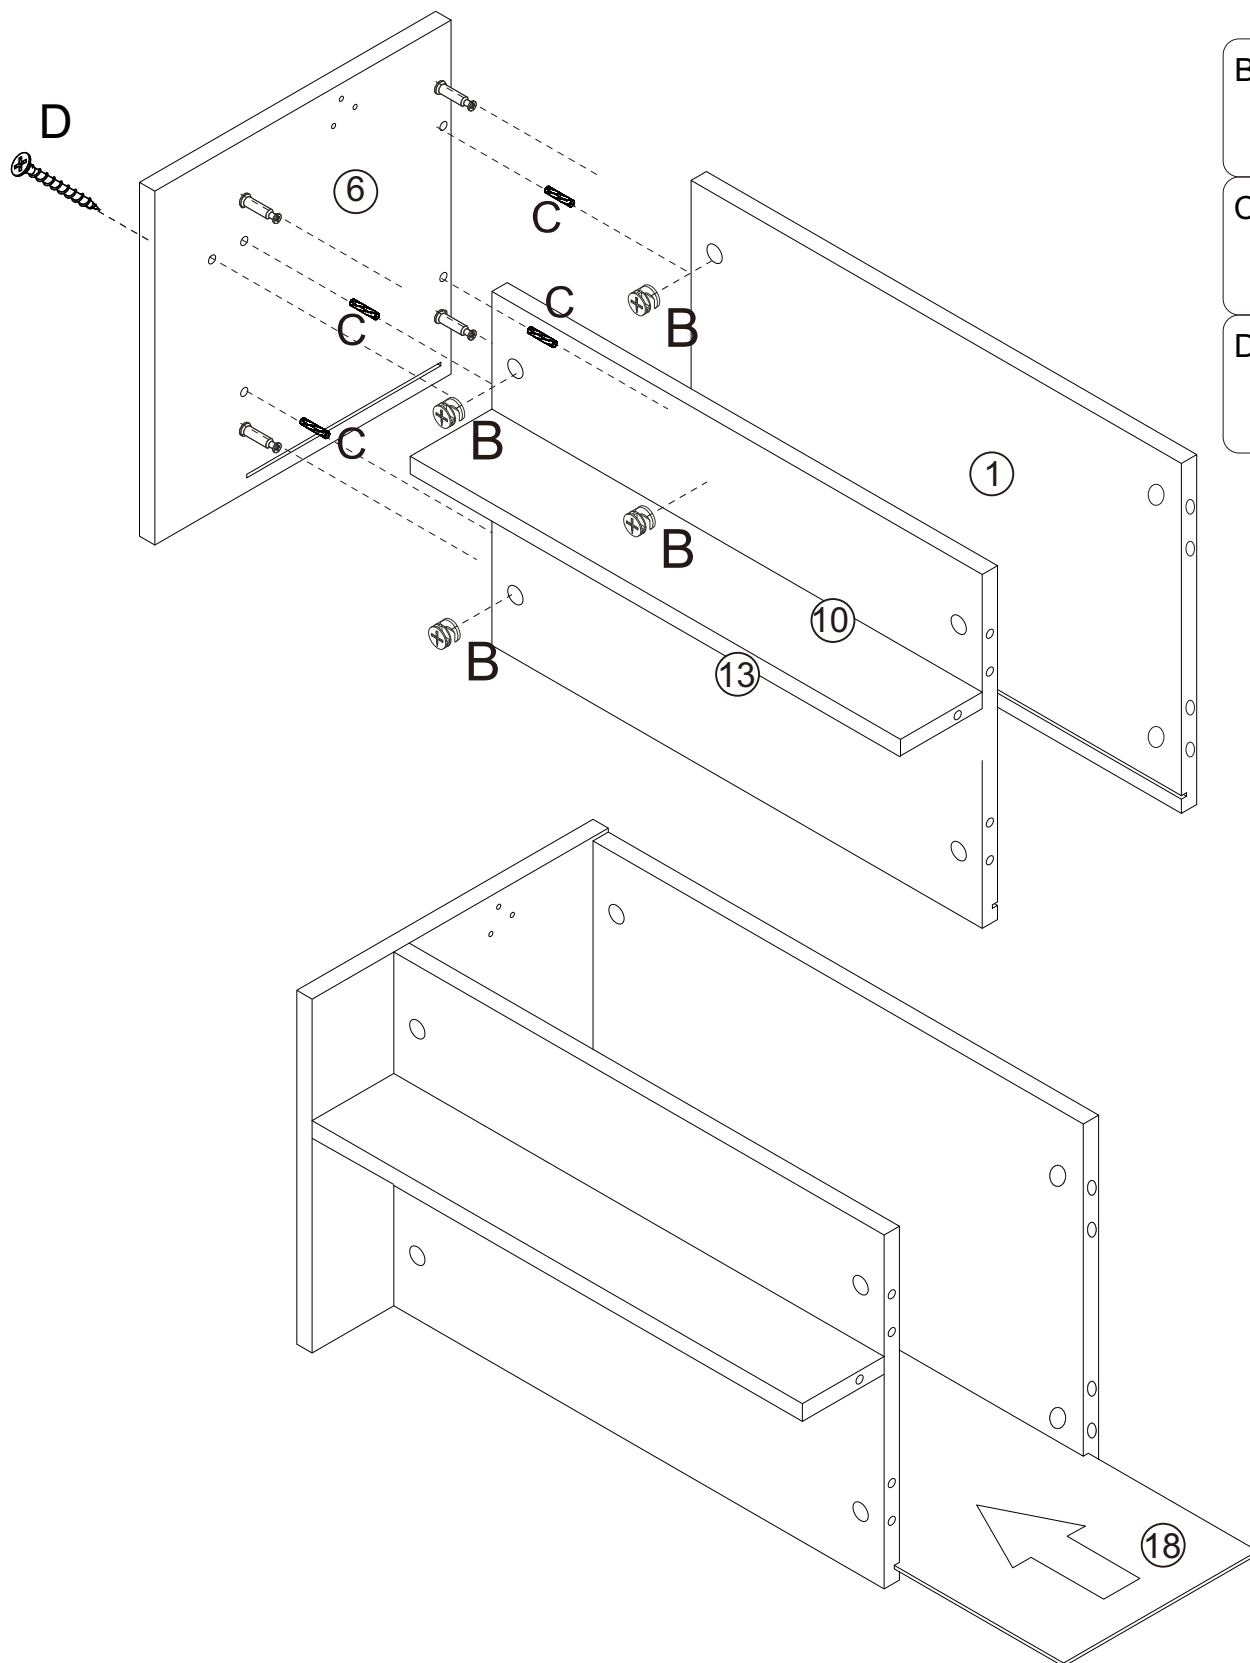

B	x4
C	x4
D	x1

10


B x4



C x4





D x1



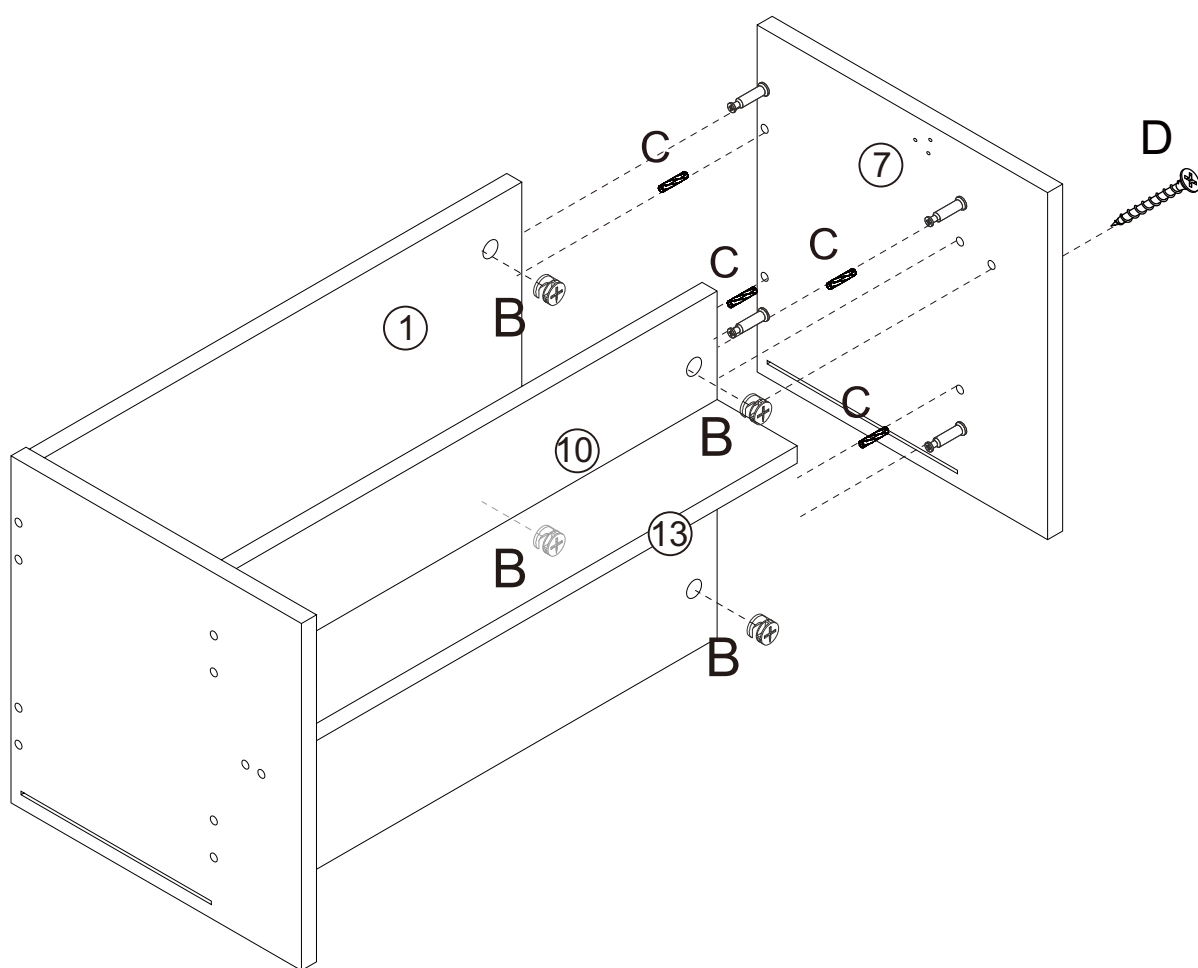



11

A x10

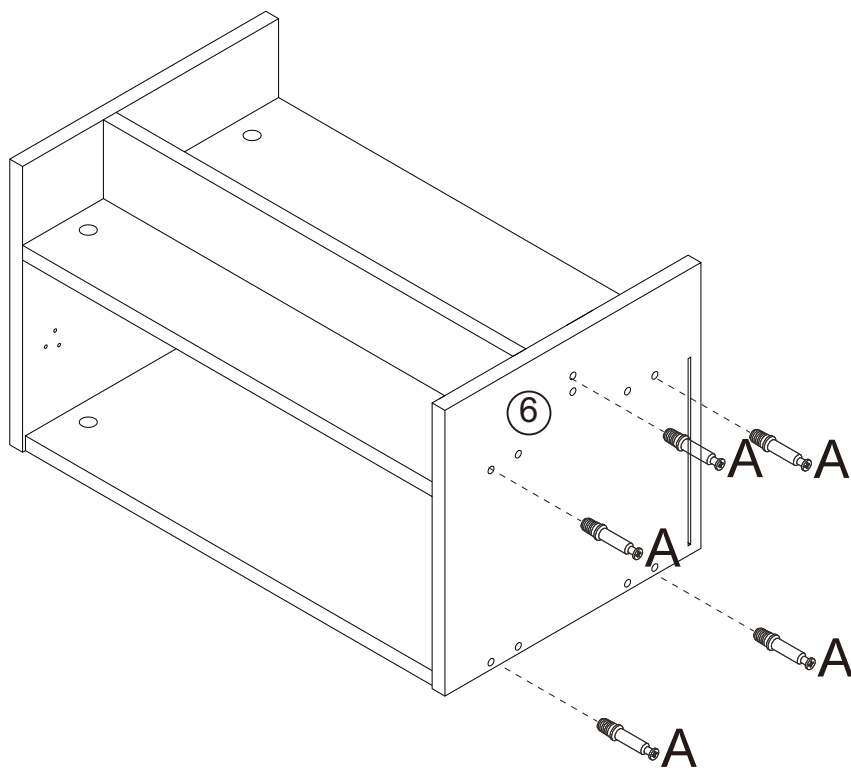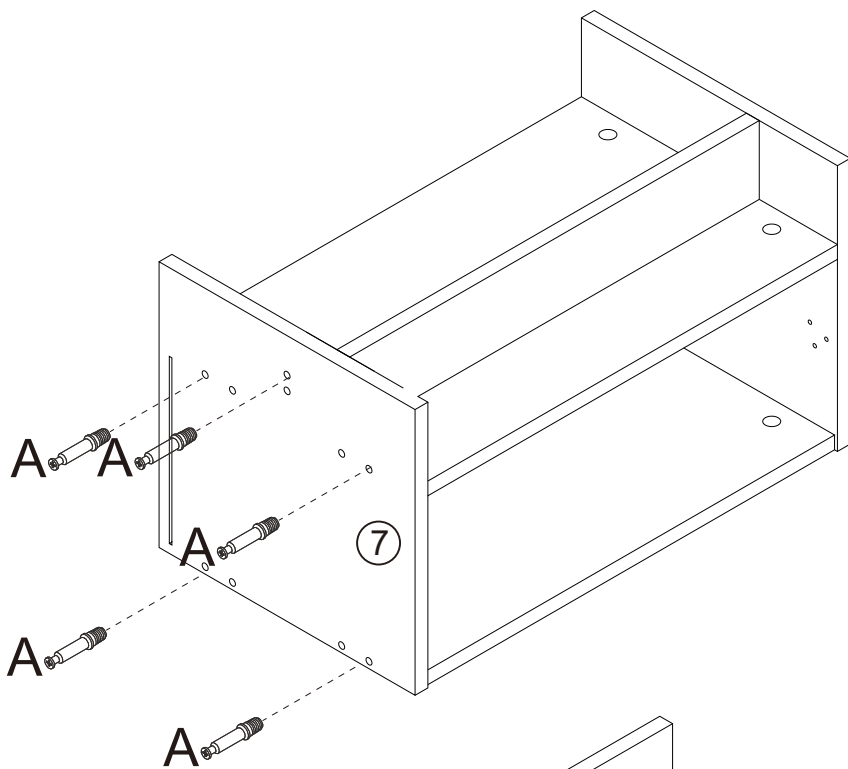


12

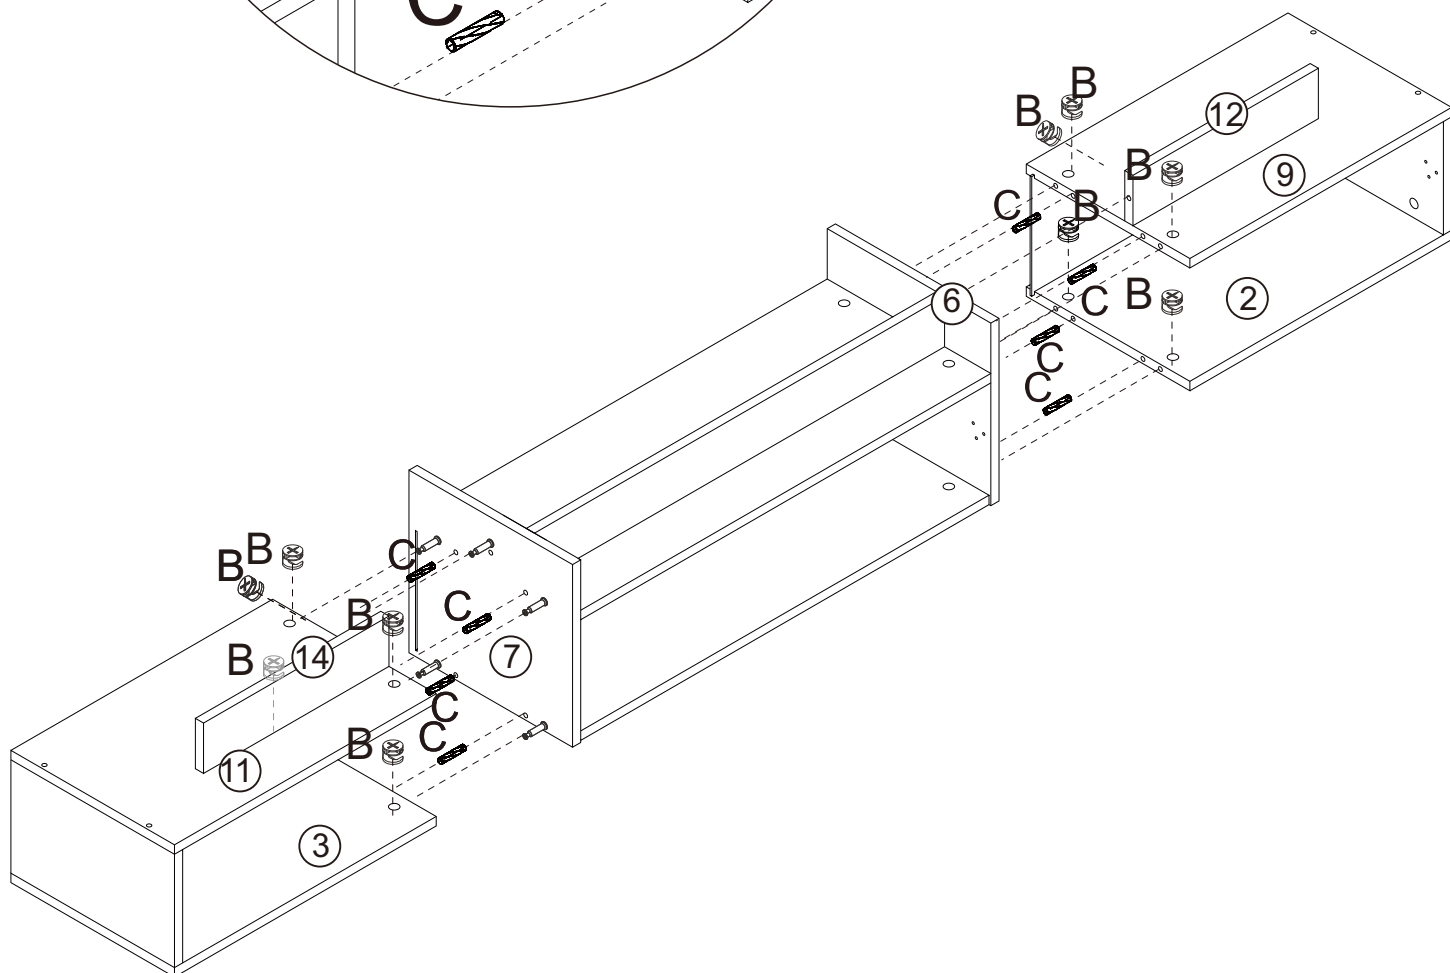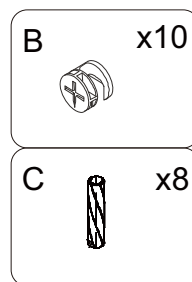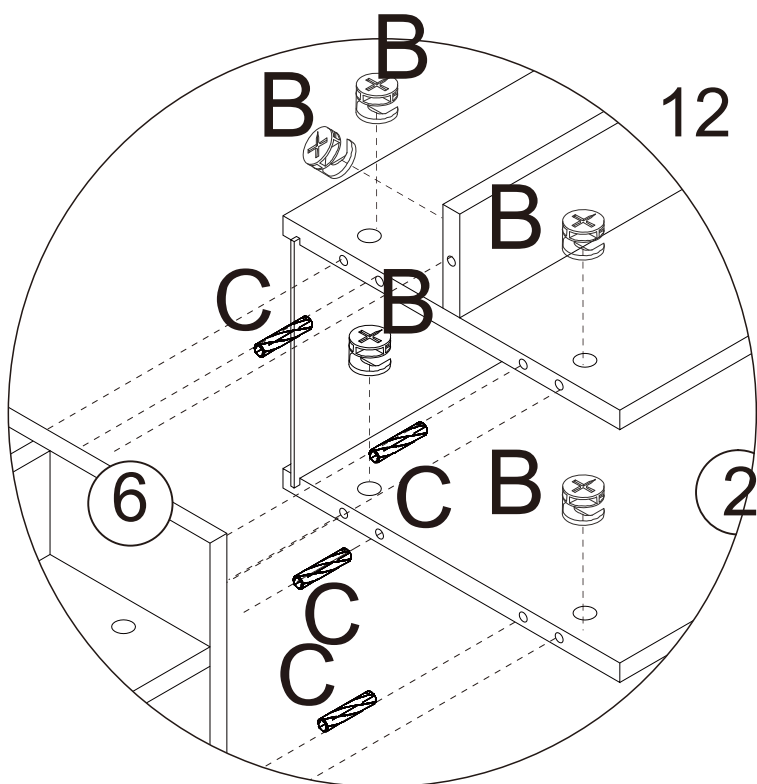

13

G x6

H x36

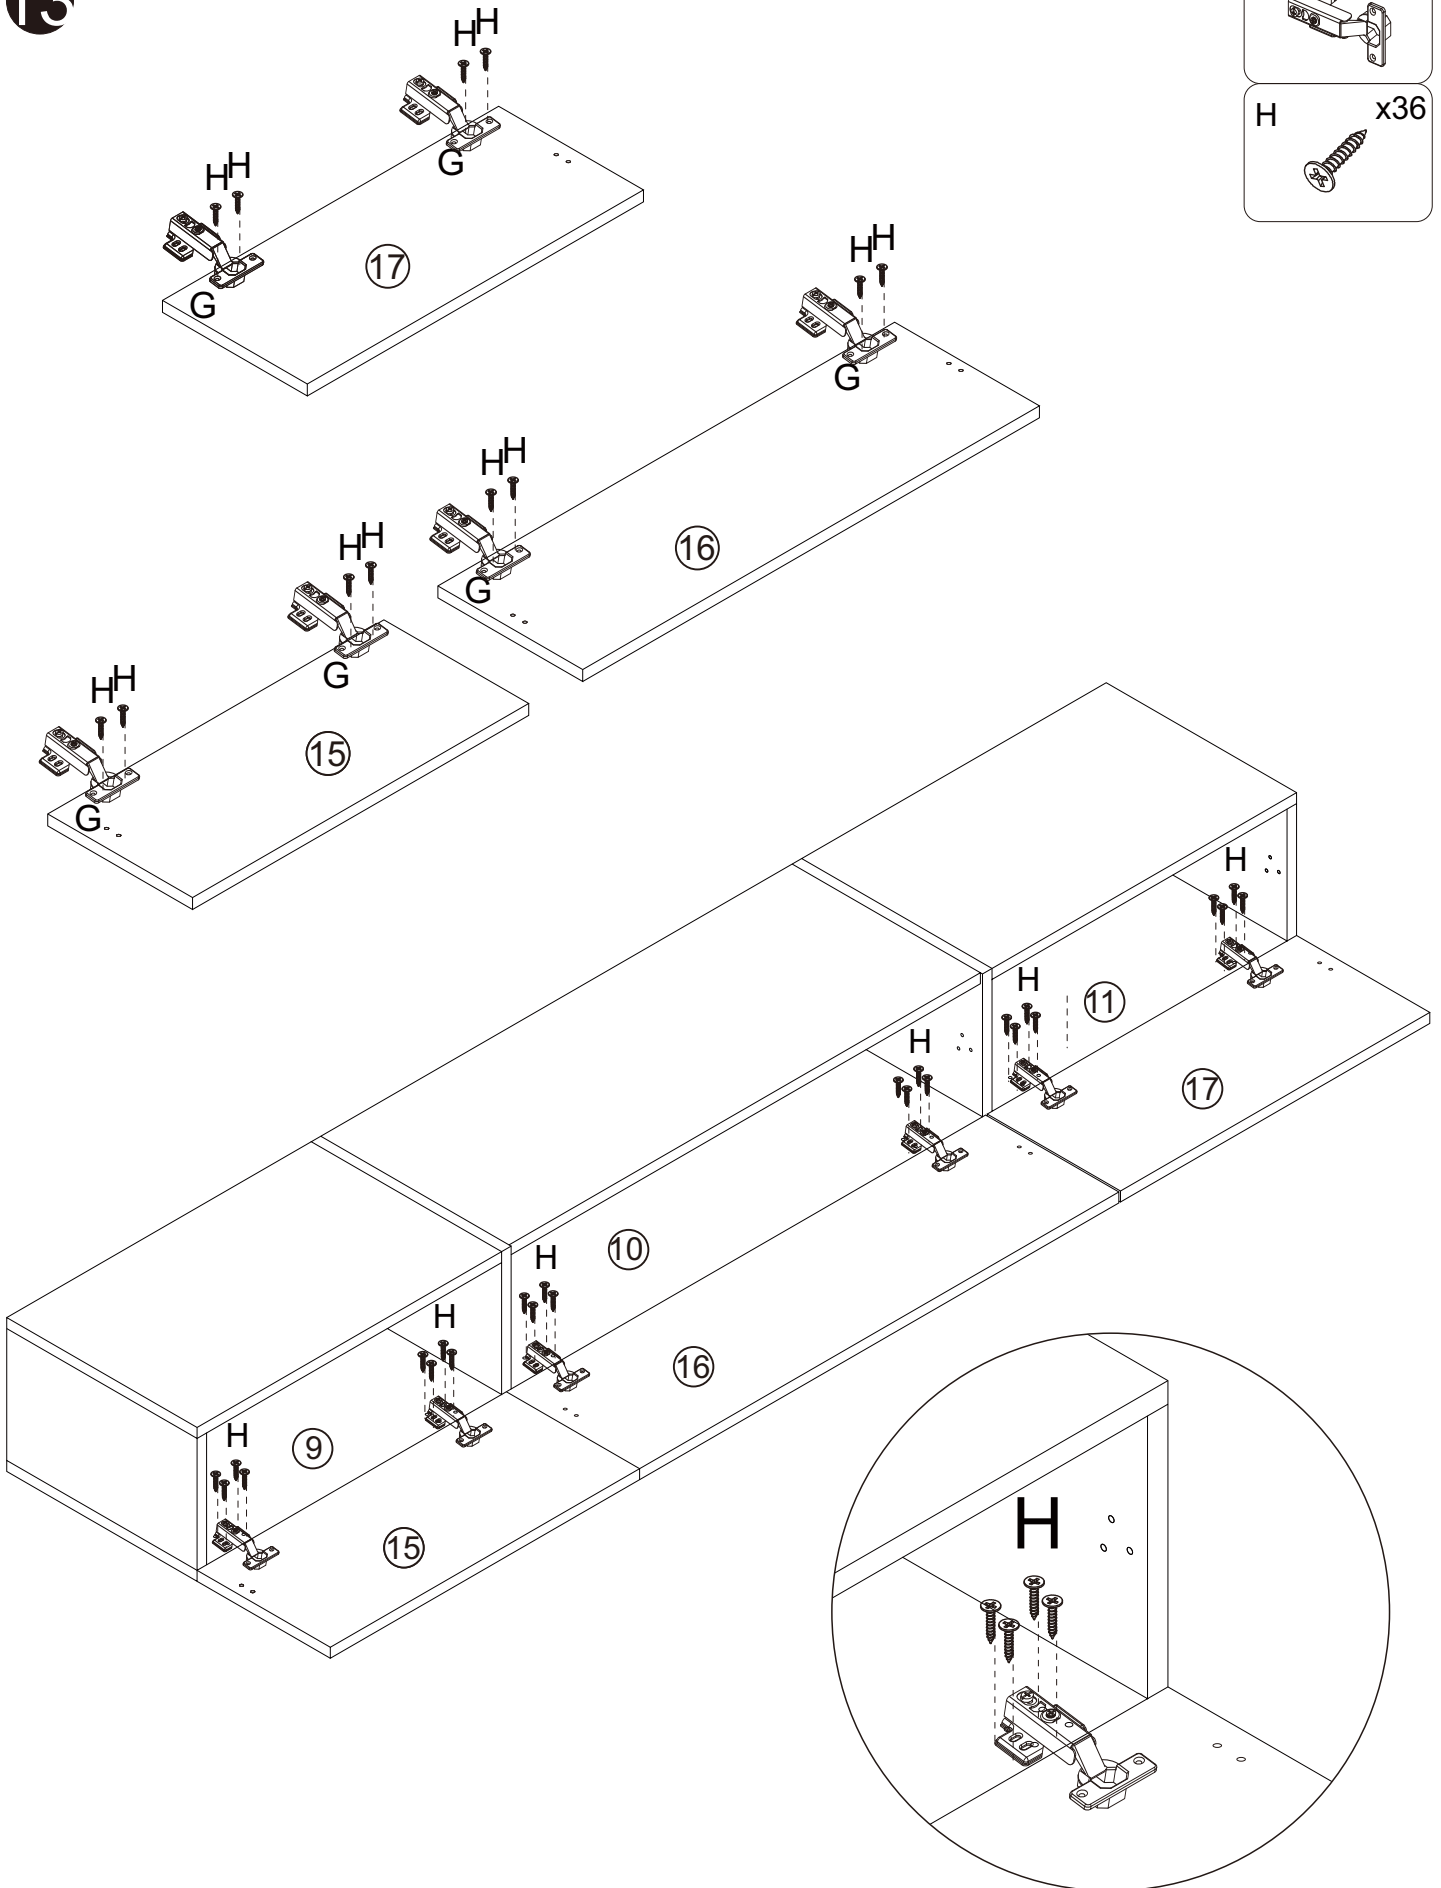

14

E x4



F x20