

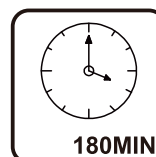
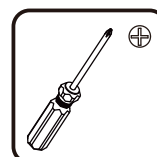
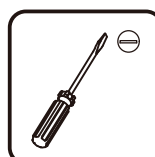


# HLG160


Version:1.0

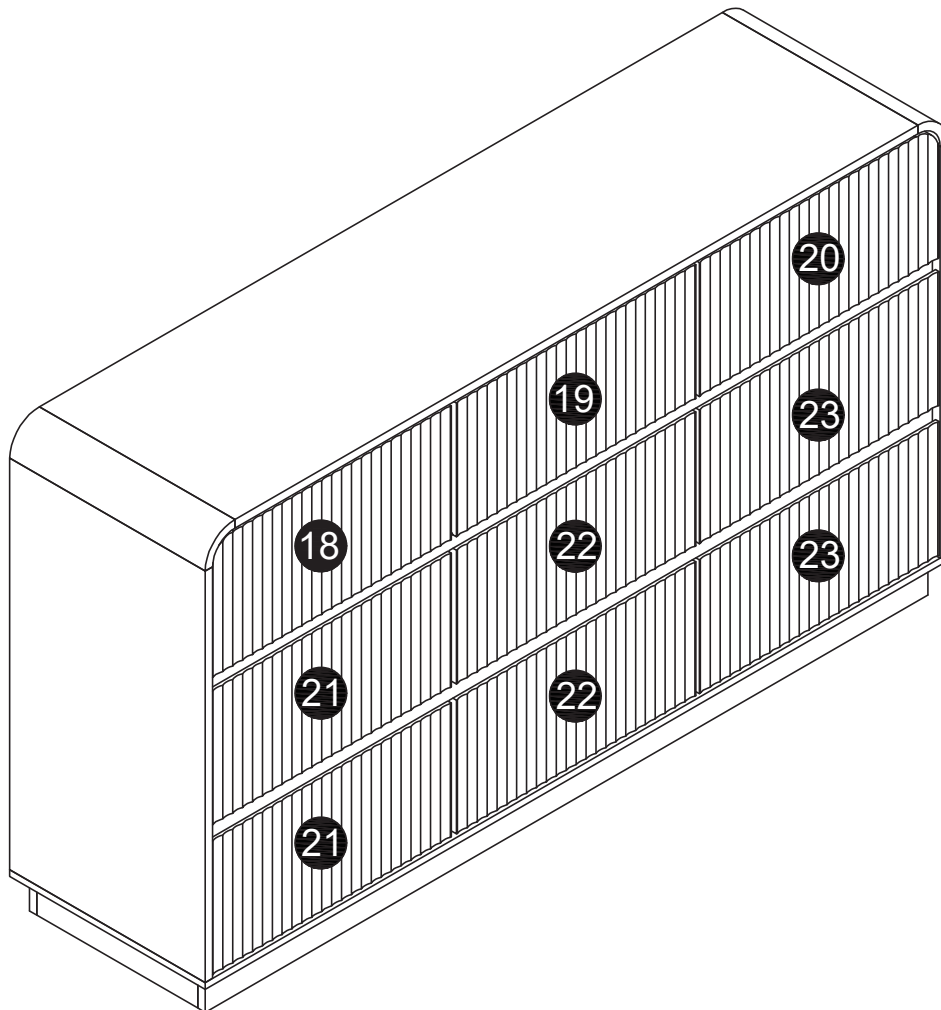


**EN\_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.**

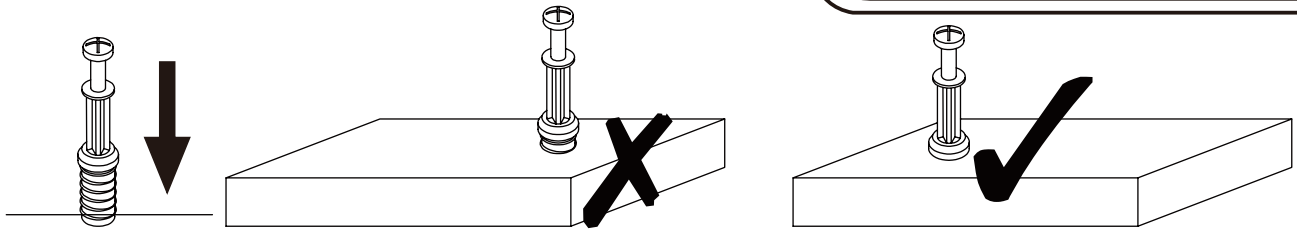


**EN\_QUICKFIT:** Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

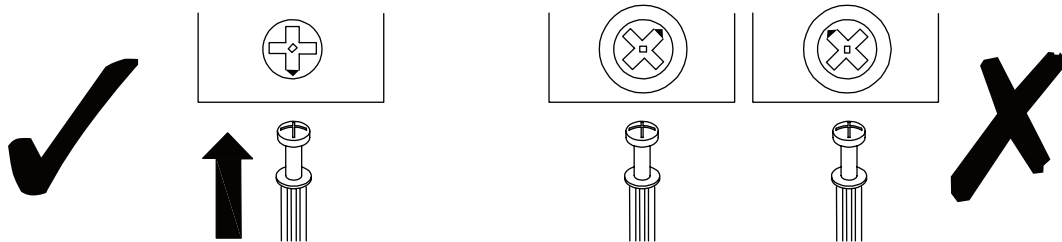

**EN\_CAM LOCK:** When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







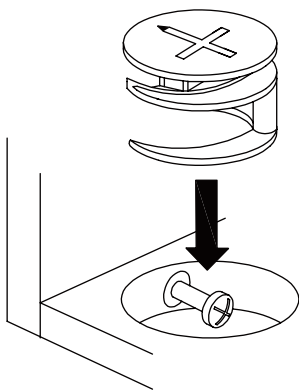


**EN\_Quickfit** head should be in the centre of the cam lock when the two panels are joined.  
Cam lock should be inserted before quickfit.









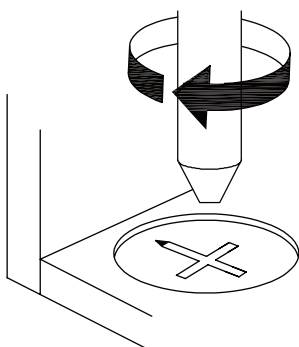


**EN\_Turn** cam lock clockwise to tighten.






## Carton A




| NO. | PARTS                                                                                               | QTY | SPARE |
|-----|-----------------------------------------------------------------------------------------------------|-----|-------|
| ②   |                    | x2  |       |
| ①⑥  |                    | x9  |       |
| ①⑧  |                    | x1  |       |
| ①⑨  |                   | x1  |       |
| ②①  |                  | x1  |       |
| ②②  |                  | x2  |       |
| ②③  |                  | x2  |       |
| ②④  |                  | x2  |       |
|     | <br>Hardware Kit |     |       |





## Carton B
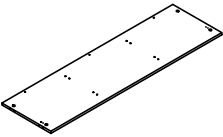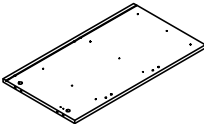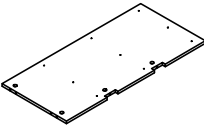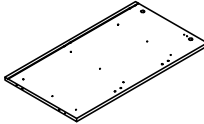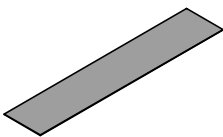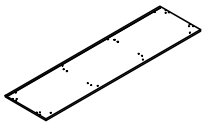
| NO. | PARTS                                                                               | QTY | SPARE |
|-----|-------------------------------------------------------------------------------------|-----|-------|
| ①   |    | x1  |       |
| ③   |    | x1  |       |
| ④   |    | x2  |       |
| ⑤   |   | x1  |       |
| ⑥   |  | x2  |       |
| ⑦   |  | x1  |       |
| ⑧   |  | x2  |       |
| ⑨   |  | x1  |       |
| ⑩   |  | x1  |       |
| ⑪   |  | x2  |       |

## Carton B


| NO. | PARTS                                                                                | QTY | SPARE |
|-----|--------------------------------------------------------------------------------------|-----|-------|
| ⑫   |    | x2  |       |
| ⑬   |    | x9  |       |
| ⑭   |    | x9  |       |
| ⑮   |   | x9  |       |
| ⑰   |  | x9  |       |

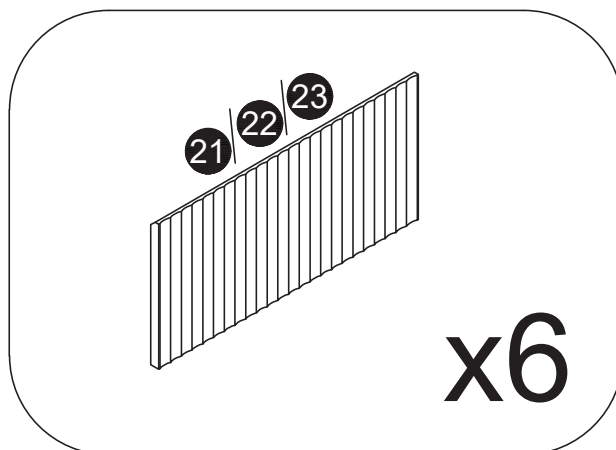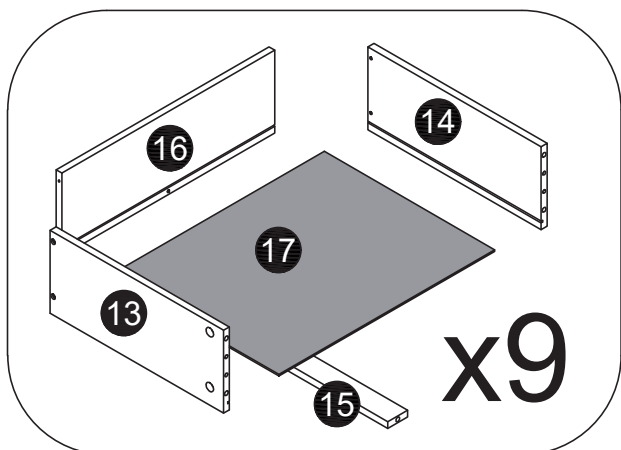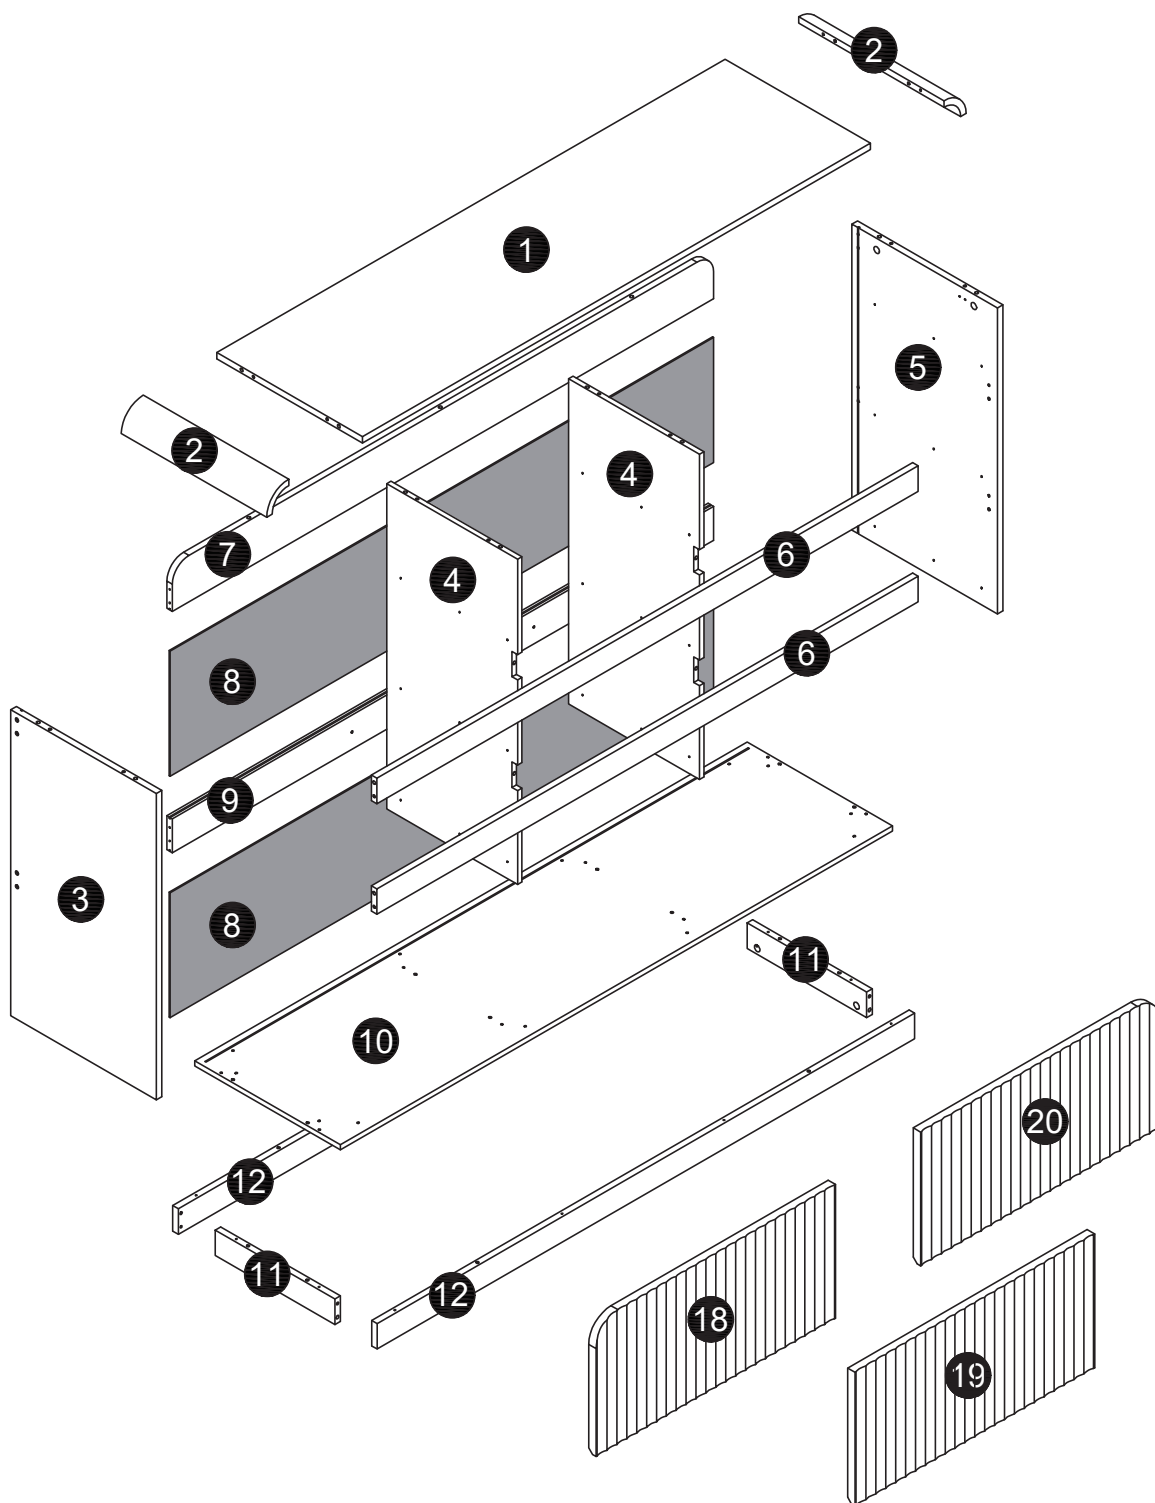

|                                                                                                                        |                                                                                                                         |                                                                                                                        |                                                                                                                        |                                                                                                                             |                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|  <b>A</b> x64<br>Ø6x35mm<br>+3(spare) |  <b>B</b> x72<br>Ø15x10mm<br>+3(spare) |  <b>C</b> x72<br>Ø6x30mm<br>+5(spare) |  <b>D</b> x47<br>Ø4x35mm<br>+4(spare) |  <b>E</b> x108<br>Ø3.5x12mm<br>+5(spare) |  <b>F</b> x8<br>Ø6x40mm |
|  <b>G</b> x18<br>Ø5x40mm<br>+1(spare) |  <b>H</b> x8<br>Ø15mm<br>+2(spare)     |  <b>I</b> x12<br>Ø4x30mm              |  <b>J</b> x2                          |  <b>K</b> x8<br>Ø4x14mm                  |  <b>L</b> x2<br>Ø6x30mm |
|  <b>M-1</b>                           |  <b>M-2</b>                            |  <b>N-1</b>                           |  <b>N-2</b>                           |                                                                                                                             |                                                                                                            |
|  <b>CL</b> x9<br>L350mm               |  <b>CR</b> x9<br>L350mm                |  <b>DL</b> x9<br>L350mm               |  <b>DR</b> x9<br>L350mm               |                                                                                                                             |                                                                                                            |

D x45



01

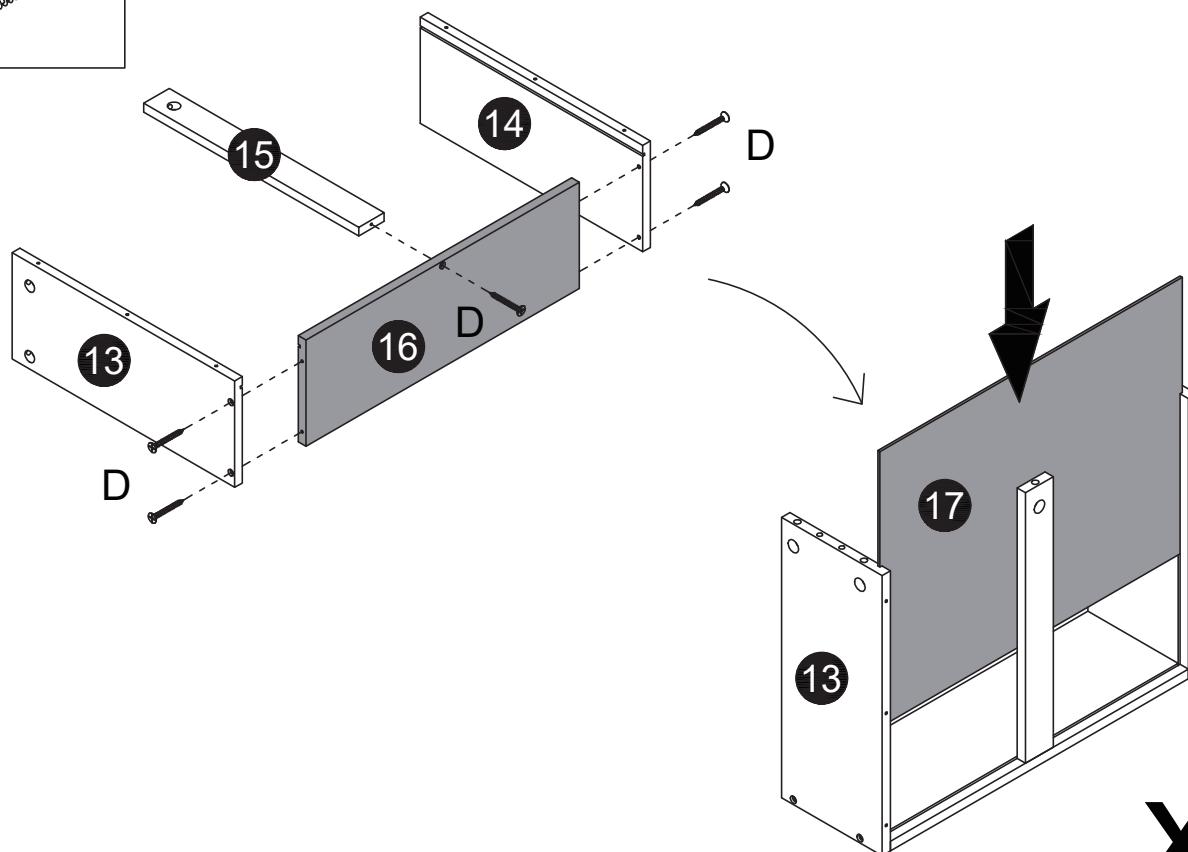



x9

A x45


02

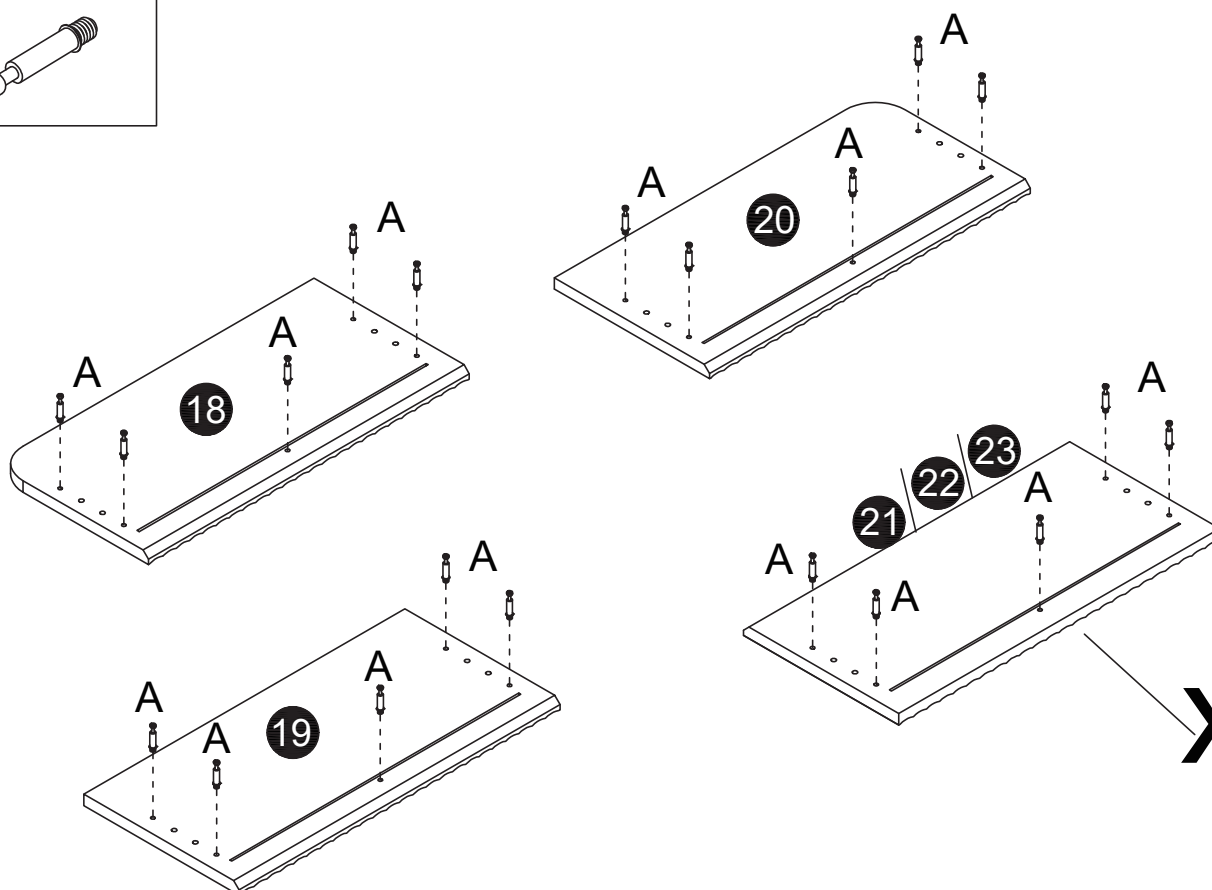

x6

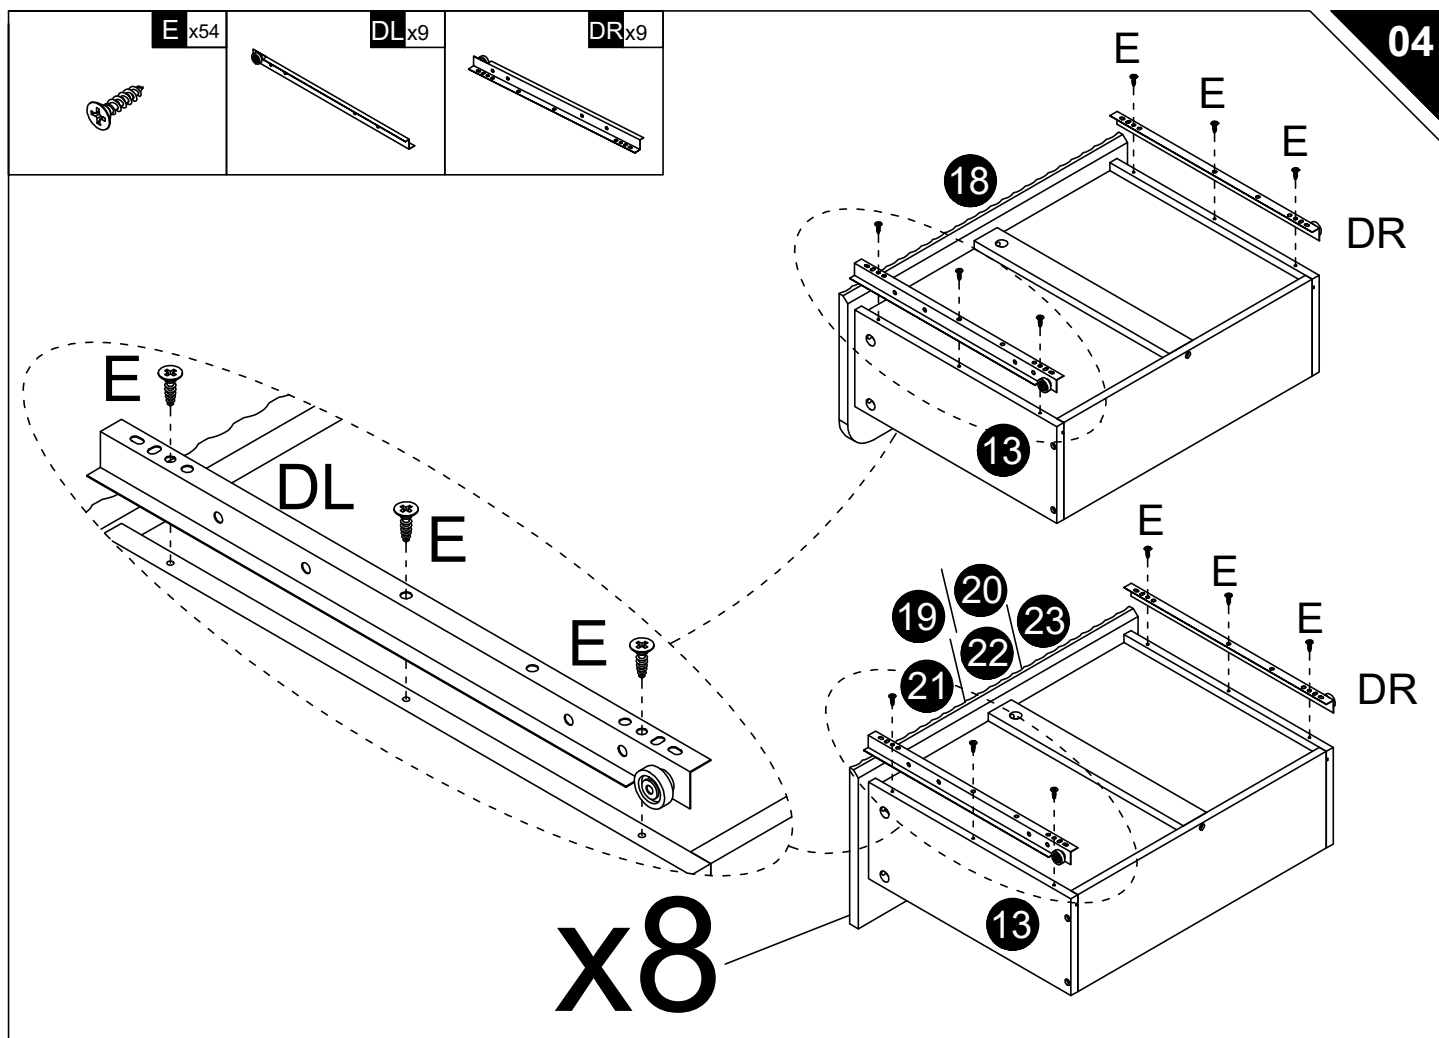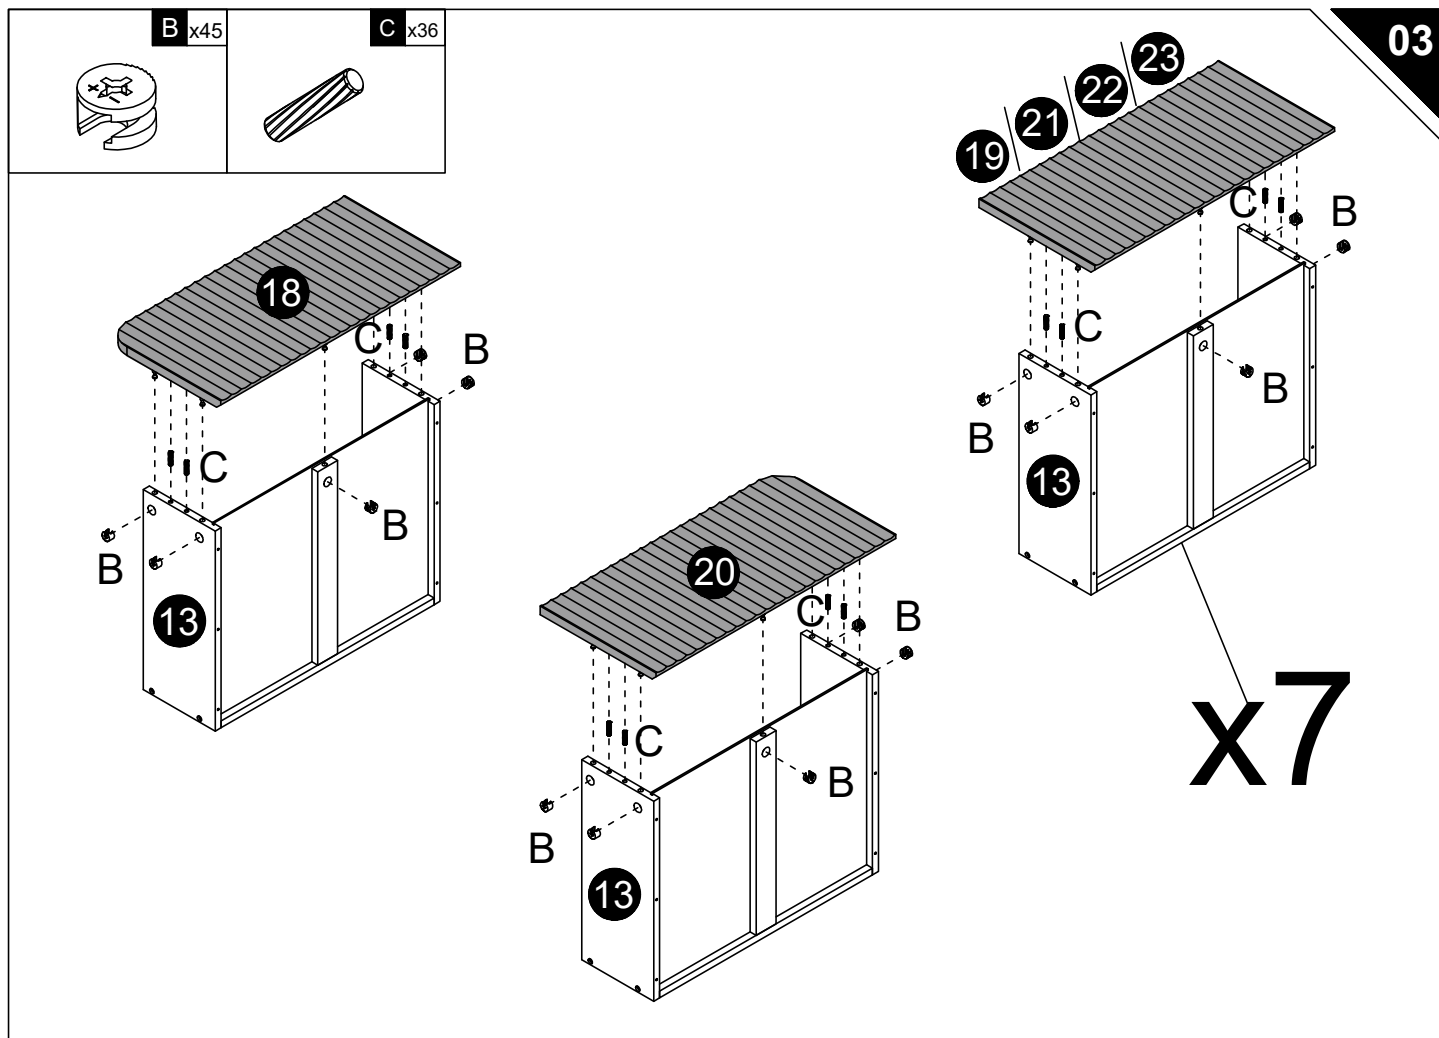

A x4









E x18



CL x3





CR x3

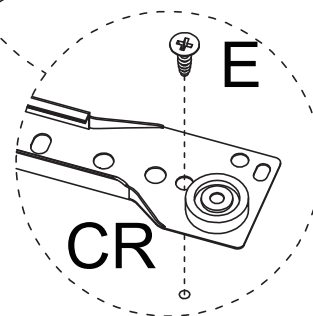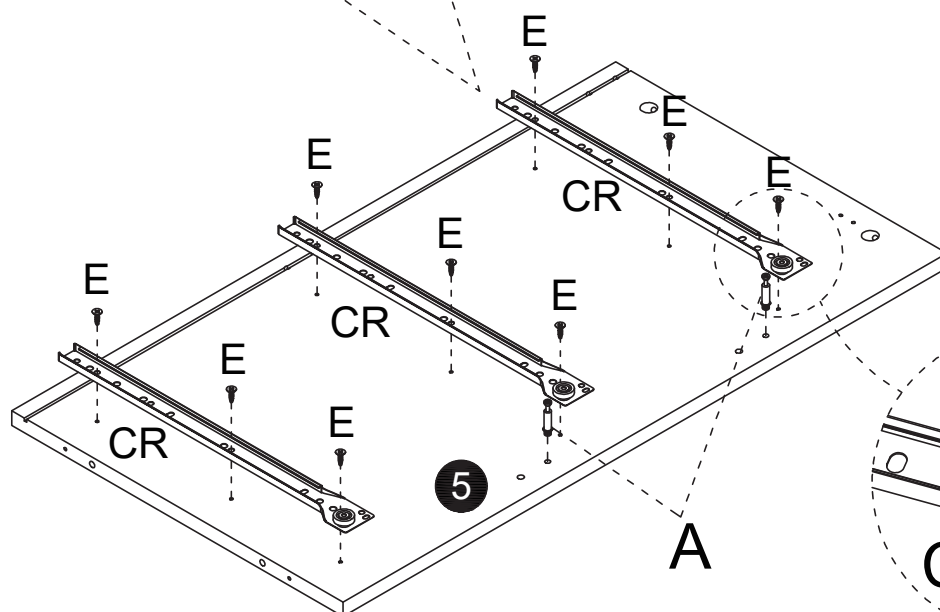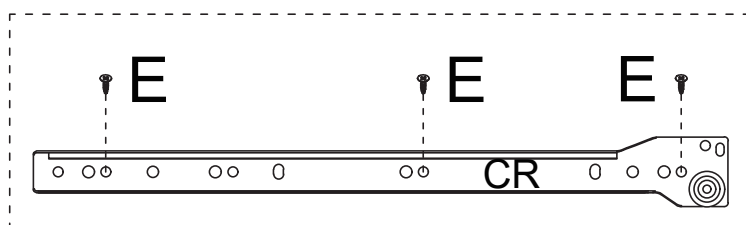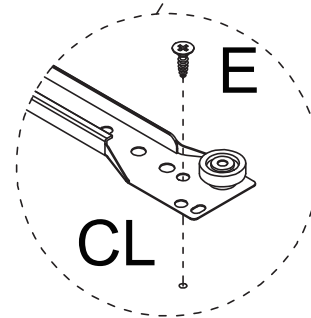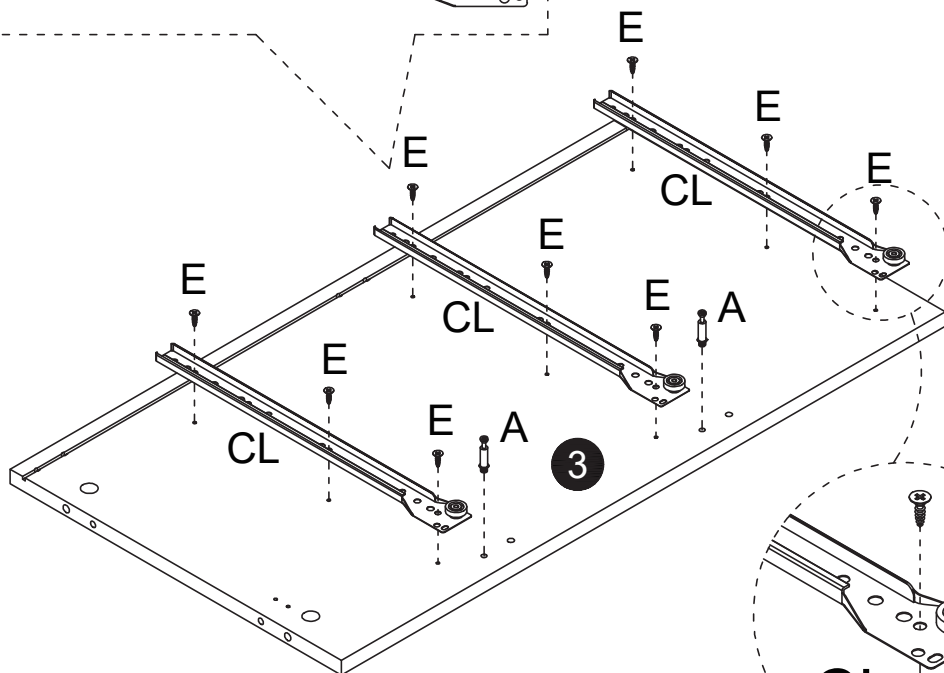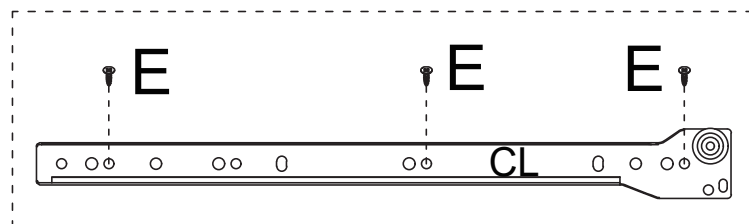



E x36

CL x6




CR x6

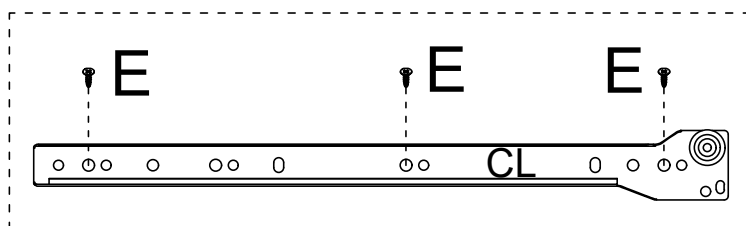

Second hole

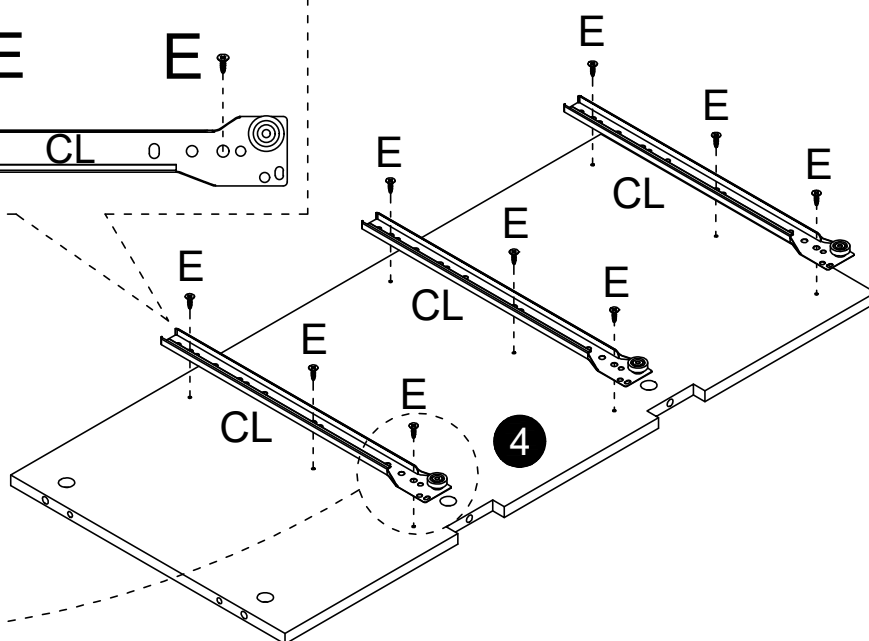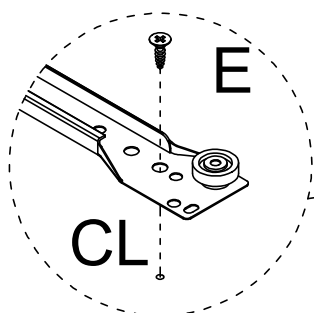


180°

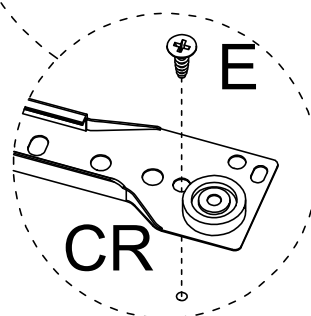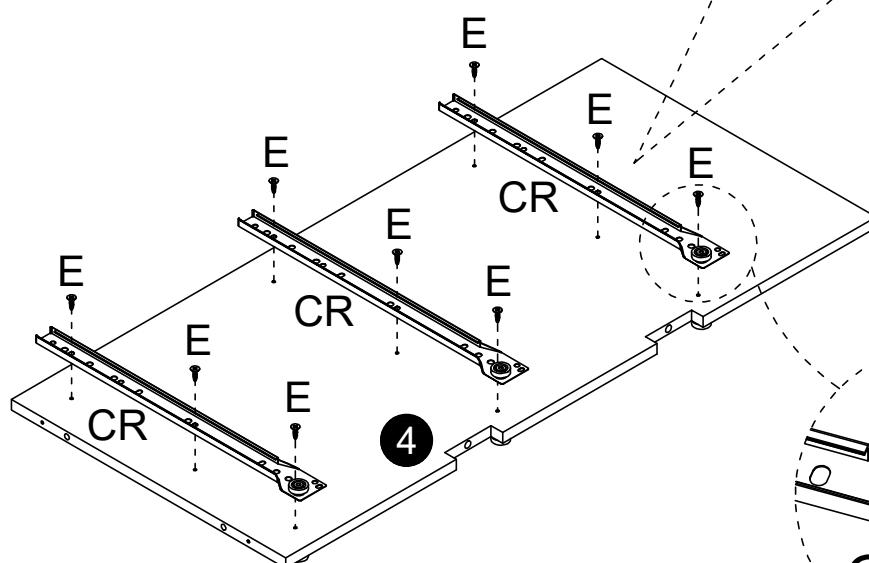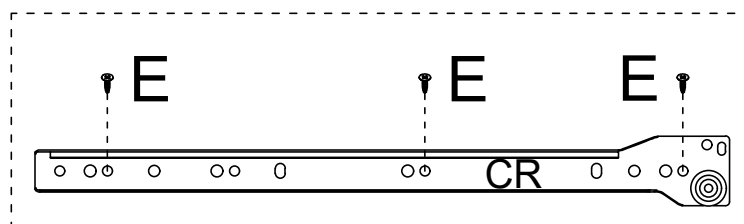


x2

A x4



07

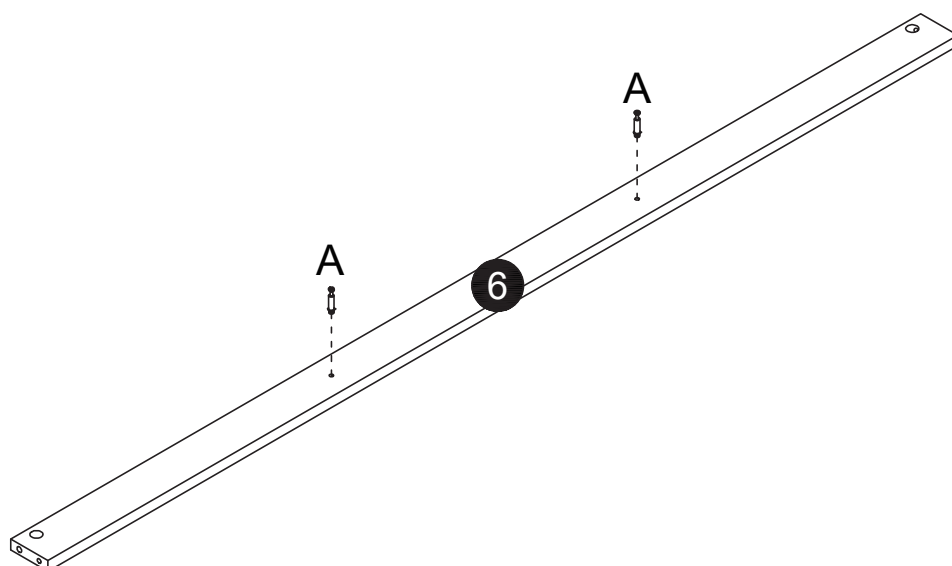


x2

B x4




08

For easier installation, please pad two piece of foam under the product (take it from the packaging box).

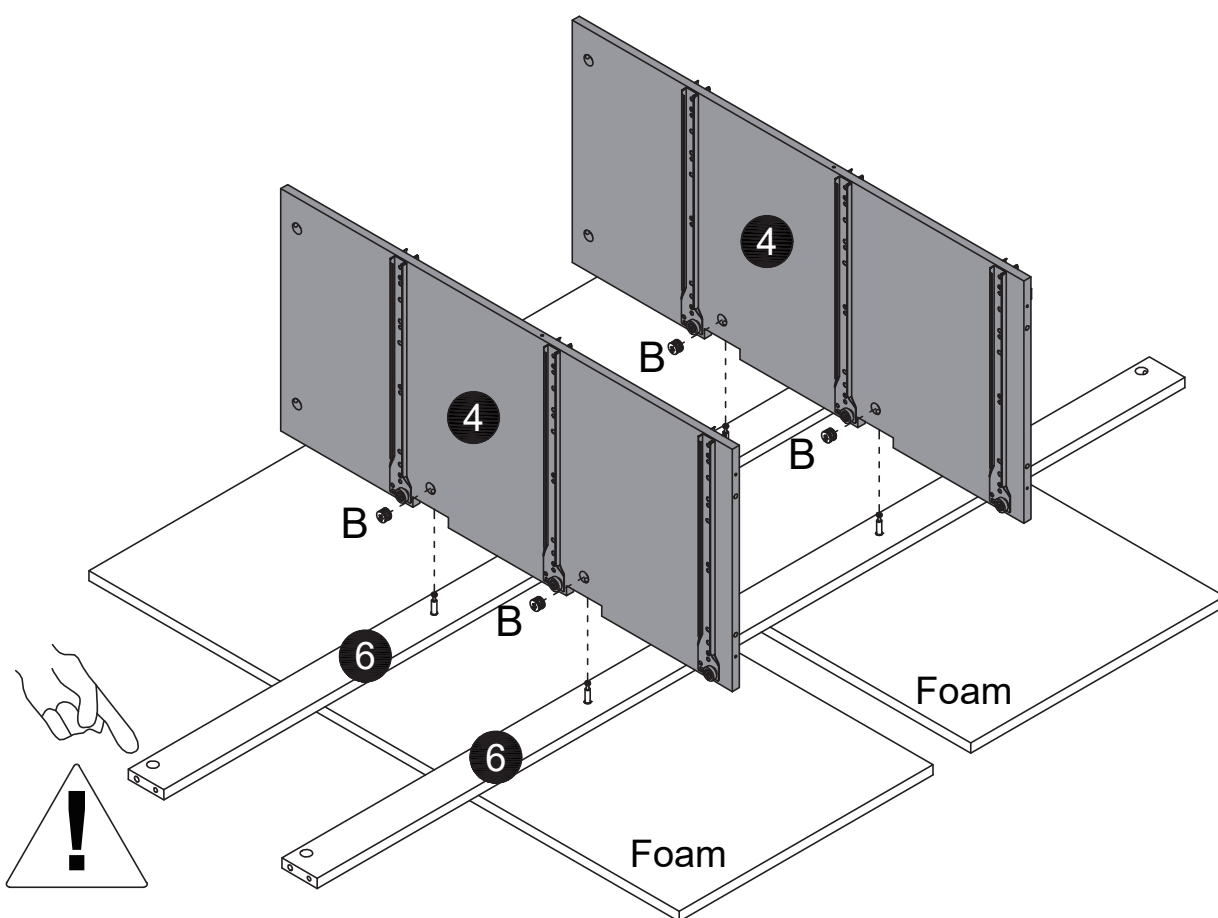

G x2

09

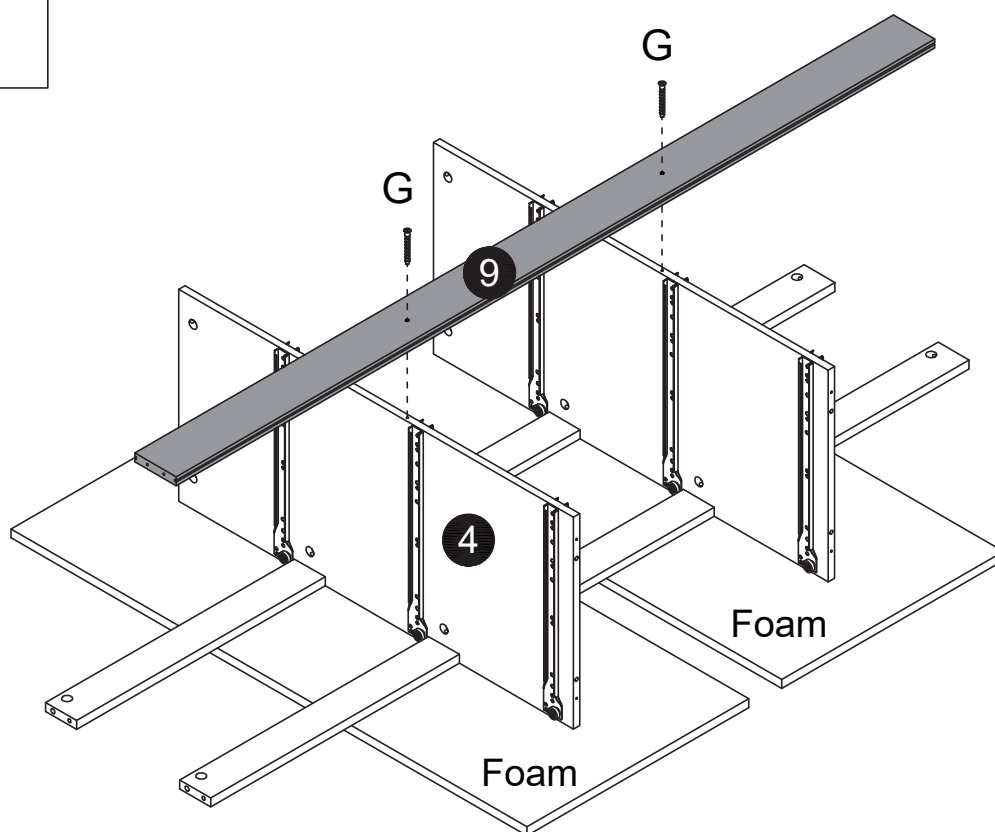




B x2

C x2

G x2


10

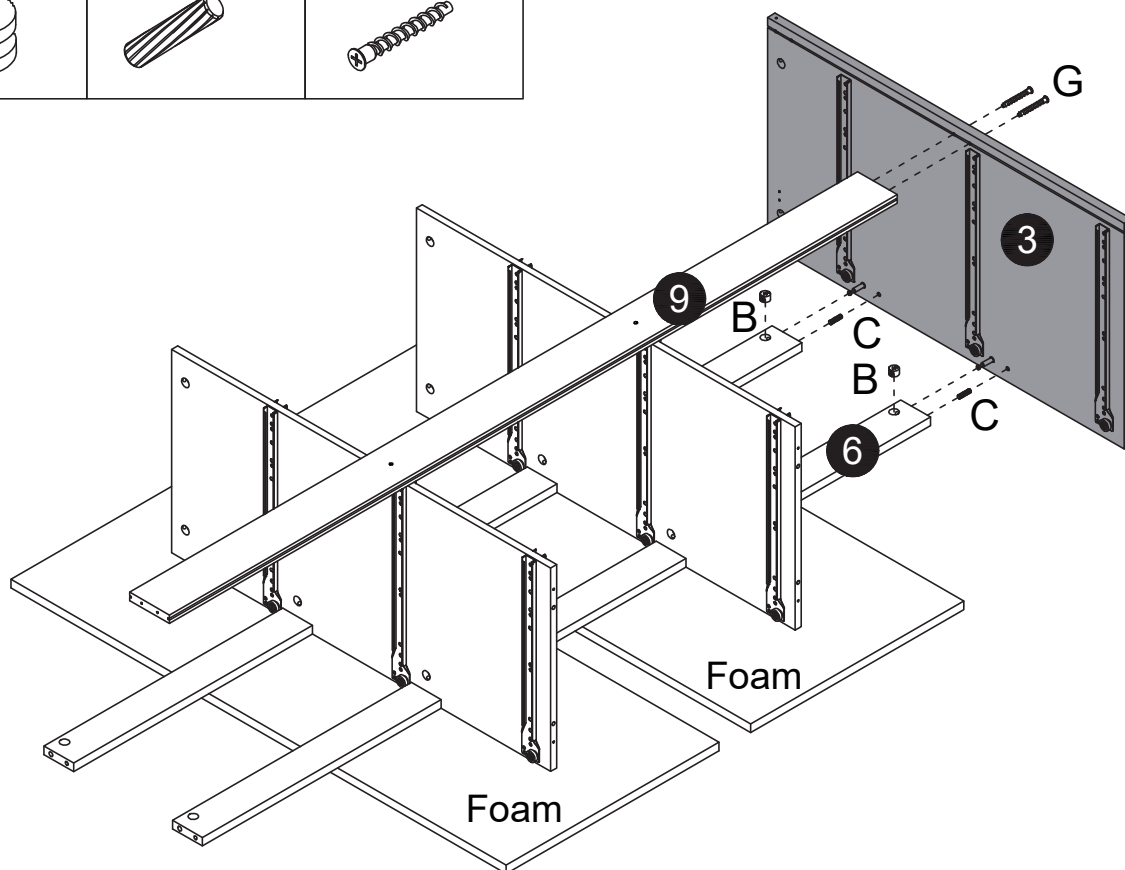

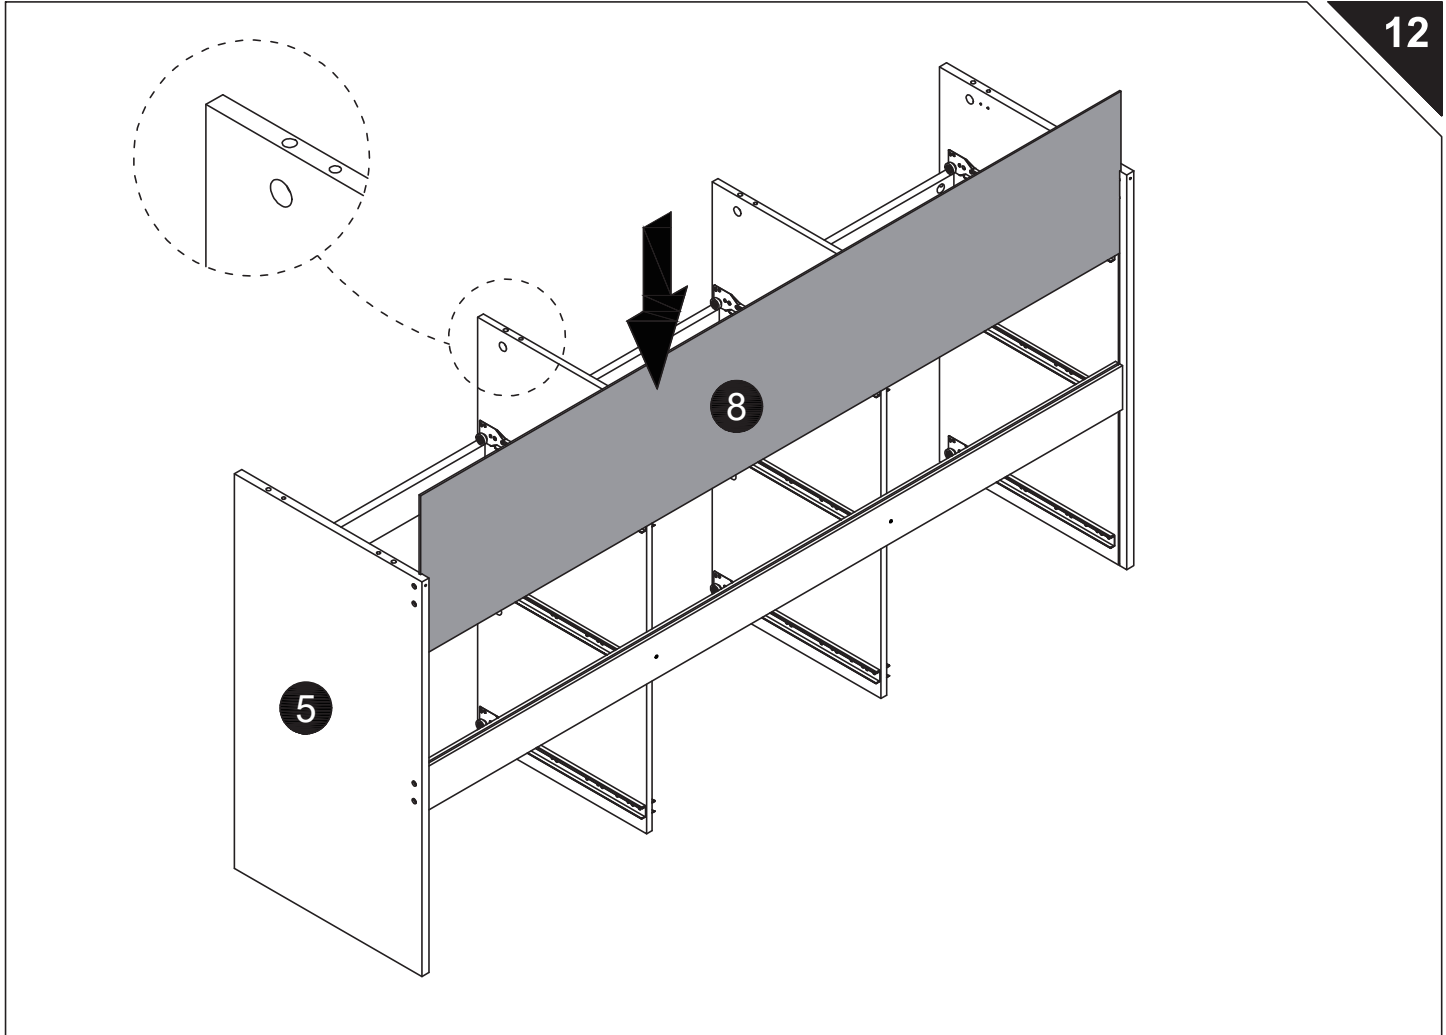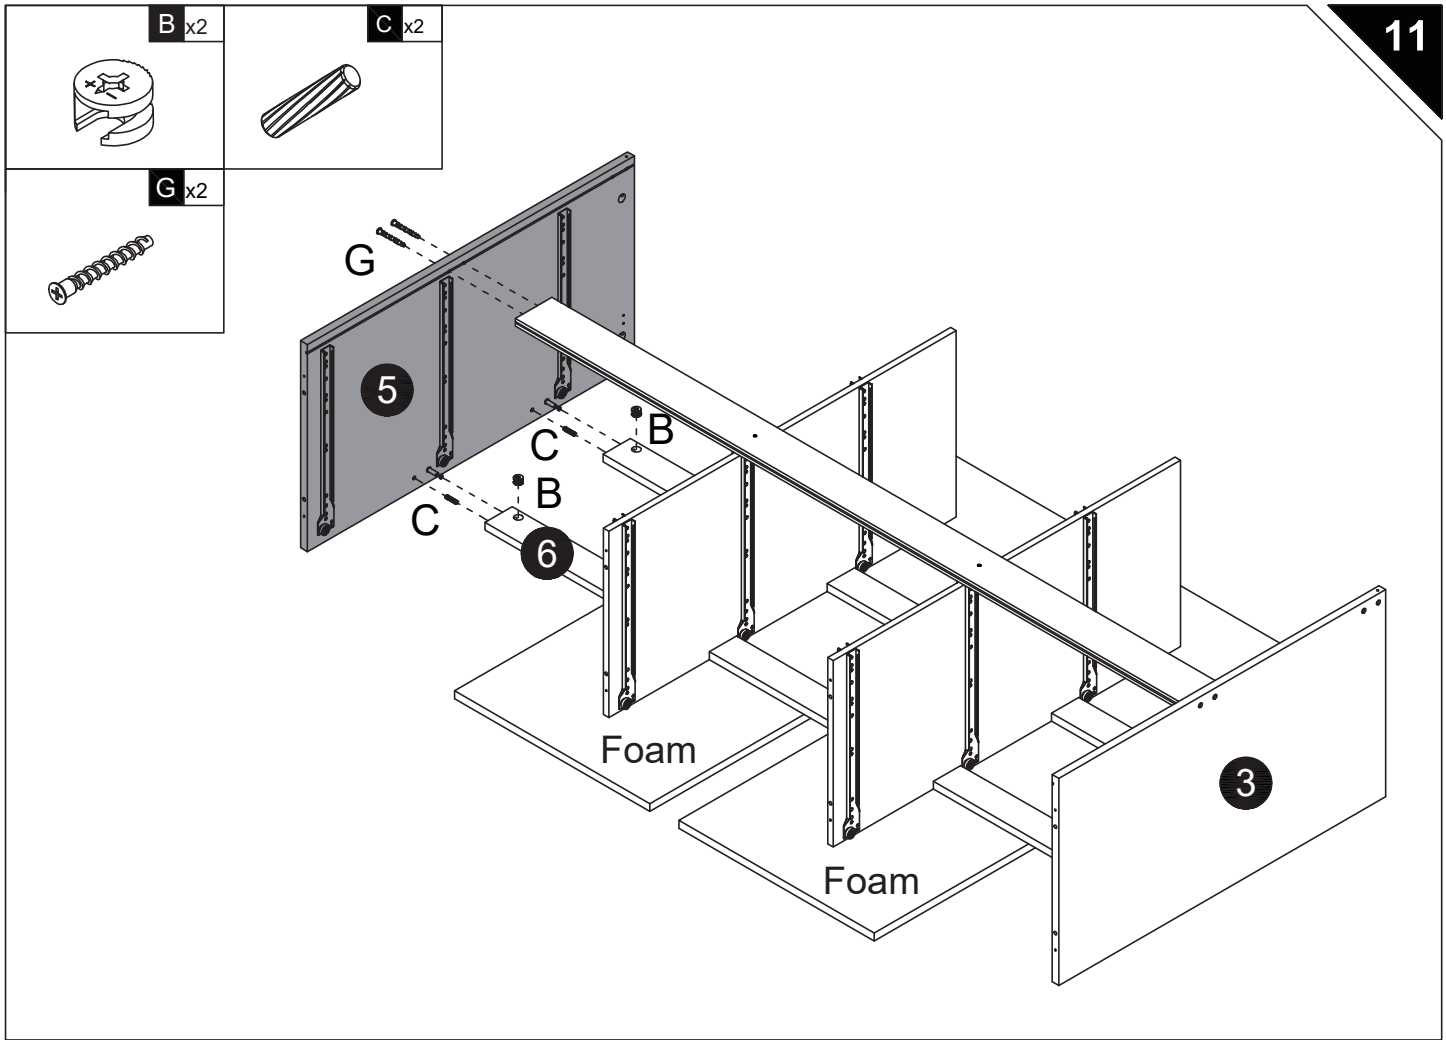



G x4

13

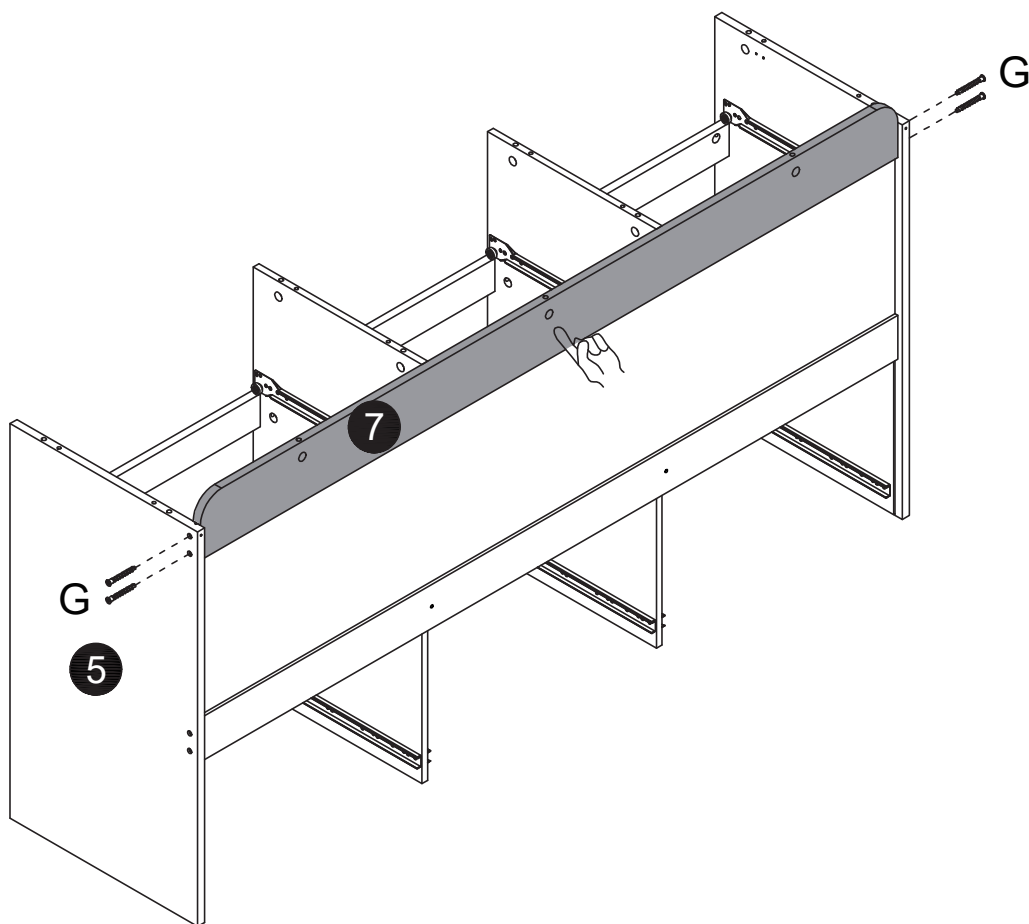


F x8

14

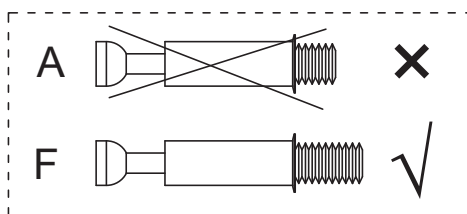

Caution : Need to use the correct part #F instead of part #A.

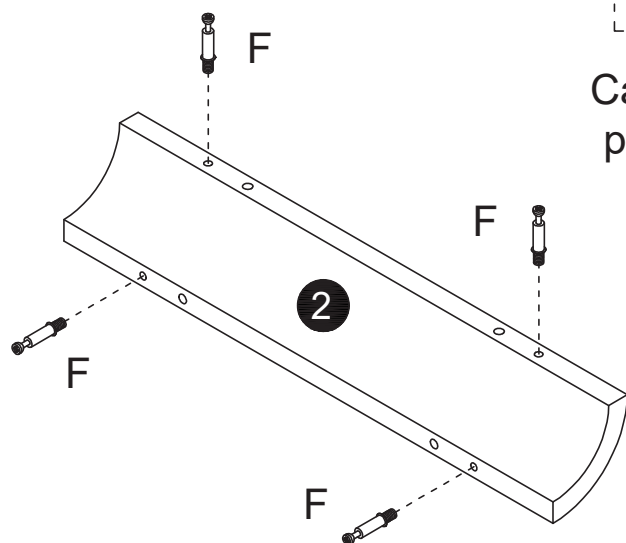

x2


B x4




C x4




15

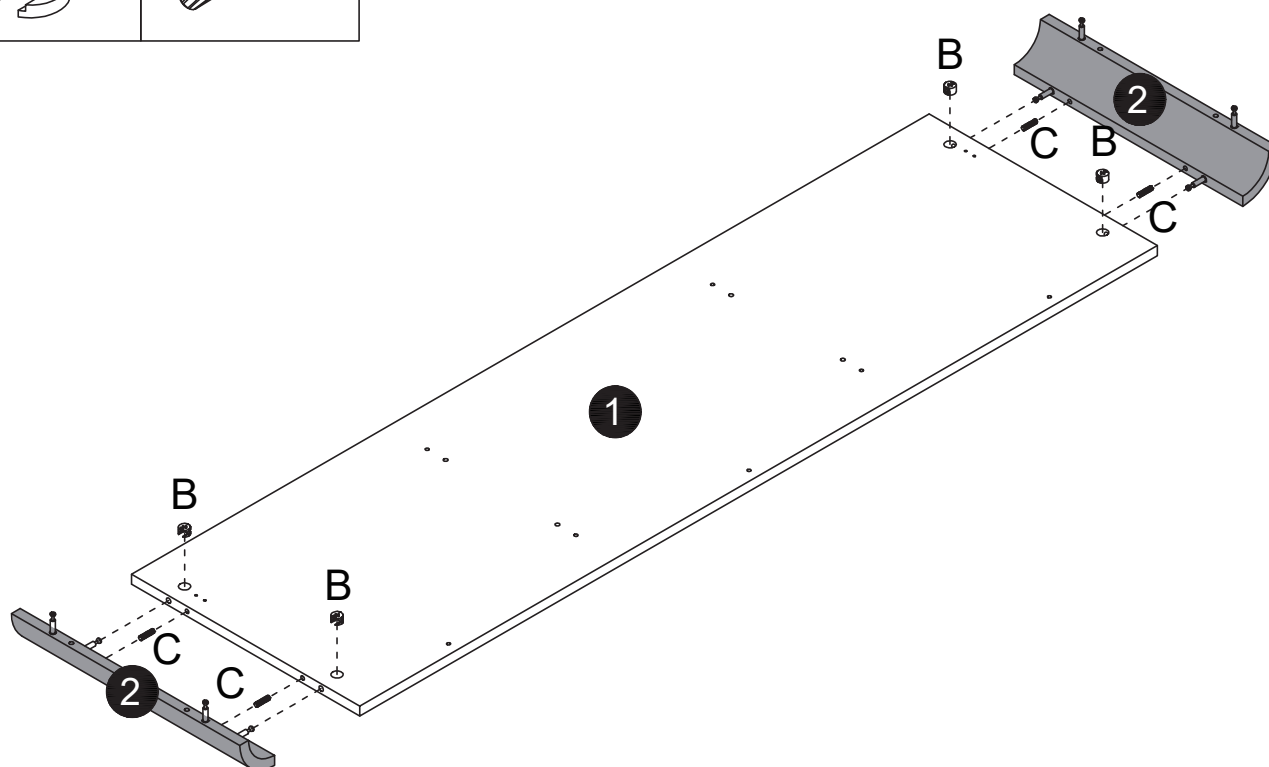

A x7





16


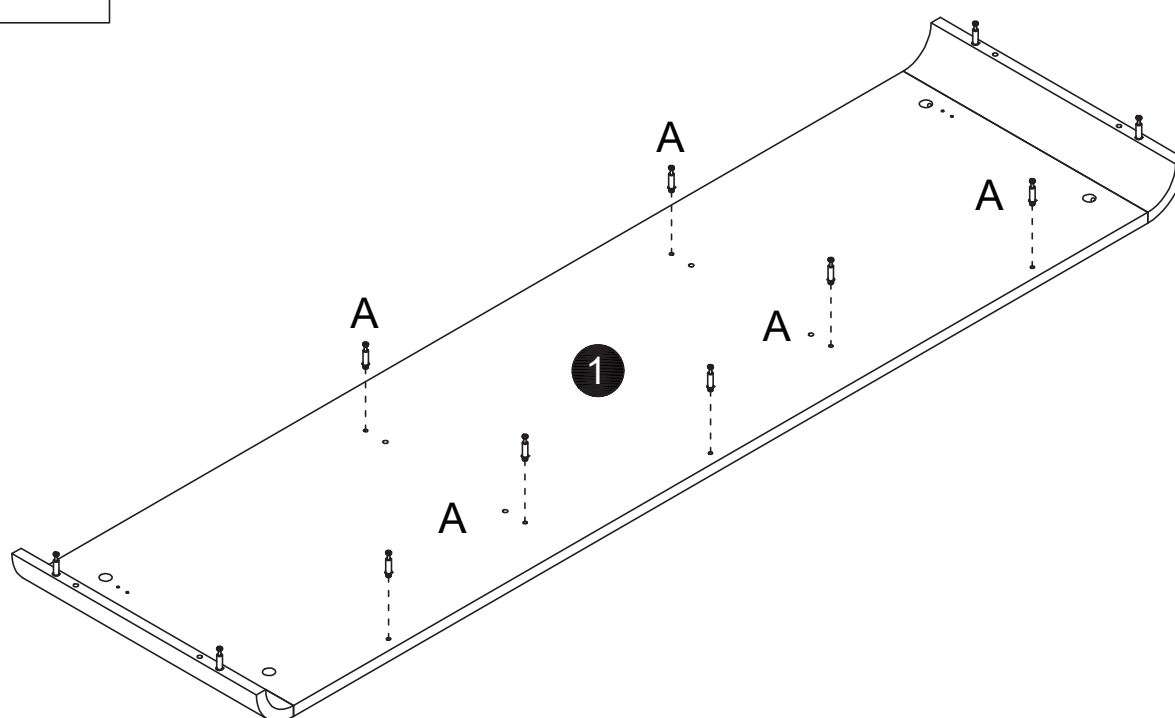


B x11


C x8

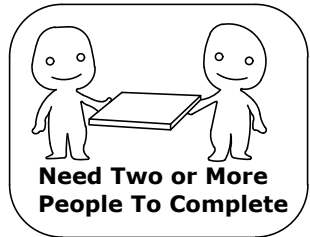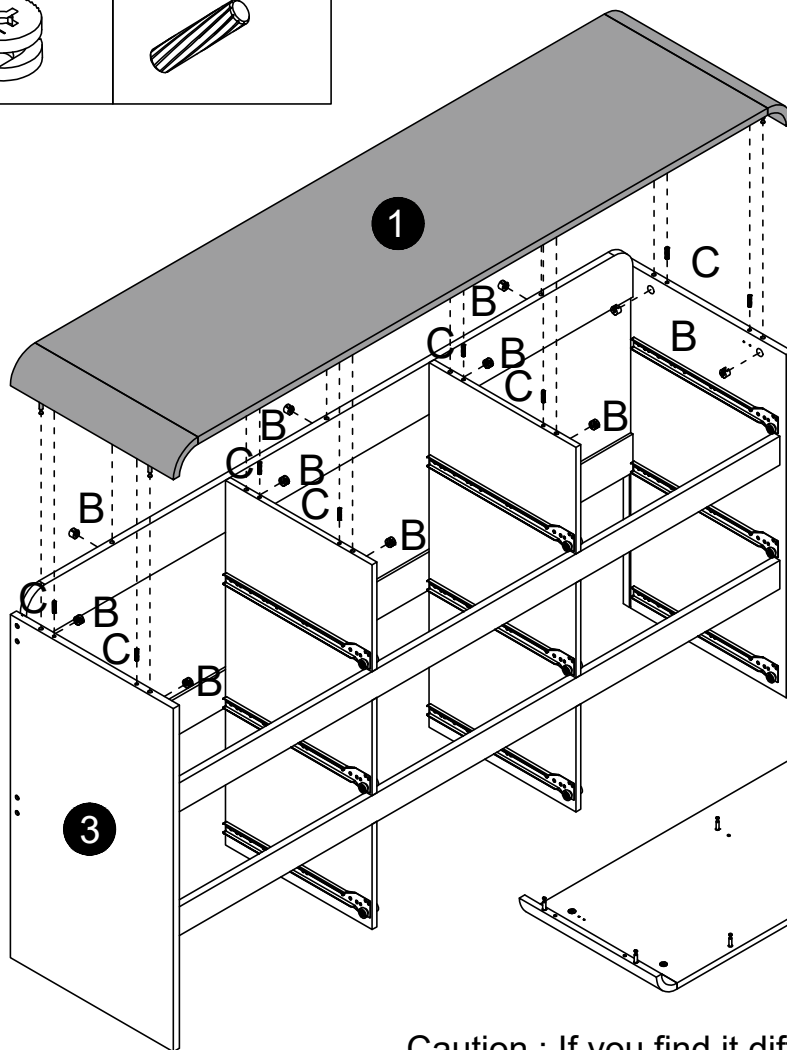


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

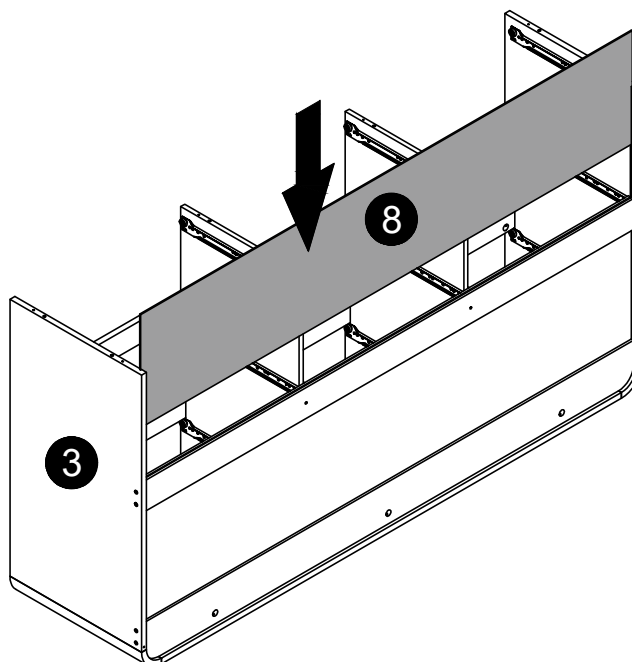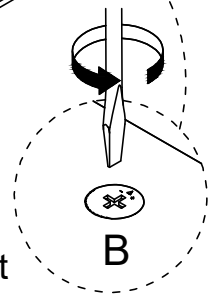

A x4



19

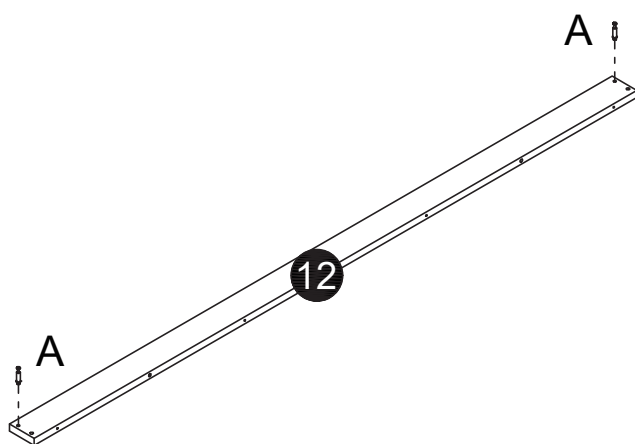

x2

B x4





C x12



I x12







20

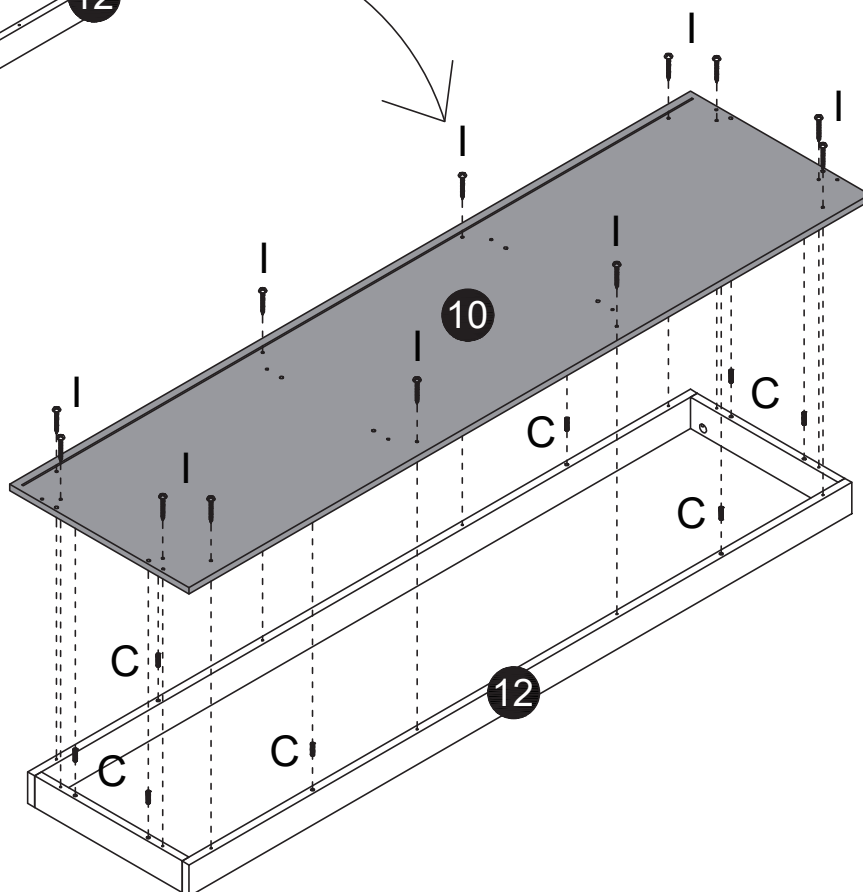
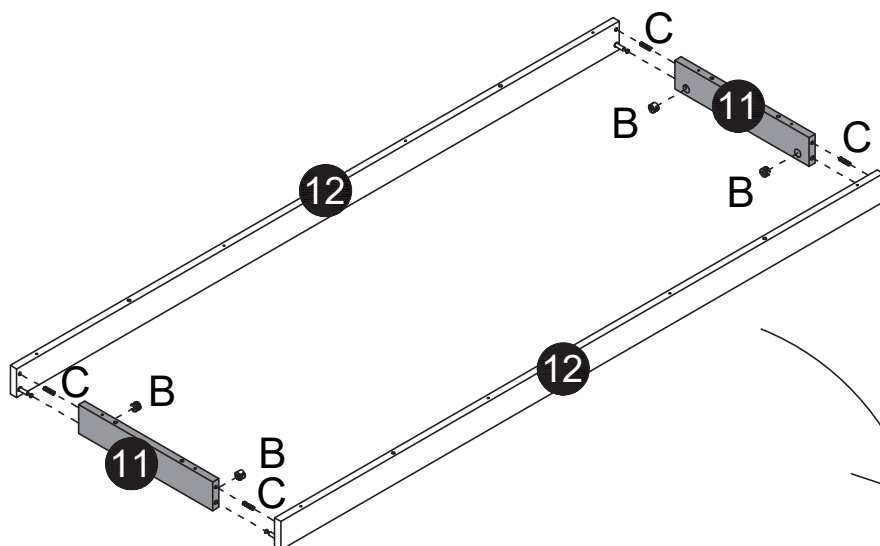


C x8

G x8

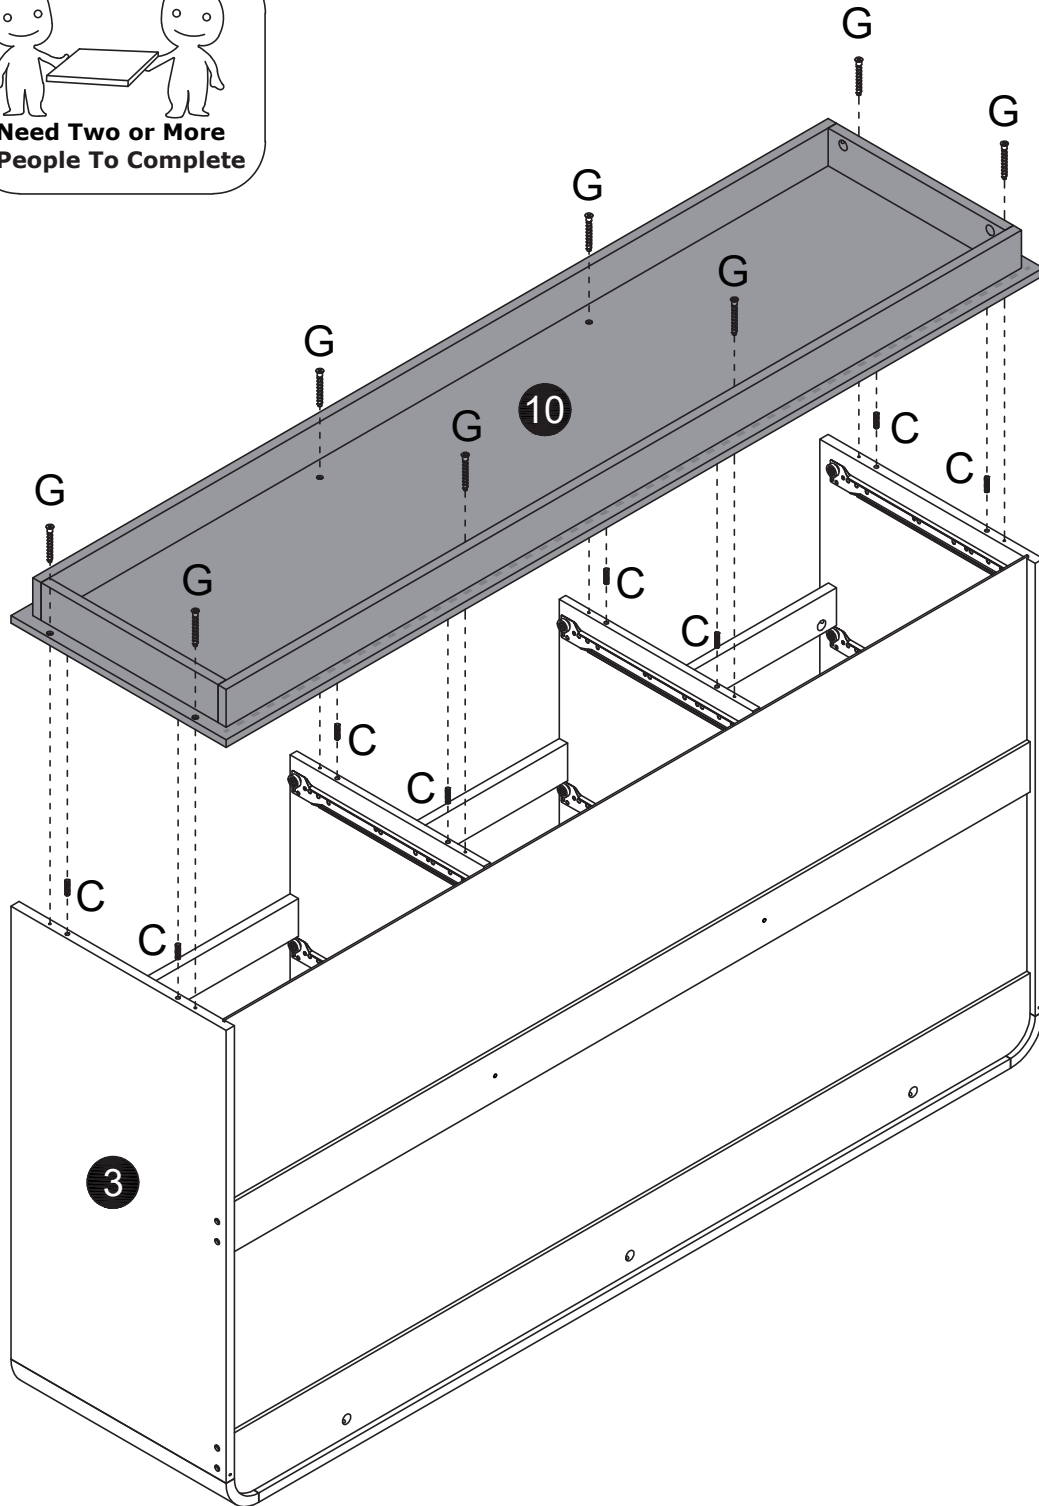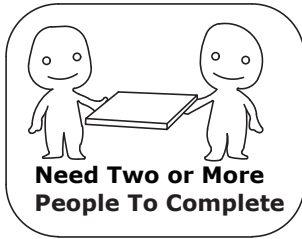


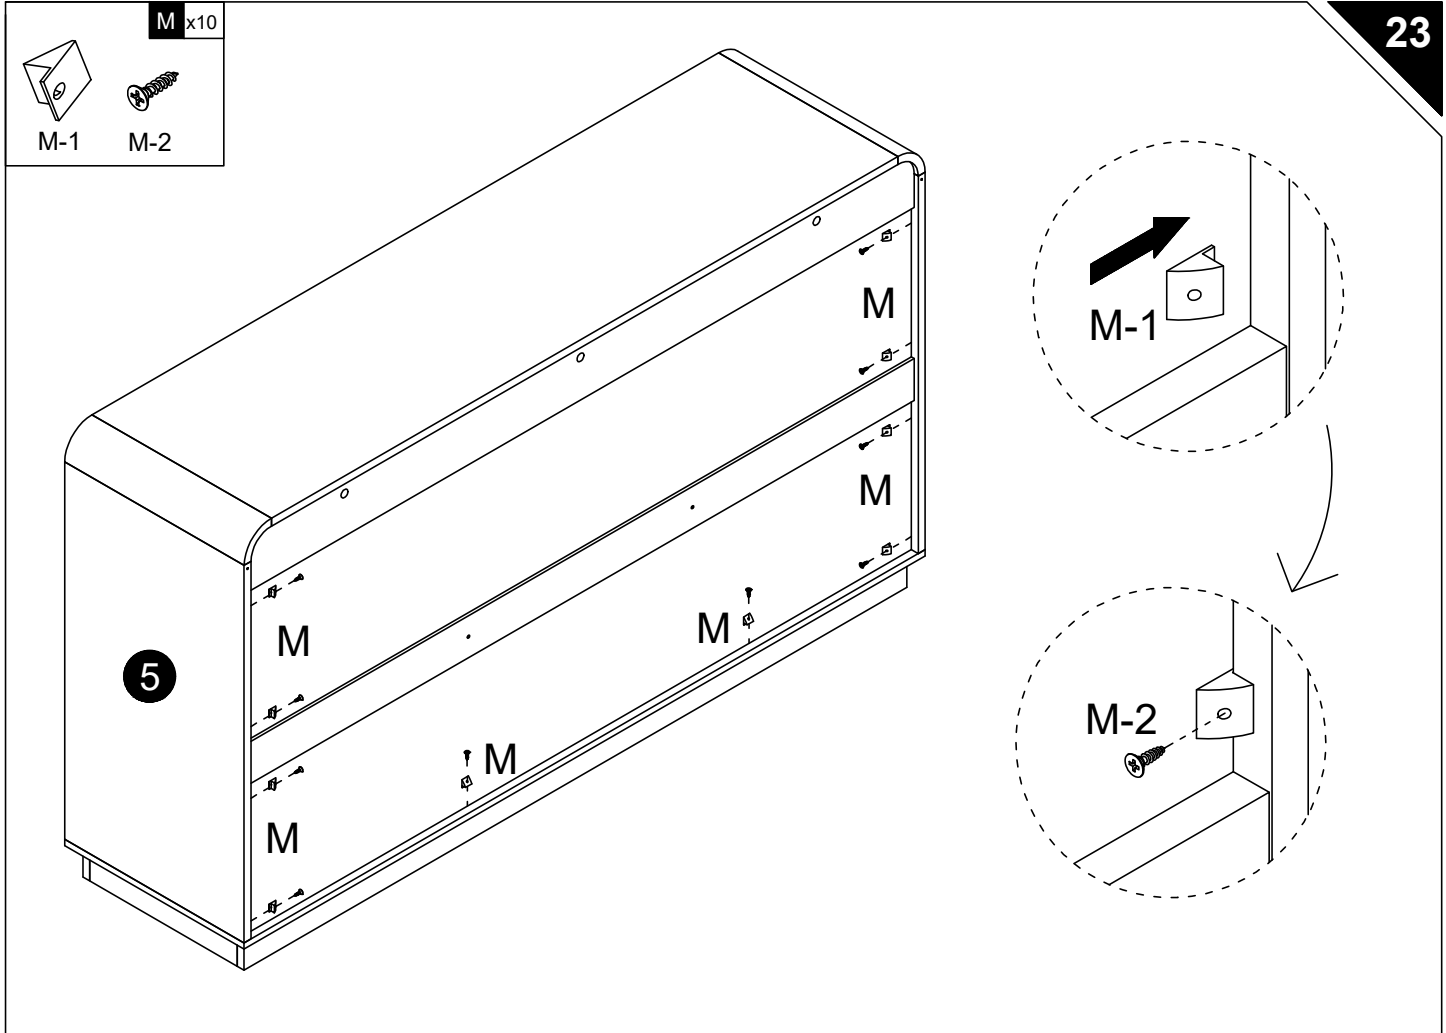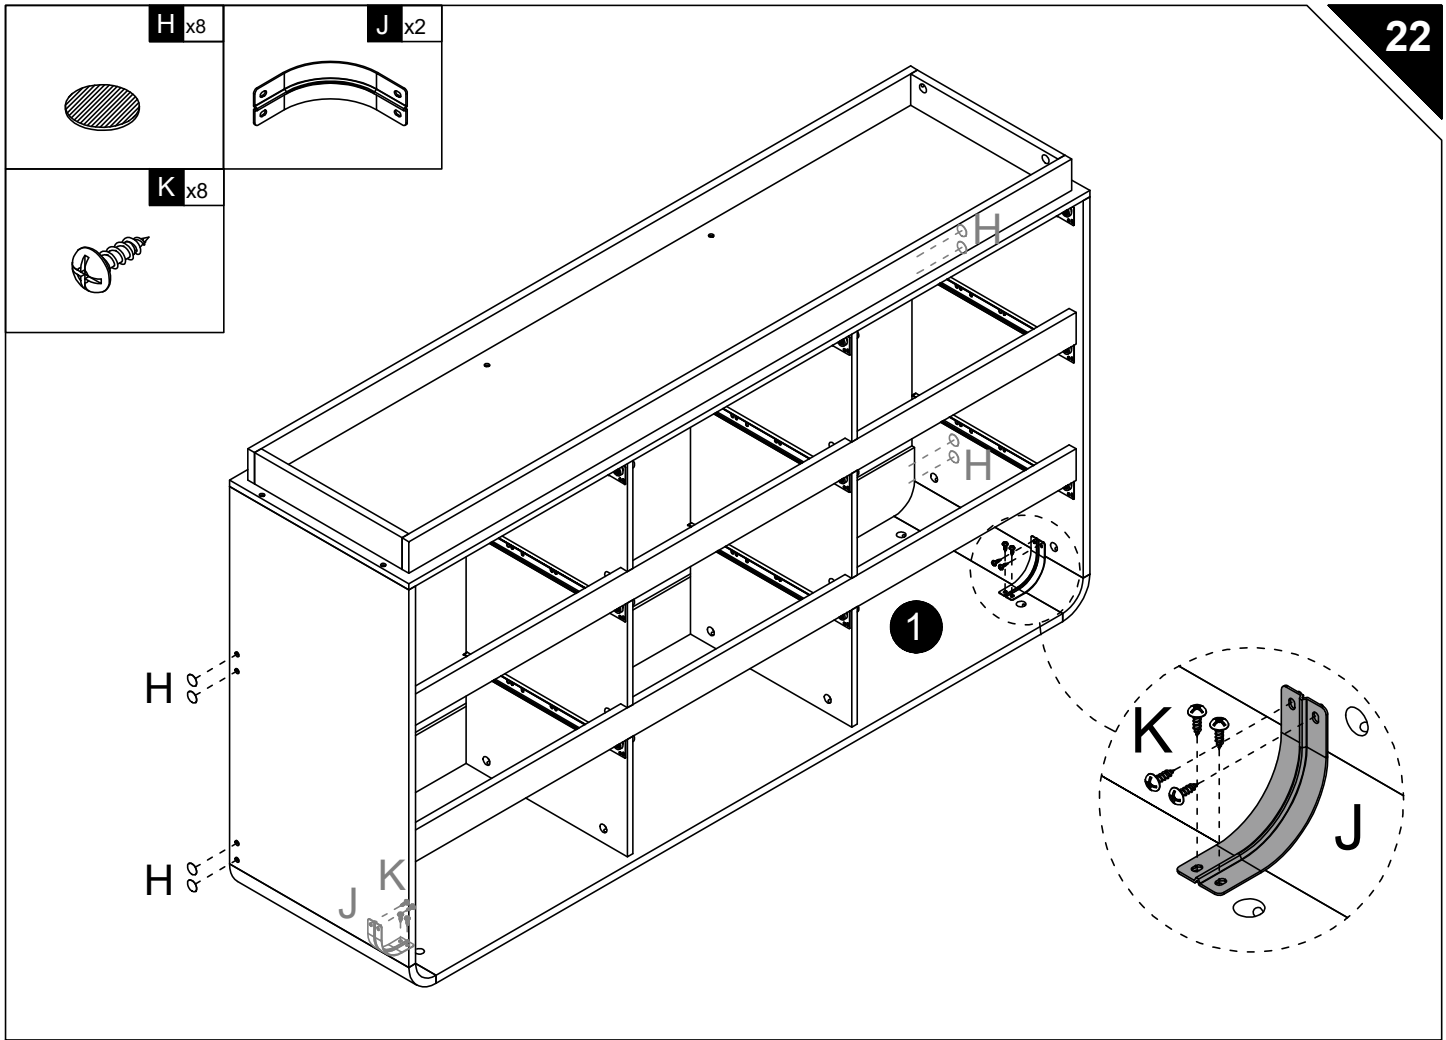

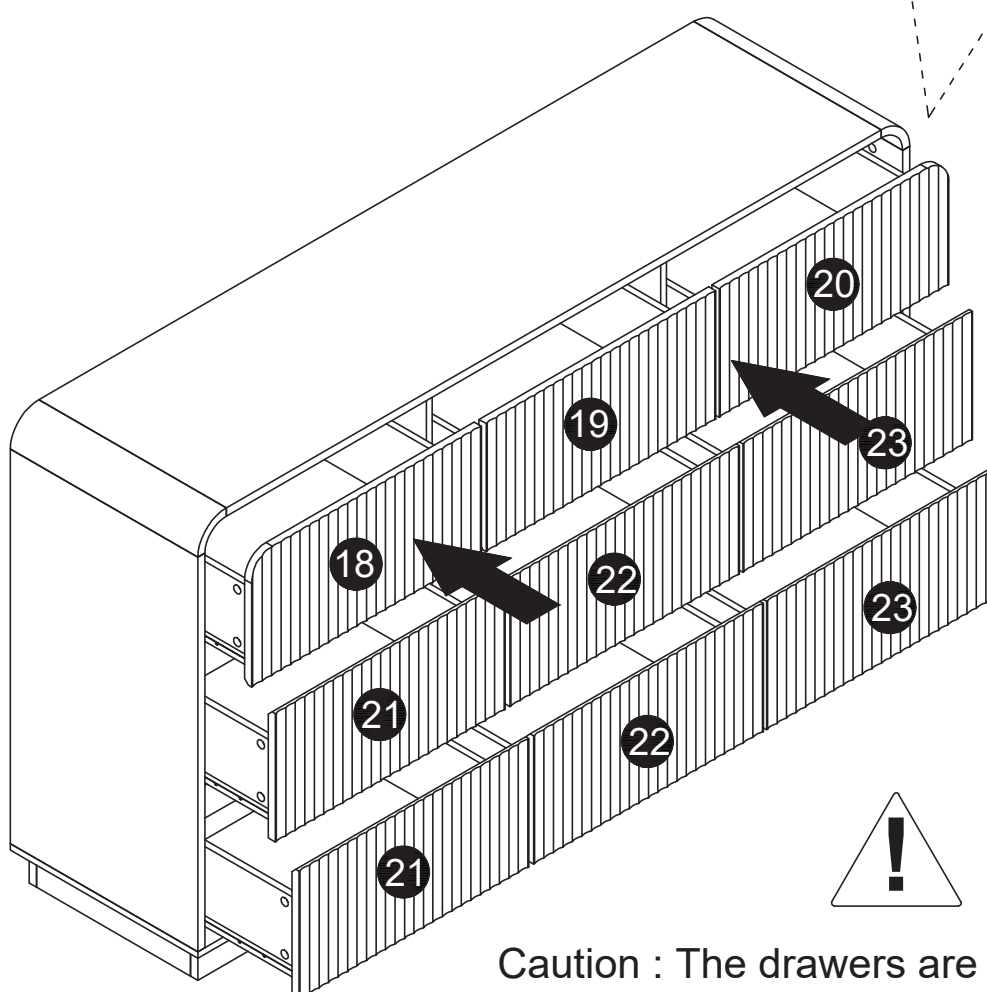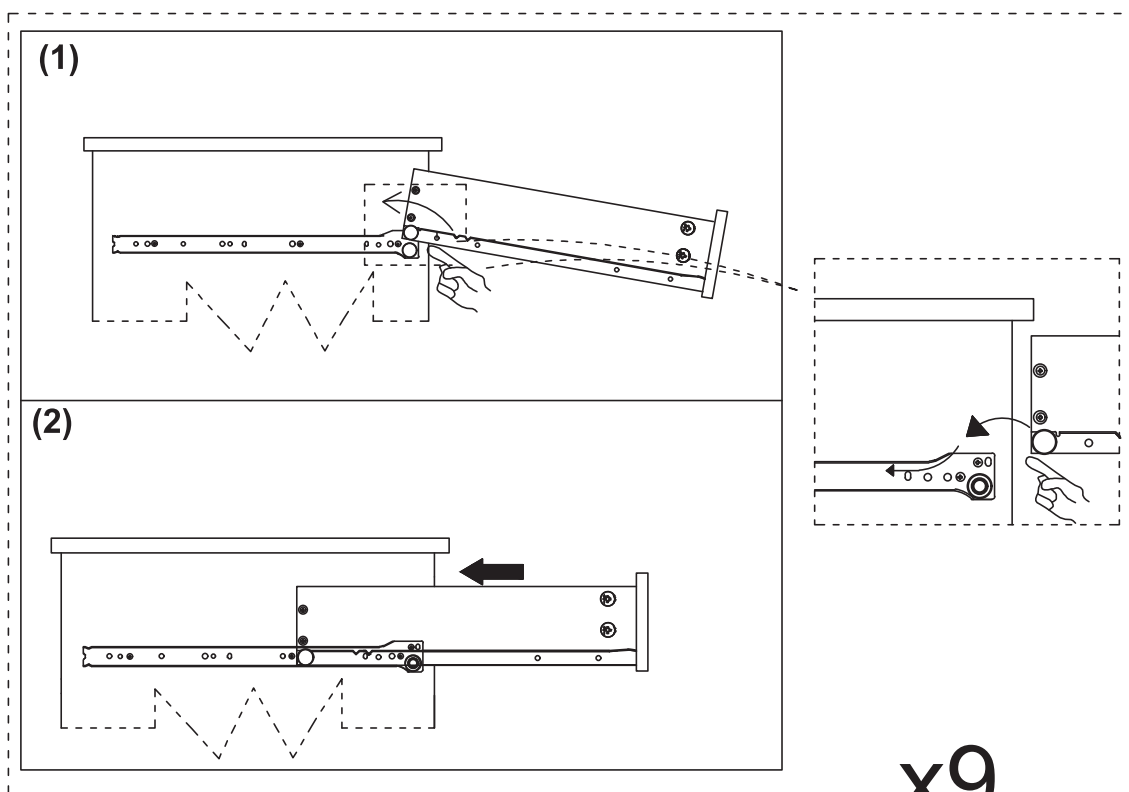


Caution : The drawers are differentiated on the left and right, please place them according to the corresponding numbers.


D x2



L x2




N x2




N-1


N-2

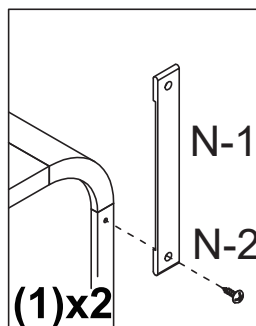


First fix the anti-rewind screw in the reserved hole of the product.

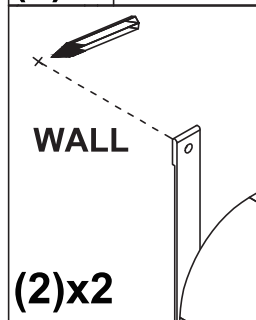


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

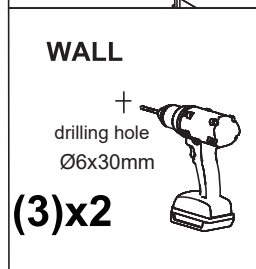

Then use a tape drill to make holes in the wall that are suitable for the product screws.

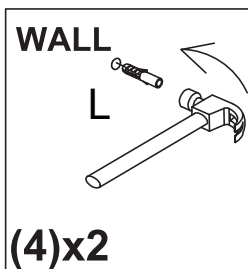

Then, put the expansion bolt into the hole

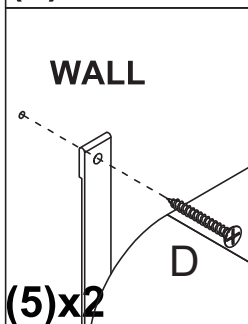

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

