








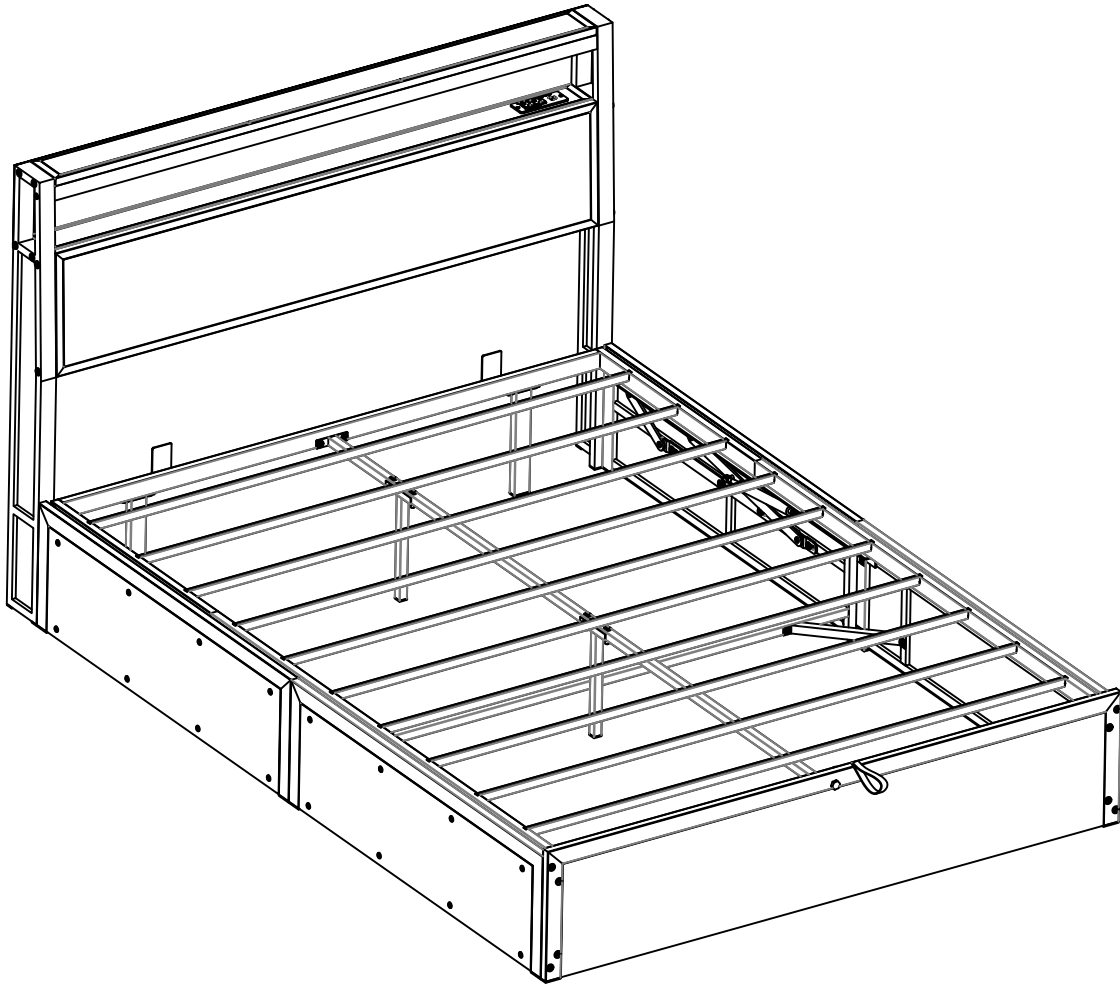










Model:C228-FC-BK+LP








PRODUCT GUIDE AND INSTALLATION MANUAL



Parts List:

A1	1pcs	A2	1pcs	B1	1pcs
					
B2	1pcs	C	1pcs	D	1pcs
					
E1	1pcs	E2	1pcs	F	2pcs
					
G	2pcs	H1	4pcs	H2	6pcs
		Double-sided tape 			
J	2pcs	K	1pcs	L	1pcs
					

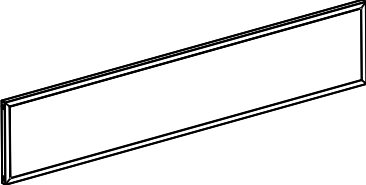
M1	1pcs	M2	2pcs	M3	2pcs
					
N	2pcs	O1	1pcs	O2	1pcs
					
O3	1pcs	O4	1pcs	T	1pcs
					
P1	1pcs	Q1	1pcs	Q2	1pcs
					
R1	1pcs	R2	1pcs	R3	1pcs
					

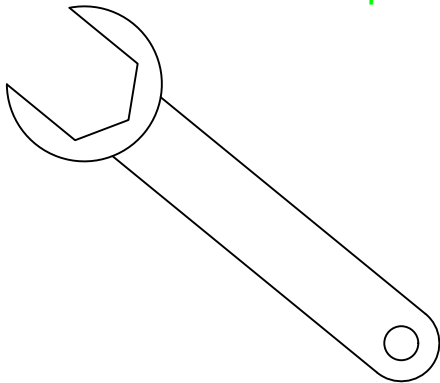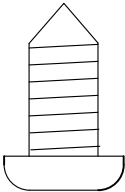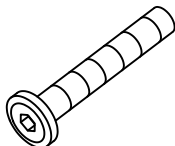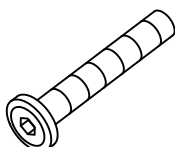 1pcs			
X10  1pcs	Y  1pcs		
U1  1pcs	U2  5pcs M4x10mm	V  1pcs	W3  1pcs
X1  2pcs M4x30mm	X2  4pcs M8*1.25mm	X3  37pcs M8*15mm	X4  24pcs M8*35mm
X5  12pcs M8*50mm	X6  4pcs M8*10mm	X7  4pcs M6*15mm	X8  2pcs M6*35mm
X9  2pcs M6*50mm	Some boards have been already attached to the frames		


ASSEMBLY

1


M8x15mm
(X3) x4

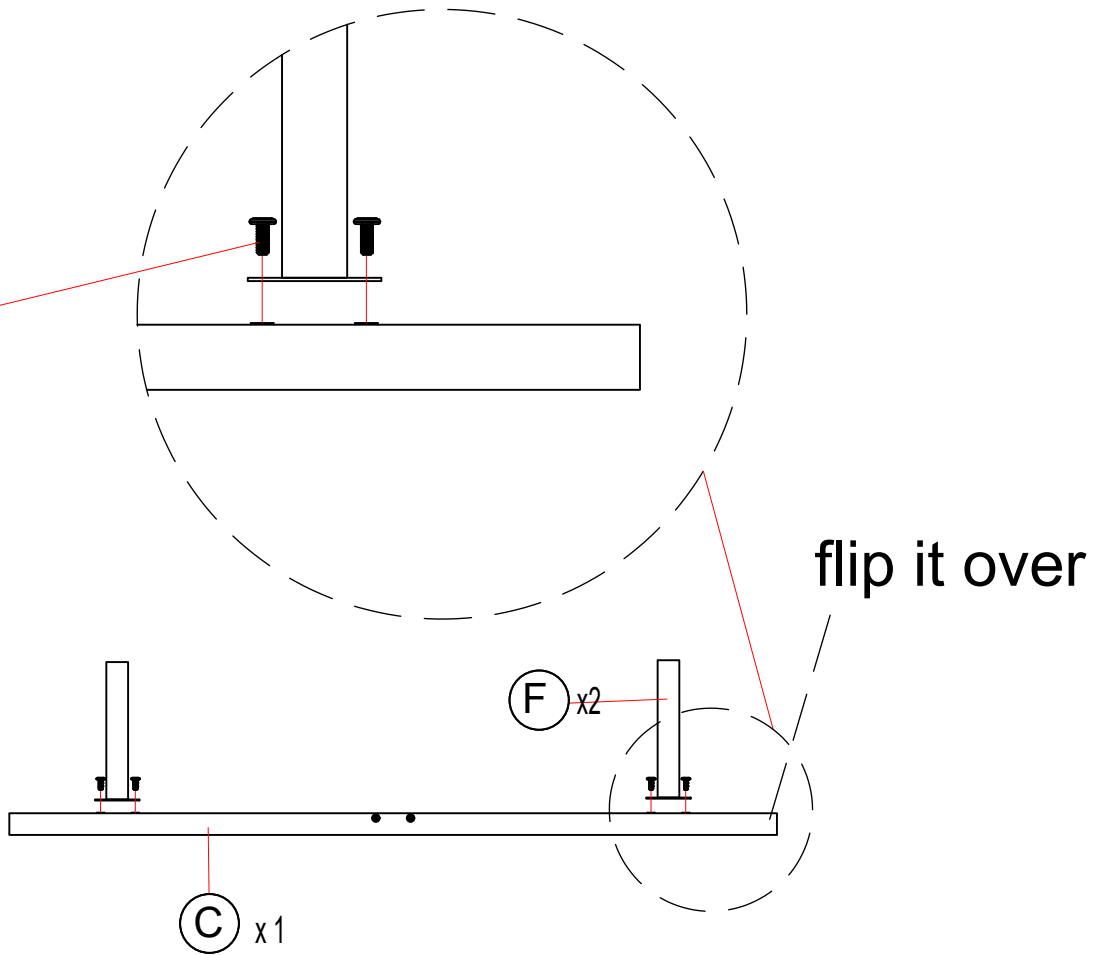


2

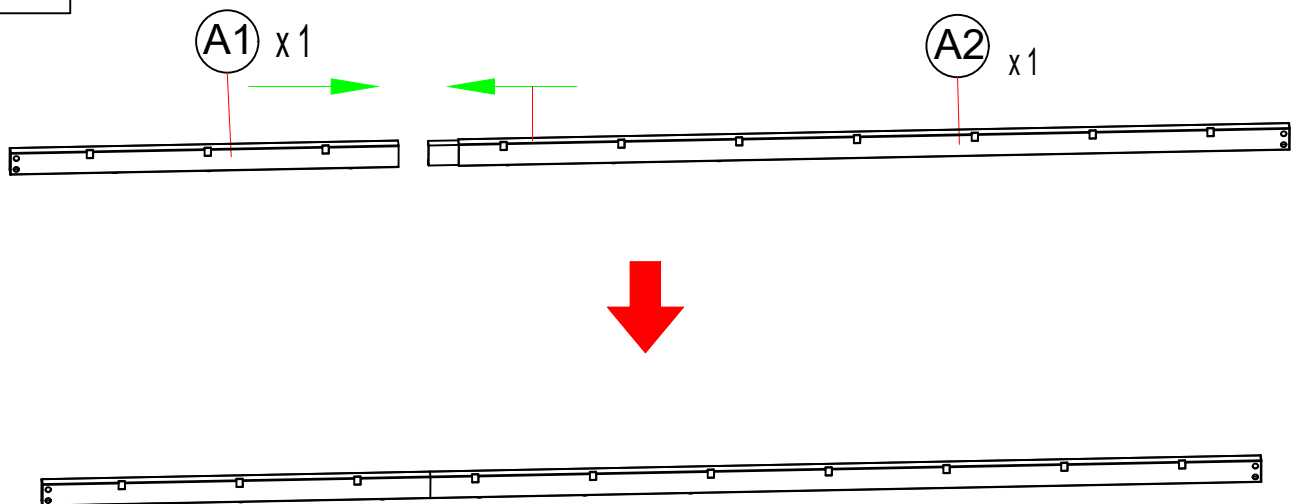





3

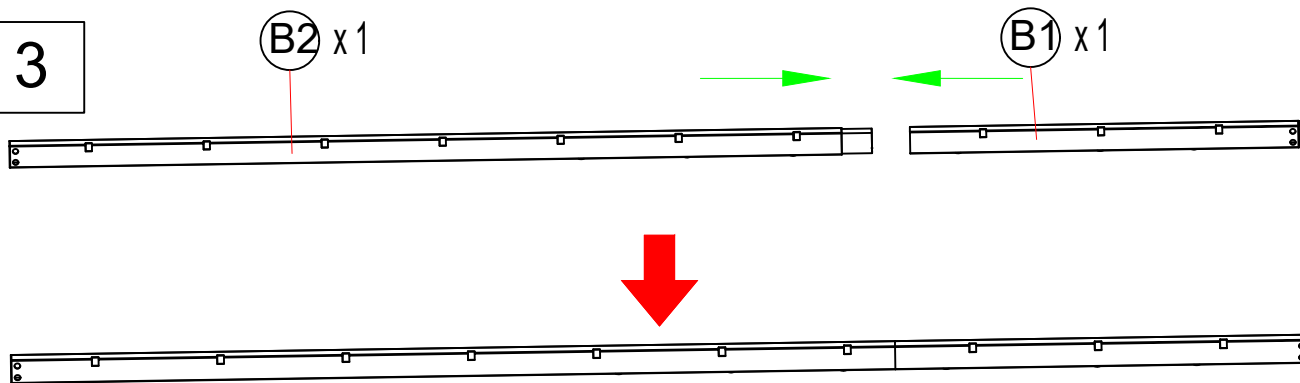

4a

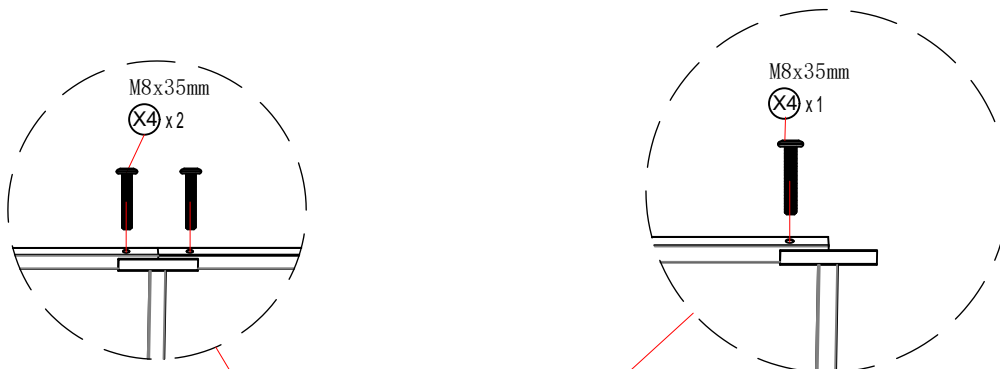


4b

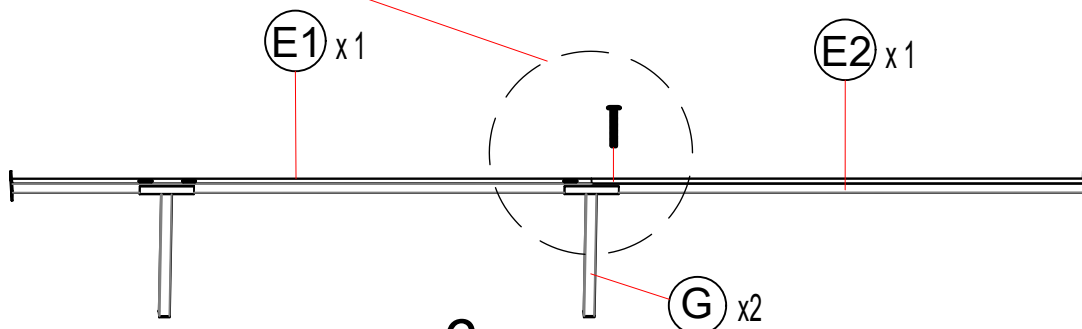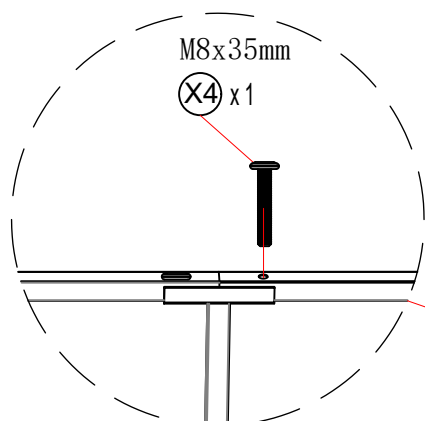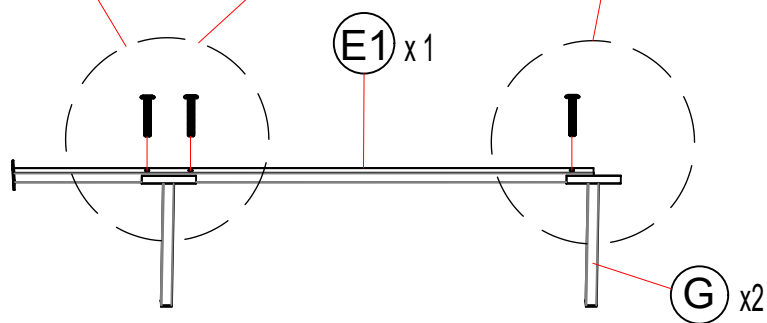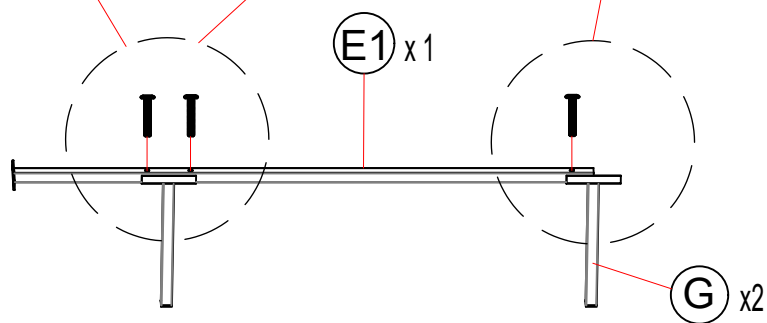


6

5

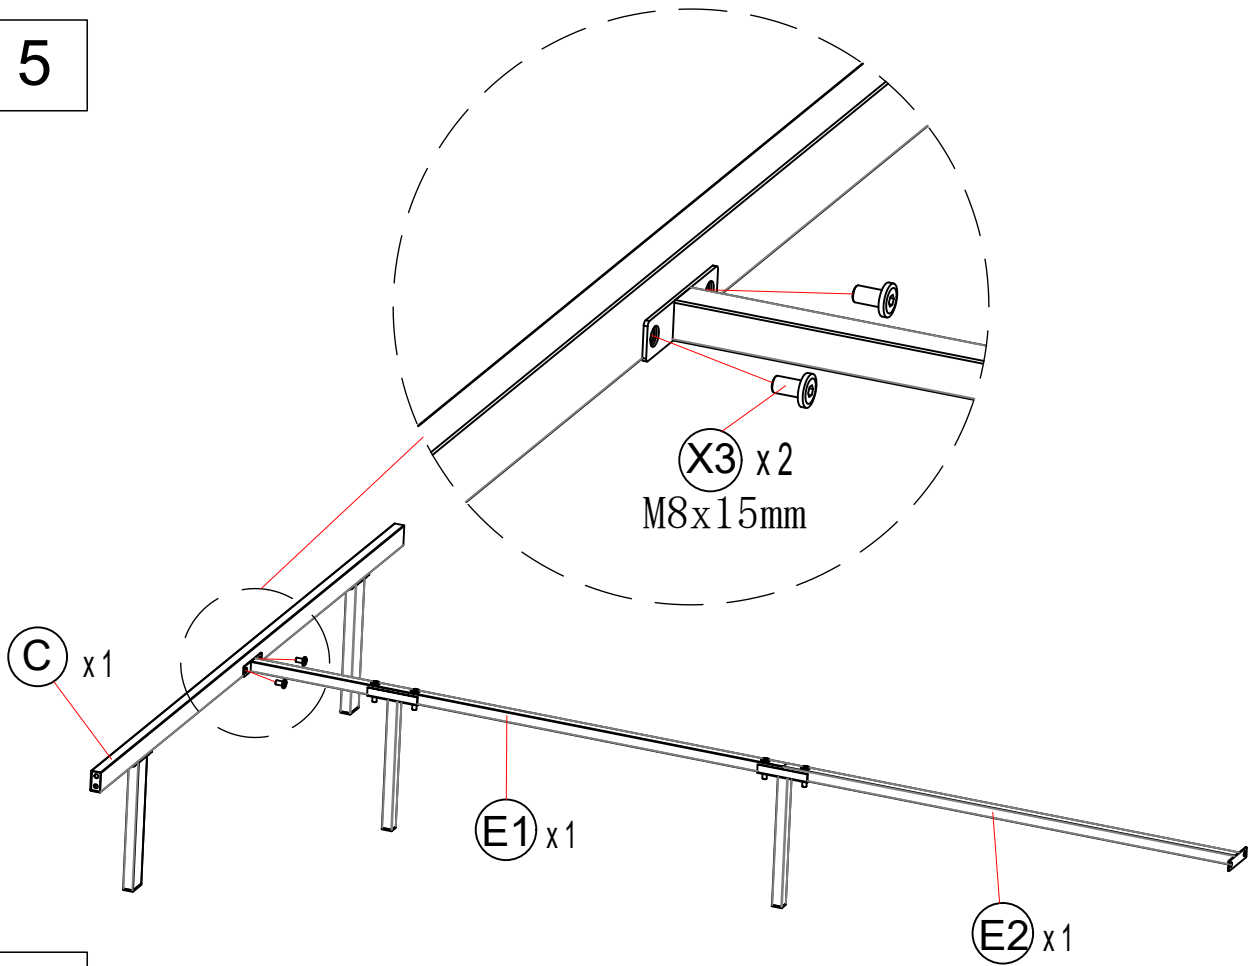



6

flip it over

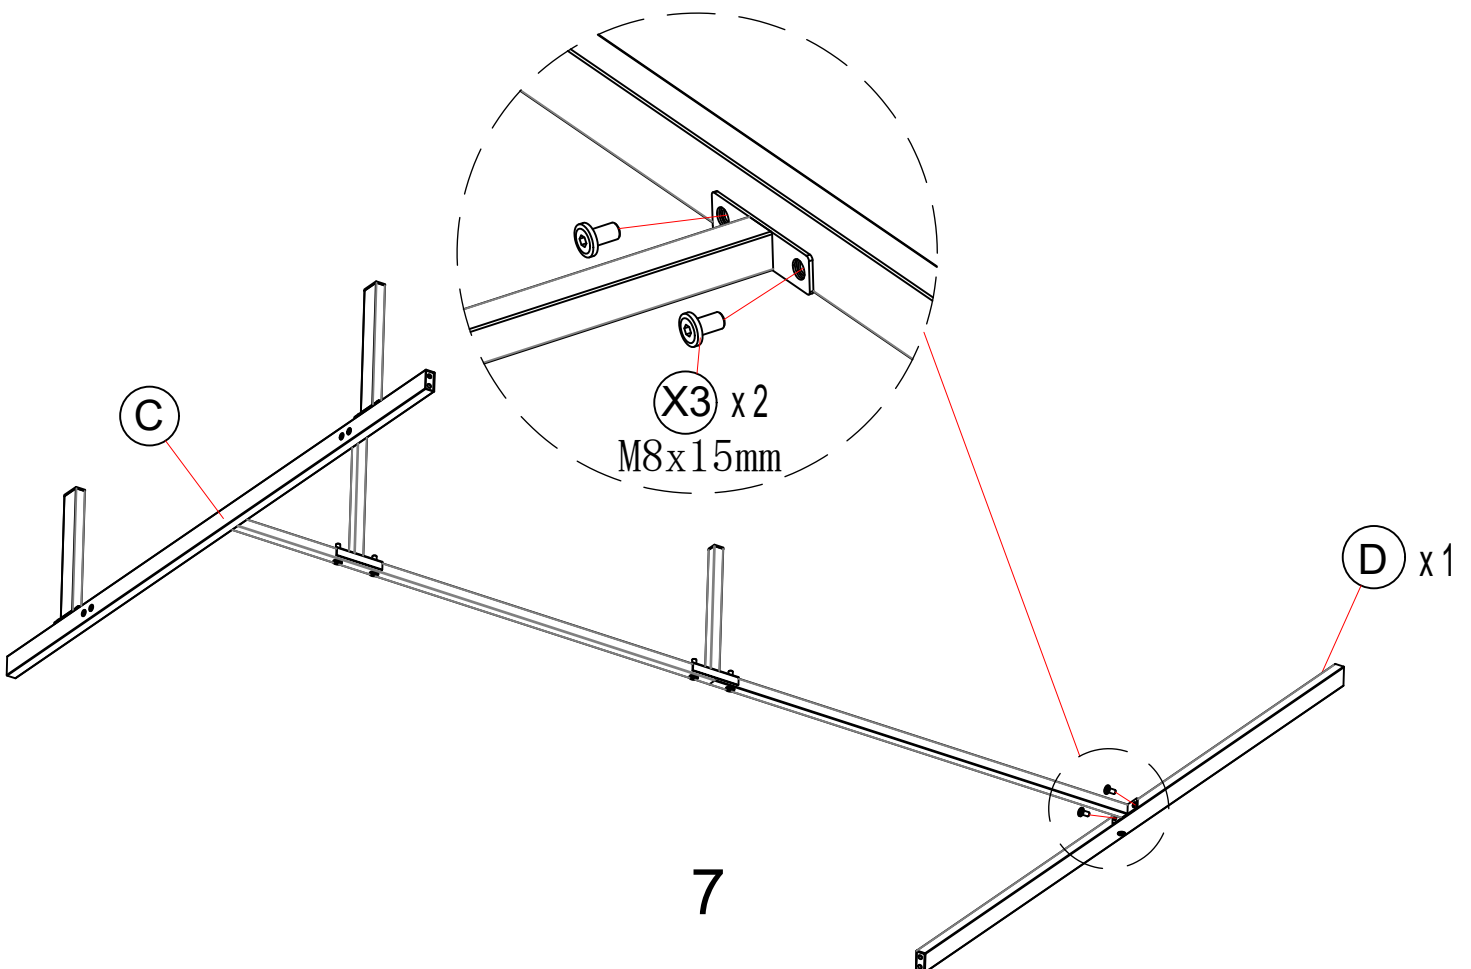


7


Note: the direction of the bed legs is up

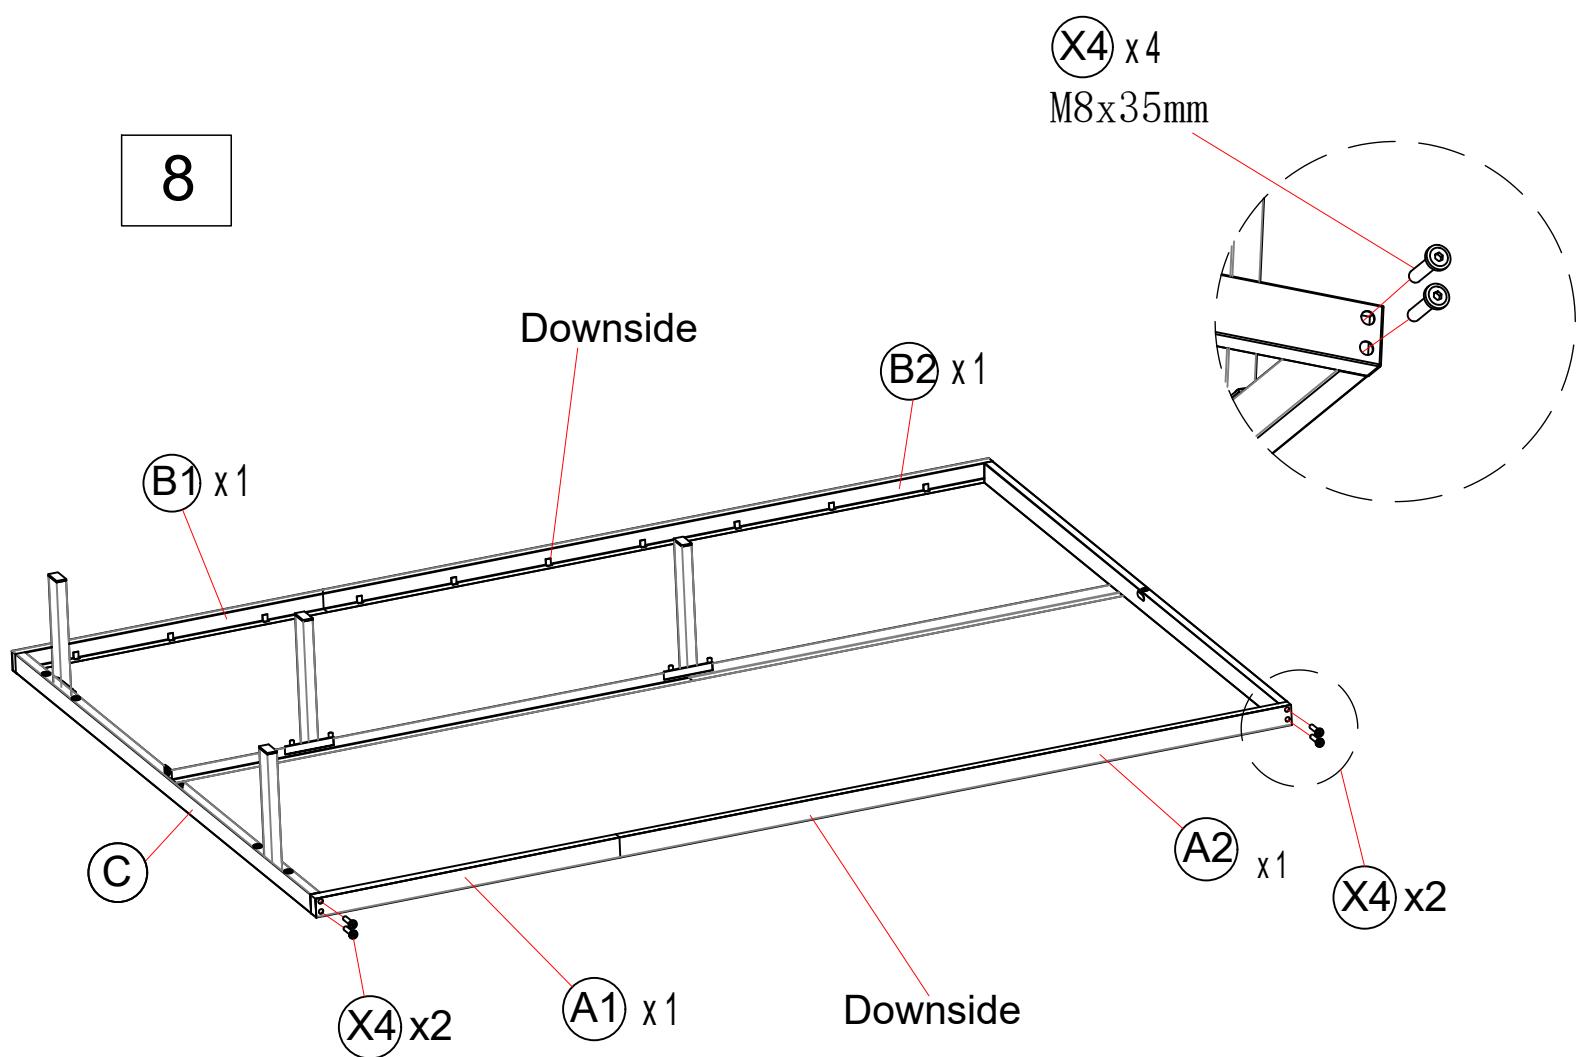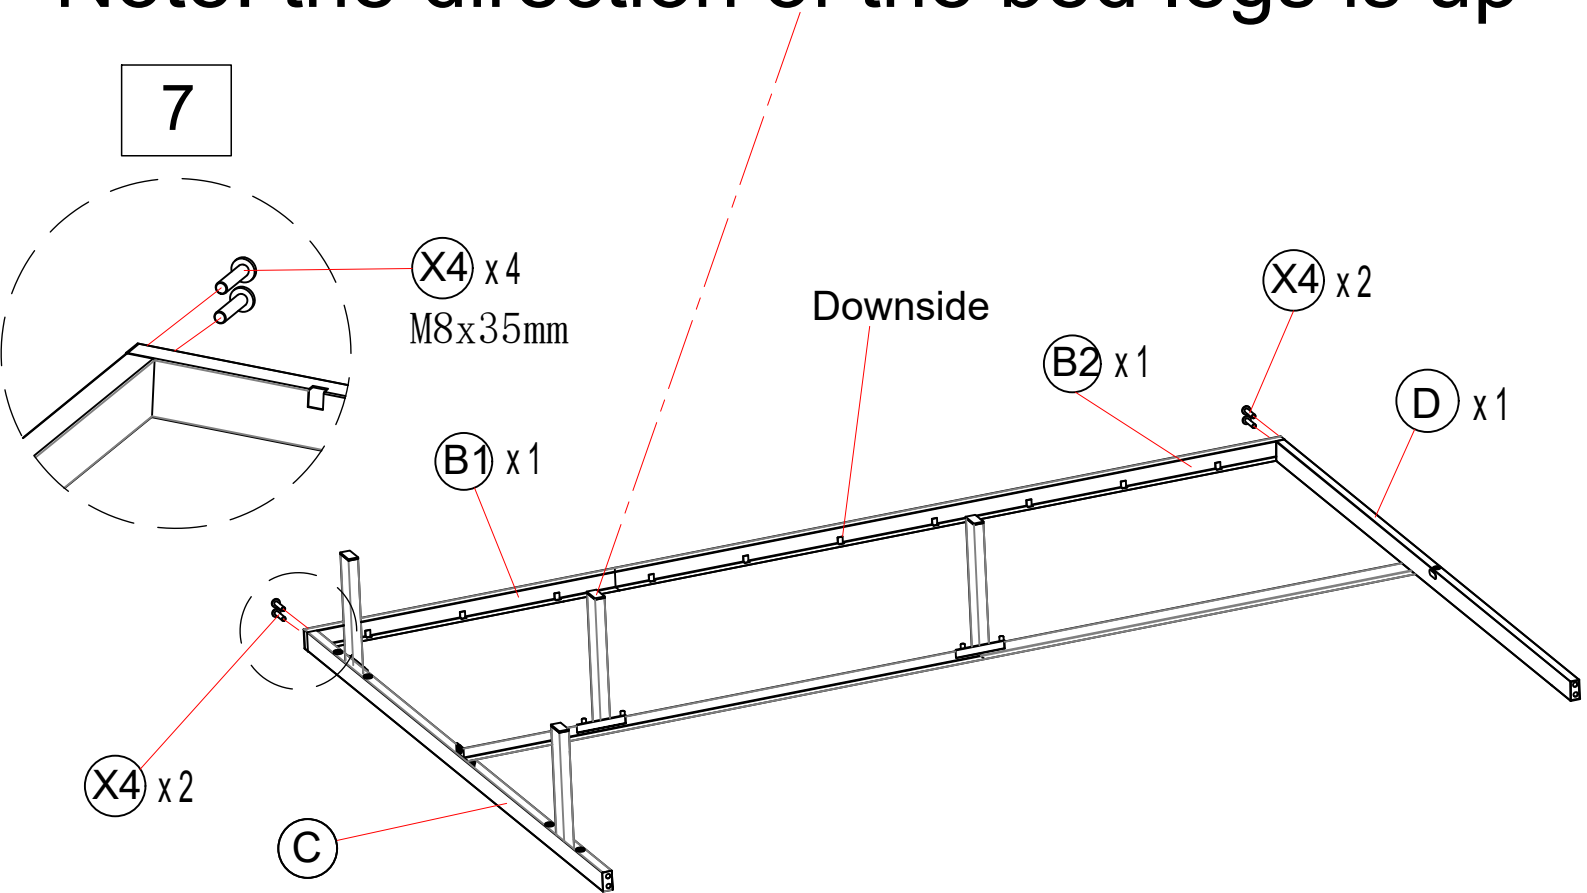

9

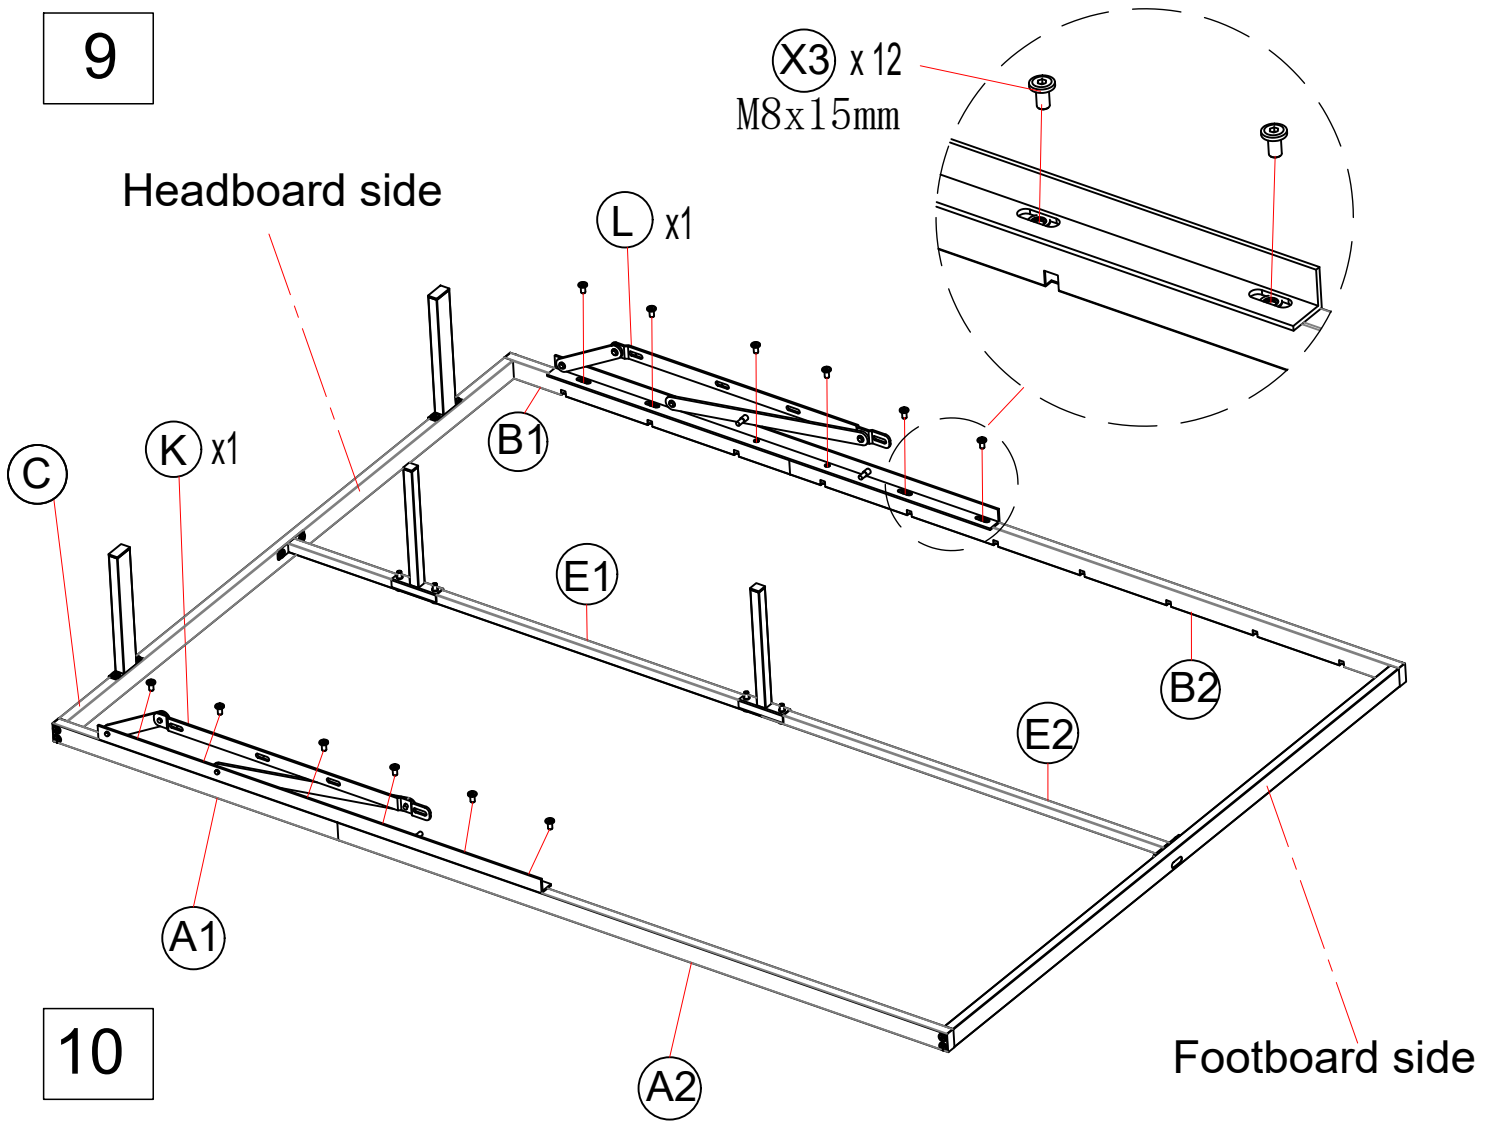


10

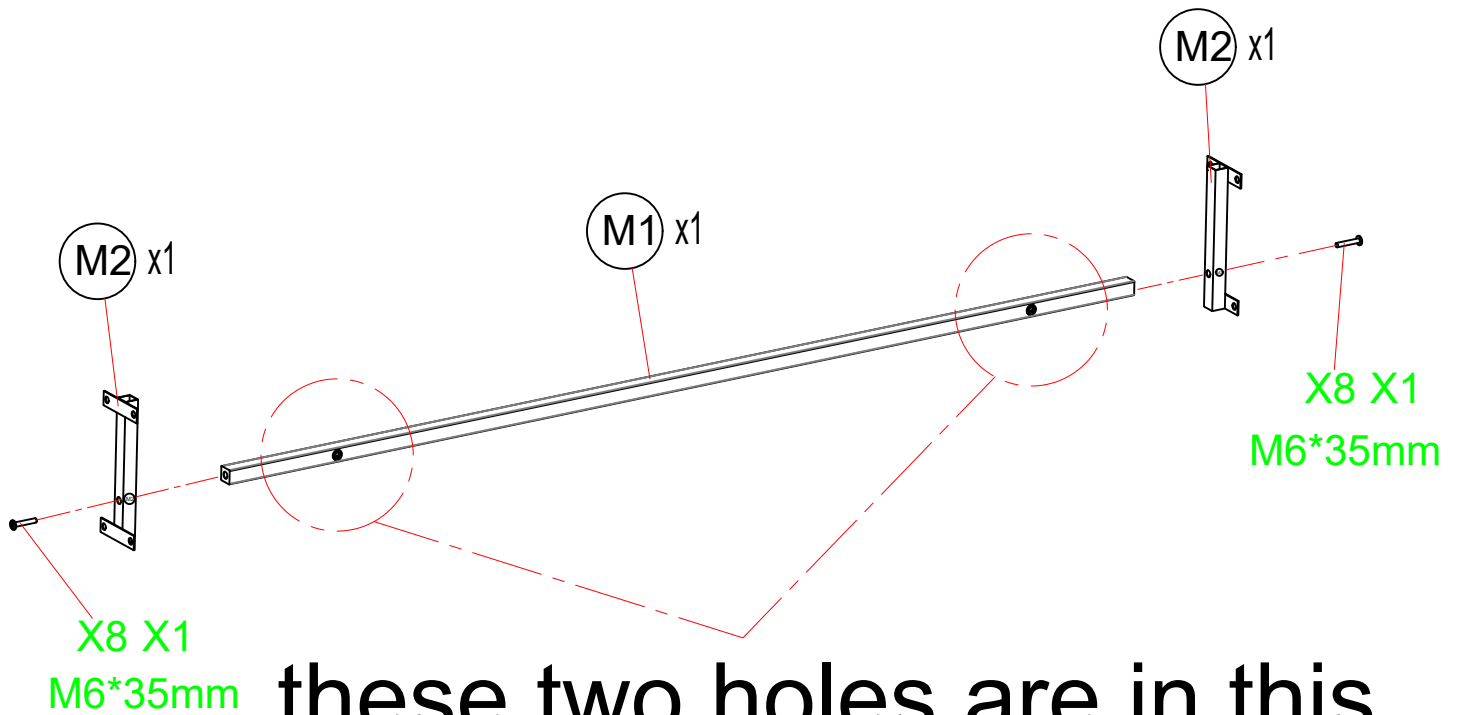


these two holes are in this direction 9


11

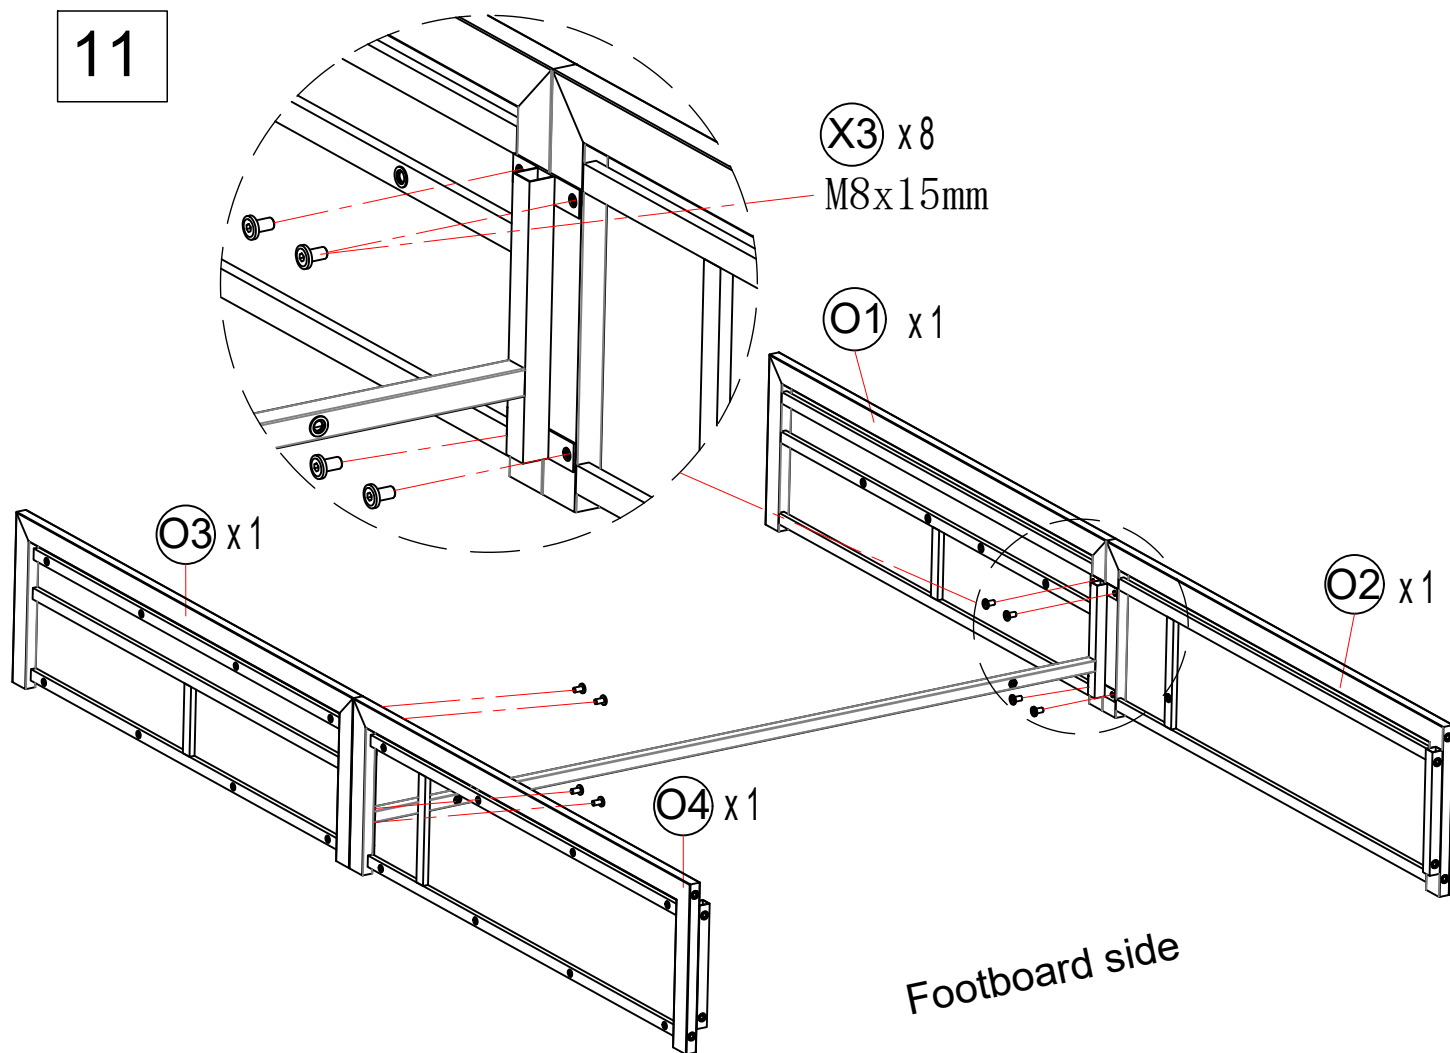


12

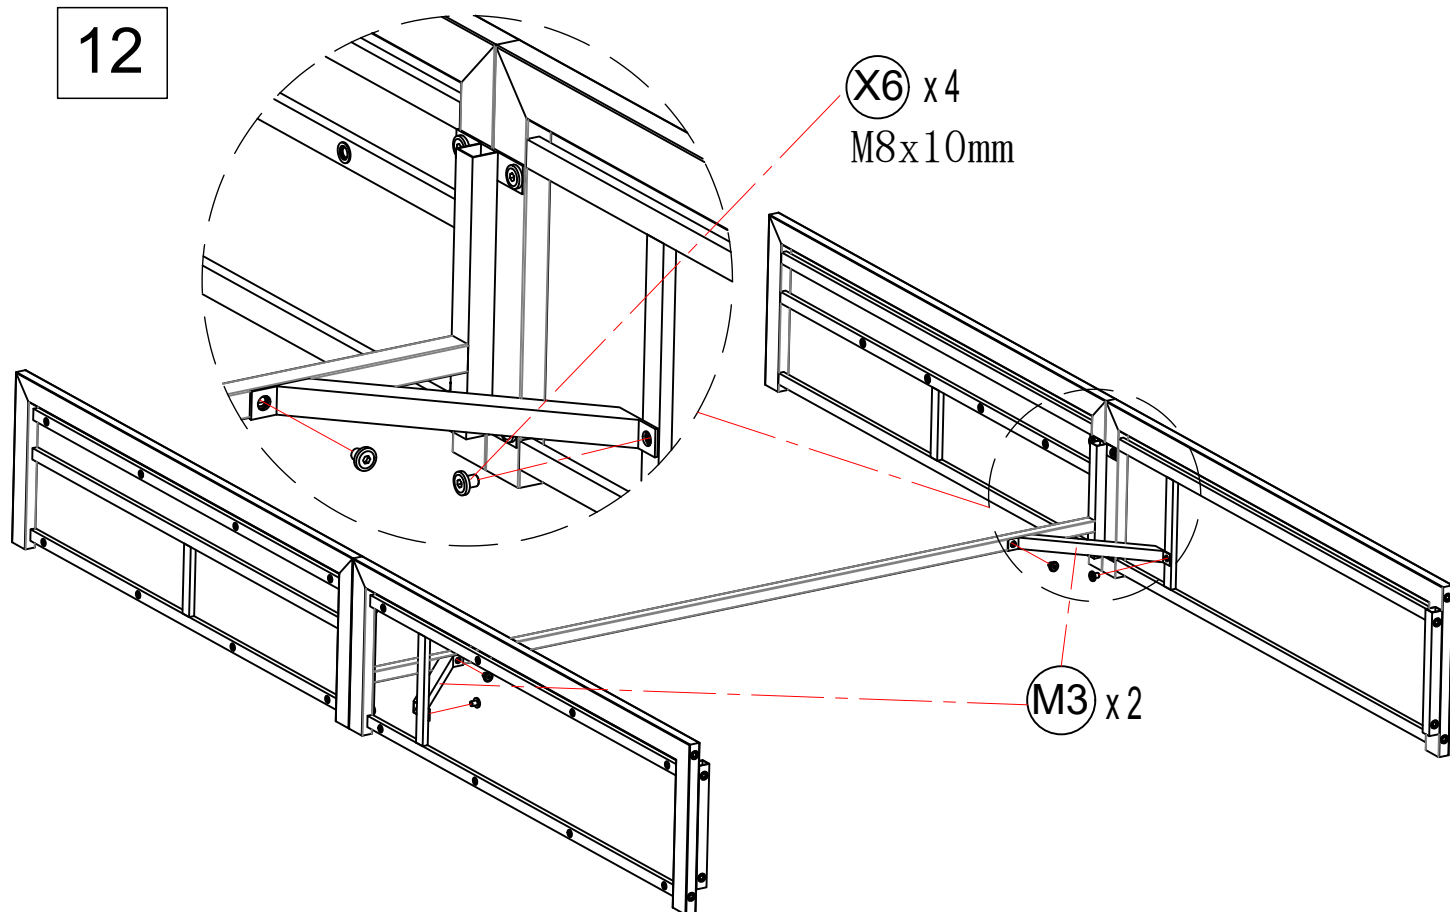


13

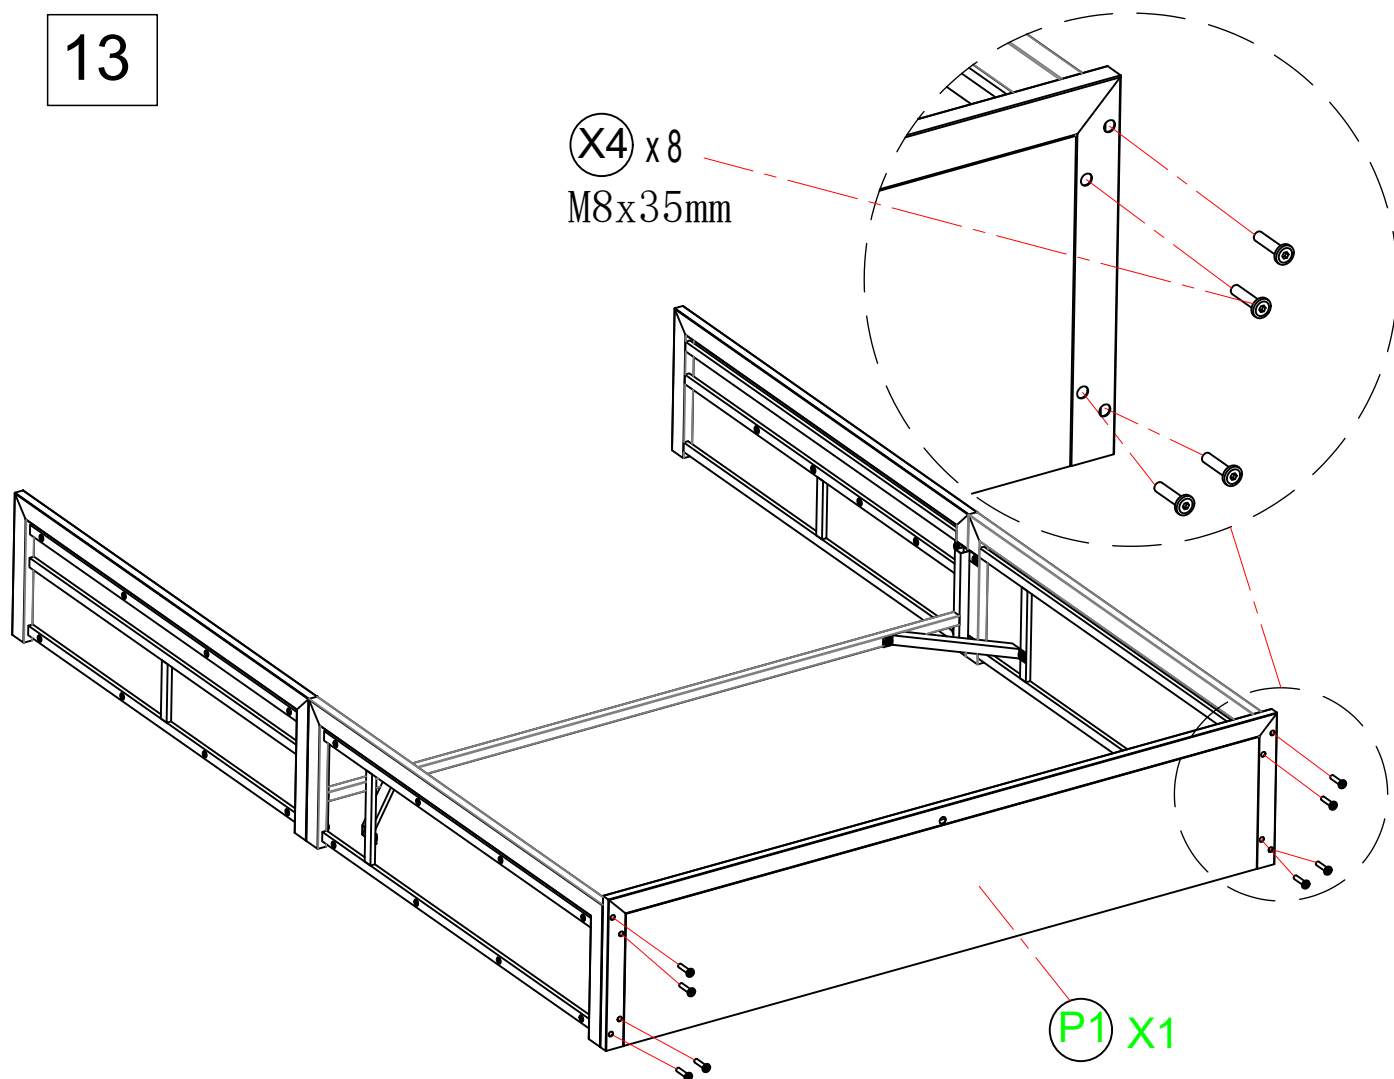

14

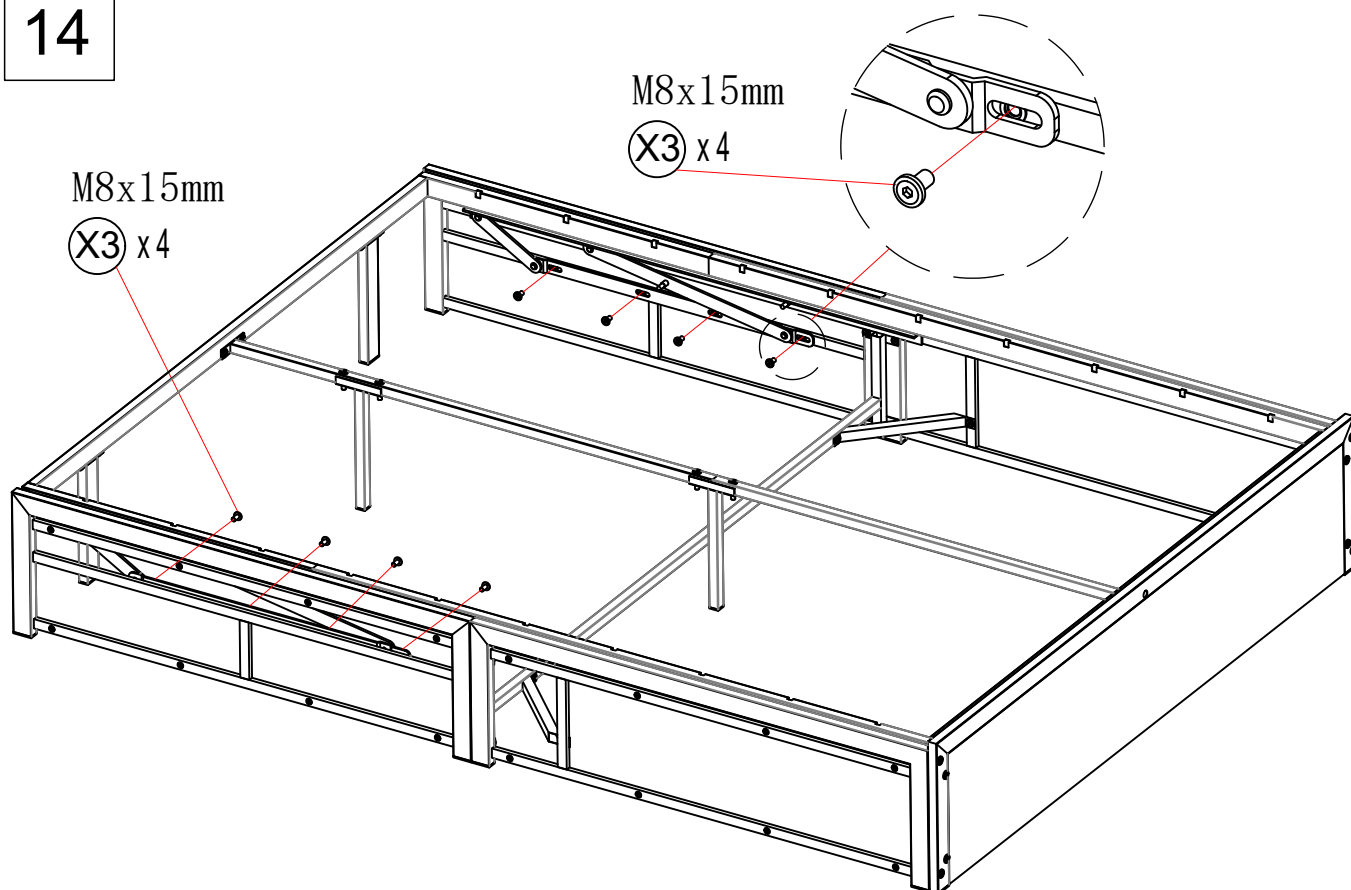


15

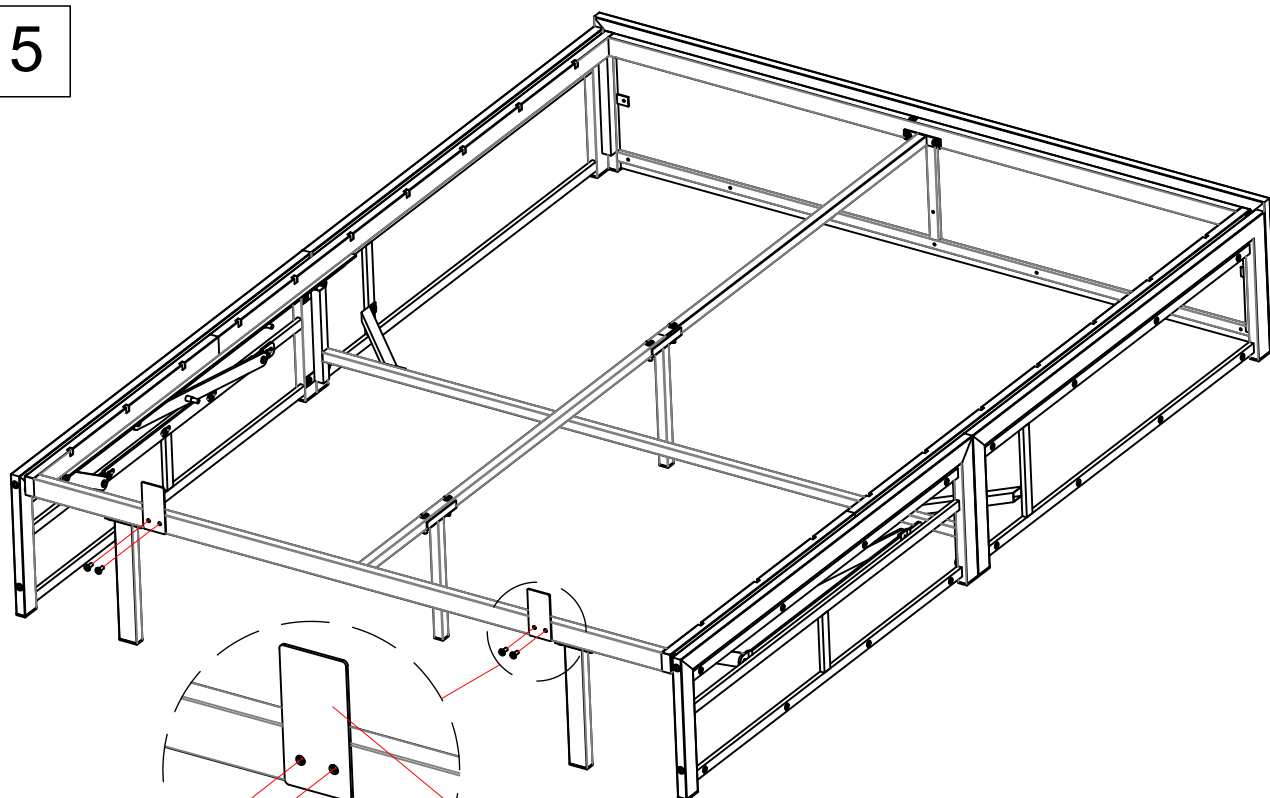

X7 X4
M6*15mm

N x2


16

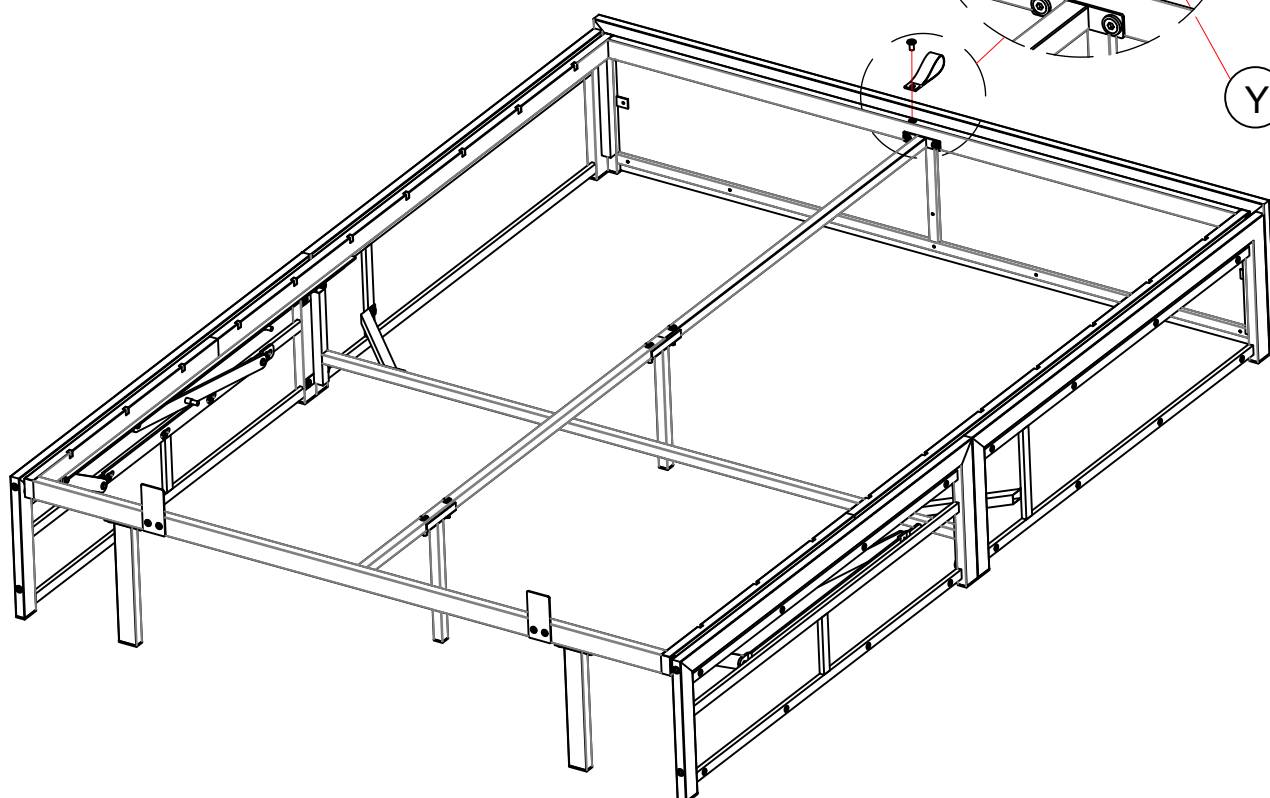


X3 x1
M8x15mm

Y x1

17

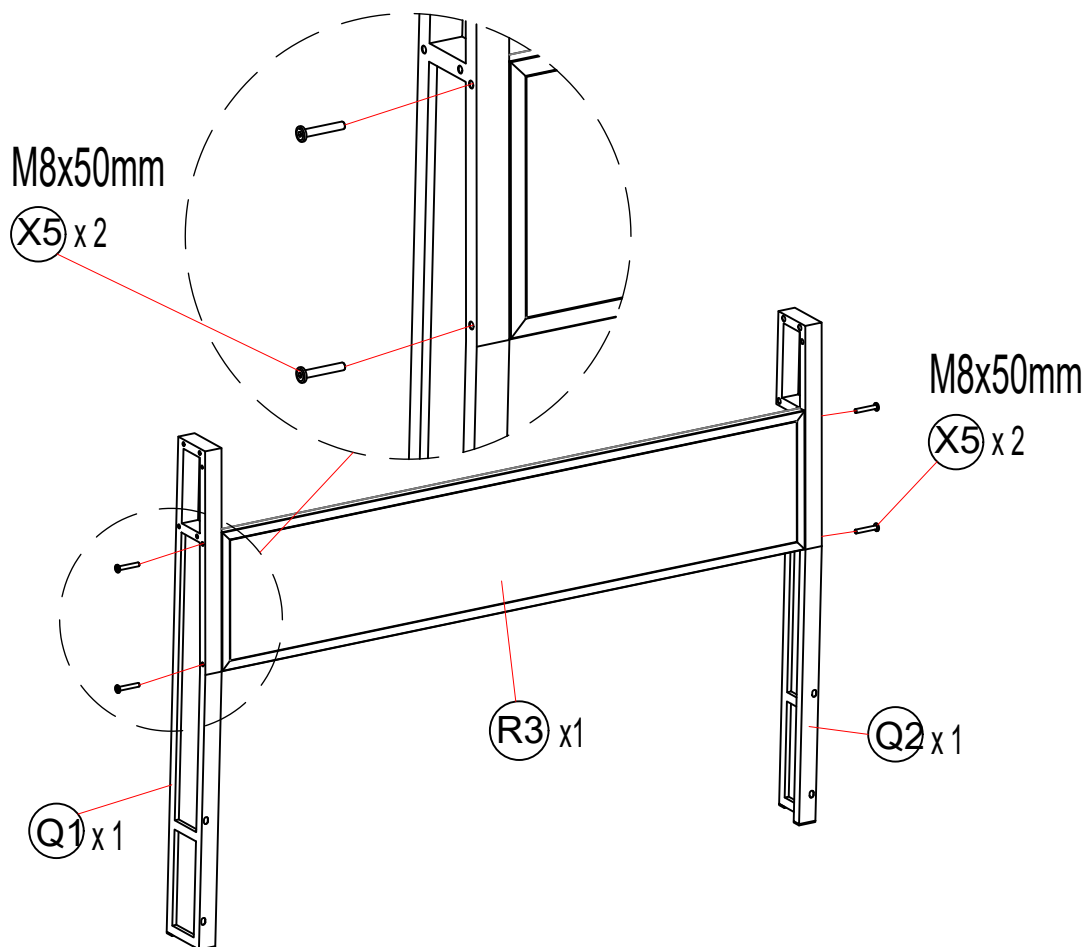


18

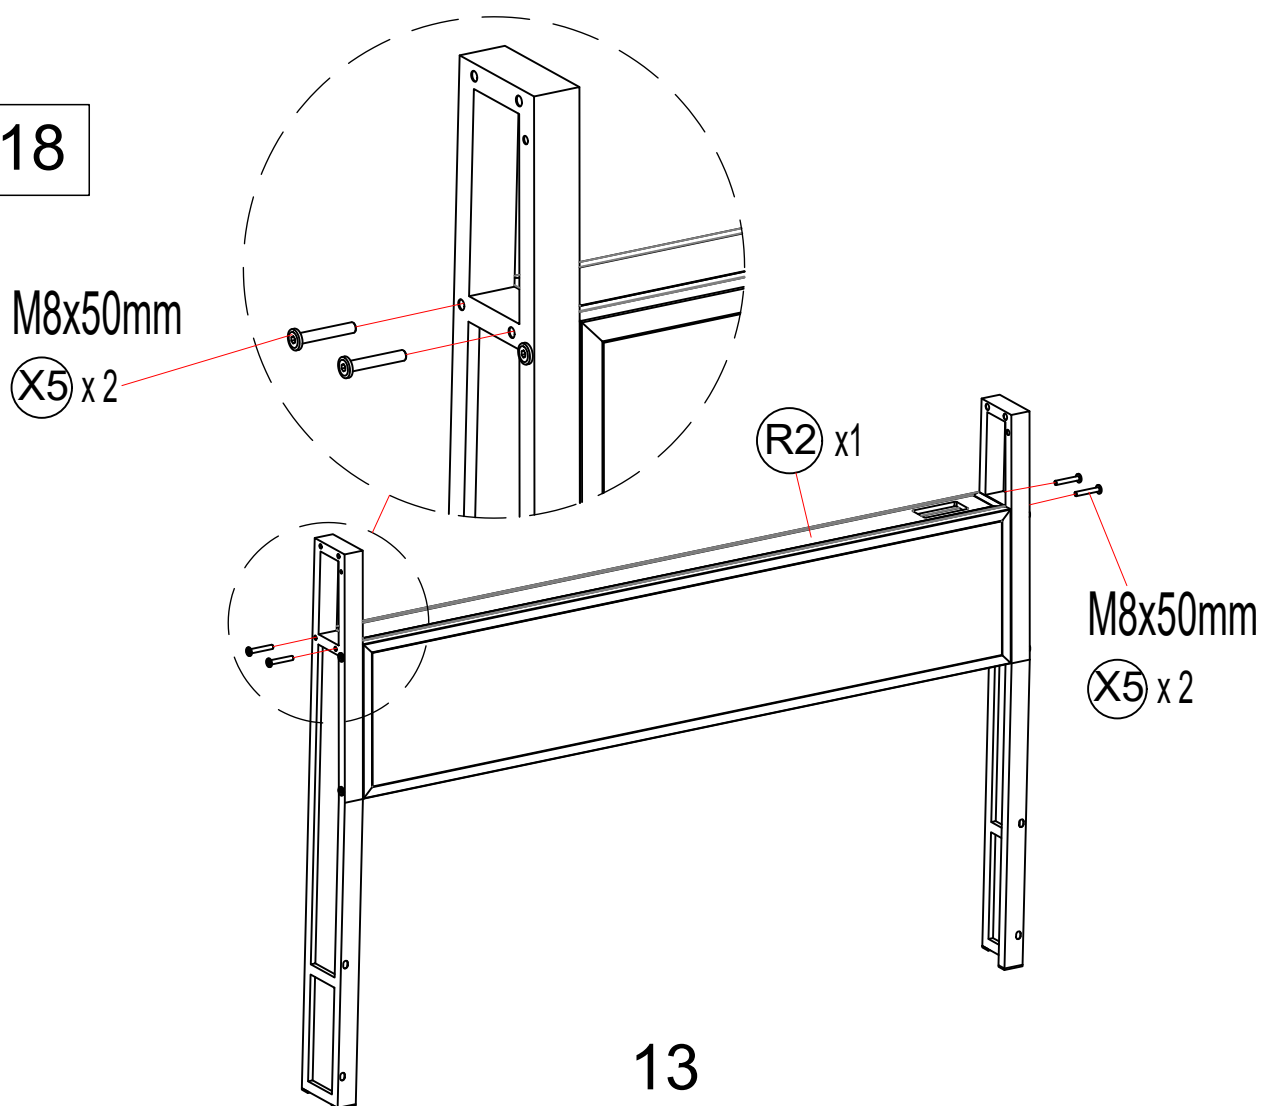


We suggest using drill machine to
install U2 screws

19

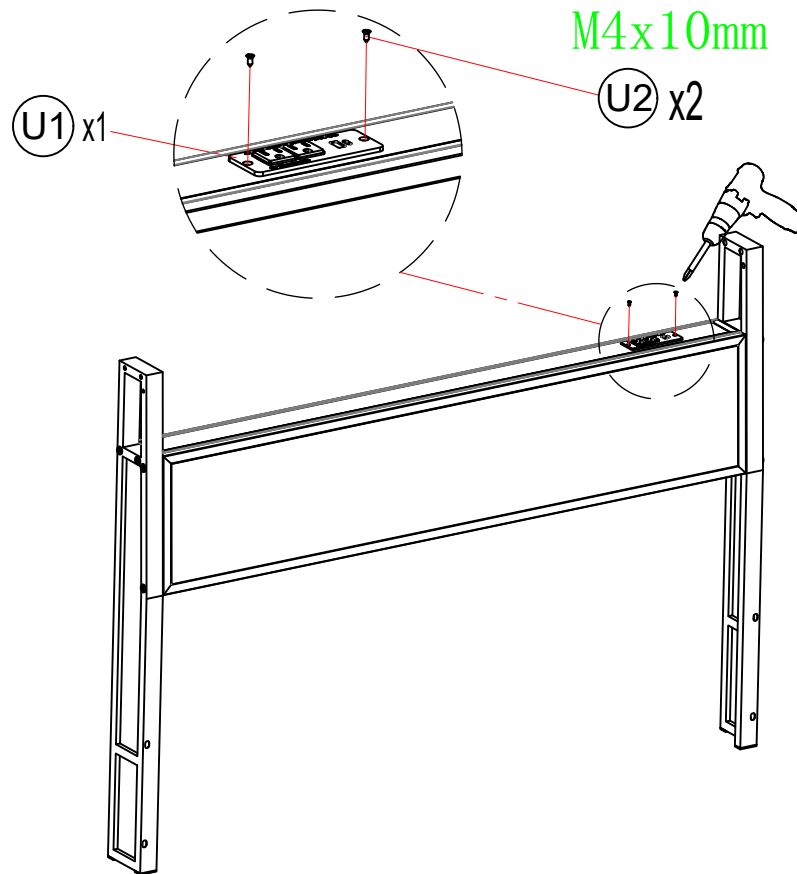


20

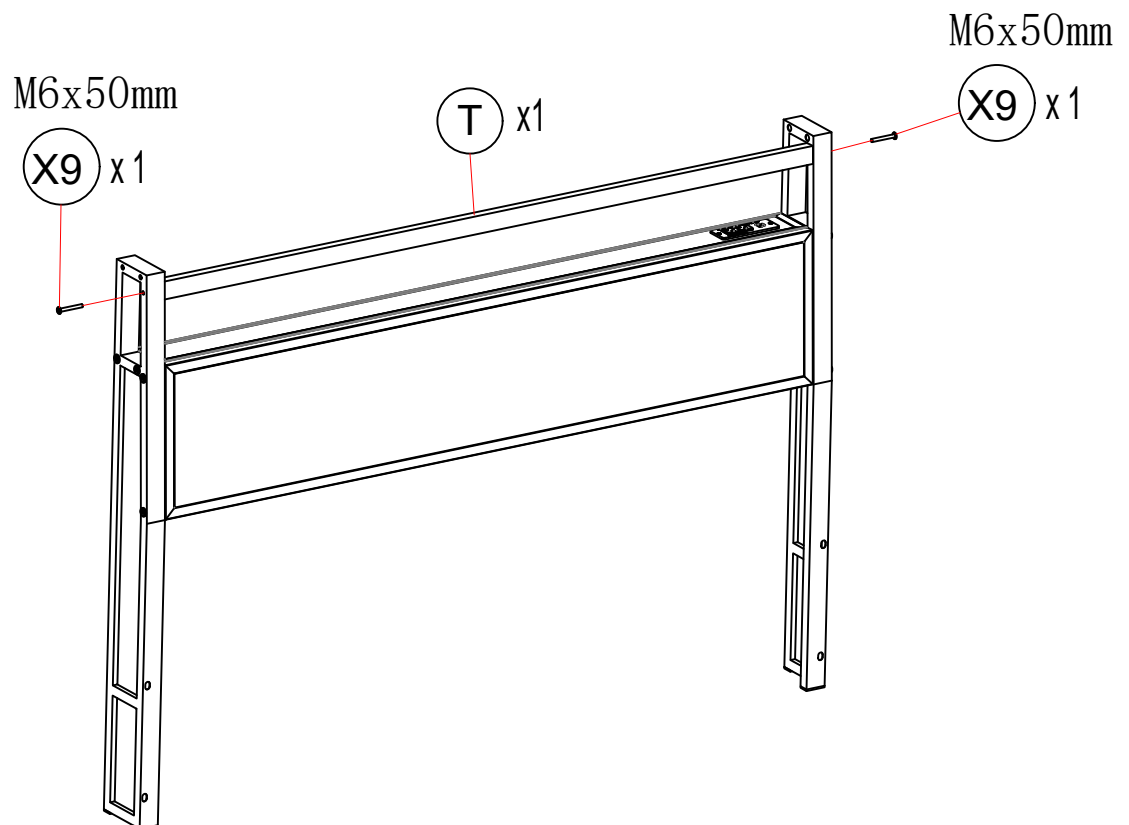


Tear off the double-sided adhesive tape on W3


21

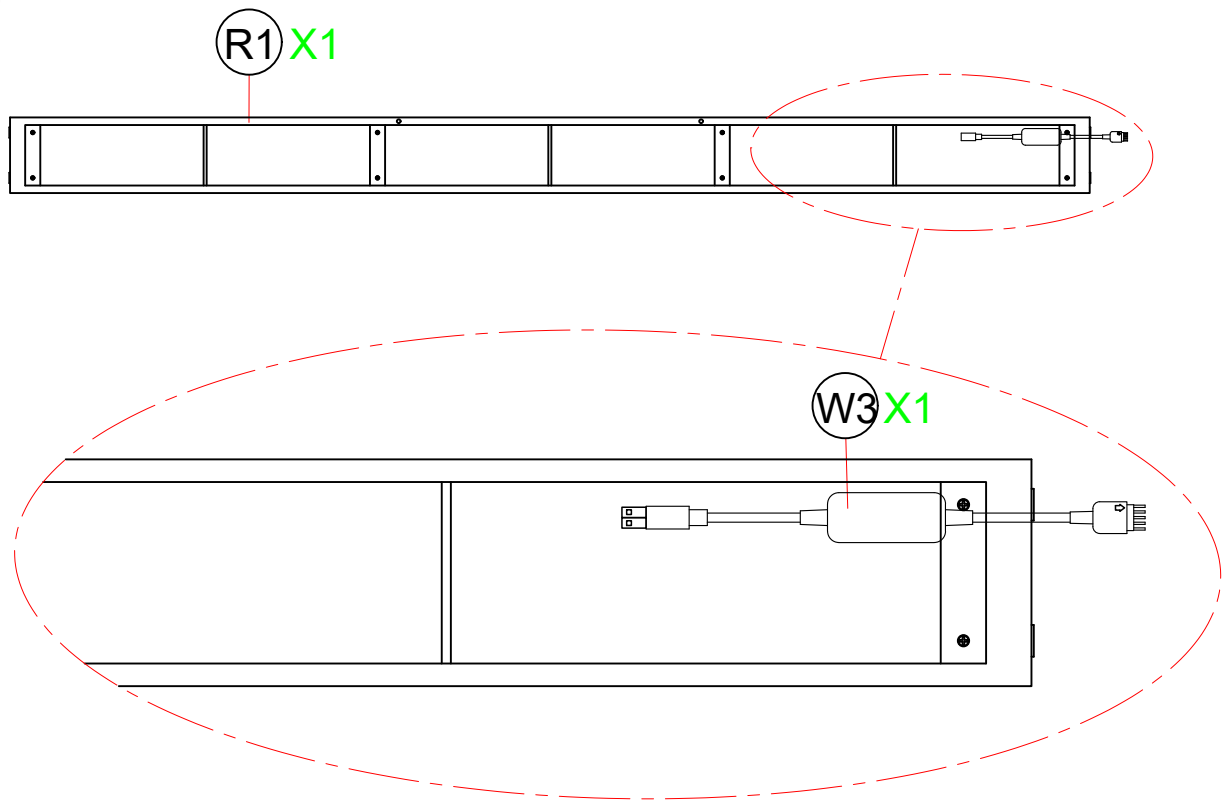


22

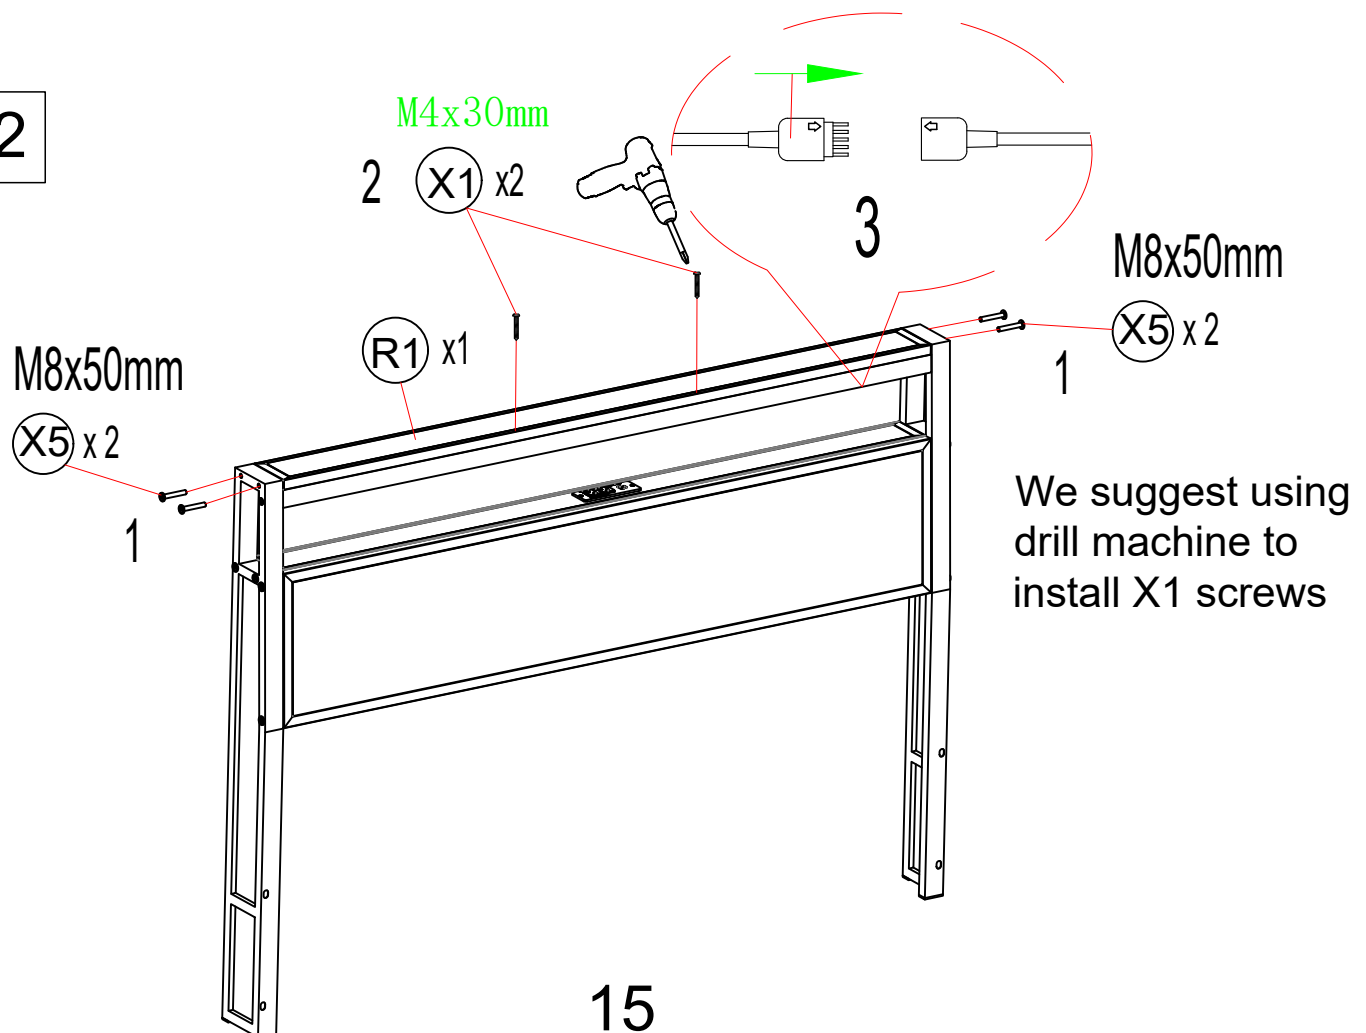


23

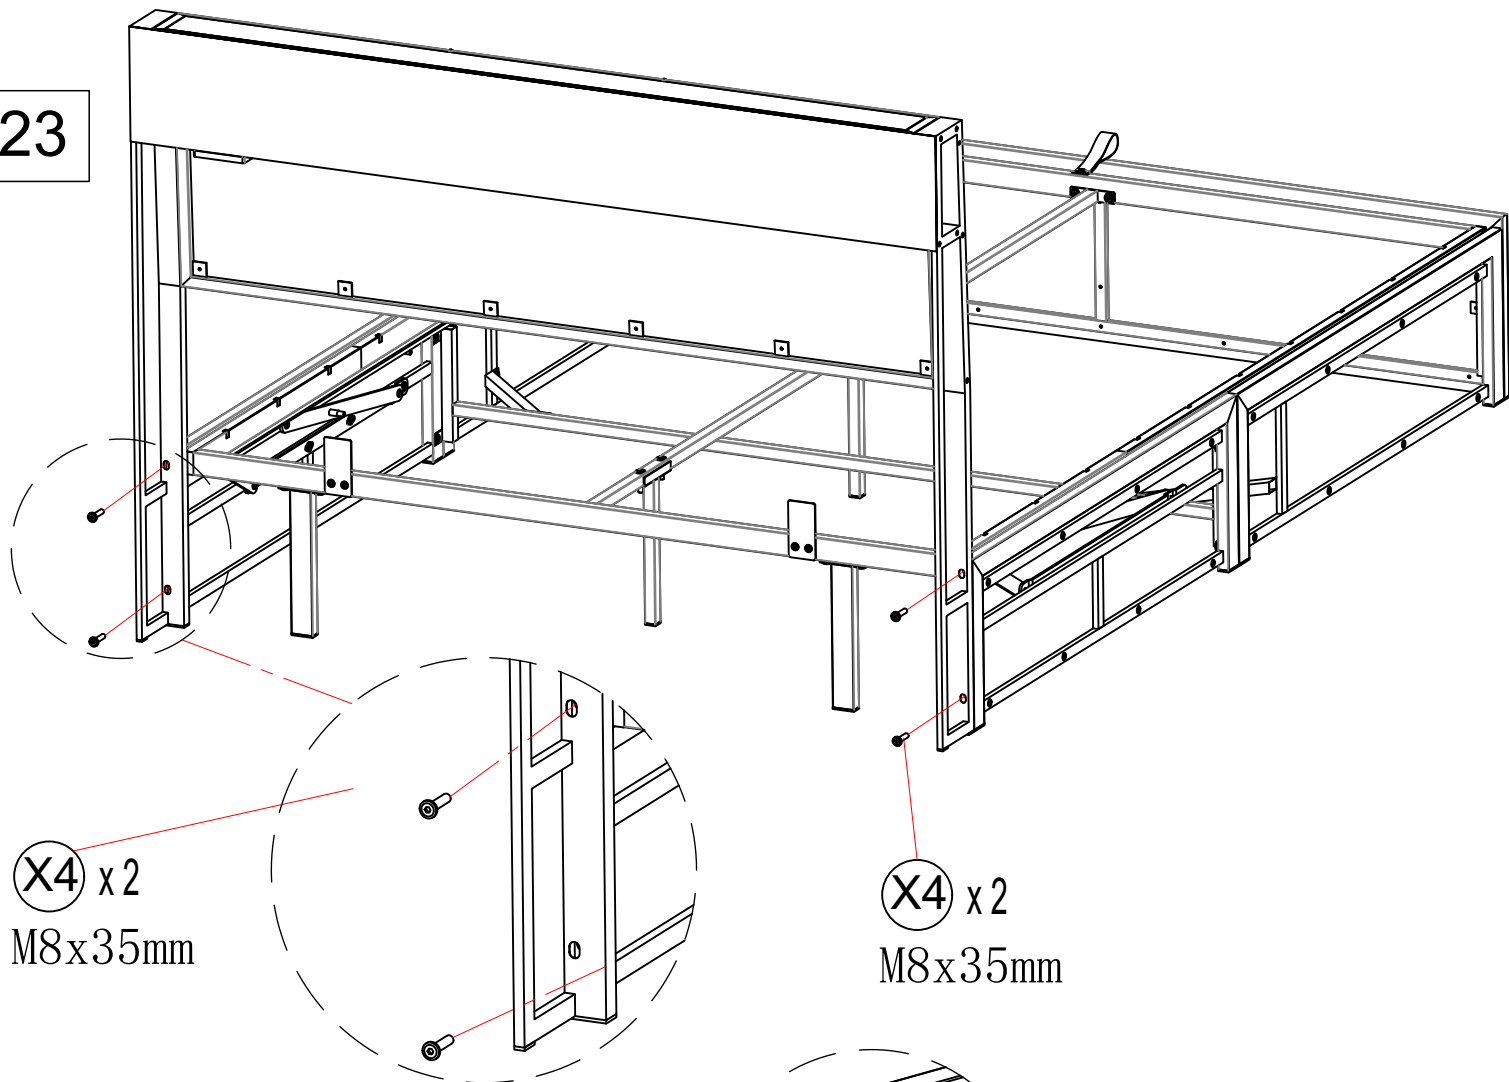


24

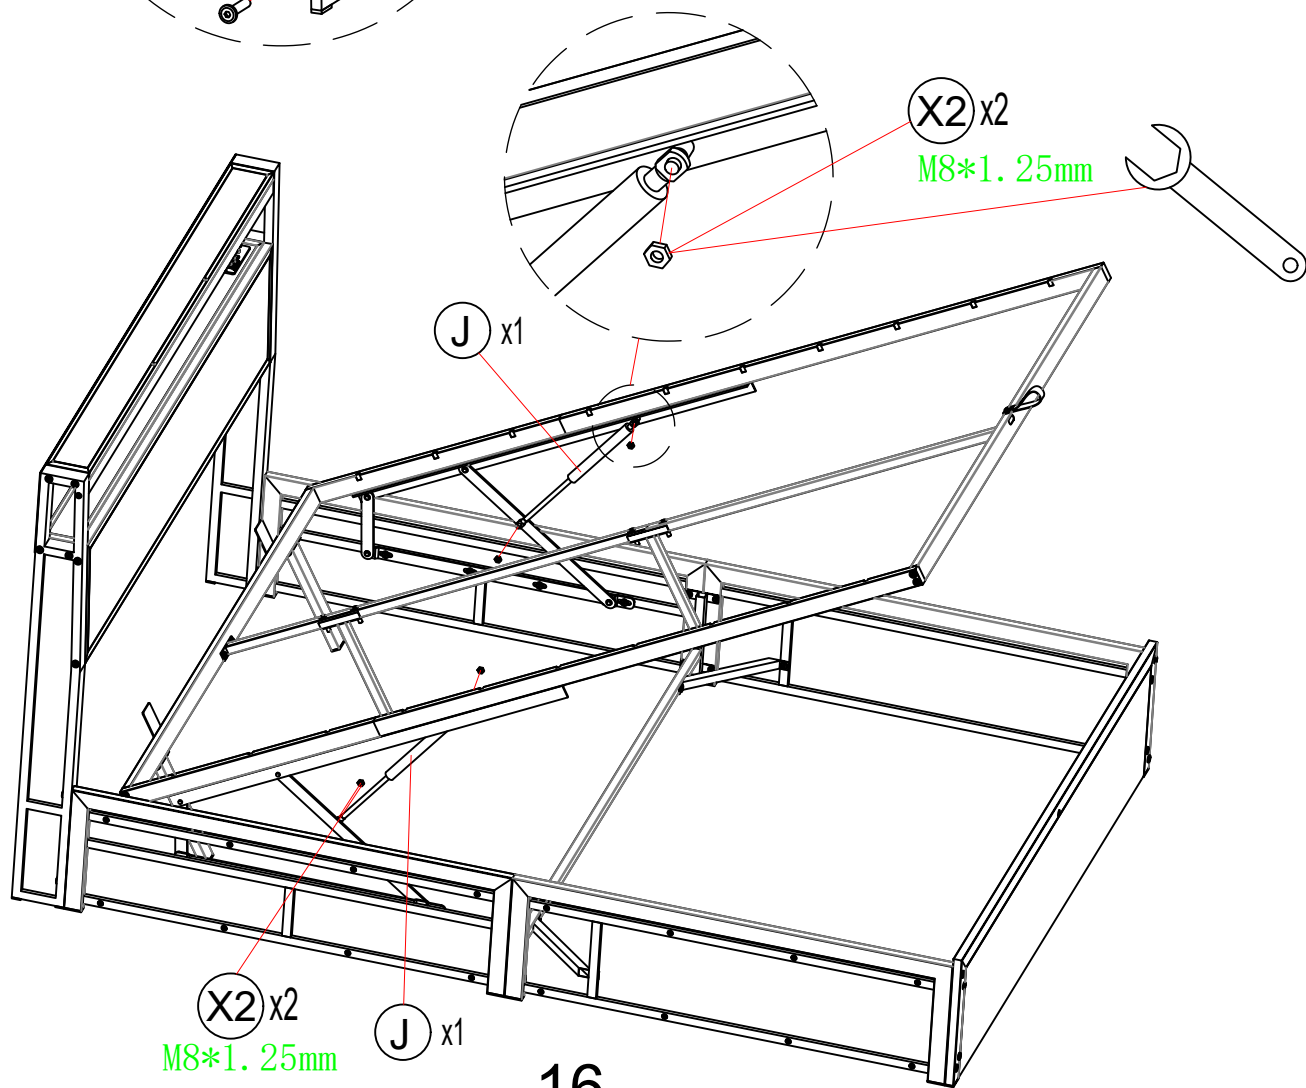

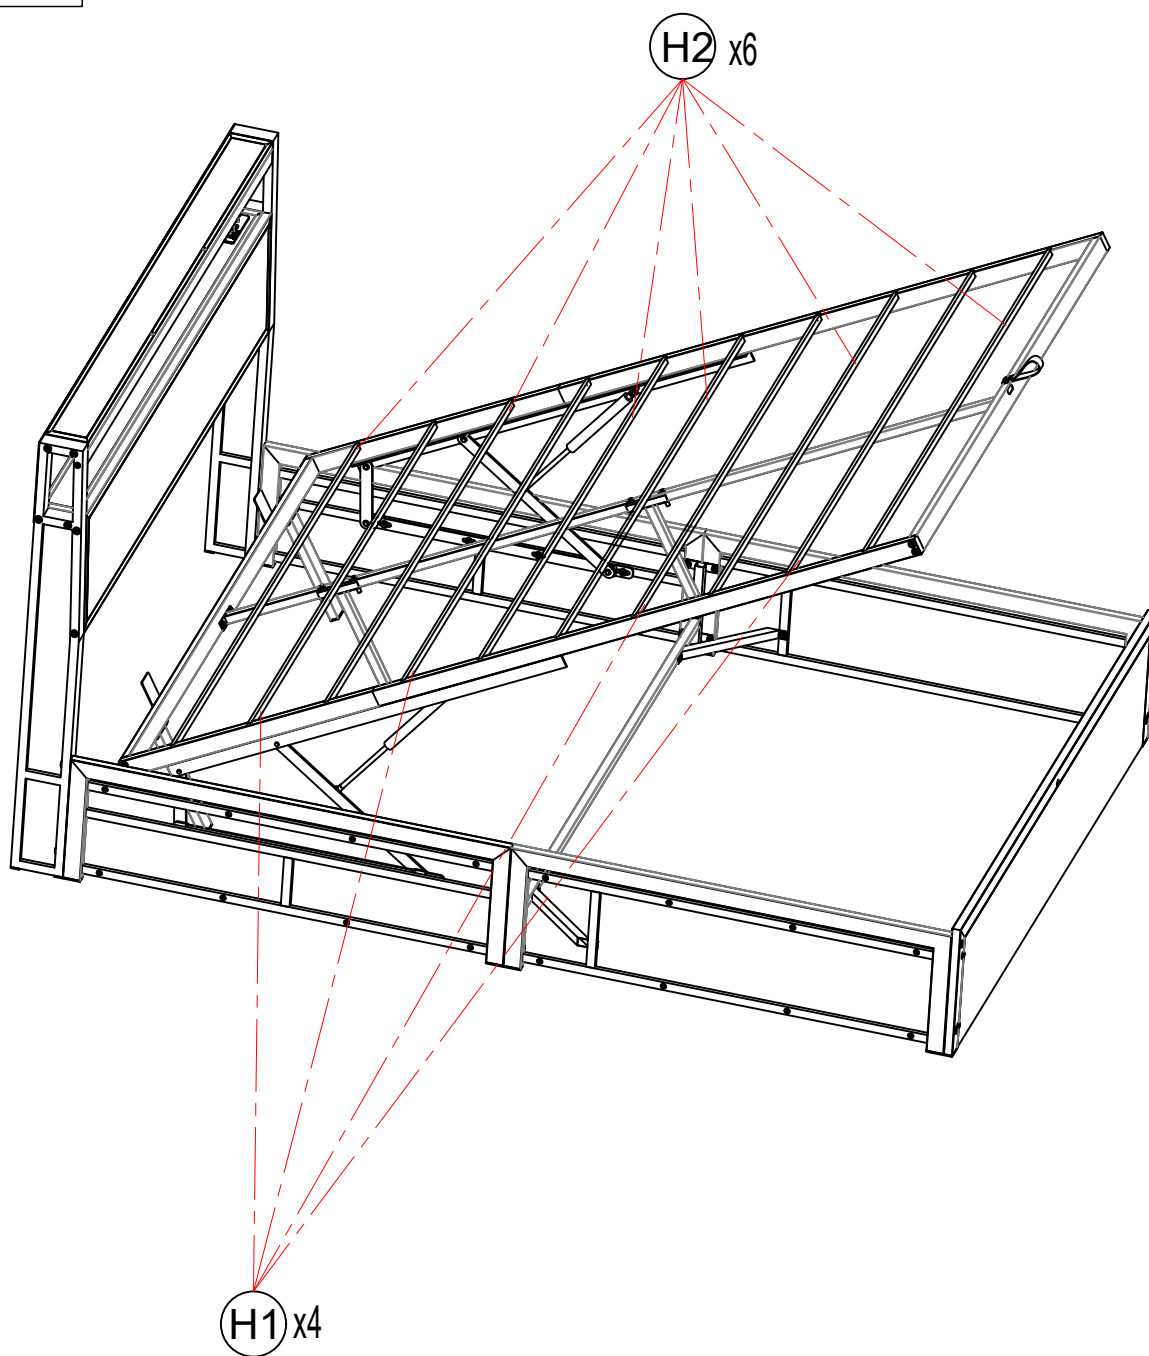

Tear off the double-sided adhesive tape before place the mattress.

We recommend placing the mattress on the bed frame first so that you can close the frame more smoothly

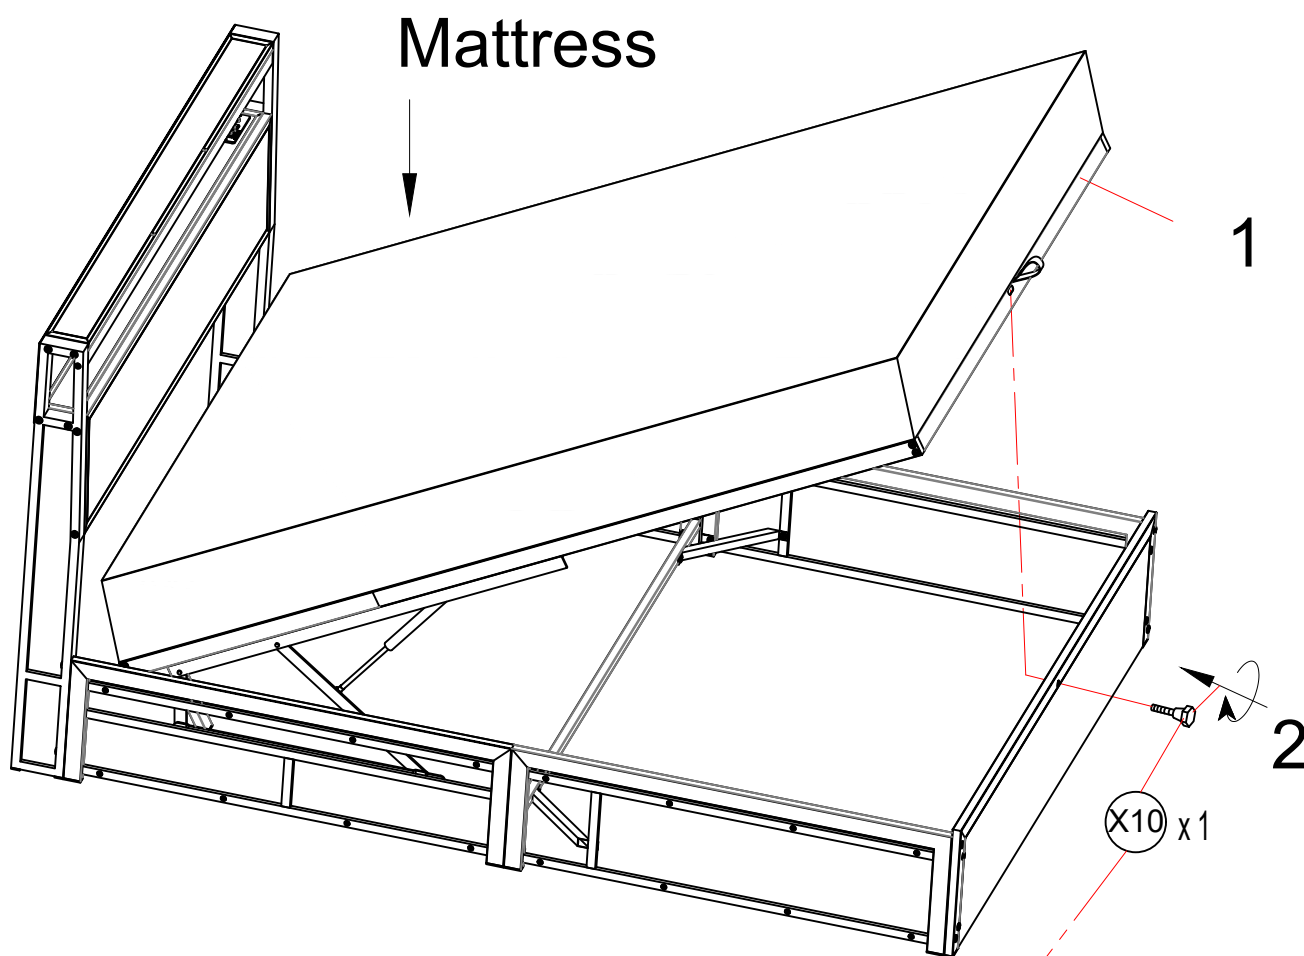

X10 prevents the bed frame from turning up suddenly.

RGB(W) CONTROLLER

