

Adventure Starts Here.


ADIRONDACK 52" BENCH

SEAHAWK
DESIGNS


EST. 2005

! NOTICE

- Do not overtighten hardware.
- Do not exceed the weight capacity of this item.
- Only use this item for what it is intended for, improper use will void any warranty.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are firmly secured every 90 days.
- Keep this furniture clear of all uncontrolled open flames or flammable/combustible materials.
Exposure to fire, high heat, or embers will permanently damage the material.
- To avoid stripping and cracking of the material, DO NOT use power tools for assembly.
- Always prioritize caution and safety throughout the assembly process.

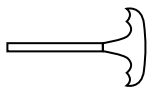TOOLS REQUIRED

ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



**CHECK PARTS
& HARDWARE
FIRST***



**SUGGESTED
2 PERSON
ASSEMBLY**



**ESTIMATED
ASSEMBLY
TIME: 30 MIN**

*For missing parts or hardware, please email cs@seahawkdesigns.com.

1

SCREW
M6 x 40mm



6 PCS

2

SCREW
M6 x 80mm



2 PCS

3

SCREW
M6 x 90mm



10 PCS

4


BOLT
M6 x 55mm



4 PCS

5


BOLT
M6 x 65mm



6 PCS

6

BOLT
M6 x 70mm



1 PC

7

M6-NUT



11 PCS

8

M6-WASHER



11 PCS

9

SCREW HOLE PLUG
I



23 PCS

10


SCREW HOLE PLUG
II



4 PCS

A


BENCH SEAT

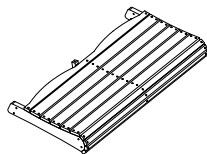

1 PC

B


BENCH BACKREST

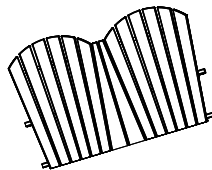

1 PC

C


LEFT FRONT LEG

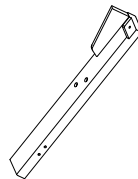

1 PC

D


RIGHT FRONT LEG

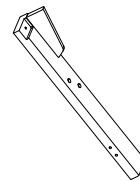

1 PC

E


LEFT REAR LEG



1 PC

F


RIGHT REAR LEG



1 PC

G


LEFT ARMREST



1 PC

H


RIGHT ARMREST

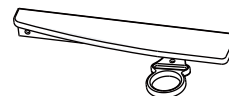

1 PC

I


CUP HOLDER

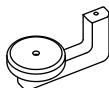

2 PCS

J


SIDE RAIL I



1 PC

K


BOTTOM RAIL

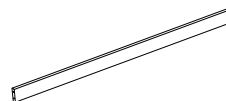

1 PC

L

SIDE RAIL II




1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

REF#: OP2149


Please refer back to this image during the assembly process for part placement.

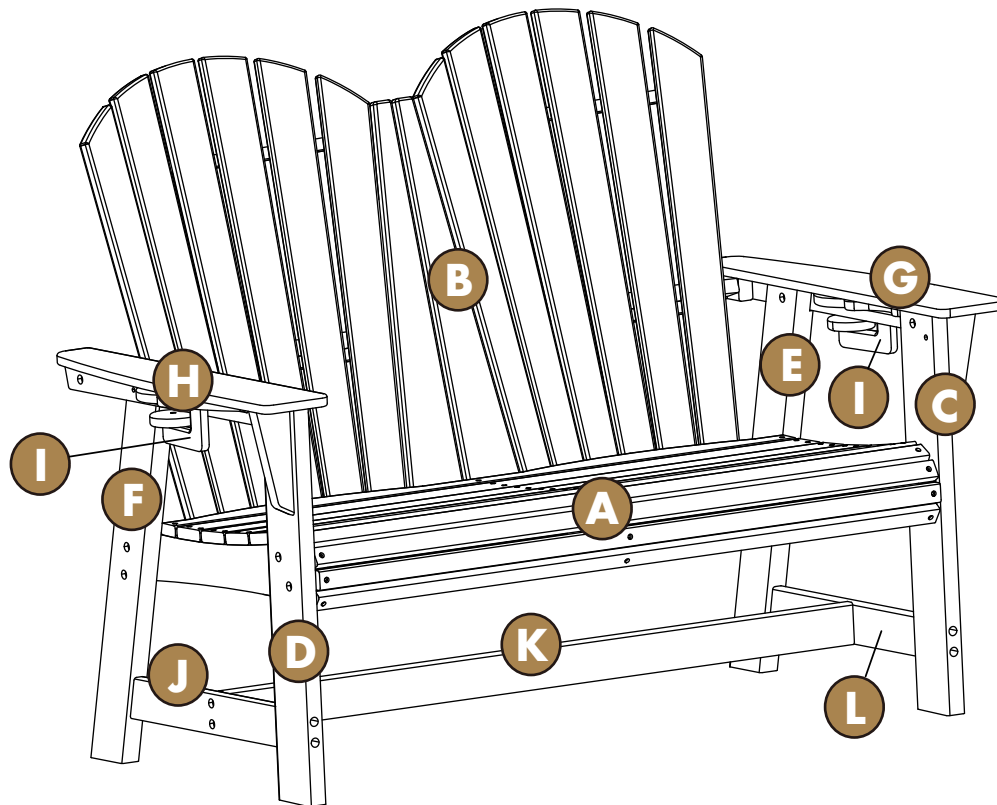

1

Step 1: Assemble the Side Rail and the Bench Legs


- Attach **Part J (Side Rail I)** to **Part D (Right Front Leg)** and **Part F (Right Rear Leg)** using **4 - M6 Screw (#3)** (see image below).
- Do the same to attach **Part L (Side Rail II)** to **Part C (Left Front Leg)** and **Part E (Left Rear Leg)** (see image below).
- Do not fully tighten the bolts yet. Tighten them to approximately 70% to allow for adjustments during final assembly.

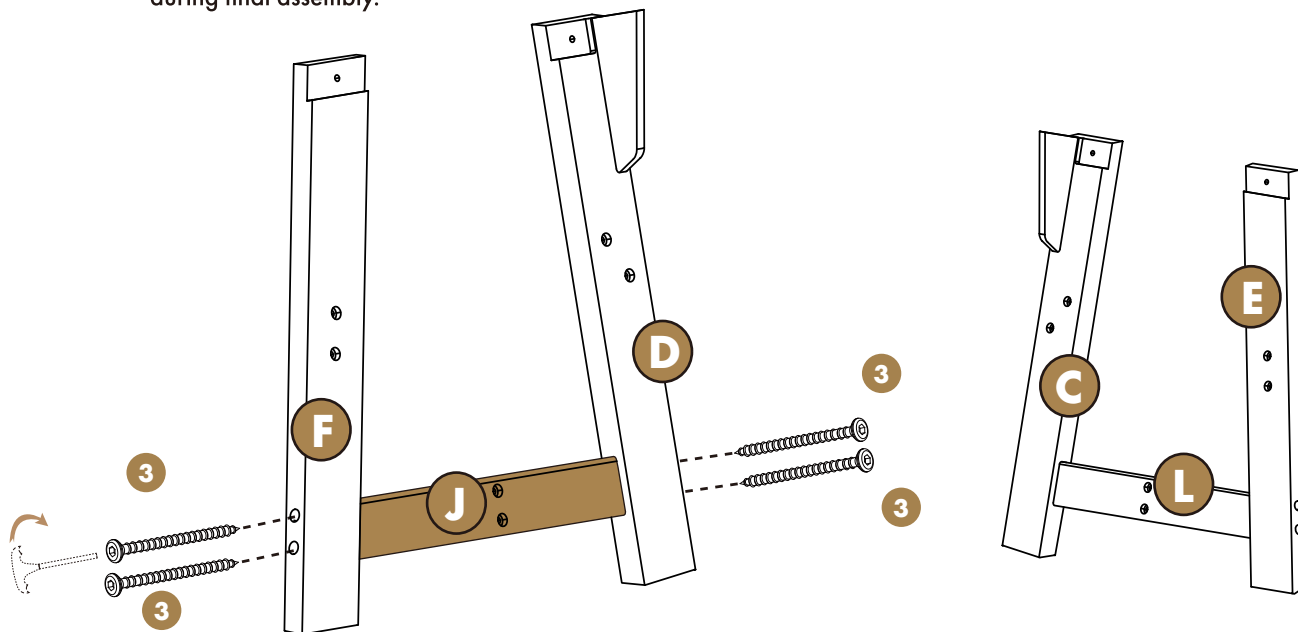

2

Step 2: Attach the Assembled Right Legs to the Bench Seat


- Attach the **Assembled Right Legs (Part D, Part J and Part F)** to **Part A (Bench Seat)** using **3 - sets** of the **M6 Bolt (#5)**, **M6 Washer (#8)** and **M6 Nut (#7)** (see image below).

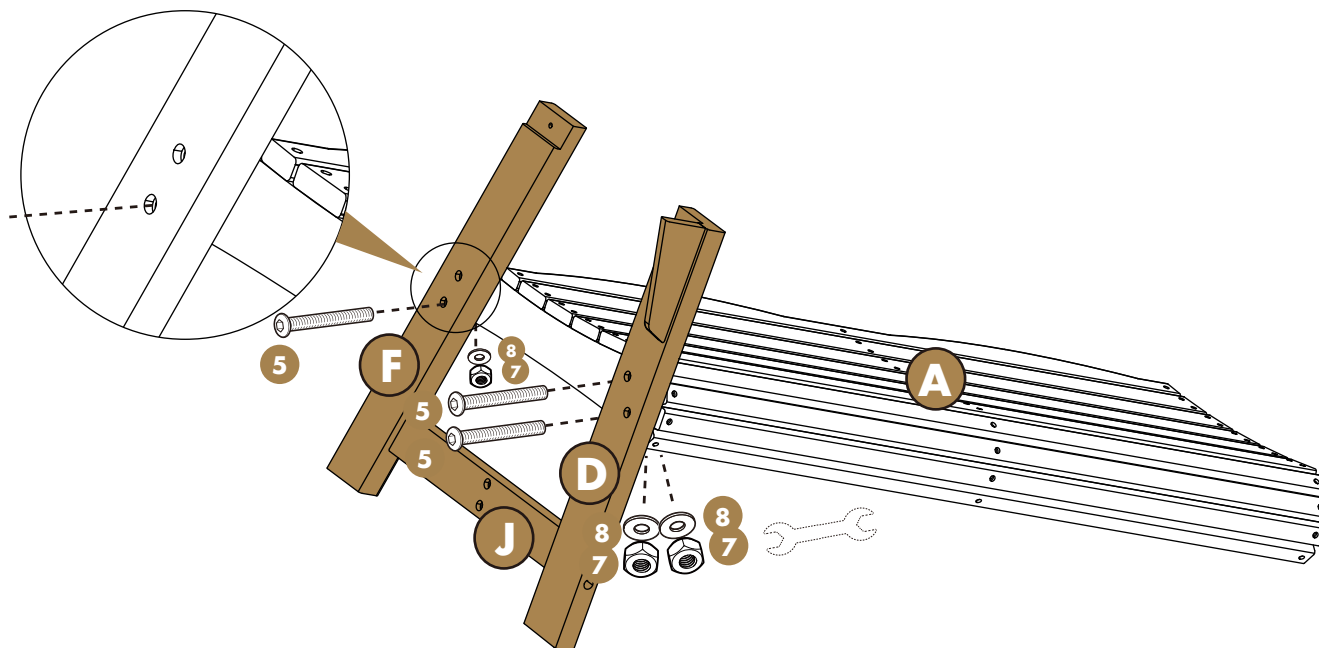

3

Step 3: Attach the Assembled Left Legs to the Bench Seat


- Mirror the previous step (Step 2) to attach the **Assembled Left Legs (Part C, Part L and Part E)** to **Part A (Bench Seat)** (see image below).

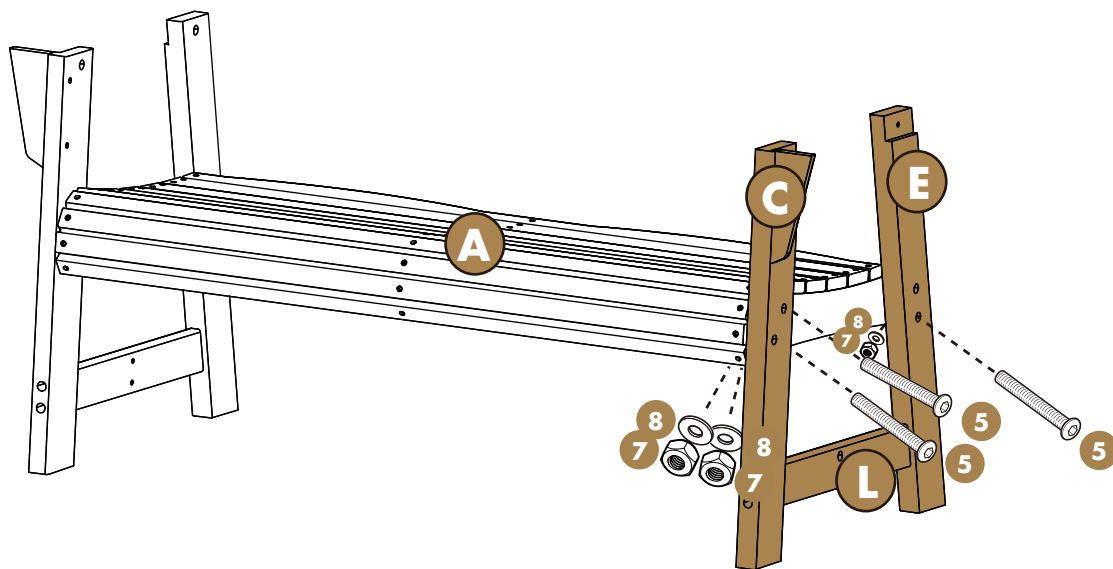

4

Step 4: Attach the Bottom Rail to the Side Rails



- Place **Part K (Bottom Rail)** between **Part J (Side Rail I)** and **Part L (Side Rail II)** and attach them using **4 - M6 Screw (#1)** (see image below).

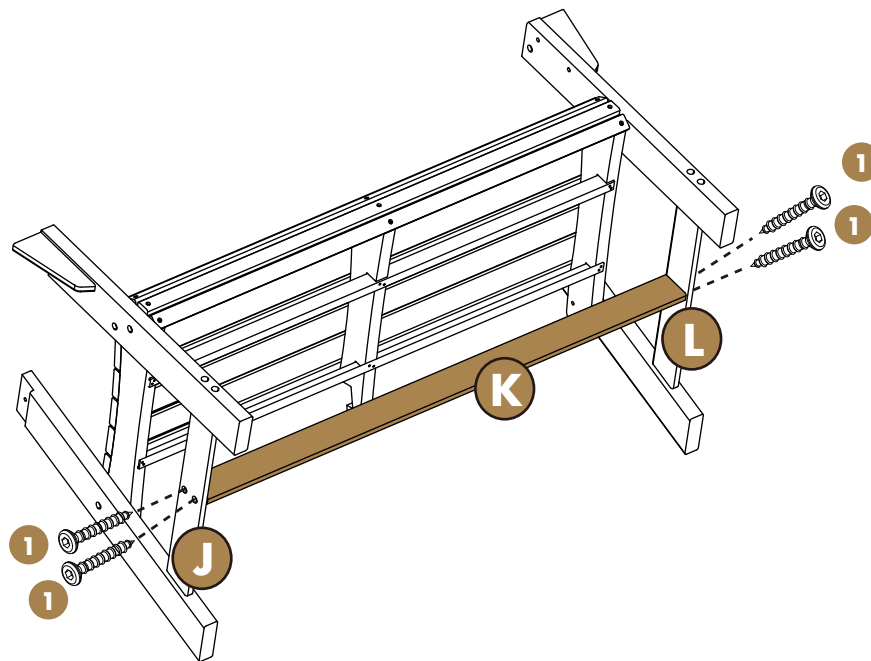

5

Step 5: Attach the Cup Holder to the Armrest


- Attach **Part I (Cup Holder)** to the bracket on **Part H (Right Armrest)** using **1 - M6 Screw (#1)** (see image below).
- Do the same to assemble another **Part I (Cup Holder)** to the bracket on **Part G (Left Armrest)**.

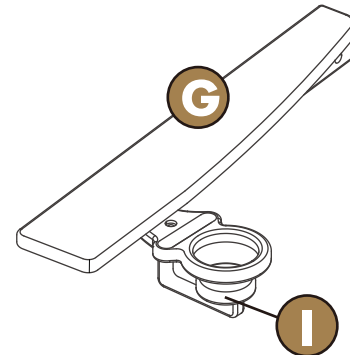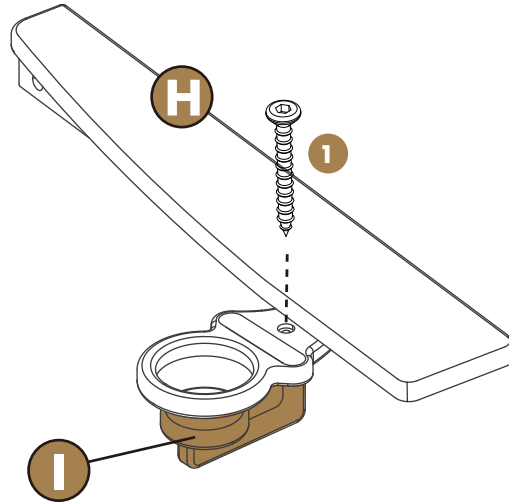

6

Step 6: Attach the Right Armrest to the Legs


- Attach **Part H (Right Armrest with Cup Holder)** unit to **Part D (Right Front Leg)** and **Part F (Right Rear Leg)**. This requires **2 - sets** of the **M6 Bolt (#4)**, **M6 Washer (#8)**, and **M6 Nut (#7)** (see image below).

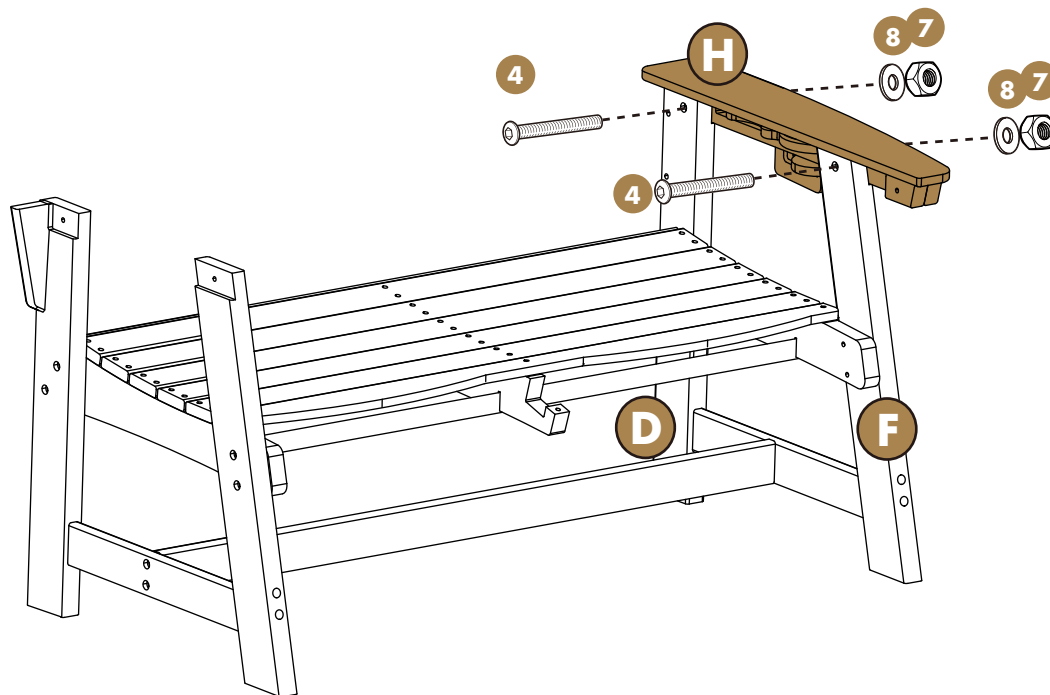

7

Step 7: Attach the Left Armrest to the Bench


- Mirror the previous step (Step 5) on the opposite side to attach **Part G (Left Armrest with Cup Holder)** unit to the **Left Chair Legs (Part E and Part C)**. This requires **2 - sets** of the **M6 Bolt (#4)**, **M6 Washer (#8)**, and **M6 Nut (#7)** (see image below).

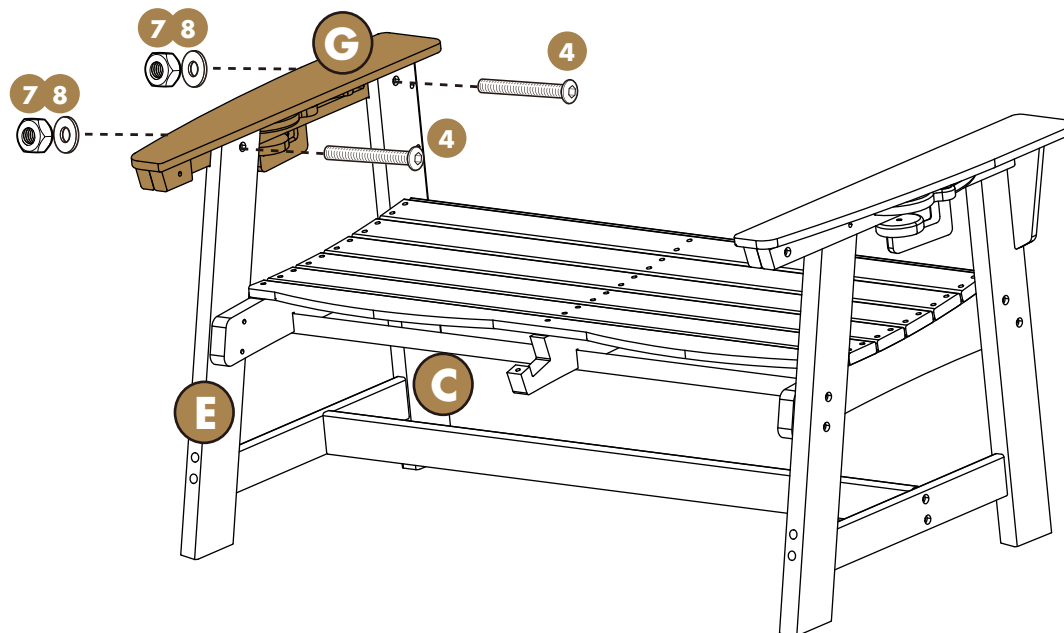

8

Step 8: Attach the Backrest to the Assembled Frame


- Attach **Part B (Bench Backrest)** to the assembled frame. Use **2 - M6 Screw (#2)**, **2 - M6 Screw (#3)** and **1 - set of M6 Bolt (#6), M6 Washer (#8) and M6 Nut (#7)** to secure it (see image below).

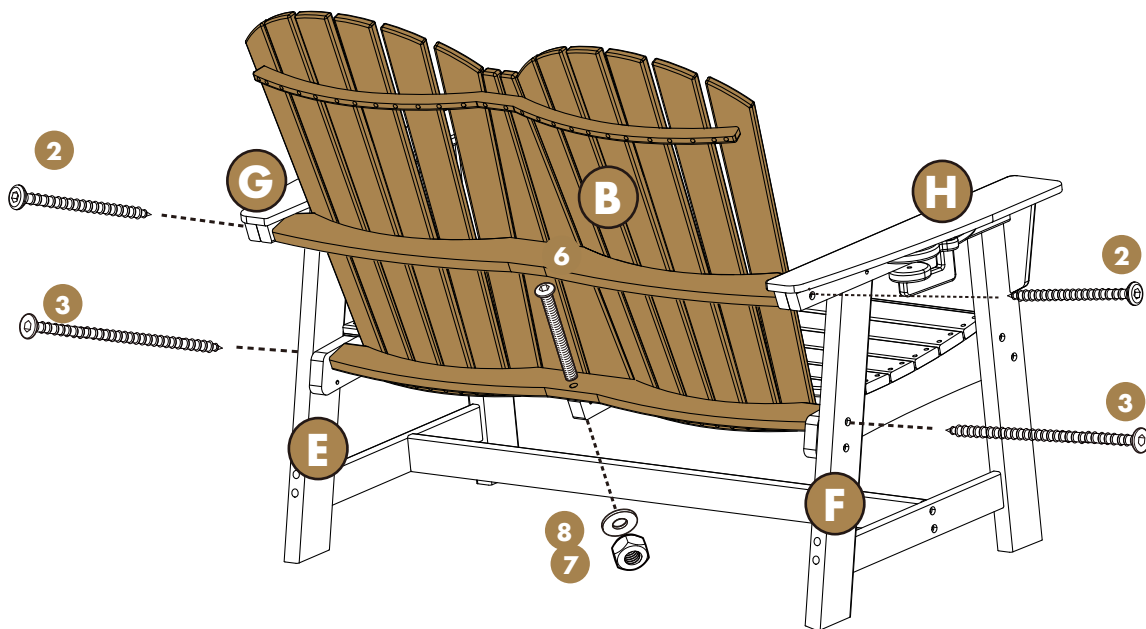

9

Step 9: Final Tightening and Stability Check

- Tighten all previously installed screws, bolts, and nuts. Check every connection to ensure the bench is steady and stable.

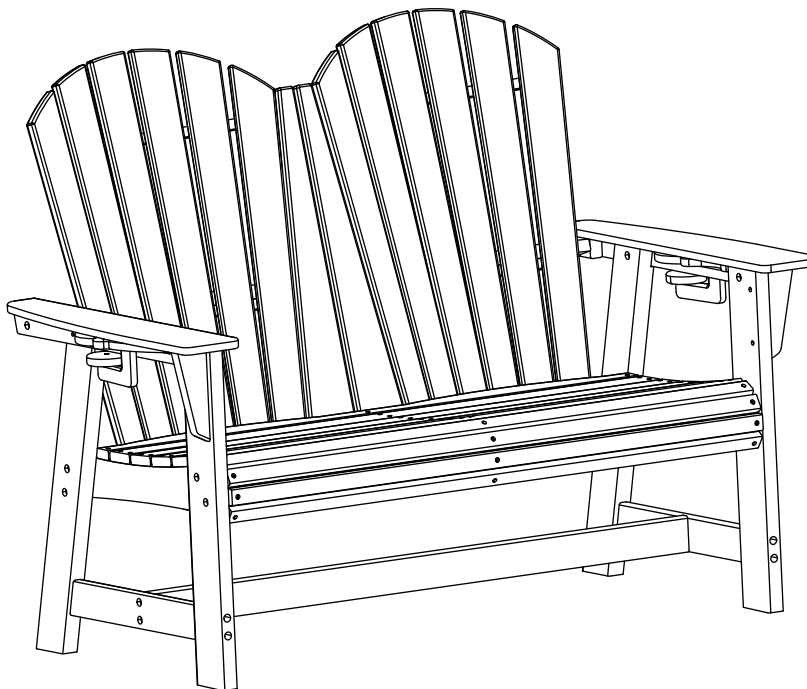


10

Step 10: Apply Screw Hole Plugs

- Cover all exposed screw holes using **23 - Screw Hole Plug (#9)**. Insert all plugs into the exposed screw holes. Gently tap each plug into place using a rubber mallet to prevent damage. Ensure each plug is fully seated and flush with the chair surface (see image below).

ATTENTION: Do not use a metal hammer as it will damage the poly lumber.

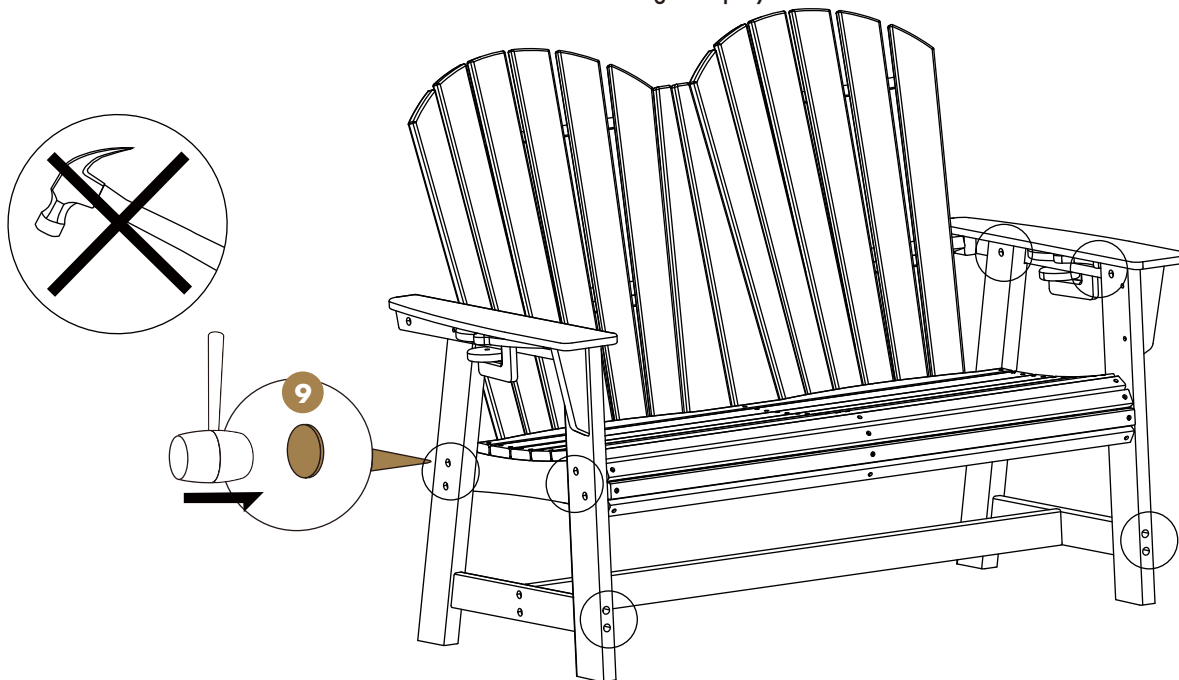


11

Step 11: Apply Screw Hole Plugs

- Cover screw holes on side rails using **4 - Screw Hole Plug (#10)**. Insert all plugs into the exposed screw holes. Gently tap each plug into place using a rubber mallet to prevent damage. Ensure each plug is fully seated and flush with the chair surface (see image below).

ATTENTION: Do not use a metal hammer as it will damage the poly lumber.

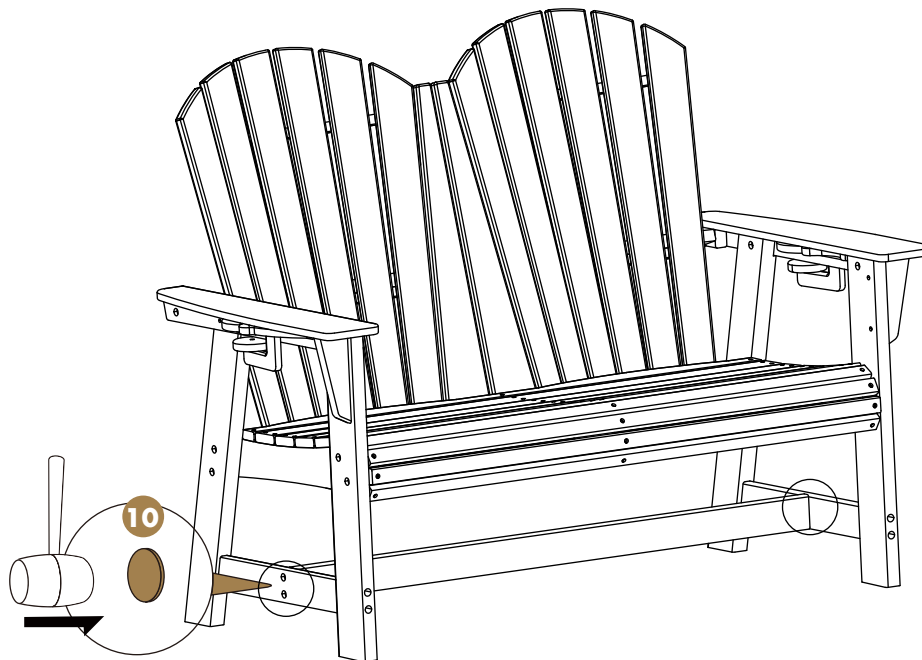

- **REGULAR CLEAN:** Mix **warm water** and **mild soap**. Use **a soft bristle brush** to gently scrub the surface and remove any dirt or stains.
- **QUICK CLEAN:** Simply wipe the furniture down using a damp cloth.

Tip: Cleaning your furniture regularly helps maintain its aesthetic appeal and extends its lifespan.

Enjoy!

Join our community and be the first to see what's new!

Follow us on socials:



Quickly register your outdoor furniture purchase to activate your warranty and enjoy peace of mind with guaranteed product protection:



Have questions or need assistance? Reach out to our dedicated team at **(909) 284-1052** or email us at **cs@seahawkdesigns.com**.