
INSTRUCTION MANUAL

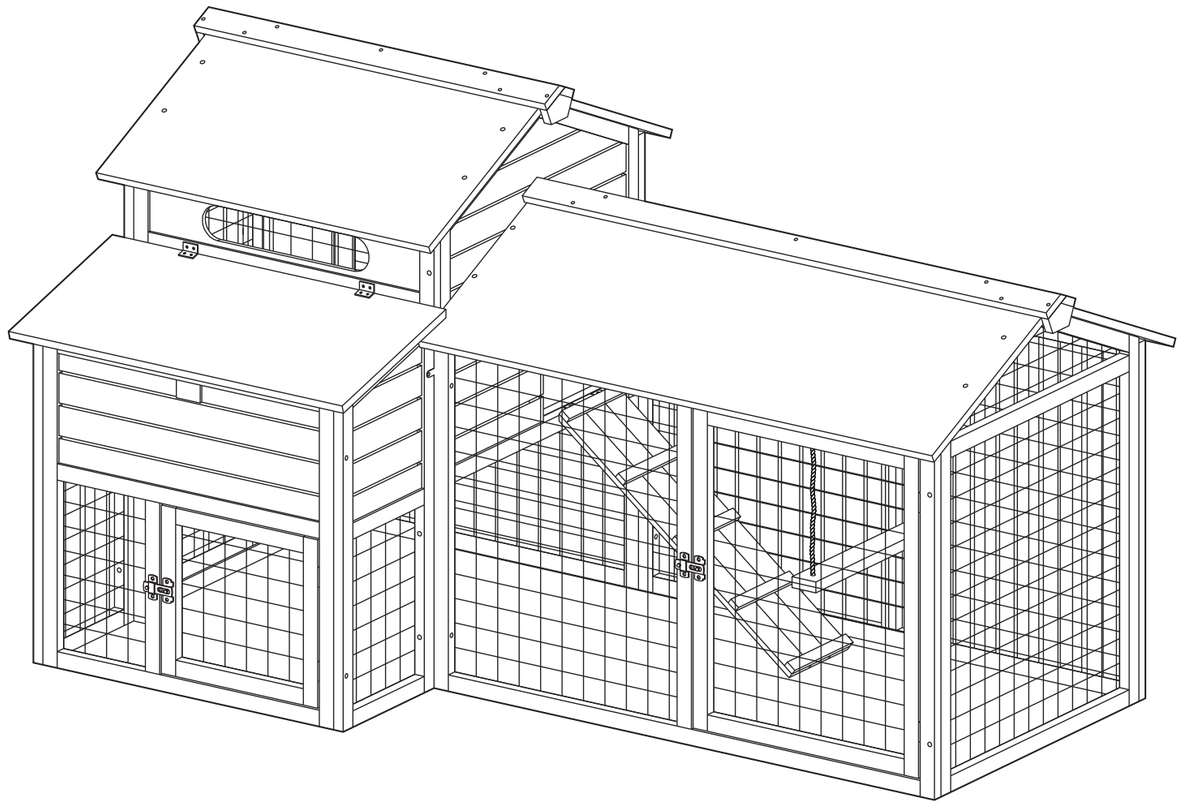

CHICKEN COOP

Scan the QR code to view the video tutorial

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

⚠ NOTICE

Please retain these instructions for future reference

1. Firmly secure all bolts, screws and knobs before use.
2. Reconfirm that all bolts, screws, and knobs are secure every 90 days.
3. Fasten screws loosely during initial assembly.
   Do not fully tighten screws until the item is completely assembled.
4. Do not use or store this item in the proximity of open flame or flammable chemicals.
5. Be aware that some parts are heavy and have sharp edges.
6. Be aware that moving parts can injure,crush and cut.
7. If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made.
8. Do not use this item in a way inconsistent with the manufacturer' s instructions as this could void the product warranty.

TOOLS REQUIRED



SCREWDRIVER



DRILL




2 PERSON ASSEMBLY



APPROXIMATELY 50MIN ASSEMBLY


PARTS LIST

1

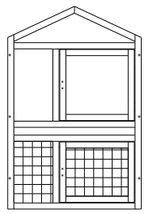


1PC

2

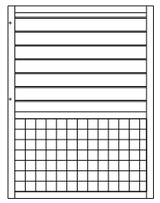


1PC

3

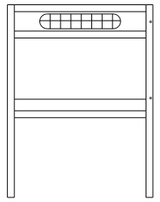


1PC

4

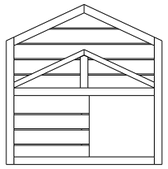


1PC

5

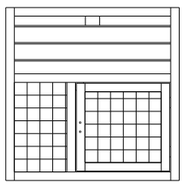


1PC

6

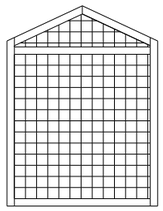


1PC

7

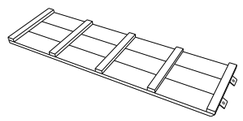


1PC

8

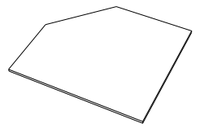


1PC

9

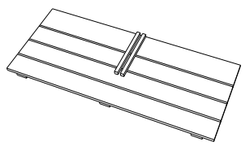


1PC

10

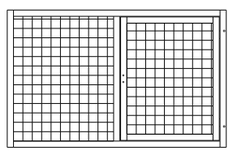


1PC

11

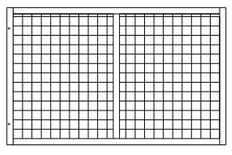


1PC

12

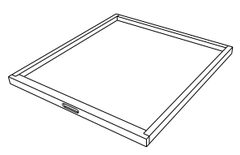


1PC

13



1PC

14



1PC

15




1PC

16



1PC

17

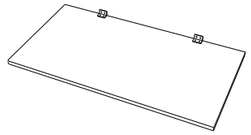

1PC

18




2PCS

19




1PC

20




1PC

21




2PCS

22




1PC

23

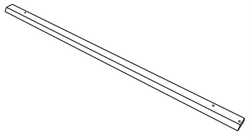


1PC

24




1PC

25



1PC

26



3PCS

27



2PCS

HARDWARE LIST

A

M3.5*50

(8+1)PCS

B

M3.5*40

(18+1)PCS

C

M3.5*30


(38+2)PCS

D

M3.0*16


(32+2)PCS

E




4PCS

F



1PC

G



4PCS

H




12PCS

ASSEMBLY

STEP 1


1 ×1
6 ×1
H ×4

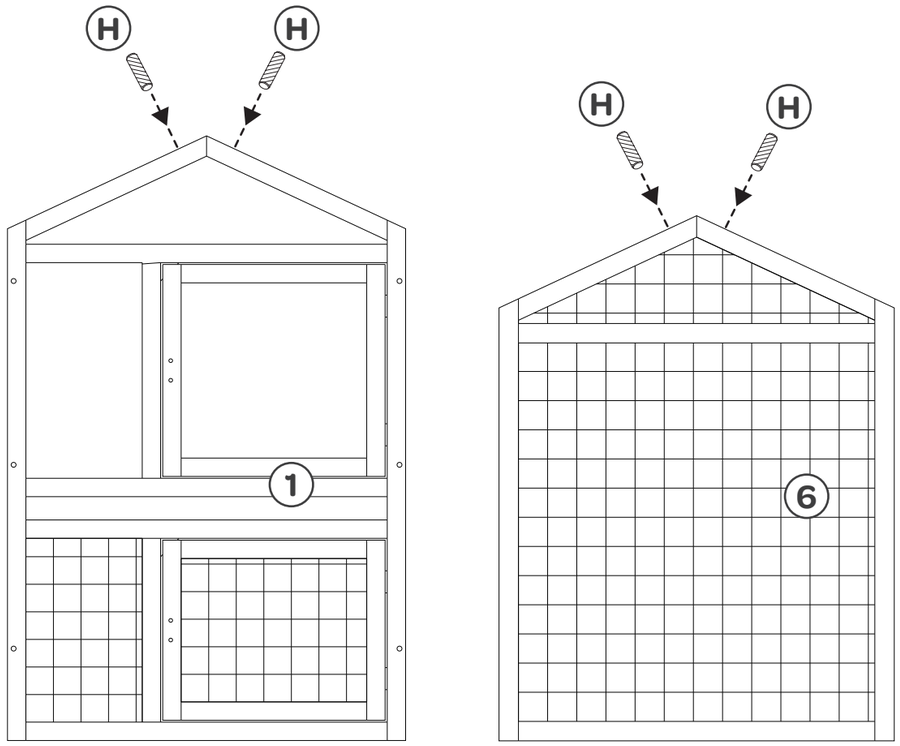

Insert 4 pcs of H wood cores into the side of the part 1 and 6 to facilitate subsequent positioning and fixation.

STEP 2


1 ×1
2 ×1
3 ×1
B ×6

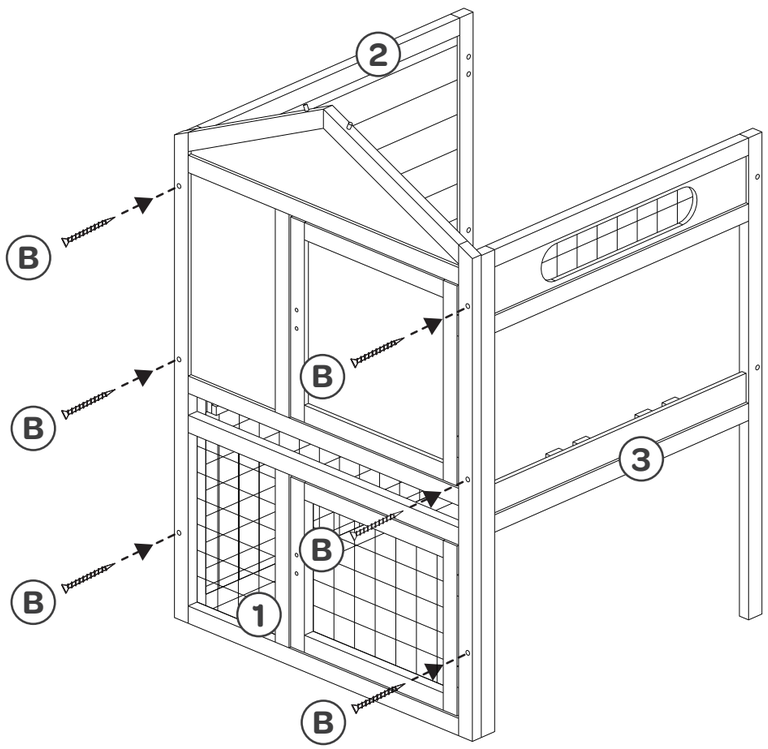

Attach the part 1 to the part 2 and 3 with 6 pcs of B screws.

STEP 3


4 ×1
H ×8

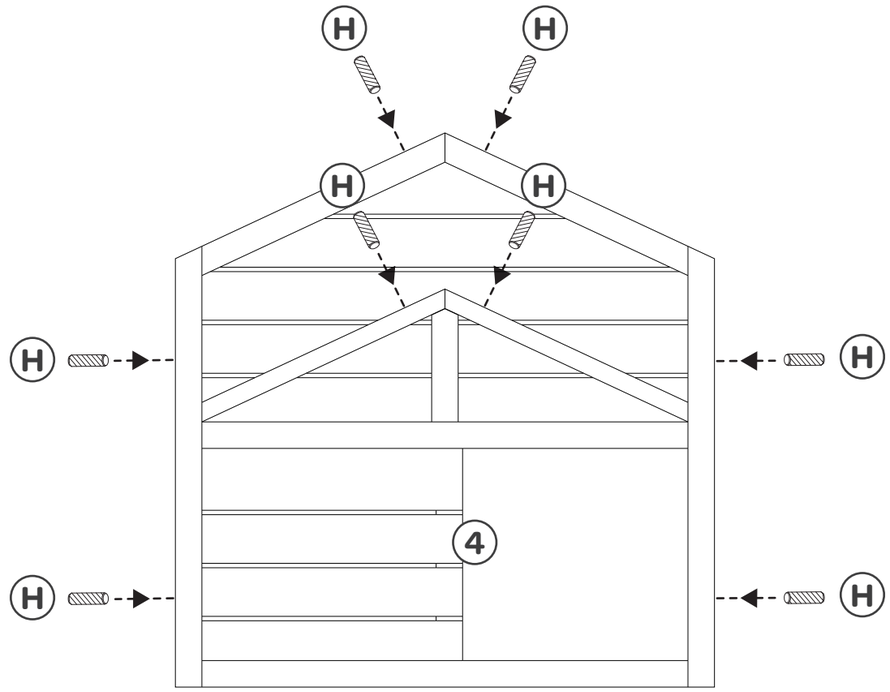

Insert 8 pcs of H wood cores into the side of the part 4 to facilitate subsequent positioning and fixation.

STEP 4


4 ×1
B ×4

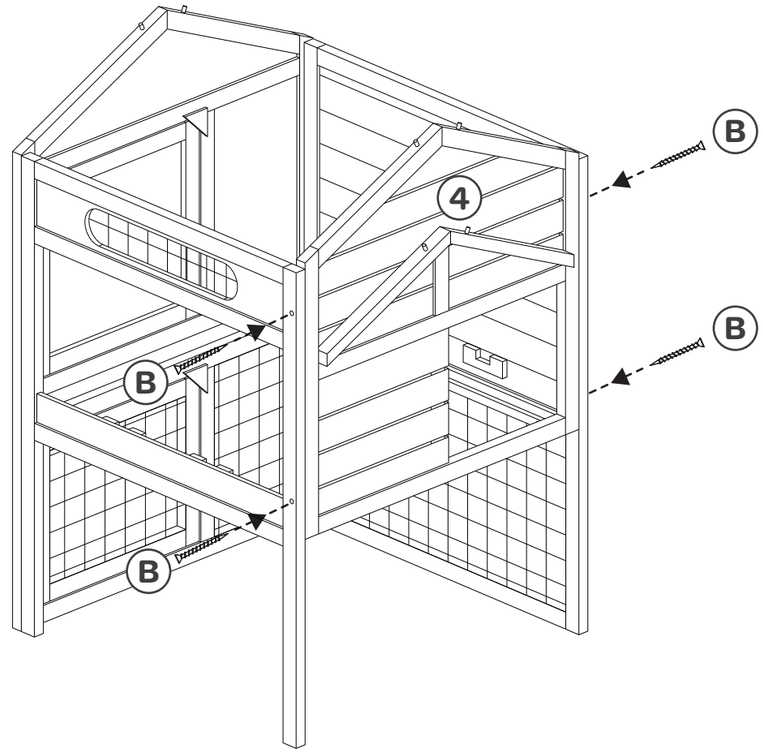

Attach the part 4 to the entire panel with 4 pcs of B screws.

STEP 5


7 ×1
21 ×2
D ×2

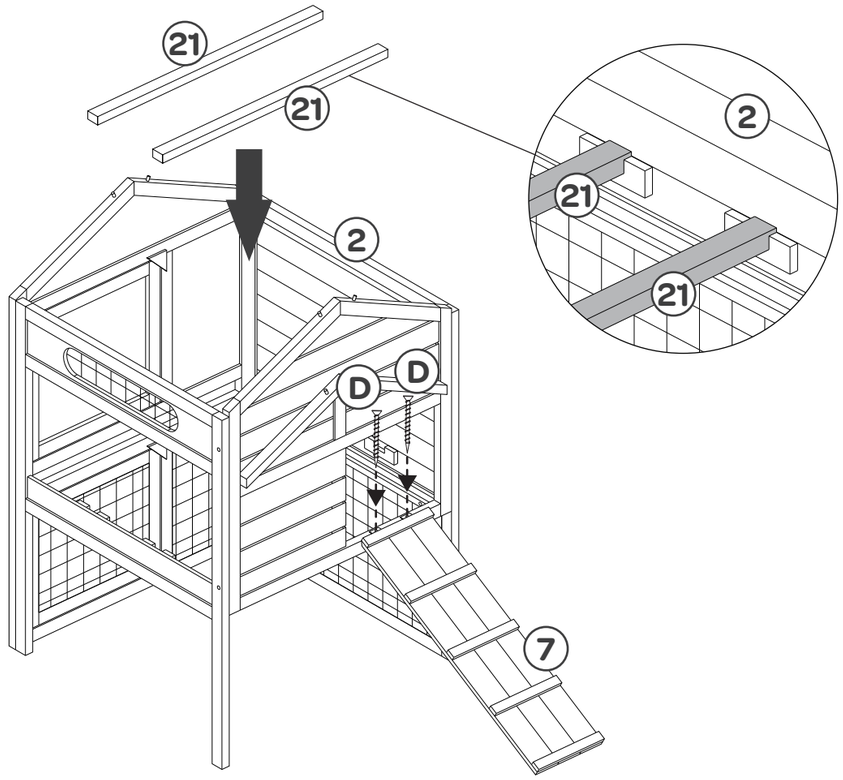

1. Insert 2 pcs of part 21 wooden beam into the side of part 2 and 3.
2. Place ramp 7 on the edge of part 4, and fix with 2 pcs of D screws.

STEP 6


13 ×1
A ×2
D ×2
G ×1

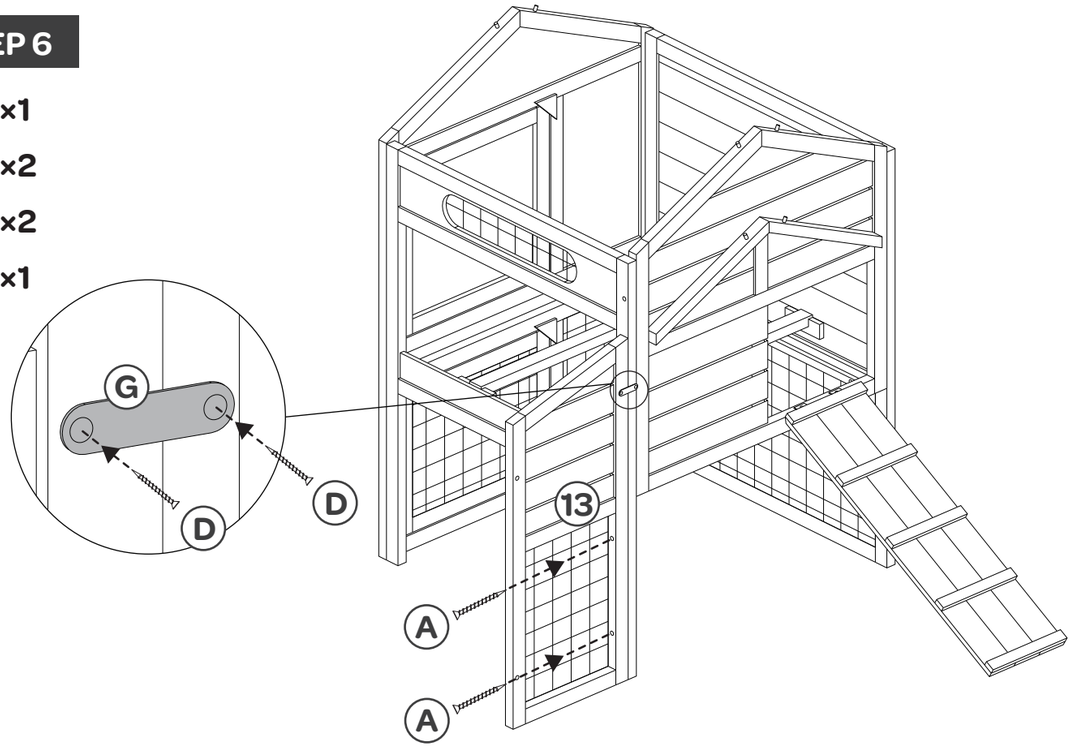

Attach the part 13 to the entire panel with 2 pcs of A screws, firmly fix the connecting part G with 2 pcs of D screws.
(Please note that this step should not be performed on the reserved hole position. It will have another use next.)

STEP 7


14 ×1
A ×2
D ×2
G ×1

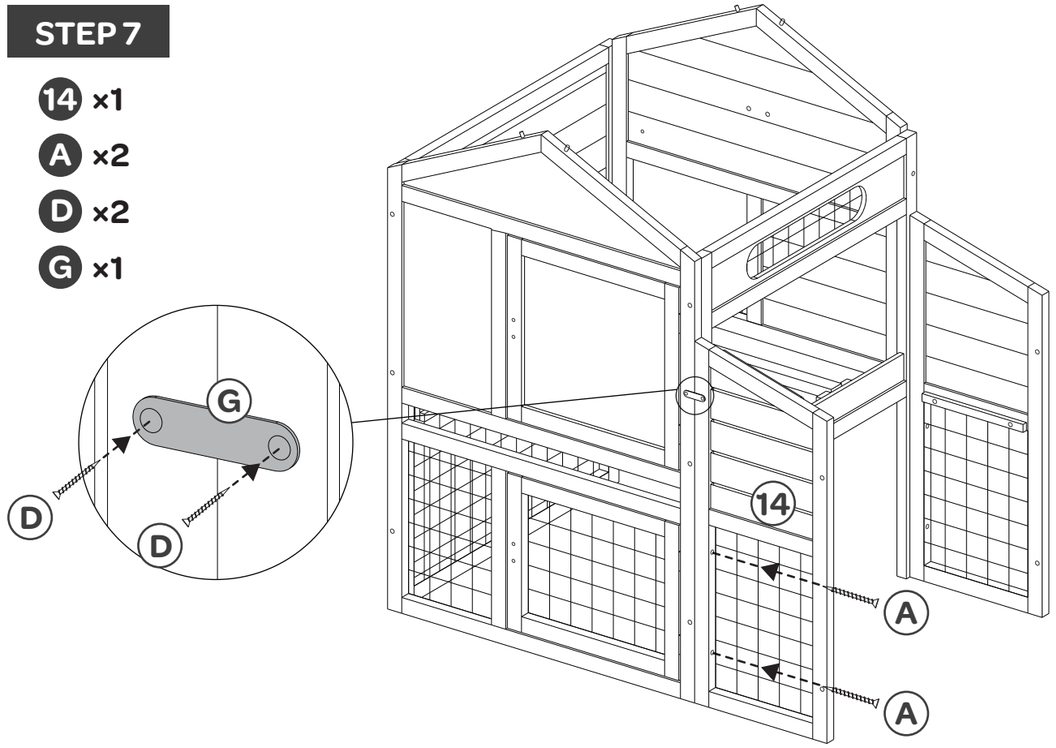

Attach the part 14 to the entire panel with 2 pcs of A screws, firmly fix the connecting part G with 2 pcs of D screws.
(Please note that this step should not be performed on the reserved hole position. It will have another use next.)

STEP 8


12 ×1
9 ×1

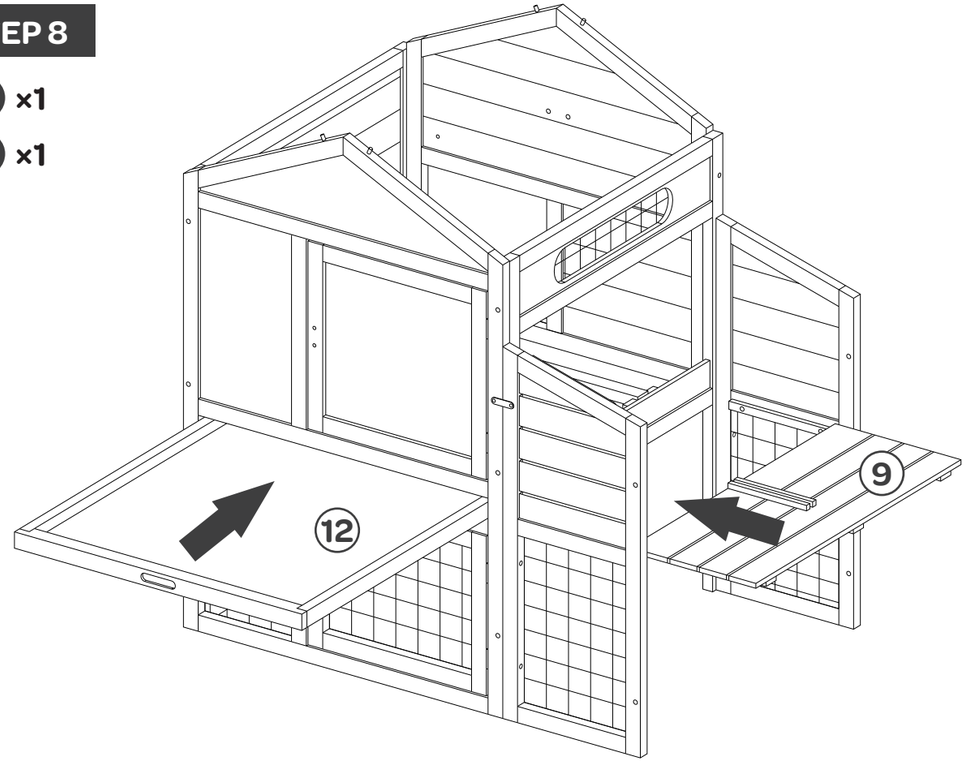

1. Insert the part 12 into the slot in the middle of part 1.
2. Insert the part 9 into the slot of the part 13 and 14.

STEP 9


5 ×1
8 ×1
B ×4

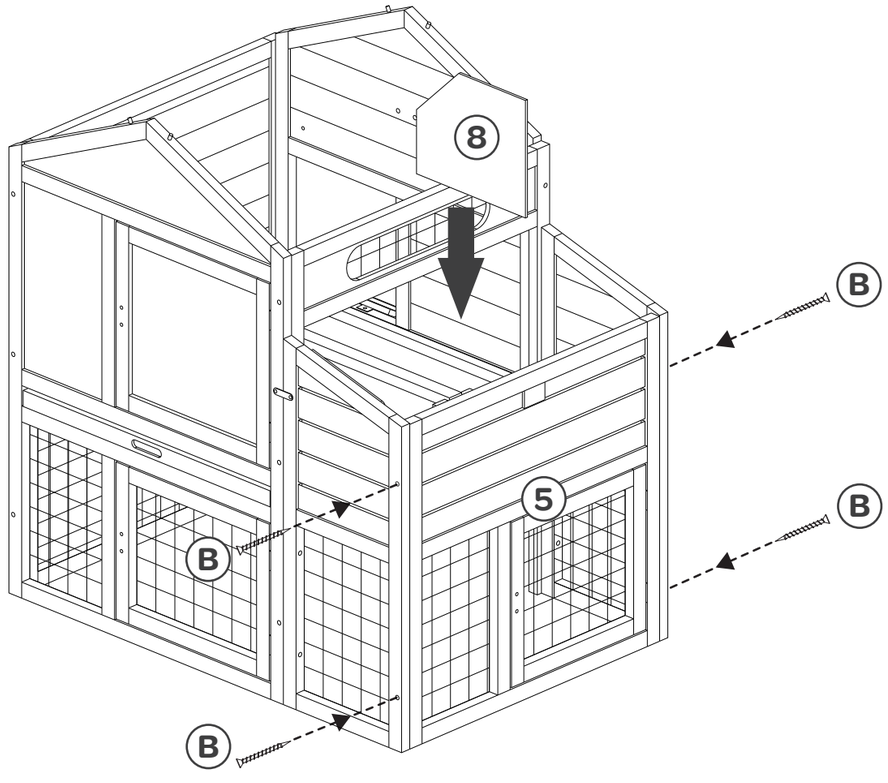

1. Attach the part 5 to the entire panel with 4 pcs of B screws.
2. Place the part 8 into the main body.

STEP 10


17 ×1
D ×8
F ×1

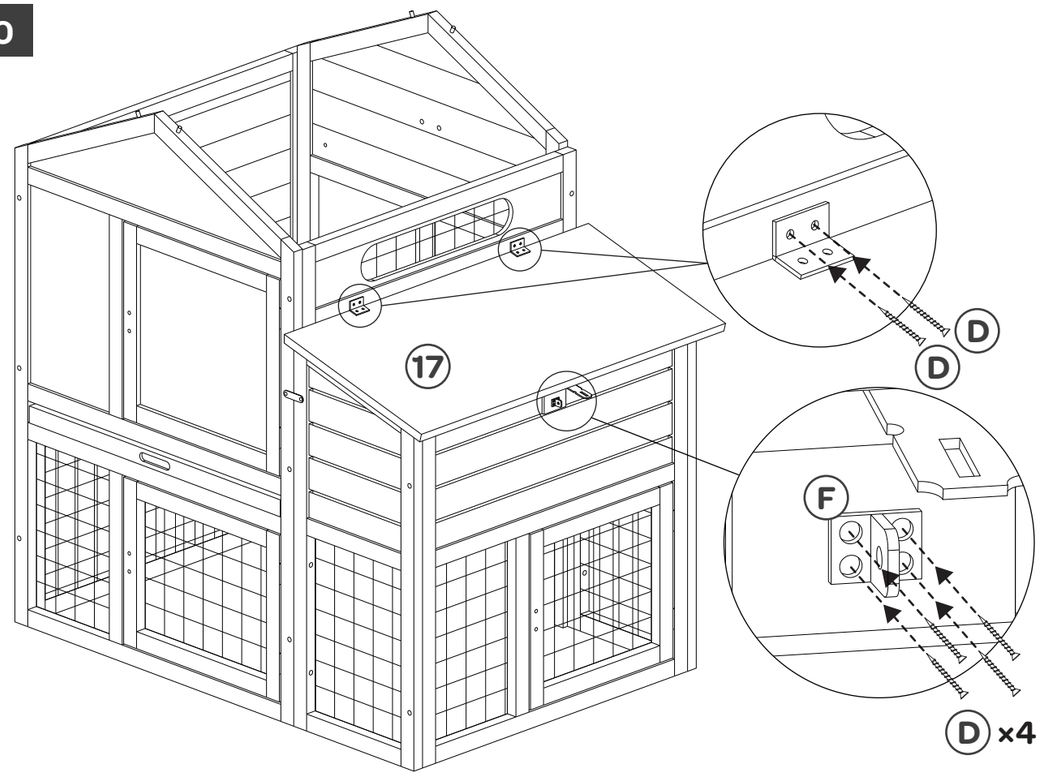

1. Attach the part 17 to the panel with 4 pcs of D screws.
2. Fix the part F hook with 4 pcs of D screws.

STEP 11


10 ×1
A ×2

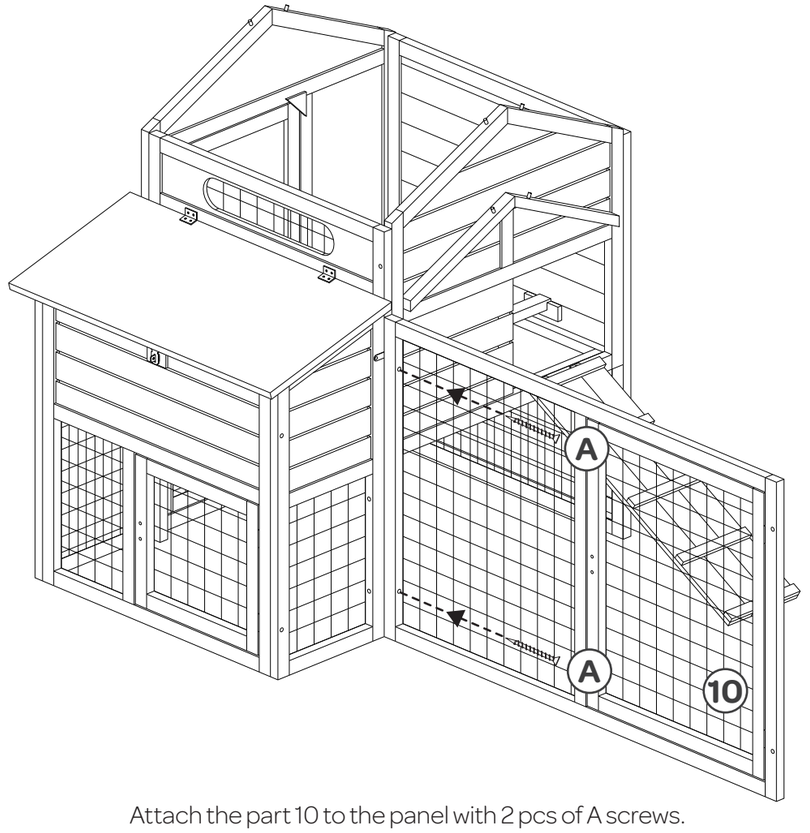

Attach the part 10 to the panel with 2 pcs of A screws.

STEP 12

11 ×1
A ×2

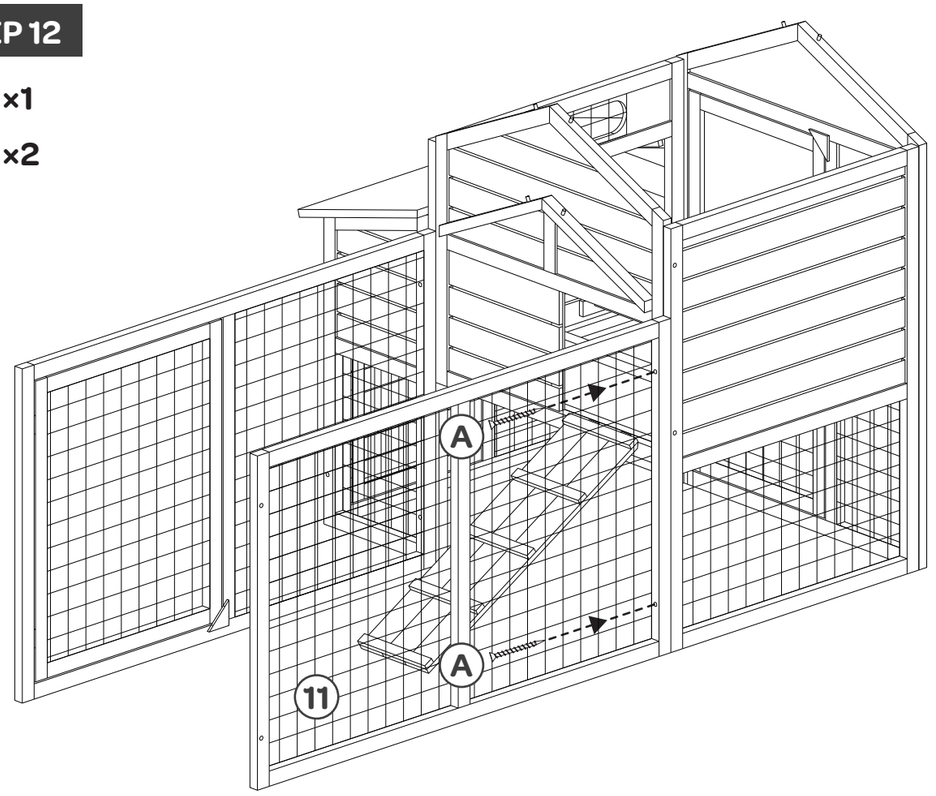


Attach the part 11 to the panel with 2 pcs of A screws.


STEP 13

19 ×1

20 ×1

27 ×2

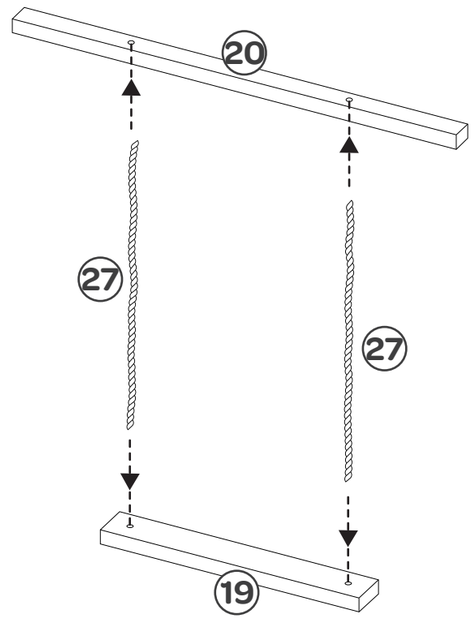

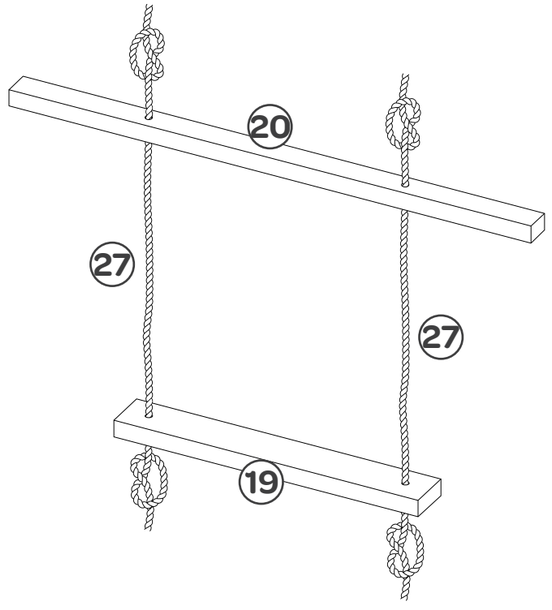


Connect part 19 and 20 with two ropes so that chickens can rest and play.


STEP 14

C ×2

D ×2

G ×2

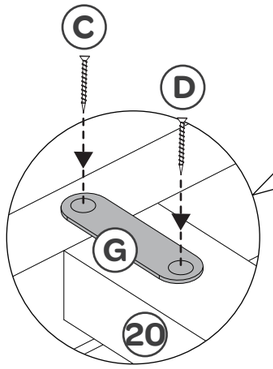

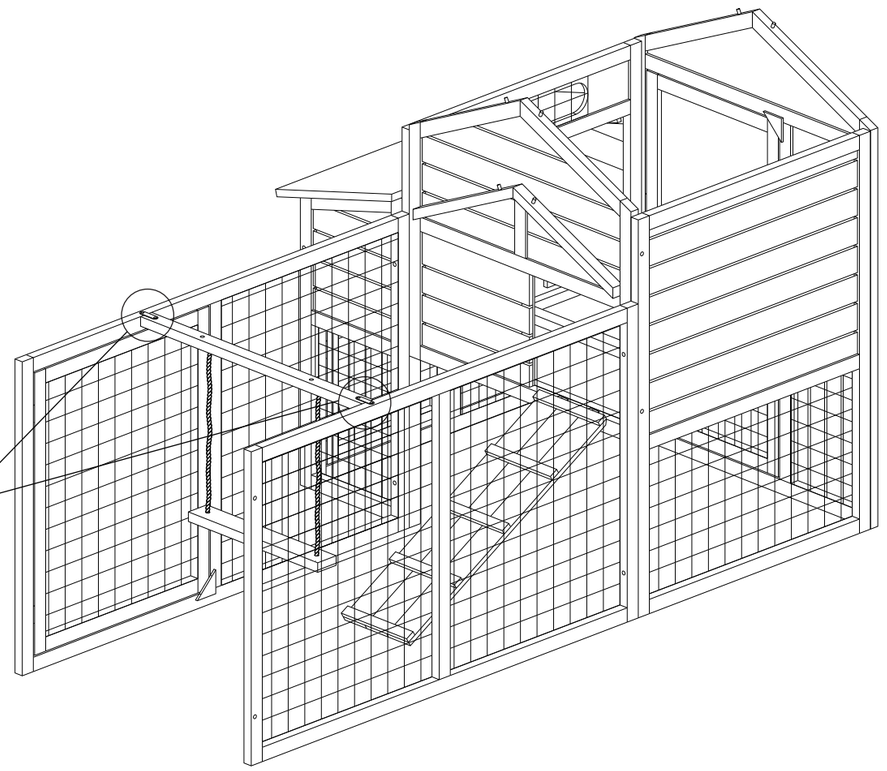


Attach the part 20 to the both panels, fix the 2 pcs of connecting part G with 2 pcs of D screws and C screws.

STEP 15

6 ×1

B ×4

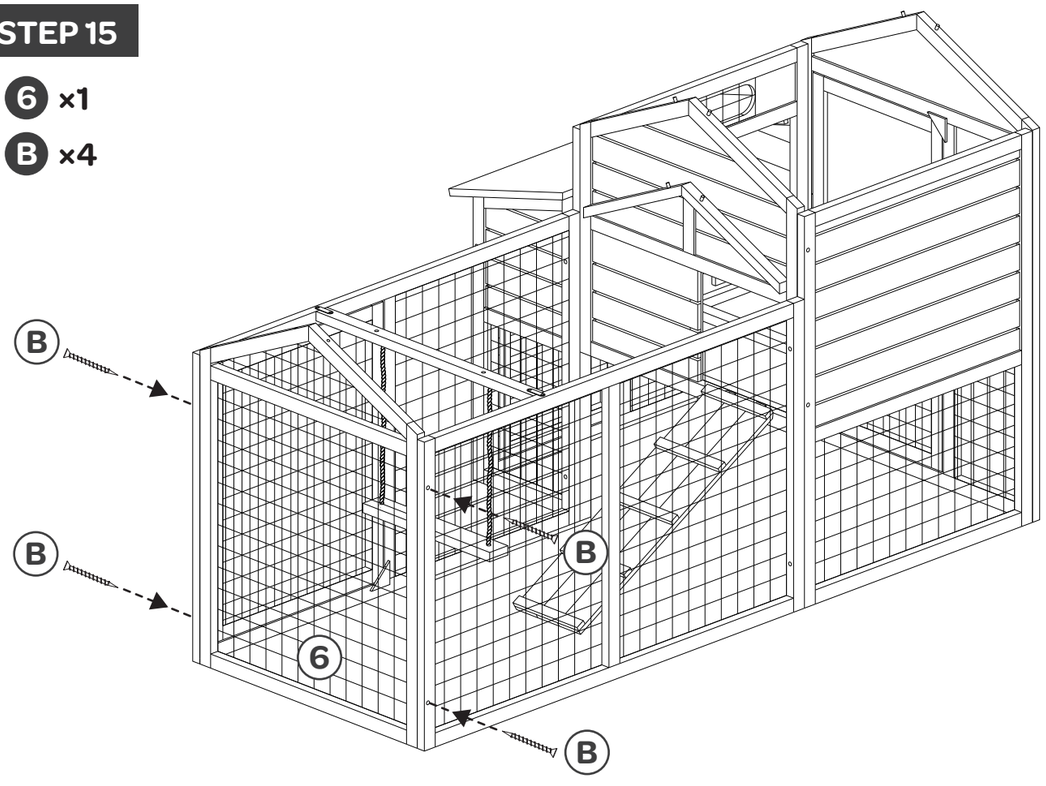


Attach the part 6 to the entire panel with 4 pcs of B screws.

STEP 16

15 ×1

16 ×1

C ×8

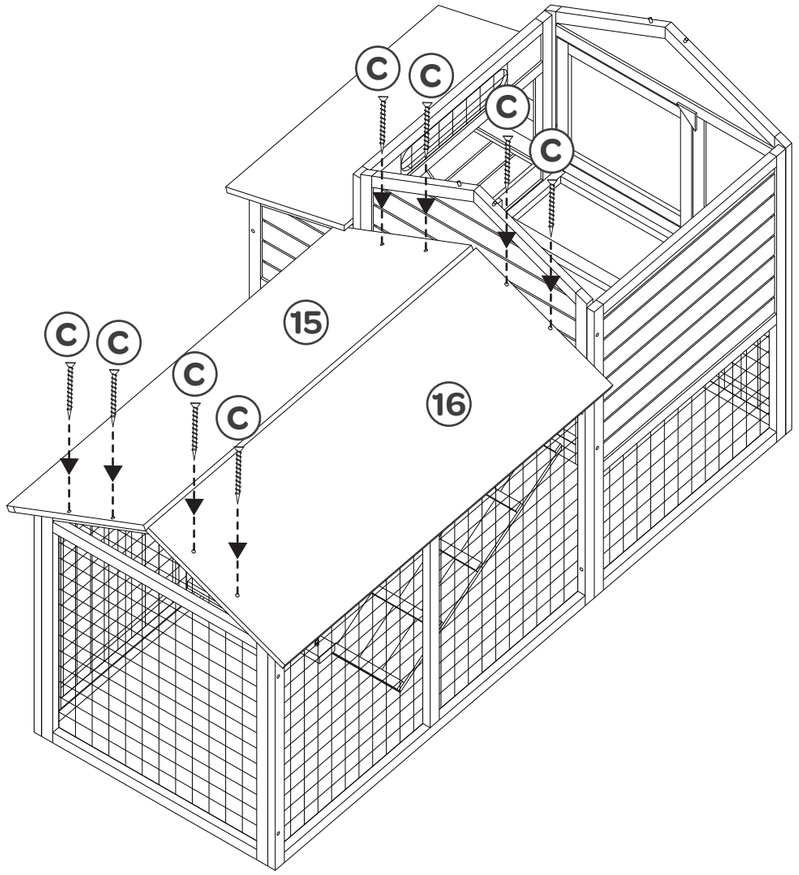

Attach roof part 15 and 16 with 8 pcs of C screws.


STEP 17

22 ×1

23 ×1

26 ×1


C ×5

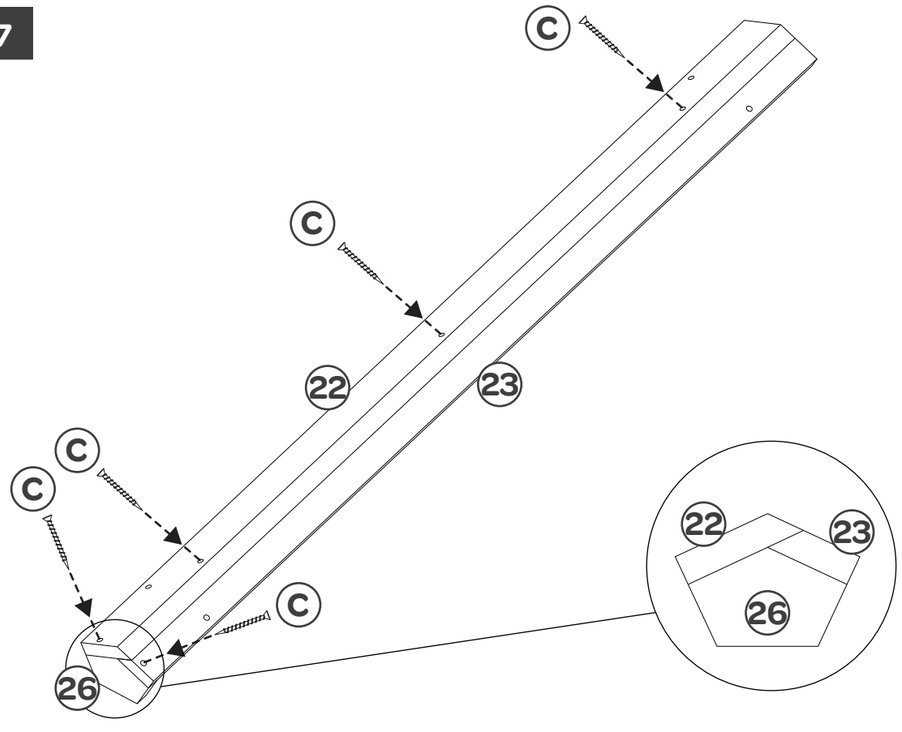

Attach the part 22 and 23 to the part 26 with 5 pcs of C screws.

STEP 18

C ×4

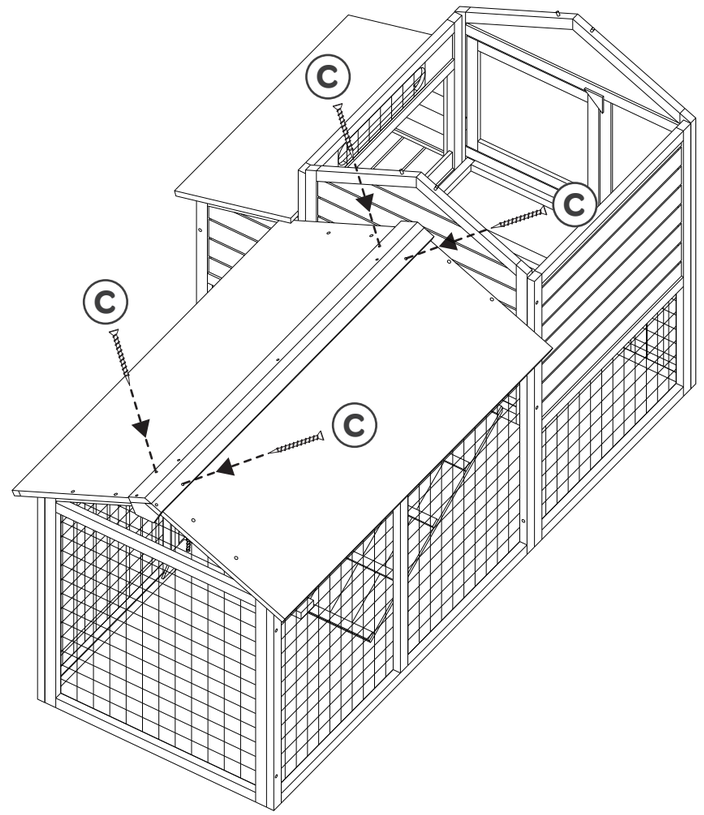


Place roof covering Part 22, 23, 26 and fix it with 4 pcs of C screws.

STEP 19

18 ×2

C ×8

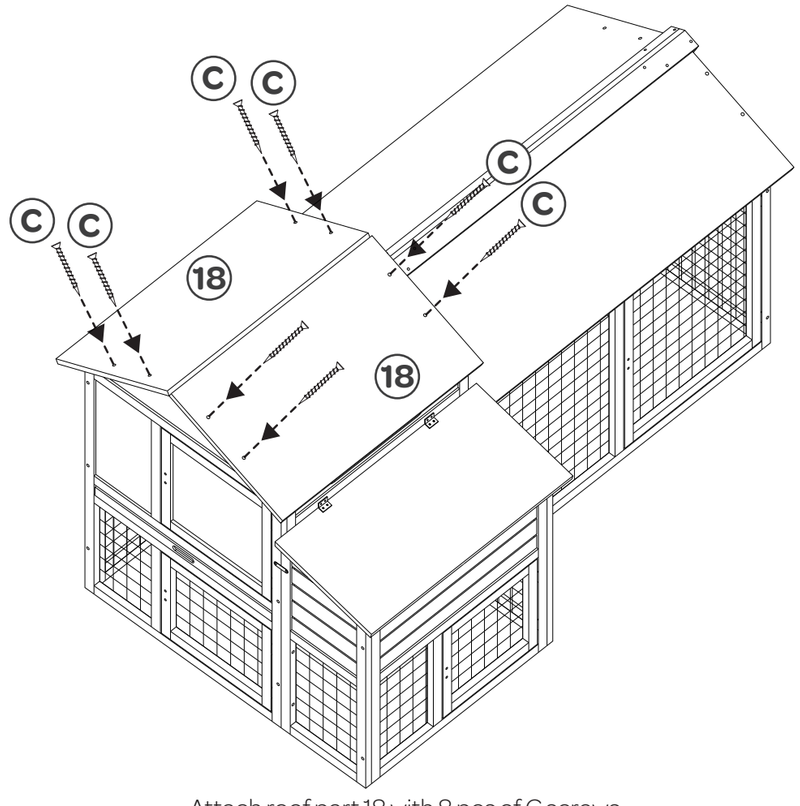

Attach roof part 18 with 8 pcs of C screws.


STEP 20

24 ×1

25 ×1

26 ×1


C ×7

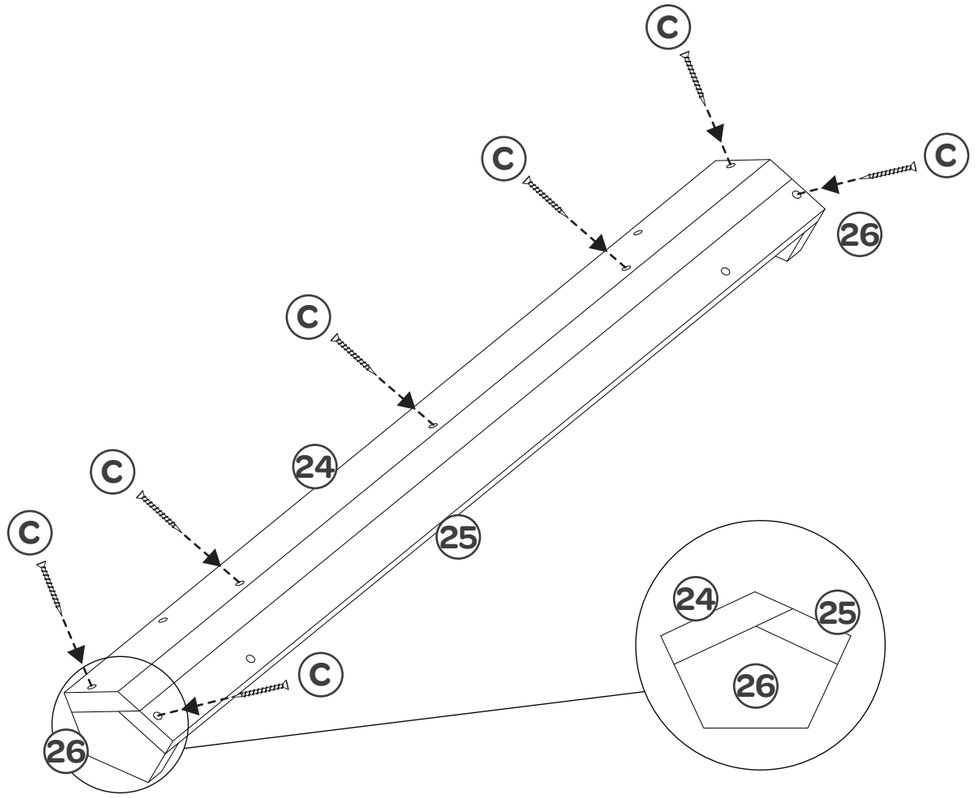

Attach the part 24 and 25 to the part 26 with 7 pcs of C screws.

STEP 21

C ×4

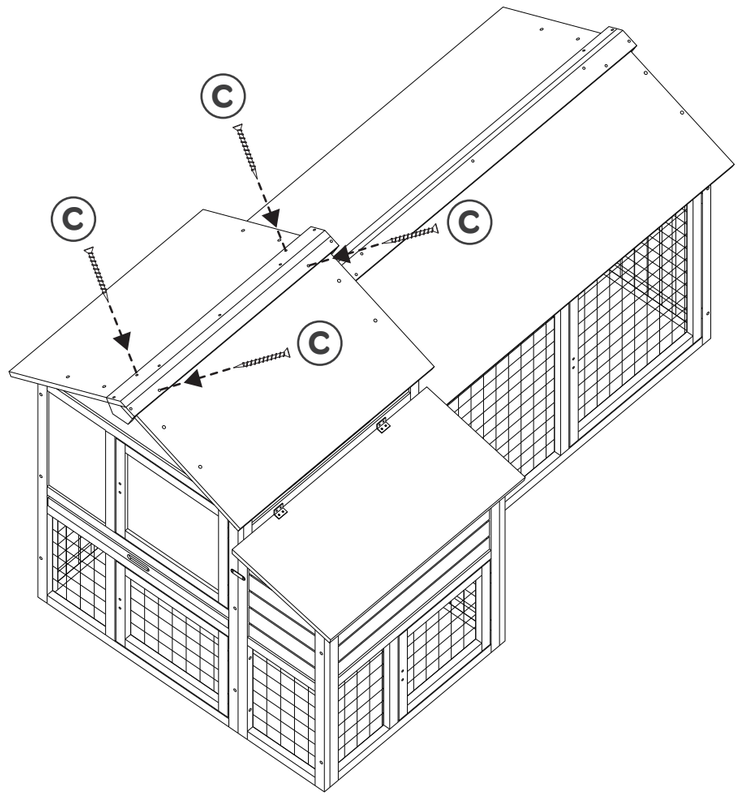


Place roof covering Part 24, 25, 26 and fix it with 4 pcs of C screws.

STEP 22

D ×16

E ×4

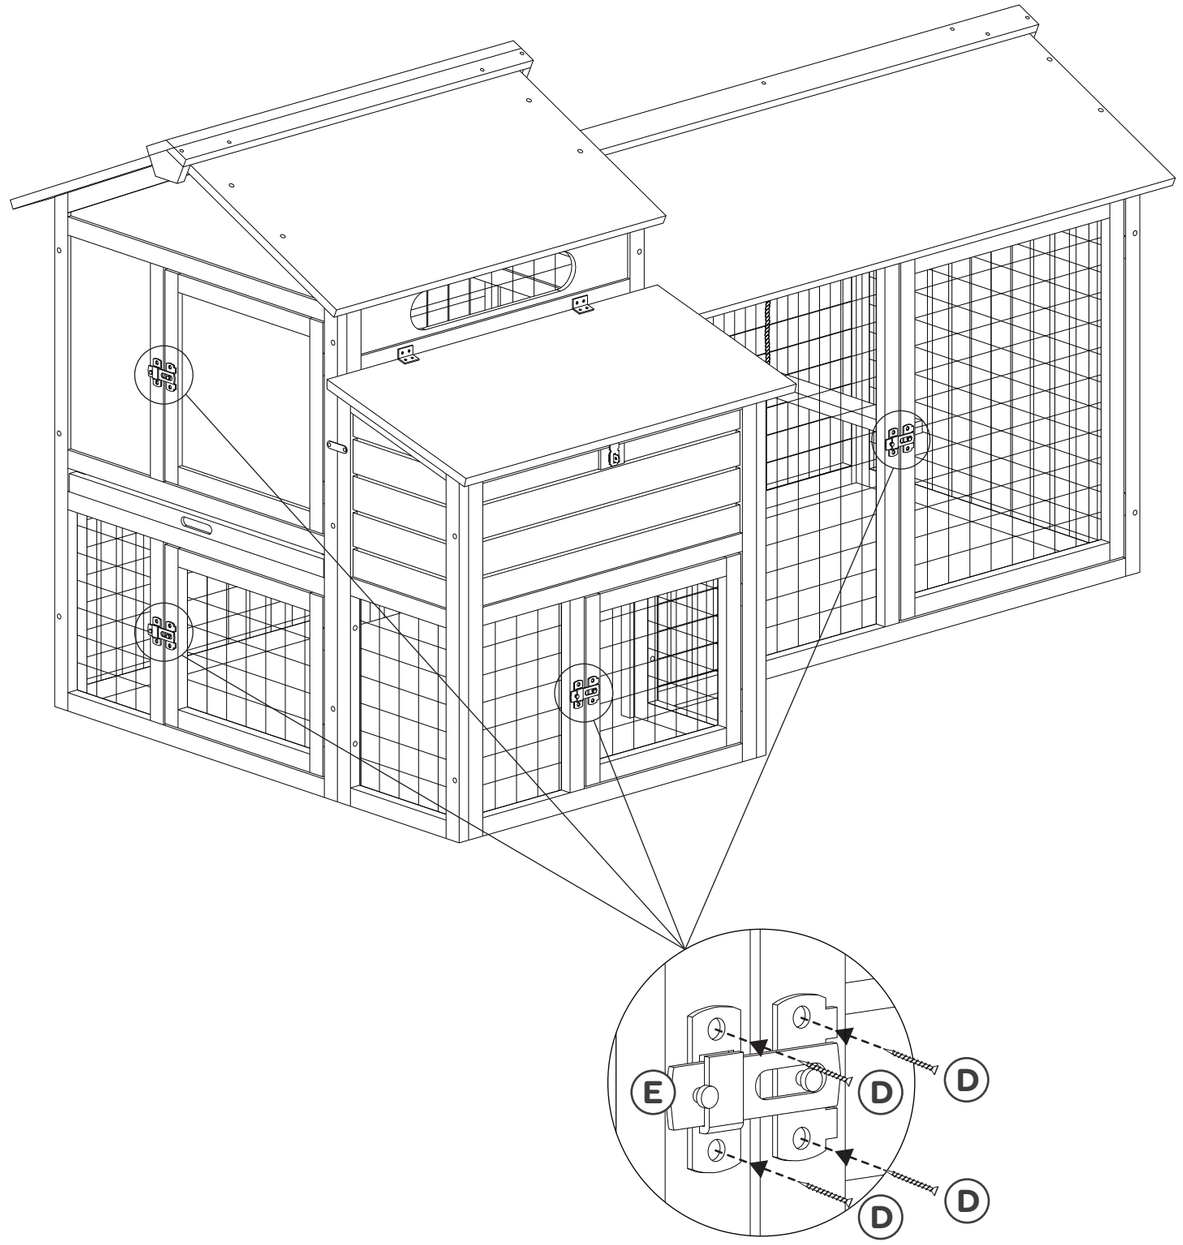

1. Attach 4 pcs of E door latches on the door with 16 pcs of D screws.
2. Congratulations on your completion!