


PLASTIC STORAGE SHED

4(W)x6(D)FT WITH WINDOWS

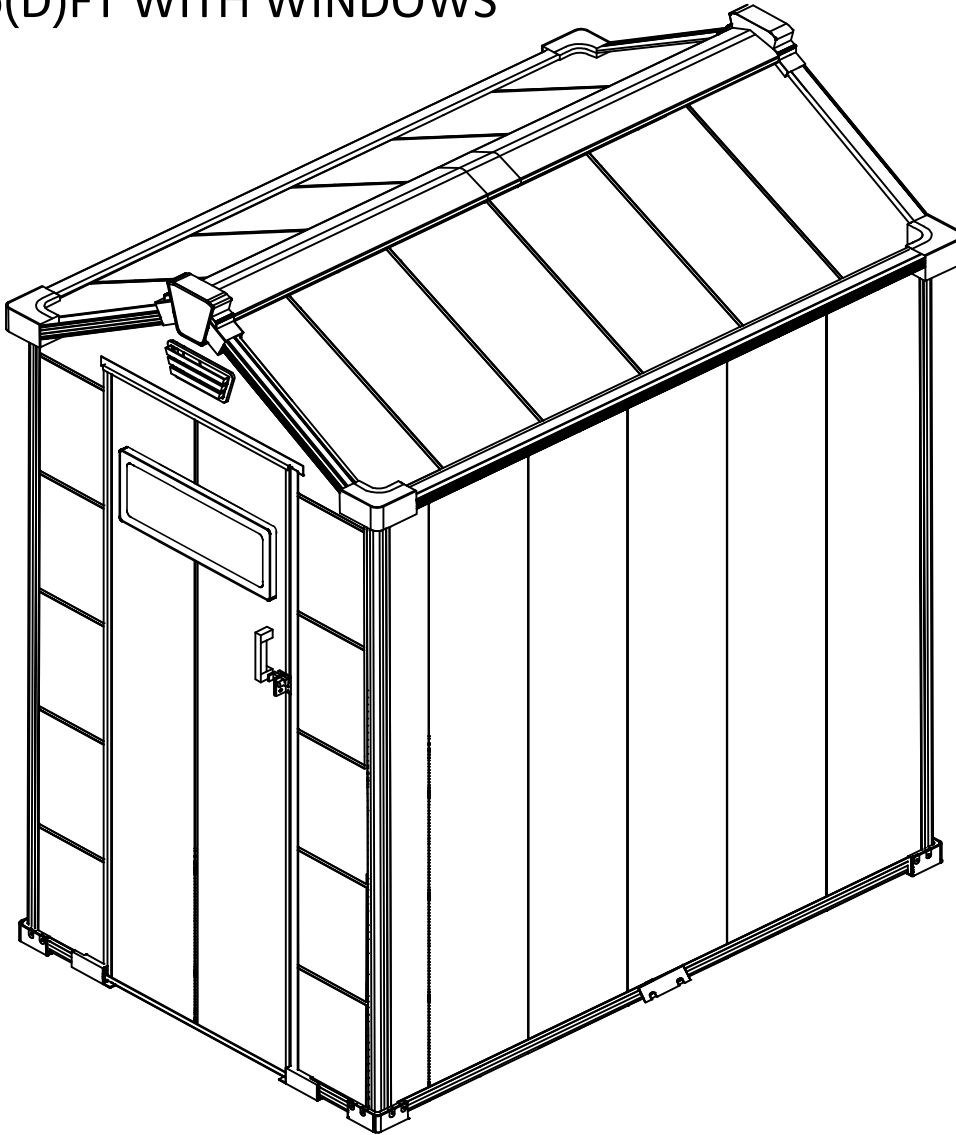

EASYHAWKservice@outlook.com

Our team is available 24/7 to help with any product questions. Contact us anytime!

Recommended to wear gloves to avoid scratches.
Please read the instructions COMPLETELY before assembly.



1. Please check the quantity of all parts before installation (refer to the Parts Lists) and the appearance of the products. Make sure the product is correct before installation.
2. Protect spare parts carefully in case any losing, scratch or damage occurred during installation. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or **neglect** of this product.

CARE AND SAFETY GUIDELINES

- The shed is intended for storage purposes only. It is not designed for habitation.
- It is strongly recommended to secure the shed to an immovable object or anchor to the ground by drilling holes in the shed floor (at the pre-marked locations) and inserting proper screws into the ground (screws are not included).
- Do not attempt assembly on windy or cold days.
- Periodically check the shed to ensure that it is stable and that the site is level.
- Be careful when handling parts with steel edges.
- When assembling or handling the shed, use only those tools listed in the user manual.
- Always wear work gloves, safety goggles and long sleeves when assembling or performing any maintenance on your shed.
- Avoid using a lawnmower or mechanical scythe near the shed.
- Wear safety goggles and always follow the manufacturer's instructions when using power tools.
- Wash the shed with a garden hose or a mild detergent solution. Do not use a metal brush or abrasive cleaners, including degreasers and oil- or acetone-based cleaning materials, as these may stain or damage the shed.
- Do not store hot items, such as recently used grills and blowtorches, and volatile chemicals in the shed.
- Avoid placing heavy items against the walls, as this may cause distortion.
- Avoid placing sharp items directly on floor which may cause broken.
- Keep the roof clear of accumulated snow and leaves. Large amounts of snow on the roof can damage the shed, making it unsafe to enter.
- Wind direction is an important factor to consider when determining the location of the shed. Reduce exposure to the wind, in general, and of the door side in particular. Keep doors closed and locked when the shed is not in use to prevent wind damage.
- Do not stand on the roof.
- Consult your local authorities to check if permits are required to erect the shed.



Safety Precautions

We recommend **two adults** to complete the installation.

Two adults installed together will make the installation process easier and safer. The gloves must be carried to prevent hand cuts during installation.

Take care when using power tools near water the use of a residual current device (RCD) is advised.

Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand.

Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Installation precautions

1. Site preparation

Leveling the ground.




Please place the product on a flat ground to prevent leaning and collapse.

If the ground is uneven, the door may can't be closed.



2. Set up the base

It is recommended to build a wooden base or concrete base.

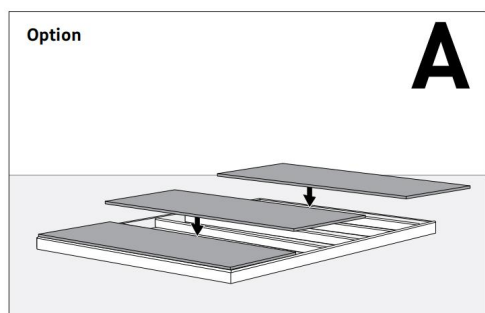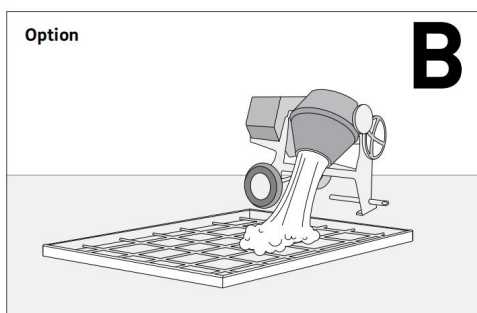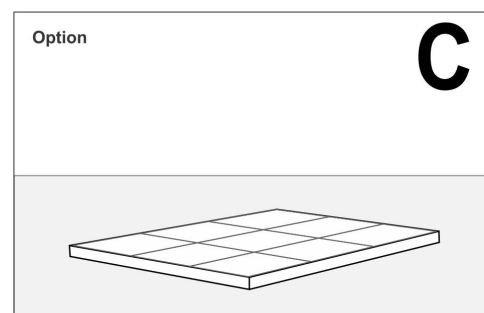

3. Leave enough space

Operating space shall be reserved for external installation work.





4. Tools required for installation

(**Note:** Installation requires two people to work together.)



5. Parts are placed after unpacking


Don't lean the panels to avoid distortion.

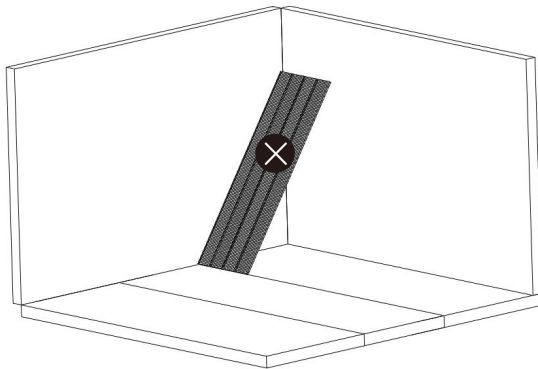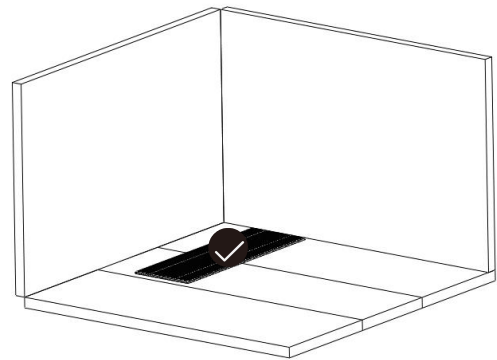


6. Protect The Floor

Disassemble the packaging cardboard box, unfold it and lay it on the floor to protect.

Directly use the ladder may cause floor damage.

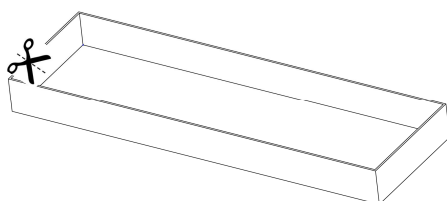

I . 【Product Introduction】

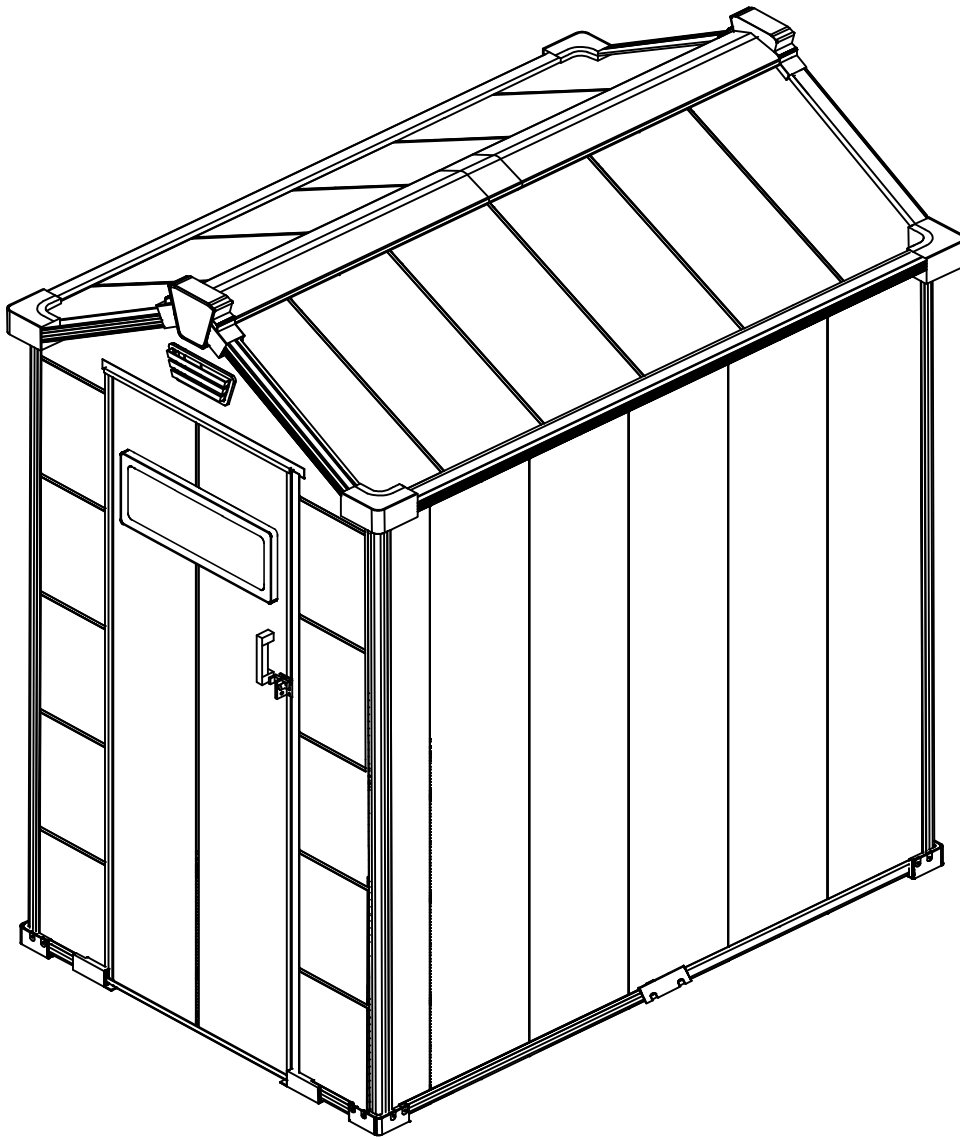


Installation Precautions for Plastic Tool Huts:



1. Before installation, ensure the installation platform is level and free of unevenness. Unevenness may cause slight misalignment of the panels during installation, but in most cases, the product can still be successfully assembled.

2. All plastic panels must be fully inserted, especially when installing components into the floor grooves. Make sure they are completely inserted. Assembly may require using a rubber mallet to tap the panels (tap gently, do not use excessive force).









3. Plastic toolhuts contain some metal parts. Ensure all screws on the metal parts are tightened.

【 Resin Storage Shed_4x6ft】

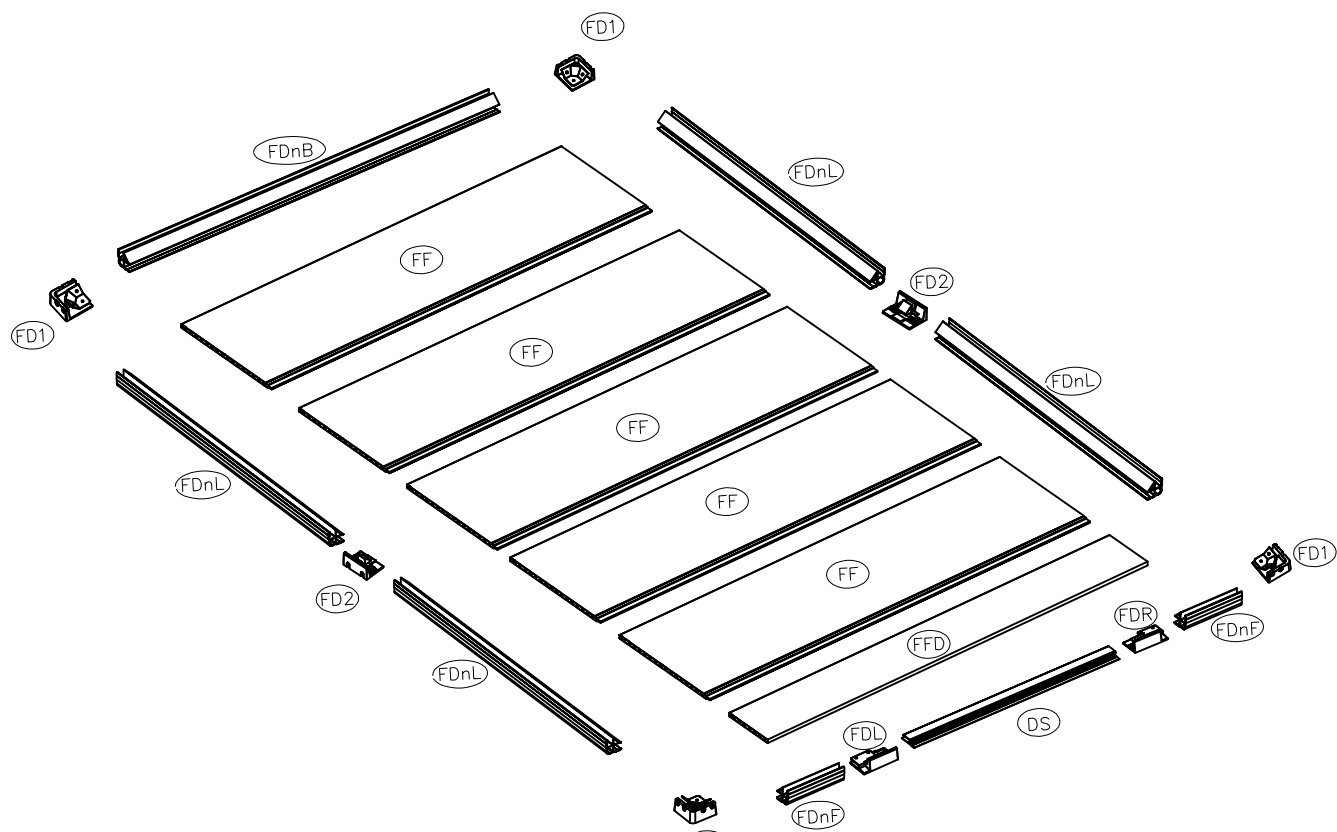

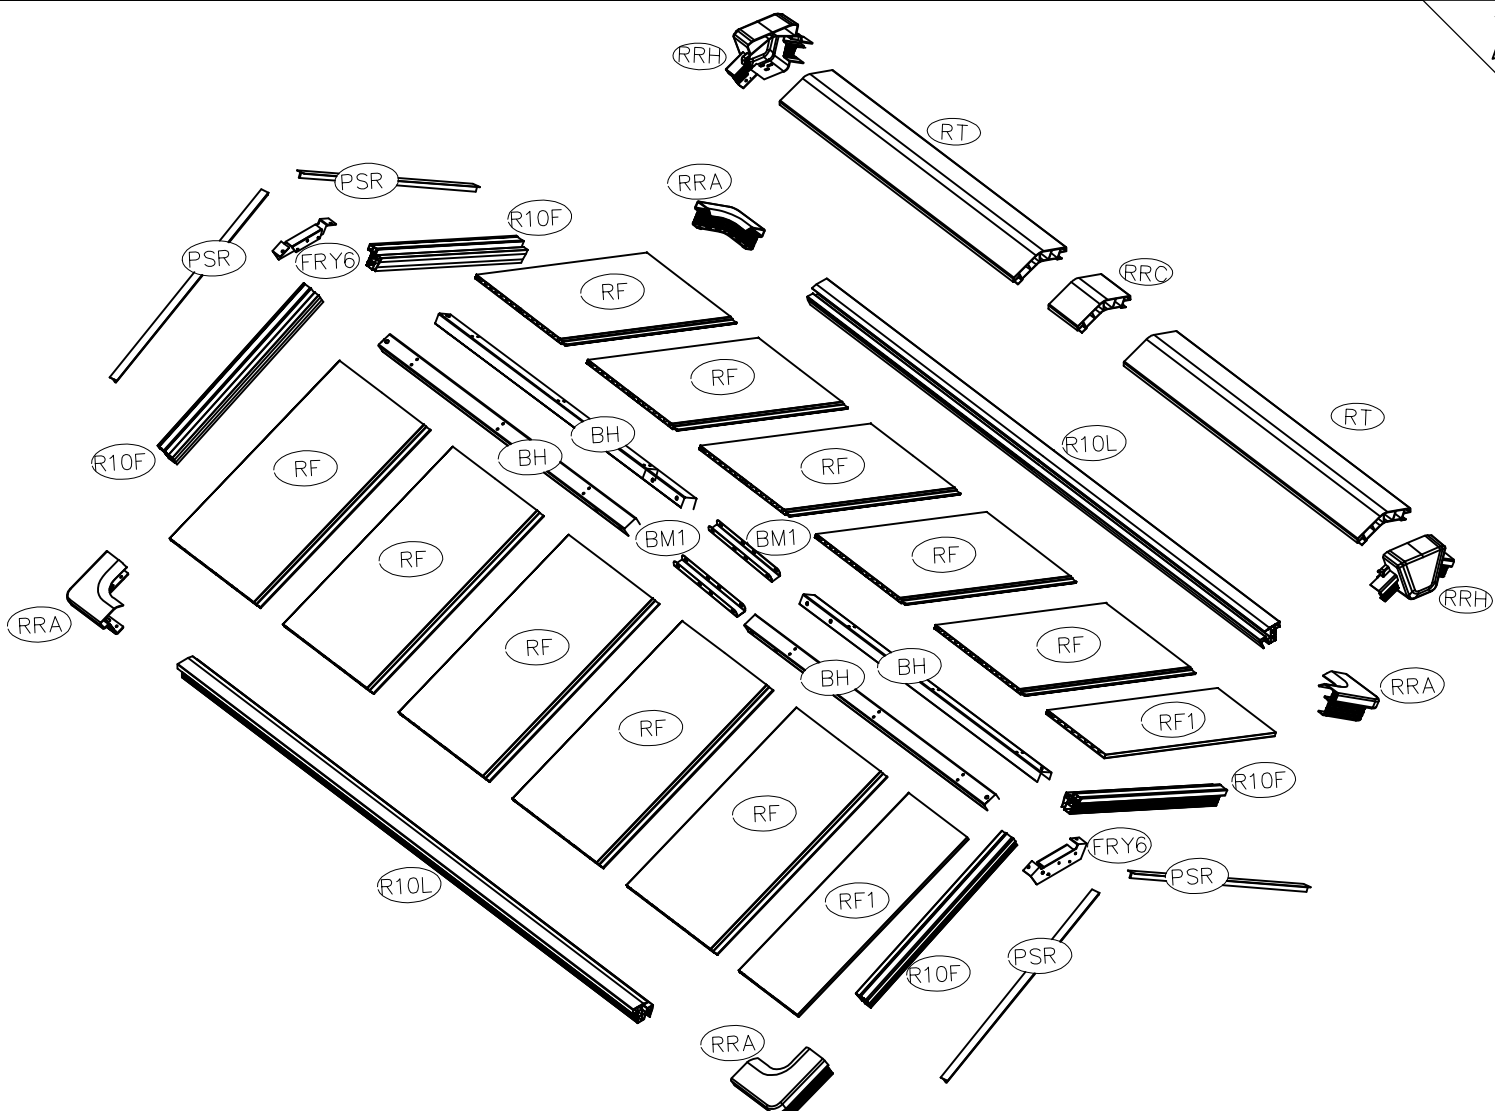
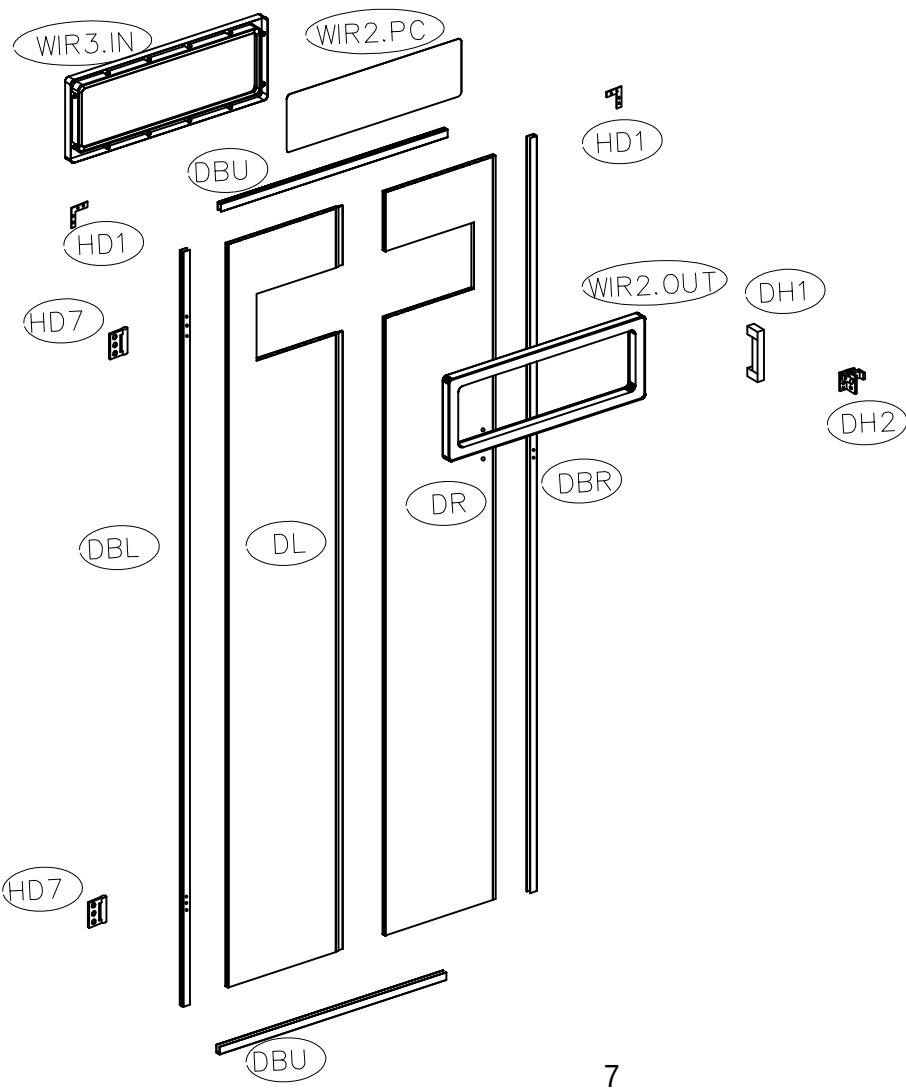


FLOOR

Item no.	Reference Image	Qty.
DS	566mm 	X1
FDnB	1000mm 	X1
FDnL	770mm 	X4
FDnF	145mm 	X2
FD1		X4
FD2		X2
FDR		X1
FDL		X1
FF	1060mm*300mm 	X5
FFD	1060mm*130mm 	X1






[illegible]

WALL










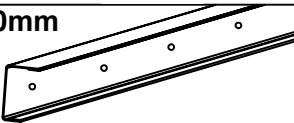
Item no.	Reference Image	Qty.
WL	1570mm*300mm 	X10
WLF	1570mm*120mm 	X2
WB	1555mm*300mm 	X3
WBF	1555mm*160mm 	X1
WBD	1060mm*266mm 	X1
WFD1	1060mm*300mm 	X1
WFD2	213mm*33mm 	X1
WF	228mm*300mm 	X10
PJC	1045mm 	X1
BHW	1420mm 	X2
VNR10		X2
FDnV	1570mm 	X4

[illegible]

DOOR





Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
DAL	1570mm 	X1	WIR3.IN		X1
DAR	1570mm 	X1			
DAU	650mm 	X1			
DBL	1560mm 	X1			
DBR	1560mm 	X1			
DBU	589mm 	X2			
HD7		X2			
DH1		X1			
DH2		X1			
HD1		X2			
DL	1555mm*300mm 	X1			
DR	1555mm*285mm 	X1			
WIR2.OUT		X1			
WIR2.PC	459mm*159mm 	X1			

ROOF

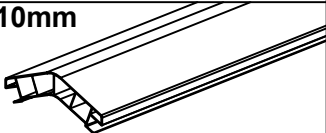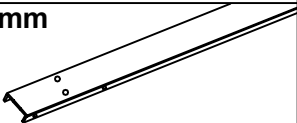Item no.	Reference Image	Qty.
RF	556mm*300mm 	X10
RF1	556mm*170mm 	X2
R10L	1570mm 	X2
R10F	490mm 	X4
RT	810mm 	X2
PSR	490mm 	X4
RRH		X2
RRA		X4
RRC		X1
BH	815mm 	X4
FRY6		X2
BM1	230mm 	X2

[illegible]


ACCESSORY

Item no.	Reference Image	Qty.
FT1 (M5x14)		X106
FT2 (M4x10)		X122
FT3 (M5x20)		X60
FT14B		X2
FT14 (M8*20)		X2
FT7 (M6*40)		X8
FT7A (M6)		X12
FT8 (M6x16)	 	X4
FT14A (M8)		X2
Rubber sealing strip		X1
HAMMER		X1


ACCESSORY

Item no.	Reference Image	Qty.
GLOVE		X2
OPEN END WRENCH		X1
HEXSOCKET		X1
FT12 (M8*80)		X4
FT11 (M3x14)		X48

1




FD1
4pcs




FDnB
1pc



FD2
2pcs



FDL
1pc



FDR
1pc




DS
1pc



FDnL
4pcs



FDnF
2pcs

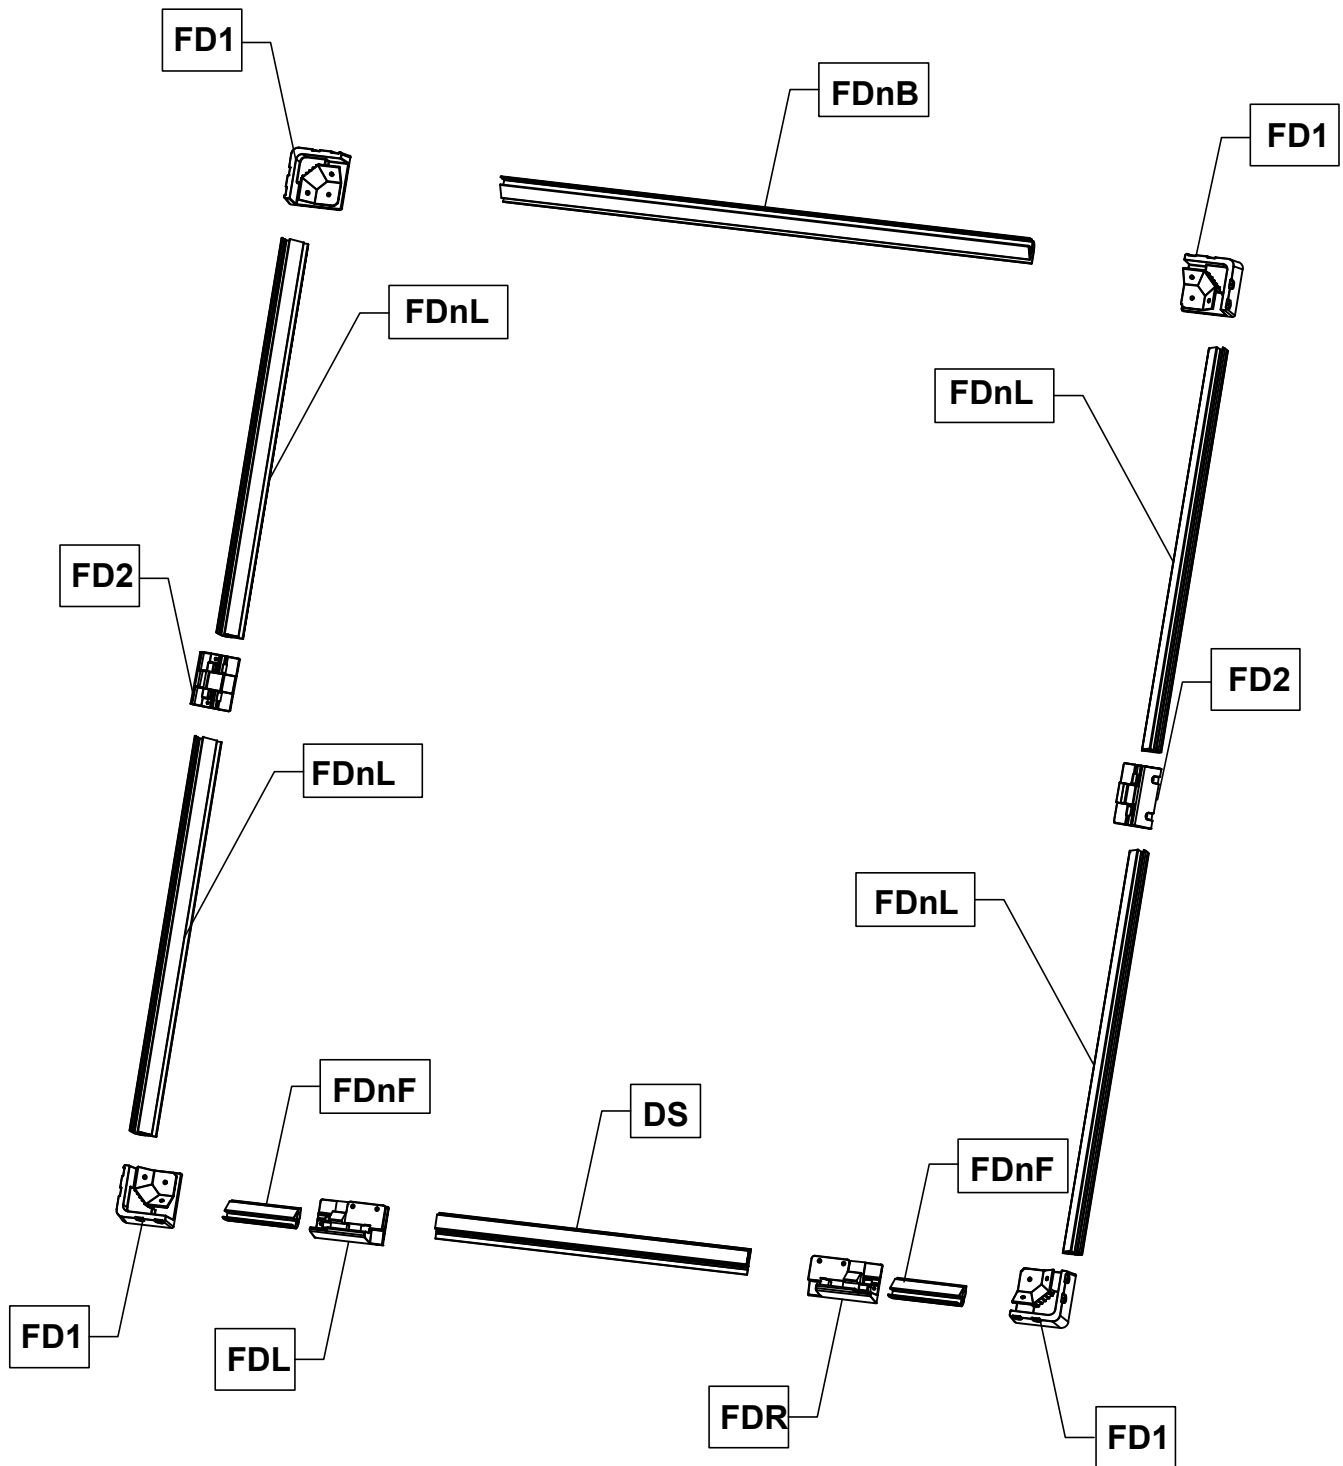

ASSEMBLY INSTRUCTIONS

2




FT1
4pcs



FT3
2pcs

Don't install the right side first









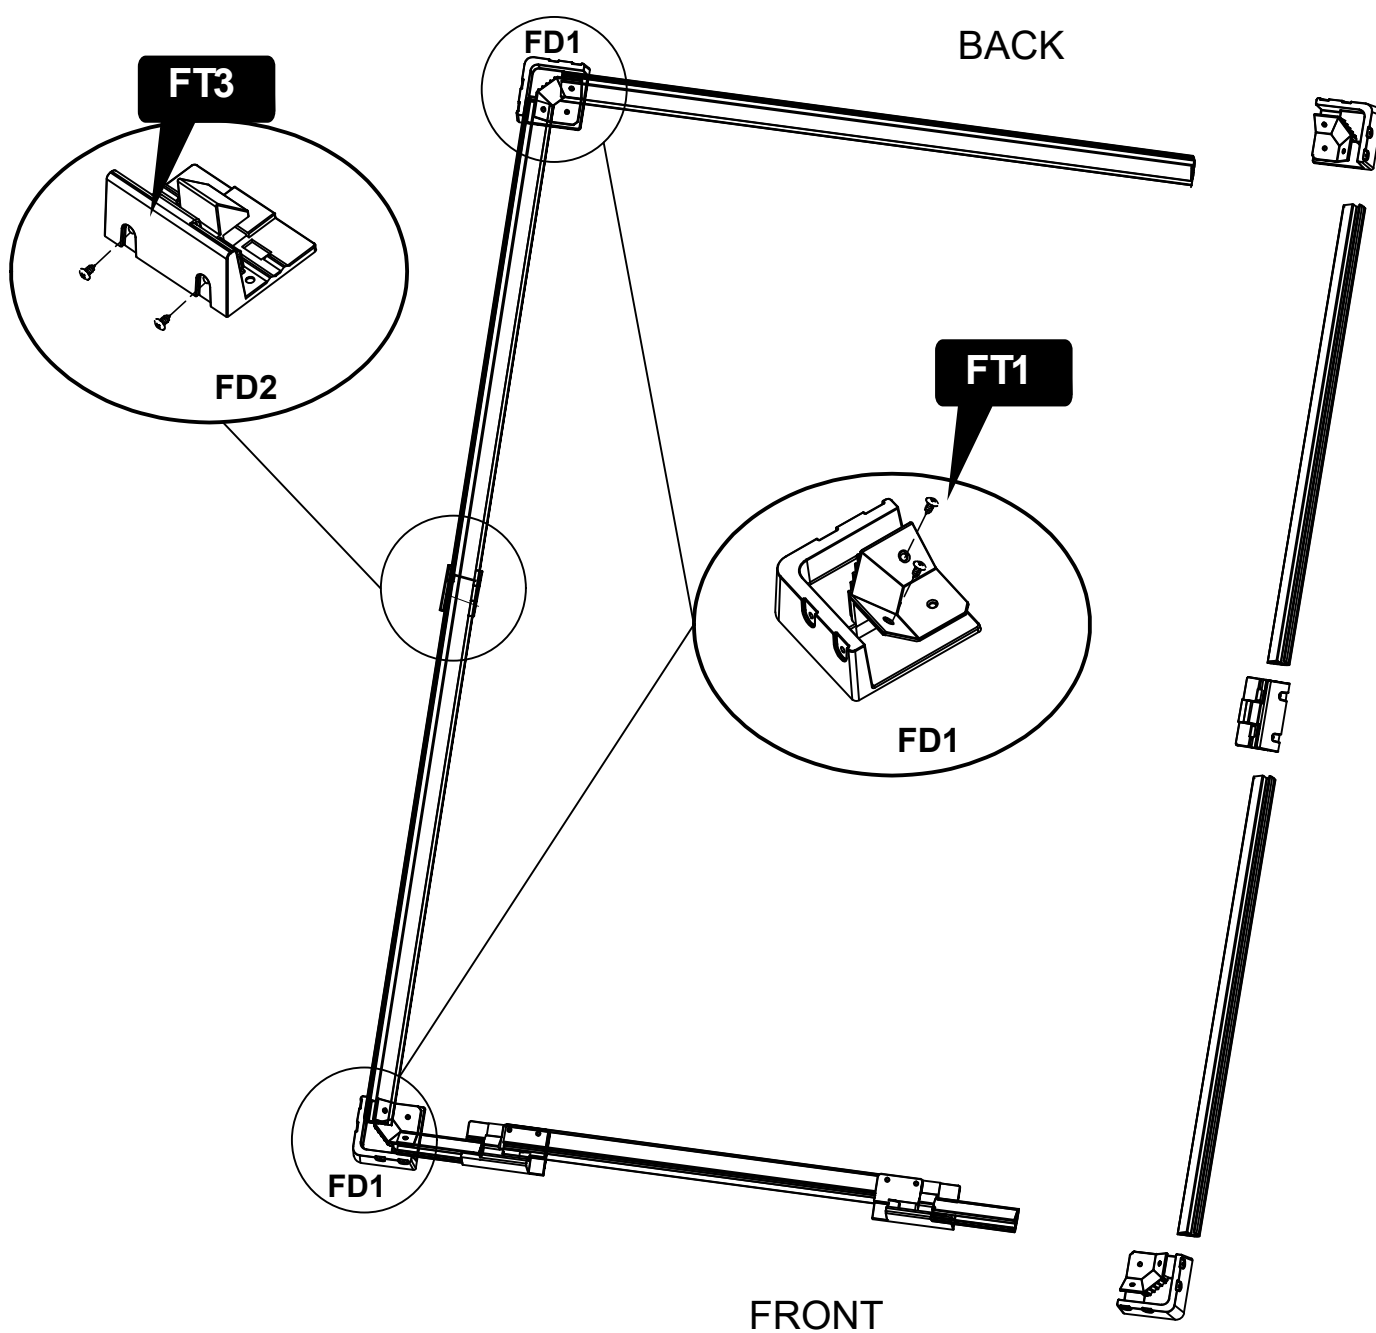


ASSEMBLY INSTRUCTIONS

3

FF
5pcs

FFD
1pc

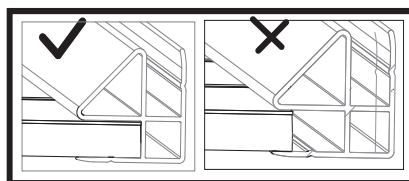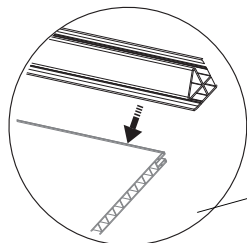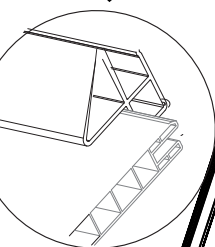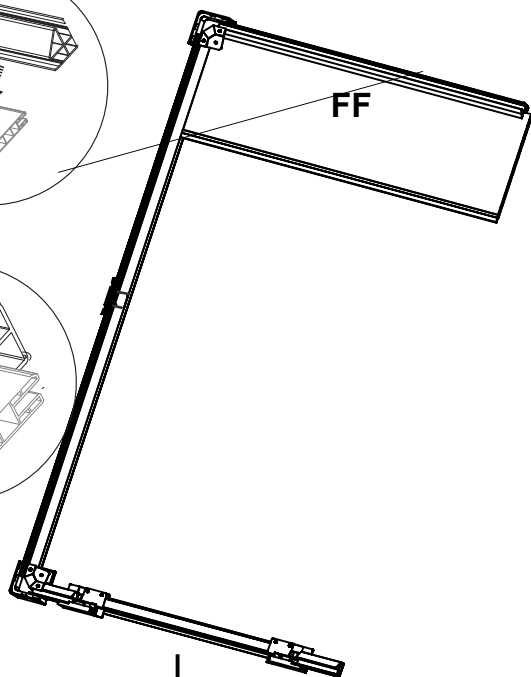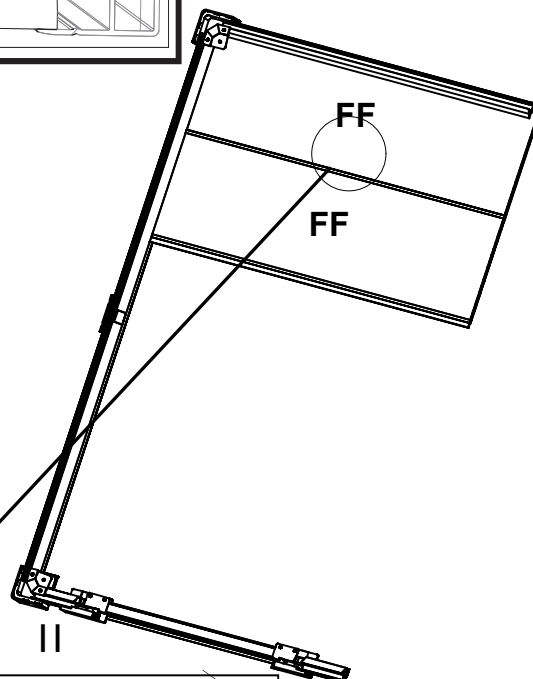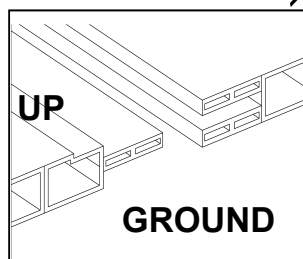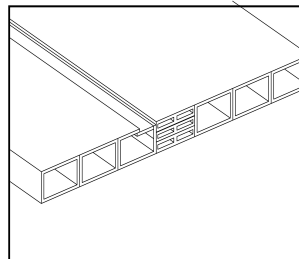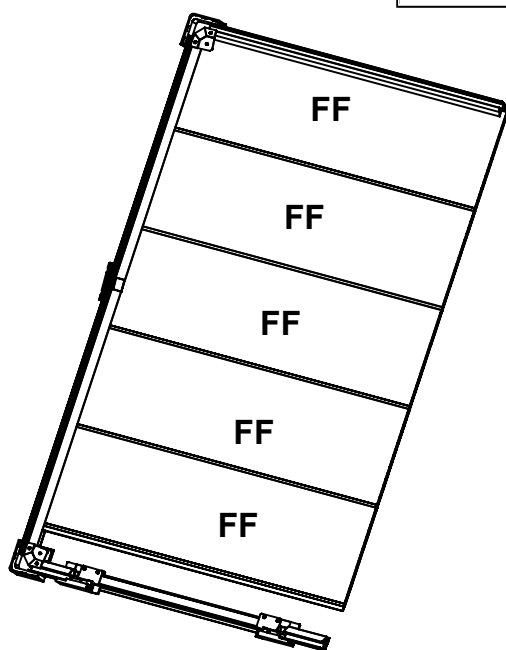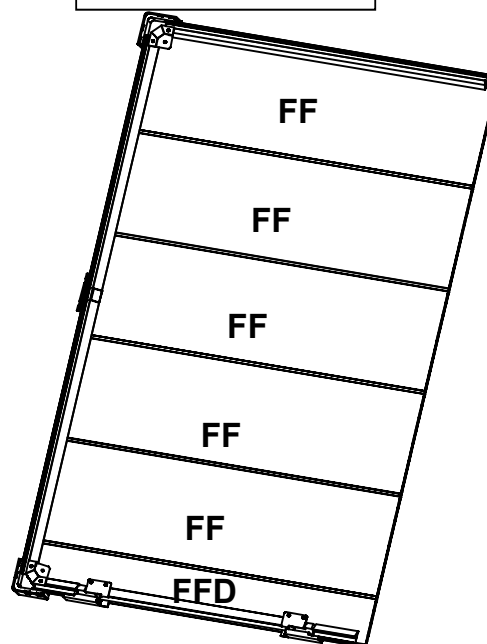

III

IV

ASSEMBLY INSTRUCTIONS








4



FT1
4pcs



FT3
2pcs

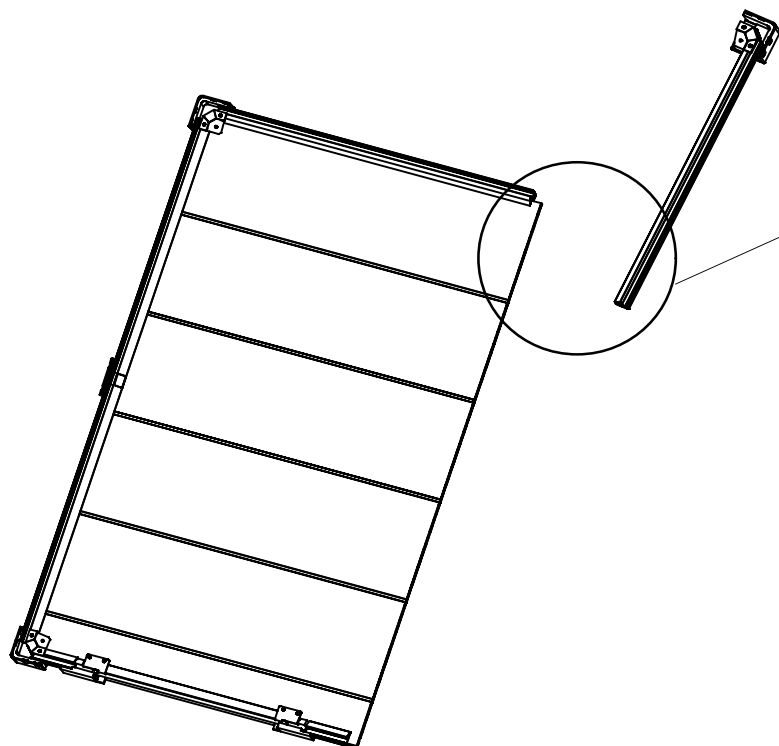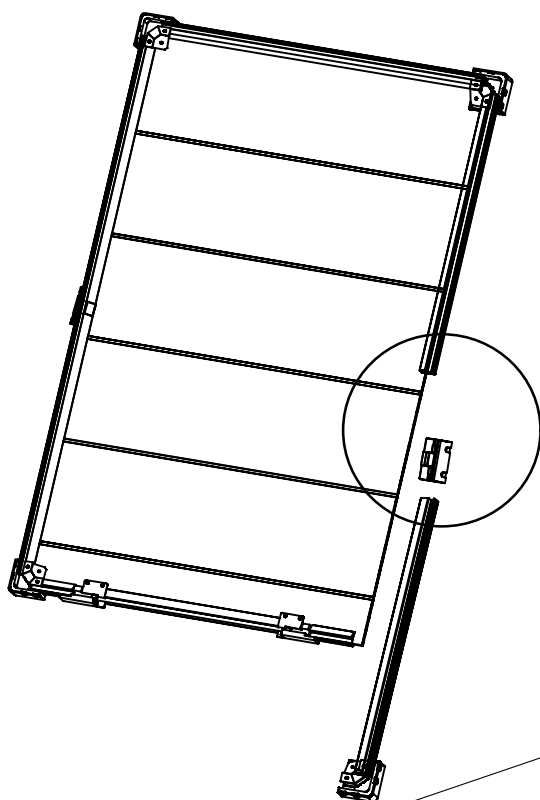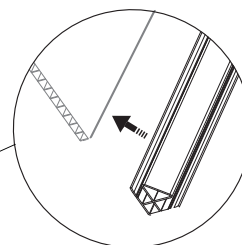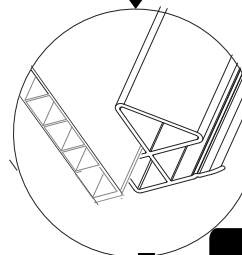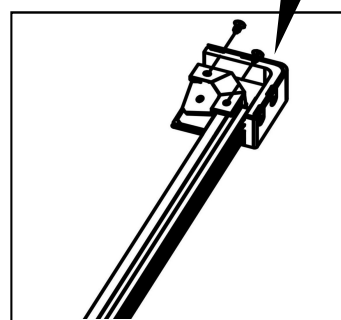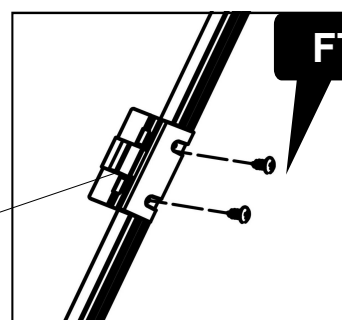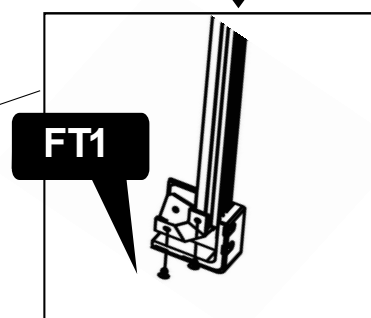

ASSEMBLY INSTRUCTIONS


5






FT1
14pcs



FT2
9pcs

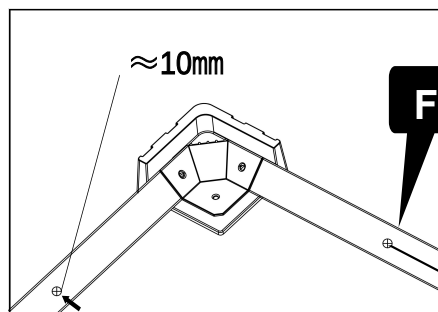


FT1

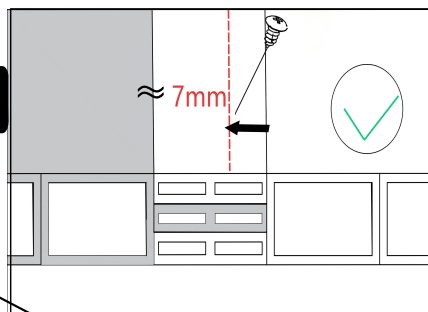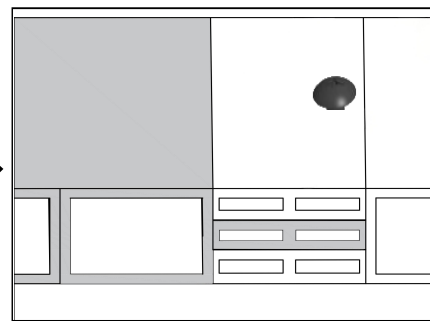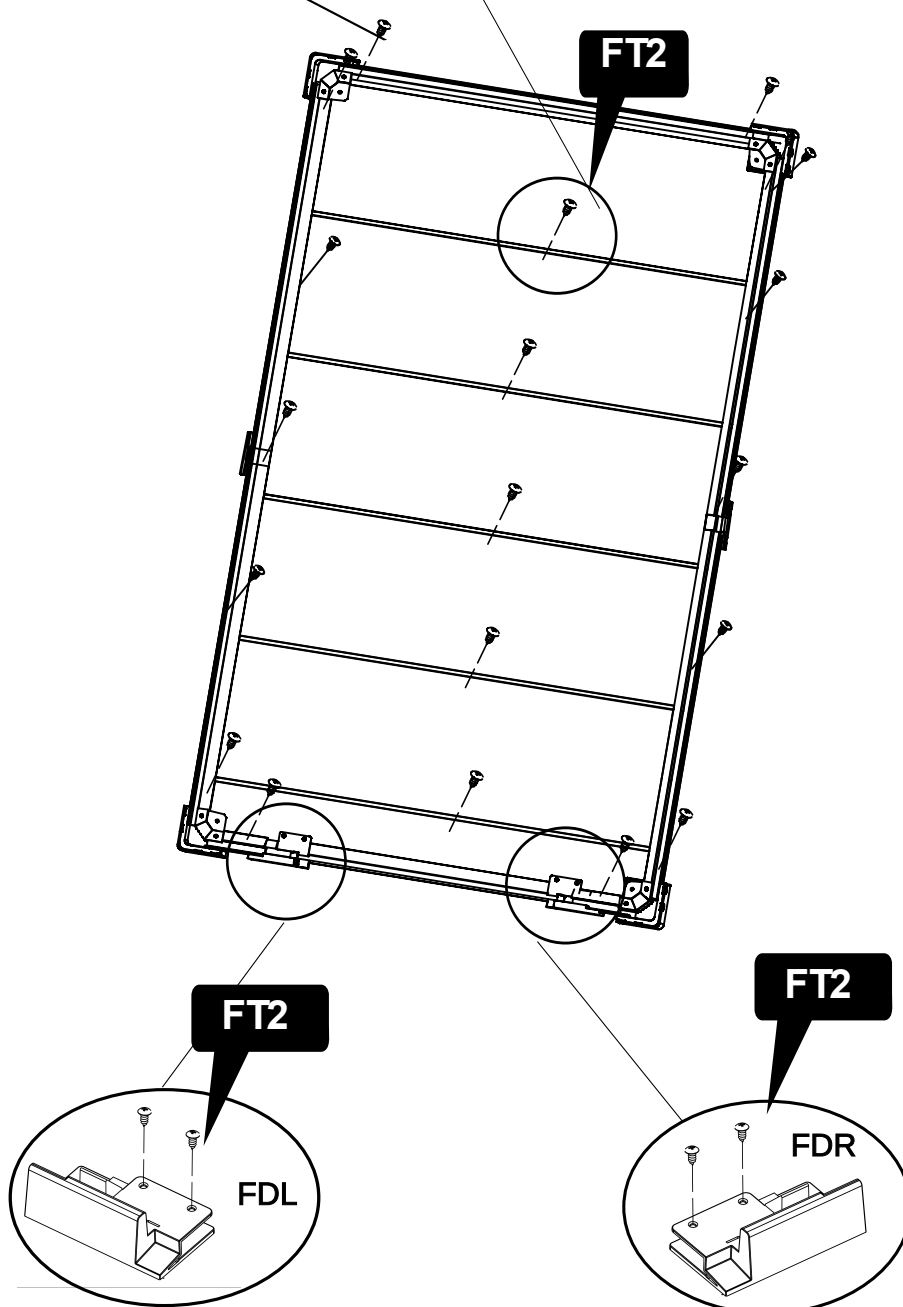

ASSEMBLY INSTRUCTIONS

6




WB
3pcs



FDnV
2pcs



FT2
4pcs

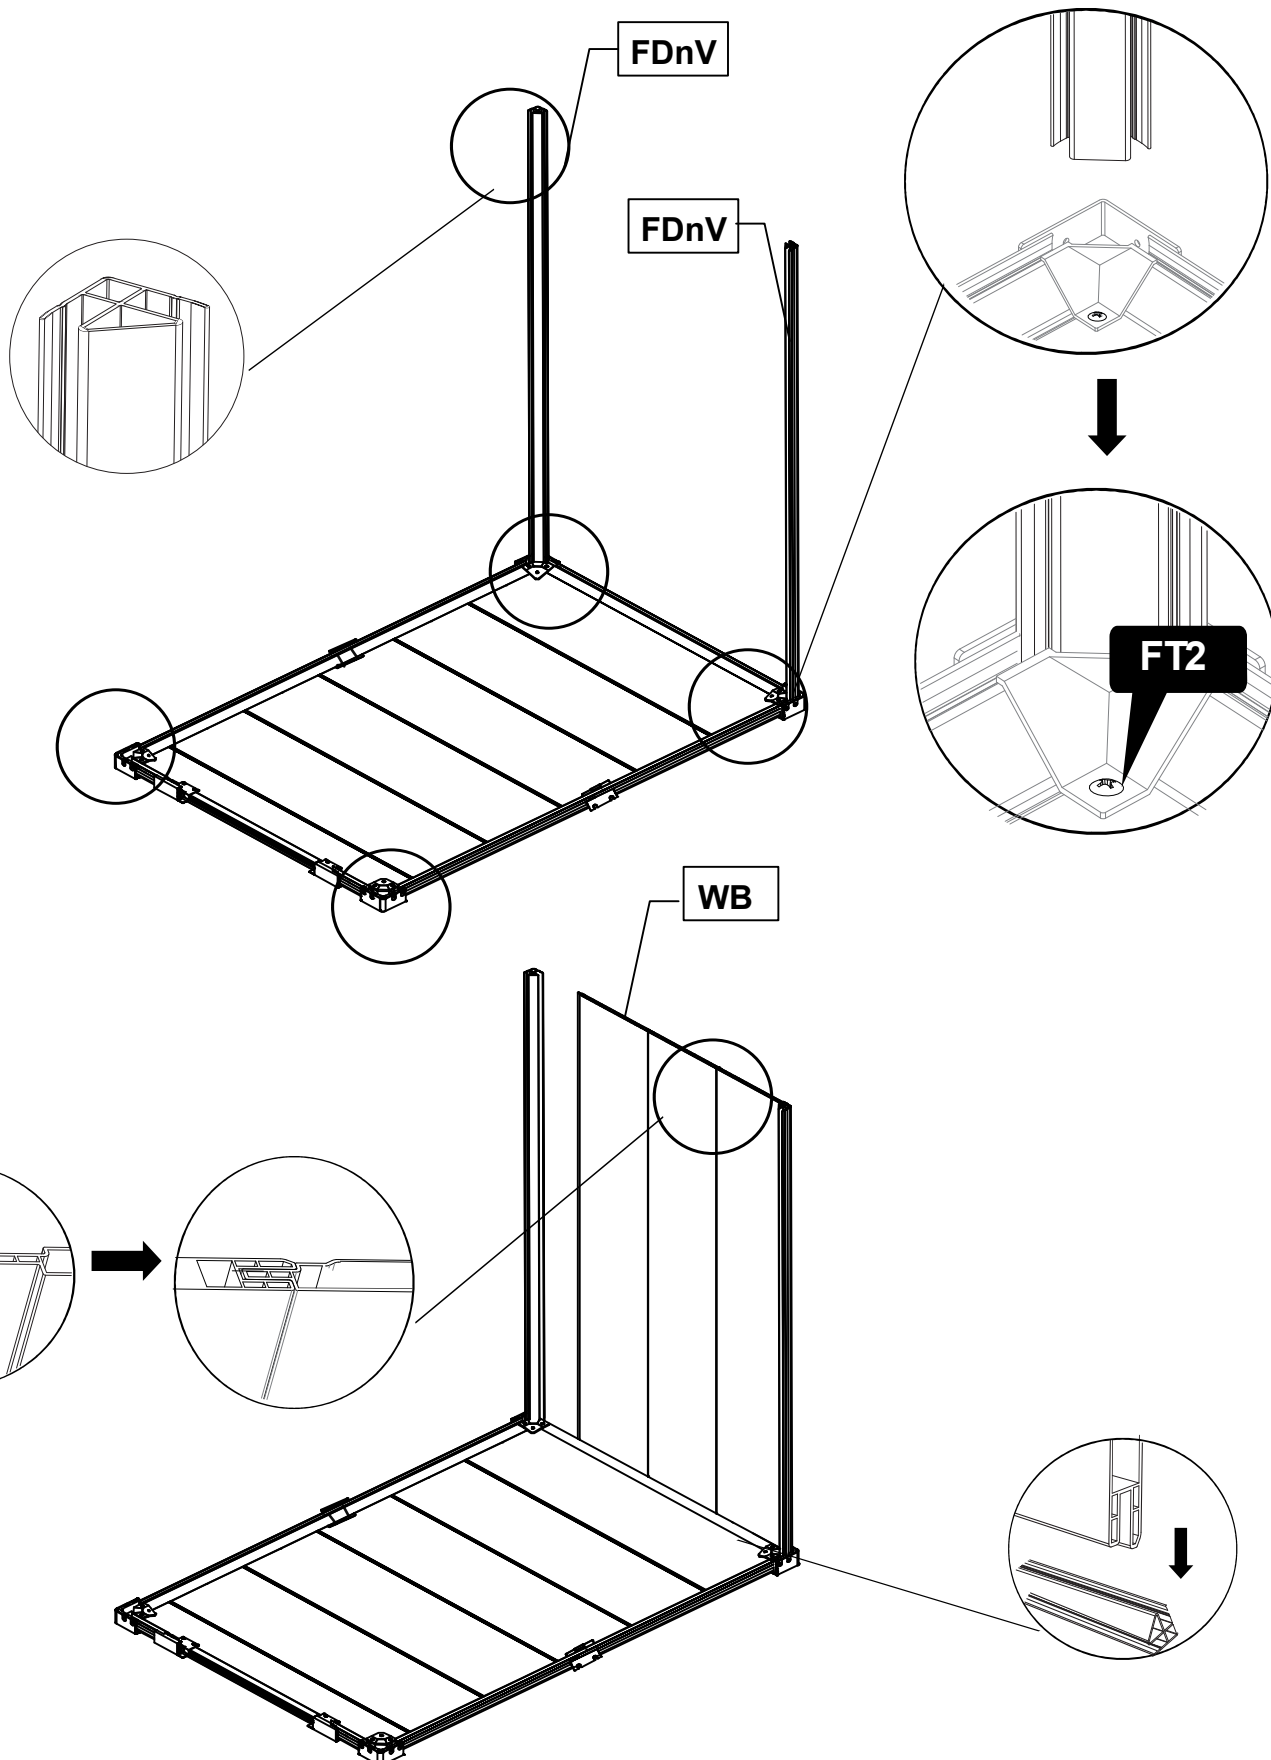


ASSEMBLY INSTRUCTIONS

7




WBF
1pc





FDnV
2pcs



NOTE: Keep boards closely connected. Tap tight with a hammer if there are gaps.

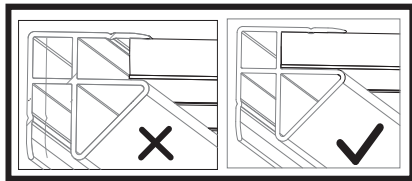


- Fully fit the panel inside the profile

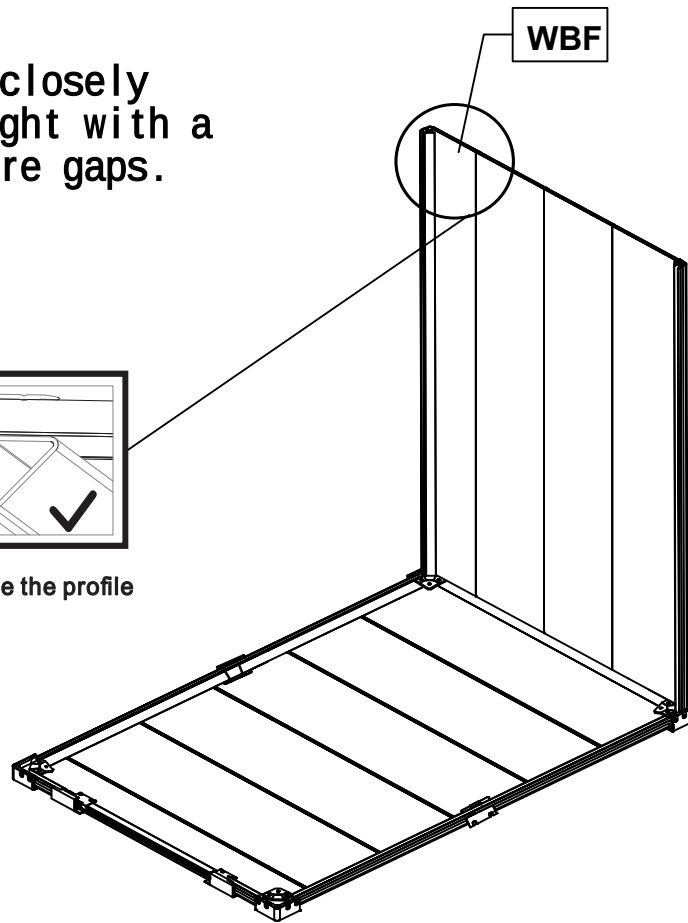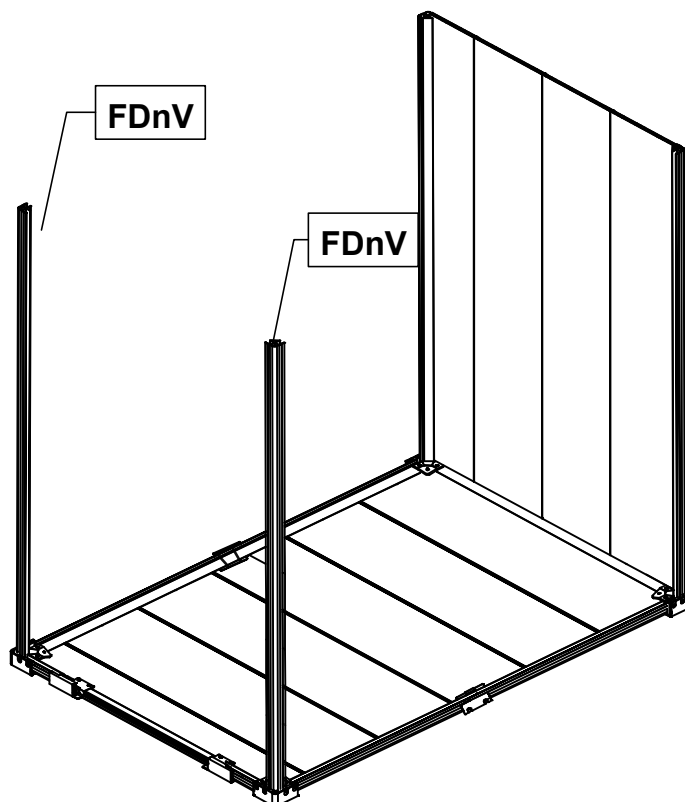

ASSEMBLY INSTRUCTIONS

8

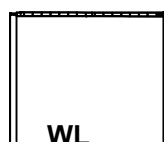

WL
10pcs





FT1
12pcs



FT3
8pcs

WL

WL

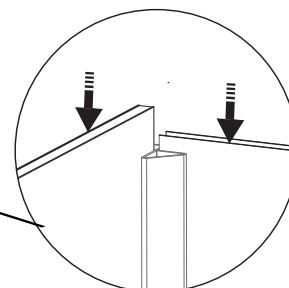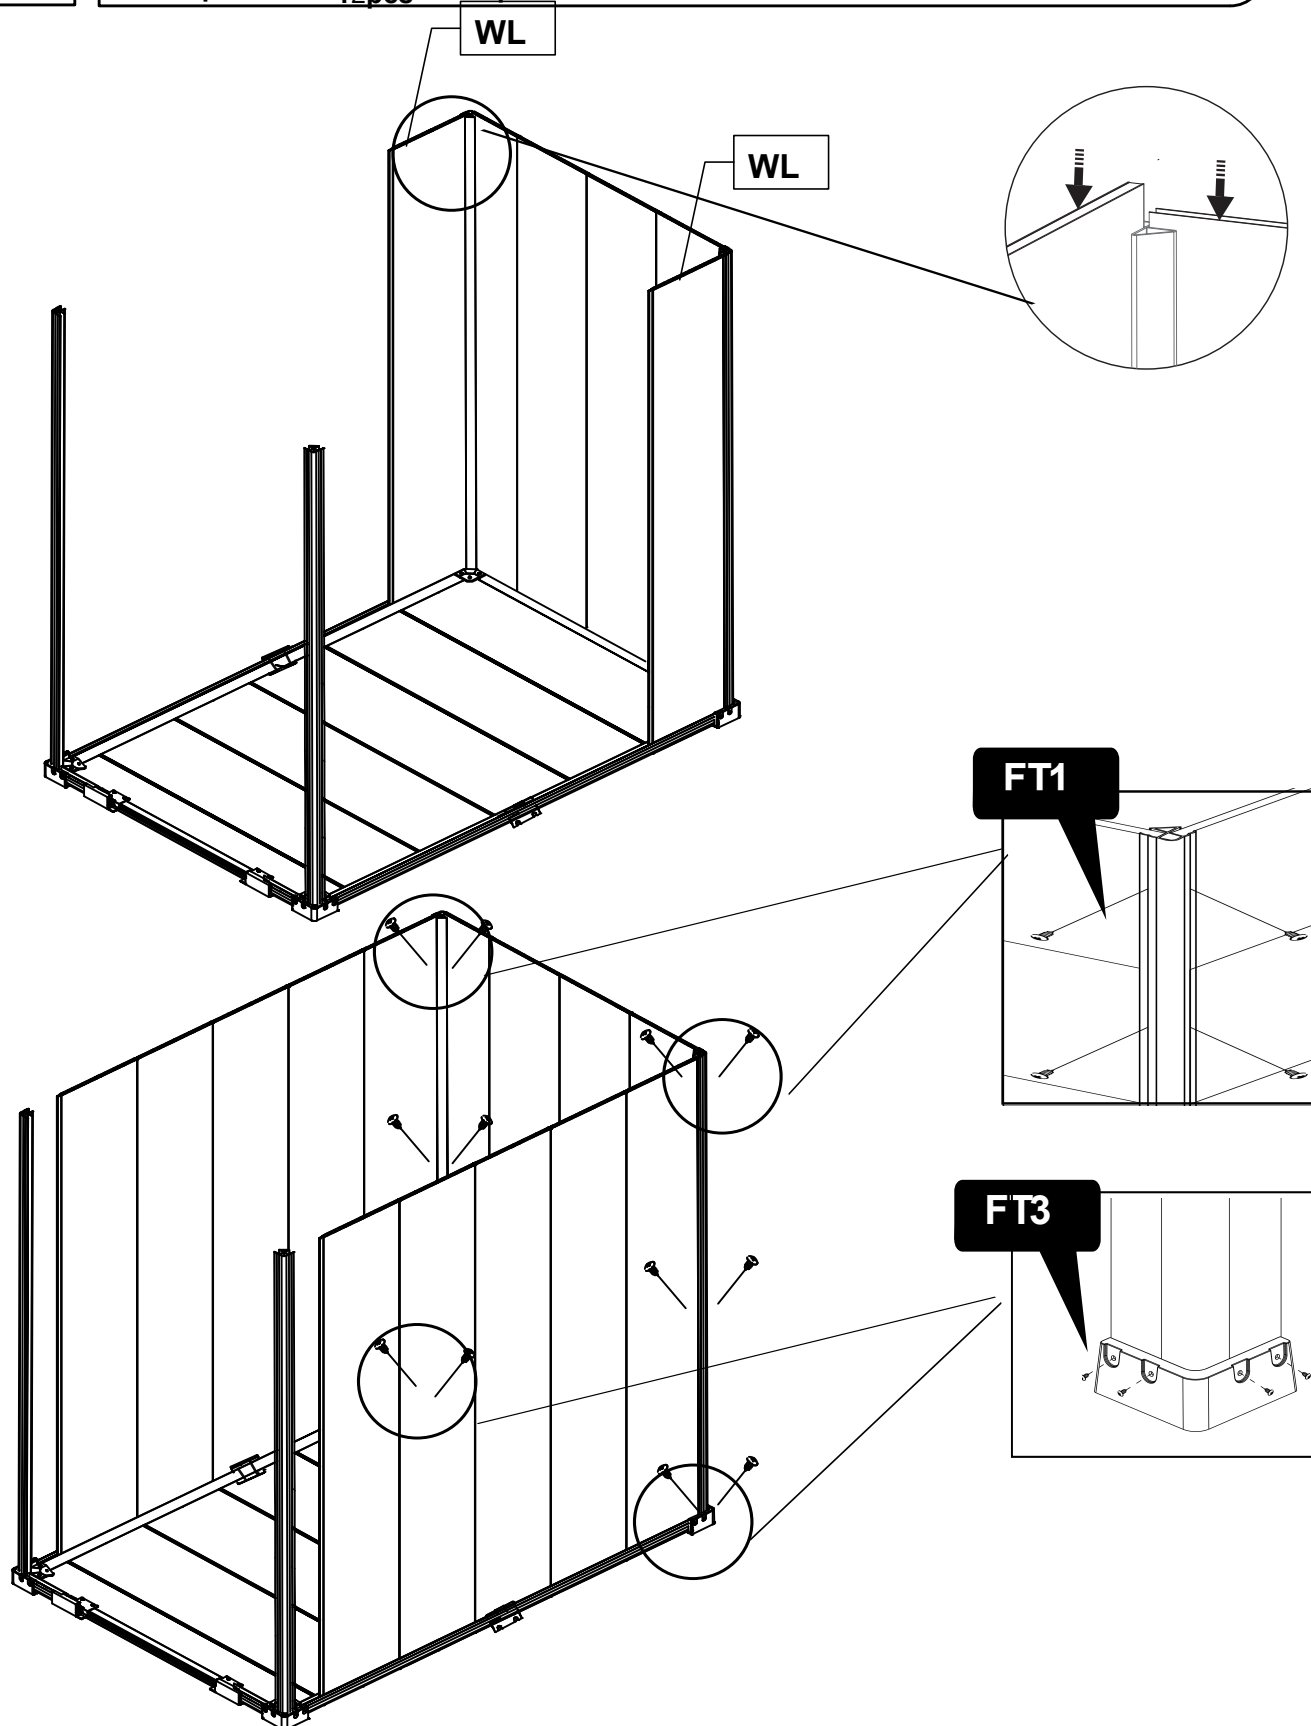


FT1

FT3

ASSEMBLY INSTRUCTIONS

9



WLF
2pcs







WF
10pcs



FT1
12pcs



FT3
8pcs

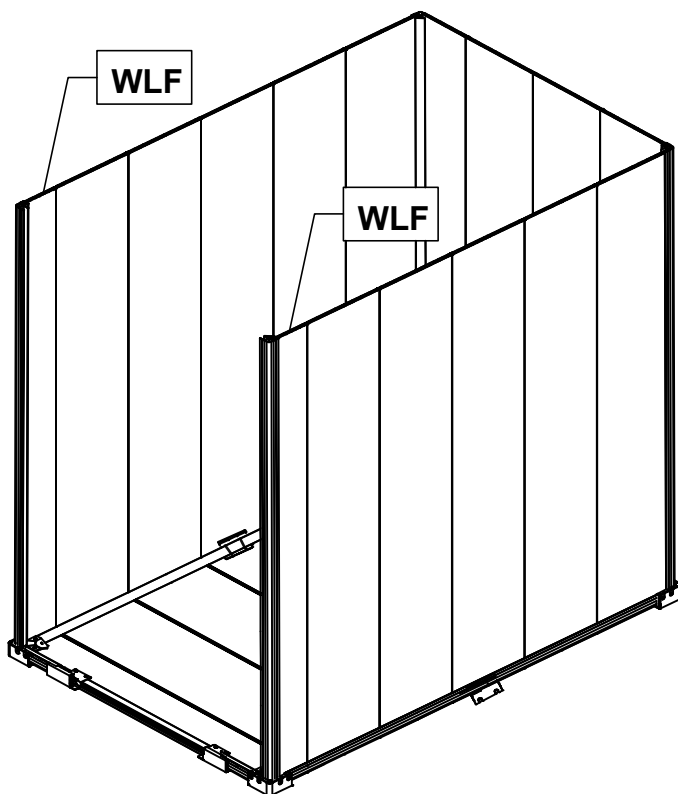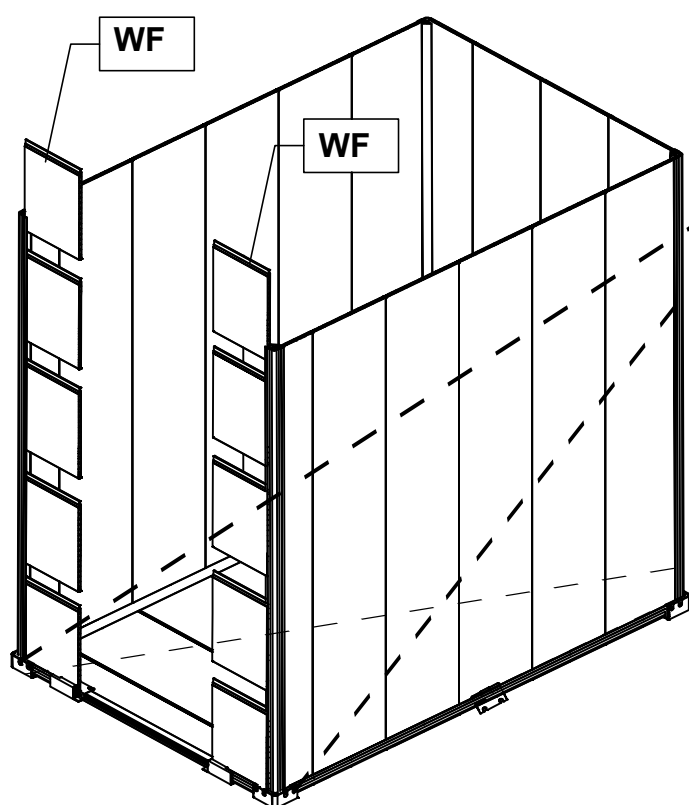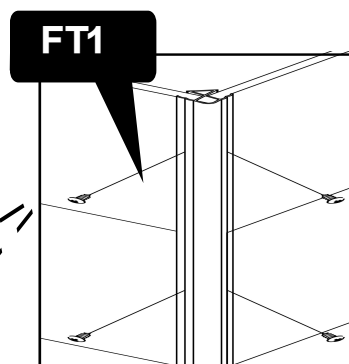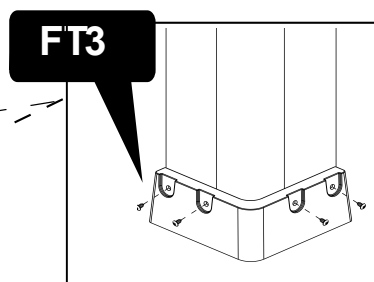

ASSEMBLY INSTRUCTIONS

10



DAL
1pc



DAR
1pc



DAU
1pc






PJC
1pc



FT2
10pcs



FT1
3pcs

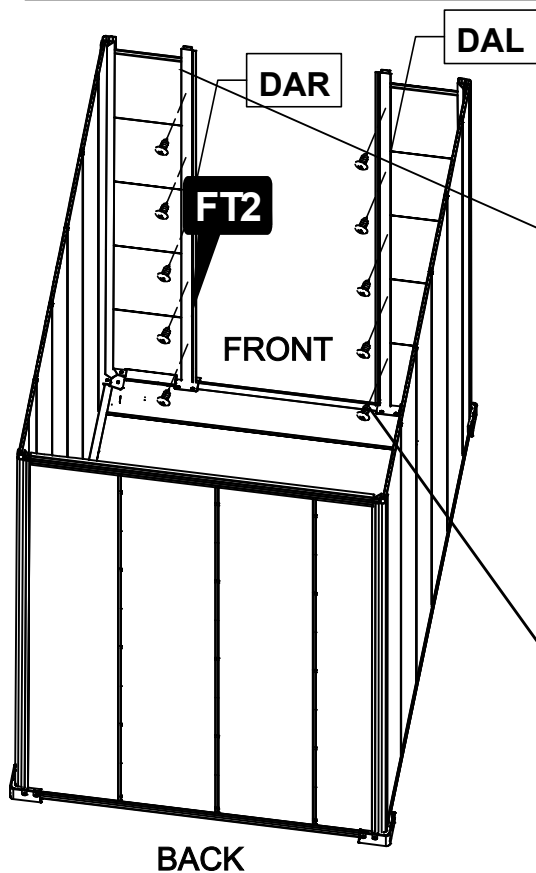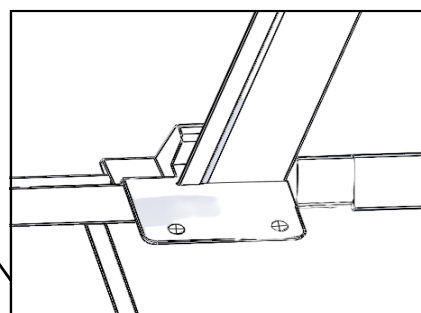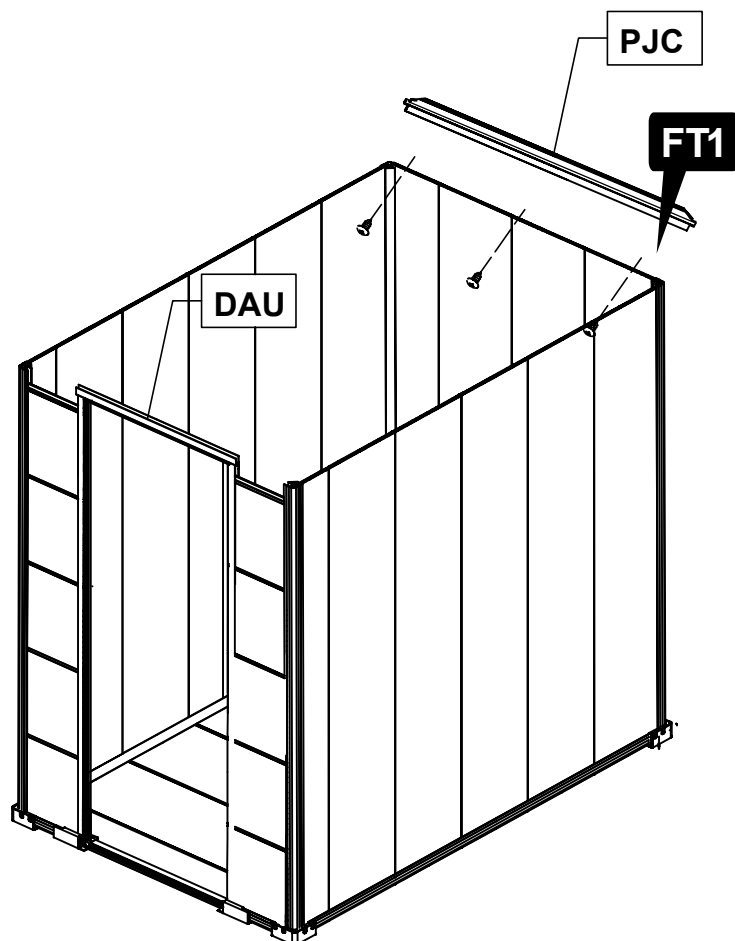

ASSEMBLY INSTRUCTIONS




11



FT3
18pcs




FT2
26pcs

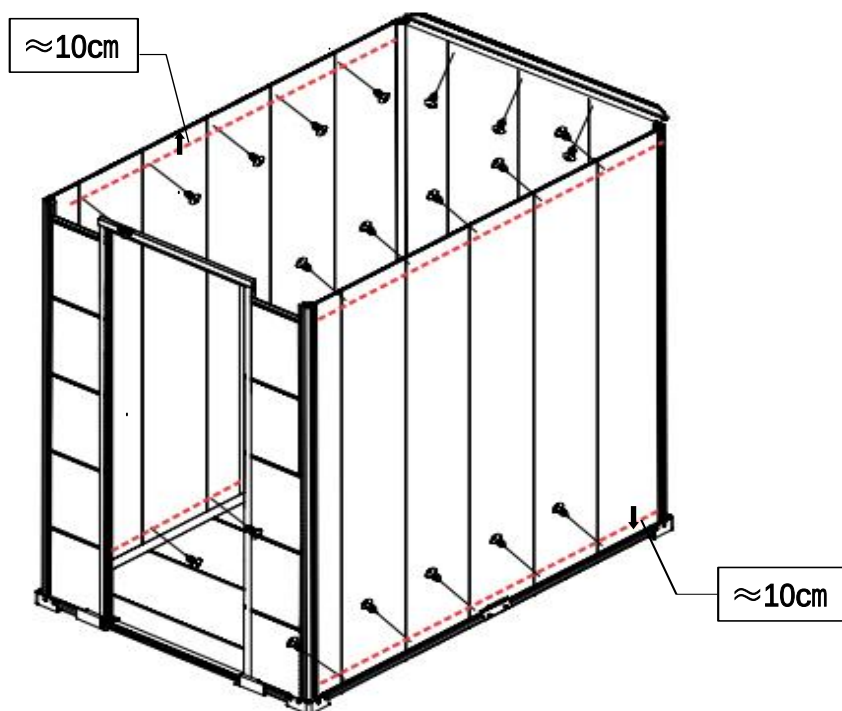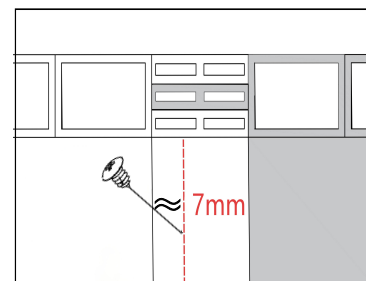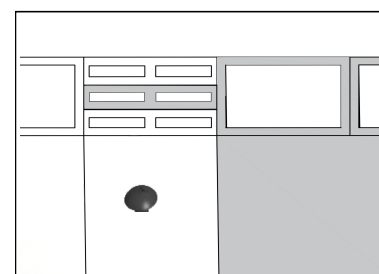


FT2 shall be marked 10 cm away from both the top and bottom edges of the wall panel.

FRONT

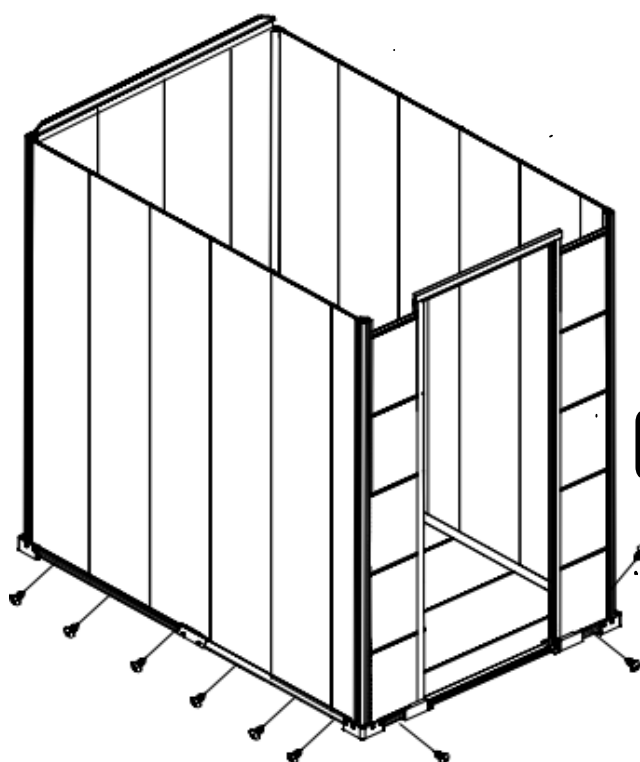

FT3

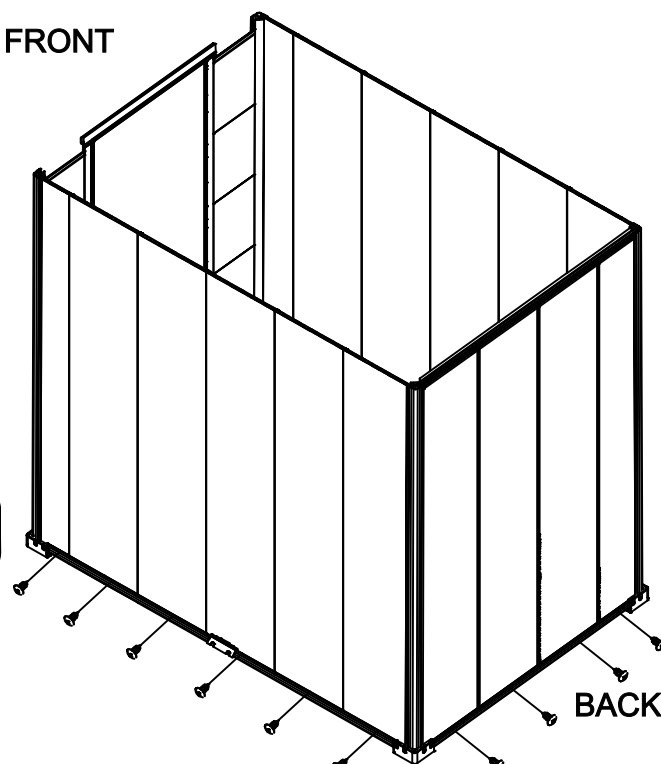

BACK

FT3

ASSEMBLY INSTRUCTIONS

12




WFD1
1pc






WFD2
1pc




WBD
1pc



VNR10
2pcs

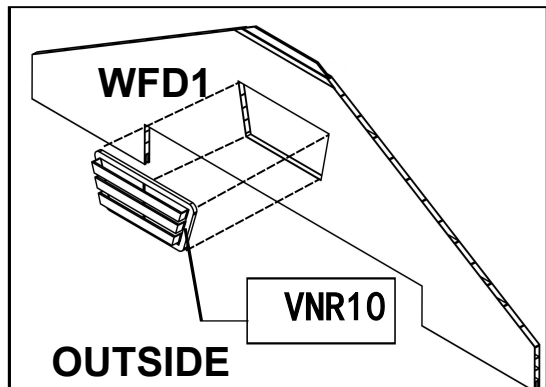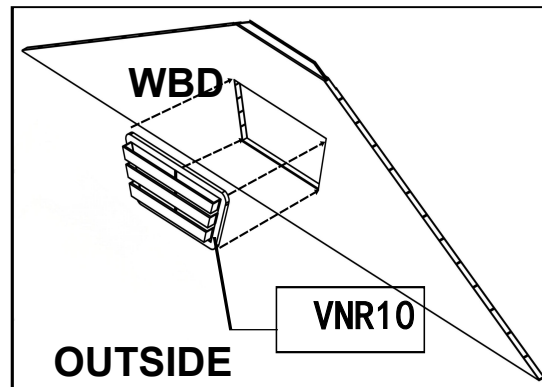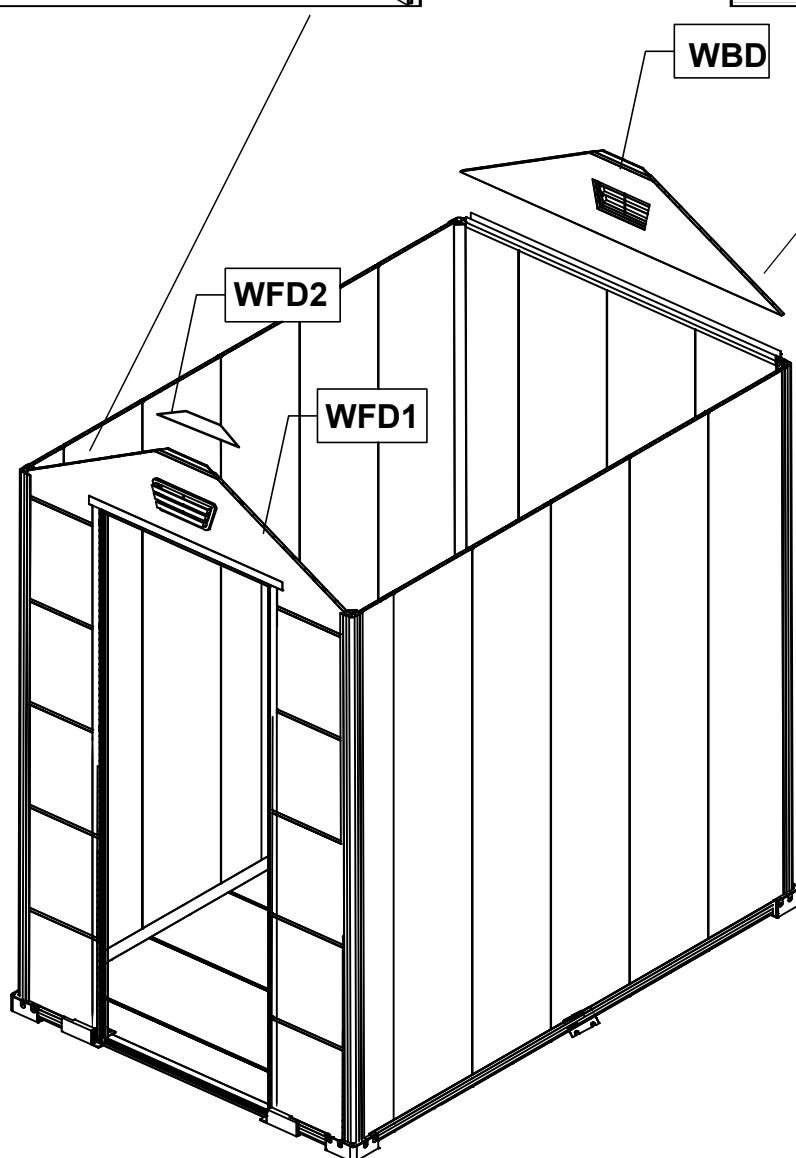

13






HD1
2pcs



FT1
11pcs




FT2
1pc

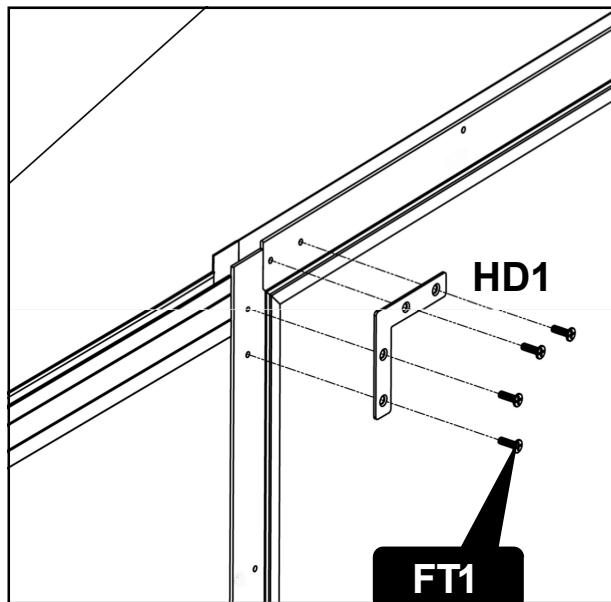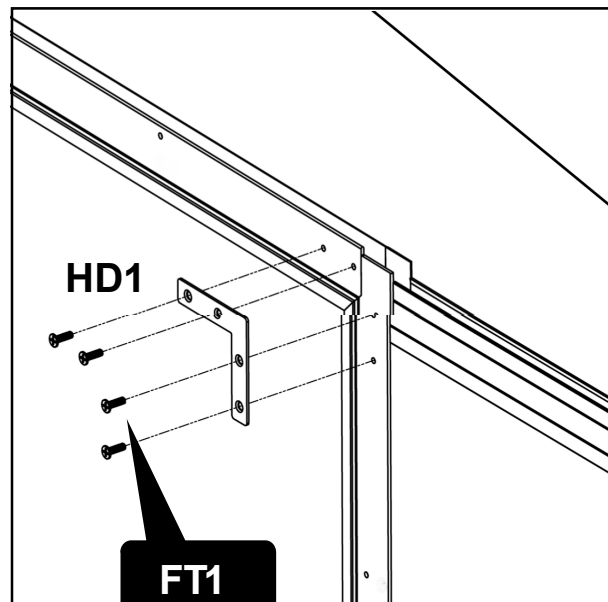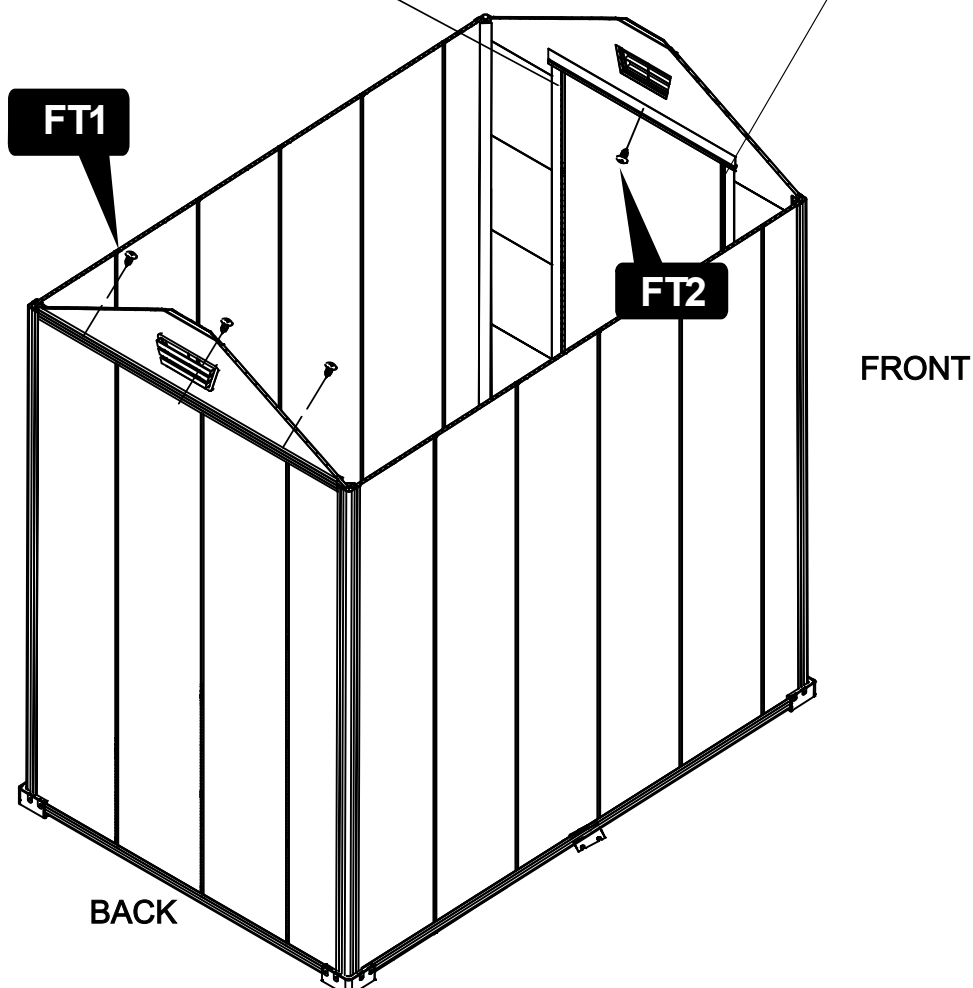

ASSEMBLY INSTRUCTIONS

14





R10L
2pcs




FT1
6pcs


Install by gently bending it by hand.

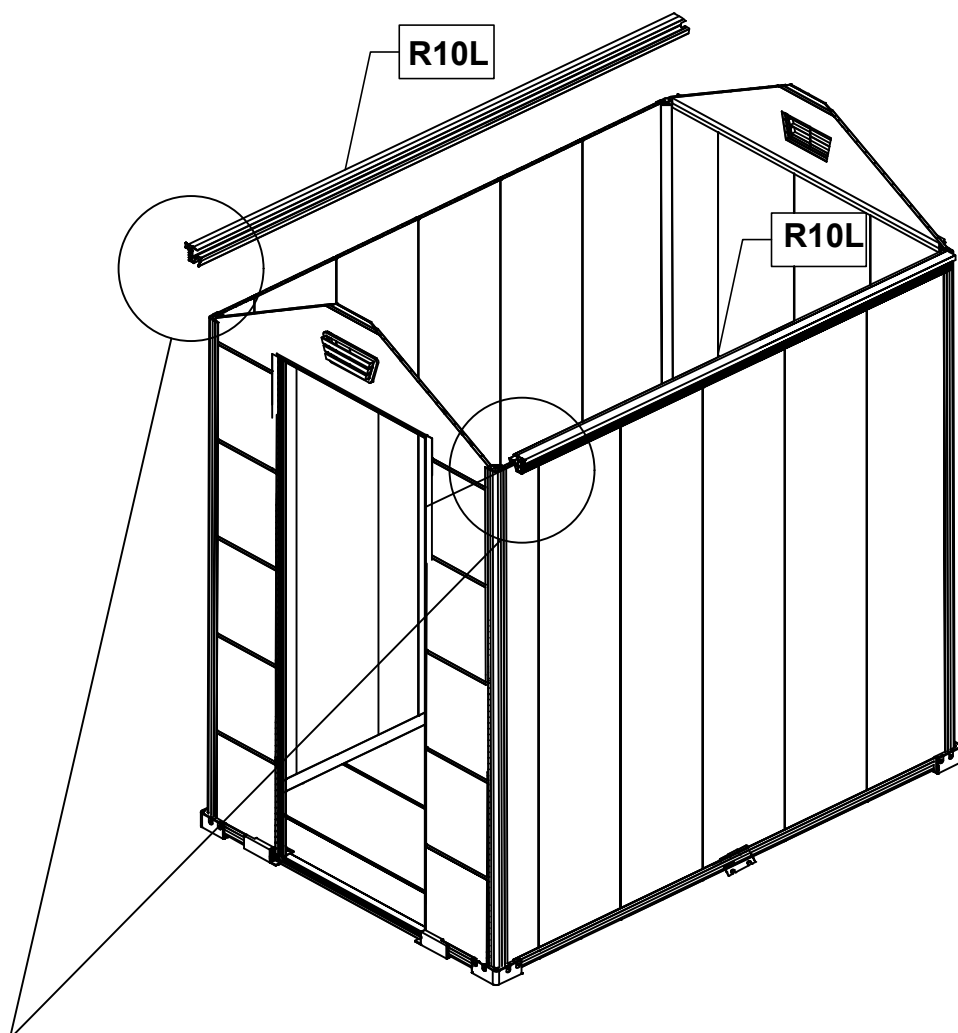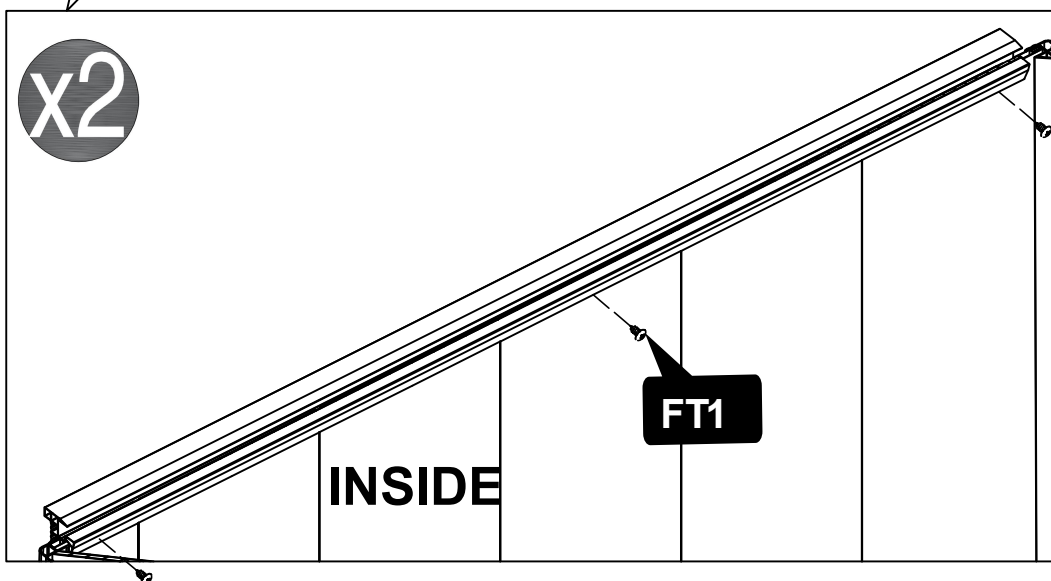

15



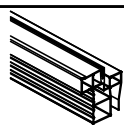


R10F
4pcs

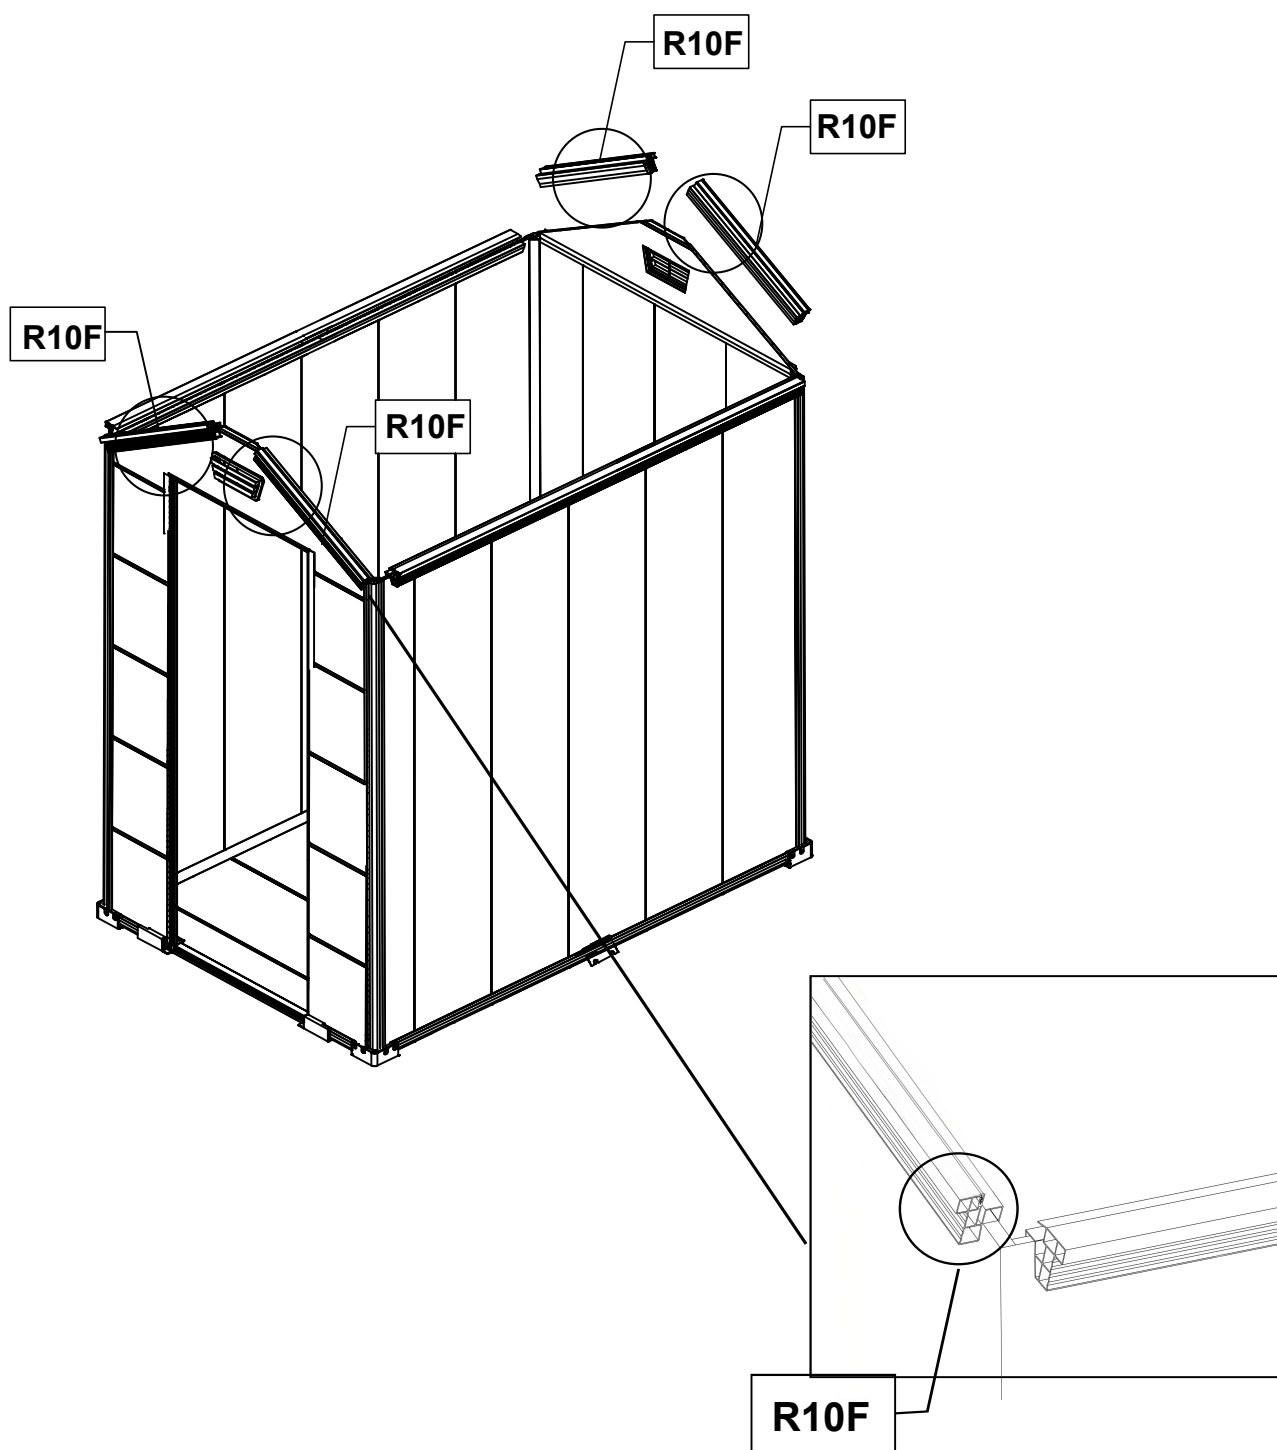


ASSEMBLY INSTRUCTIONS

16

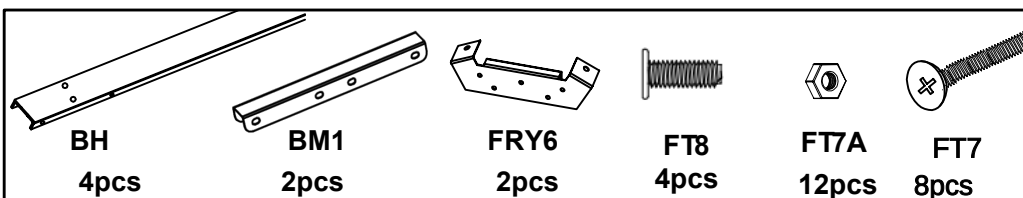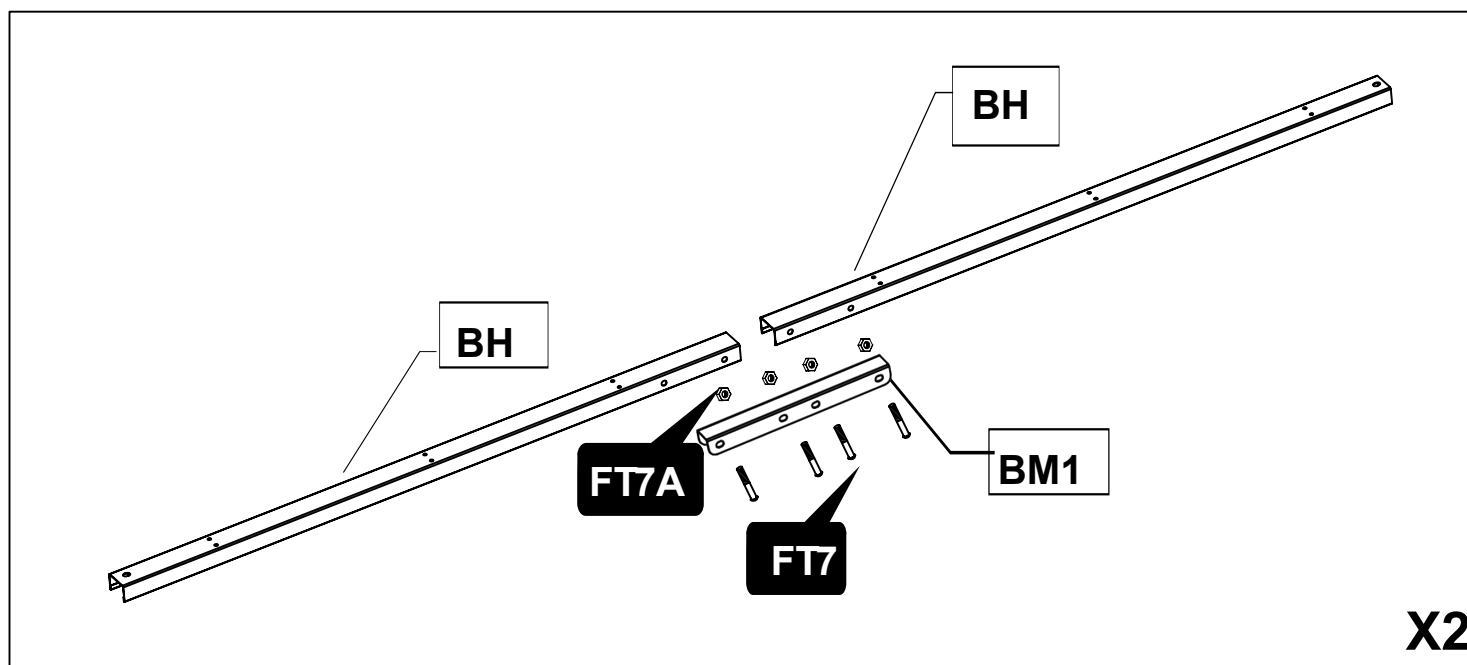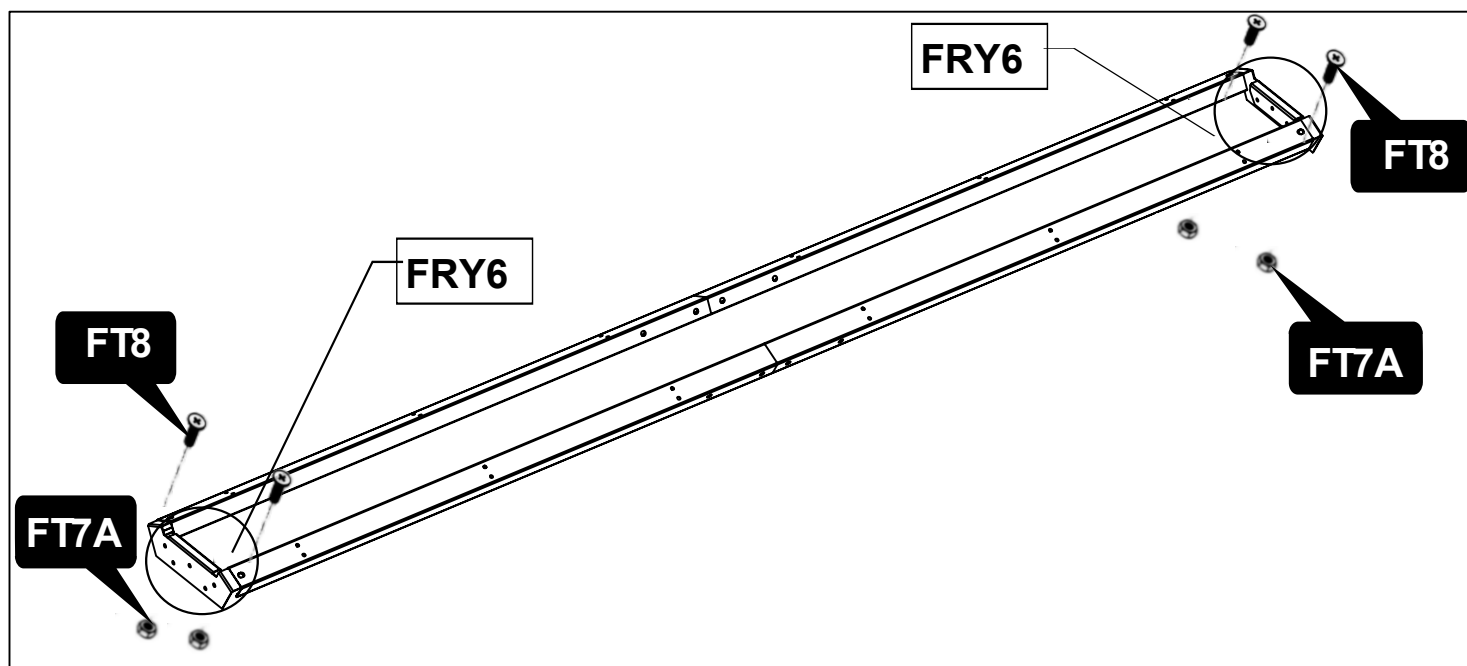

ASSEMBLY INSTRUCTIONS

17



RF
10pcs









FT1
8pcs



FT2
16pcs



FT3
2pcs

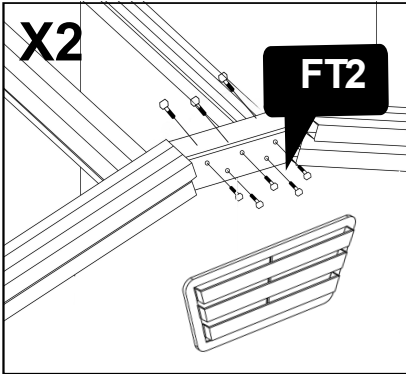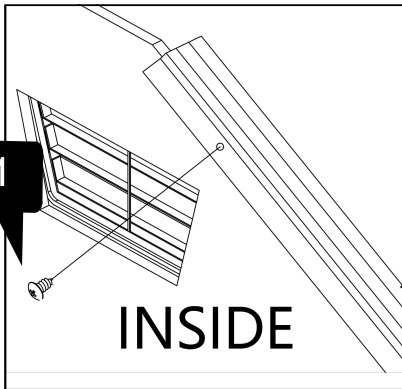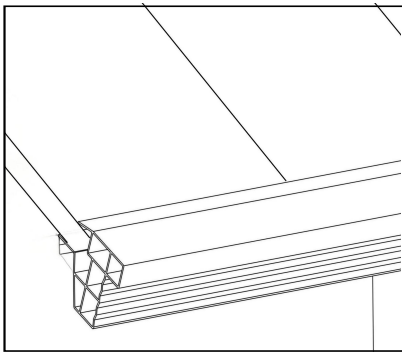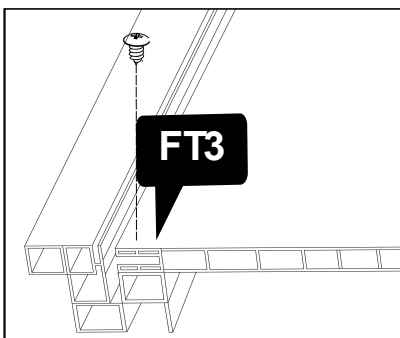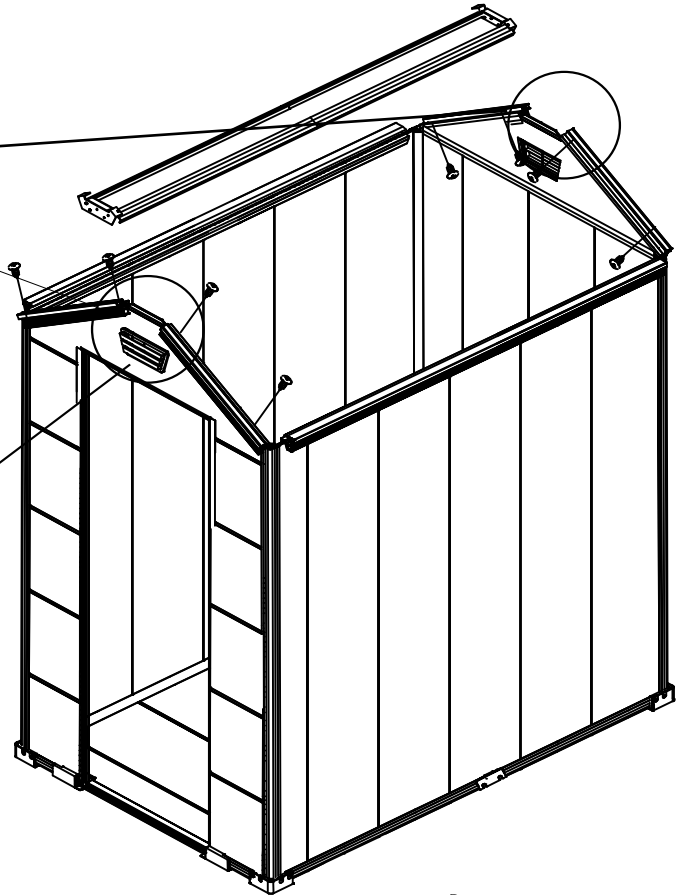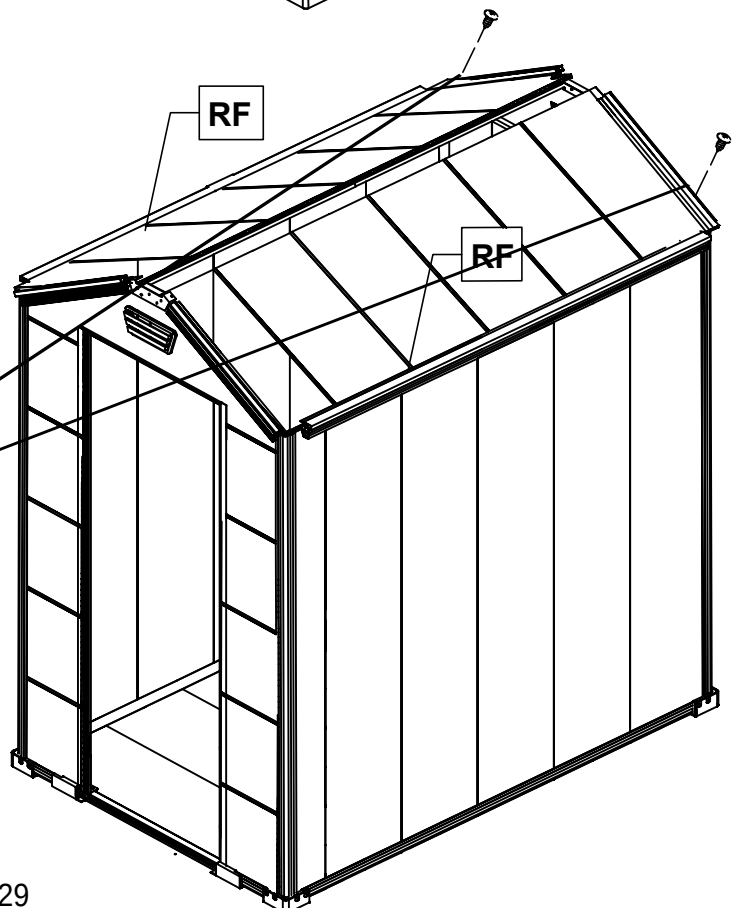

NOTE: Keep boards closely connected. Tap tight with a hammer if there are gaps.

ASSEMBLY INSTRUCTIONS

18






RF1
2pcs






FT2
12pcs




FT3
14pcs

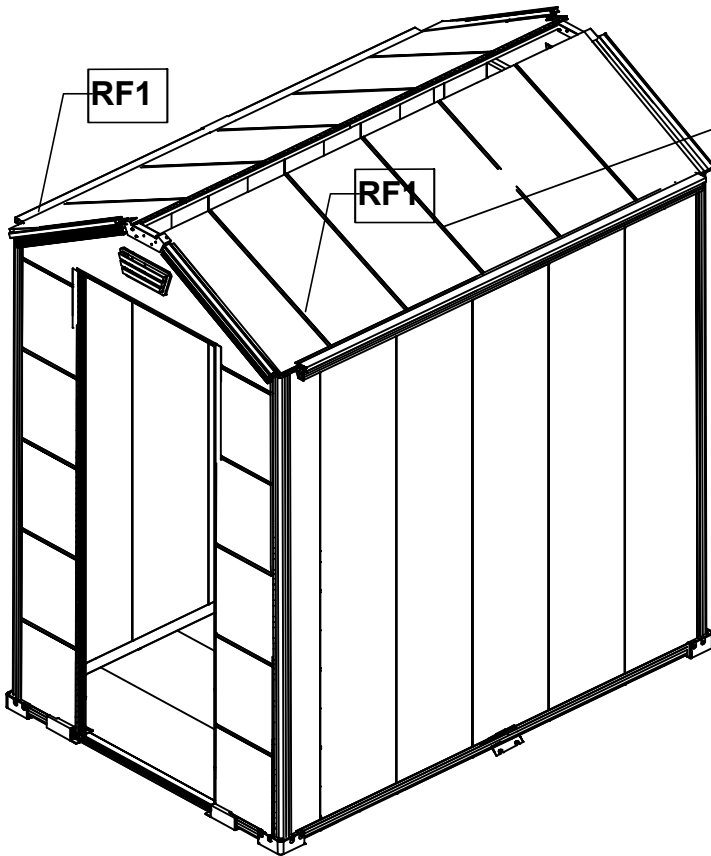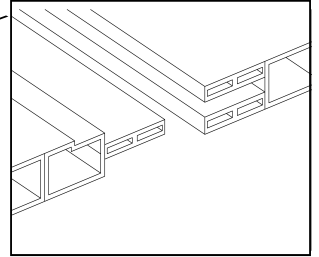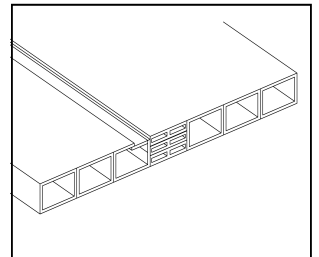




Fasten screws of BH from bottom to top. Fasten FT2 screws of connecting plate from top to bottom FT3.

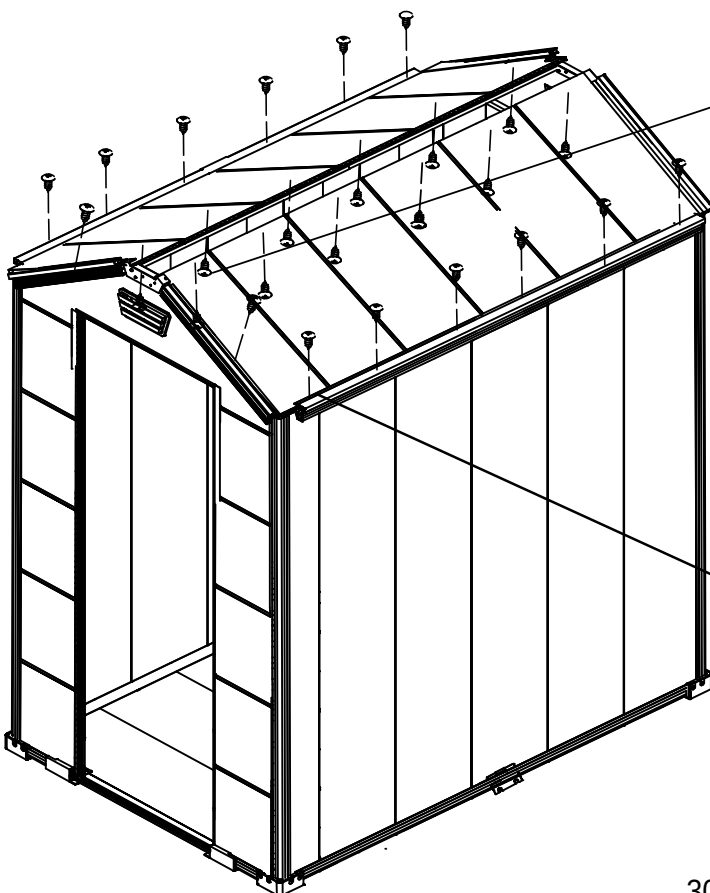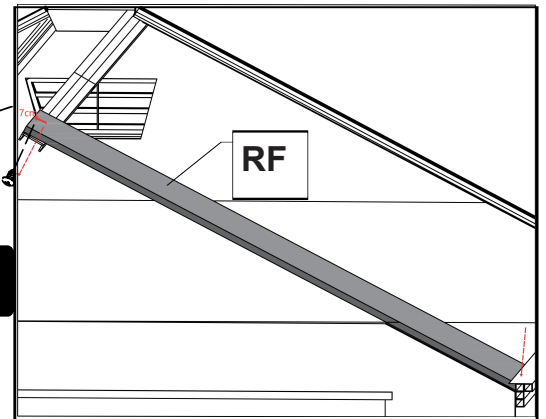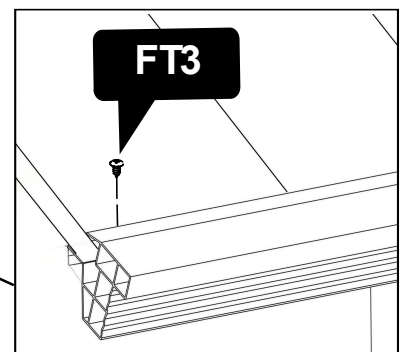

19



PSR
4pcs

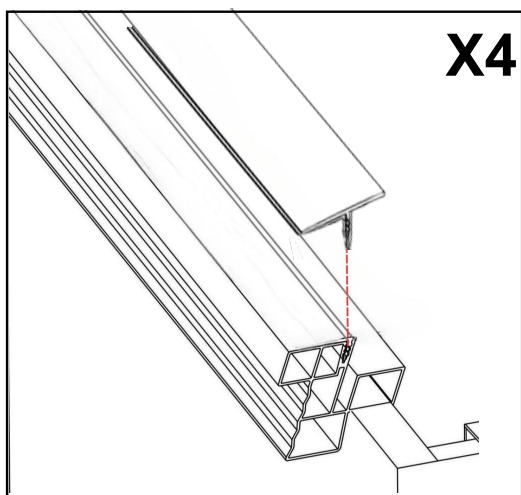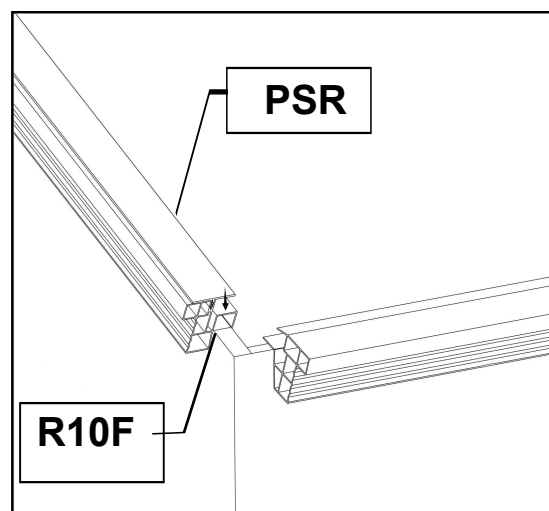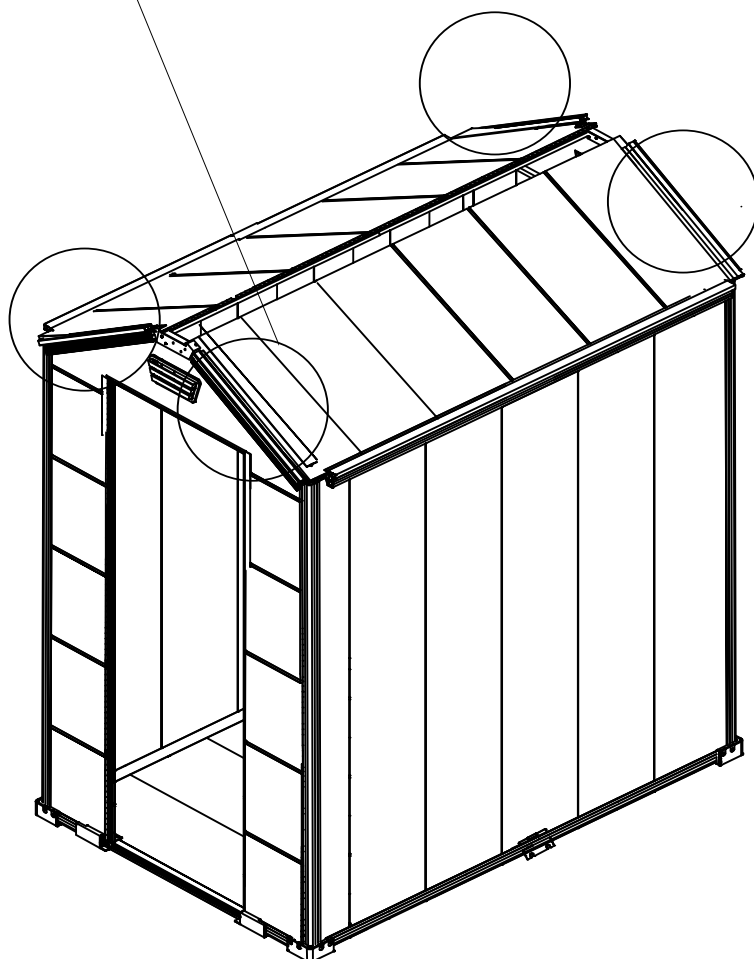

ASSEMBLY INSTRUCTIONS

20



RRC
1pc



RT
2pcs








FT1
8pcs



Rubber sealing strip
1pc

Rubber sealing strip
(X1)

Rubber sealing strips shall be affixed
to RRC as shown in the drawing.

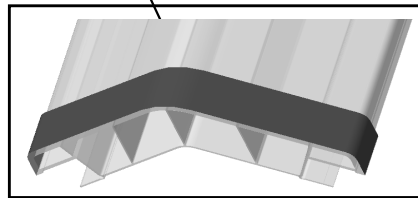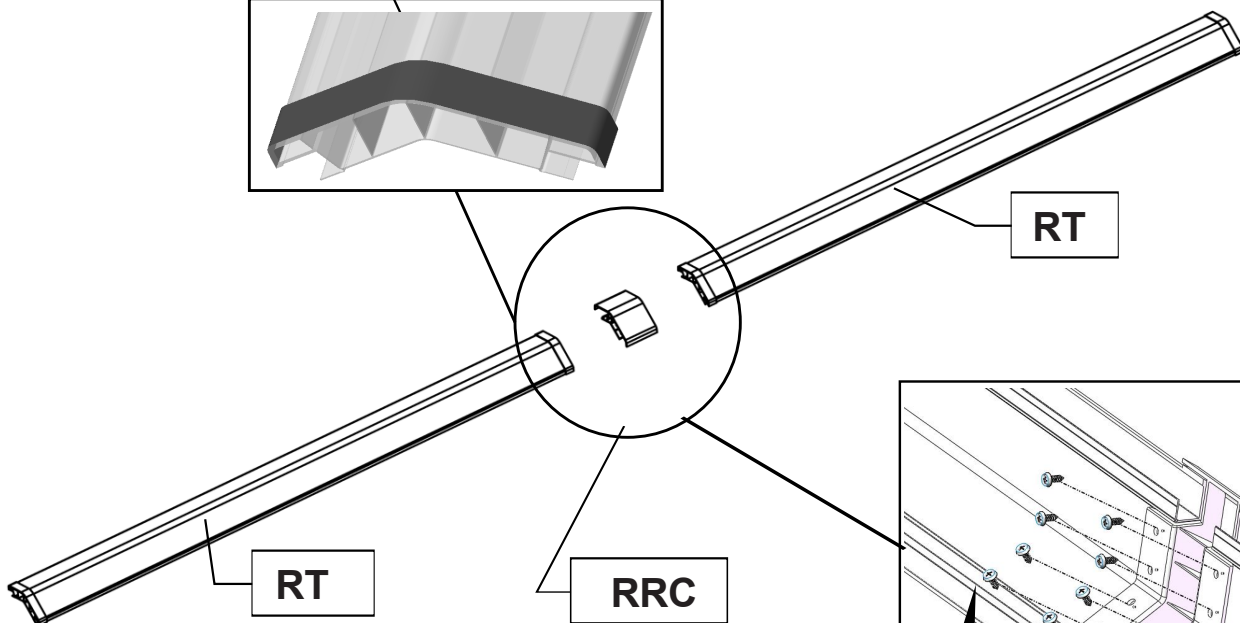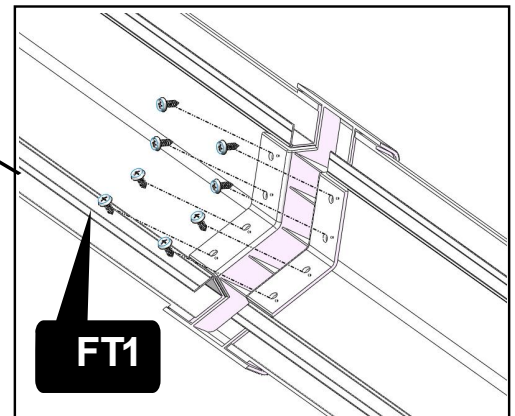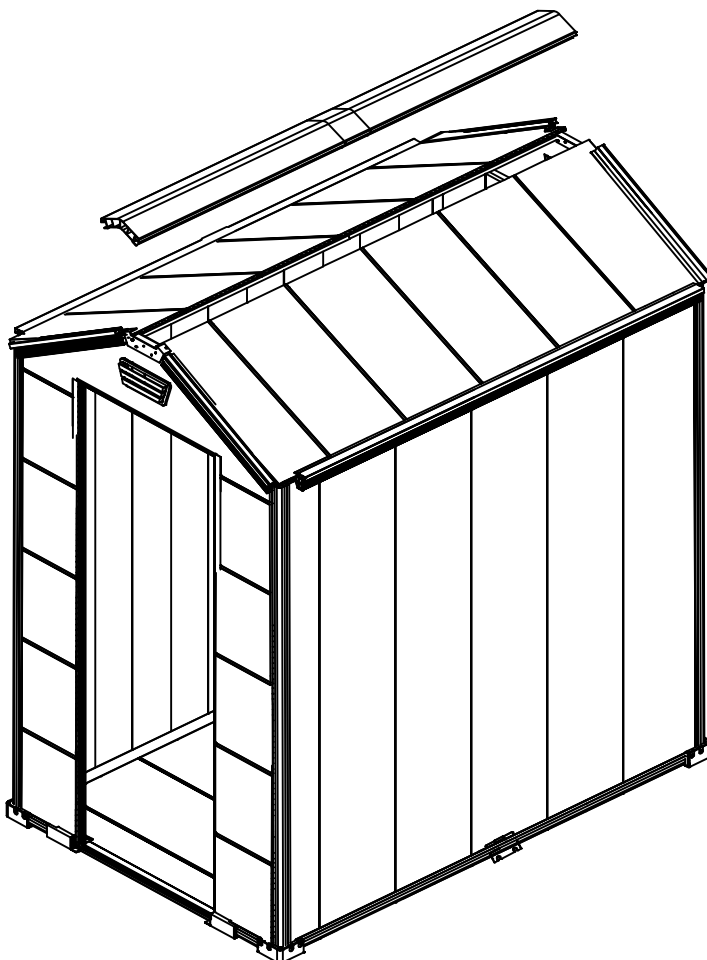
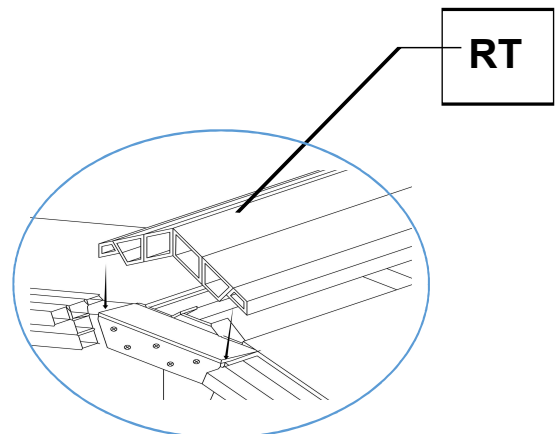


ASSEMBLY INSTRUCTIONS

21




FT3
12pcs

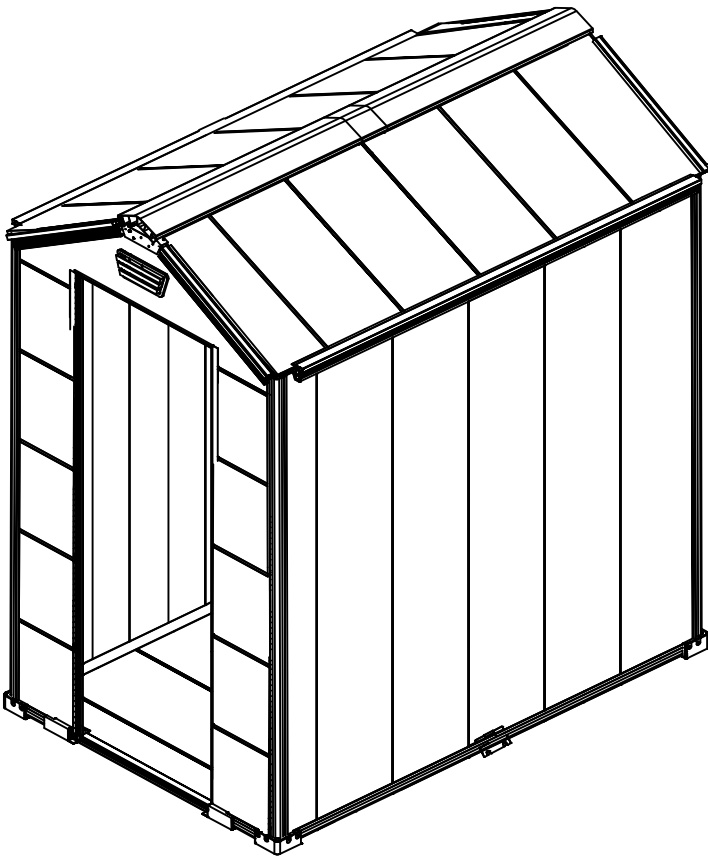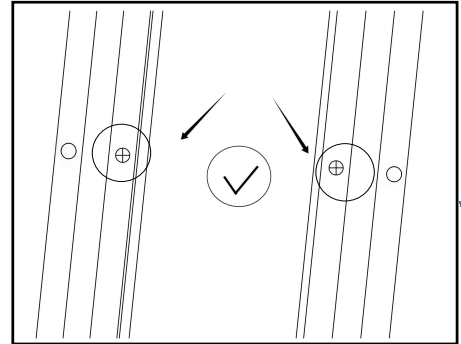

FT3 marking location as shown in drawing.

NOTE : Use drill to prop up before screwing for easier operation.
Fasten screws from front to back

Screw from inside of the shed Roof

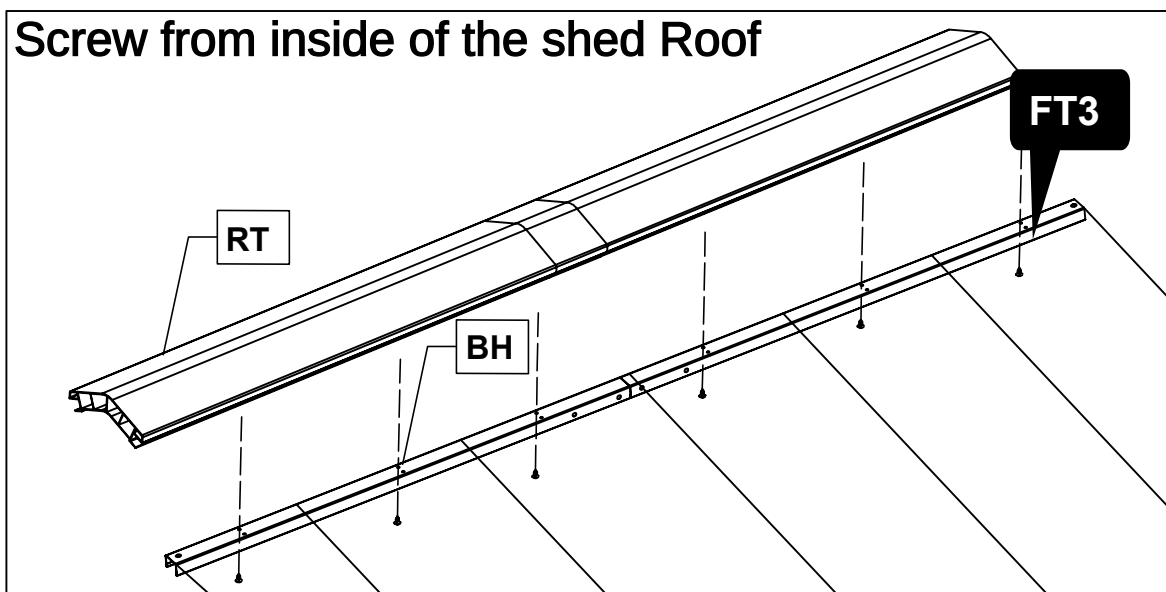

Align rt with the top plate

ASSEMBLY INSTRUCTIONS

22







RRH
2pcs



FT11
4pcs



FT1
4pcs

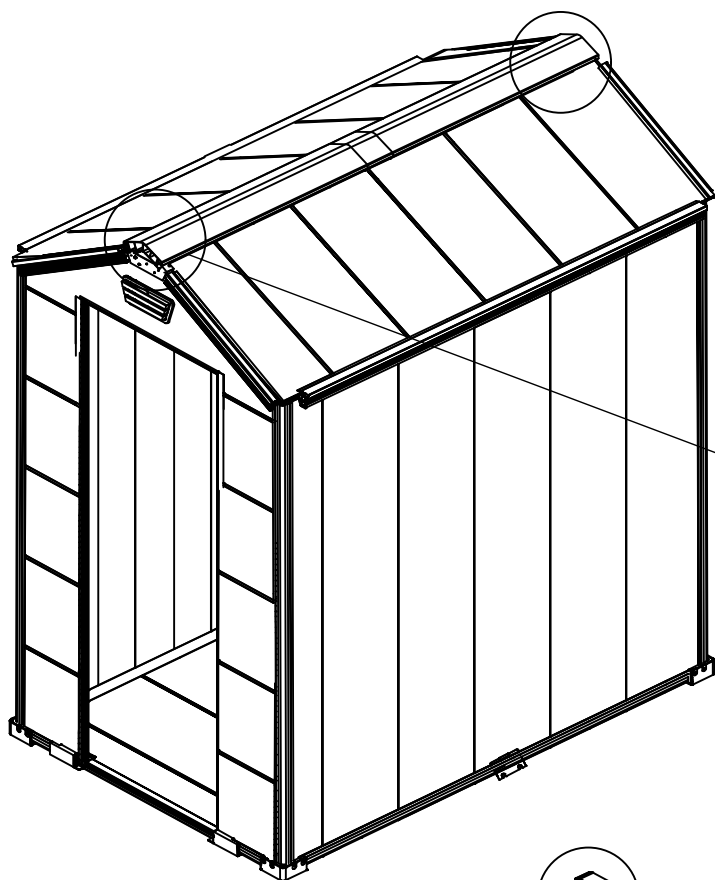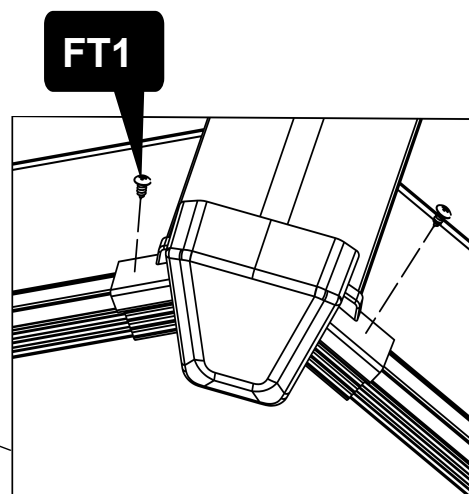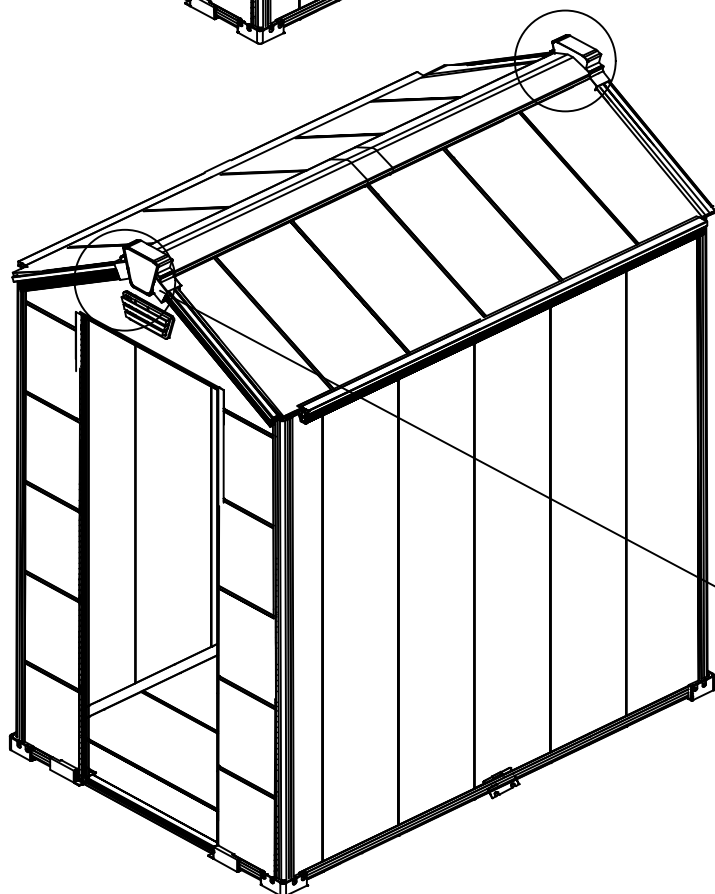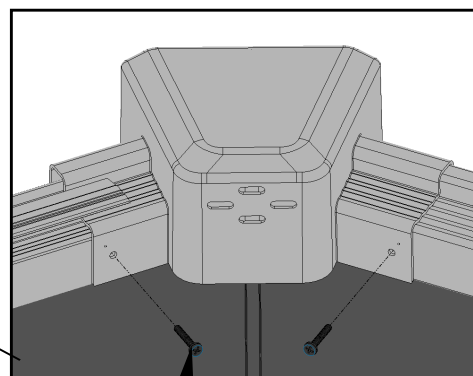

23




RRA
4pcs




FT11
8pcs



FT1
8pcs

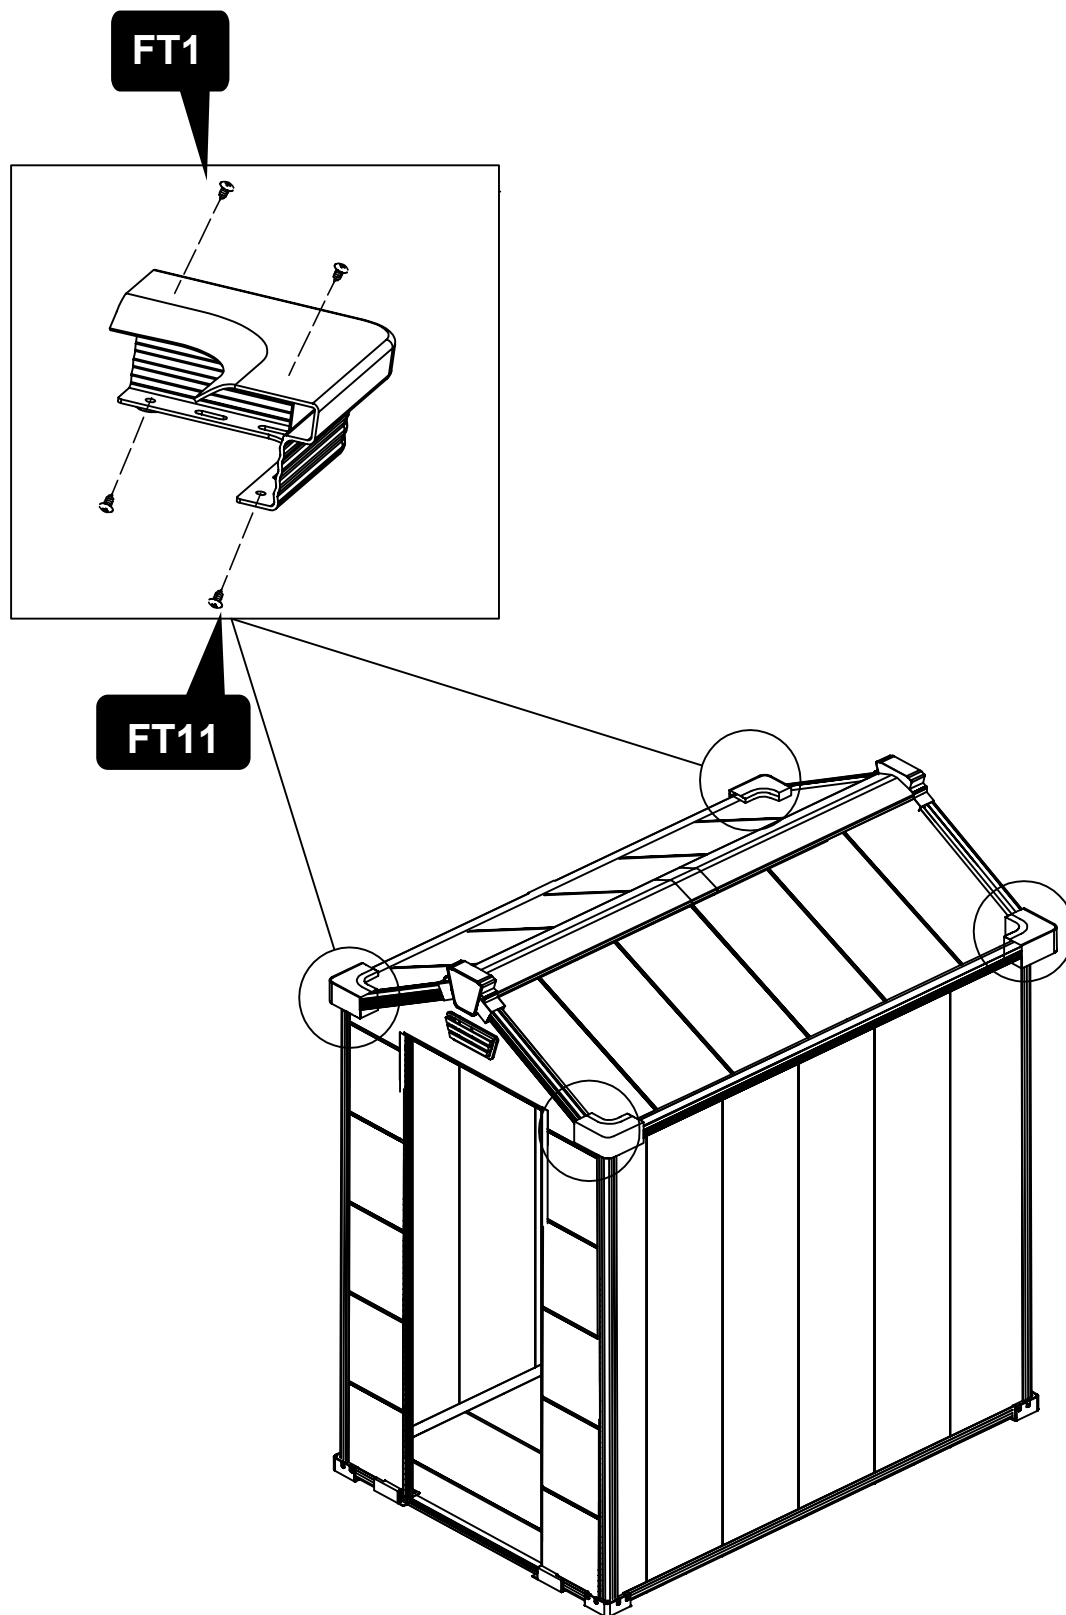

24






BHW
2pcs






FT2
22pcs

BHW shall be installed at the midpoint of the wall panel.

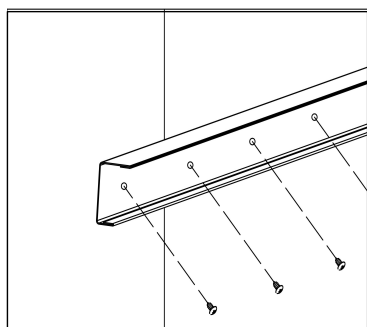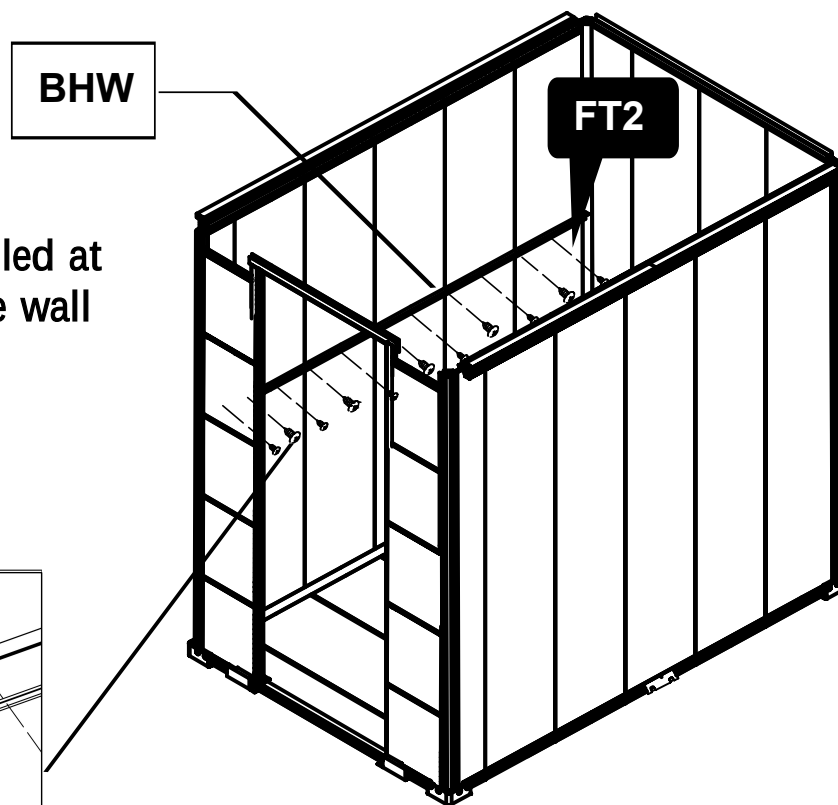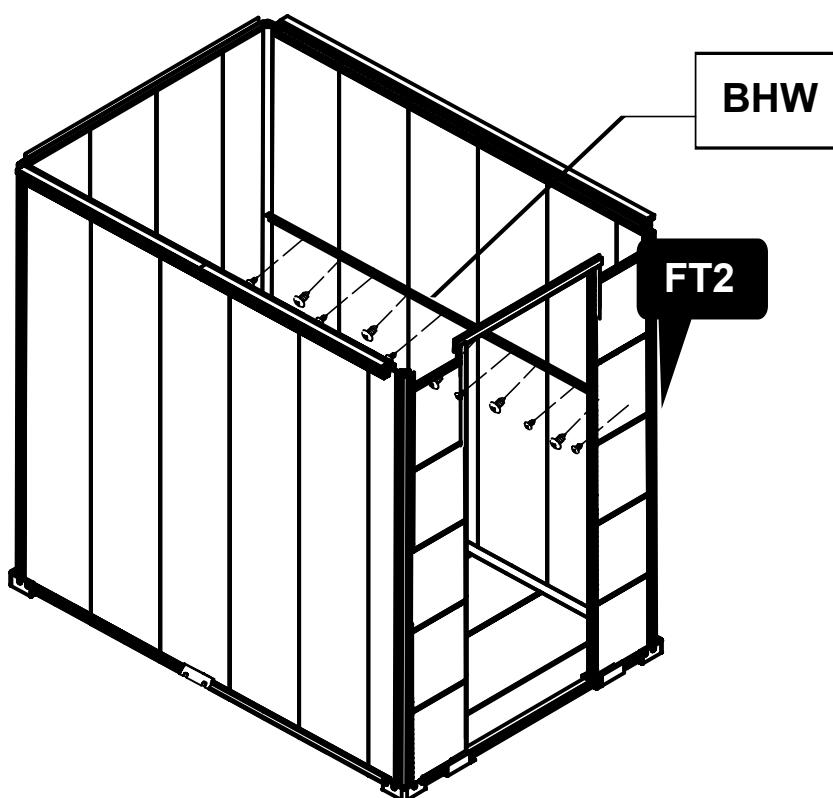

ASSEMBLY INSTRUCTIONS

25

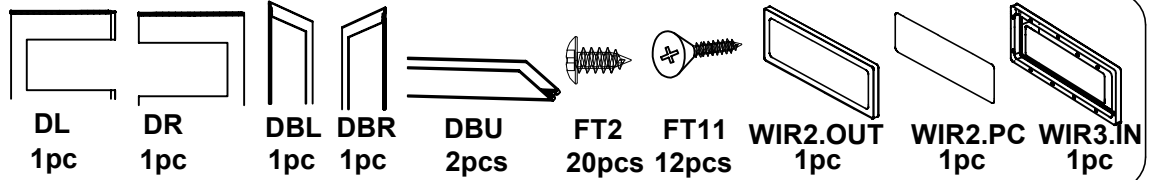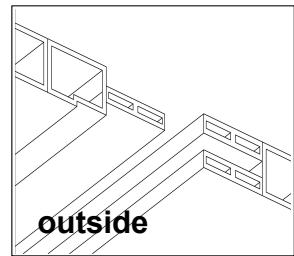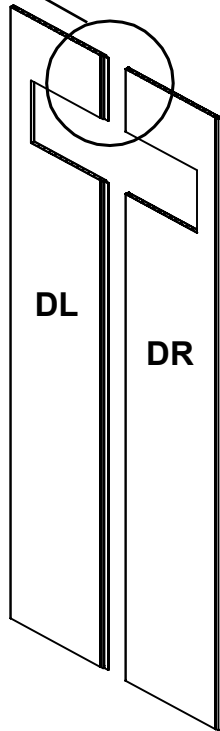

WIR3.IN

FT11

WIR2.PC

WIR2.OUT

inside

inside



DBU

DBL

DBR

outside

DBU

FT2



inside

ASSEMBLY INSTRUCTIONS

26



DH2
1pc



DH1
1pc



HD7
2pcs




FT11
10pcs







FT14B
2pcs



FT14A
2pcs



FT14
2pcs

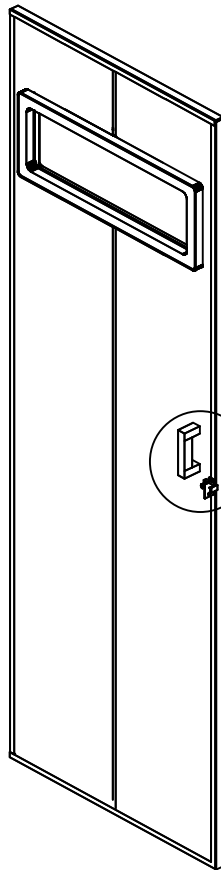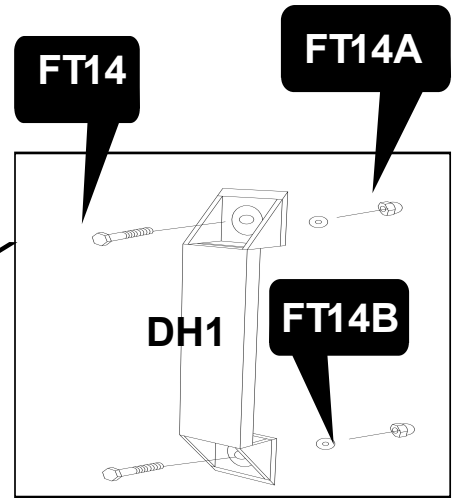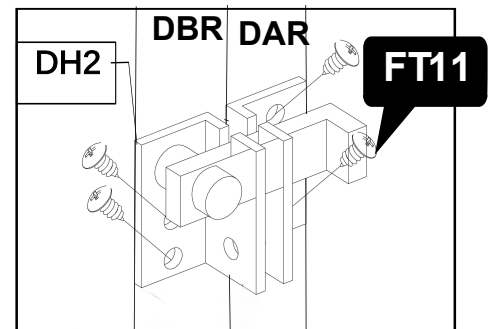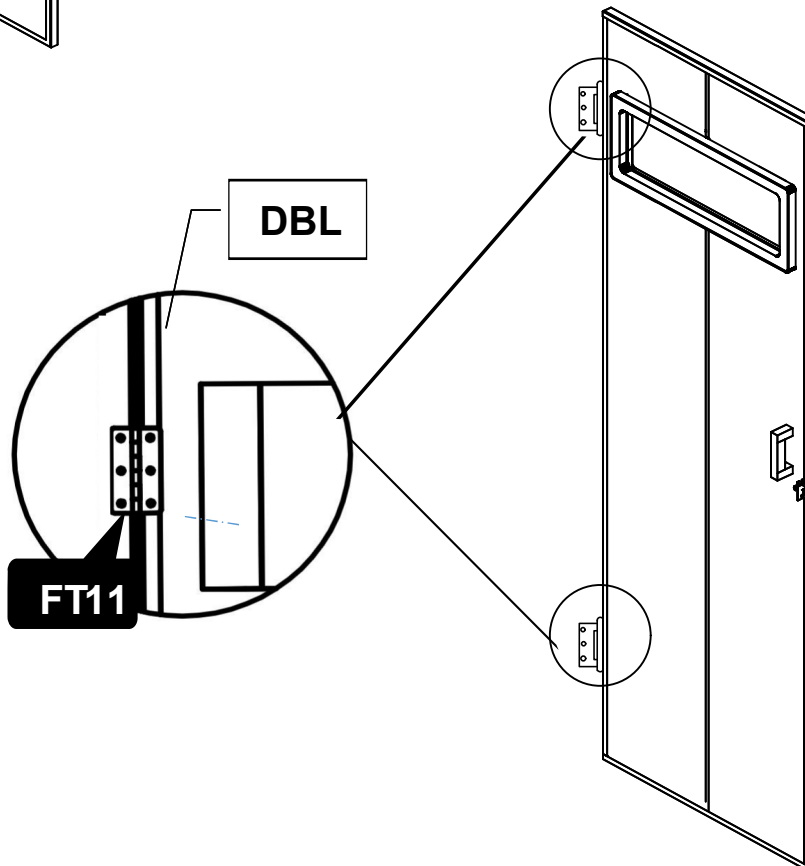

ASSEMBLY INSTRUCTIONS

27



FT11
6pcs




FT12
4pcs


OR



FT3
4pcs

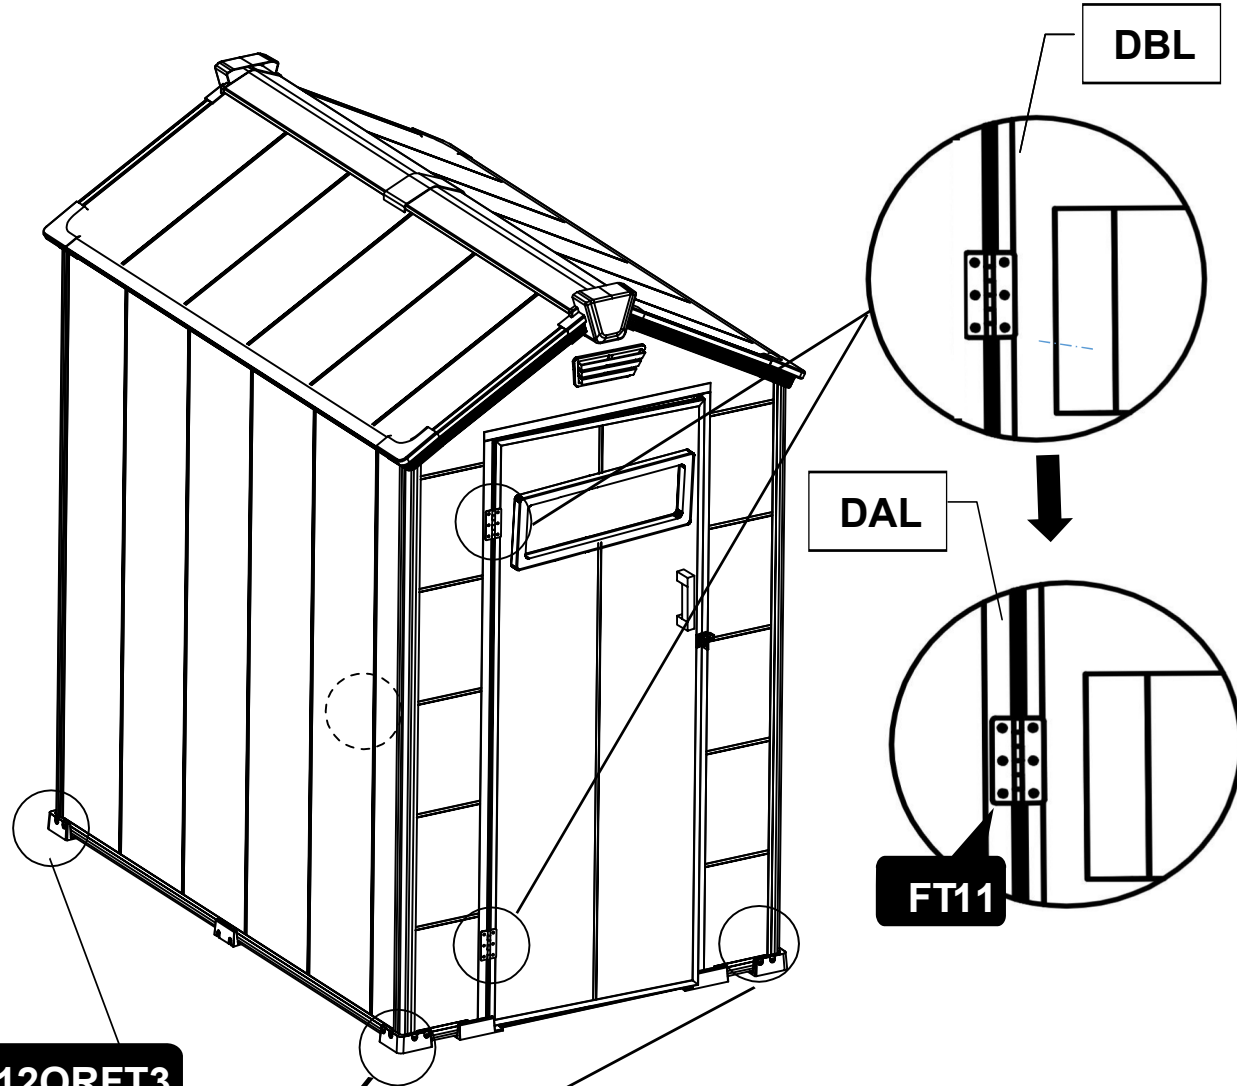

FT12ORFT3

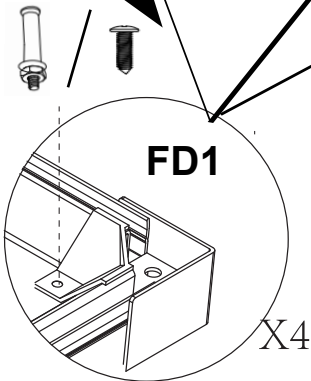

If you need to anchor the shed to a level solid surface (such as concrete or a wooden deck), please first remove the four FT2 screws installed during assembly (located at the four corners). Next, using your own impact drill, drill through the flooring at those same locations; then, secure the shed using FT12 screws for concrete surfaces or FT3 screws for wooden decking.

Thank you for purchasing and using our product; please feel free to contact us if you have any questions or feedback.