#### IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

\* Before you begin, please read Assembly Instruction carefully and recognized the part and hardware and follow the assembly step in order. Do not skip any steps.

\* Please place on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the cartoon during shipment. If parts are missing, contact the retailer from which your purchased the product to obtain any missing part. DO NOT USE SUBTITUTE PART.


\* Do not stand on tables, including but not limited to, end tables, coffee tables, and dinner tables, as tablesare not to support the weight of a person, use a step ladder in order to assembly upper item.

\*Where assembly instructions state that the assembly requires two or more people, do not attempt by yourself as there is a risk injury.

NOTE: WE DISCLAIM ANY LIABILITY FOR DAMAGES OR INJURIES WHICH MAY OCCUR DUE TO FAILURE TO PROPERLY FOLLOW ASSEMBLY INSTRUCTION, PROPERLY ASSEMBLY THE PRODUCT, OR PROPERLY USE THE PRODUCT.

STOP

NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THIS INSTRUCTION SHEET.

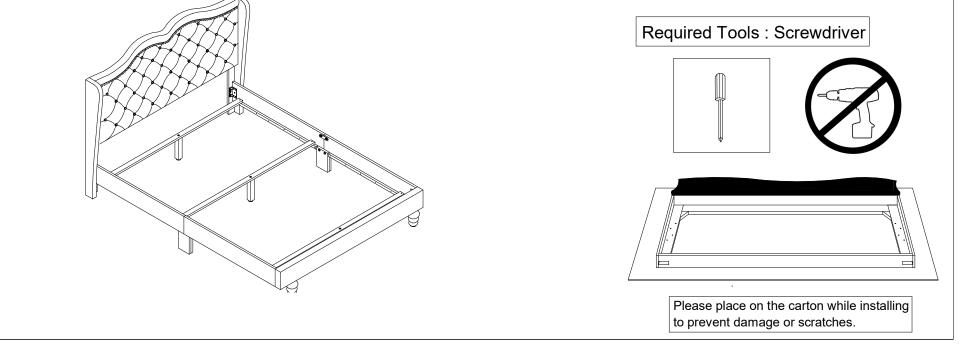

Page : 1 OF 7


QUEEN BED

#### ASSEMBLY PART 2. 1. 3. 4. 5. 6. SIDE RAIL RIGHT (2PCS) SIDE RAIL LEFT (2PCS) LEFT WING **RIGHT WING** HEADBOARD PANEL FOOTBOARD PANEL 10. 8. 9. 11. 7. 12. SUPPORT LEG FOOTBOARD LEG (3PCS) (2PCS) **HEADBOARD HEADBOARD** SIDE RAIL LEG (2PCS) HARDWARE DESCRIPTION SLATS (3PCS) NO QTY LEFT LEG **RIGHT LEG** Α. Allen Key M4 1PC Β. Chipboard Screw M4 x 32mm 6PCS C. 4PCS JCBC Bolt M6 x 15mm JCBC Bolt M6 x 40mm 0 14PCS D. Ε. Spring Washer 0 18PCS F. $\bigcirc$ Flat Washer 18PCS G. 2PCS Side Rail Connect $\bigcirc$ $\bigcirc$ 1PC Η. Allen Key M5 ()\_\_\_\_\_ 8PCS JCBB Bolt M8 x 16mm JCBC Bolt M6 x 35mm 7PCS J. SCREW DRIVER NOT PROVIDE !!!

Page : 2 OF 7

#### STEP 1.

Open the cover cloth located behing the Headboard (1) and attach the Right Leg (12) and Left Leg (11) use JCBC Bolt (D), Spring Wahser (E), Flat Washer (F) and Allen Key M4 (A) to fix.

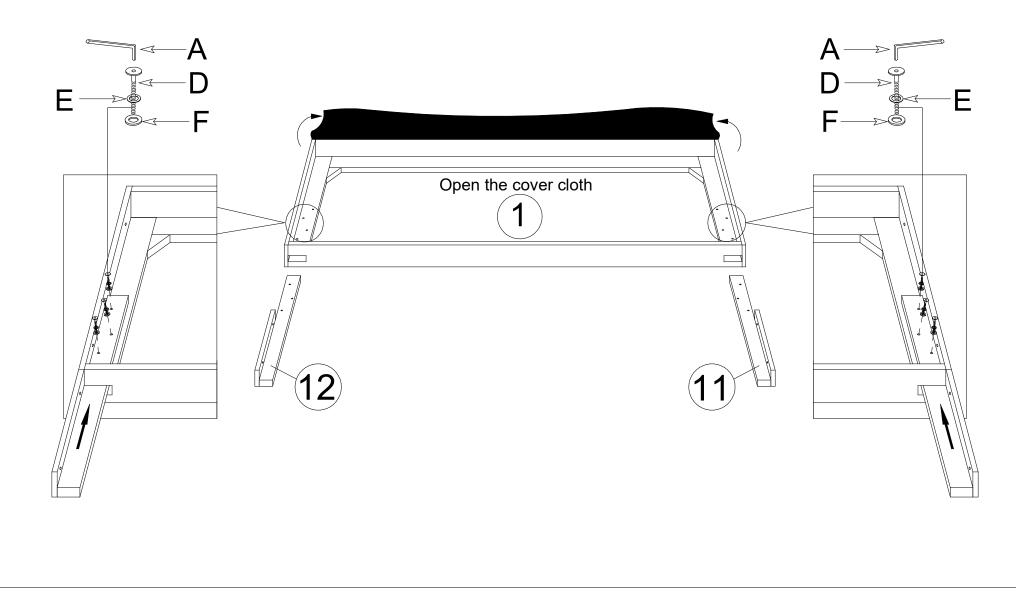


#### QUEEN BED


#### STEP 2.

Attach the Slats (10) to Support Leg (7). Use JCBC Bolt (J) and Allen Key M4 (A) to fix.

STEP 3.

Attach and tighten the Side Rail Right (3) (2pcs) and Side Rail Left (4) (2pcs) to Side Rail Leg (9) (2pcs.) Use JCBC Bolt (J),Spring Washer (E), Side Rail Connect (G), Flat Washer (F), JCBC Bolt (C) and Allen Key M4 (A) to fix.

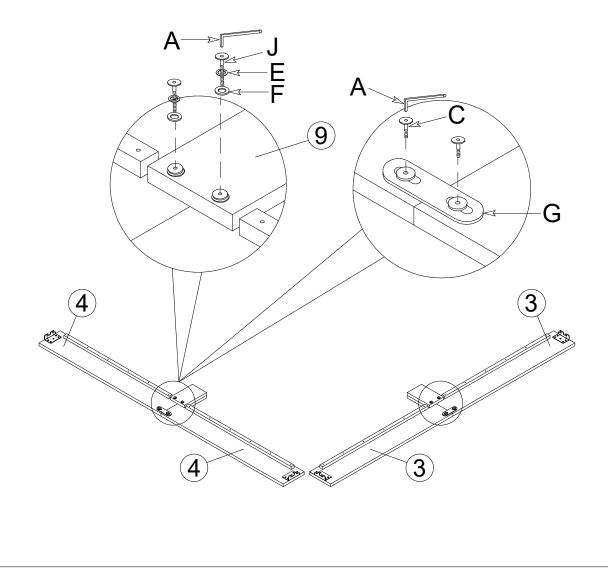

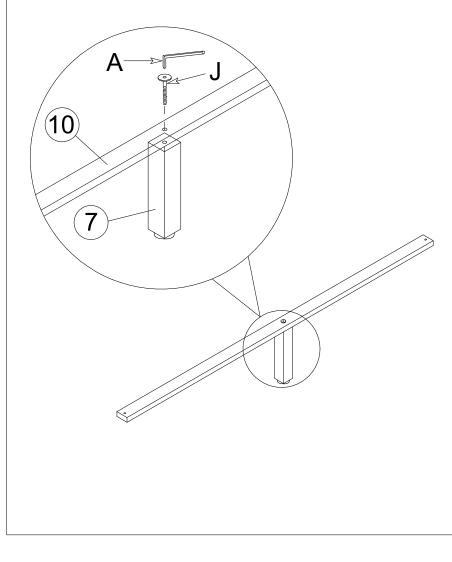


QUEEN BED STEP 4. STEP 5. Attached the Footboard Leg (8)(2pcs) to Footboard Panel (2). Attach the all Side Rail to bracket of Headboard Panel (1) and Footboard Panel (2). Use JCBB Bolt (I) and Allen Key M5 (H) to fix. 8 Η 3 3 4 2 4 2

Page : 5 OF 7

### STEP 6.

Attach and tighten the Left Wing (5) and Right Wing (6) to Headboard.Use JCBC Bolt (D), Spring Washer (E), Flat Washer (F) and Allen Key M4 to fix.

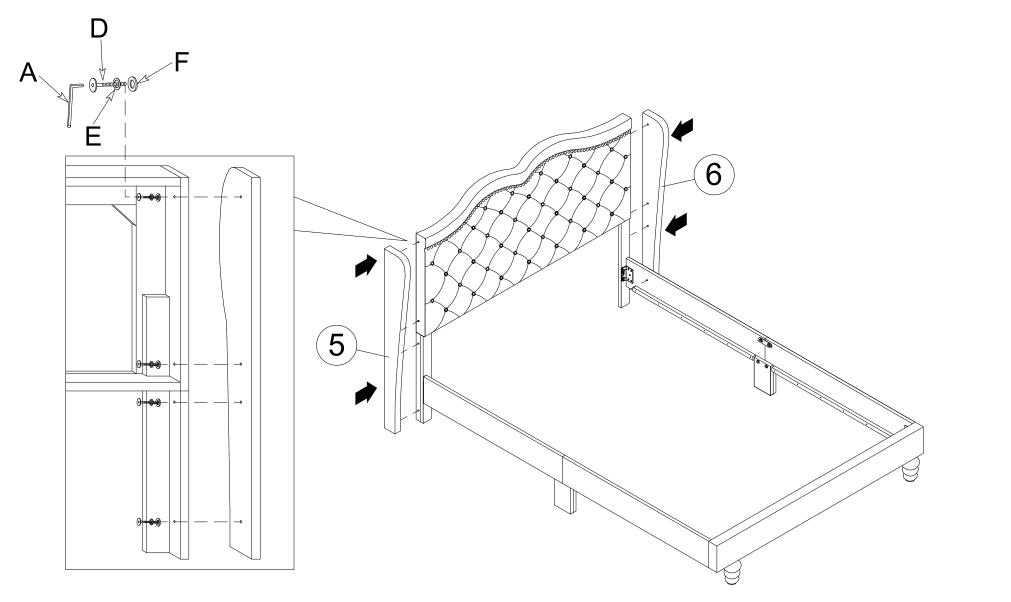

Page : 6 OF 7

### STEP 7.

Attach and tighten the Slats (10) to Side Rail. Adjusting the leg adjuster to the floor. Use screw M4 x 32mm (B) and screwdriver to fix.

