


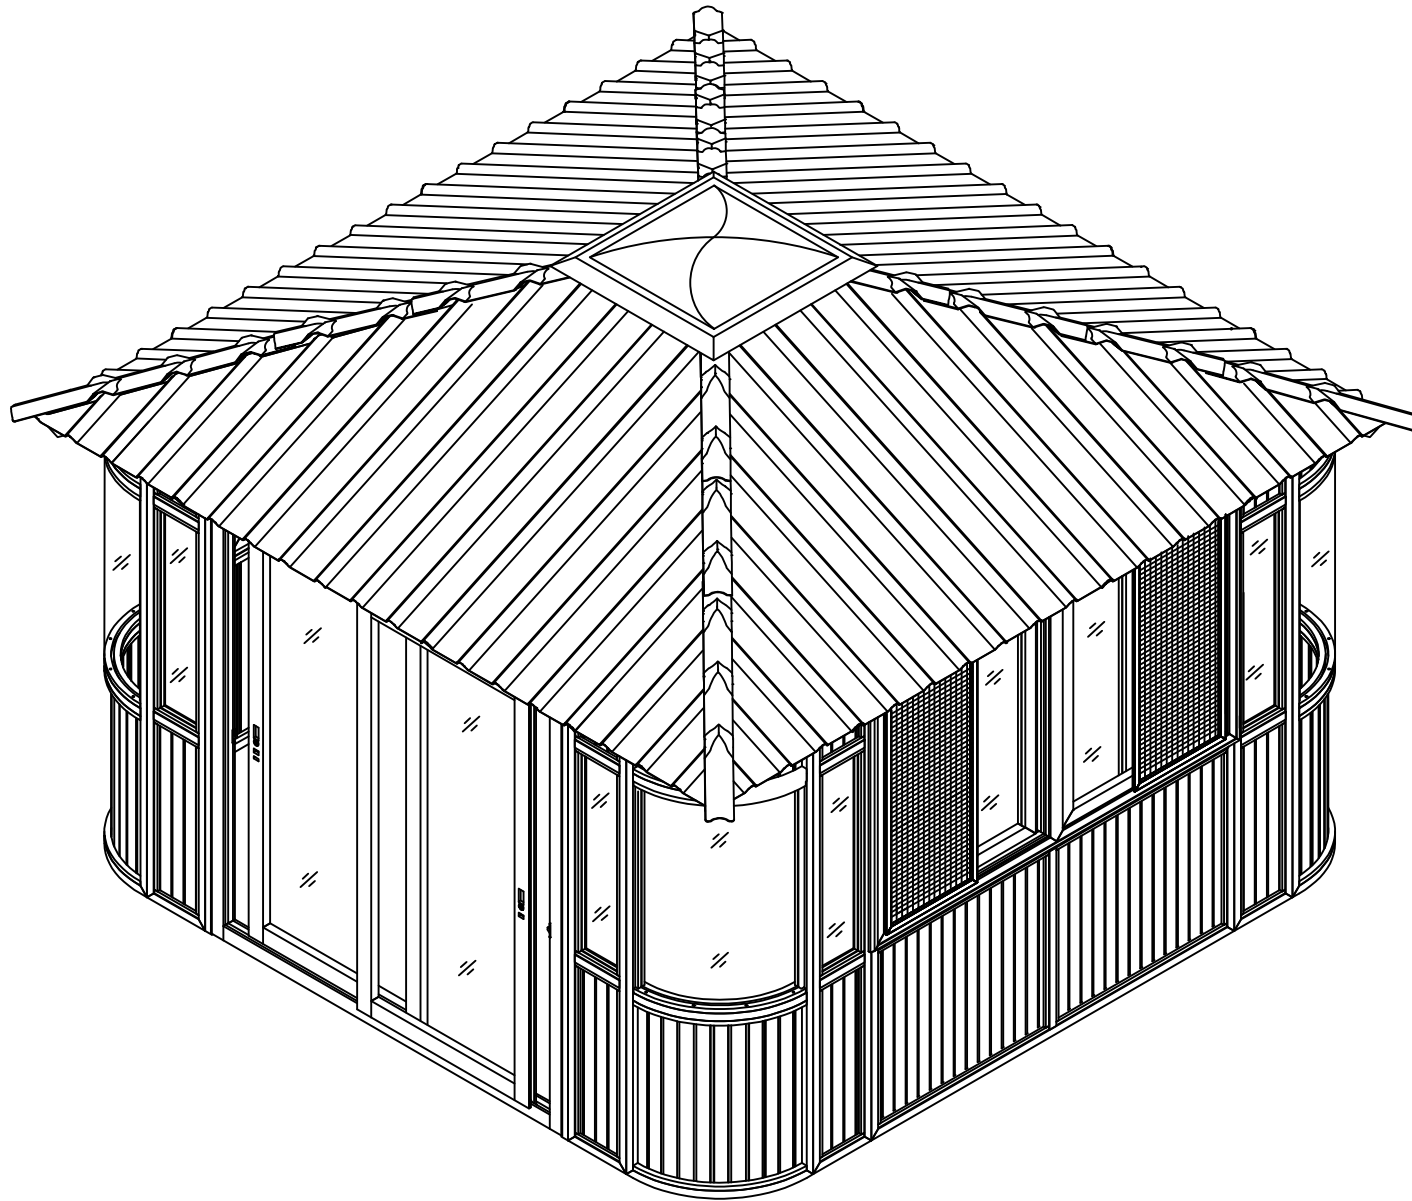
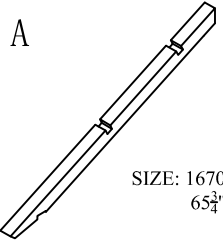
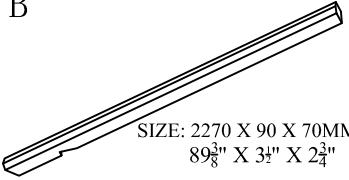
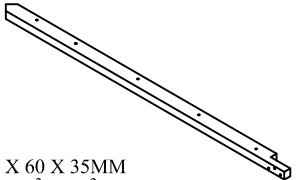
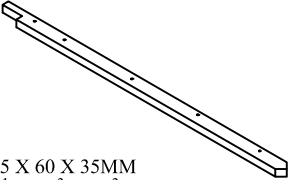



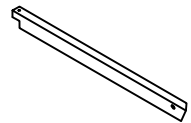


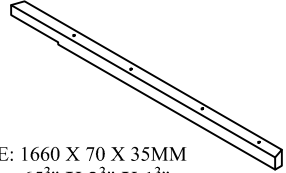
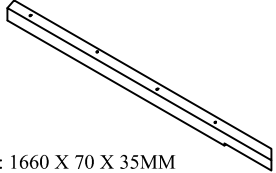
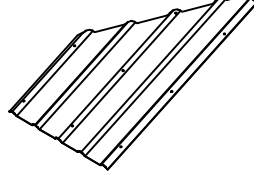
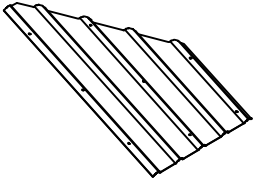



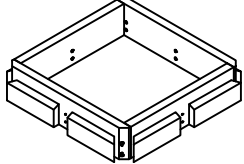
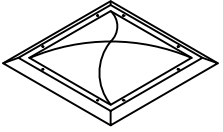


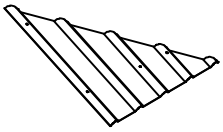






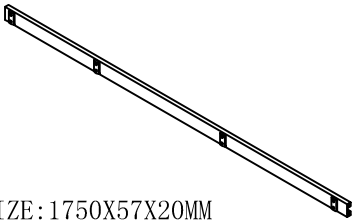
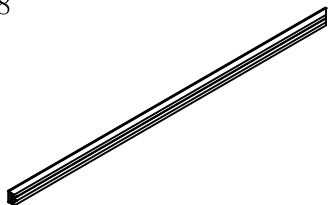



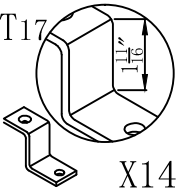


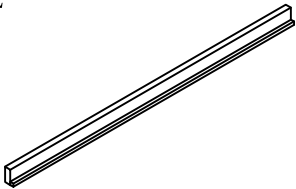
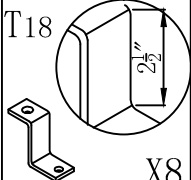




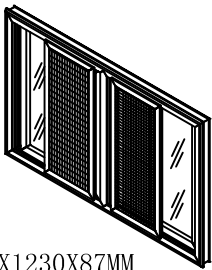
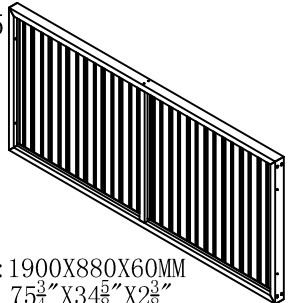


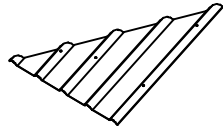

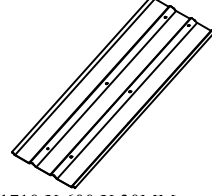




# ASSEMBLY INSTRUCTION FOR 12'X12' ULTRAWOOD GAZEBO


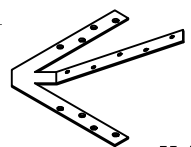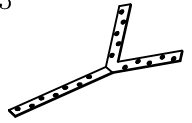
# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


<p>A</p>  <p>SIZE: 1670 X 80 X 70MM 65<sup>3</sup>/<sub>4</sub>" X 3" X 2<sup>3</sup>/<sub>4</sub>"</p> <p>X4</p>	<p>B</p>  <p>SIZE: 2270 X 90 X 70MM 89<sup>3</sup>/<sub>8</sub>" X 3<sup>3</sup>/<sub>4</sub>" X 2<sup>3</sup>/<sub>4</sub>"</p> <p>X4</p>	<p>C1</p>  <p>SIZE: 1765 X 60 X 35MM 69<sup>1</sup>/<sub>2</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>C2</p>  <p>SIZE: 1765 X 60 X 35MM 69<sup>1</sup>/<sub>2</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	
<p>D</p>  <p>SIZE: 590 X 90 X 35MM 23<sup>1</sup>/<sub>4</sub>" X 3<sup>1</sup>/<sub>2</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>D1</p>  <p>SIZE: 300 X 90 X 35MM 12" X 3<sup>1</sup>/<sub>2</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>E</p>  <p>SIZE: 1190 X 60 X 35MM 46<sup>7</sup>/<sub>8</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>F</p>  <p>SIZE: 1190 X 60 X 35MM 46<sup>7</sup>/<sub>8</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	
<p>G</p>  <p>SIZE: 704 X 60 X 35MM 27<sup>3</sup>/<sub>4</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>H</p>  <p>SIZE: 704 X 60 X 35MM 27<sup>3</sup>/<sub>4</sub>" X 2<sup>3</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>I</p>  <p>SIZE: 1660 X 70 X 35MM 65<sup>3</sup>/<sub>8</sub>" X 2<sup>3</sup>/<sub>4</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	<p>J</p>  <p>SIZE: 1660 X 70 X 35MM 65<sup>3</sup>/<sub>8</sub>" X 2<sup>3</sup>/<sub>4</sub>" X 1<sup>3</sup>/<sub>8</sub>"</p> <p>X4</p>	
<p>K</p>  <p>SIZE: 1710 X 880 X 30MM 67<sup>5</sup>/<sub>16</sub>" X 34<sup>5</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>16</sub>"</p> <p>X4</p>	<p>L</p>  <p>SIZE: 1710 X 880 X 30MM 67<sup>5</sup>/<sub>16</sub>" X 34<sup>5</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>16</sub>"</p> <p>X4</p>	<p>M</p>  <p>SIZE: 942 X 862 X 30MM 37" X 34" X 1<sup>3</sup>/<sub>16</sub>"</p> <p>X4</p>	<p>N</p>  <p>SIZE: 942 X 862 X 30MM 37" X 34" X 1<sup>3</sup>/<sub>16</sub>"</p> <p>X4</p>	<p>N1</p>  <p>SIZE: 1710 X 600 X 30MM 67<sup>5</sup>/<sub>16</sub>" X 23<sup>5</sup>/<sub>8</sub>" X 1<sup>3</sup>/<sub>16</sub>"</p> <p>X4</p>
<p>O</p>  <p>SIZE: 720 X 115 X 50MM 28<sup>3</sup>/<sub>8</sub>" X 4<sup>1</sup>/<sub>2</sub>" X 2"</p> <p>X4</p>	<p>P</p>  <p>SIZE: 835 X 115 X 50MM 33" X 4<sup>1</sup>/<sub>2</sub>" X 2"</p> <p>X4</p>	<p>P1</p>  <p>SIZE: 1050 X 115 X 50MM 41<sup>5</sup>/<sub>16</sub>" X 4<sup>1</sup>/<sub>2</sub>" X 2"</p> <p>X4</p>	<p>Q</p>  <p>SIZE: 850 X 850 X 140MM 33<sup>1</sup>/<sub>2</sub>" X 33<sup>1</sup>/<sub>2</sub>" X 5<sup>1</sup>/<sub>2</sub>"</p> <p>X1</p>	<p>R</p>  <p>SIZE: 930 X 930 X 190MM 36<sup>3</sup>/<sub>4</sub>" X 36<sup>3</sup>/<sub>8</sub>" X 7<sup>1</sup>/<sub>2</sub>"</p> <p>X1</p>

# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


<p>W1</p>  <p>SIZE: 693X60X2080MM 27<math>\frac{1}{4}</math>"X2<math>\frac{3}{8}</math>"X81<math>\frac{1}{8}</math>"</p> <p>X4</p>	<p>W4</p>  <p>SIZE: 305X60X2080MM 12"X2<math>\frac{3}{8}</math>"X81<math>\frac{7}{8}</math>"</p> <p>X4</p>	<p>W5</p>  <p>SIZE: 305X60X2080MM 12"X2<math>\frac{3}{8}</math>"X81<math>\frac{7}{8}</math>"</p> <p>X4</p>	<p>T1</p>  <p>X4</p>	<p>T2</p>  <p>X4</p>	<p>T3</p>  <p>X4</p>	
<p>W6</p>  <p>SIZE: 1835X65X45MM 72<math>\frac{1}{4}</math>"X2<math>\frac{9}{16}</math>"X1<math>\frac{3}{4}</math>"</p> <p>X1</p>	<p>W7</p>  <p>SIZE: 1750X57X20MM 68<math>\frac{7}{8}</math>"X2<math>\frac{1}{4}</math>"X1<math>\frac{13}{16}</math>"</p> <p>X1</p>	<p>W8</p>  <p>SIZE: 1997X65X45MM 78<math>\frac{5}{8}</math>"X2<math>\frac{9}{16}</math>"X1<math>\frac{3}{4}</math>"</p> <p>X2</p>	<p>T5</p>  <p>X4</p>	<p>T11</p>  <p>X2</p>	<p>T16</p>  <p>X16</p>	<p>T17</p>  <p>X14</p>
<p>W10</p>  <p>SIZE: 924X35X1950MM 36<math>\frac{3}{8}</math>"X1<math>\frac{3}{8}</math>"X76<math>\frac{3}{4}</math>"</p> <p>X1</p>	<p>W11</p>  <p>SIZE: 924X35X1950MM 36<math>\frac{3}{8}</math>"X1<math>\frac{3}{8}</math>"X76<math>\frac{3}{4}</math>"</p> <p>X1</p>	<p>W12</p>  <p>SIZE: 1900X59X90MM 74<math>\frac{3}{4}</math>"X2<math>\frac{3}{8}</math>"X3<math>\frac{1}{2}</math>"</p> <p>X1</p>	<p>T18</p>  <p>X8</p>	<p>T20</p>  <p>X1</p>	<p>U2</p>  <p>40-Ø5X75MM SIZE: <math>\frac{3}{16}</math>"X3"</p>	<p>U3</p>  <p>124-Ø5X55MM SIZE: <math>\frac{3}{16}</math>"X2<math>\frac{3}{16}</math>"</p>
<p>W13</p>  <p>SIZE: 60X35X1990MM 2<math>\frac{3}{8}</math>"X1<math>\frac{3}{8}</math>"X78<math>\frac{3}{8}</math>"</p> <p>X2</p>	<p>W14</p>  <p>SIZE: 1930X1230X87MM 76"X48<math>\frac{3}{8}</math>"X3<math>\frac{3}{8}</math>"</p> <p>X3</p>	<p>W15</p>  <p>SIZE: 1900X880X60MM 75<math>\frac{3}{4}</math>"X34<math>\frac{5}{8}</math>"X2<math>\frac{3}{8}</math>"</p> <p>X3</p>	<p>U4</p>  <p>250-Ø4X30MM SIZE: <math>\frac{3}{16}</math>"X1<math>\frac{3}{16}</math>"</p>	<p>U5</p>  <p>132-Ø4X55MM SIZE: <math>\frac{3}{16}</math>"X2<math>\frac{3}{16}</math>"</p>	<p>U6</p>  <p>8-Ø4X20MM SIZE: <math>\frac{3}{16}</math>"X<math>\frac{13}{16}</math>"</p>	<p>U7</p>  <p>6-Ø4X20MM SIZE: <math>\frac{3}{16}</math>"X<math>\frac{13}{16}</math>"</p>
<p>U9</p>  <p>Color: Black 70-Ø4X30MM SIZE: <math>\frac{3}{16}</math>"X1<math>\frac{3}{16}</math>"</p>	<p>U10</p>  <p>74-Ø5X65MM SIZE: <math>\frac{3}{16}</math>"X2<math>\frac{9}{16}</math>"</p>	<p>U12</p>  <p>4-Ø4X30MM SIZE: <math>\frac{3}{16}</math>"X1<math>\frac{3}{16}</math>"</p>	<p>V</p>  <p>SHIM X10</p>			
<p>V1</p>  <p>PLASTIC SPACER PIECE X40</p>						

# ASSEMBLY INSTRUCTION FOR 12'X12' ULTRAWOOD GAZEBO


#1

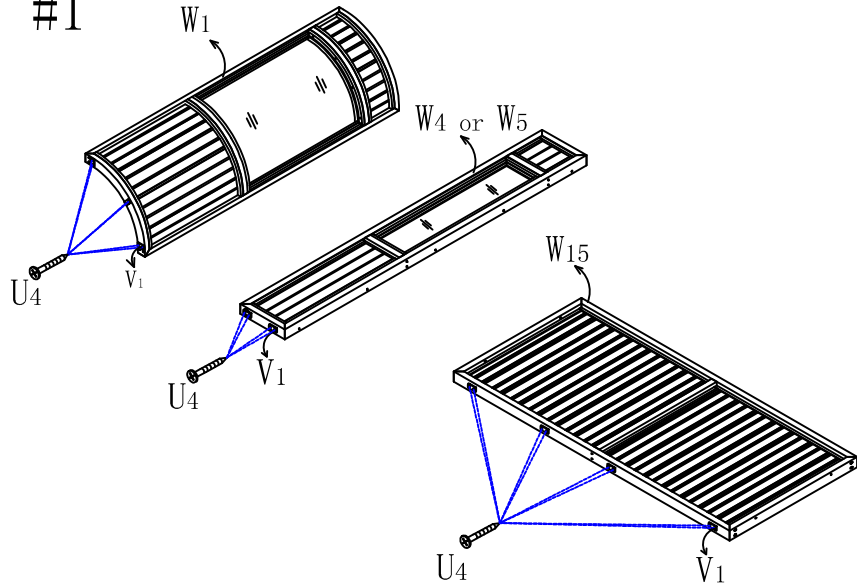


#2

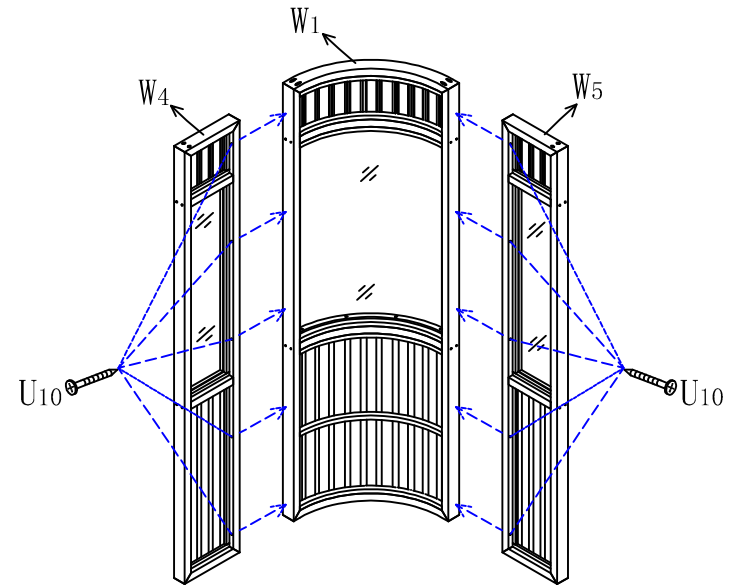

#3

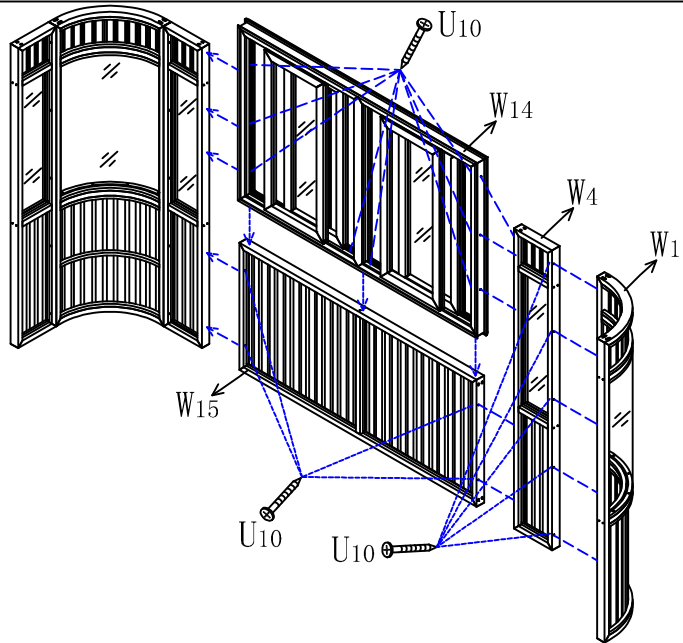


#4

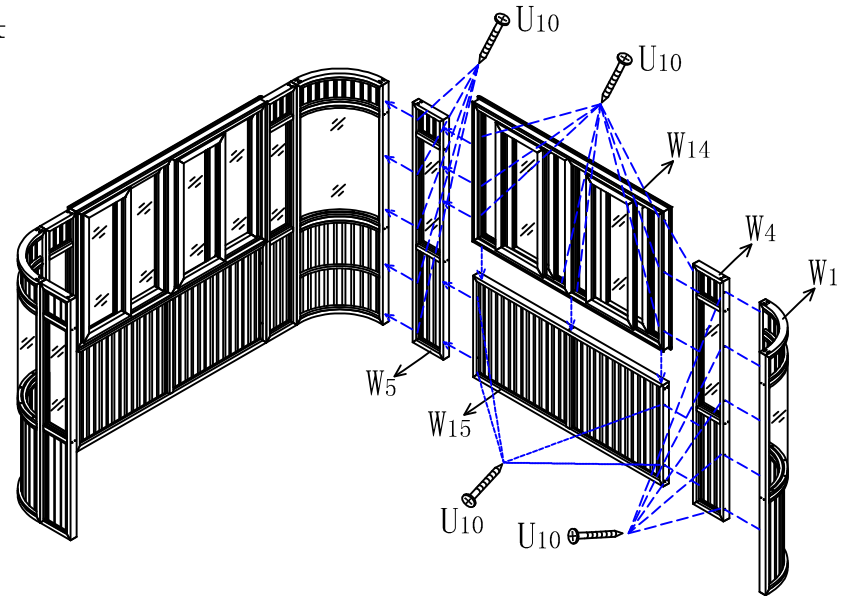


# ASSEMBLY INSTRUCTION FOR 12'X12' ULTRAWOOD GAZEBO


#5

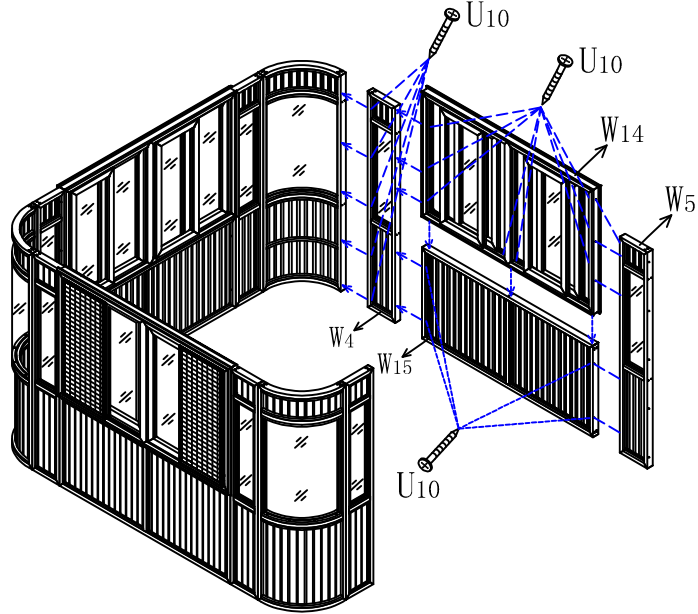


#6

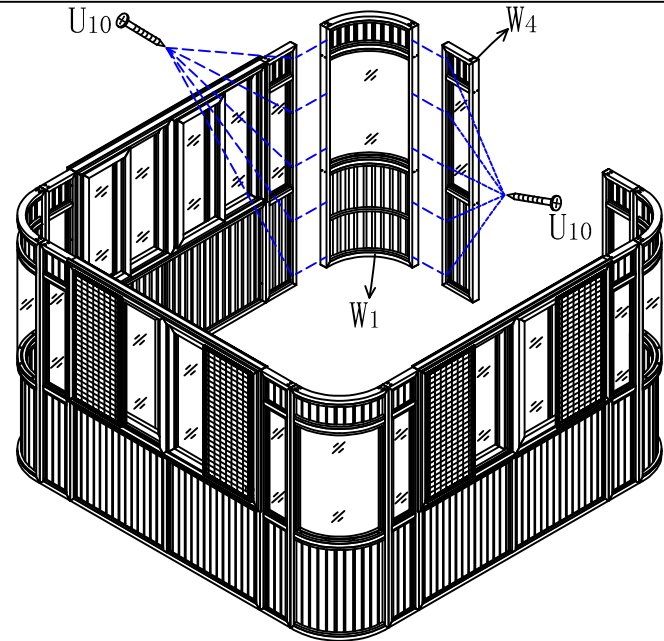

#7

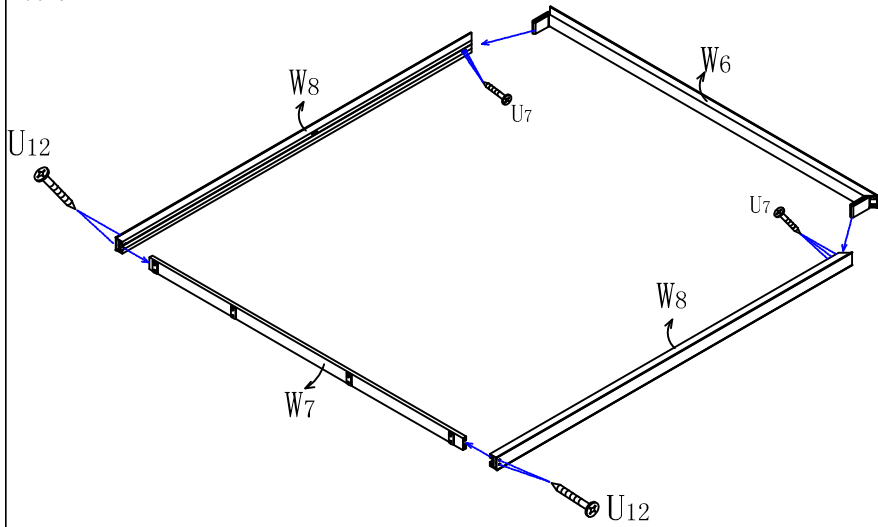


#8

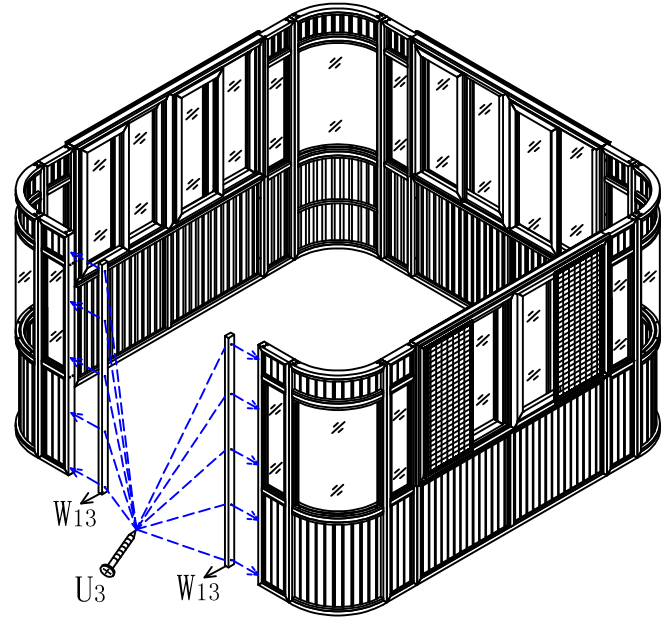


# ASSEMBLY INSTRUCTION FOR 12'X12' ULTRAWOOD GAZEBO

#9

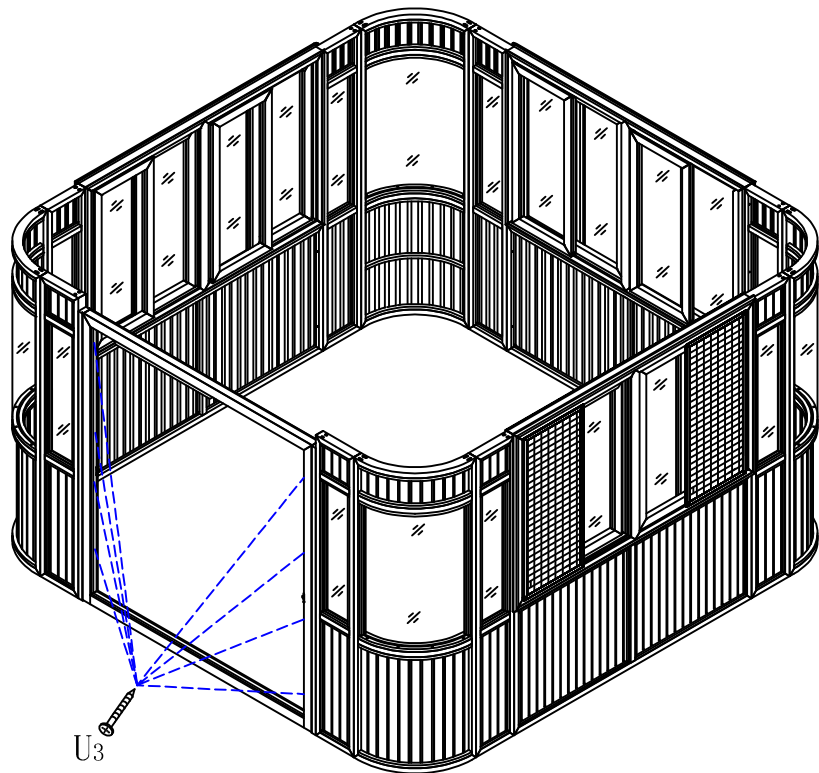


#10

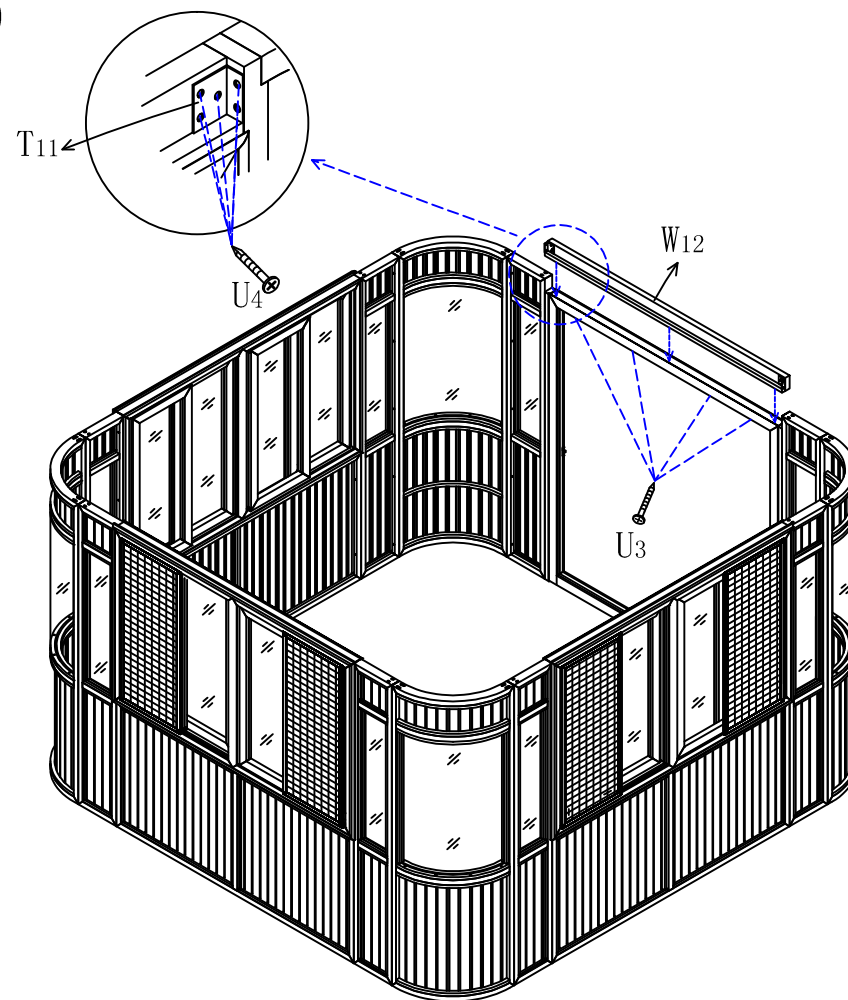


# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


#11

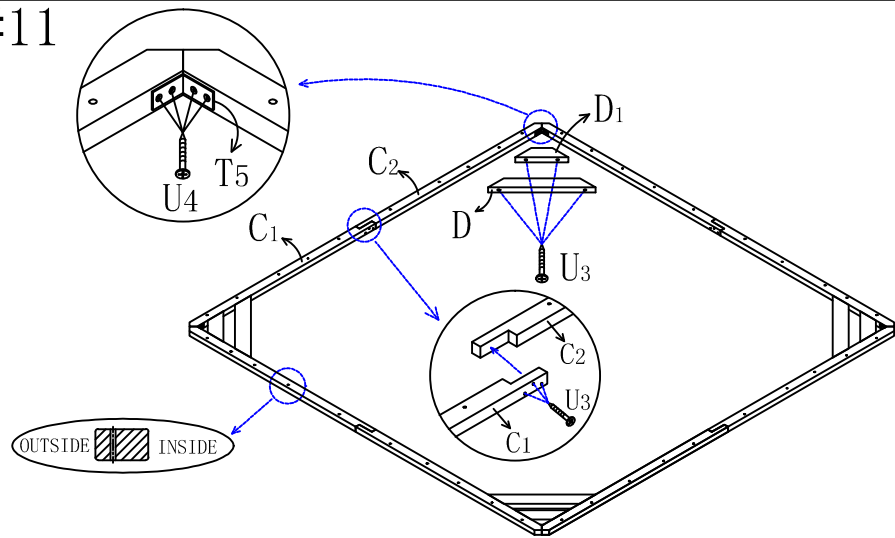


#12

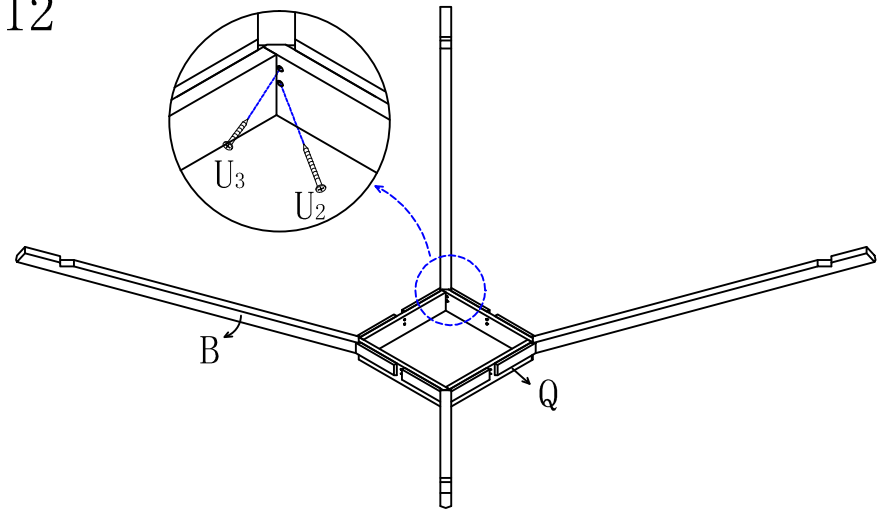

#13

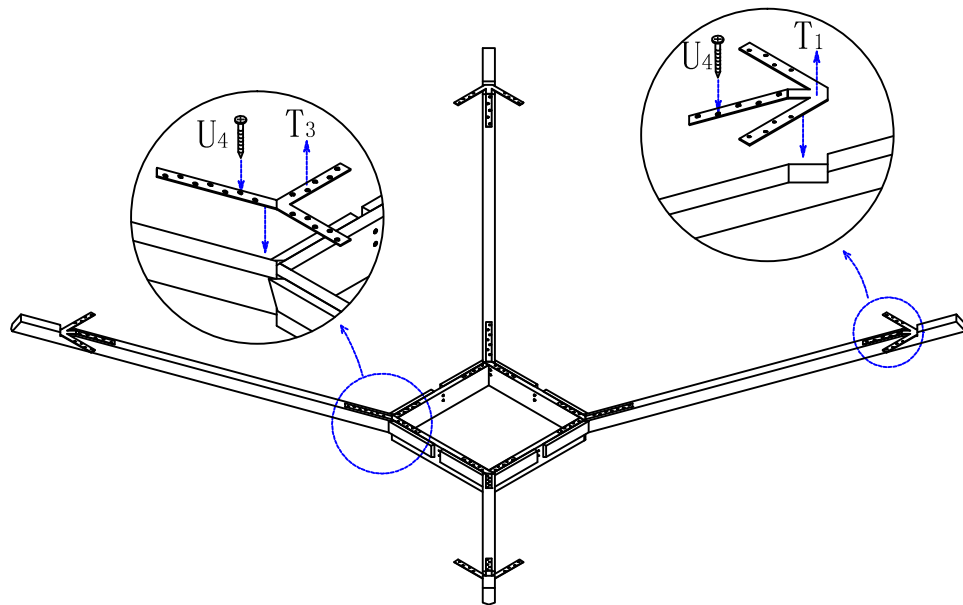


#14

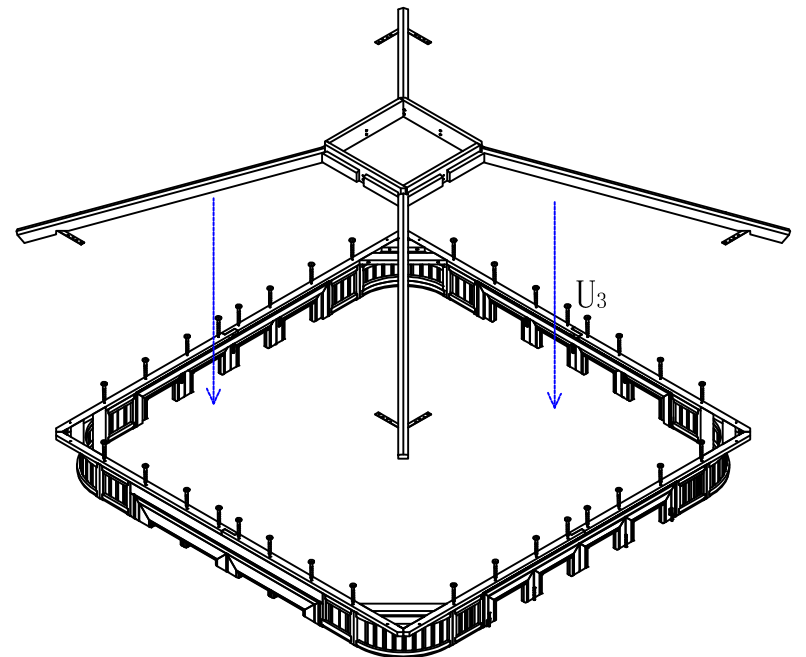


# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


#15

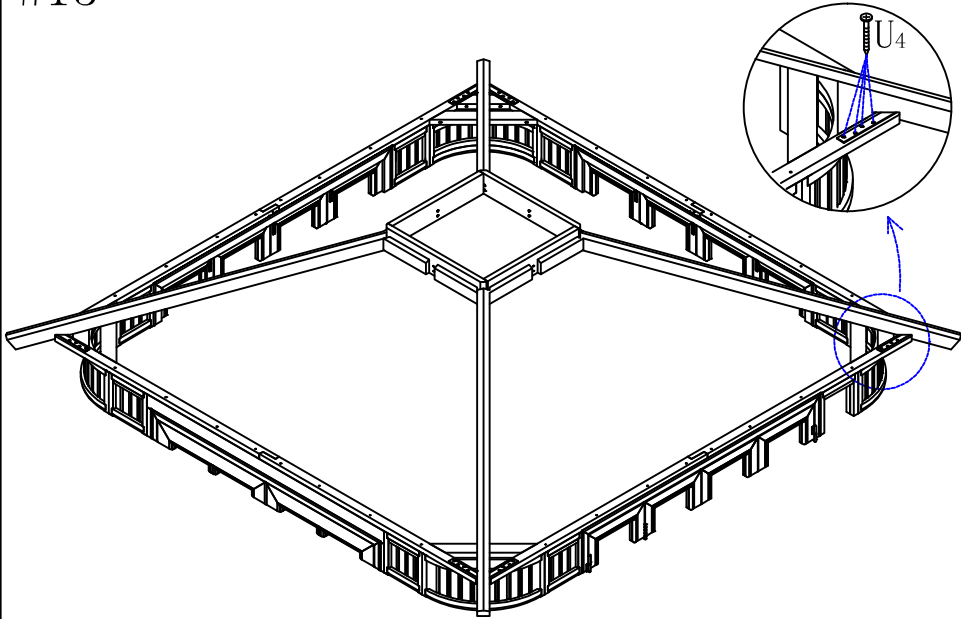


#16

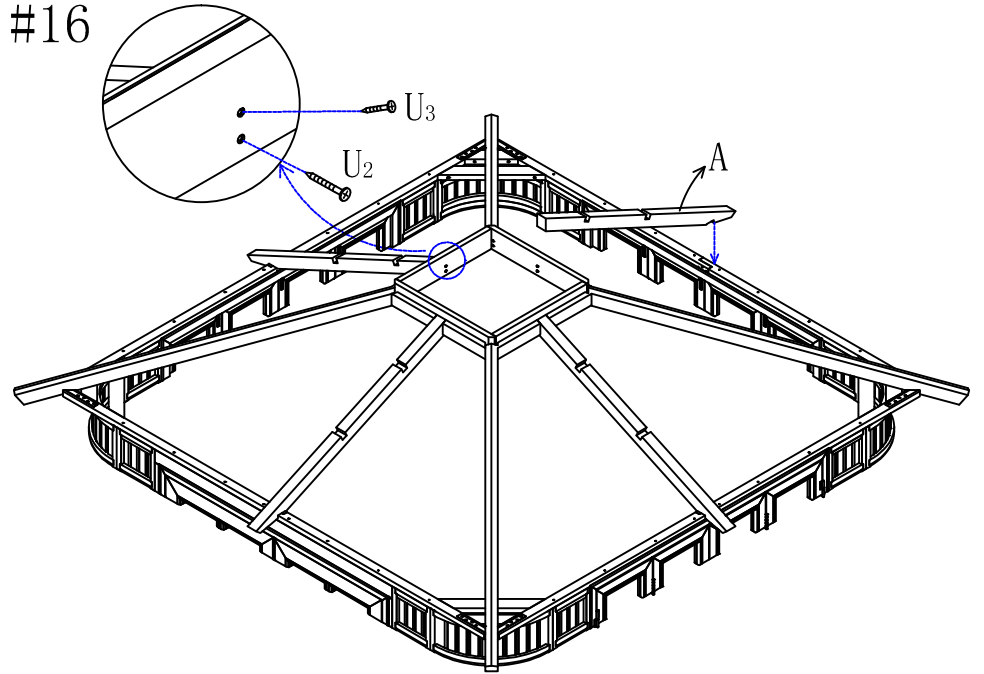

#17

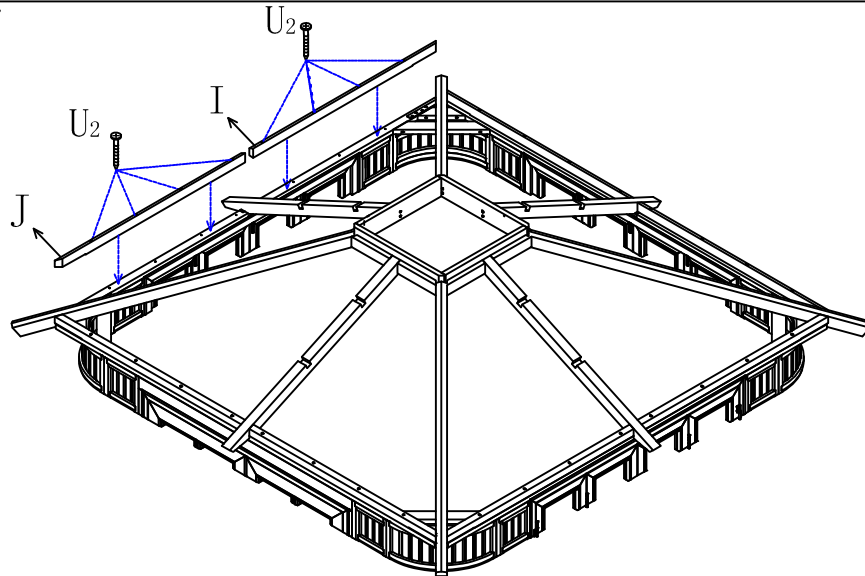


#18

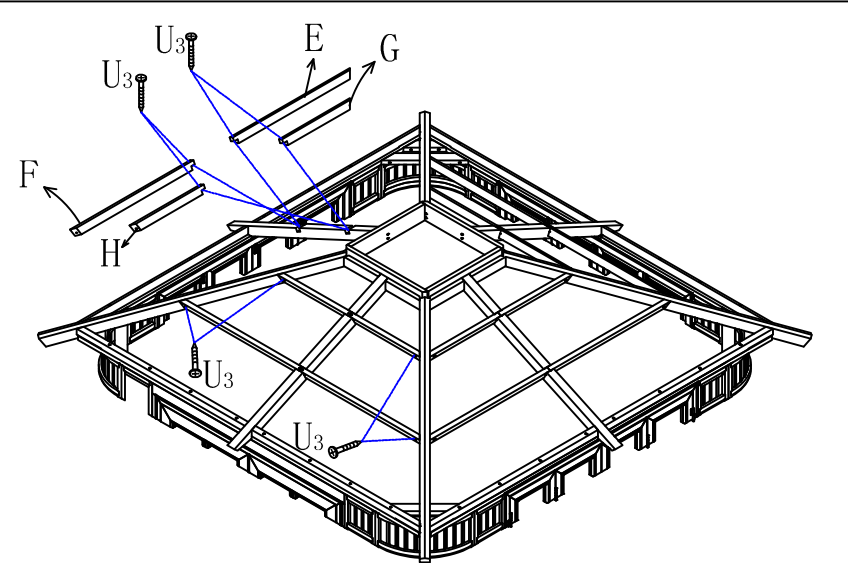


# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


#19

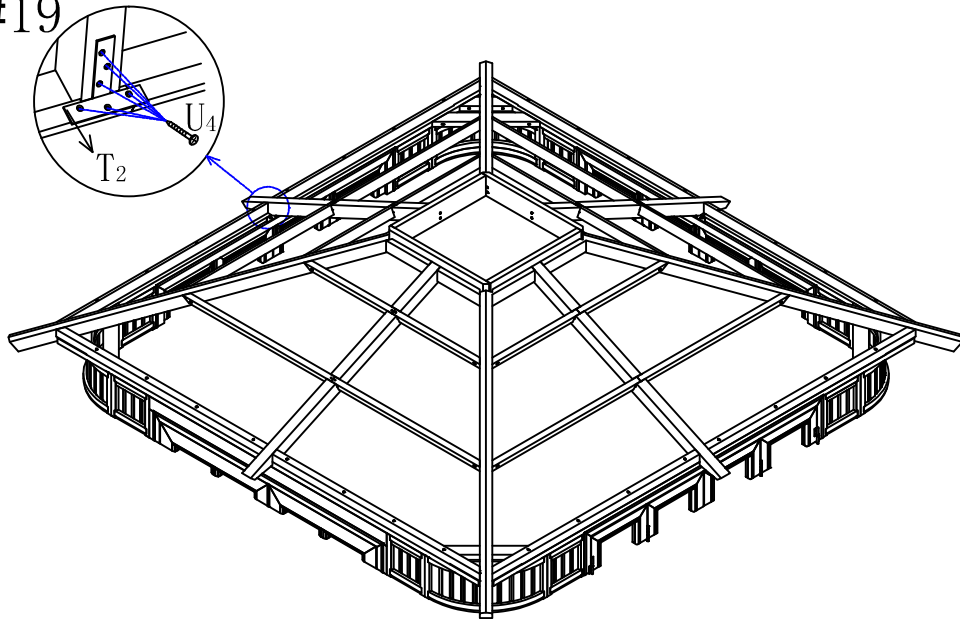


#20

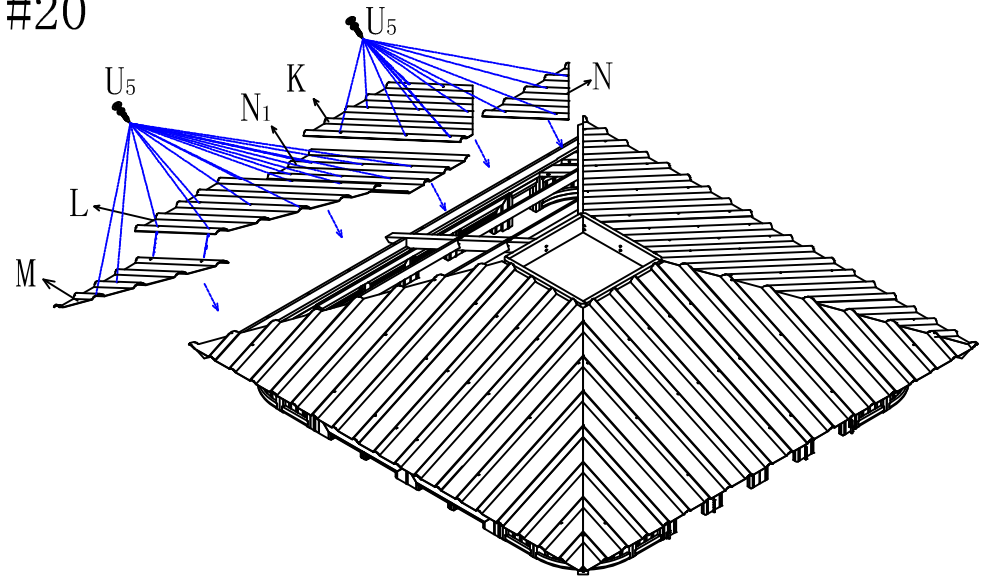

#21

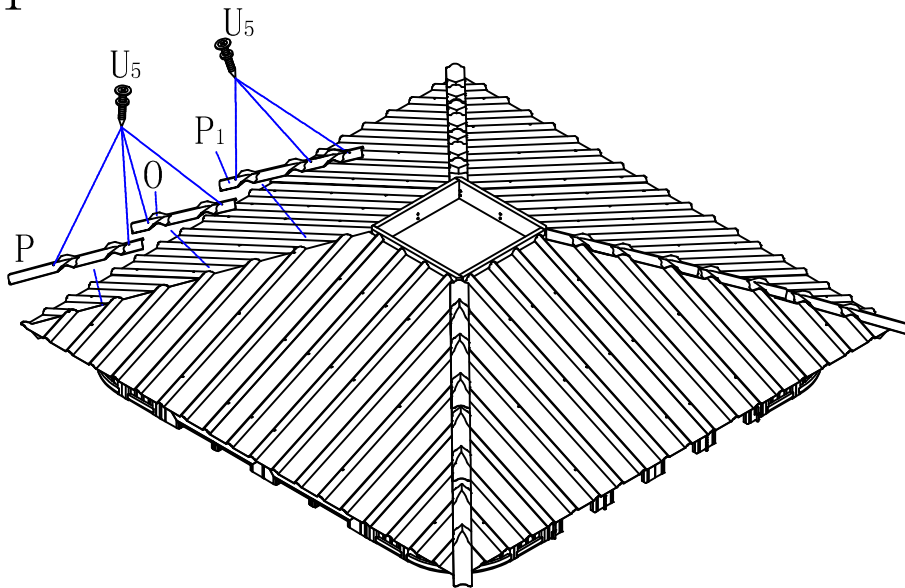


#22




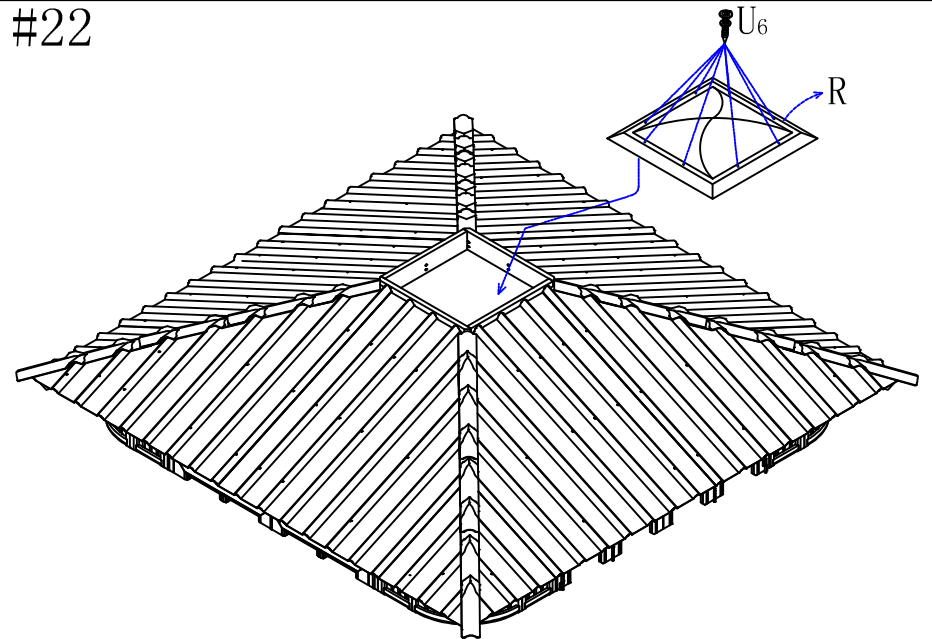


# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO


## #23

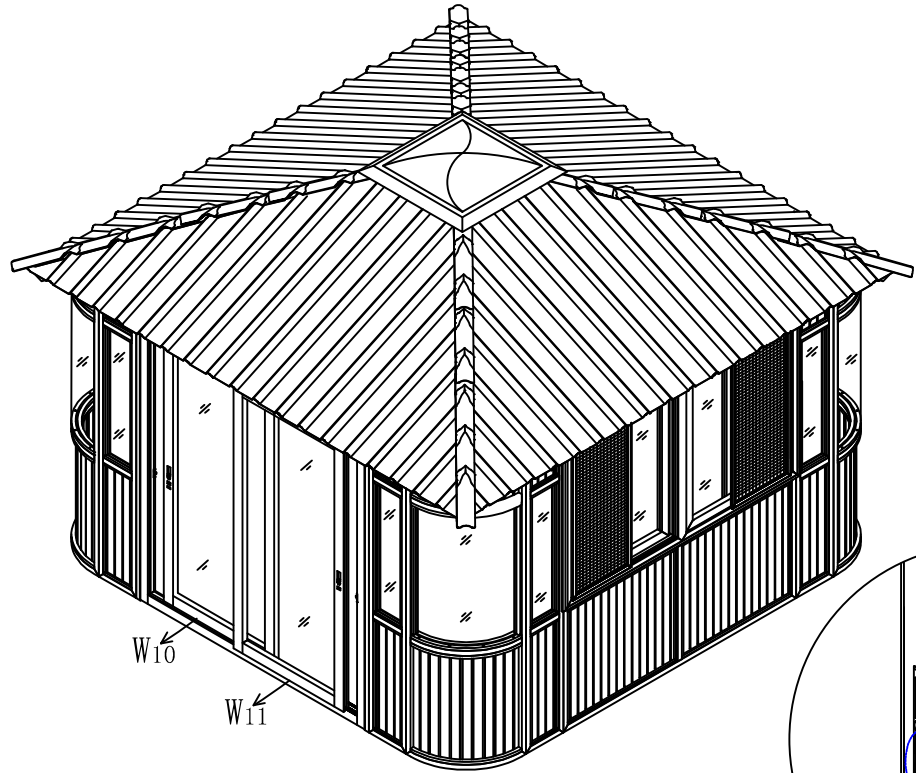

Install handle / lock assembly as shown

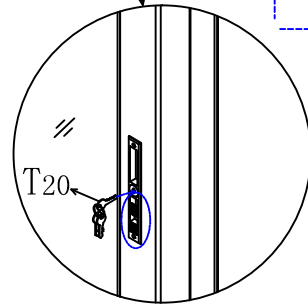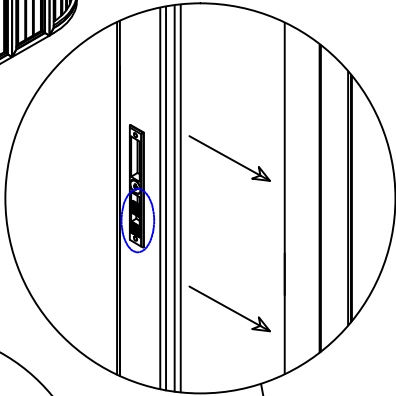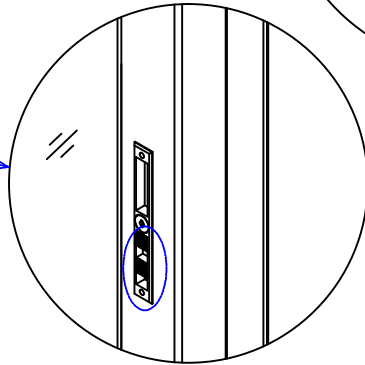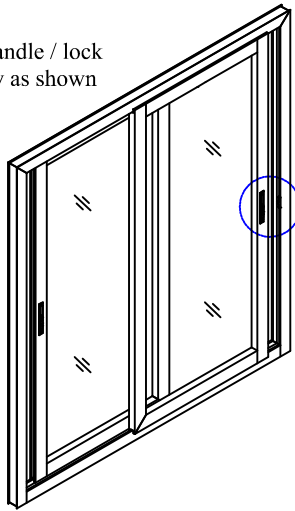


STEP: 1

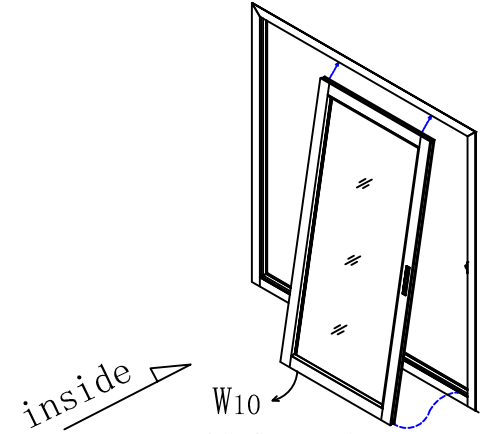

Carefully fit upper edge of door into frame channel as shown.

STEP: 2

Swing lower edge of door in and drop into lower door track channel on frame.

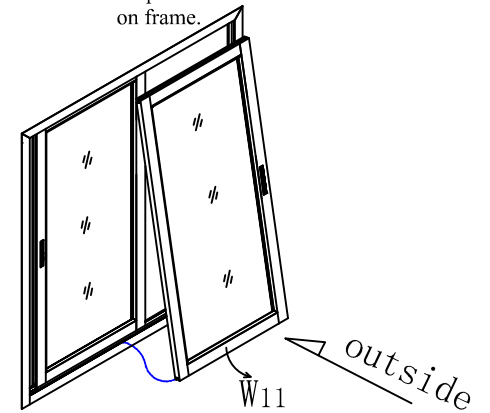

NOTE: Lock the door by turning the key to left after you push the lock bottom upward.

# ASSEMBLY INSTRUCTION FOR 12' X 12' ULTRAWOOD GAZEBO

## #24

