


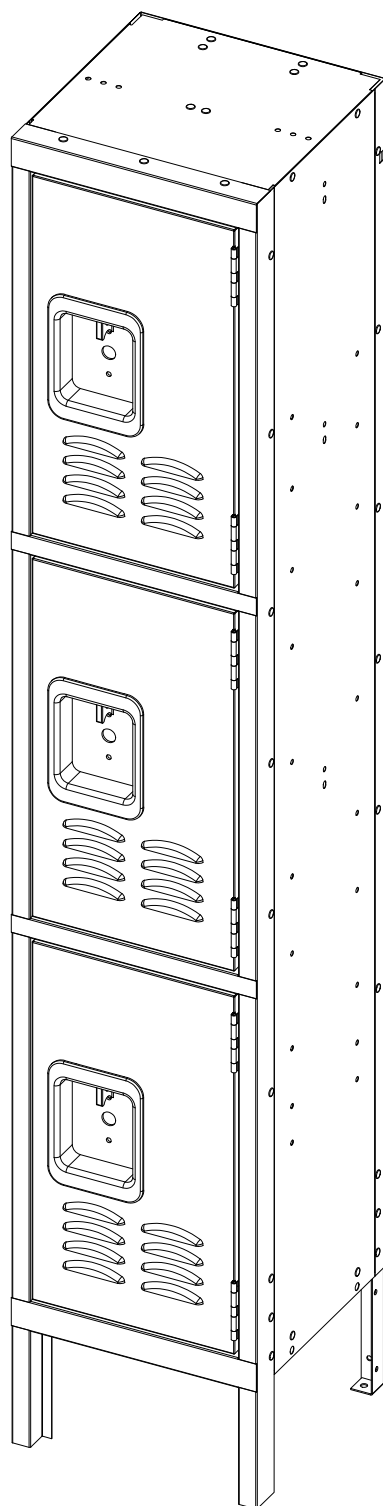
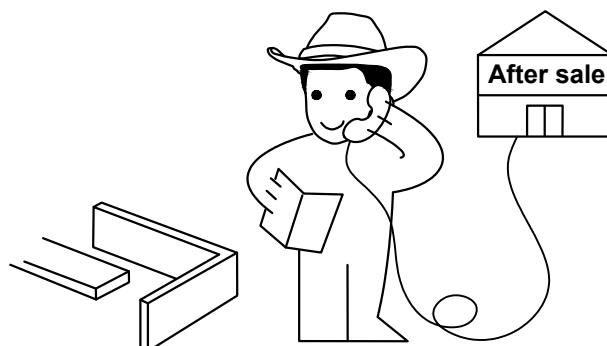
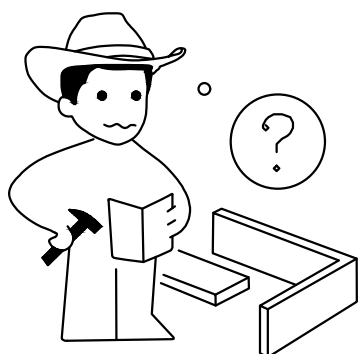
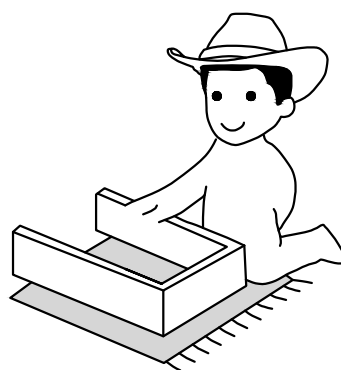
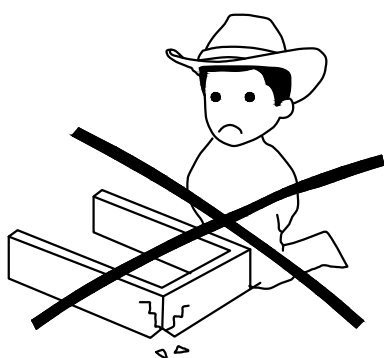
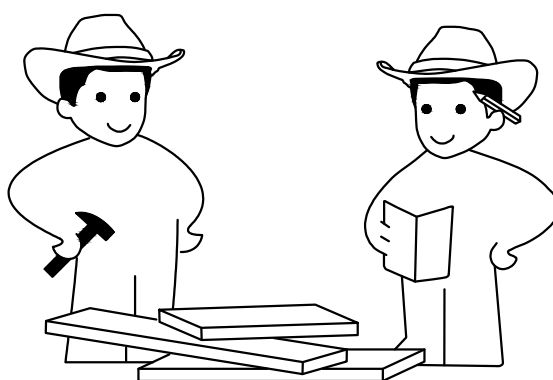
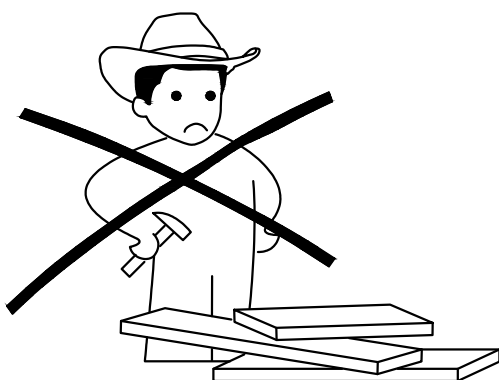

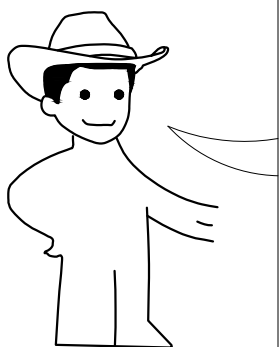



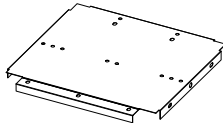

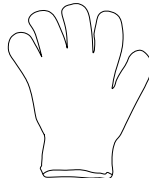
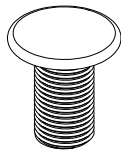




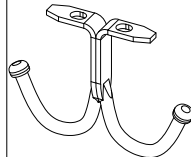


Installation video




1×2pcs		2×1pcs		3×1pcs		4×4pcs	
							
						5×2pcs	
							
A×90pcs	B×90pcs	C×6pcs	D×3pcs	Ex3pcs			
							

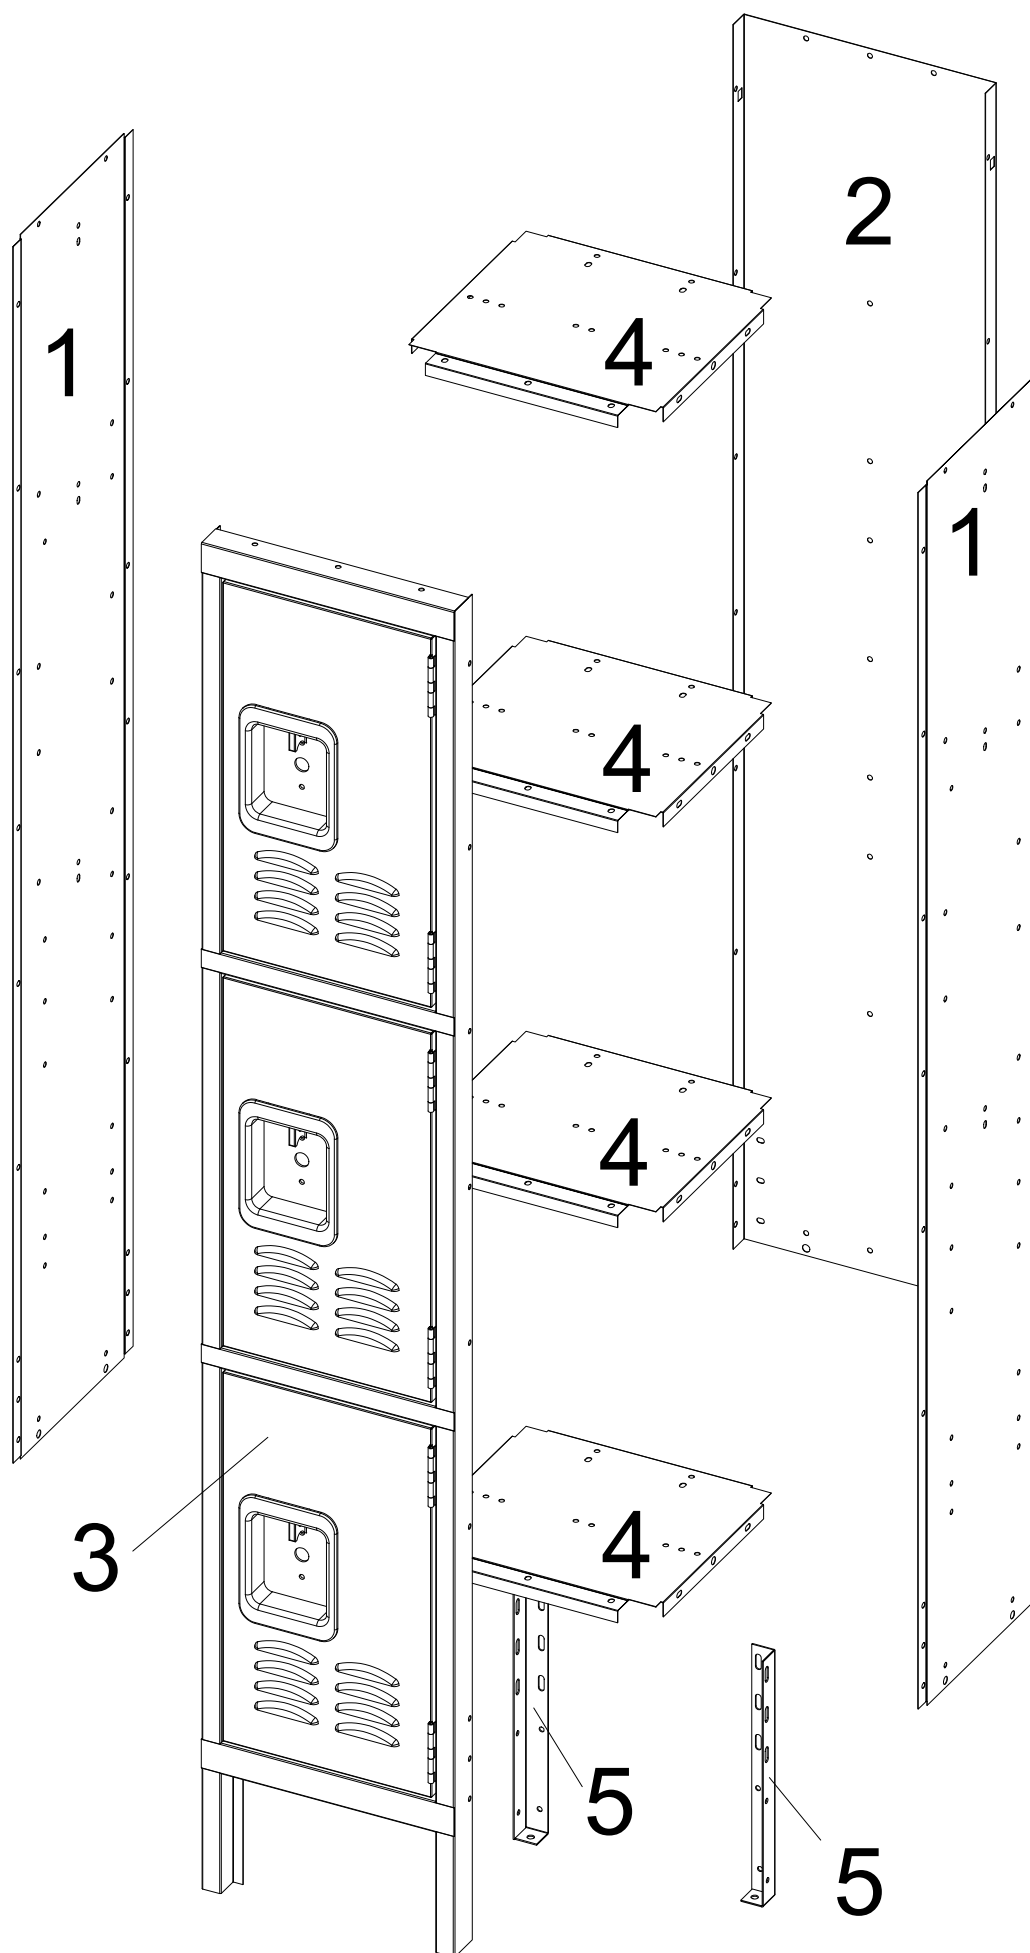



1

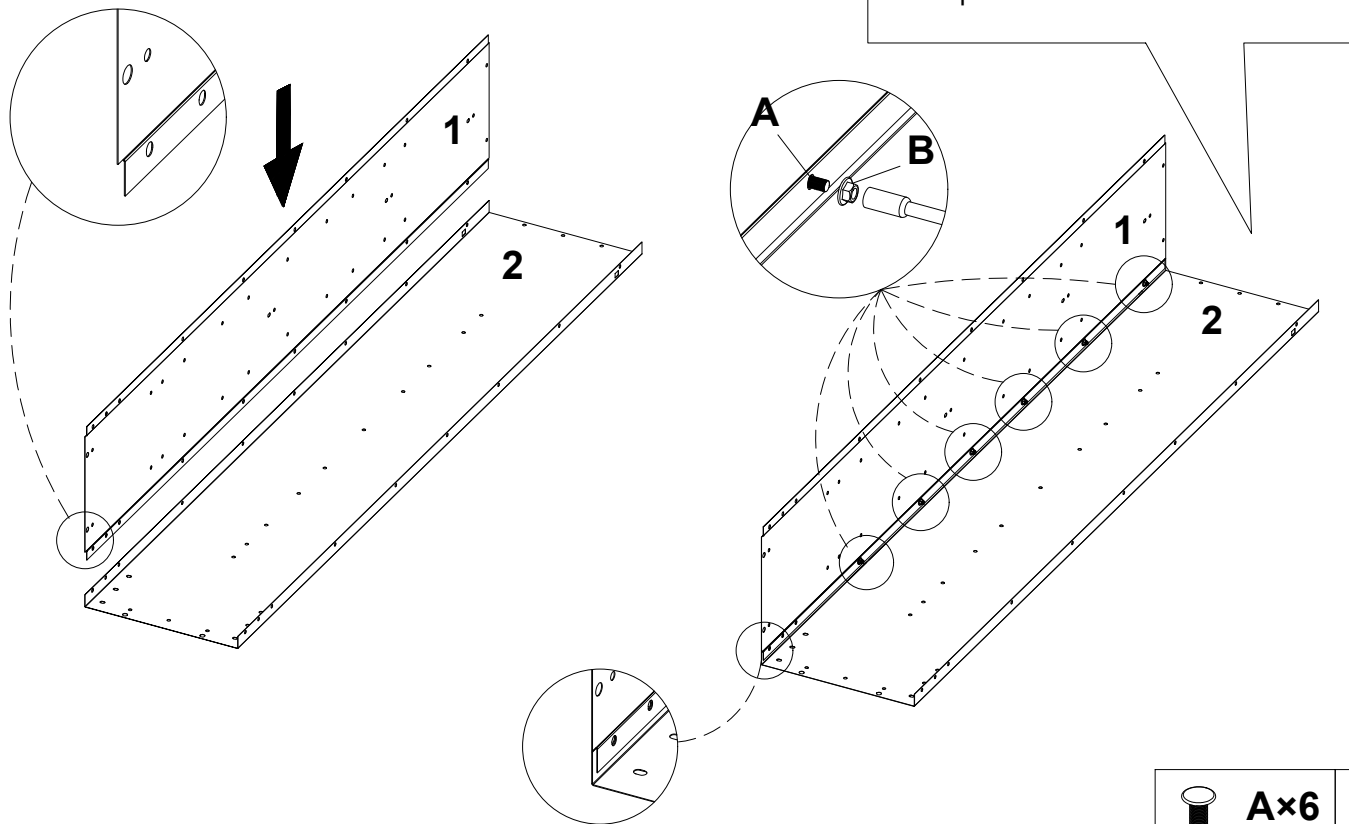




2

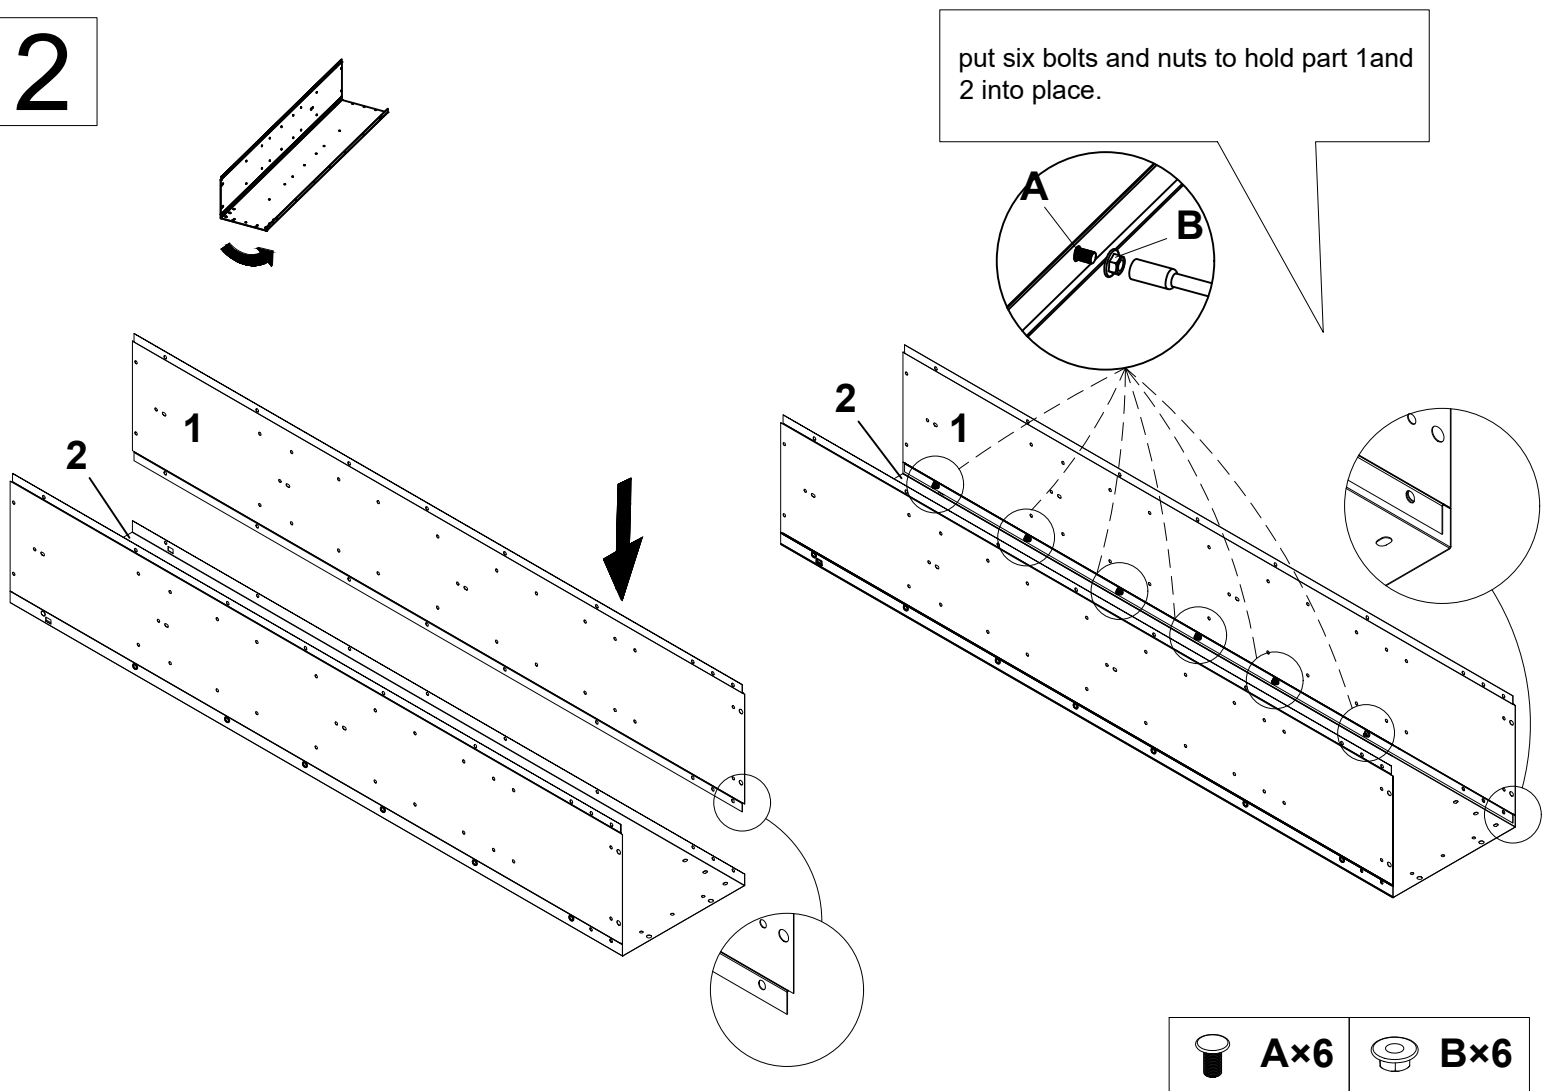


3

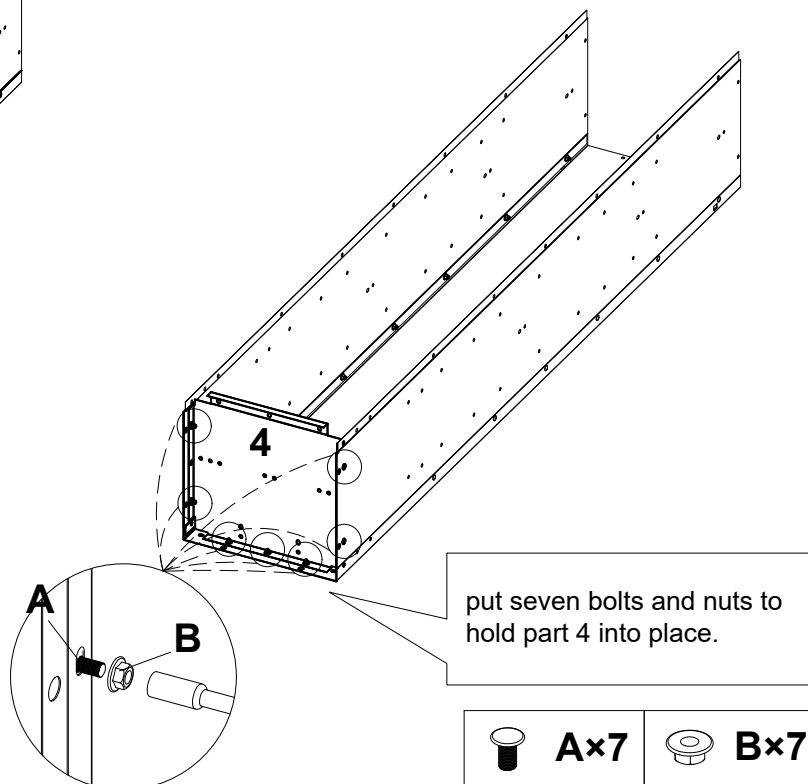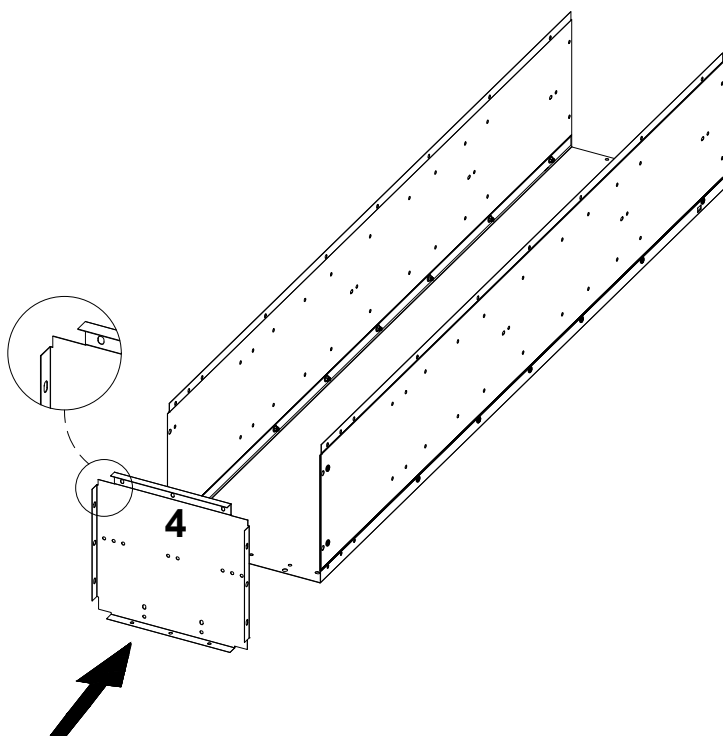


4

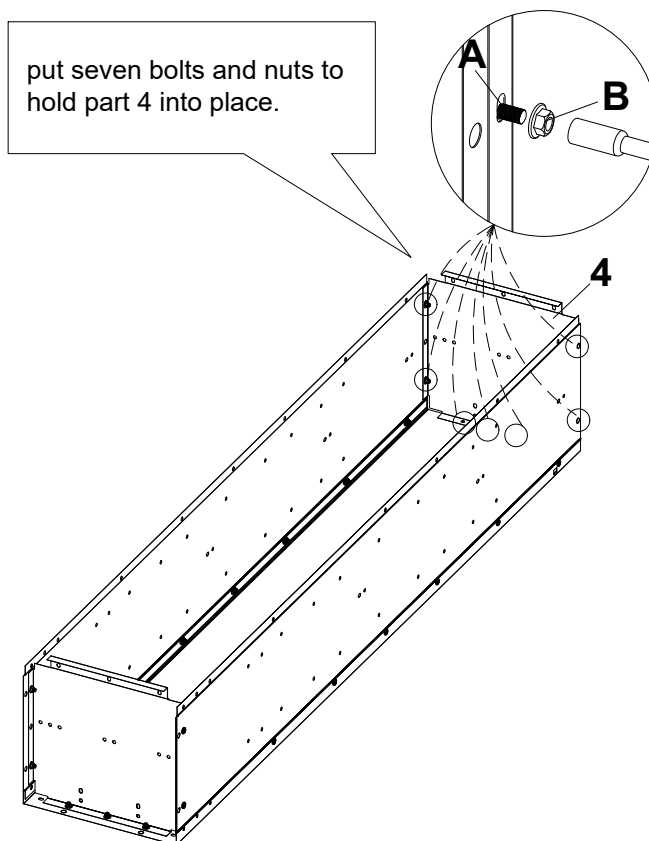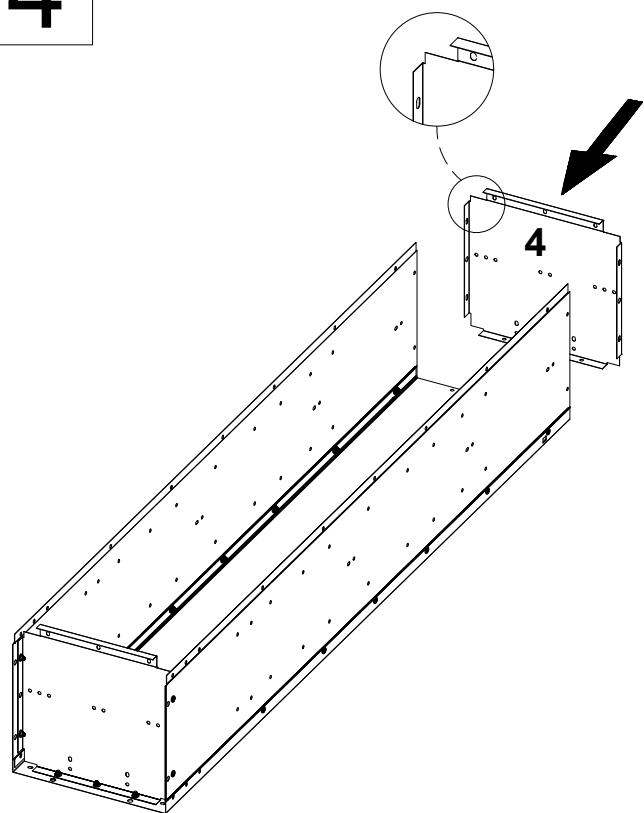


5

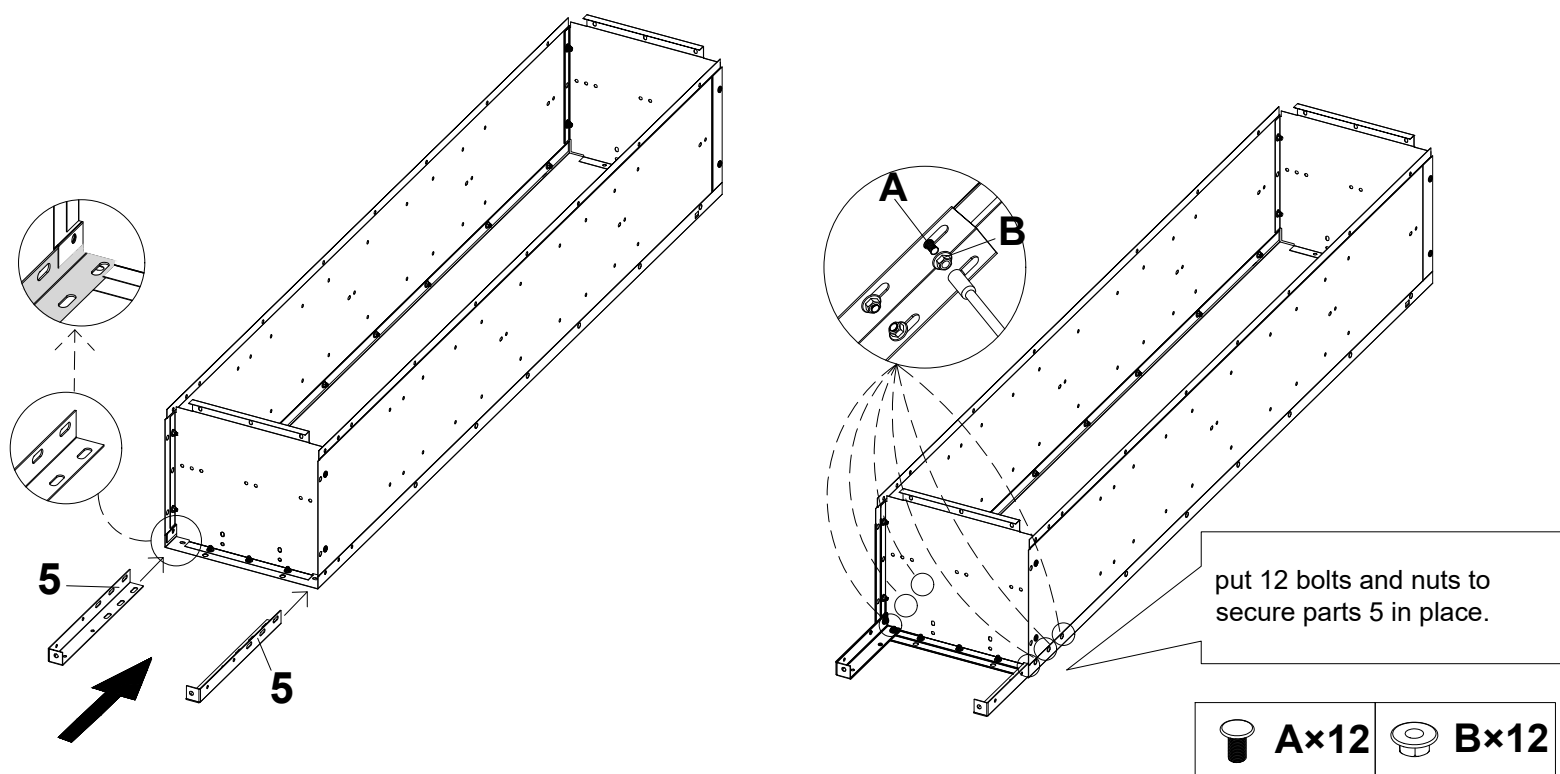


6

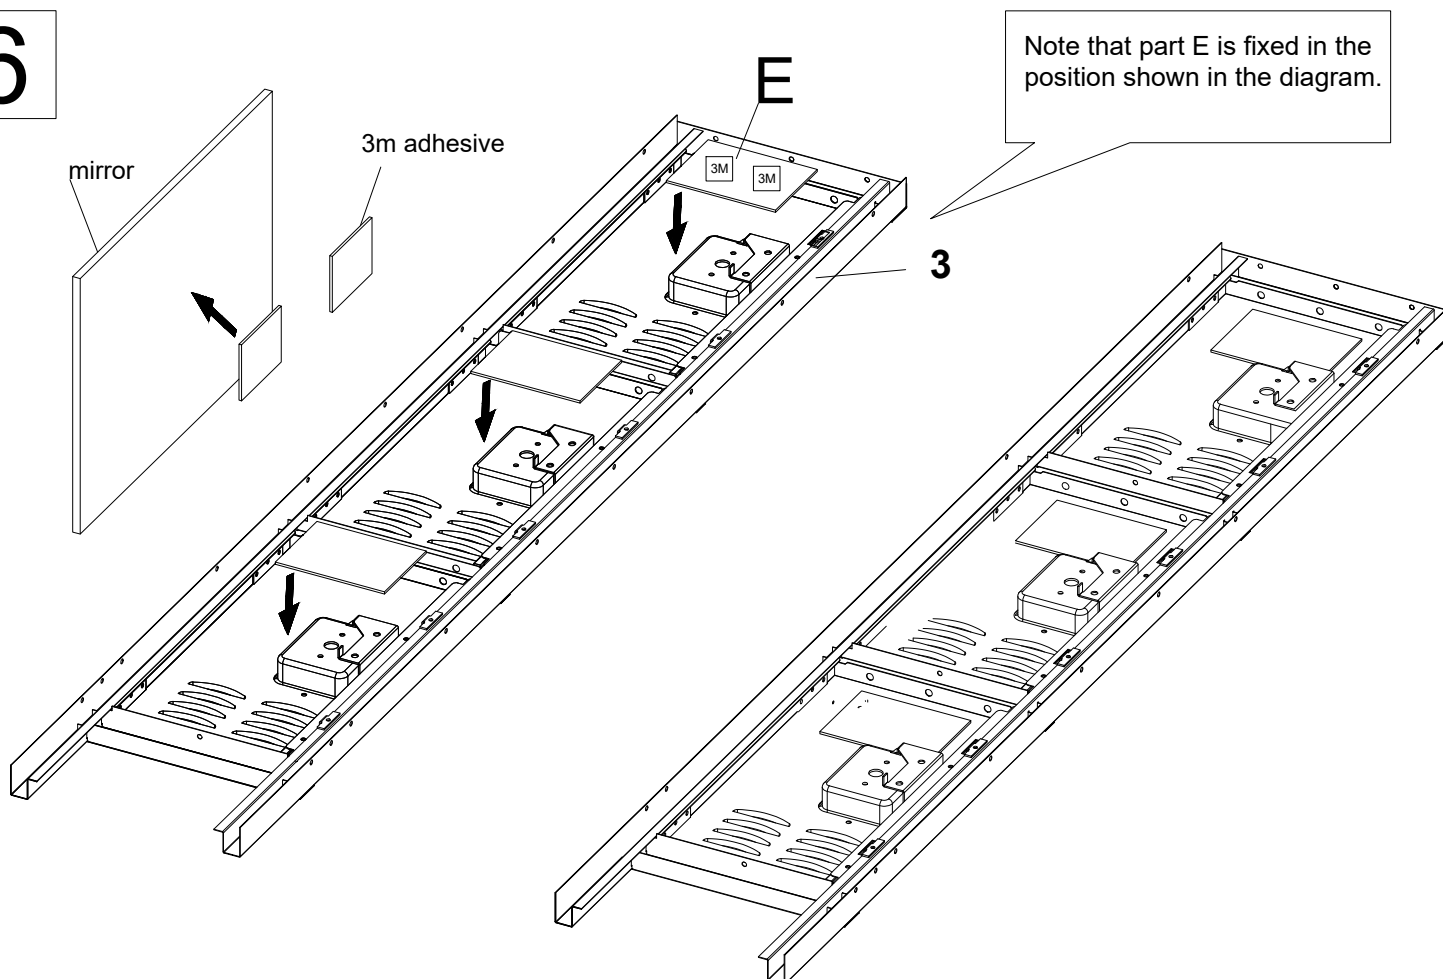



7

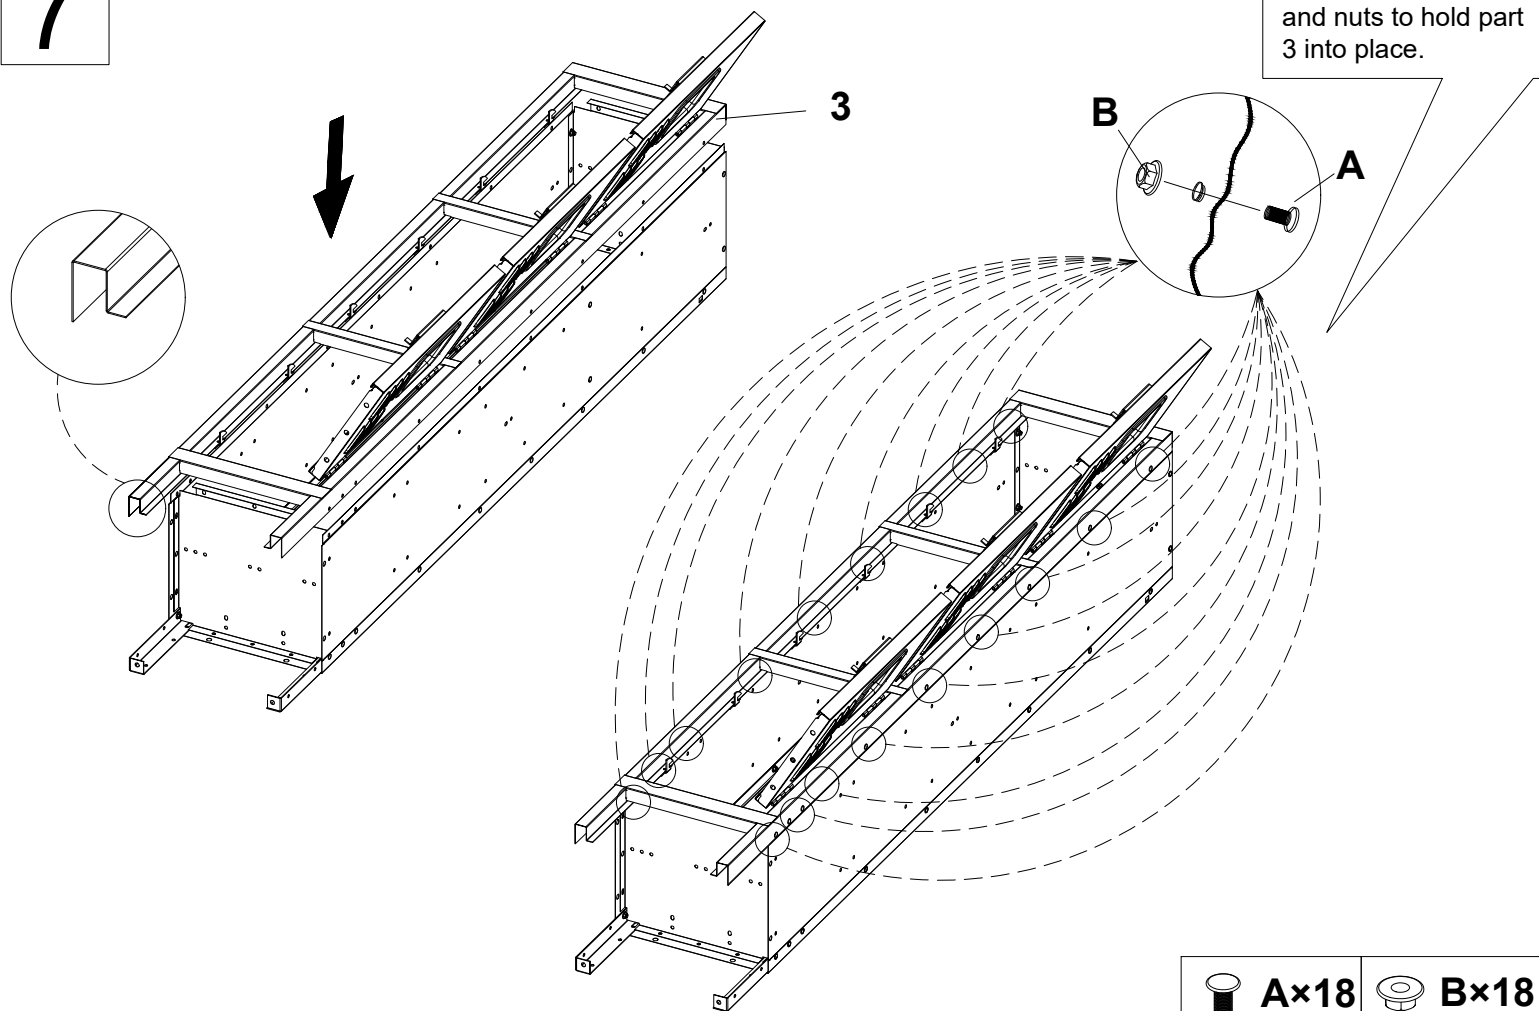

8

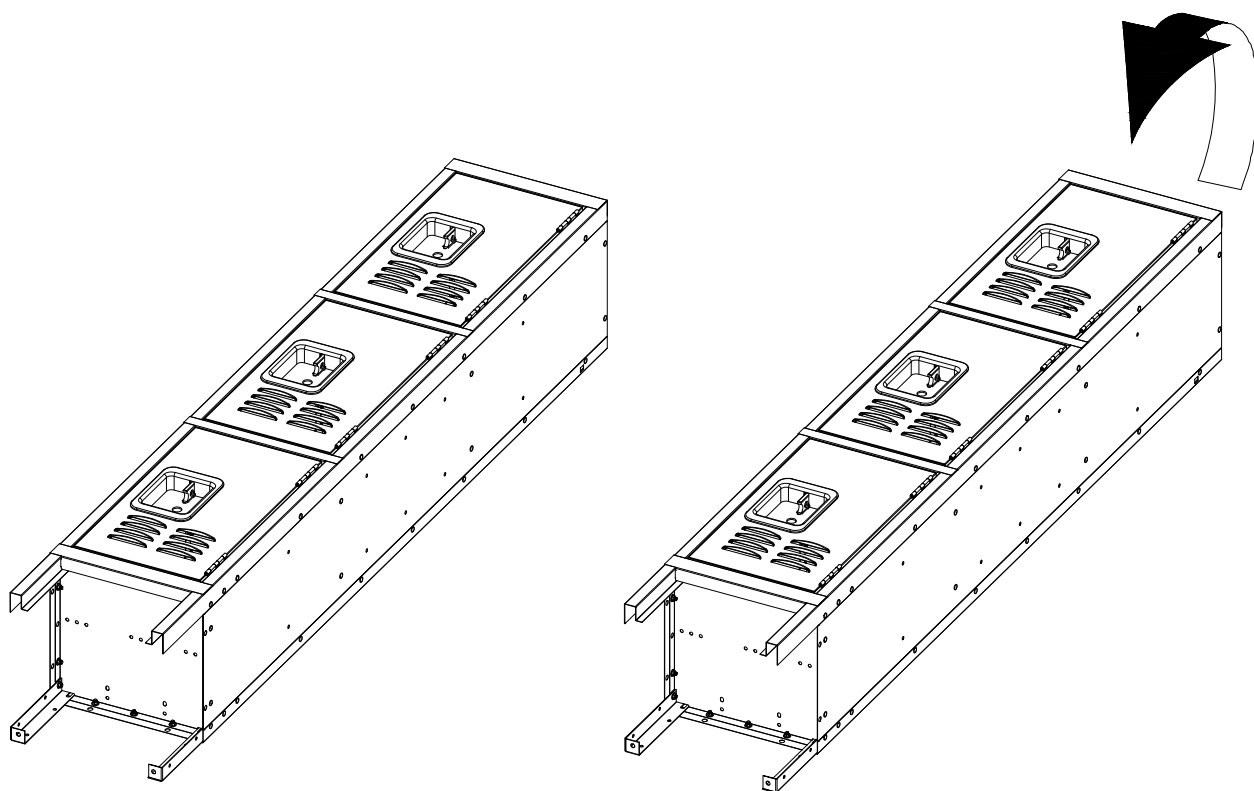

9

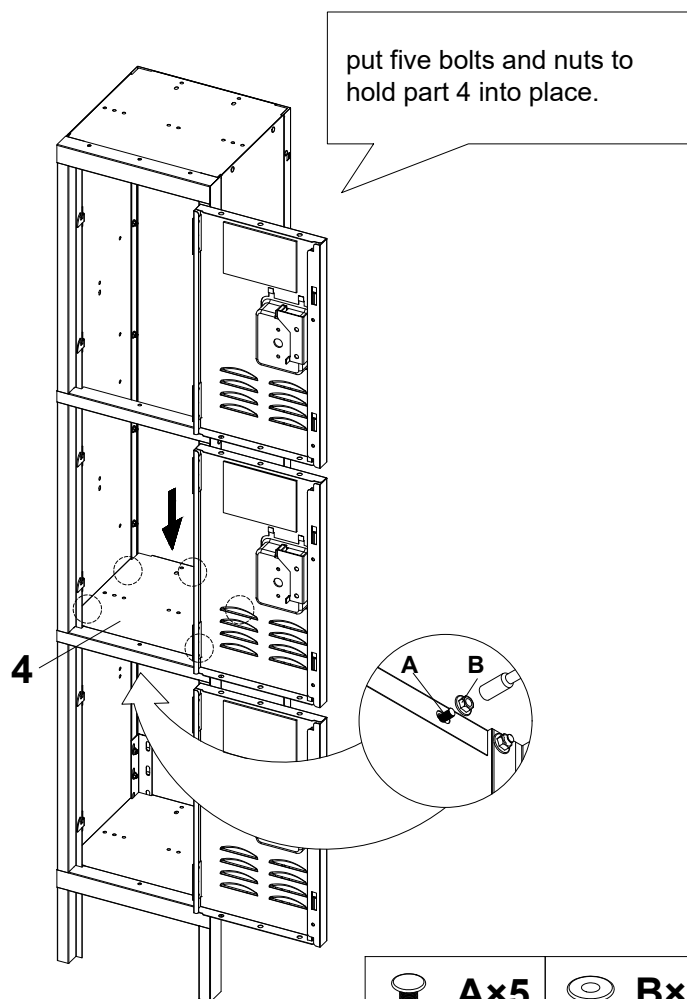
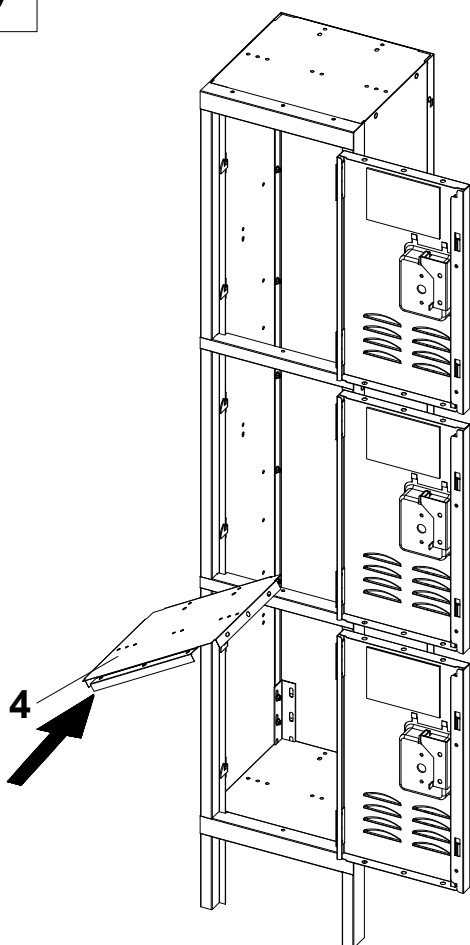


A×5



B×5

10

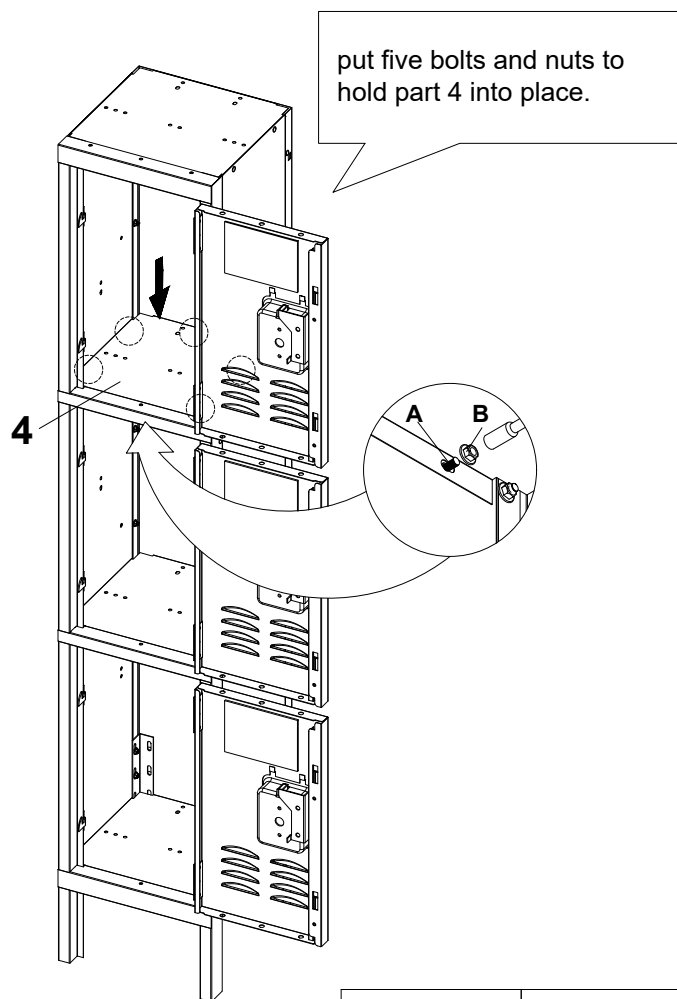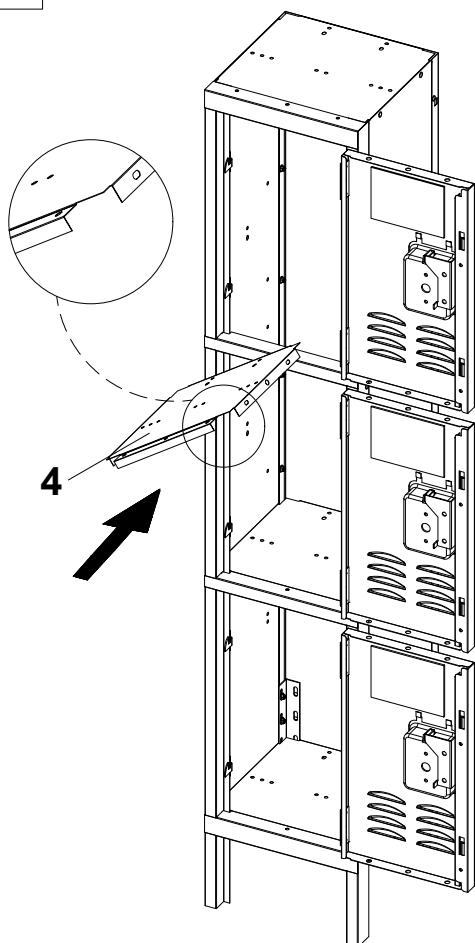


A×5



B×5


11

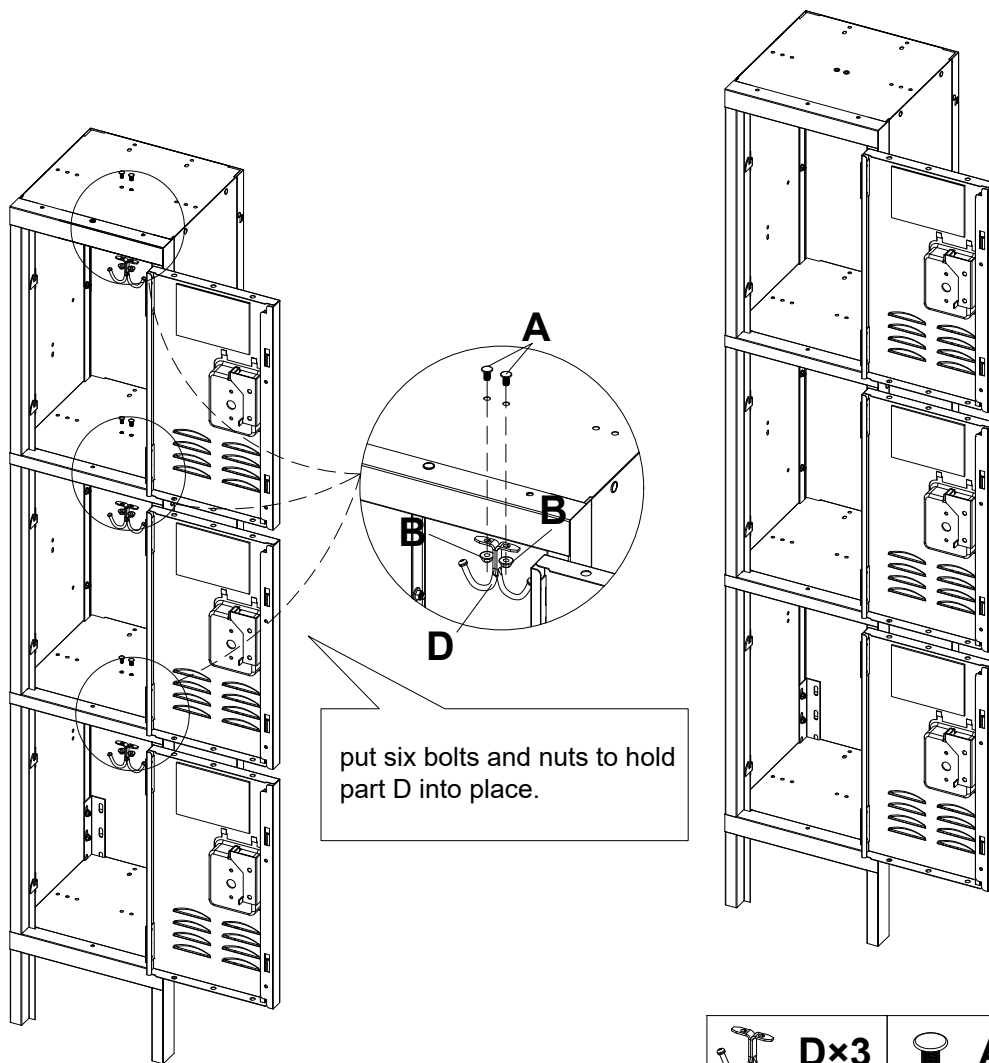

put six bolts and nuts to hold part D into place.





12

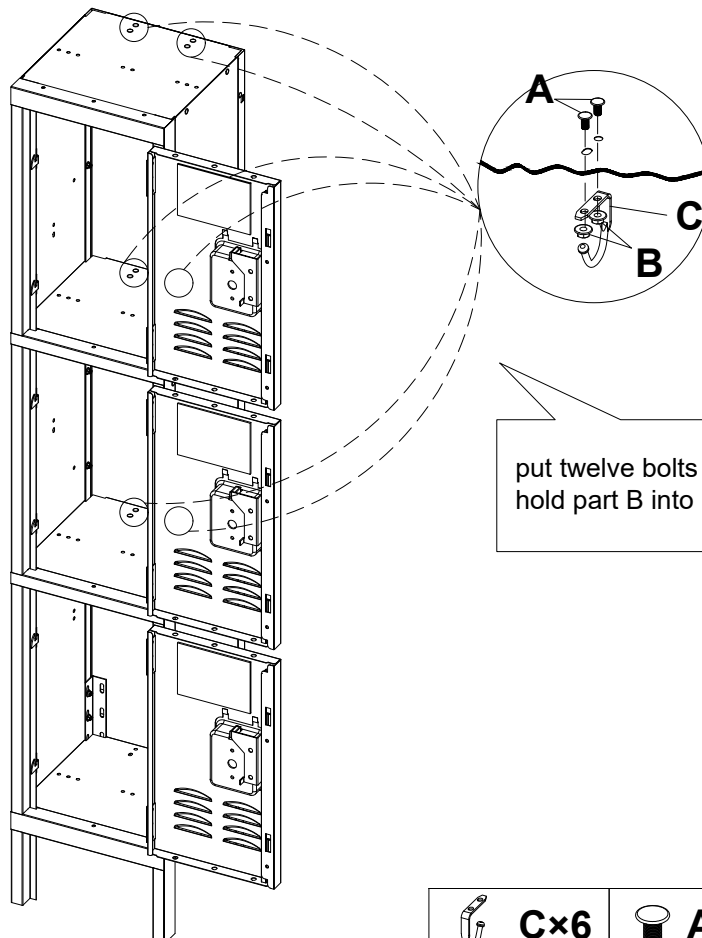

put twelve bolts and nuts to hold part B into place.



13

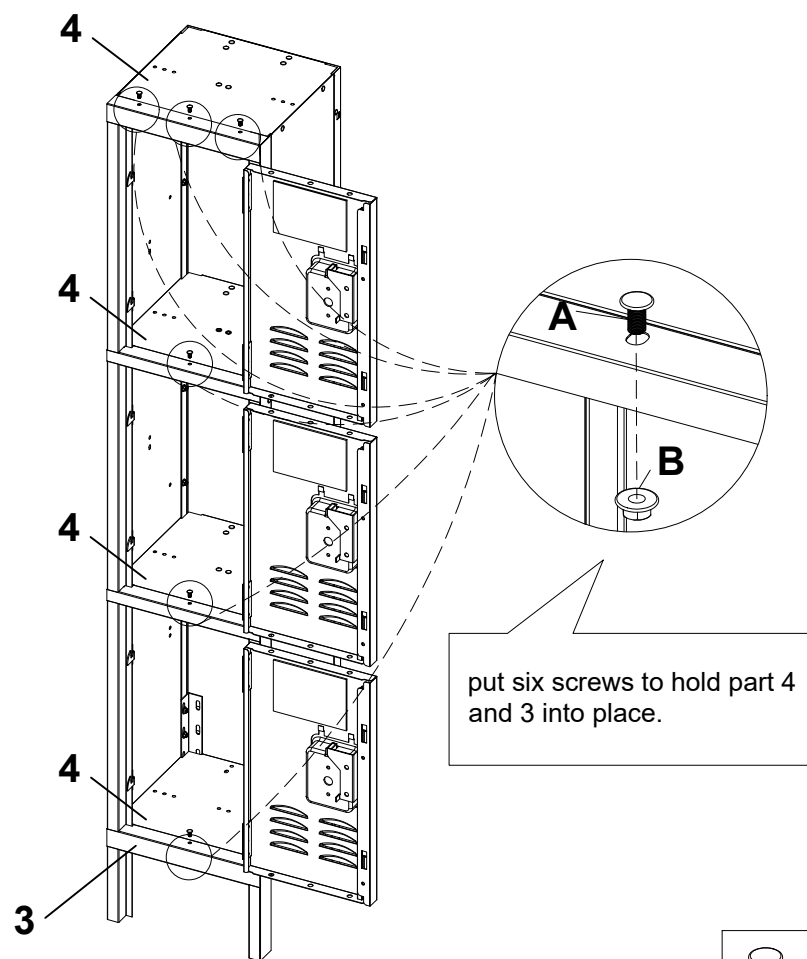

14

