
ASSEMBLY INSTRUCTIONS

ITEM # : N759P218644

Thank you for purchasing this quality Product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. identify and count all parts and compare with the parts list below.

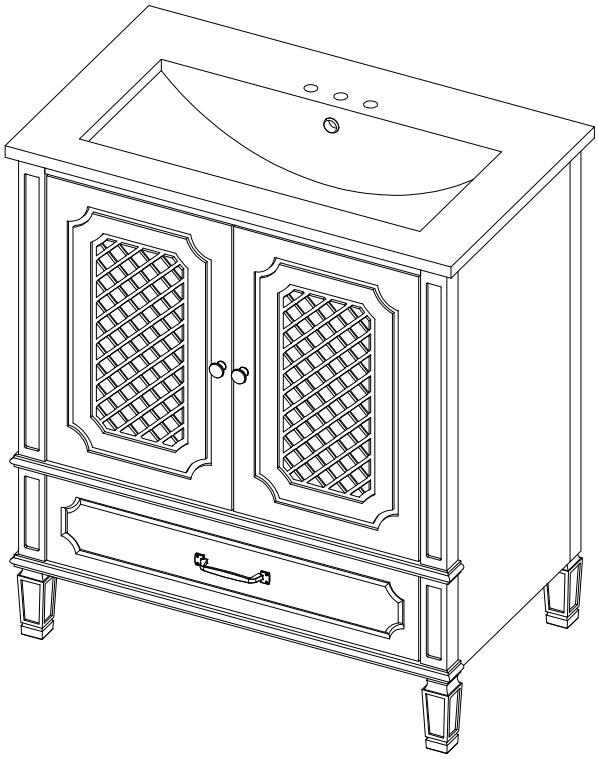


ASSEMBLY INSTRUCTION:











1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered assure fast and easy assembly.












1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This products for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time 1/2 hours.
5. Component parts and fittings contained in the box. Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part.
6. It is STRONGLY RECOMMENDED that you ANCHOR this product tooling furniture can cause serious injuries and death. To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall other solid surface, using the anchor straps provided appropriate fixings.

DETAIL VIEW

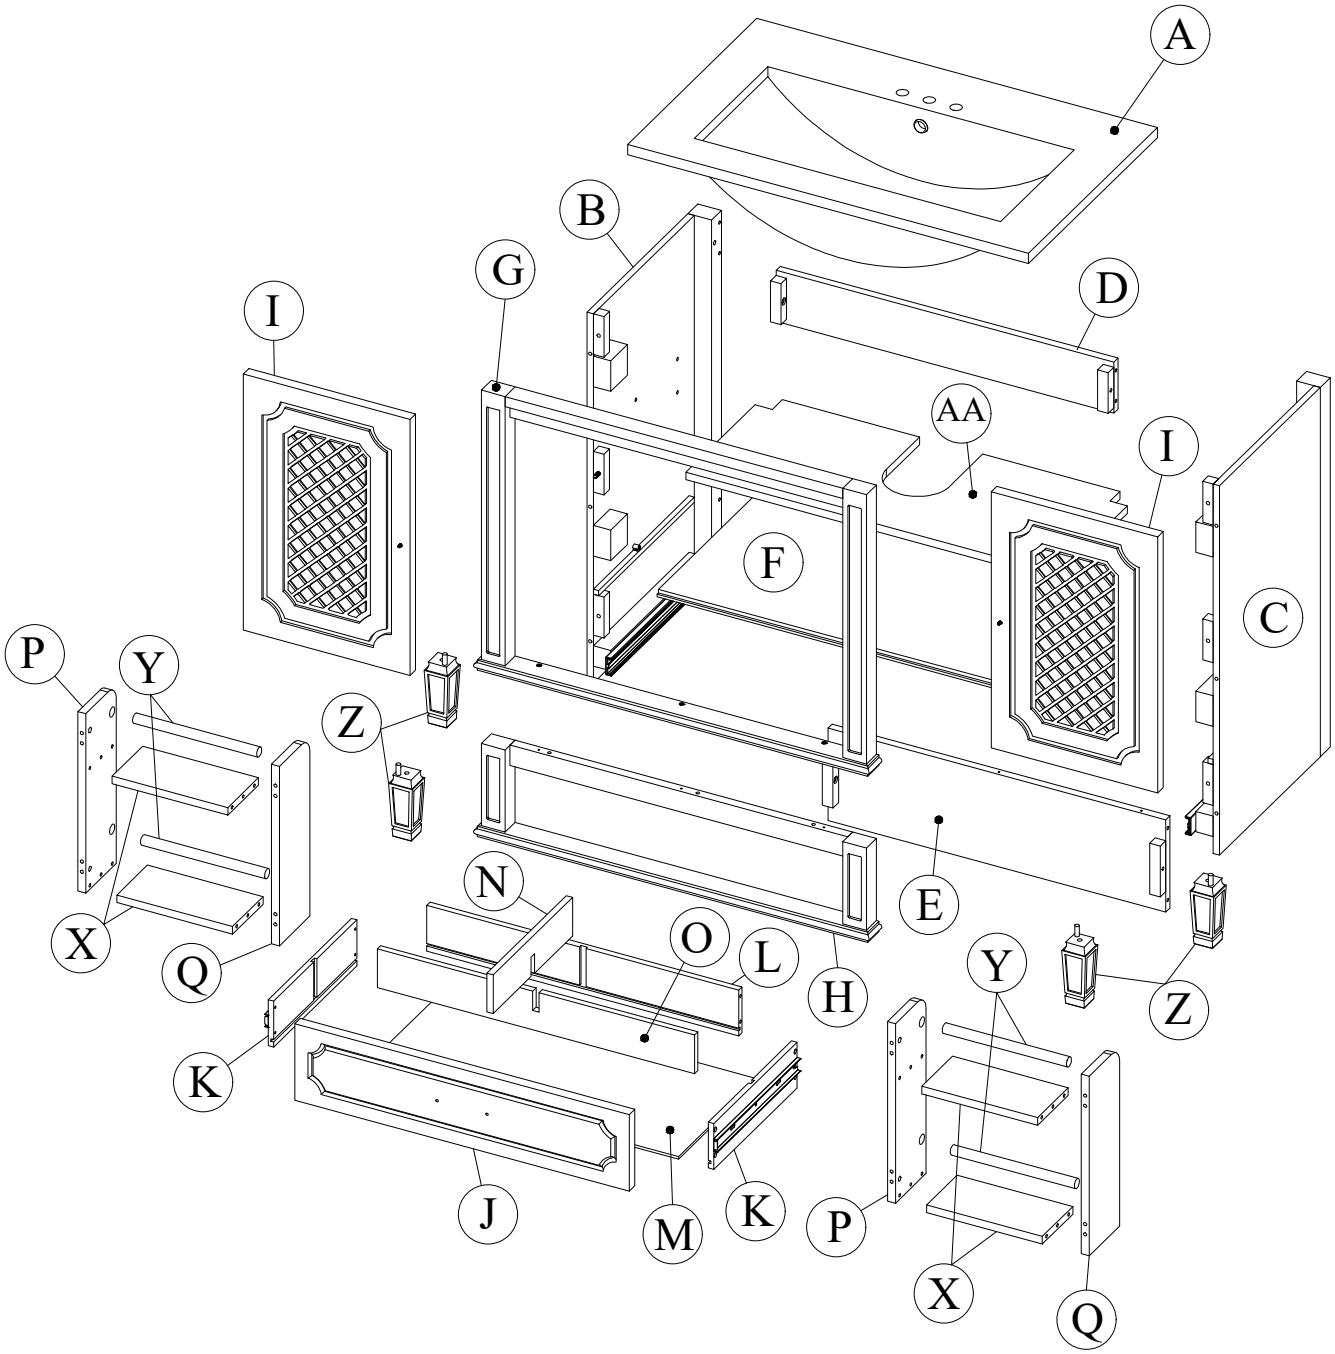





PART LIST

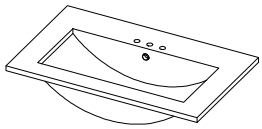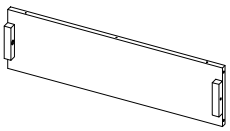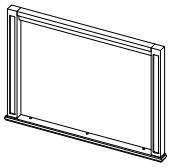No.	Component		Q'ty
A		Sink	1
B		Side panel (left)	1
C		Side panel (right)	1
D		Back panel (top)	1
E		Back panel (bottom)	1
F		Bottom	1
G		Front - top	1
H		Front - bottom	1
I		Door (R/L)	2
J		Drawer Front	1

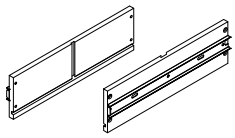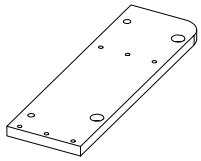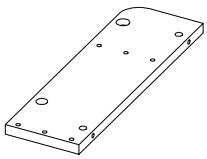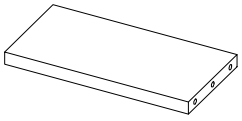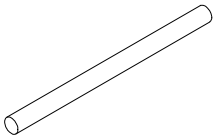
No.	Component		Q'ty
K		Drawer sides (R/L)	2
L		Drawer back	1
M		Drawer bottom	1
N		Middle panel 1 (drawer)	1
O		Middle panel 2 (drawer)	1
P		Side panel-left (shelf)	2
Q		Side panel-right (shelf)	2
X		Bottoms (shelf)	4
Y		Bars (shelf)	4
Z		Legs	4
AA		Adjustable shelf	1

HARDWARE LIST

No.	Hardware		Q'ty
1		Allen Bolts 1/4"x35	10
2		Cam lock screws	16
3		Cam lock	16
4		Wooden dowels	41
5		Knob	2
6		Handle	1
7		Bolts M4x20	2
8		Bolts M4x25	2
9		Screws 3.5x12	4
10		Screws 4x25	3
10a		Screws 4x40	8

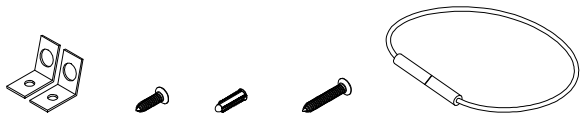
No.	Hardware		Q'ty
11		Screws 4x30	3
12		Allen key	1
13		Hinges	4
14		Screws 4x15	24
15		Shelf pin	4
16		Allen Bolts 5/16"x120	4
17	 a b c d e Wall brackets 1 set		
	 Not included 		

STEP 1

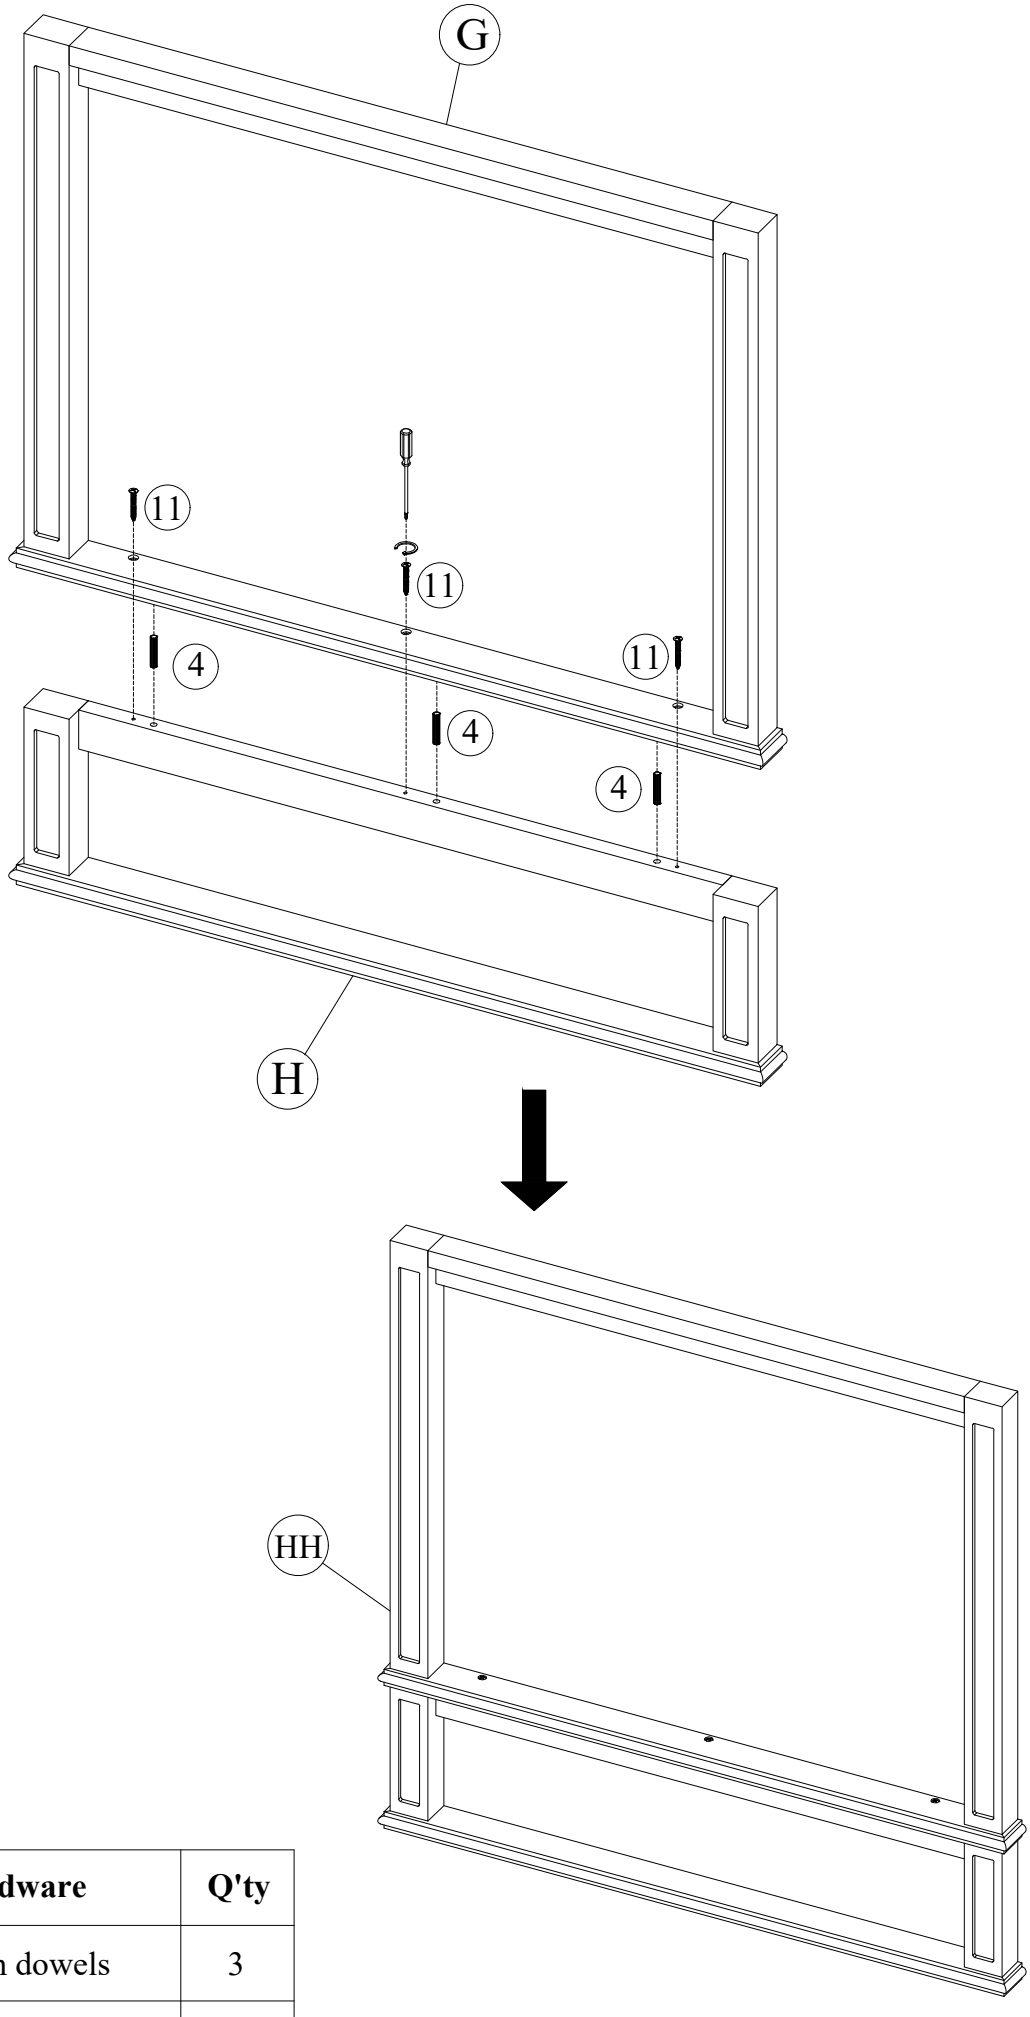



No.	Hardware	Q'ty
4	Wooden dowels	3
11	Screws 4x30	3


STEP 2

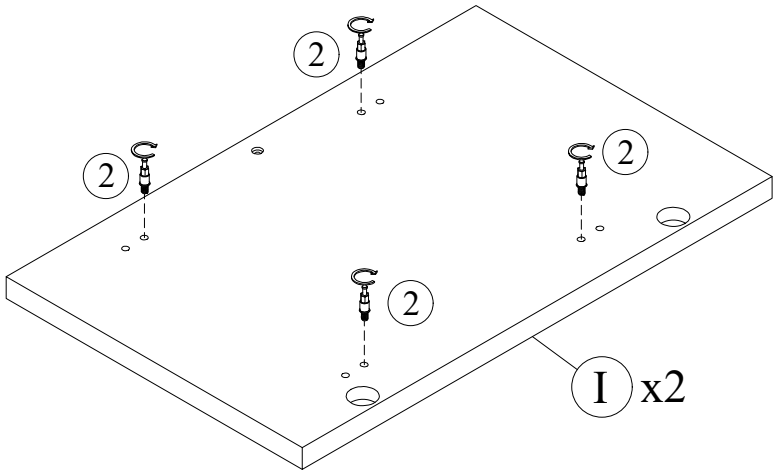


No.	Hardware	Q'ty
2	Cam lock screws	8



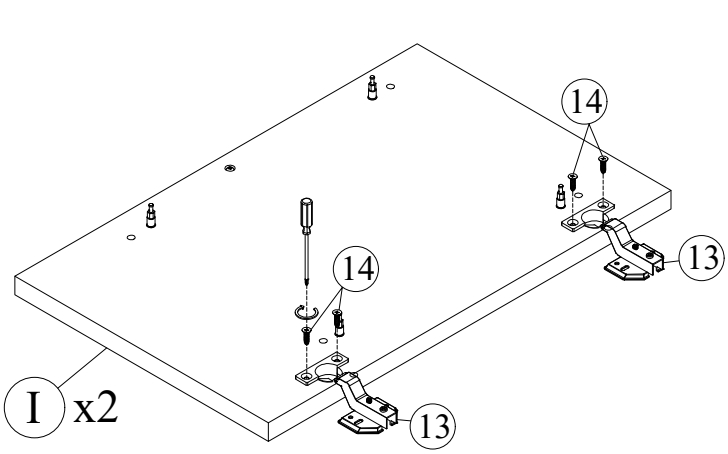


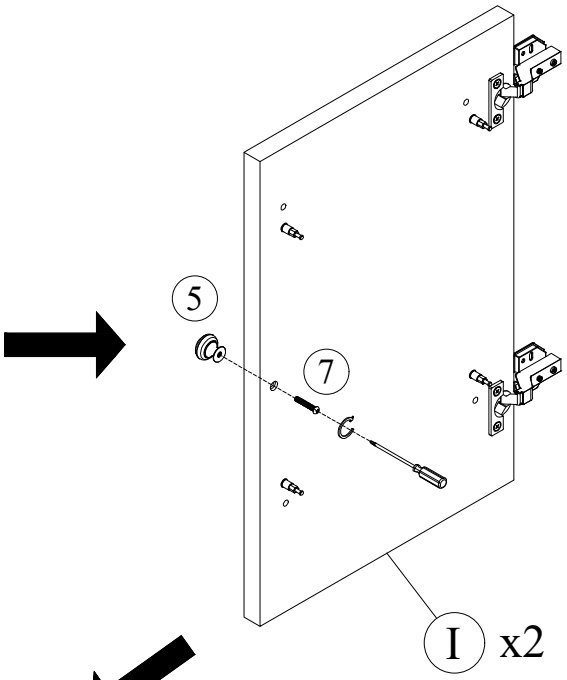


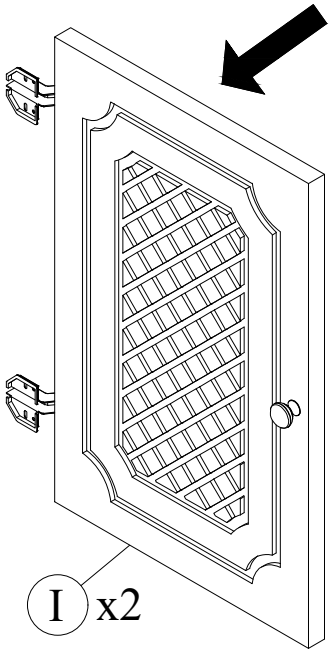


No.	Hardware	Q'ty
5	Knob	2
7	Bolts M4x20	2
13	Hinges	4
14	Screws 4x15	8


STEP 3

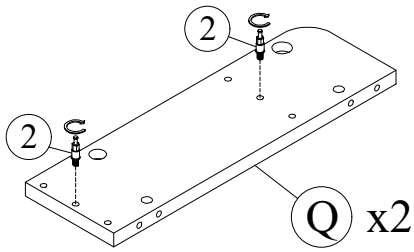

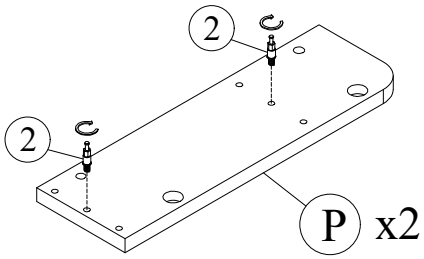


No.	Hardware	Q'ty
2	Cam lock screws	8



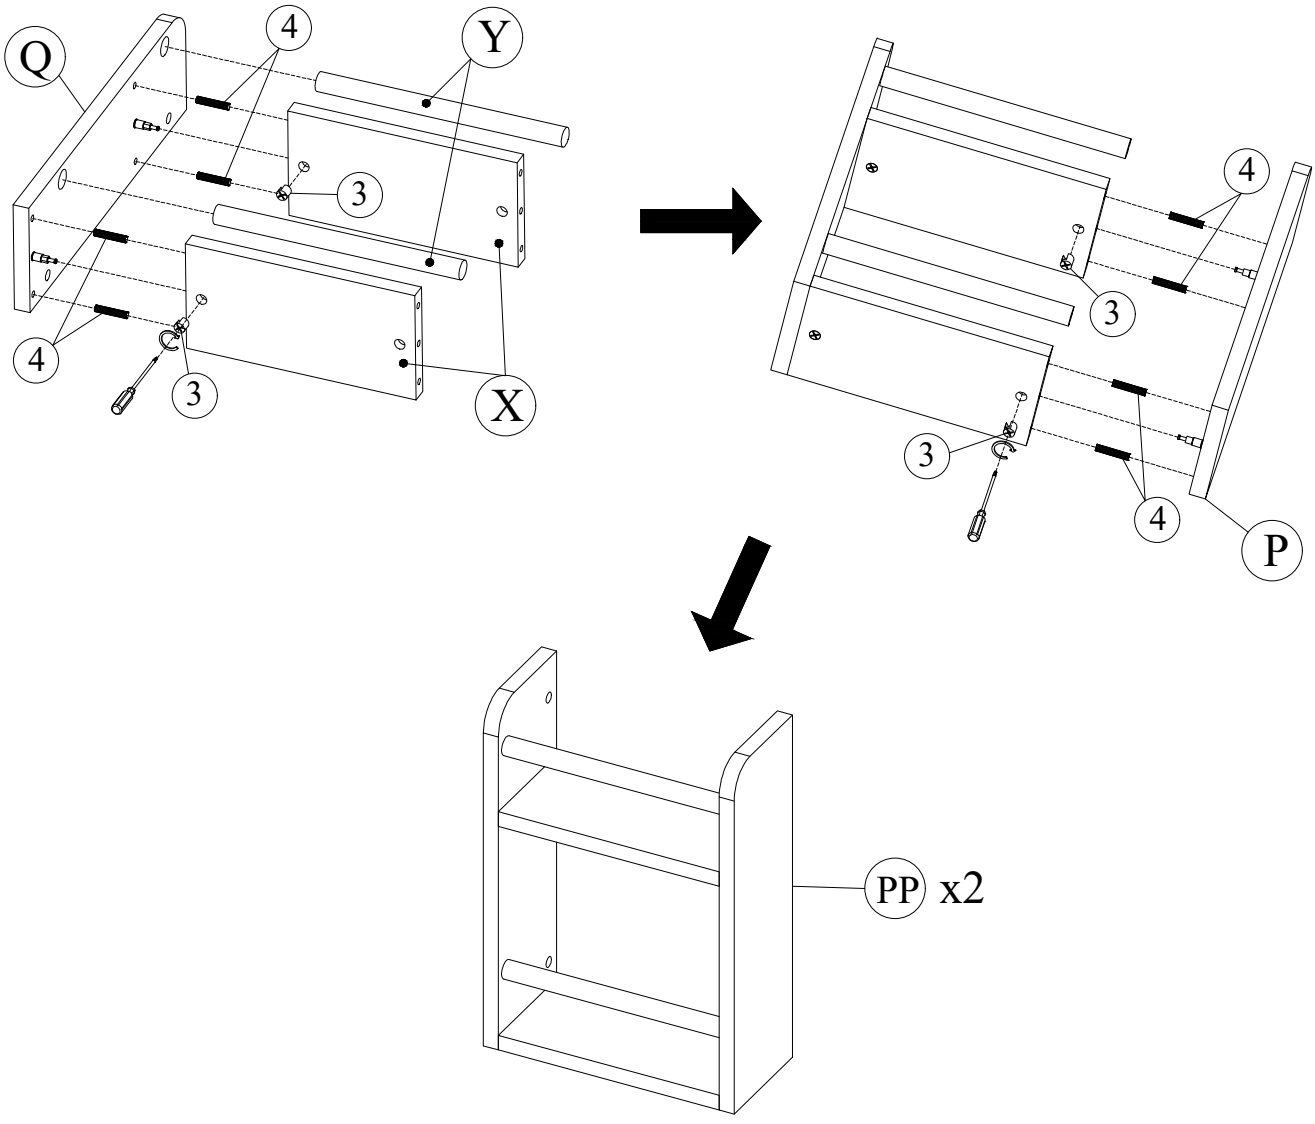


No.	Hardware	Q'ty
3	Cam locks	8
4	Wooden dowels	16

STEP 4

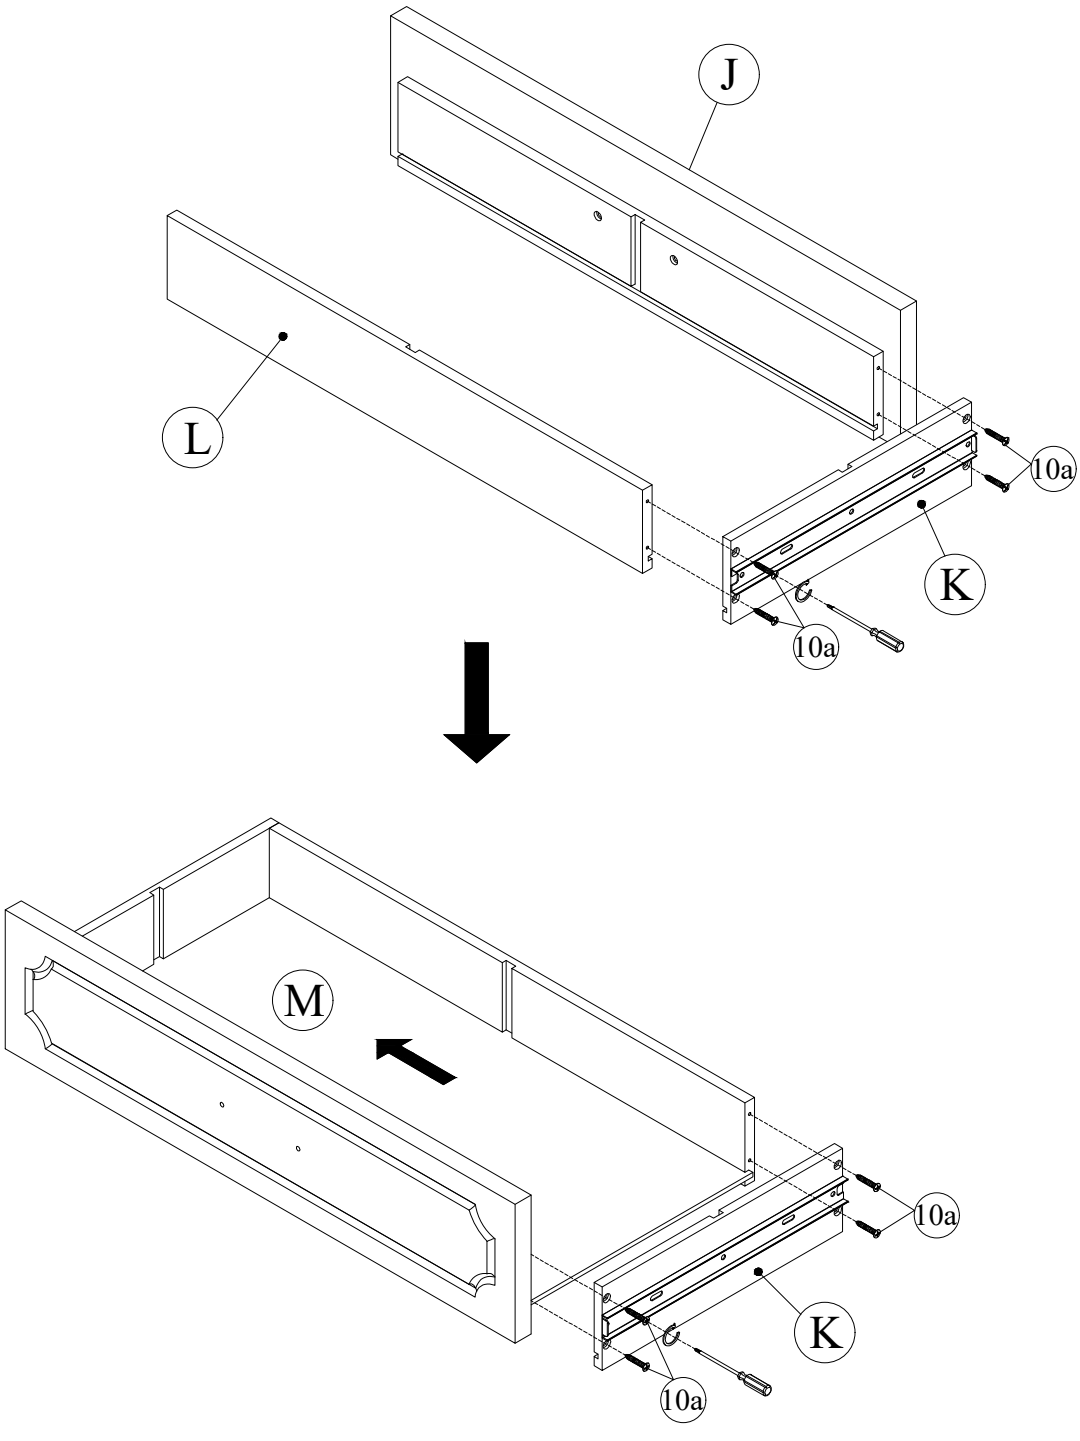


No.	Hardware	Q'ty
10a	Screws 4x40	8

STEP 5

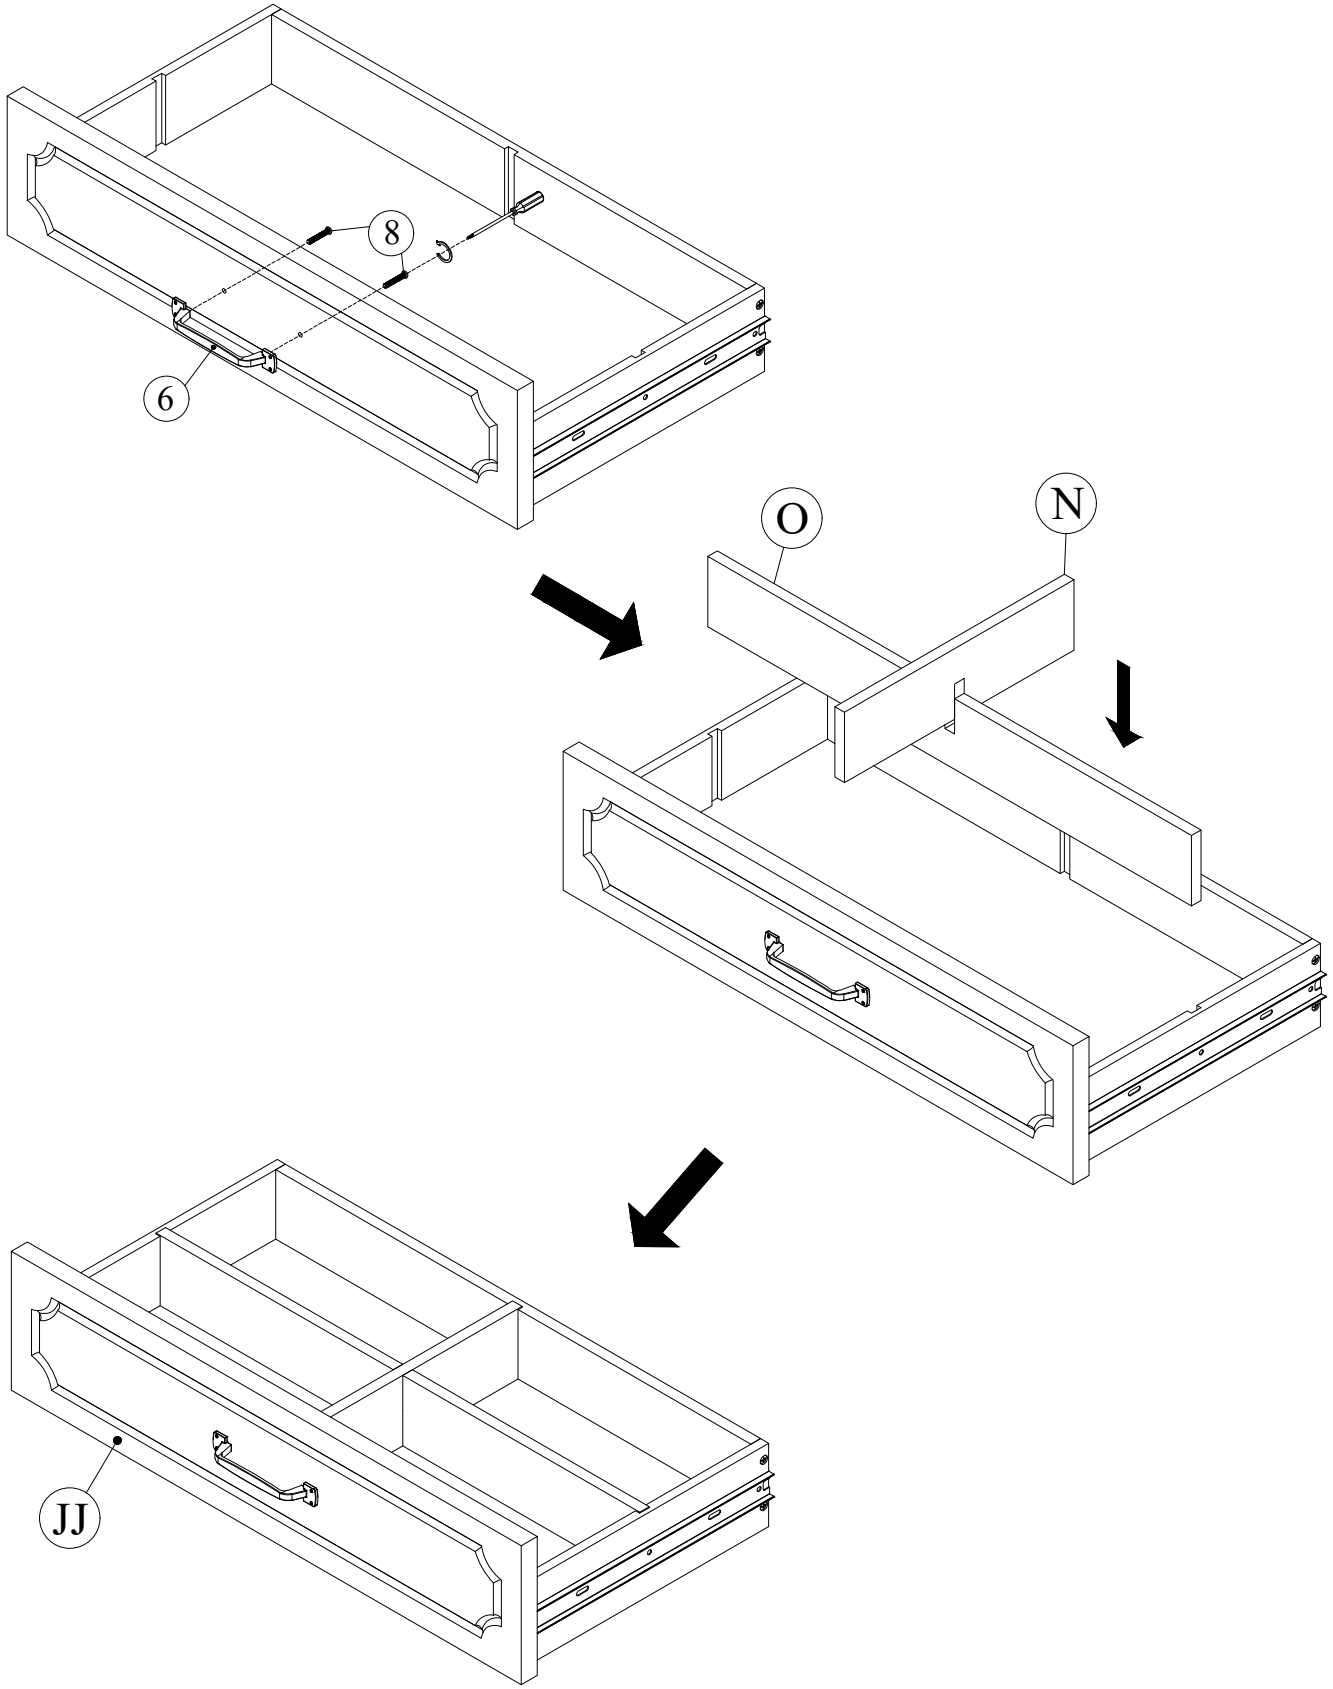


No.	Hardware	Q'ty
6	Handles	1
8	Bolt M4x25	2

STEP 6

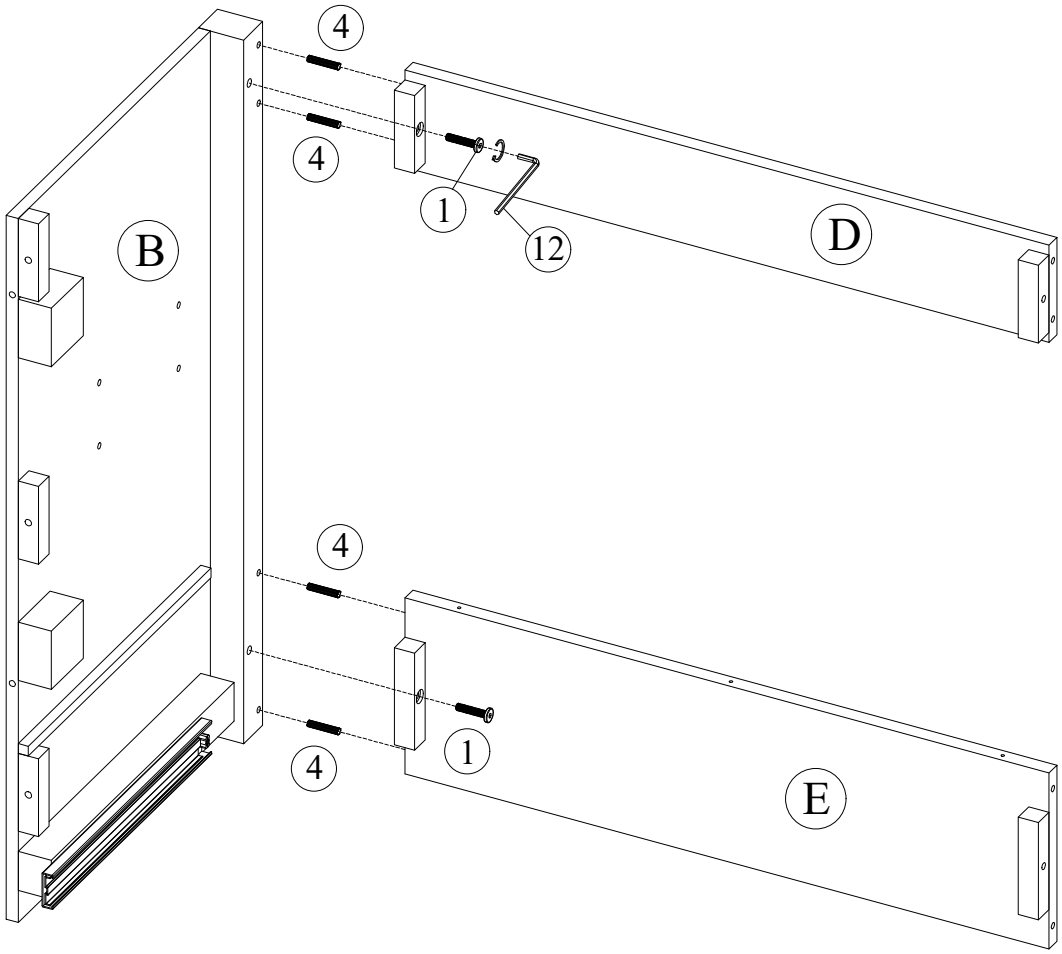


No.	Hardware	Q'ty
1	Allen Bolts 1/4"x35	2
4	Wooden dowels	4
12	Allen key	1

STEP 7

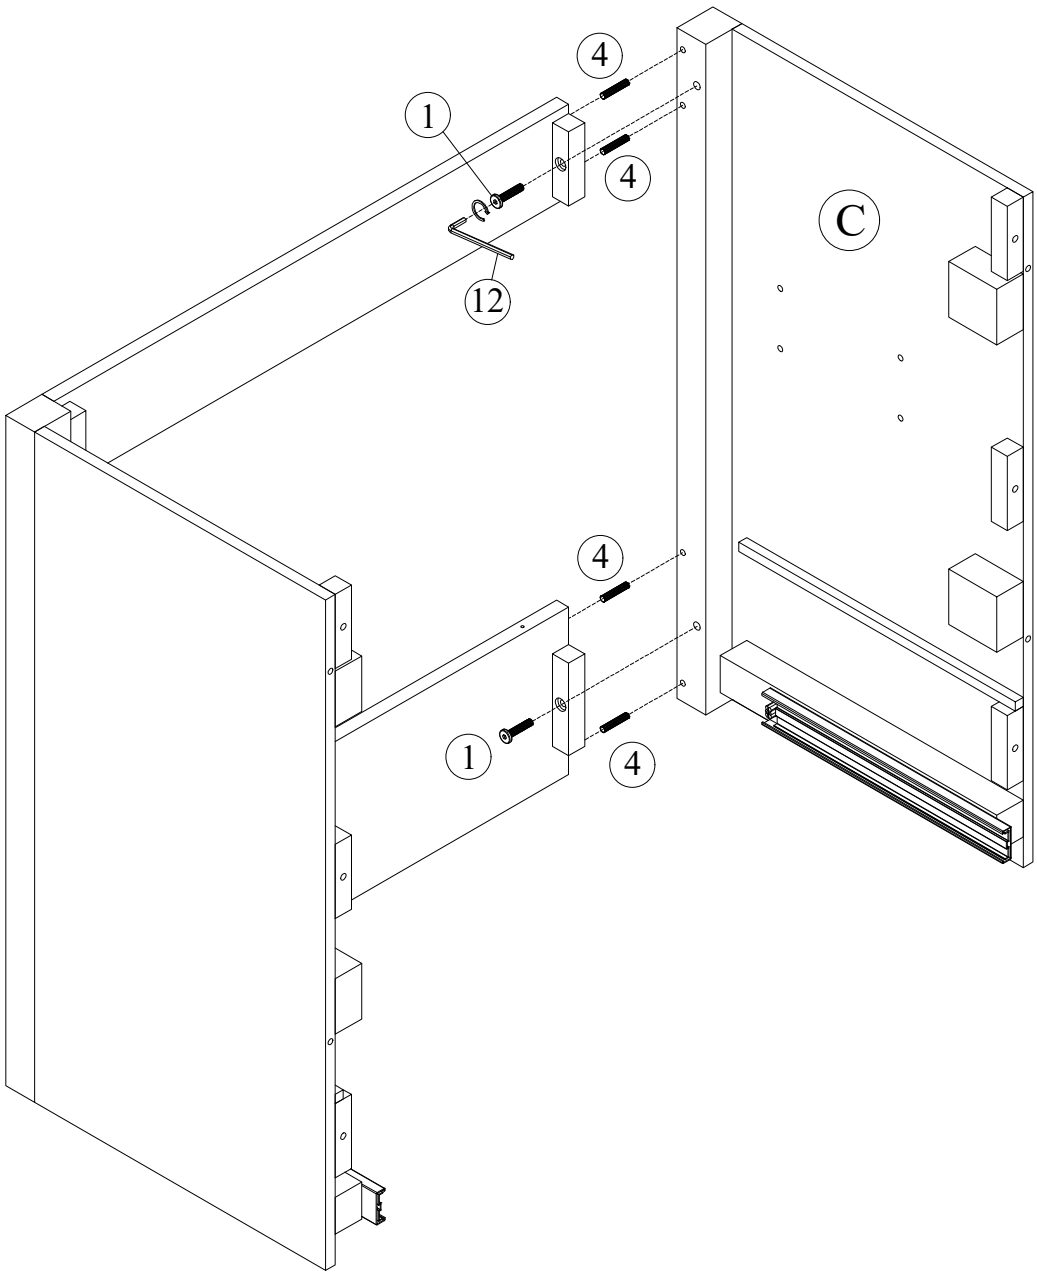


No.	Hardware	Q'ty
1	Allen Bolts 1/4"x35	2
4	Wooden dowels	4
12	Allen key	1

STEP 8

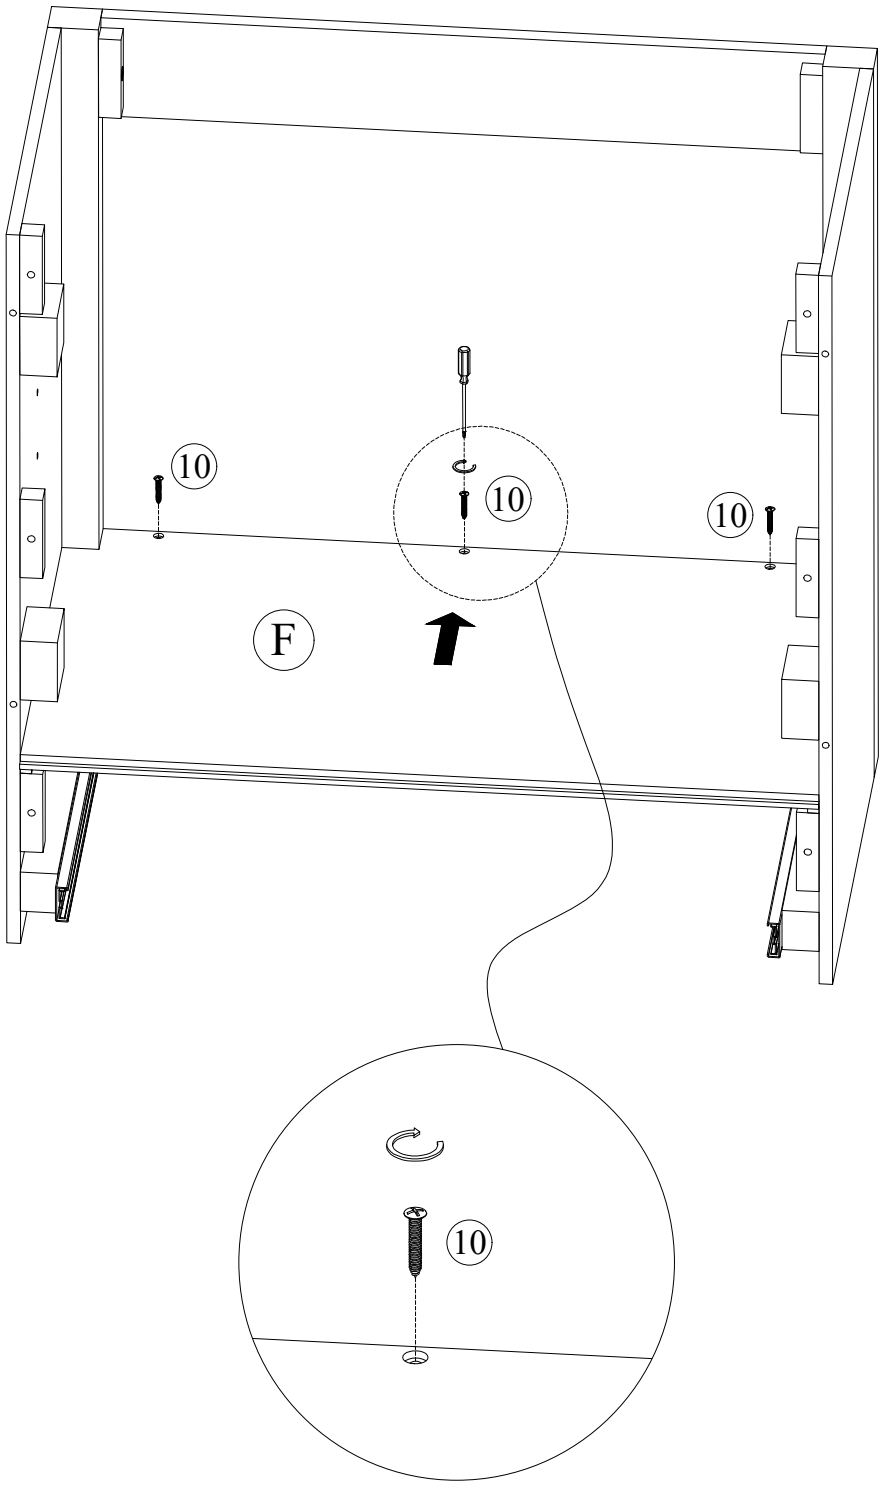


No.	Hardware	Q'ty
10	Screws 4x25	3

STEP 9

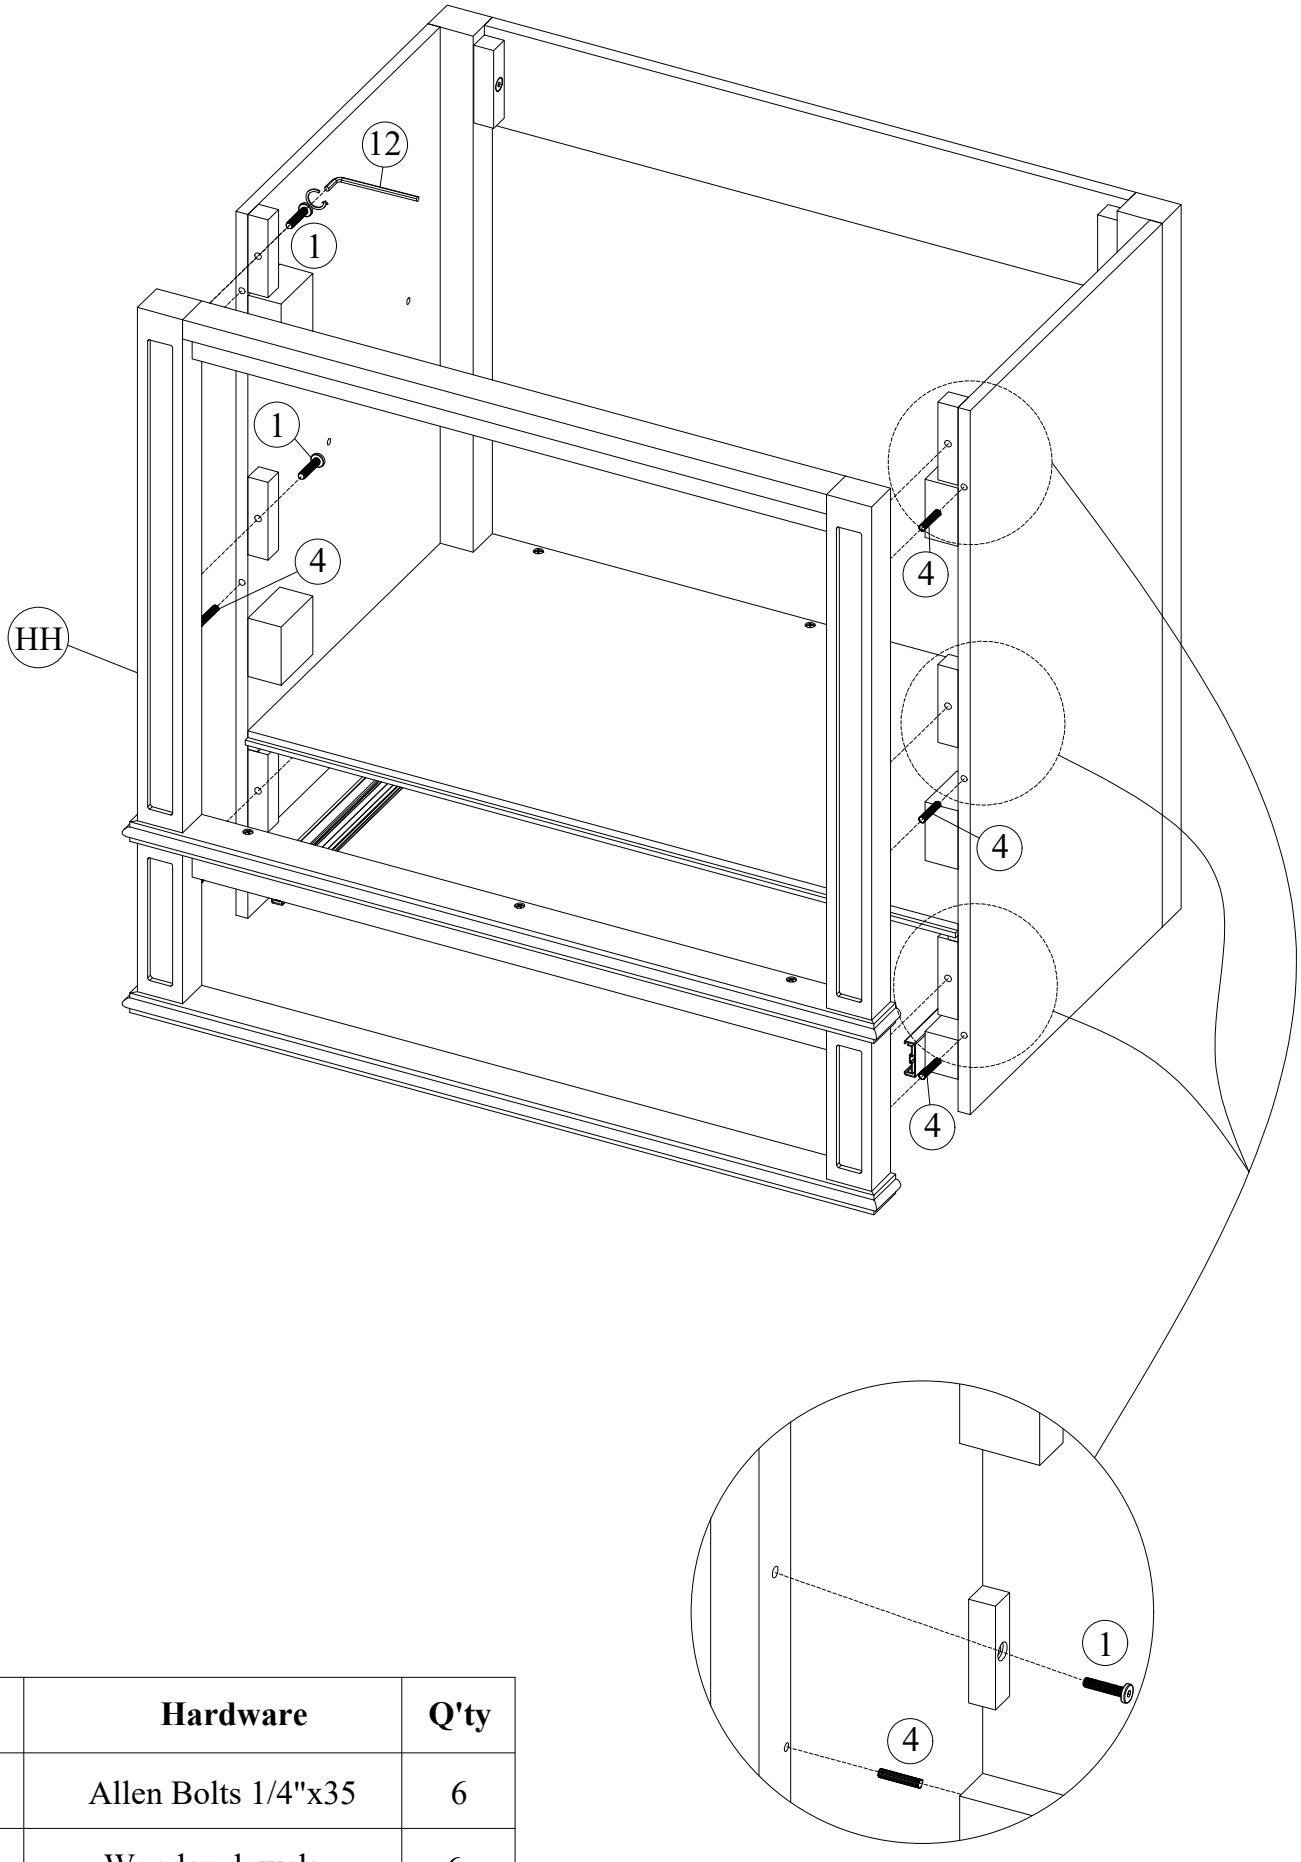

No.	Hardware	Q'ty
1	Allen Bolts 1/4"x35	6
4	Wooden dowels	6
12	Allen key	1


STEP 10

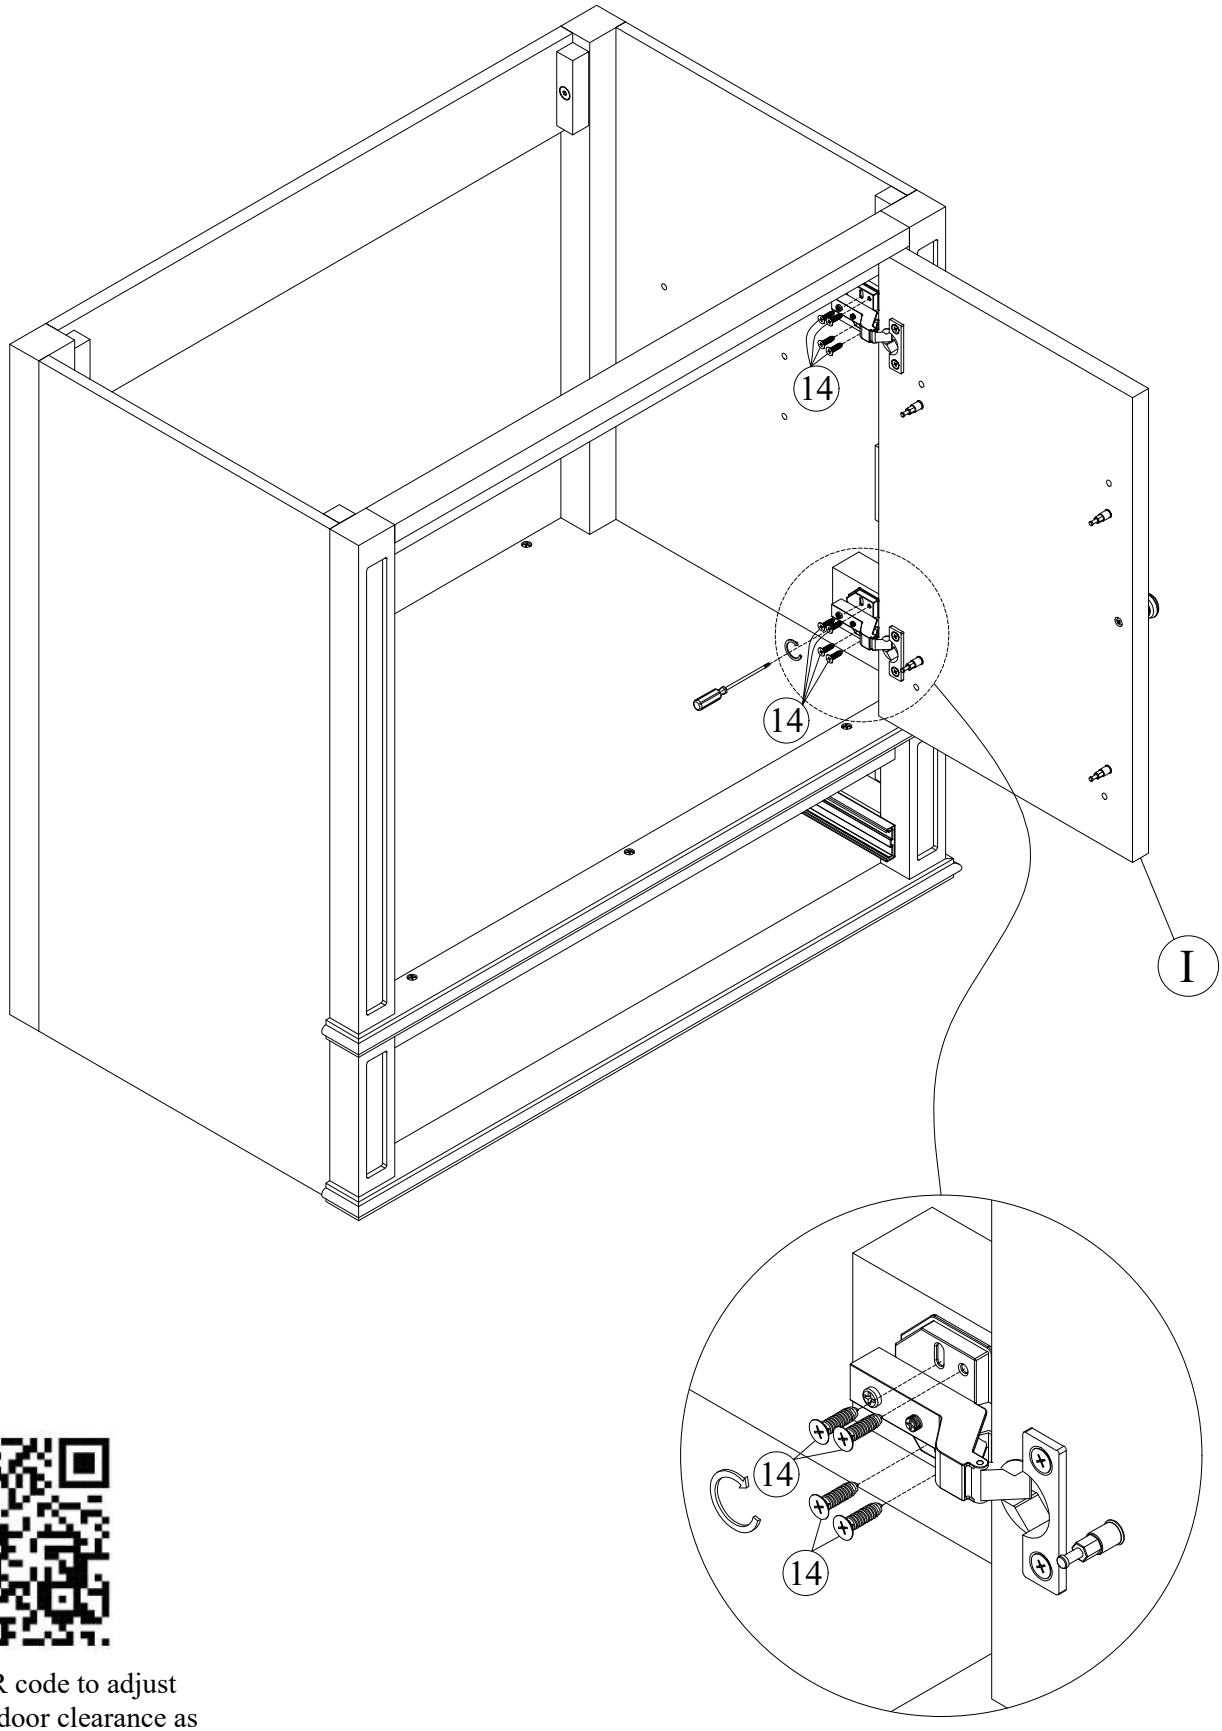

Scan the QR code to adjust the cabinet door clearance as desired.

No.	Hardware	Q'ty
14	Screws 4x15	8


STEP 11

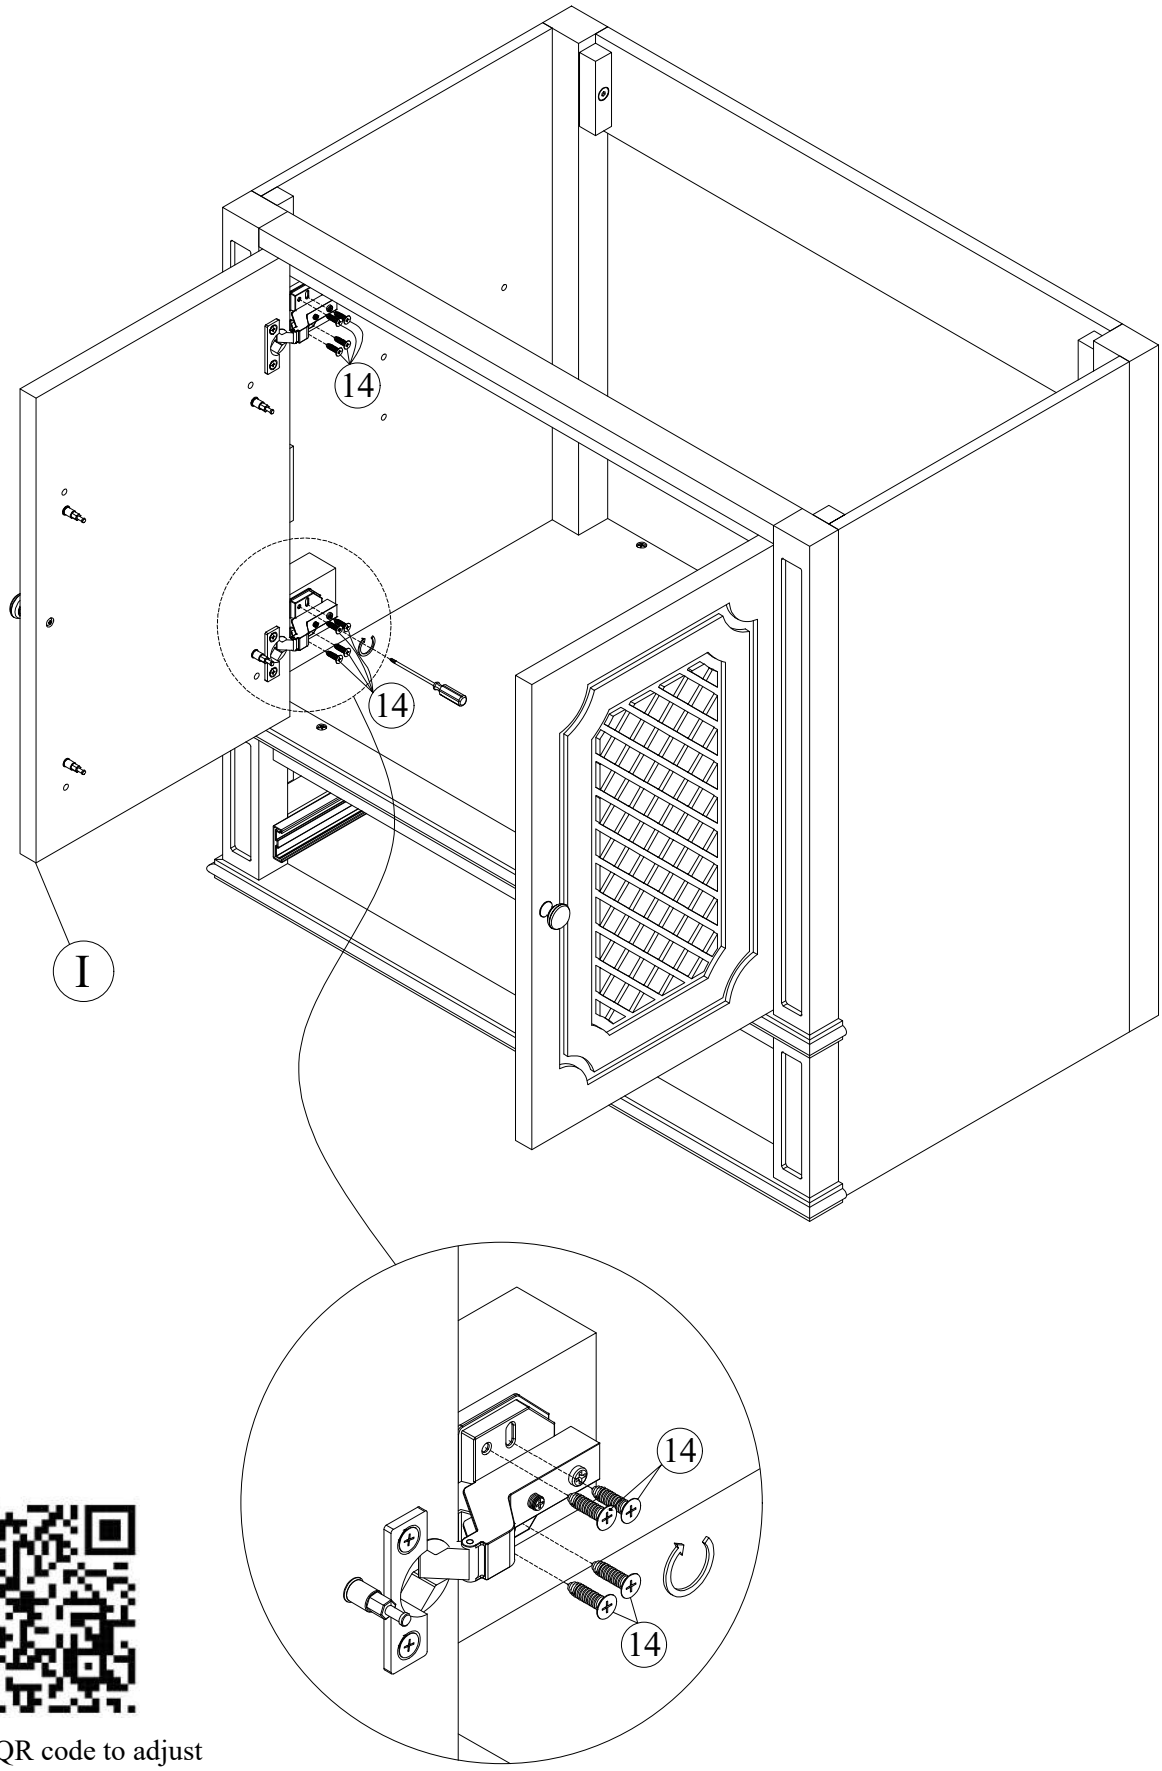

Scan the QR code to adjust the cabinet door clearance as desired.


No.	Hardware	Q'ty
14	Screws 4x15	8

STEP 12

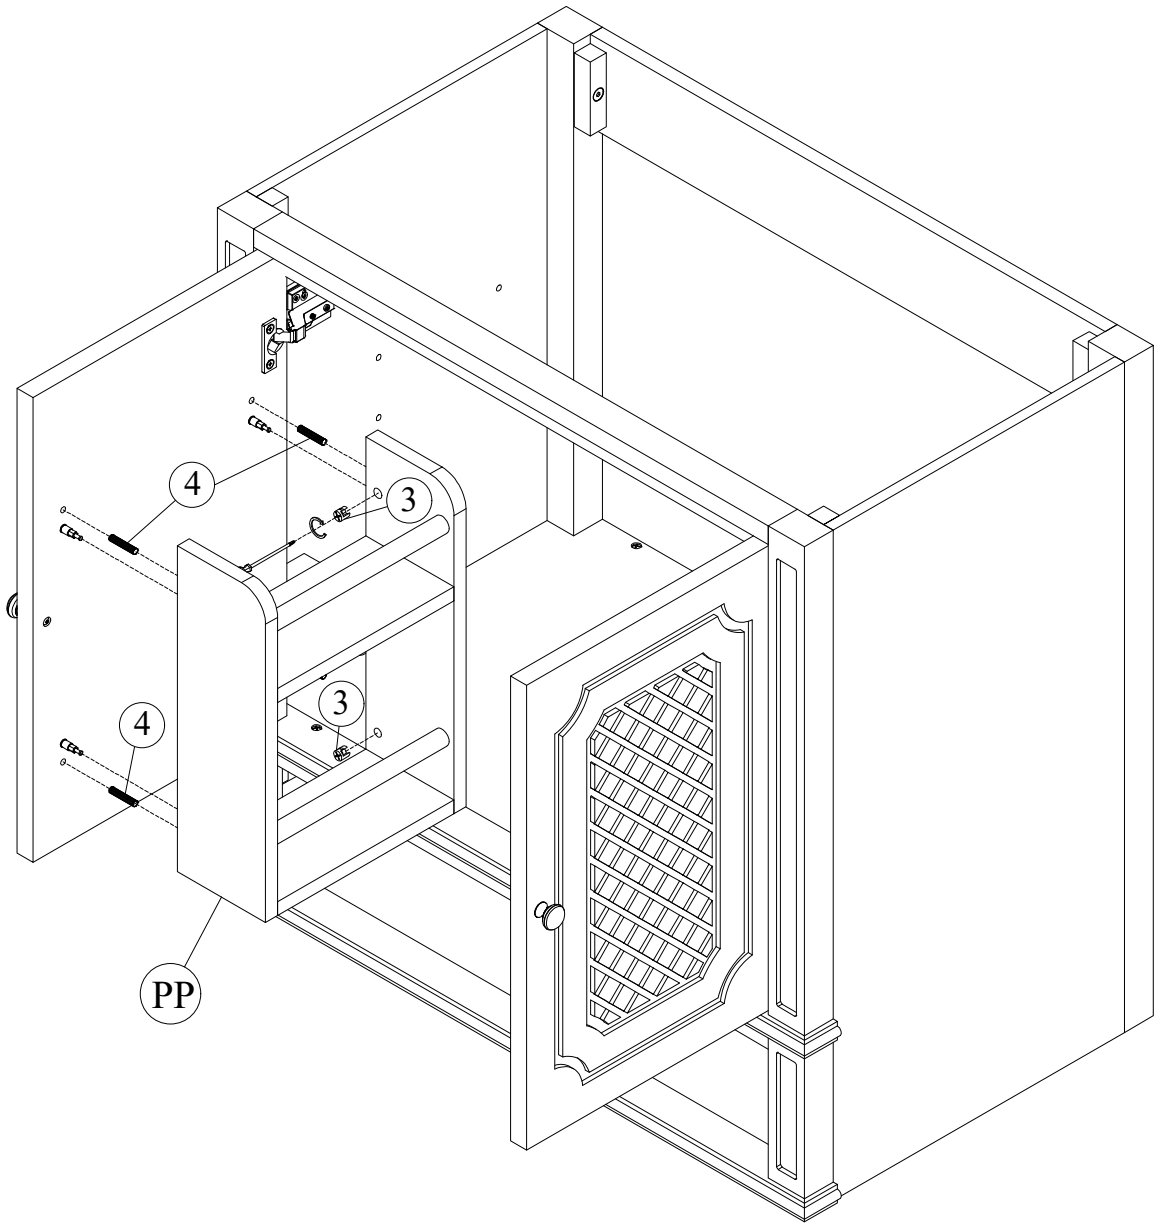


No.	Hardware	Q'ty
3	Cam locks	4
4	Wooden dowels	4

STEP 13

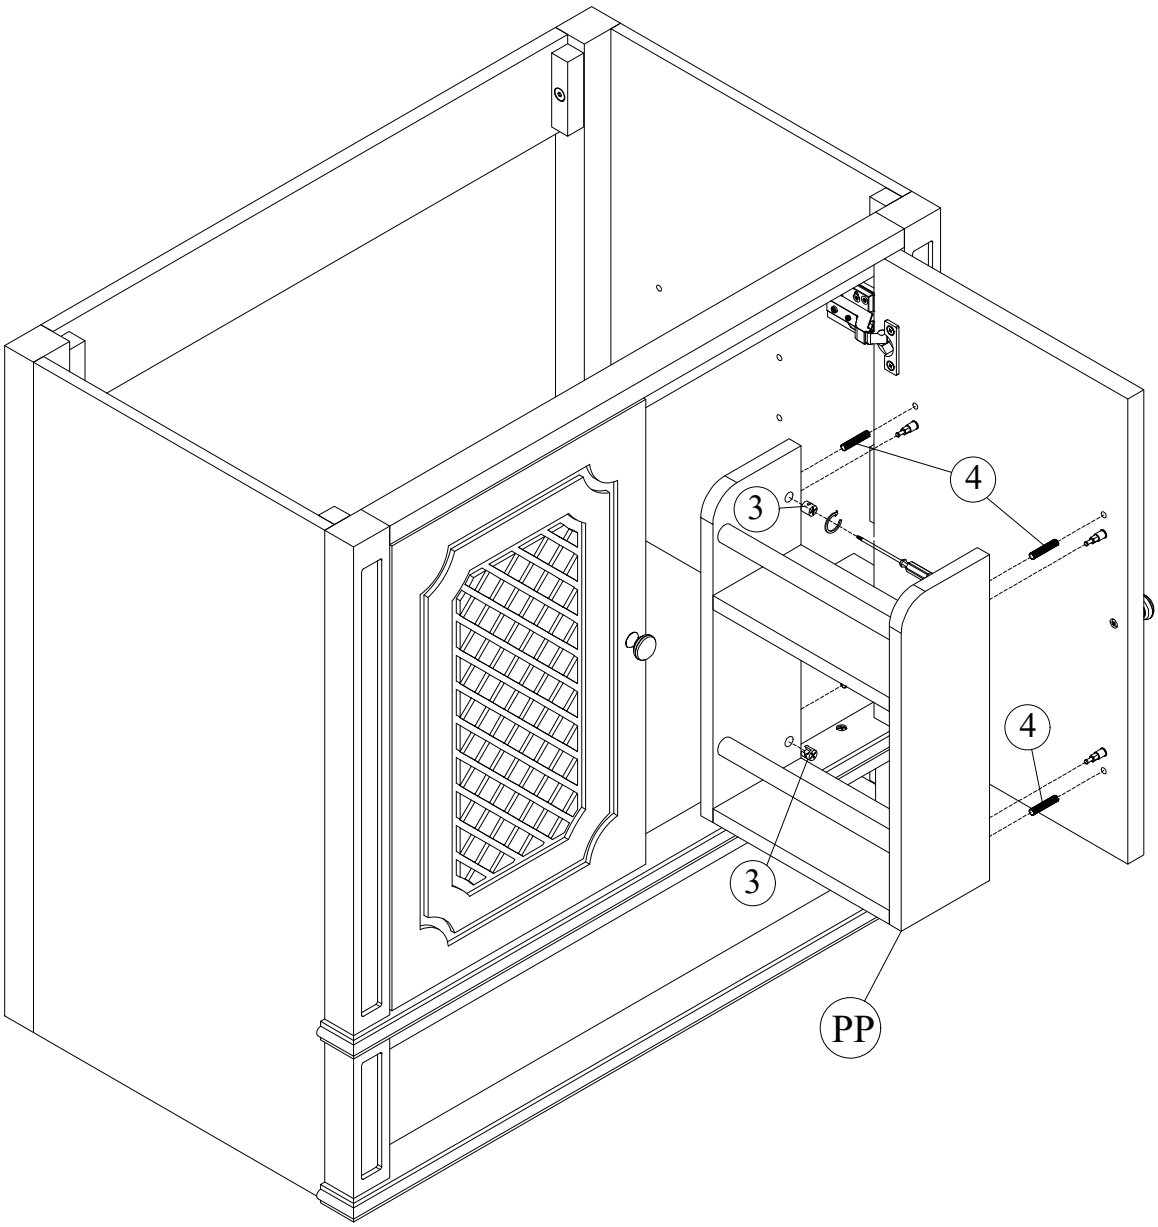


No.	Hardware	Q'ty
3	Cam locks	4
4	Wooden dowels	4

STEP 14

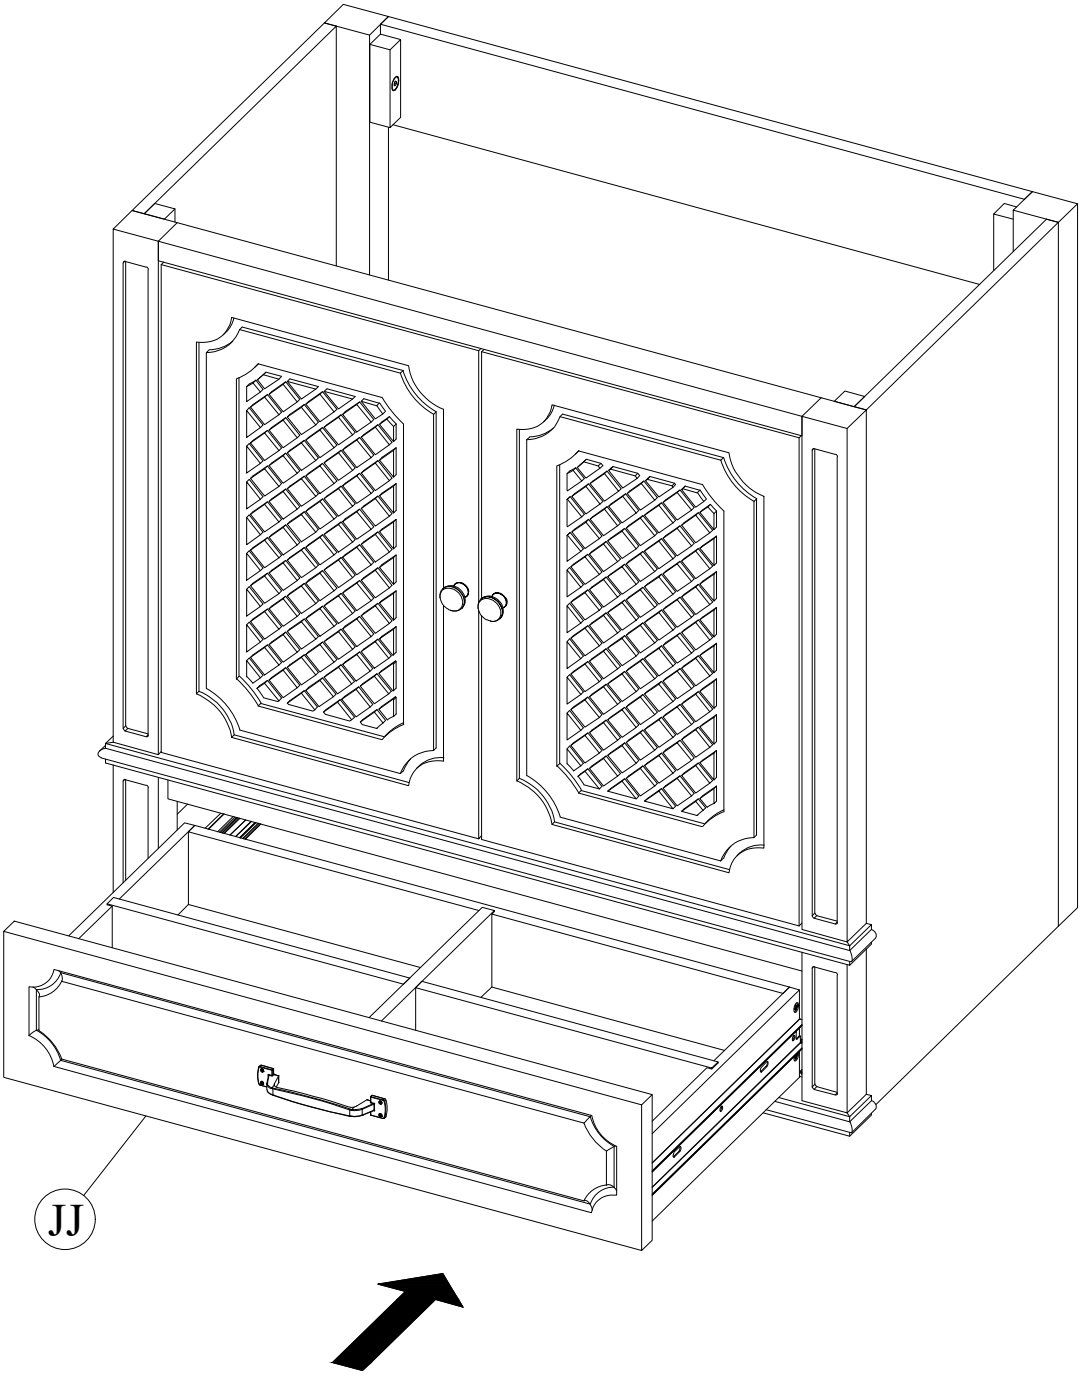


STEP 15

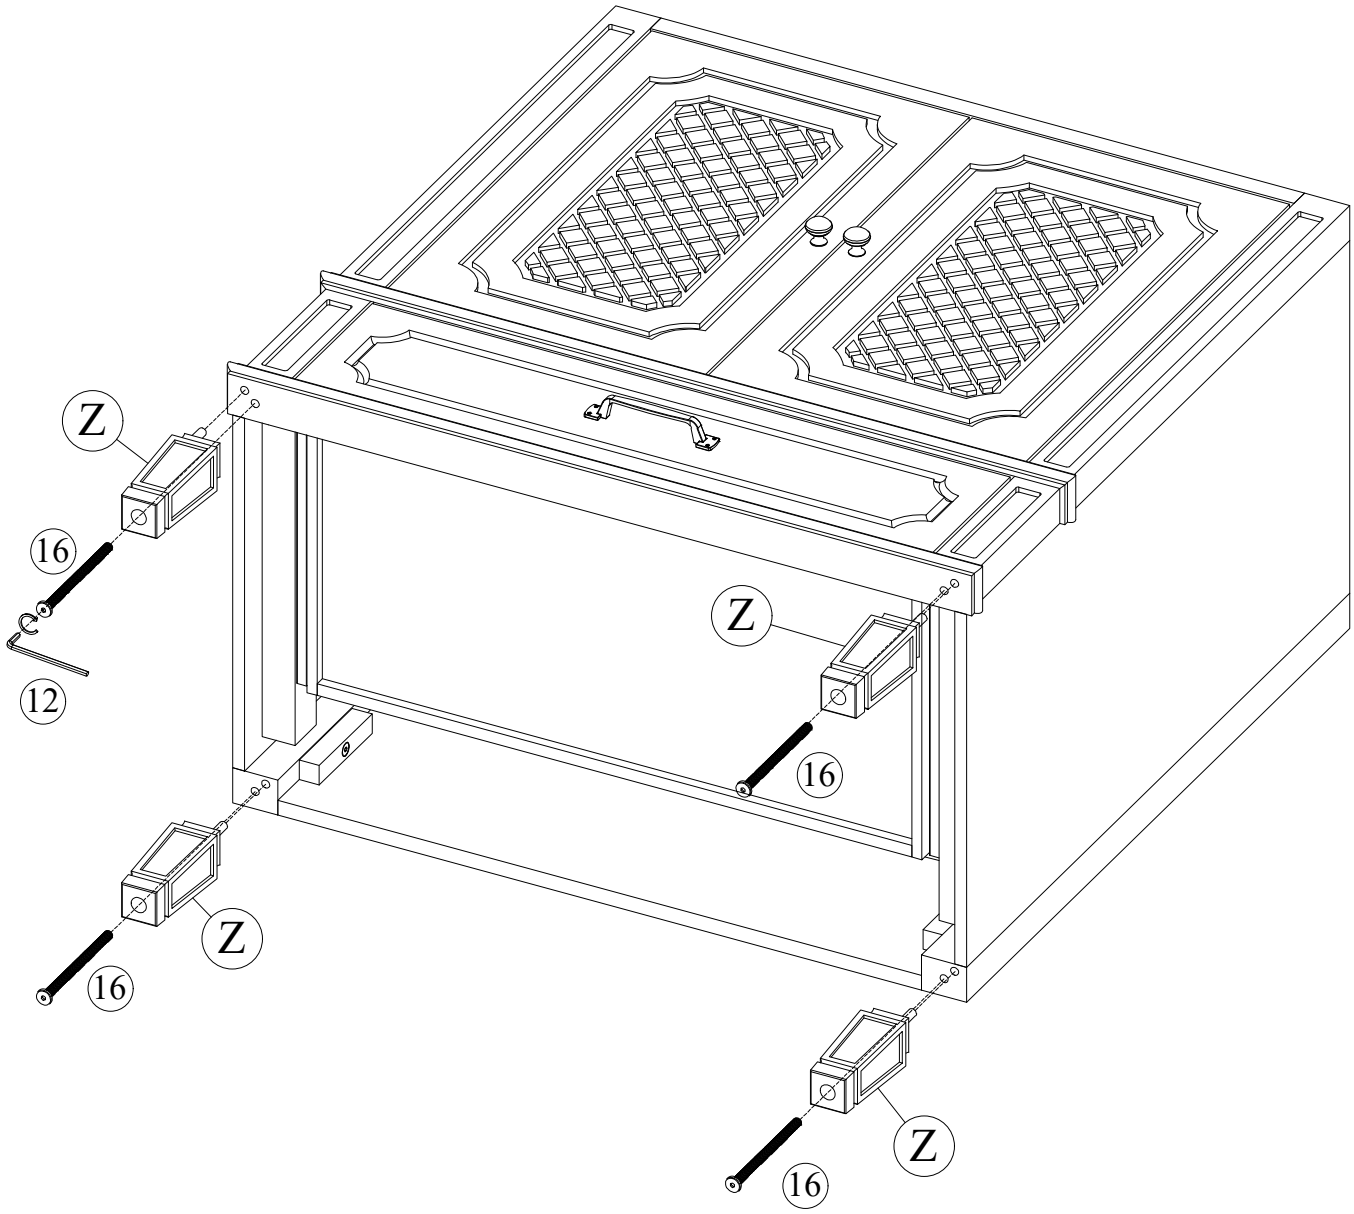


No.	Hardware	Q'ty
12	Allen key	1
16	Allen Bolts 5/16"x120	4

STEP 16

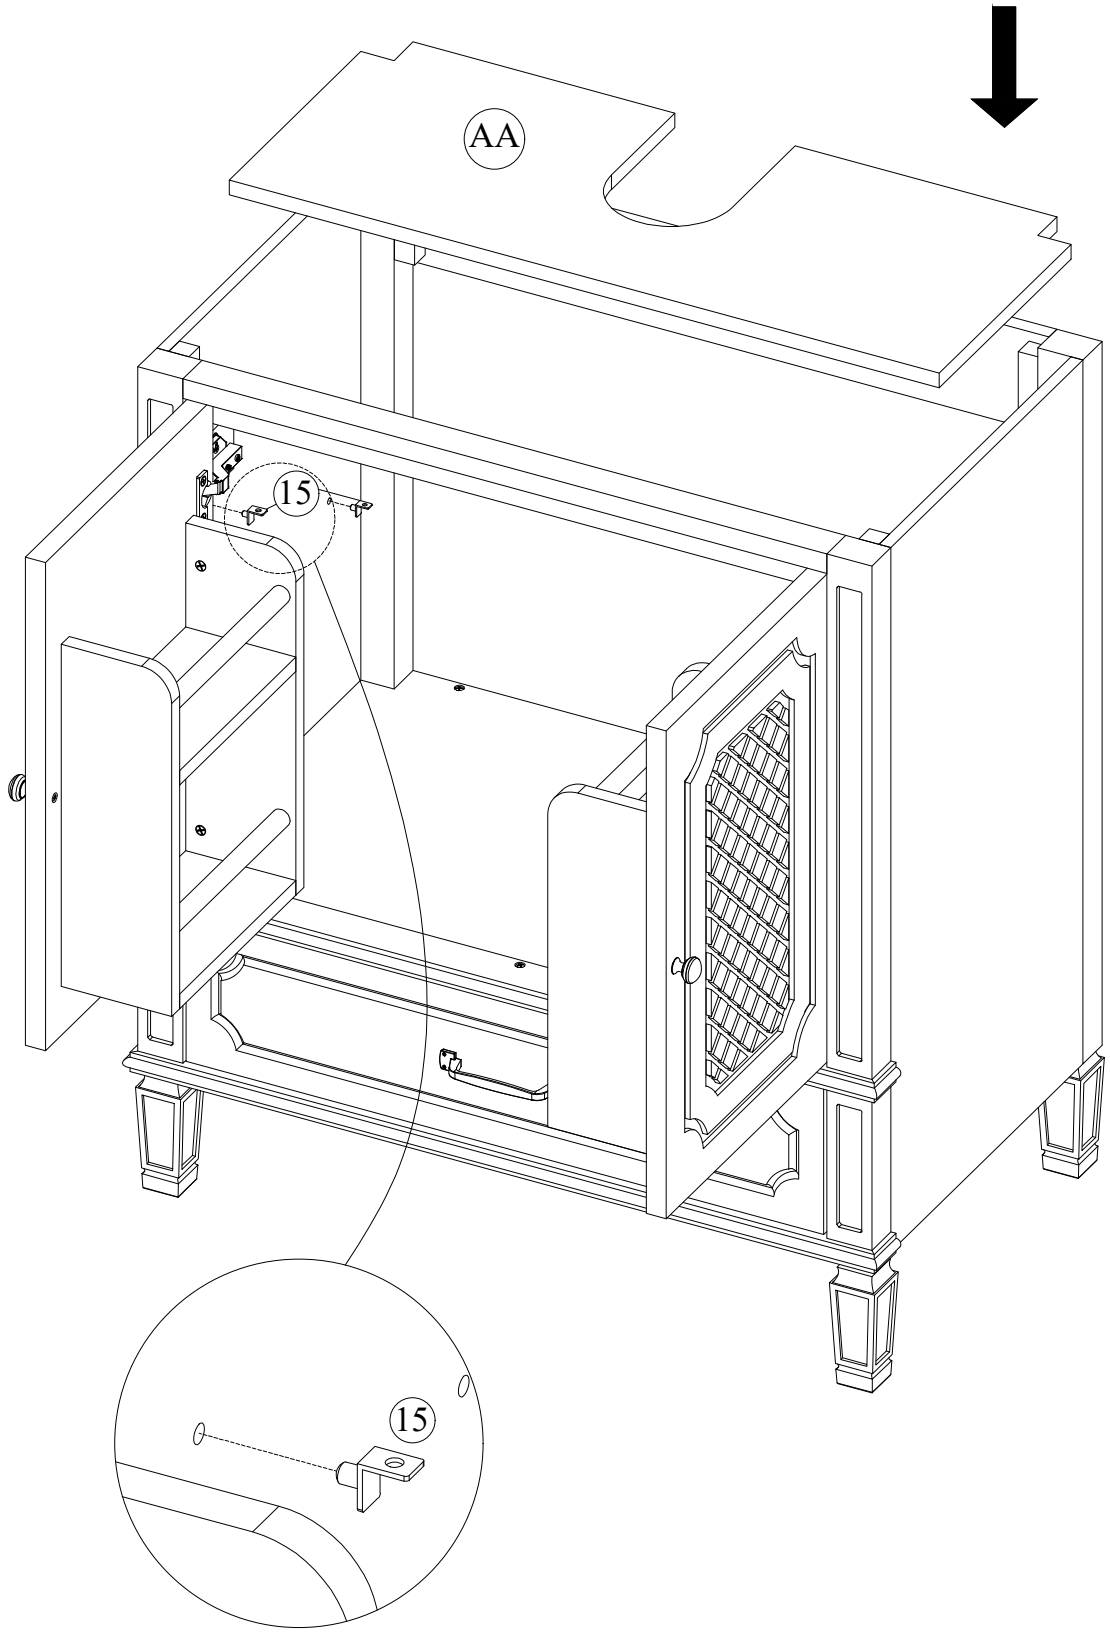


No.	Hardware	Q'ty
15	Shelf pin	4

STEP 17

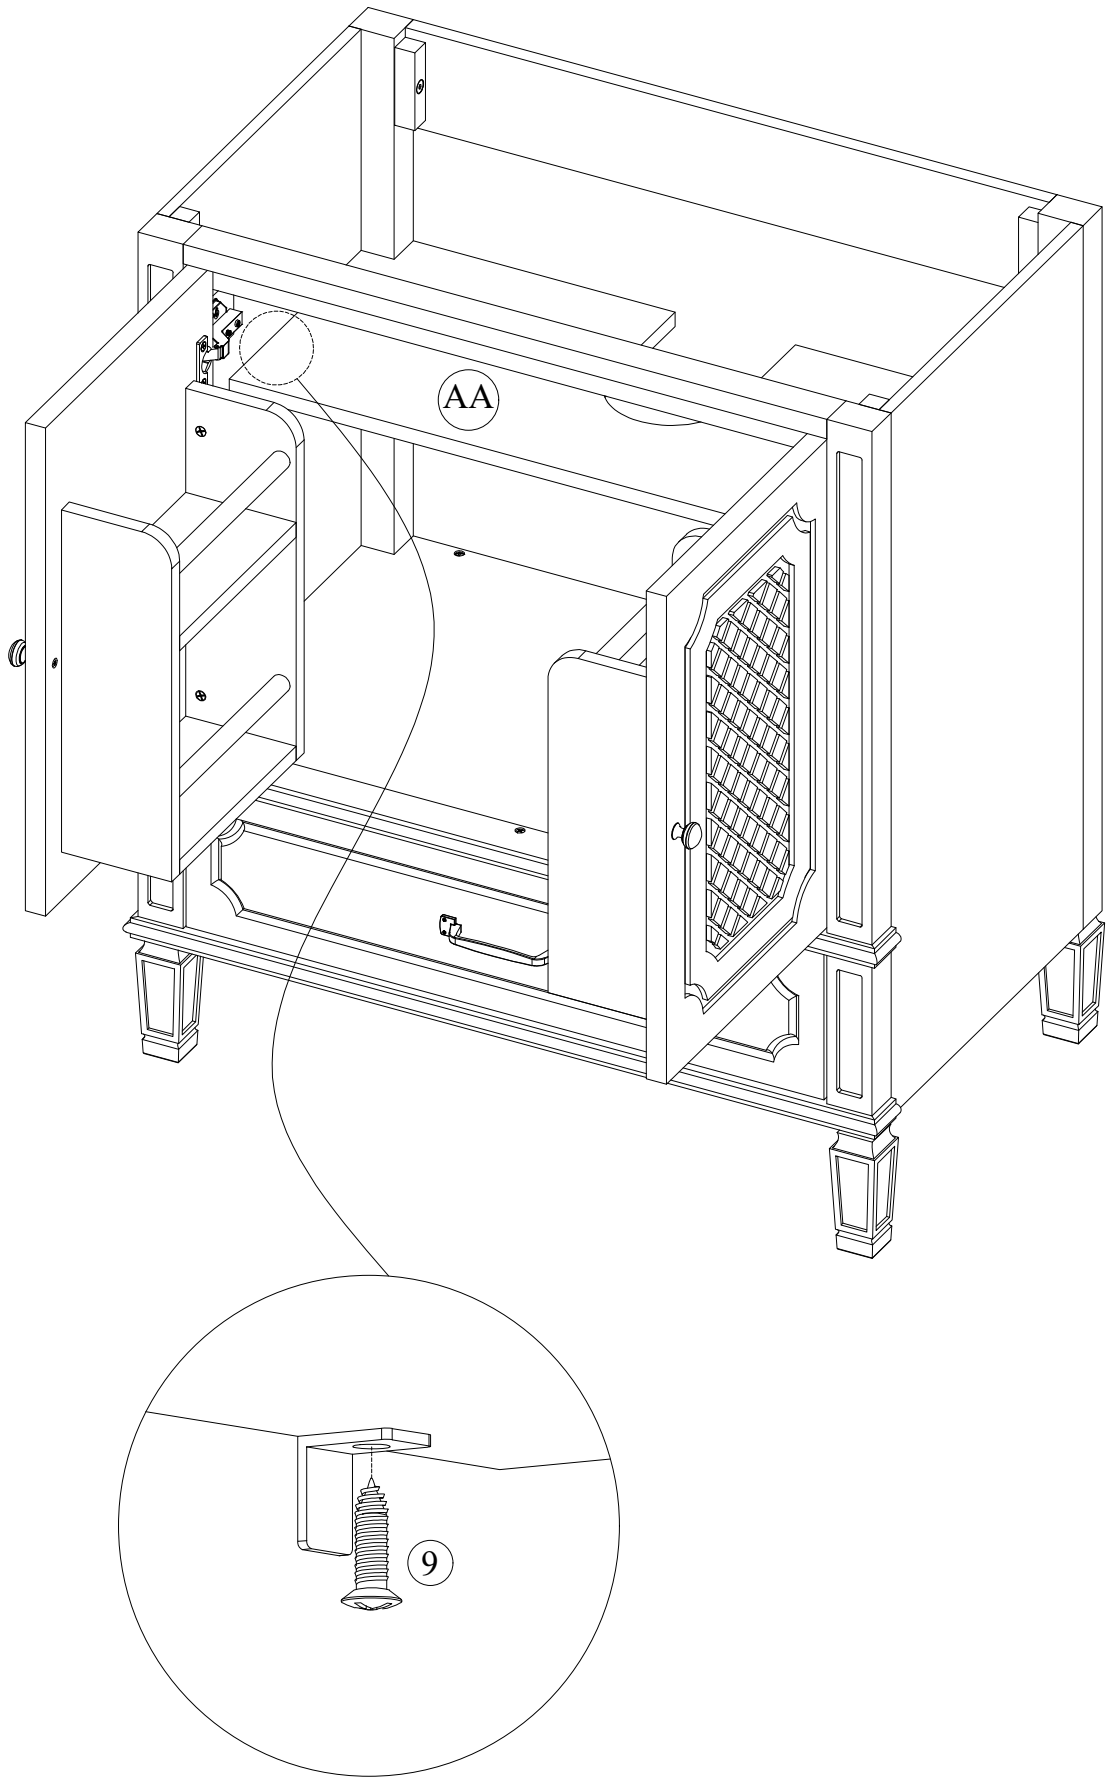


No.	Hardware	Q'ty
9	Screws 3.5x12	4

STEP 18

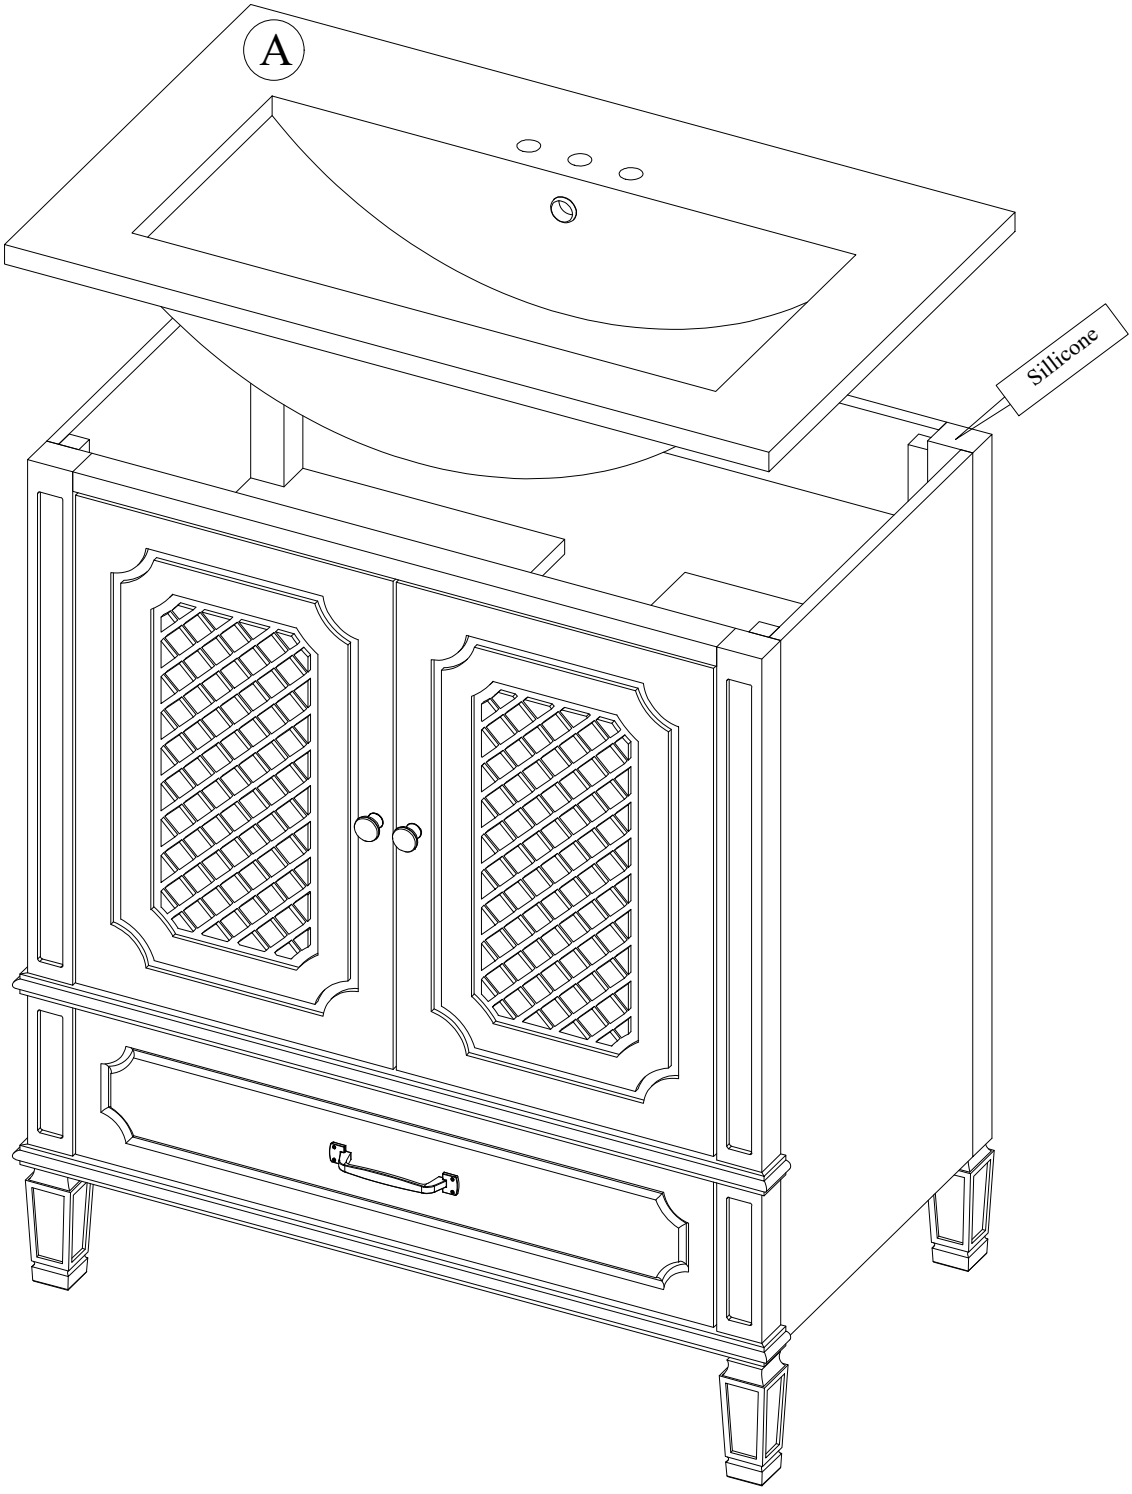


Install the Sink on the cabinet with glue.
Let stand for 24 hours.
Apply silicone caulk to the top edge of the wood cabinet.
With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet.

STEP 19

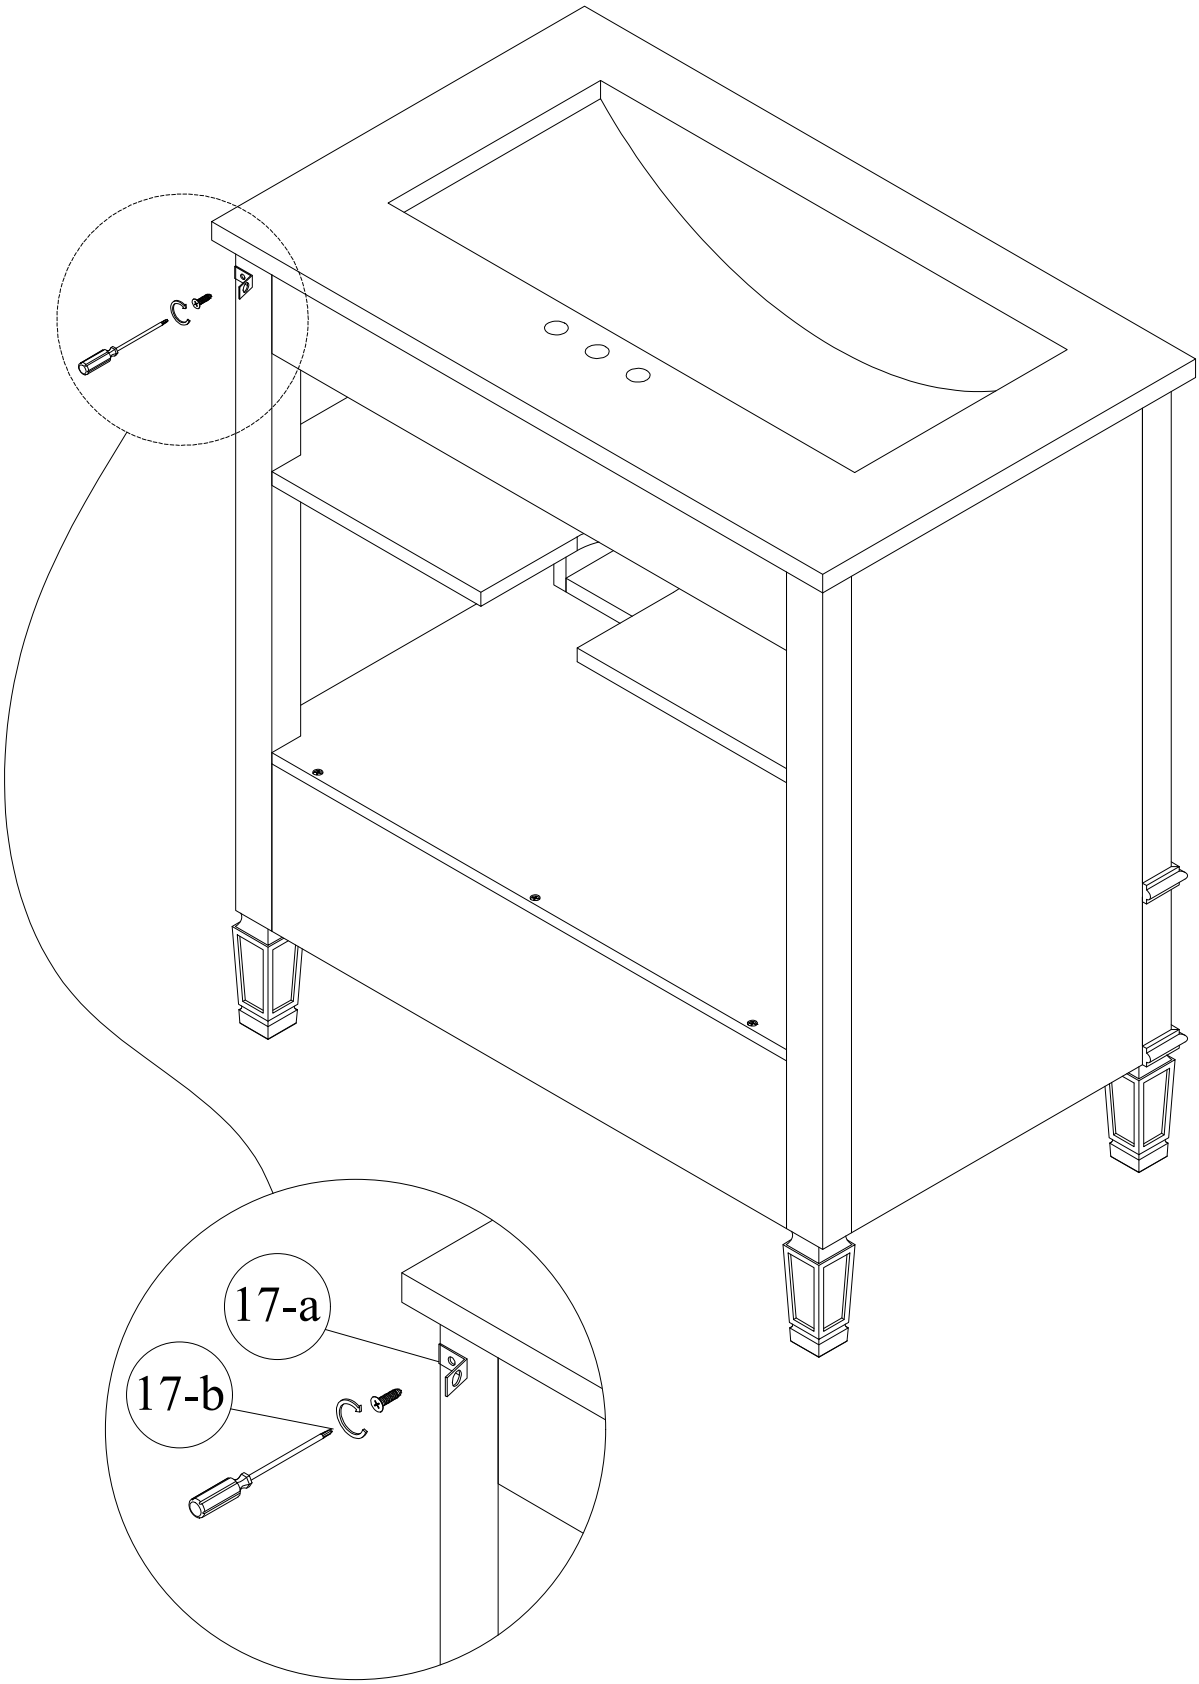


No.	Hardware	Q'ty
17-a		1
17-b		1


STEP 20

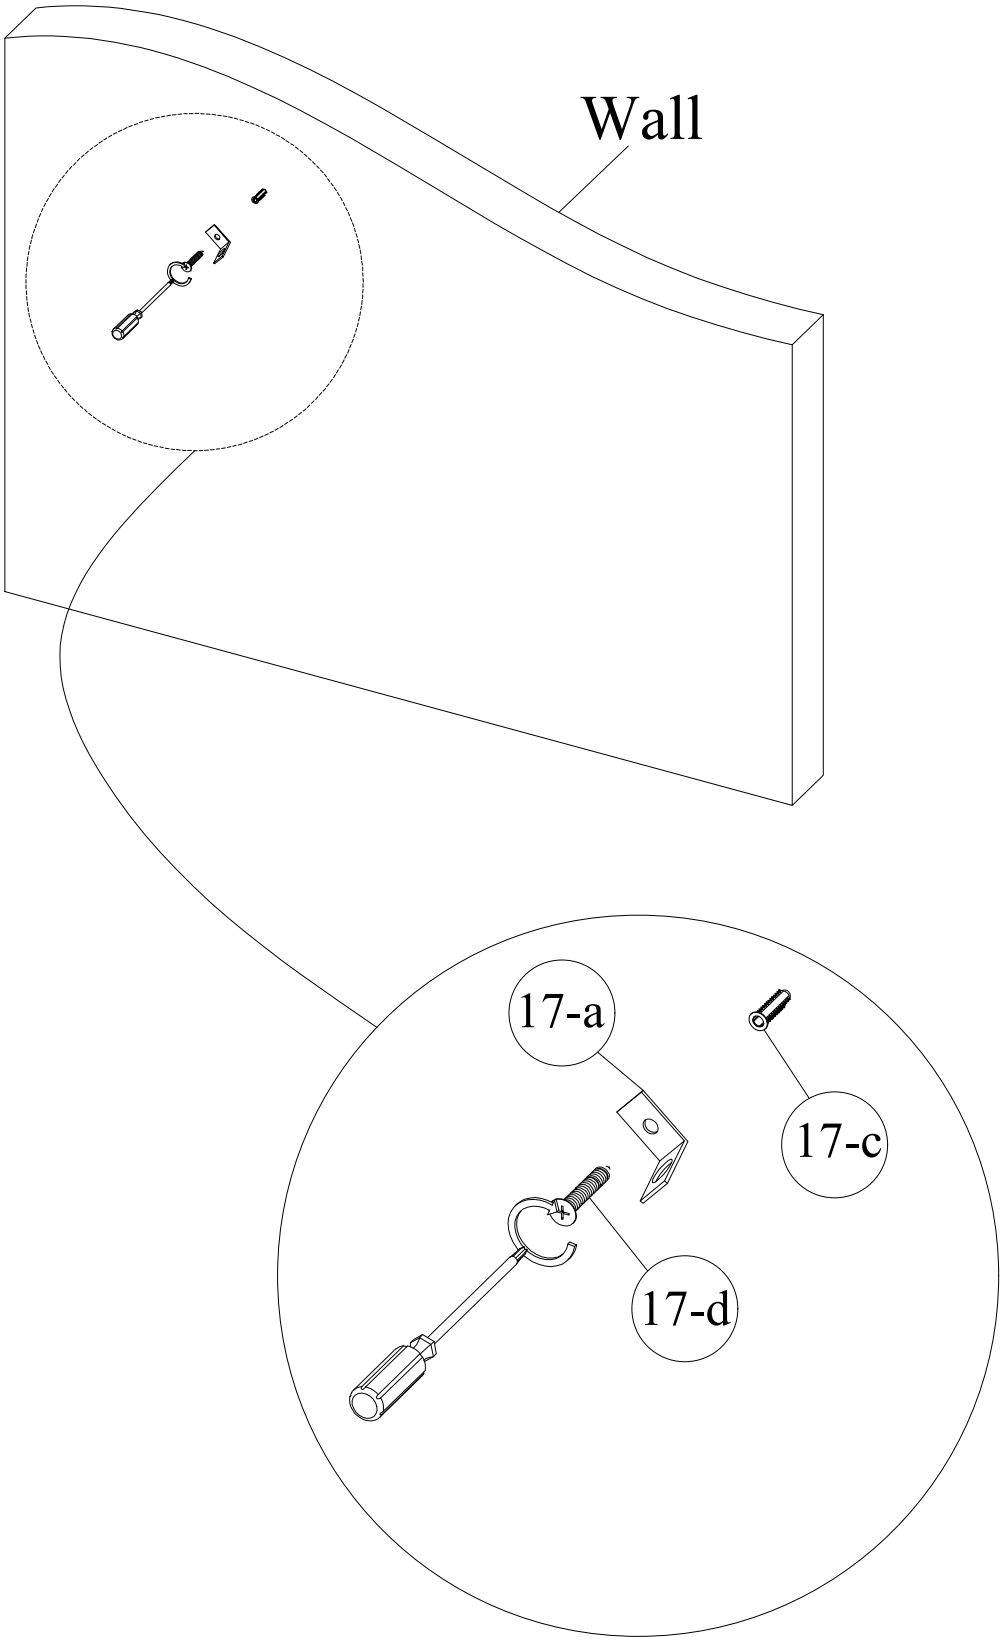

No.	Hardware	Q'ty
17-a		1
17-c		1
17-d		1

STEP 21

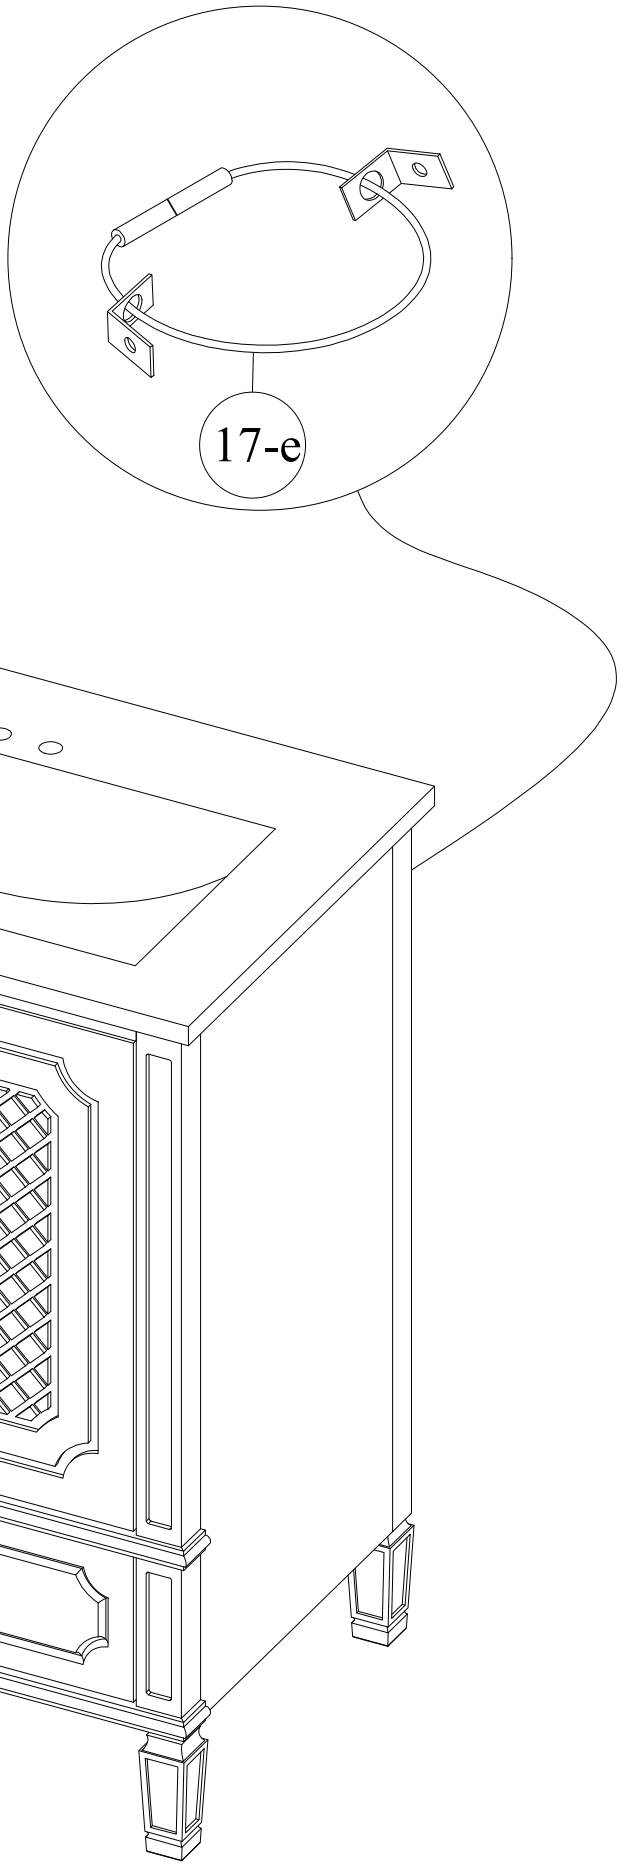

No.	Hardware	Q'ty
17-e		1

FINISH

